



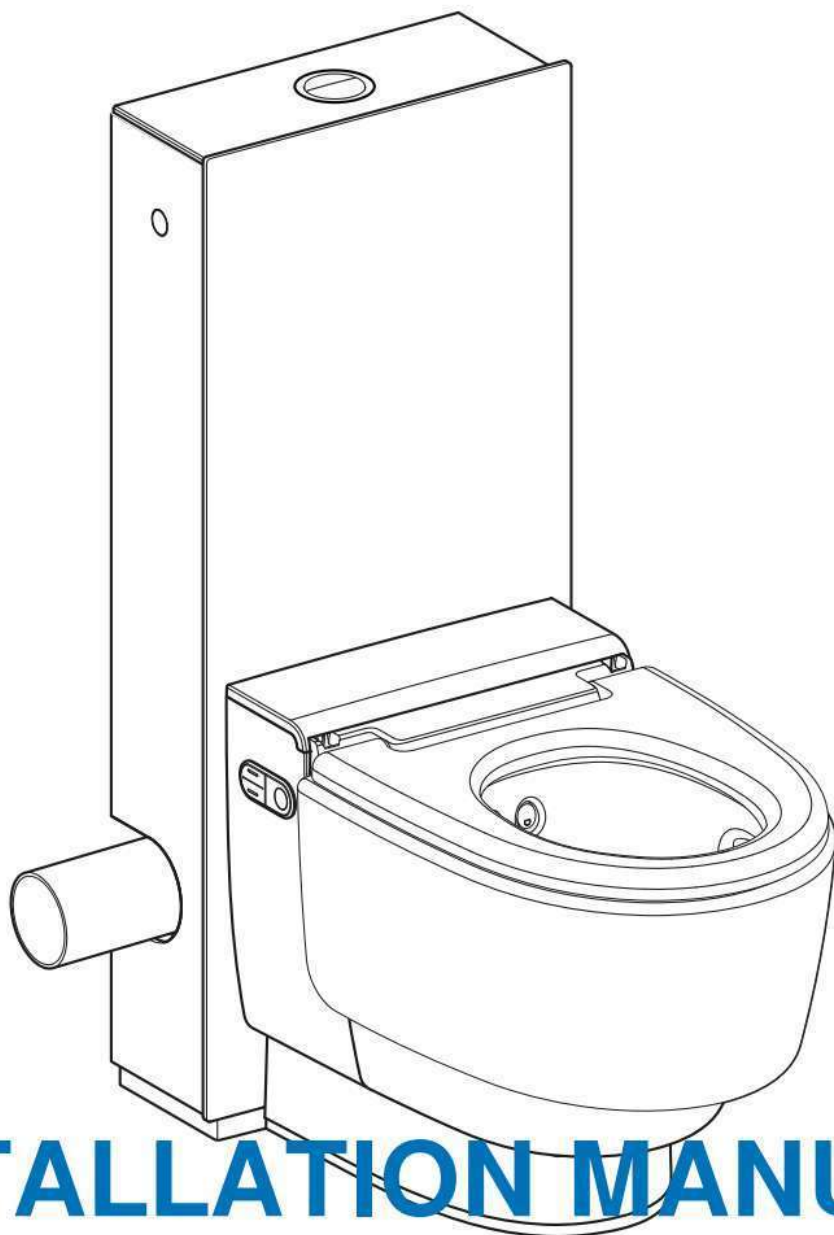

INSTALLATION MANUAL

MONTAGEANLEITUNG
INSTRUCTIONS DE MONTAGE
ISTRUZIONI PER IL MONTAGGIO

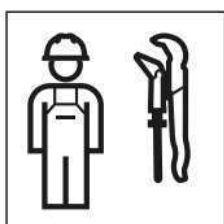

Warning message

**DANGER****Danger of fatal electric shock**


- The device may only be operated at power outlets or fixed connections with protective earthing.
-


ATTENTION**Damage to hoses**

Only the hoses supplied are permitted to be used. Old hoses are not permitted to be reused.

Dimensions in cm

Installation dimensions for AquaClean Mera floor-standing WC Care

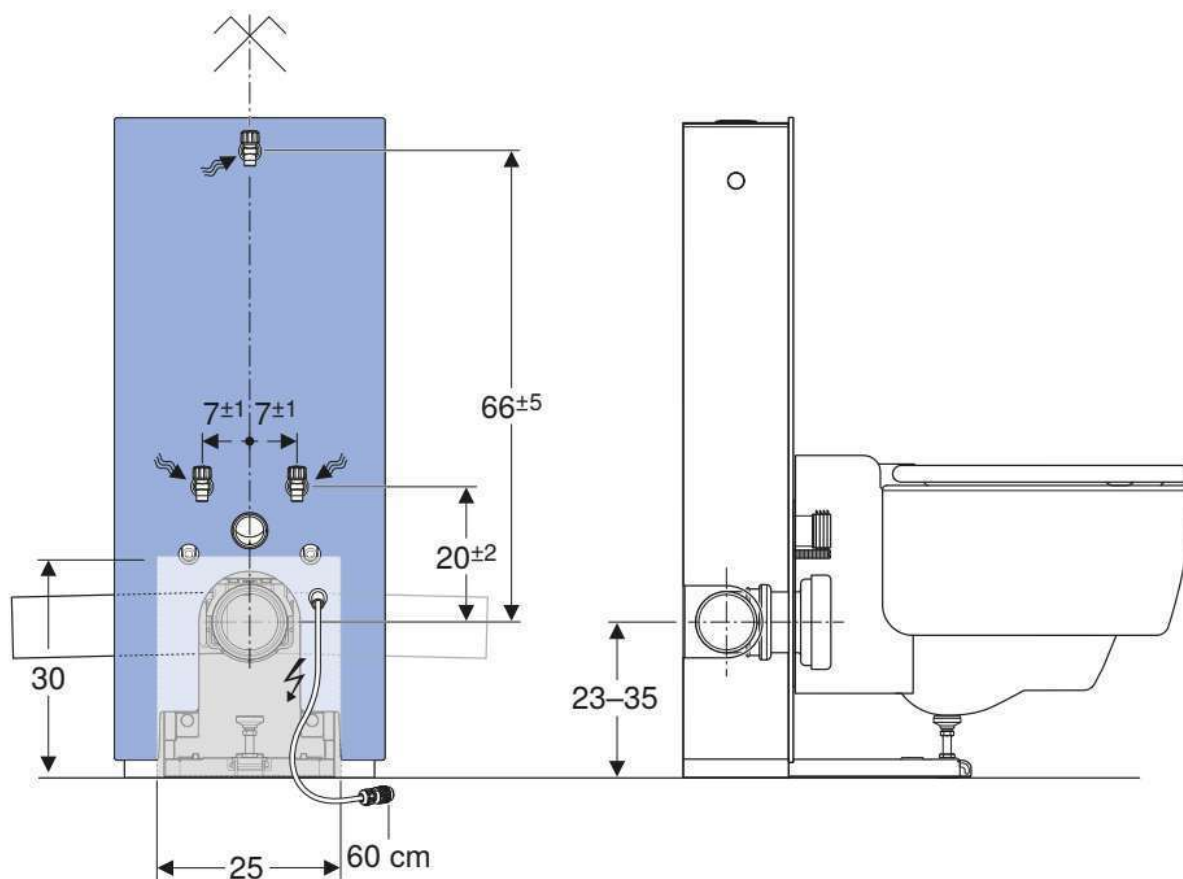

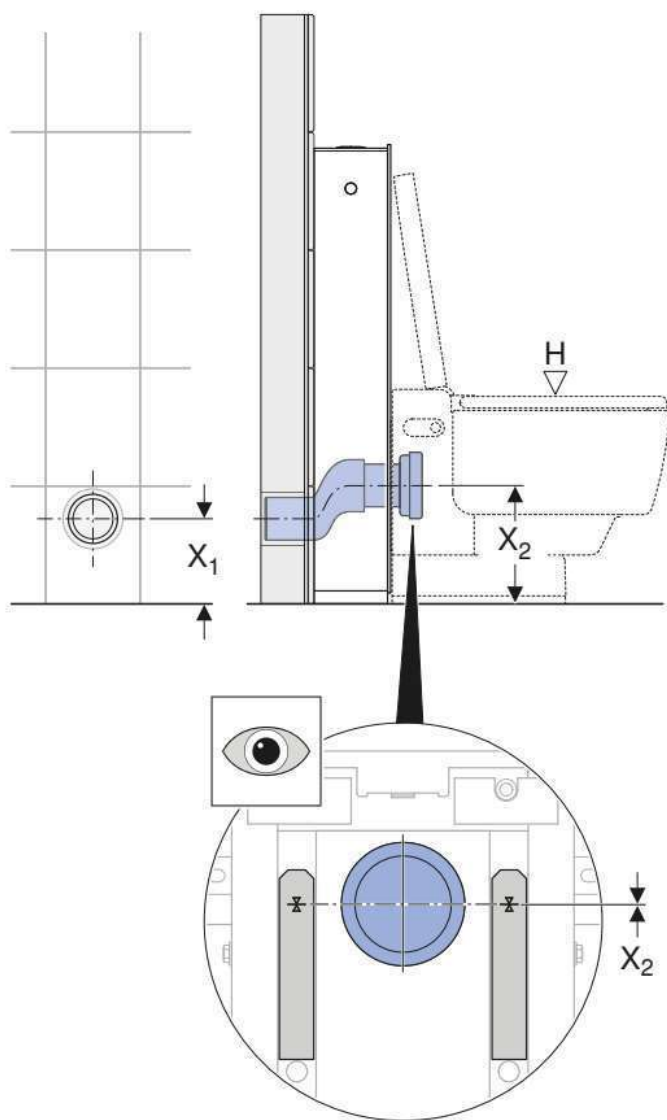


X ₁		X ₂	H
23	 0 cm	23	44 ^{±1}
24		24	45 ^{±1}
25		25	46 ^{±1}
26		26	47 ^{±1}
21	 3 cm 131.085.11.1	24	45 ^{±1}
22		25	46 ^{±1}
23		26	47 ^{±1}
24		27	48 ^{±1}
25		28	49 ^{±1}
26		29	50 ^{±1}
19	 5 cm 388.352.29.1	24	45 ^{±1}
20		25	46 ^{±1}
21		26	47 ^{±1}
22		27	48 ^{±1}
23		28	49 ^{±1}
24		29	50 ^{±1}
25		30	51 ^{±1}
26		31	52 ^{±1}
17	 7 cm 131.108.11.1	24	45 ^{±1}
18		25	46 ^{±1}
19		26	47 ^{±1}
20		27	48 ^{±1}
21		28	49 ^{±1}
22		29	50 ^{±1}
23		30	51 ^{±1}
24		31	52 ^{±1}
25		32	53 ^{±1}
26		33	54 ^{±1}
27		34	55
28		35	56


Installation

Mounting the angle stop valve


- 1** Remove the angle stop valve.

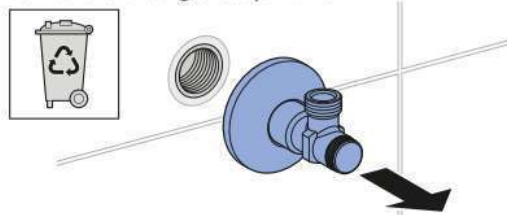

- 2** Seal the angle stop valve with hemp and mount it.

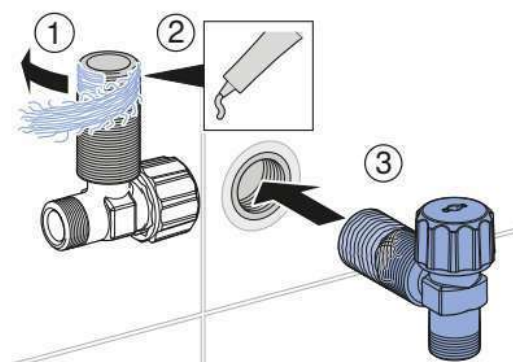

- 3** Check the dimensions of the angle stop valve.


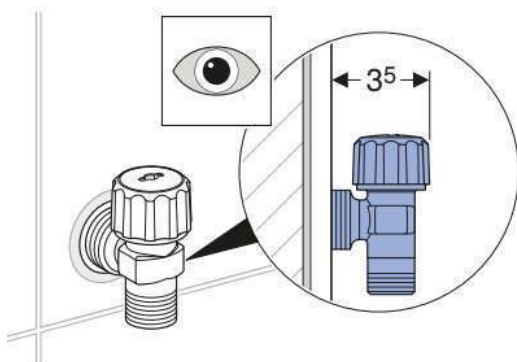


- 4** Flush the angle stop valve.




Mounting the frame

1 Adjust the frame height.

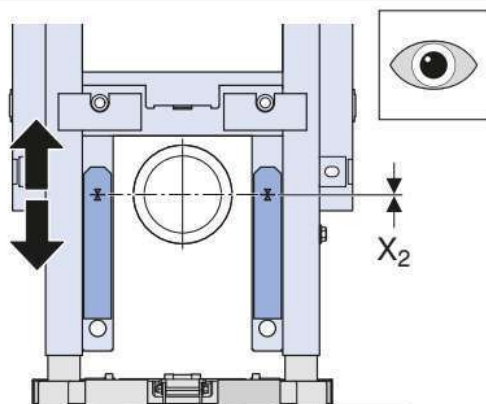
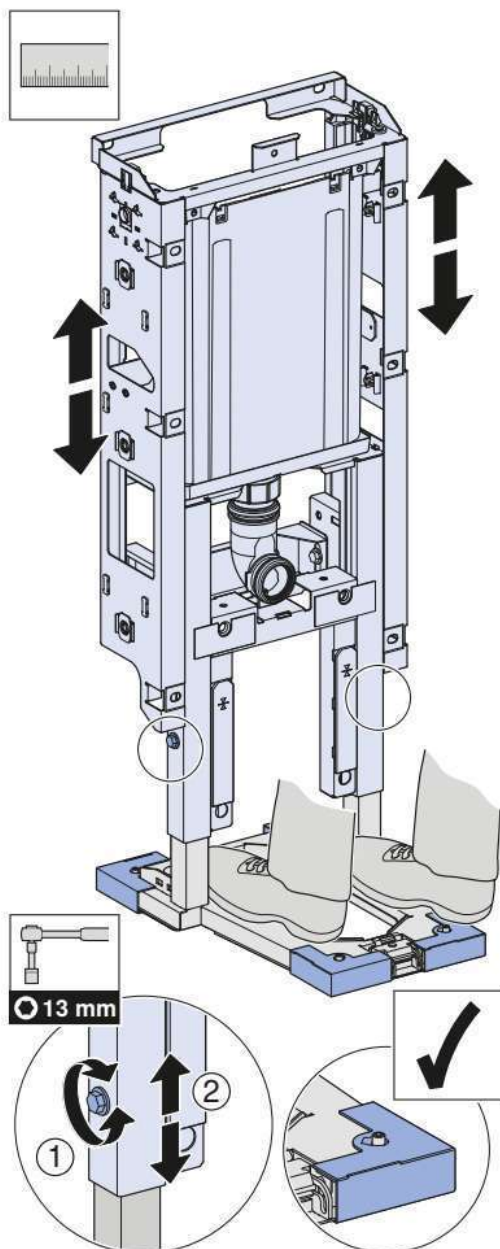


2 Position the frame.

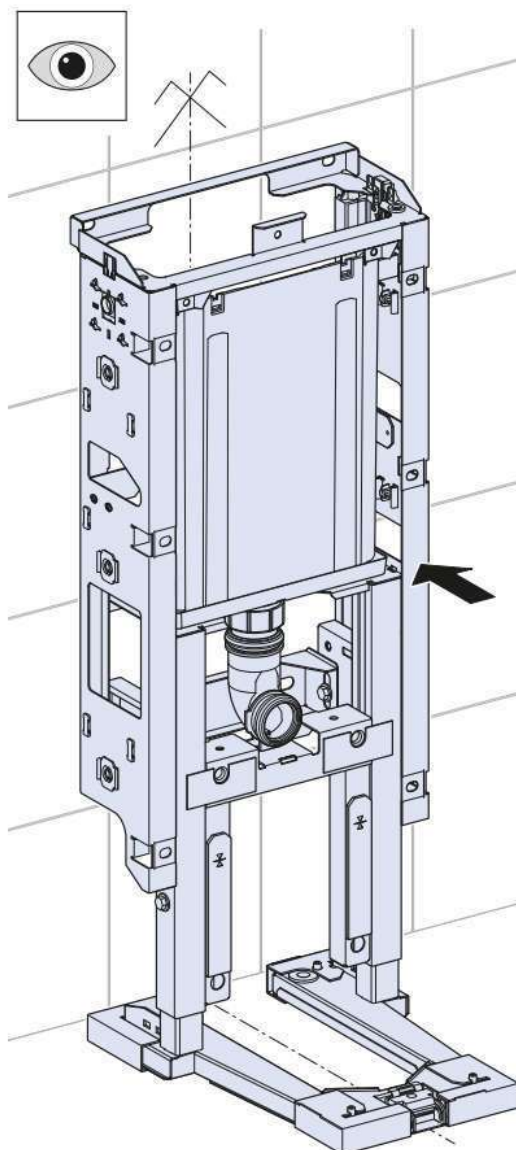



Align the crossbeam in the frame if the frame has to be aligned on existing threaded rods.

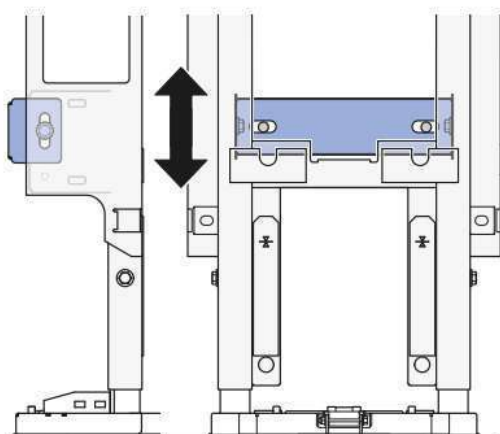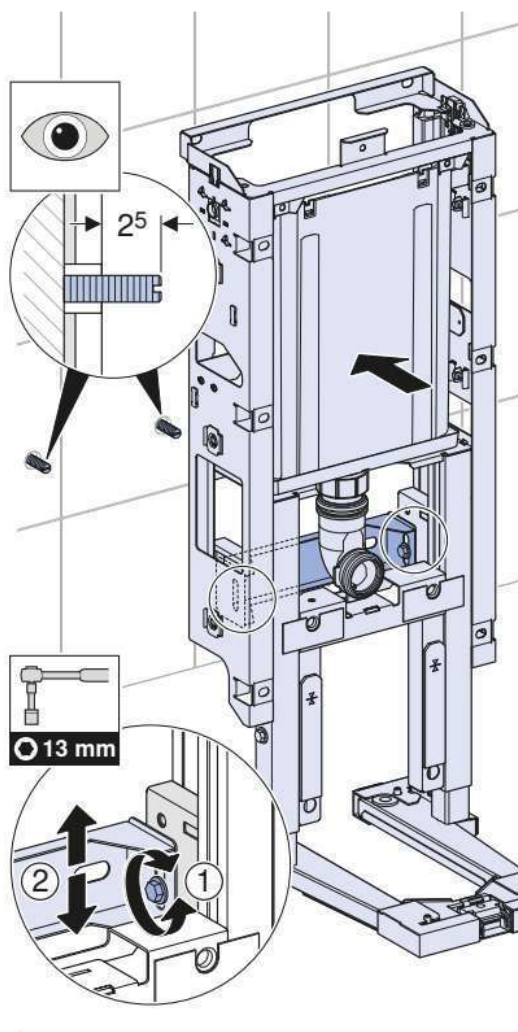

3

Align the foot screws. Check the vertical and horizontal frame alignment.

