


REPAIR PARTS

VACUUM PUMP REPAIR

LAV-3 THROUGH LAV-10 PLATINUM® SERIES

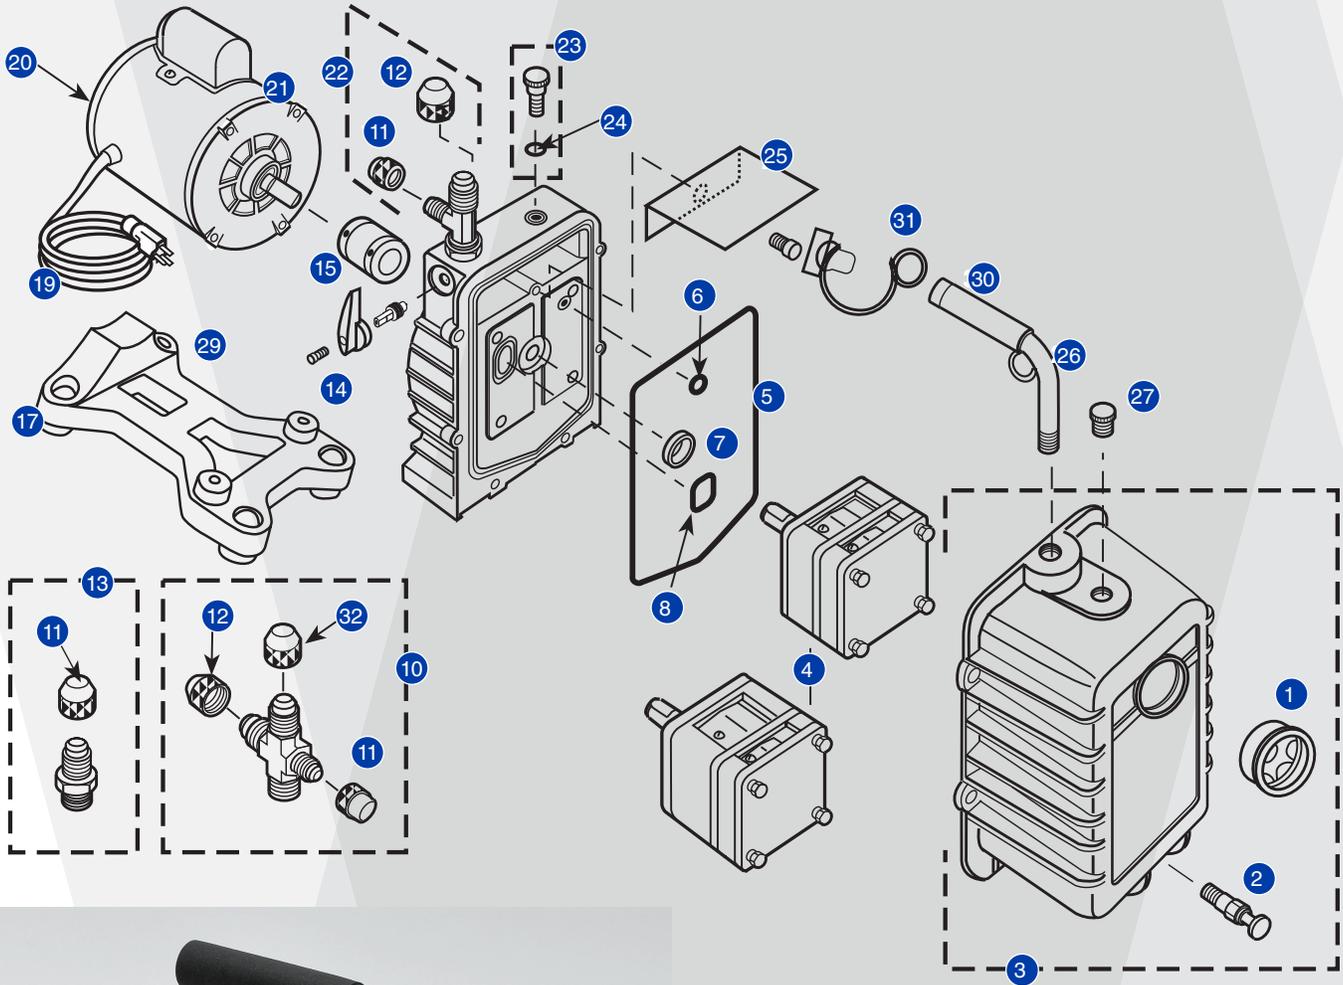

PLEASE INCLUDE WITH ORDERS

1. Model number
2. Four digit serial number
3. Part number and description

REPAIR PARTS

VACUUM PUMP REPAIR

LAV-3 THROUGH LAV-10 PLATINUM® SERIES

PLATINUM® PUMP REPAIR PARTS – ALL PUMPS		
REF.NO.	PART NO.	DESCRIPTION
1	PR-1	Sight glass
2	PR-2	Drain valve
6	PR-211	Trap o-ring, gas ballast
7	PR-3	Shaft seal
8	PR-315	Trap o-ring, intake
9	PR-4	Rubber foot and screw assembly (1 per package)
10	PR-76	Intake caps w/cross
11	NFT5-4	1/4" O-ring, intake
12	NFT5-6	3/8" O-ring cap
12	NFT5-8	1/2" O-ring cap
14	PR-209	Plastic isolation valve handle and screw w/stem, O-rings and retainer (not interchangeable w/PR-210)
15	PR-208	Flexible coupler
15	PR-308	Flexible section only
15	PR-6	Flexible coupler
15	PR-77	Flexible section only
16	PR-42	Motor foot w/screw
17	PR-59	Base Foot
19	PR-31	Line cord (Emerson motor)
19	PR-58	Line cord (Marathon motor)
20	PR-54	Rocker switch w/wire leads (Emerson)
21	PR-206	1/2 Hp, 115v, 60 Hz Motor w/line cord and switch
21	PR-207	1/2 Hp, 115/230v, 50/60 Hz Motor w/ line cord and switch
22	PR-5	Intake tee w/caps
23	PR-7	Gas ballast valve w/o-ring
24	P90009	O-ring, gas ballast valve
25	PR-40	Splash guard and screw (excludes LAV-3 manufactured before Jan 2001 use PR-39)
26	PR-75	Cushioned handle w/lift ring 1/2" NPT and DV-EP-8 as of 2008
26	PR-205	Cushioned handle 3/8" NPT
27	PR-22	Oil fill plug w/o-ring
28	PR-56	Adapter nut w/nut o-ring
30	PR-500	Cushion and cap 3/8" NPT
30	PR-501	Cushion and cap 1/2" NPT
31	DV-EP6	Tethered safety cap 3/8"
31	DV-EP8	Tethered safety cap 1/2"
32	NFT5-8	1/2" Cap w/o-ring

PLATINUM® PUMP REPAIR PARTS – MANUFACTURED AFTER JANUARY 2001		
3	PR-300	LAV-3 through LAV-7 cover assembly w/ sight glass and drain valve
3	PR-301	LAV-10 Cover assembly w/sight glass and drain valve
4	PR-302	LAV-3 Cartridge w/o-rings and cover seal
4	PR-303	LAV-5 Cartridge w/o-rings and cover seal
4	PR-304	LAV-7 Cartridge w/o-rings and cover seal
4	PR-314	LAV-10 Cartridge w/o-rings and cover seal
13	PR-32	1/4" Intake w/cap
5	PR-311	Cover seal
20	PR-35	Rocker switch w/prongs (Marathon 1101-0105)
29	PR-62	Pump base (includes feet)
PLATINUM® PUMP REPAIR PARTS – MANUFACTURED BEFORE JANUARY 2001		
3	PR-200	No longer available; can substitute PR-201
3	PR-201	LAV-5 and LAV-7 Cover assembly w/ sight glass and drain valve
5	PR-217	Cover seal
8	PR-215	Trap o-ring, intake
14	PR-210	Metal isolation valve handle and screw
NOT SHOWN		
PR-18	Cartridge valve repair kit (includes LAV-10 as of 2007 models)	
PR-52	LAV-10 Cartridge valve repair kit prior to 2007 models	
PR-45	PR-1, PR-2, PR-4(2), PR-42, PR-208	
PR-62	Fits all pumps with serial #0101 and higher	