

目录 CONTENTS

序号 No.	代码 Code	名称 Description	页次 Page
1	1004-4TART82P02-06	10.06-燃油喷射系统-06	1
2	1004-4TART82P02-01	10.1-气缸体	3
3	1004-4TART82P02-10	10.10-风扇驱动装置	5
4	1004-4TART82P02-11	10.11-润滑油底壳-11	7
5	1004-4TART82P02-12	10.12-加油口	9
6	1004-4TART82P02-13	10.13-气缸盖罩	11
7	1004-4TART82P02-14	10.14-机油滤清器及机油冷却器	13
8	1004-4TART82P02-15	10.15-前端驱动输入	15
9	1004-4TART82P02-16	10.16-水泵及节温器-16	17
10	1004-4TART82P02-17	10.17-水出口及入口-17	19
11	1004-4TART82P02-18	10.18-交流发电机及发电机	21
12	1004-4TART82P02-19	10.19-轮毂-19	23
13	1004-4TART82P02-02	10.2-正时齿轮及凸轮轴	25
14	1004-4TART82P02-20	10.20-进气系统-20	29
15	1004-4TART82P02-21	10.21-排气系统-21	31
16	1004-4TART82P02-22	10.22-低压燃油系统	33
17	1004-4TART82P02-23	10.23-吊耳	35
18	1004-4TART82P02-24	10.24-支架	37
19	1004-4TART82P02-25	10.25-放水阀	39
20	1004-4TART82P02-26	10.26-顶部维修组件	41
21	1004-4TART82P02-27	10.27-底部垫片总成	43
22	1004-4TART82P02-28	10.28-其他	45
23	1004-4TART82P02-03	10.3-曲轴活塞及连杆	47
24	1004-4TART82P02-04	10.4-气缸盖	49
25	1004-4TART82P02-05	10.5-摇臂轴	53

目录 CONTENTS

序号 No.	代码 Code	名称 Description	页次 Page
26	1004-4TART82P02-07	10.7-飞轮壳	55
27	1004-4TART82P02-08	10.8-飞轮及启动齿圈	57
28	1004-4TART82P02-09	10.9-起动电机	59
29	TD904.11	11-空气滤清系总成	61
30	TD904.131	13.1-冷却系总成	63
31	TD904.132	13.2-垫板焊接总成	65
32	TD800.201	20.1-手油门操纵总成	67
33	TA700.202	20.2-脚油门总成	69
34	TD800.203	20.3-拉线总成	71
35	FT800.21C.001	21-离合器总成	73
36	FT800A.21C.002-1	21.1-离合器操纵总成-1	75
37	FT800A.21C.002-2	21.2-离合器操纵总成-2	79
38	FT800A.21C.002-3	21.3-离合器操纵总成-3	83
39	TD800.22J	22-排气系总成	87
40	TD804.311	31.1-前桥总成	89
41	TD804.312	31.2-托架总成	91
42	TD800.313A	31.3-托架前体总成	93
43	FT804B.32F.001	32-前驱动轮总成	95
44	FT820.34F.001	34-后驱动轮总成	97
45	FT800.35.001	35-牵引装置总成	99
46	TD800A.371C	37.1-变速箱壳体总成	101
47	TD800A.372G-1	37.2.1-主副变速总成-1	103
48	TD800A.372G-2	37.2.2-主副变速总成-2	105
49	TD800A.372G-3	37.2.3-主副变速总成-3	107
50	TD800A.372G-4	37.2.4-主副变速总成-4	109

目录 CONTENTS


序号 No.	代码 Code	名称 Description	页次 Page
51	TD800A.373B-1	37.3.1-侧置操纵总成-1	113
52	TD800A.373B-2	37.3.2-侧置操纵总成-2	115
53	TD800A.373B-3	37.3.3-侧置操纵总成-3	119
54	TD800A.374B	37.4-爬行档机构总成	121
55	TD804A.38-1	38.1-后桥箱总成-1	125
56	TD804A.38-2	38.2-后桥箱总成-2	127
57	TD804A.38-3	38.3-后桥箱总成-3	131
58	TD804A.38-4	38.4-后桥箱总成-4	133
59	TD804A.38-5	38.5-后桥箱总成-5	135
60	FT800.39.002	39-右最终传动总成	137
61	FT800.39.001	39-左最终传动总成	141
62	FT804A.40A.001-1	40.1-全液压转向总成-1	145
63	FT804A.40A.001-2	40.2-全液压转向总成-2	149
64	TD800.411C	41.1-动力输出轴总成	153
65	TD800.412A-1	41.2.1-动力输出齿轮总成-1	155
66	TD800.412A-2	41.2.2-动力输出齿轮总成-2	157
67	TD800.413	41.3-动力输出操纵机构总成	159
68	TD800.414B	41.4-动力输出防护罩总成	163
69	TD904.421B-1	42.1.1-分动箱总成-1	165
70	TD904.421B-2	42.1.2-分动箱总成-2	167
71	TD904.421B-3	42.1.3-分动箱总成-3	171
72	TD904.422A-1	42.2.1-分动箱传动轴及护罩总成-1	173
73	TD904.422A-2	42.2.2-分动箱传动轴及护罩总成-2	175
74	TD904.423	42.3-分动箱操纵总成	177
75	TD800.43-1	43.1-制动系总成-1	179

目录 CONTENTS

序号 No.	代码 Code	名称 Description		页次 Page
76	TD800.43-2	43.2-制动系总成-2	43BRAKING SYSTEM ASSEMBLY-2	183
77	TD800.43-3	43.3-制动系总成-3	43BRAKING SYSTEM ASSEMBLY-3	185
78	TD800.43-4	43.4-制动系总成-4	43BRAKING SYSTEM ASSEMBLY-4	187
79	TD800.43-5	43.5-制动系总成-5	43BRAKING SYSTEM ASSEMBLY-5	189
80	FT800A.44.001	44-座椅安装总成	44SEAT INSTALLATION ASSEMBLY	193
81	TD800.454E	45.4-操纵盖板总成	45.4-CONTROLLING COVER PLATE ASSEMBLY	195
82	TD800.456A	45.6-仪表台装配总成	45.6-DASHBOARD INSTALLATION ASSEMBLY	197
83	TD800.457	45.7-前连接装置总成	45.7-FRONT CONNECTION EQUIPMENT ASSEMBLY	199
84	TD800.458A	45.8-后连接装置总成	45.8--REAR CONNECTING EQUIPMENT ASSEMBLY	201
85	FT800A.46.001	46-安全架总成	46-SAFETY FRAME ASSEMBLY	203
86	TD800.471D-1	47.1.1-机罩总成-1	BONNET ASSEMBLY-1	205
87	TD800.471D-2	47.1.2-机罩总成-2	BONNET ASSEMBLY-2	207
88	TD800.472B	47.2-机罩下围板总成	47.2-BONNET LOW PLATE ASSEMBLY	209
89	TD800.474B	47.4-机罩锁操纵总成	47.4-BONNET LOCK CONTROL ASSEMBLY	211
90	TD800.475F	47.5-机罩密封装配总成	47.5-BONNET SEAL INSTALLATION ASSEMBLY	213
91	TD900.481N	48.1-发动机线束安装总成	48.1-ENGINE HARNESS INSTALLATION ASSEMBLY	215
92	TD900.482K	48.2-车身线束安装总成	48.2-BODY HARNESS INSTALLATION ASSEMBLY	217
93	TD800.483A	48.3-前灯线束安装总成	48.3-FRONT LAMP HARNESS INSTALLATION	221
94	TD900.484	48.4-后灯线束安装总成	48.4-REAR LAMP HARNESS INSTALLATION ASSEMBLY	223
95	TD800.485A	48.5-蓄电池安装总成	48.5-BATTERY INSTALLATION ASSEMBLY	225
96	TD800.487	48.7-组合仪表总成	48.7-COMBINED INSTRUMENT ASSEMBLY	227
97	FT300.49.001	49-工具箱总成	49-TOOL BOX ASSEMBLY	229
98	TD800.501A	50.1-主油箱总成	50.1-MAIN OIL TANK ASSEMBLY	231
99	TD800.502	50.2-副油箱总成	50.2-AUXILIARY OIL TANK ASSEMBLY	233
100	TD800.503A	50.3-进出油管总成	50.3-OIL INLET/OUTLET PIPE ASSEMBLY	235


目录 CONTENTS

序号 No.	代码 Code	名称 Description	页次 Page
101	TD800.55D-1	55.1-提升器装置总成-1 LIFT INSTALLATION ASSEMBLY-1	237
102	TD800.55D-2	55.2-提升器装置总成-2 LIFT INSTALLATION ASSEMBLY-2	241
103	TD800.55D-3	55.3-提升器装置总成-3 LIFT INSTALLATION ASSEMBLY-3	245
104	TD800.55D-4	55.4-提升器装置总成-4 LIFT INSTALLATION ASSEMBLY-4	249
105	FT800.56.001a-1	56.1-悬挂机构总成-1 SUSPENSION MECHANISM ASSEMBLY-1	253
106	FT800.56.001a-2	56.2-悬挂机构总成-2 SUSPENSION MECHANISM ASSEMBLY-2	255
107	FT800.56.001a-3	56.3-悬挂机构总成-3 SUSPENSION ASSEMBLY-3	257
108	TD800.57C-1	57.1-分配器装配总成-1 DISTRIBUTOR INSTALLATION ASSEMBLY-1	259
109	TD800.57C-2	57.2-分配器装配总成-2 DISTRIBUTOR INSTALLATION ASSEMBLY-2	263
110	TD800.57C-3	57.3-分配器装配总成-3 DISTRIBUTOR INSTALLATION ASSEMBLY-3	265
111	TD800.57C-4	57.4-分配器装配总成-4 DISTRIBUTOR INSTALLATION ASSEMBLY-4	267
112	FT804A.58H.001	58-油泵油管滤油器总成 58-OIL PUMP/PIPE/FILTER ASSEMBLY	269
113	TD904.582A-1	58.2.1-多路阀油管总成-1 MULTI-WAY VALVE OIL PIPE ASSEMBLY-1	273
114	TD904.582A-2	58.2.2-多路阀油管总成-2 MULTI-WAY VALVE OIL PIPE ASSEMBLY-2	275
115	TD800.583A	58.3-单路液压输出总成 58.3-SINGLE-WAY HYDRAULIC OUTPUT ASSEMBLY	279
116	TA600.62ZC	62-安全带 62-SAFETY BELT	281
117	FT800.74B.001	74-前配重总成 74-FRONT BALLAST ASSEMBLY	283
118	FT800.74B.002	74-前配重架总成 74-FRONT BALLAST BRACKET ASSEMBLY	285
119	FT800.91B.001	91-后配重总成 91-REAR BALLAST ASSEMBLY	287
120	TD804.311-1	前桥总成-1 31FRONT AXLE ASSEMBLY-1	289
121	TD804.311-2	前桥总成-2 31FRONT AXLE ASSEMBLY-2	291
122	TD804.311-3	前桥总成-3 31FRONT AXLE ASSEMBLY-3	295
123	TD804.311-4	前桥总成-4 31FRONT AXLE ASSEMBLY-4	299
124	TD804.311-5	前桥总成-5 31FRONT AXLE ASSEMBLY-5	301

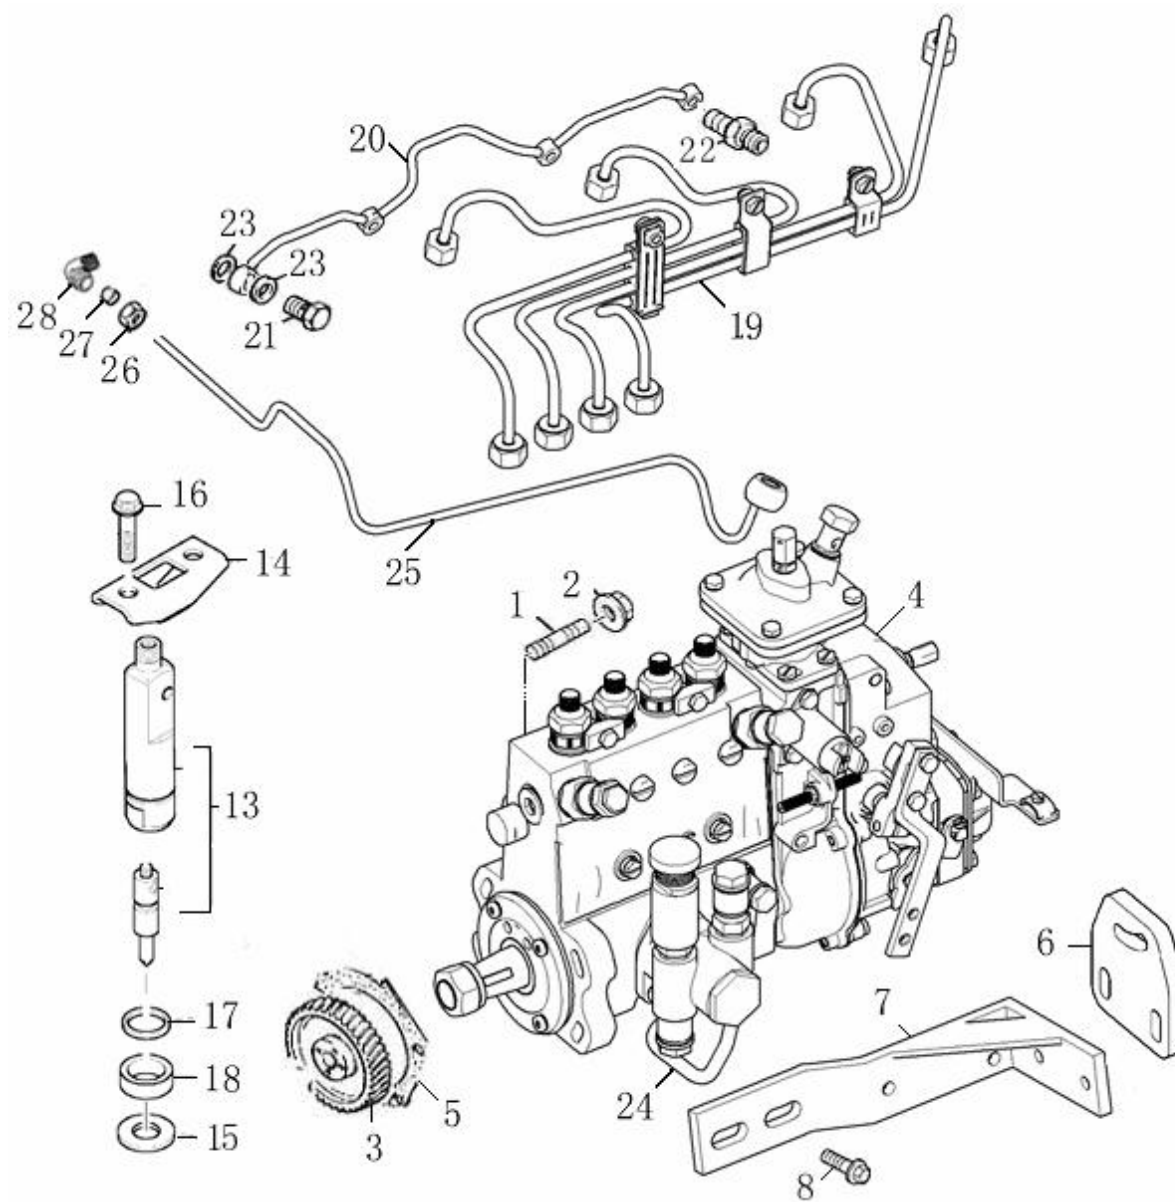


1004-4TART82P02-06 10.06-燃油喷射系统-06 FUEL INJECTION EQUIPMENT

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T2313C059	丝对	STUD	4	
13	T73302130	喷油器总成	INJEKTOR ASSEMBLY	1	
14	T3662K002	压板	PRESSURE PLATE	4	
15	T0921173	垫圈	WASHER	4	
15	T0921173	垫圈	WASHER	4	
16	T2314H006	螺栓	BOLT	8	
17	T33813129	垫圈	WASHER	4	
18	T33813131	防尘套	DUST COVER	4	
19	T4184E042	高压油管总成	HIGH PRESSURE OIL PIPE ASSEMBLY	1	
2	T2318A604	螺母	NUT	4	
20	T3558X043	油管	PIPE	1	
21	T3218R005	过油螺栓	BOLT	3	
22	T3355V002	过油螺栓	BOLT	1	
23	T2411101	垫圈	WASHER	8	
23	T2411101	垫圈	WASHER	8	
25	T73209426	补偿管	COMPENSATE PIPE	1	
26	T33225412	螺母	NUT	1	
27	T33811112	橄榄体	OLIVE	1	
28	T0201047	弯管	BENDING PIPE	1	
28	T0201047	弯管	BENDING PIPE	1	
3	T3117L141	齿轮	GEAR	1	
4	T73221121	喷油泵	OIL INJECTION PUMP	1	
5	T3682A008	垫	WASHER	1	
6	T3645E008	支架	SUPPOT BRACKET	1	
8	T2314H003	螺栓	BOLT	2	

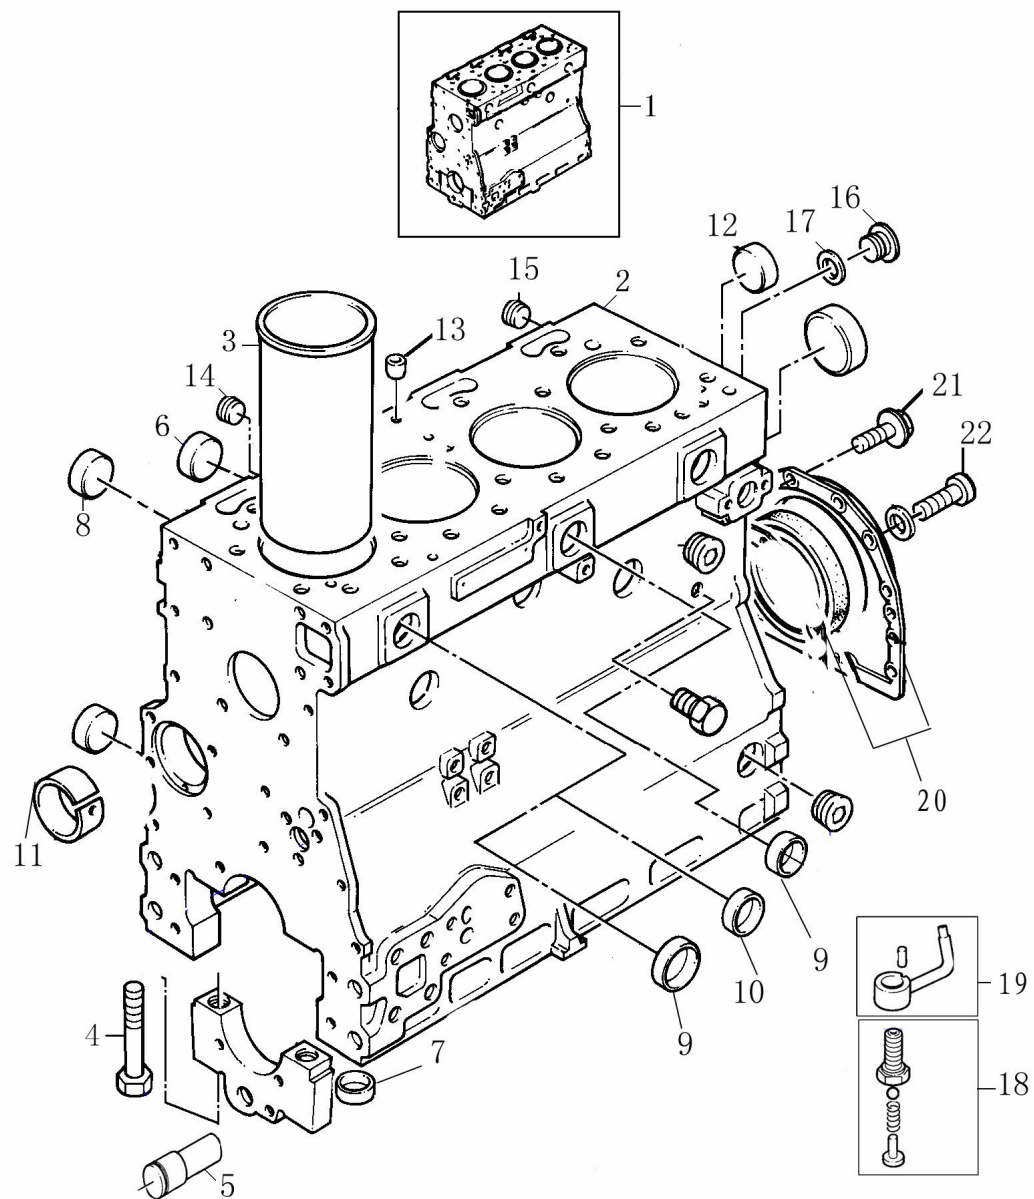


1004-4TART82P02-01 10.1-气缸体 CYLINDER BLOCK

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TZZ50265	机体（总成）	CYLINDER BLOCK ASSEMBLY	1	
10	T32418124	碗堵	COREHOLE PLUG	1	
11	T31134165	衬套	SLEEVE	1	
12	T32416119	堵	PLUG	1	
13	T32417134	堵	PLUG	1	
14	T64404002	堵	PLUG	1	
15	T0650588	堵	PLUG	1	
16	T32168212	堵	PLUG	1	
17	T714030009	垫圈	WASHER	1	
18	T4138A017	冷却喷嘴阀	PISTON COOLING JET	4	
19	T3861A027	冷却喷嘴总成	COOLING NOZZLE ASSEMBLY	4	
2	T3711H121	机体	BLOCK	1	
20	T721050003	后油封	REAR OIL SEAL	1	
21	T3211C002	螺栓	BOLT	6	
3	T3135X062	缸套	CYLINDER LINER	4	
4	T32166329	大瓦螺栓	BOLT	10	
5	T3271H004A	介轮轴	SHAFT	1	
6	T3774A004	挺杆腔堵	PLUG	4	
7	T33142111	定位套	LOCATING SLEEVE	10	
8	T32418122	碗堵	COREHOLE PLUG	6	
9	T0650710	碗堵	COREHOLE PLUG	6	

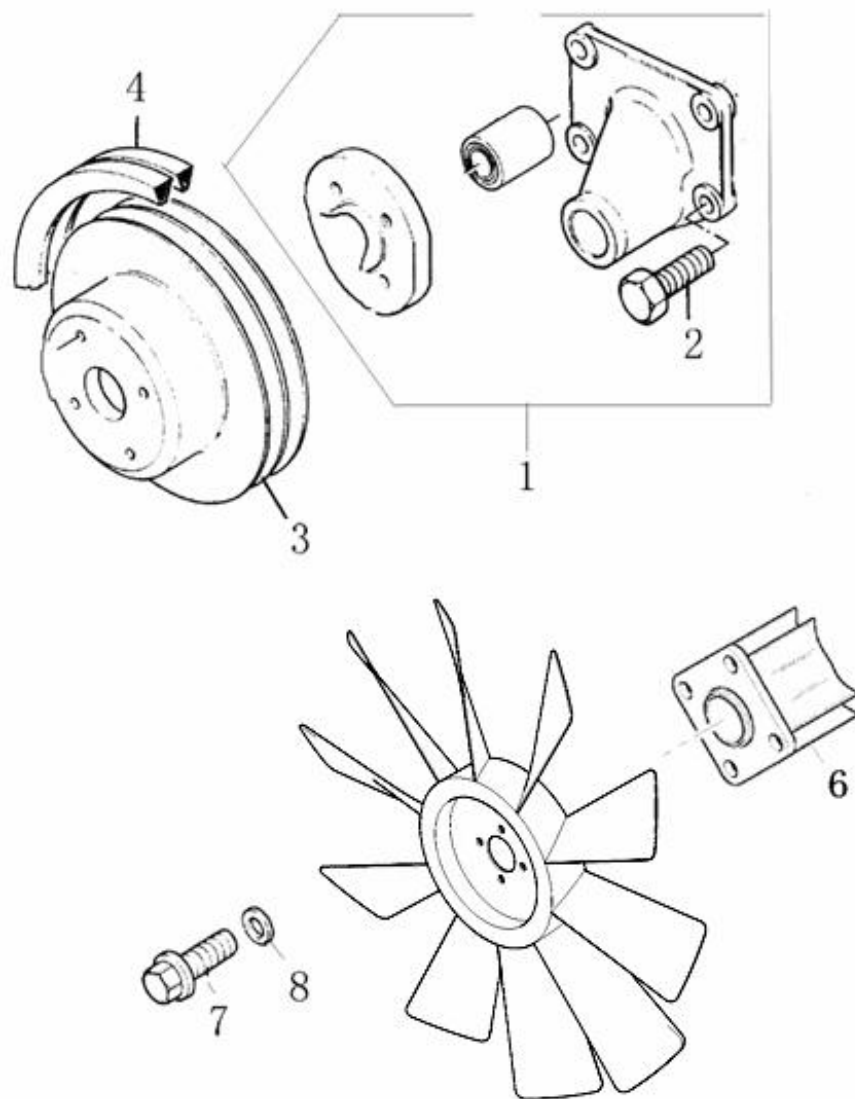


1004-4TART82P02-10 10.10-风扇驱动装置 FAN DRIVE FBH00001

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T4113H058	风扇驱动壳	FAN DRIVING HOUSING	1	
2	T2314J014	螺栓	BOLT	4	
3	T63906002	皮带轮	BELT WHEEL	1	
4	T64401010	皮带	BELT	2	
5	T64406007	风扇叶片	FAN BLADE	1	
6	T3748W232	风扇隔圈	FAN RING	1	
7	T2314K166	螺栓	BOLT	4	
8	Q40308	弹性垫圈8	SPRING WASHER 8	4	

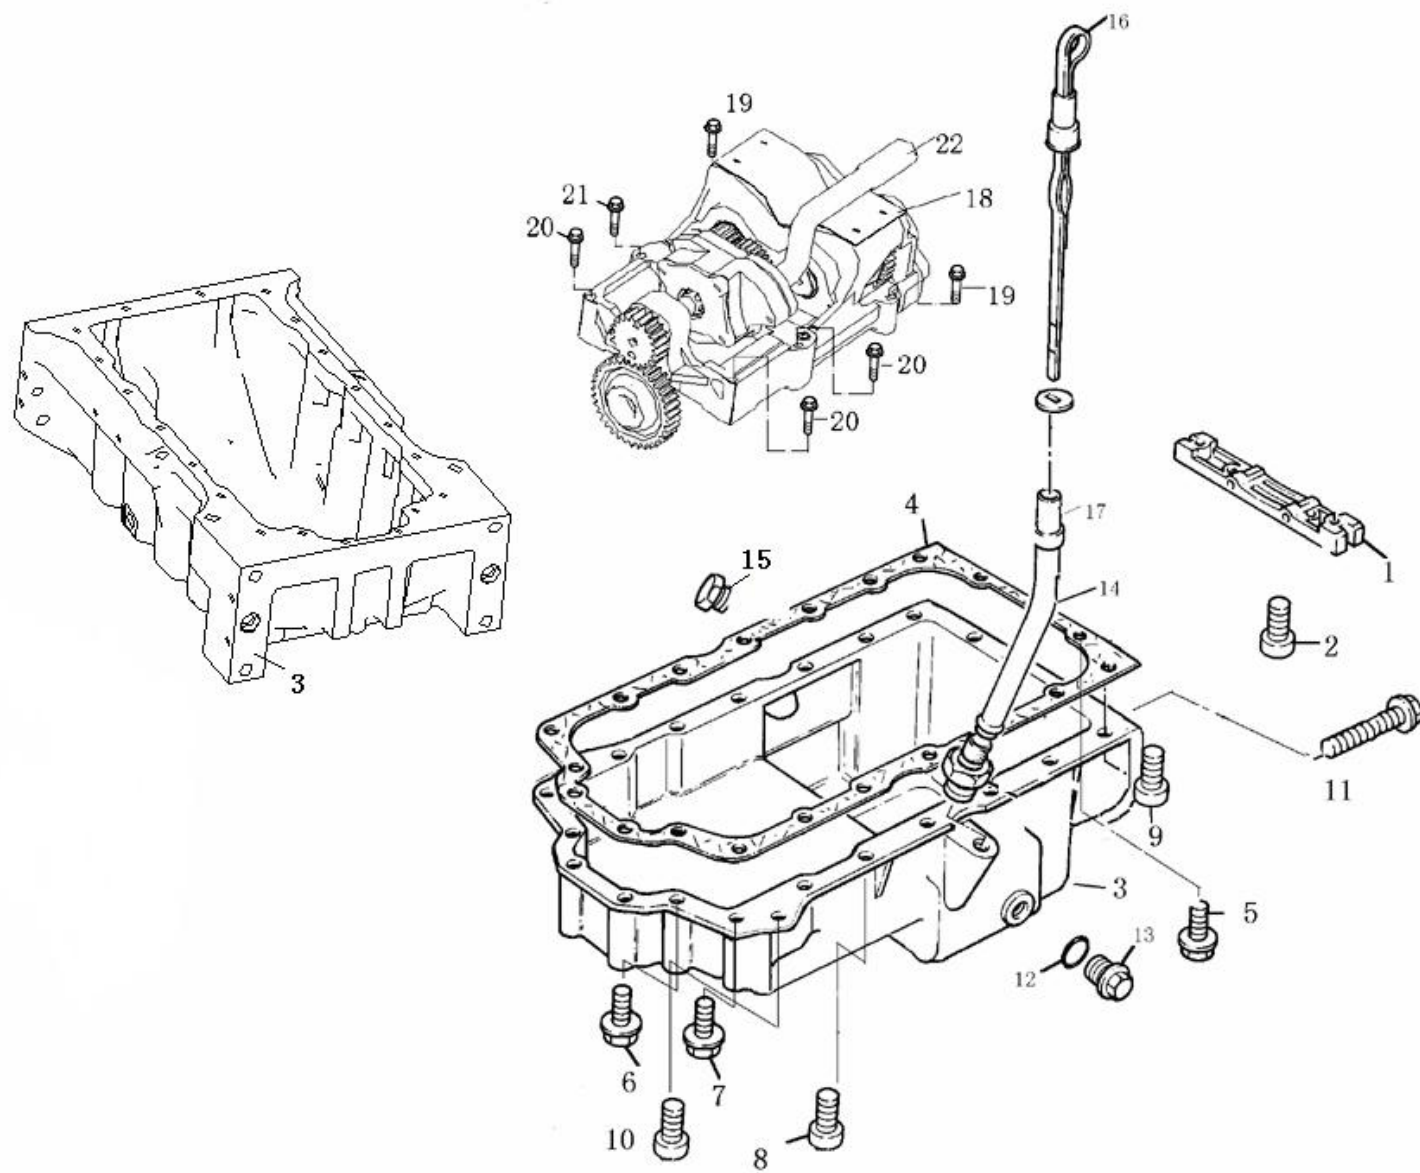


1004-4TART82P02-11 10.11-润滑油底壳-11 LUBRICATING OIL SUMP

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T738060002	桥架	AXLE FRAME	1	
10	T2314K213	螺栓	BOLT	2	
10	T2314K213	螺栓	BOLT	2	
11	GBT5783-M16X45	螺栓	BOLT	4	
12	T2415715	O 型圈	O-RING	2	
13	T32186405A	油底堵	OIL SUMP PLUG	2	
14	T3577A125	油尺管	OIL DIPSTICK PIPE	1	
15	T2431A016	堵	PLUG	1	
16	T3178C073A	油尺	OIL DISTICK	1	
17	T33812116	橄榄体	OLIVE	1	
18	T66201000A	平衡器	BALANCER	1	
19	GBT5789-AM10X55	螺栓	BOLT	2	
2	T2311D039	螺栓	BOLT	2	
20	GBT5789-AM10X70	螺栓	BOLT	3	
21	GBT5789-AM10X80	螺栓	BOLT	1	
22	T66201123	吸油盒	OIL SUCTION BOX	1	
3	T63802001A	油底壳	OIL SUMP	1	
4	T36815736	油底垫	OIL SUMP GASKET	1	
5	T2314H055A	螺栓	BOLT	2	
5	T2314H055A	螺栓	BOLT	2	
6	T2314H023A	螺栓	BOLT	4	
8	T2314H015A	螺栓	BOLT	10	
9	T2314H012A	螺栓	BOLT	2	

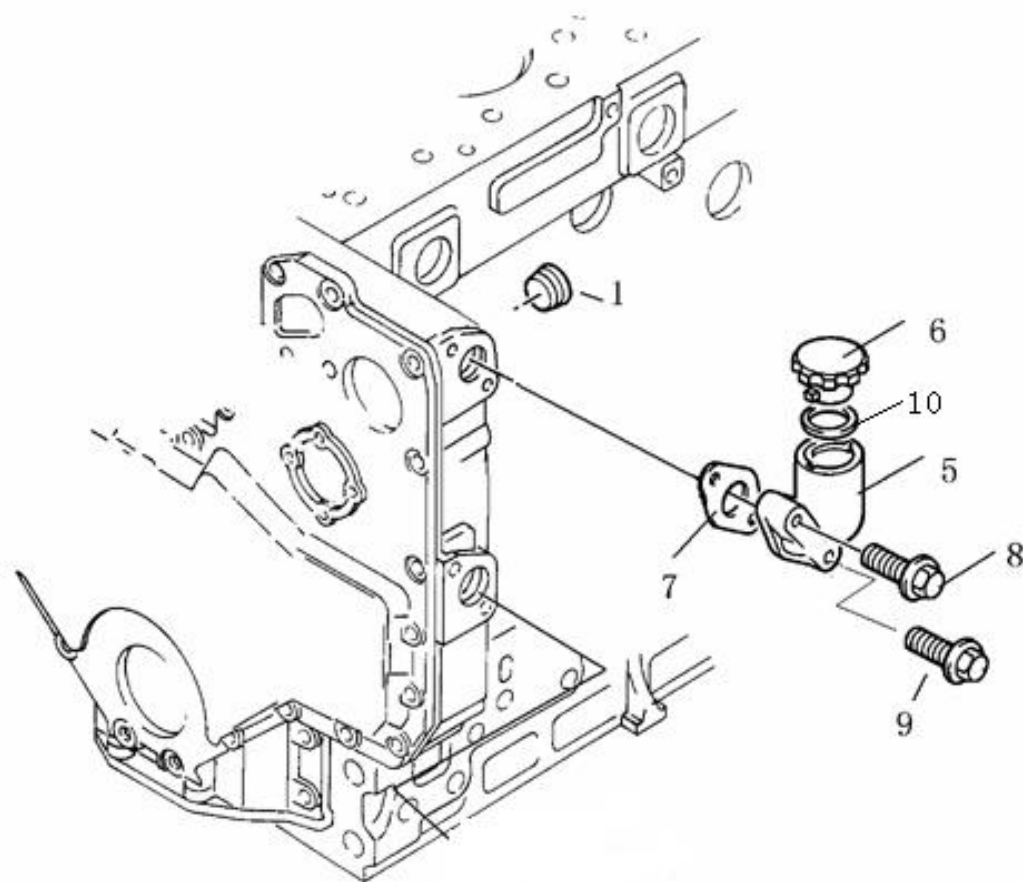


1004-4TART82P02-12 10.12-加油口 FILLING CAP

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T0650586	螺堵	SCREW PLUG	1	
1	T0650586	螺堵	SCREW PLUG	1	
10	GB1235-D38X3.1	O型圈	O-RING	1	
5	T74001001	加油口	FILLING CAP	1	
6	T74001202	加油口盖	COVER	1	
7	T3683H006	垫	WASHER	1	
8	T2314H010	螺栓	BOLT	1	
9	T2314H007	螺栓	BOLT	1	

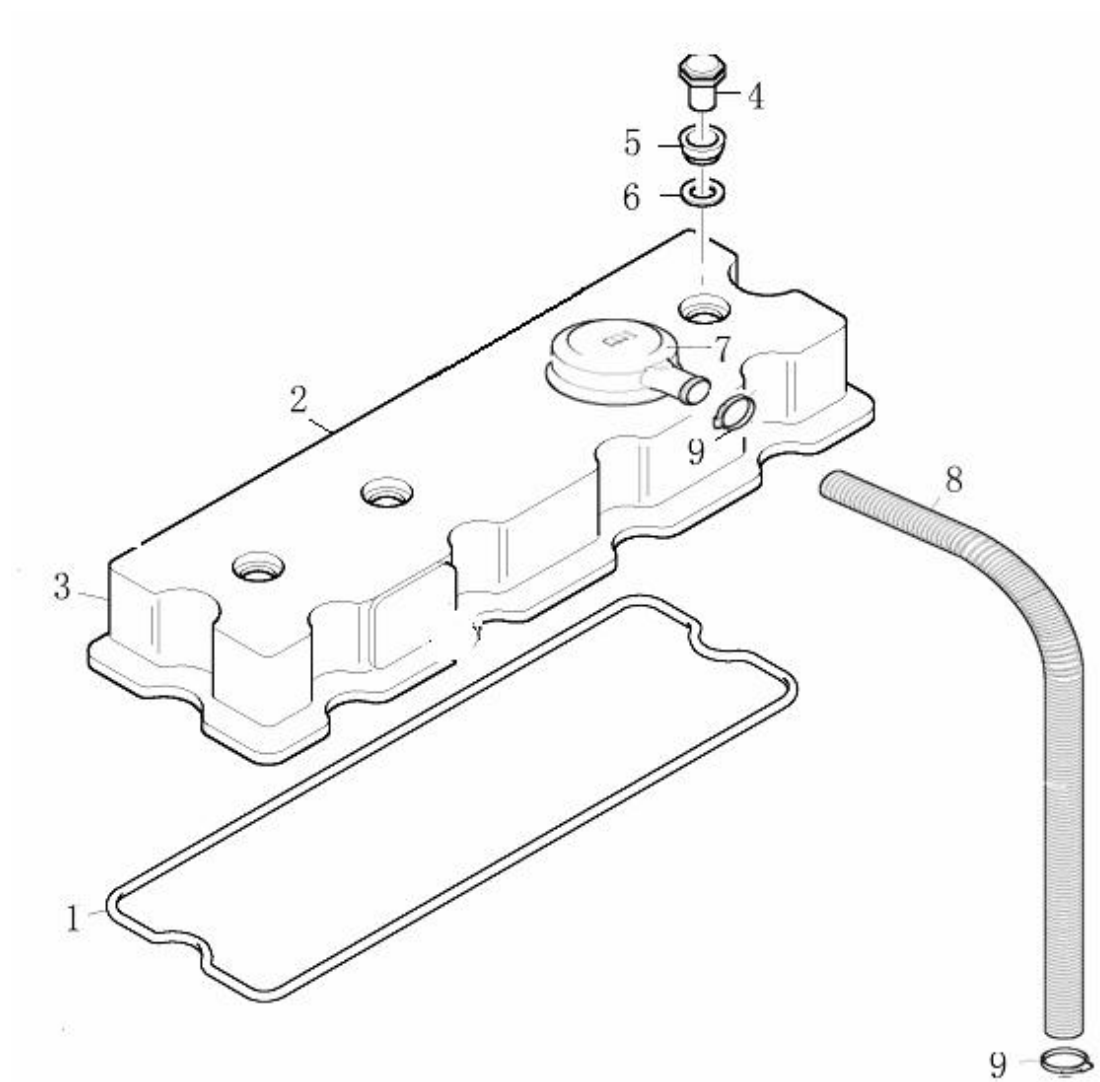


1004-4TART82P02-13 10.13-气缸盖罩 CYLINDER COVER

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T3681A021A	缸盖罩垫	CYL. HEAD COVER JOINT	1	
2	T3687A507A	防尘条	SEAL	1	
2	T3687A507A	防尘条	SEAL	1	
3	T4142X046G	缸盖罩总成	CYLINDER COVER BONNET ASSEMBLY	1	
4	T3274A003	螺母	NUT	3	
5	T0920009	垫圈	WASHER	3	
6	T33817135	密封圈	SEAL RING	3	
7	T4133J001	呼吸器总成		1	
8	T33881108E	呼吸管	BREATH PIPE	1	
9	T0180064A	喉箍	HOOP	1	

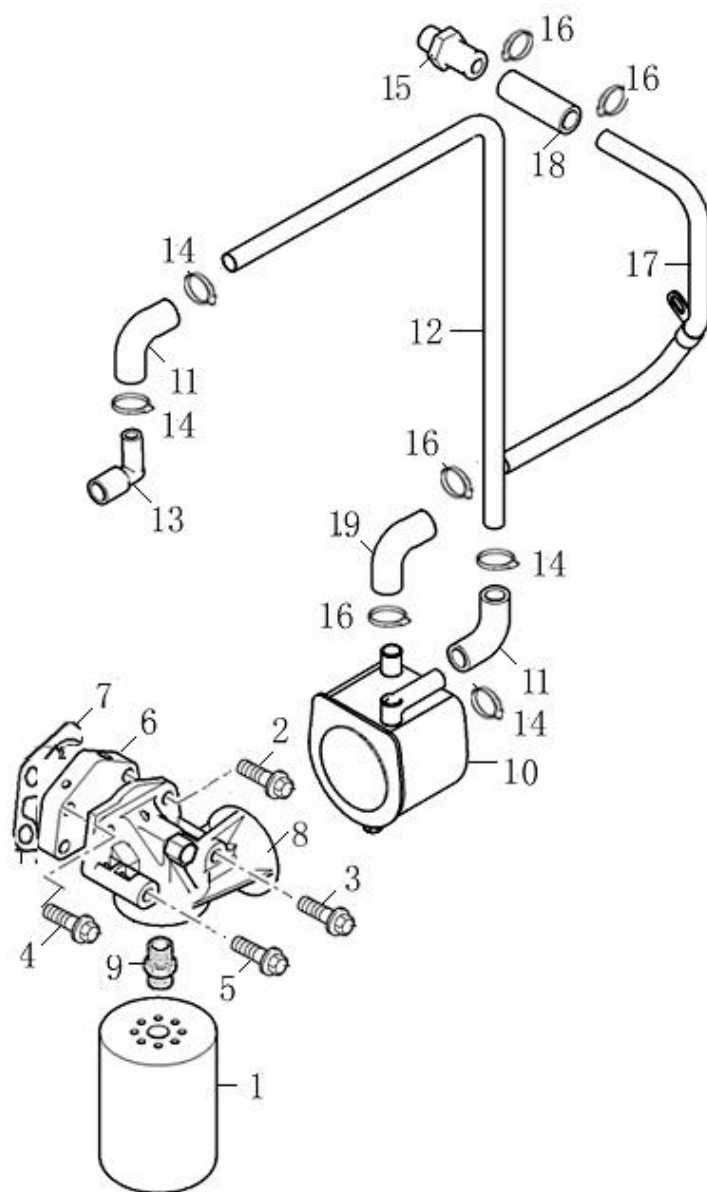


1004-4TART82P02-14 10.14-机油滤清器及机油冷却器 LUBRICATING OIL FILTER & OIL COOLER

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T74105021	机油滤清器滤芯	OIL FILTER ELEMENT	1	
10	T4134A022	油冷器（组件）	OIL COOLER (UNIT)	1	
11	T34821121	弯胶管	BENDING HOSE	1	
12	T74202039	水管	WATER HOSE	1	
13	T64403016	接头	CONNECTING JOINT	1	
14	T2481877A	卡箍	CLAMP HOOP	4	
15	T64202014	油冷器接头	CONNECTION	1	
17	T4126E068G	油冷器进水管	PIPE、 WATER INLET	1	
18	T3385H001	连接胶管	CONNECTING RUBBER PIPE	1	
2	T2314J008	螺栓	BOLT	1	
3	T2314J018	螺栓	BOLT	1	
4	T2314J040	螺栓	BOLT	1	
5	T2314J048	螺栓	BOLT	1	
6	T3773T101A	垫板	PAD BOARD	1	
7	T3686T006	垫	WASHER	2	
8	T3773P192A	机油滤清器座	OIL FILTER SEAT	1	
9	T33554128A	接头	CONNECTING JOINT	1	

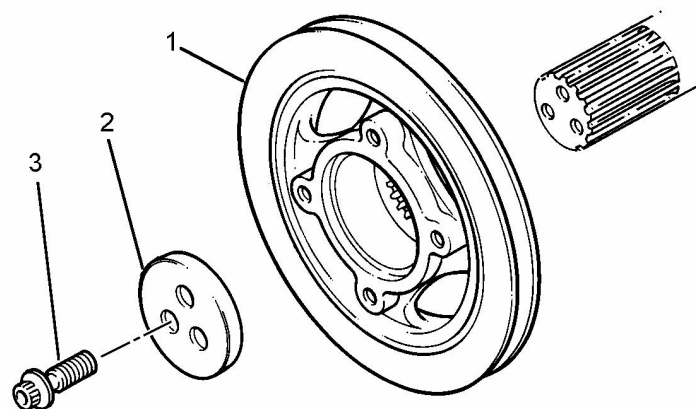


1004-4TART82P02-15 10.15-前端驱动输入 FRONT END DRIVE INPUT KBH00575

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T3115T051B	皮带轮	BELT WHEEL	1	
2	T3241N001	止推块	THRUST BLOCK	1	
3	T711050047	螺栓	BOLT	3	

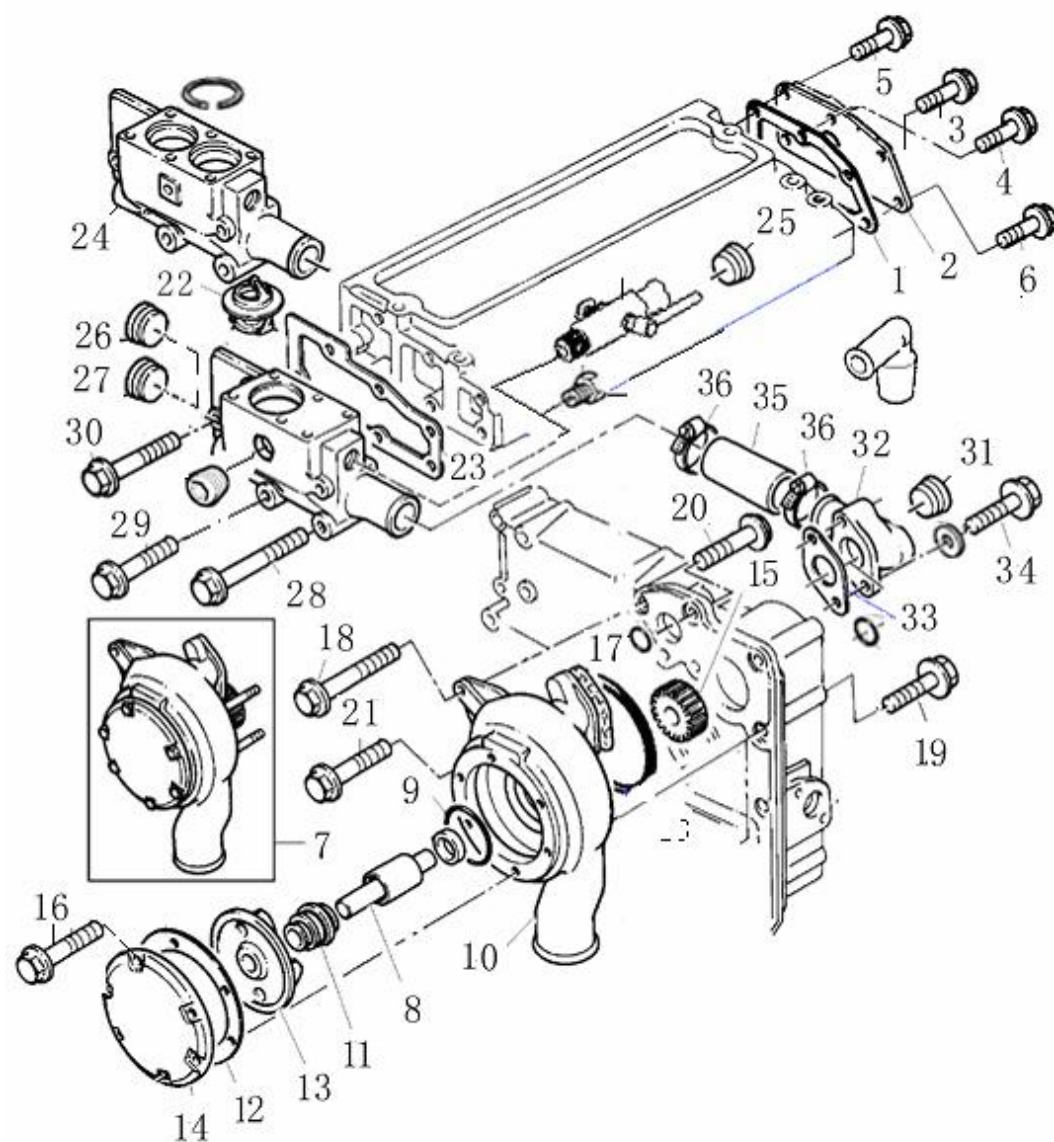


1004-4TART82P02-16 10.16-水泵及节温器-16 WATER PUMP & THERMOSTAT

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T3685R005	垫	WASHER	1	
17	T2415H494	O 型圈	O-RING	1	
18	T2314H015	螺栓	BOLT	1	
19	T2314N043	螺栓	BOLT	3	
2	T3623K007	盖板	COVER PLATE	1	
20	T2314H006	螺栓	BOLT	1	
22	T74405005	节温器	THERMOSTAT	2	
23	T3685F005	垫	WASHER	1	
24	T744030025	节温器壳体	THERMOSTAT HOUSING BODY	1	
25	T2431154	堵	PLUG	1	
28	T2314J013	螺栓	BOLT	2	
3	T2314H002	螺栓	BOLT	1	
30	T2314H008	螺栓	BOLT	2	
32	T3764E061	接头	CONNECTING JOINT	1	
32	T3764E061	接头	CONNECTING JOINT	1	
33	T3683N004	垫	WASHER	1	
34	T2314H004	螺栓	BOLT	2	
35	T33854114	胶管	RUBBER HOSE	1	
36	T0180067A	卡箍	CLAMP HOOP	2	
4	T2314H003	螺栓	BOLT	1	
6	T2314J002	螺栓	BOLT	2	
7	T4131E011C	水泵	WATER PUMP	1	

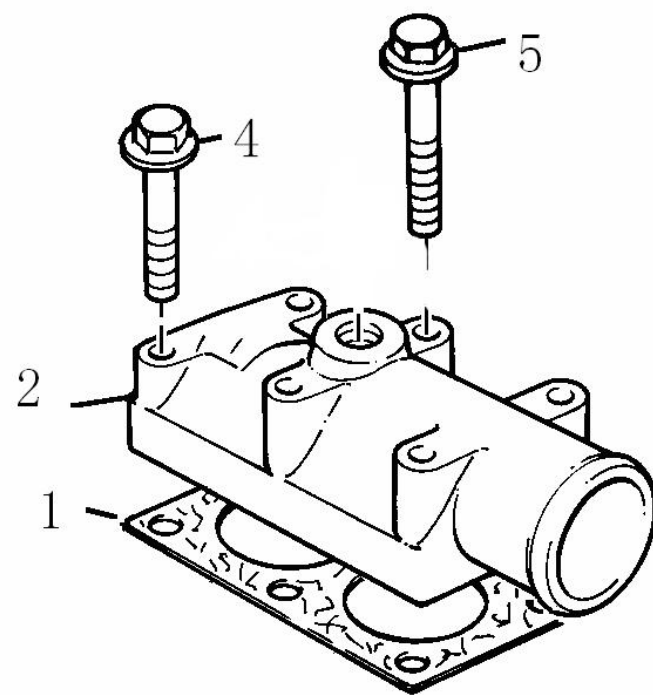


1004-4TART82P02-17 10.17-水出口及入口-17 WATER OUTLET & INLET

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T3684A004	节温器壳垫	GASKET	1	
2	T3771K043	出水口	Water outlet	1	
4	T2314H010	螺栓	BOLT	1	
5	T2314H008	螺栓	BOLT	1	

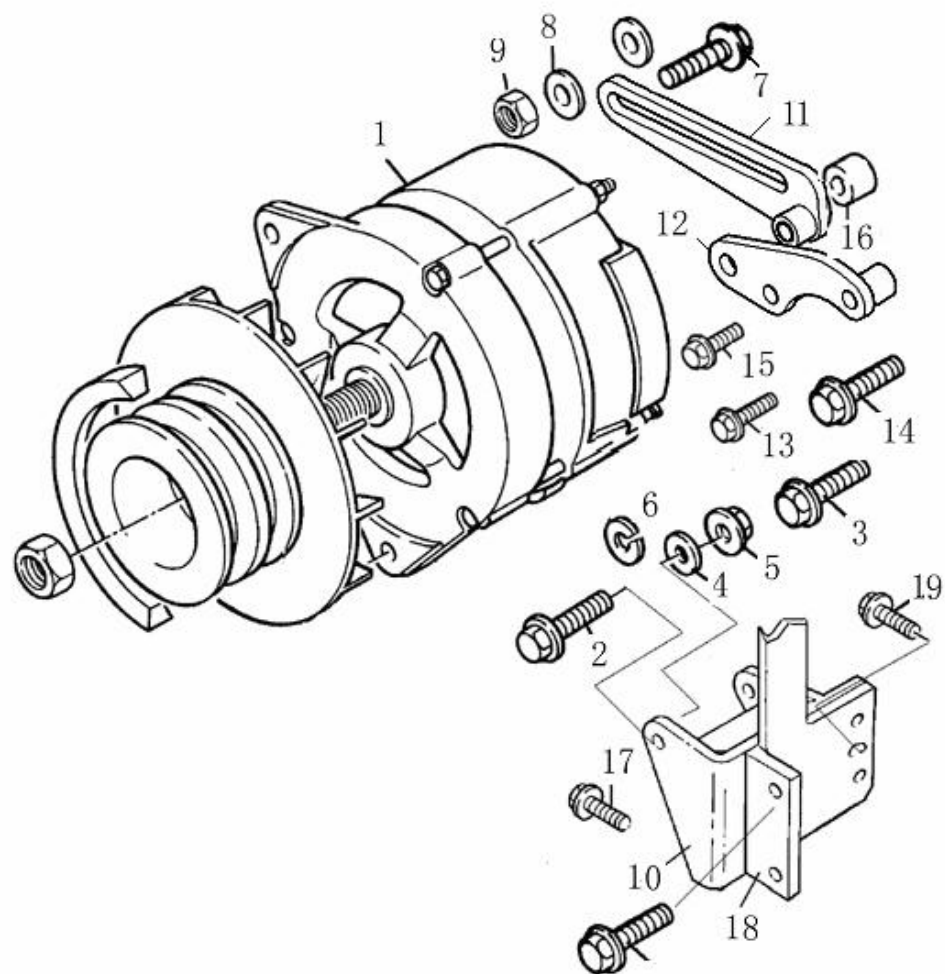


1004-4TART82P02-18 10.18-交流发电机及发电机 ALTERNATOR & GENERATOR

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T74501024	发电机	GENERATOR	1	
10	T3827H025B	发电机支架	GENERATOR BRACKET	1	
11	T3753V014A	调节杆	ADJUSTING ROD	1	
12	T3753V016	支架	SUPPOT BRACKET	1	
13	T2314H018	螺栓	BOLT	1	
13	T2314H018	螺栓	BOLT	1	
15	T2314J004	螺栓	BOLT	1	
16	T64502110	隔圈		1	
17	T2314H002	螺栓	BOLT	4	
18	T3641P004D	支架	SUPPOT BRACKET	1	
19	T2314J003	螺栓	BOLT	1	
2	T2314H007	螺栓	BOLT	1	
20	T74502242	防护罩	SHIELD	1	
3	T2314H008	螺栓	BOLT	1	
4	T0920497	垫圈	WASHER	2	
5	Q340B08	螺母M8	NUT M8	2	
5	Q340B08	螺母M8	NUT M8	2	
6	Q40308	弹性垫圈8	SPRING WASHER 8	2	
7	T2314J006	螺栓	BOLT	1	
8	T2131A010	垫圈10	WASHER 10	2	
9	T2318A634	螺母	NUT	1	

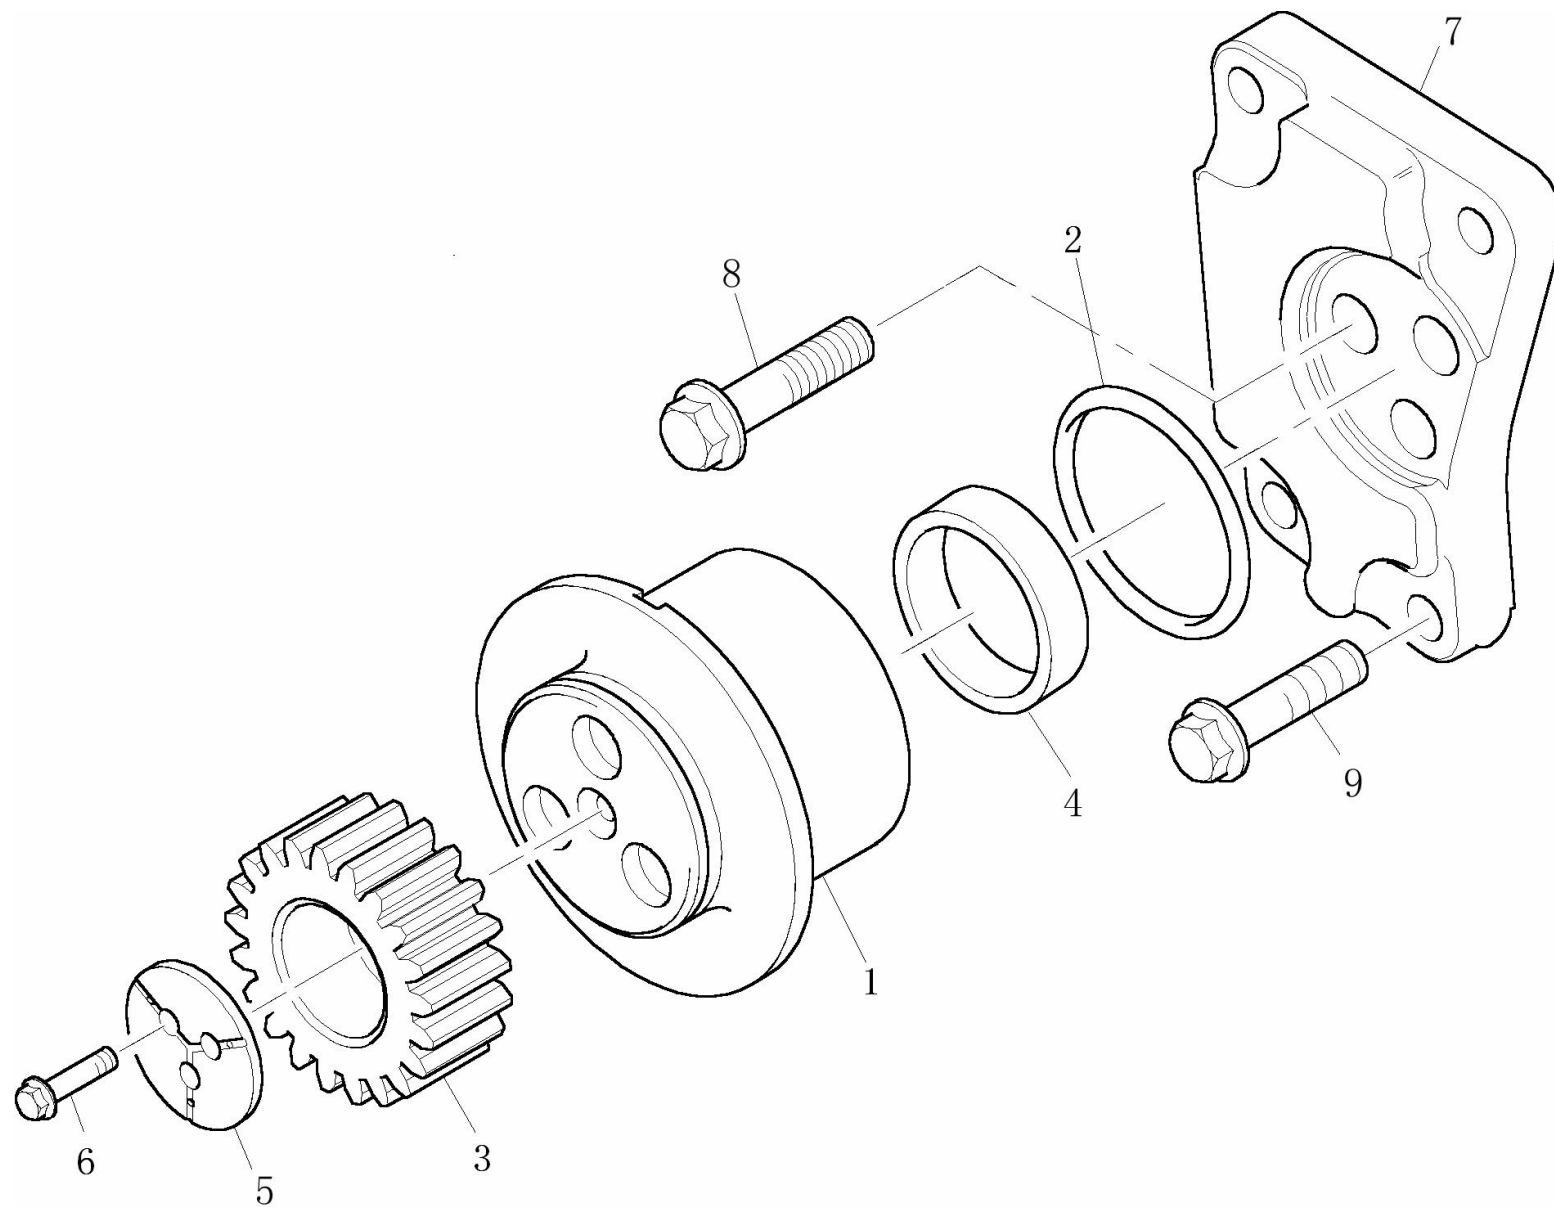


1004-4TART82P02-19 10.19-轮毂-19 HUB

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T3272X021	轮毂	HUB	1	
2	T2415H213	O型圈	O-RING	1	
3	T3117C161	齿轮	GEAR	1	
4	T2551A289	轴承	BEARING	1	
5	T3241H011	固定板	FIXED PLATE	1	
6	T2314H002	螺栓	BOLT	3	
7	T3753R241	支架	SUPPOT BRACKET	1	
8	T2311D081	螺栓	BOLT	3	
9	T2311D560	螺栓	BOLT	4	

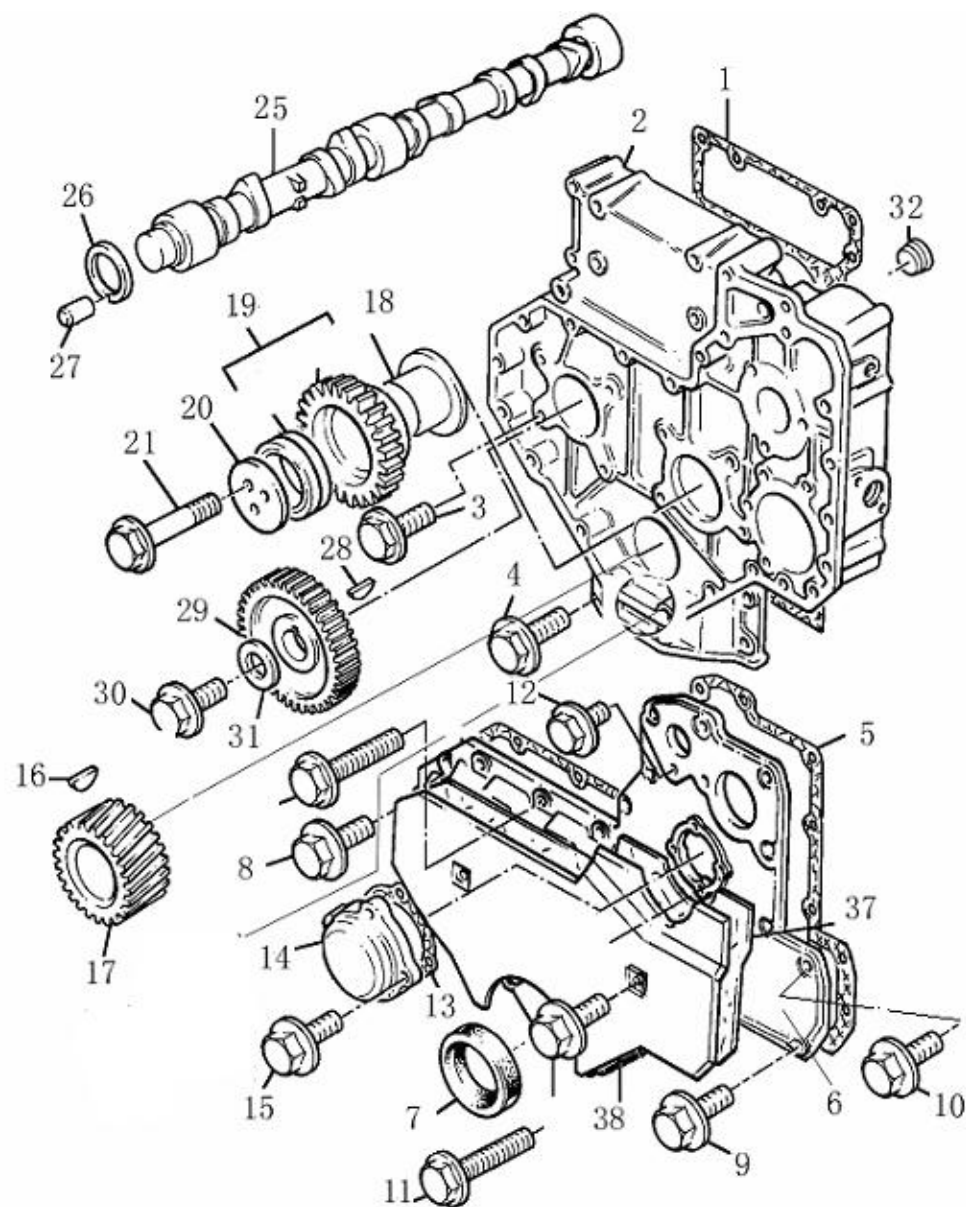


1004-4TART82P02-02 10.2-正时齿轮及凸轮轴 TIMING GEAR& CAMSHAFT

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T3681P009	垫	WASHER	1	
12	T2314H013	螺栓	BOLT	6	
13	T62204002	垫	WASHER	1	
14	T62204001	检查盖	INSPECTION COVER	1	
14	T62204001	检查盖	INSPECTION COVER	1	
15	T2314F036	螺栓	BOLT	4	
16	T0500012	键	KEY	1	
17	T3117C061	齿轮	GEAR	1	
18	T33426161A	轮毂	HUB	1	
18	T33426161A	轮毂	HUB	1	
19	T4111A013	齿轮	GEAR	1	
2	T3716C133C	正时齿轮室	TIMING CASE	1	
20	T3241H009	固定板	FIXED PLATE	1	
21	T2314J010	螺栓	BOLT	3	
25	T31415364	凸轮轴	CAMSHAFT	1	
26	T33153121	止推板	PLATE;THRUST	1	
27	T2116053	销子	PIN	1	
29	T3117L023	齿轮	GEAR	1	
3	T2314H003	螺栓	BOLT	8	
30	T2314J606	螺栓	BOLT	1	
31	T3321A003	垫圈	WASHER	1	
31	T3321A003	垫圈	WASHER	1	
4	T2314H004	螺栓	BOLT	4	
5	T3681P034	正时室盖垫	FRONT COVER JOINT	1	
6	T3716M091B	前盖	FRONT COVER	1	

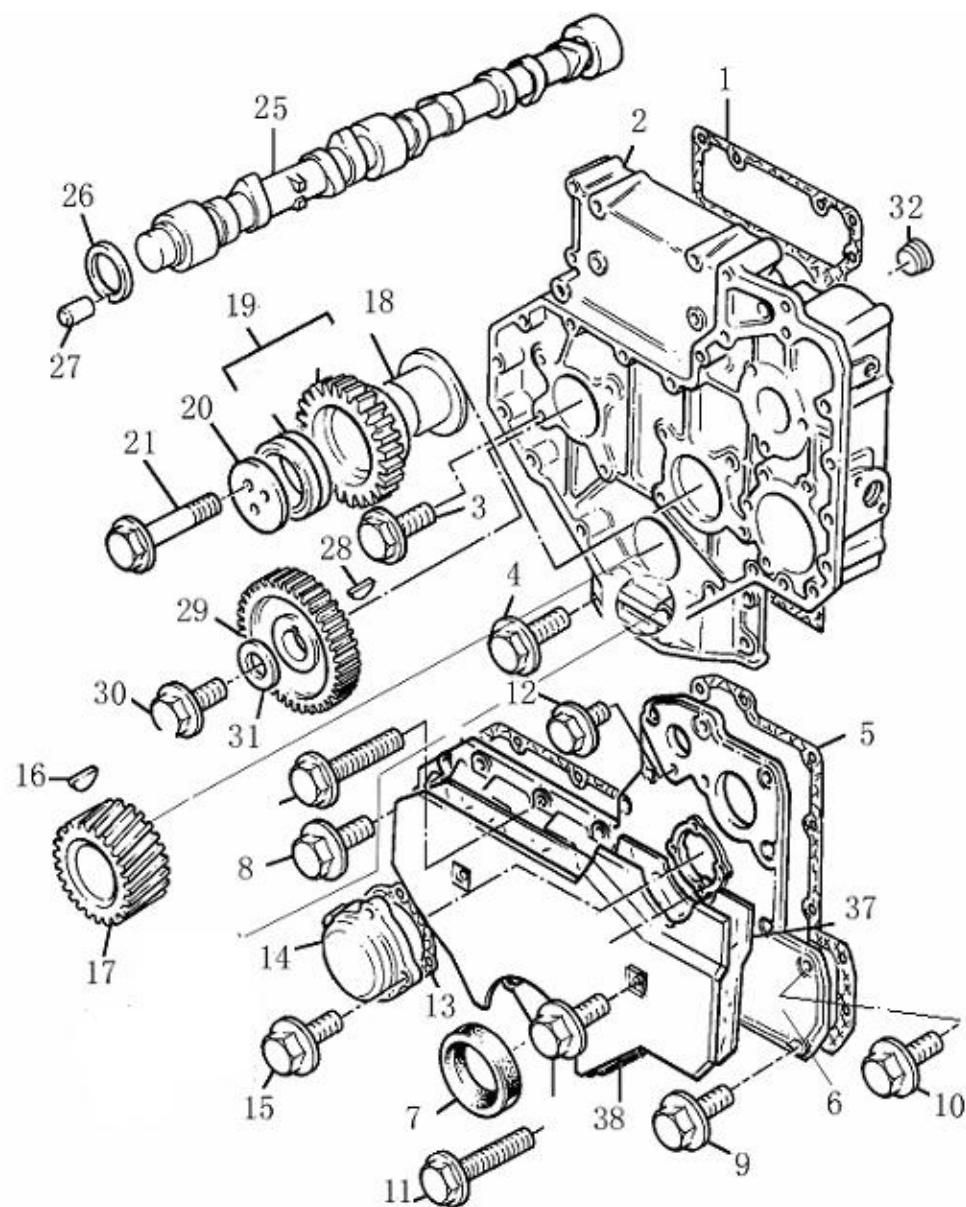


1004-4TART82P02-02 10.2-正时齿轮及凸轮轴(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
7	T2418F436	油封	OIL SEAL	1	
8	T2314H005	螺栓	BOLT	10	
9	T2314H034	螺栓	BOLT	1	

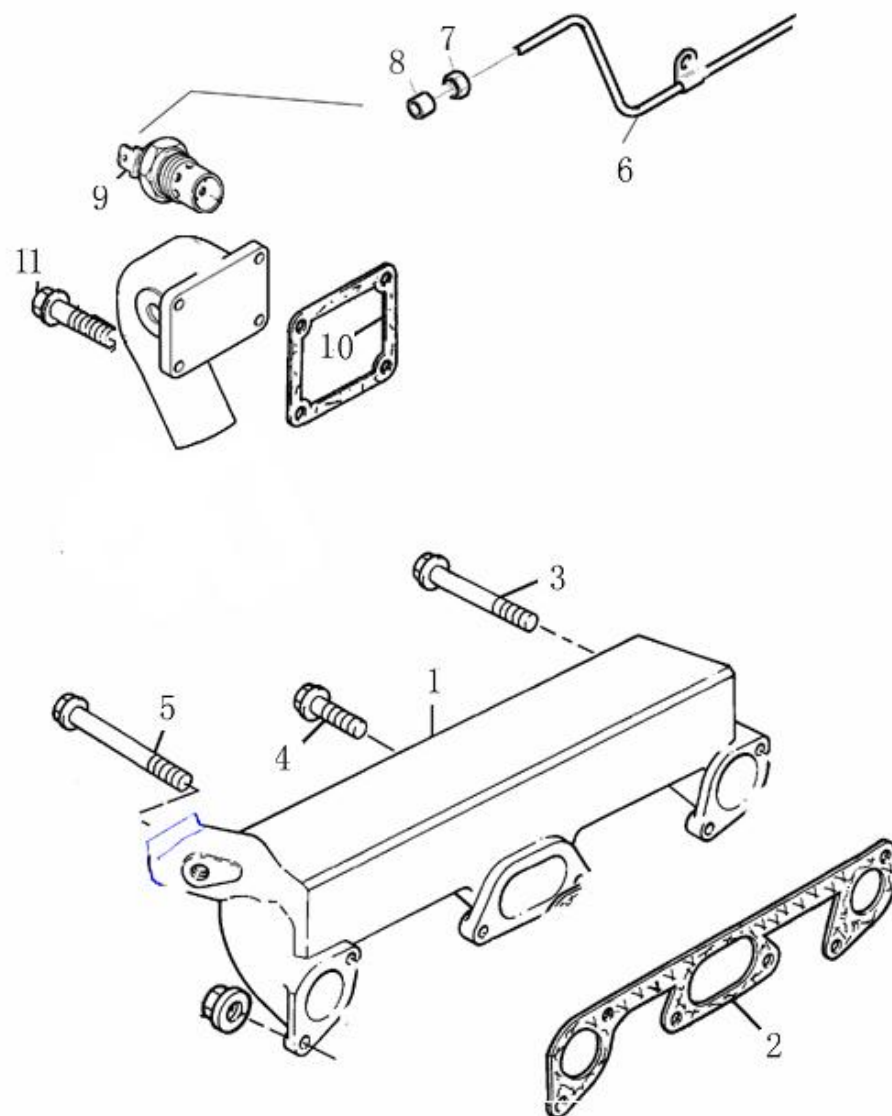


1004-4TART82P02-20 10.20-进气系统-20 MANIFOLDS & INDUCTION SYSTEM

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T3777H002A	进气管	AIR INLET PIPE	1	
10	T3684N503	垫	WASHER	1	
11	T2314H004	螺栓	BOLT	4	
12	T3766T073	进气弯管	AIR INLET SYPHON	1	
2	T3688C024	垫	WASHER	1	
3	T2314J011	螺栓	BOLT	1	
4	T2314J004	螺栓	BOLT	4	
5	T2314J018	螺栓	BOLT	1	
6	T75001403	油管	PIPE	1	
7	T711070004	螺母	NUT	1	
8	T714020004	橄榄体	OLIVE	1	
9	T2666108A	火焰预热塞	FLAME WARM-UP PLUG	1	

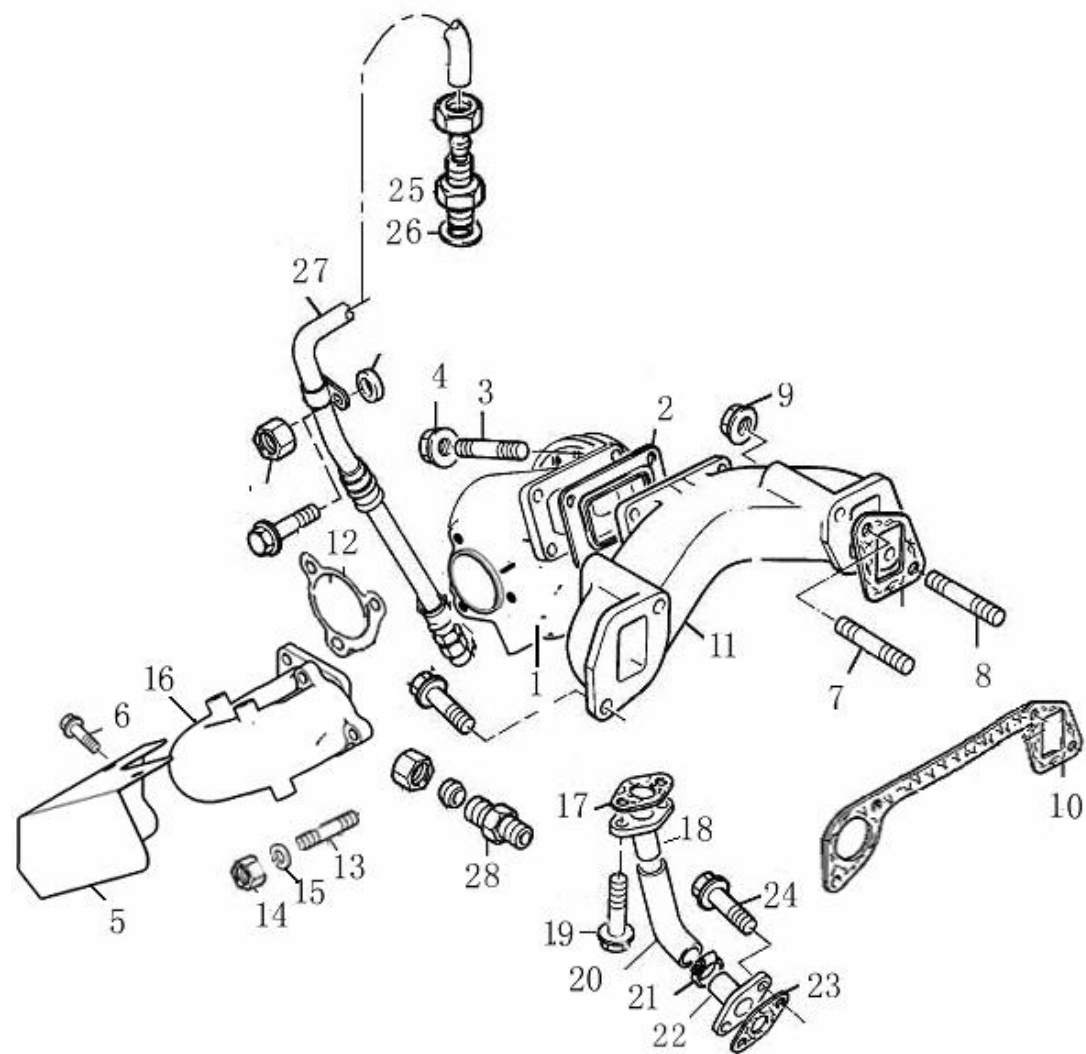


1004-4TART82P02-21 10.21-排气系统-21 MANIFOLDS & EXHAUST SYSTEM

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T74801017	增压器	TURBOCHARGER	1	
10	T3688C023	垫	WASHER	1	
11	T74716009A	排气管	EXHAUST PIPE	1	
12	T2313C078	双头螺柱	8.8-A3L STUD	3	
14	Q340B10	螺母	NUT	3	
15	Q40310	弹簧垫圈	SPRING WASHER	1	
16	T747160008	排气弯管	EXHAUST BENDING PIPE	1	
17	T64703009	密封垫片	SEAL WASHER	1	
18	T74811019	油管 (组件)	OIL PIPE (UNIT)	1	
19	T2314H003	螺栓	BOLT	2	
2	TL681VF03	垫	WASHER	1	
20	T3383A006	胶管	RUBBER HOSE	1	
21	T2481877A	卡箍	CLAMP HOOP	1	
23	T36832144	垫	WASHER	1	
25	T0201502	接头	CONNECTING JOINT	1	
26	TL311KF01	垫圈	WASHER	1	
27	T4123T016C	油管	PIPE	1	
28	T33555138	接头	CONNECTING JOINT	1	
3	TL254HF03A	丝对	STUD	4	
4	T2318A633	螺母	NUT	4	
5	T748070053	防护罩	SHIELD	1	
6	T2314F001	螺栓	BOLT	2	
7	T2313M387A	丝对	STUD	3	
8	T2313M388A	丝对	STUD	1	
9	T2318A634	螺母	NUT	4	

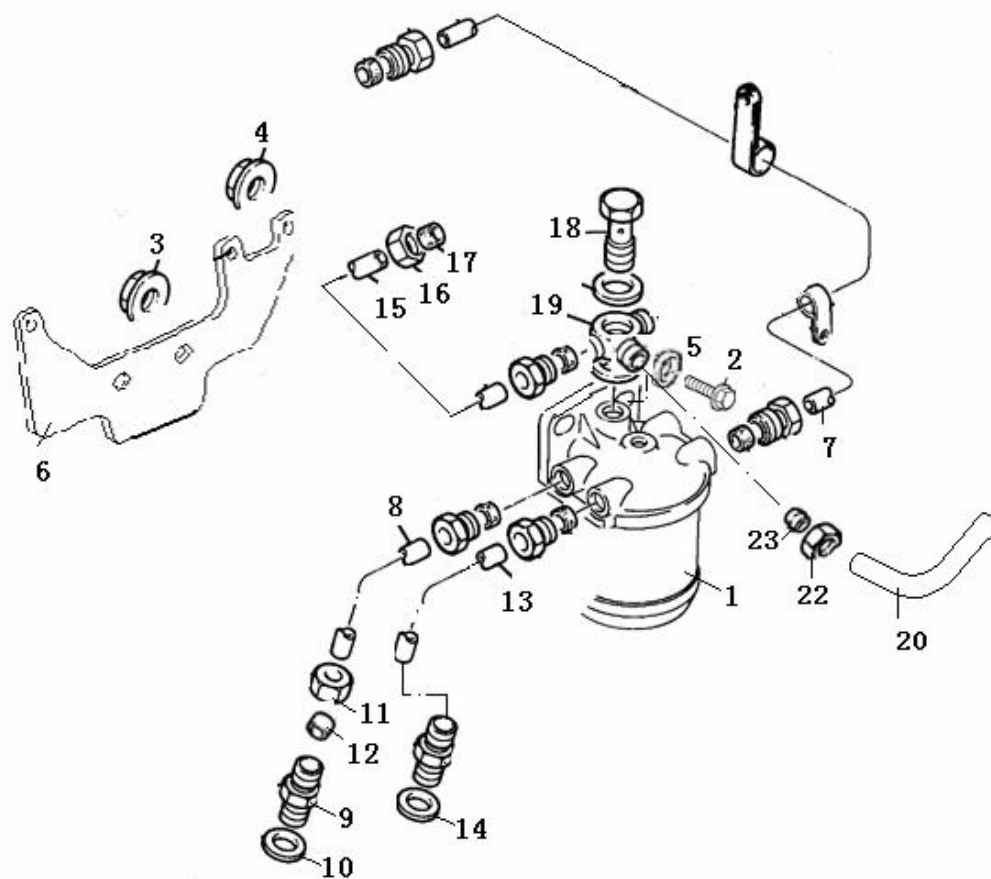


1004-4TART82P02-22 10.22-低压燃油系统 LOW PRESSURE FUEL SYSTEM

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T75004250	燃油滤清器	FUEL FILTER	1	
1.1	T75004251	燃油滤清器滤芯	FUEL FILTER STRAINER CORE	1	
10	T2411154	垫圈	WASHER	1	
11	T33225413	螺母	NUT	1	
12	T33811115	橄榄体	OLIVE	1	
12	T33811115	橄榄体	OLIVE	1	
13	T73217078	油管	PIPE	1	
15	T73302063	回油管	OIL RETURN PIPE	1	
16	T33225412	螺母	NUT	2	
17	T33811112	橄榄体	OLIVE	2	
18	T0095344A	过油螺栓	BOLT	1	
19	T73201107	接头	CONNECTING JOINT	1	
2	T2314J005	螺栓	BOLT	2	
20	T65005001A	油管	PIPE	1	
22	T0576113	螺母	NUT	1	
23	T0566004	橄榄体	OLIVE	1	
3	T2318A604	螺母	NUT	2	
4	T2318A603	螺母	NUT	3	
5	T2131A010	垫圈10	WASHER 10	2	
6	T75004136	支架	SUPPOT BRACKET	1	
8	T73217077	油管	PIPE	1	
9	T33555372	接头	CONNECTING JOINT	1	

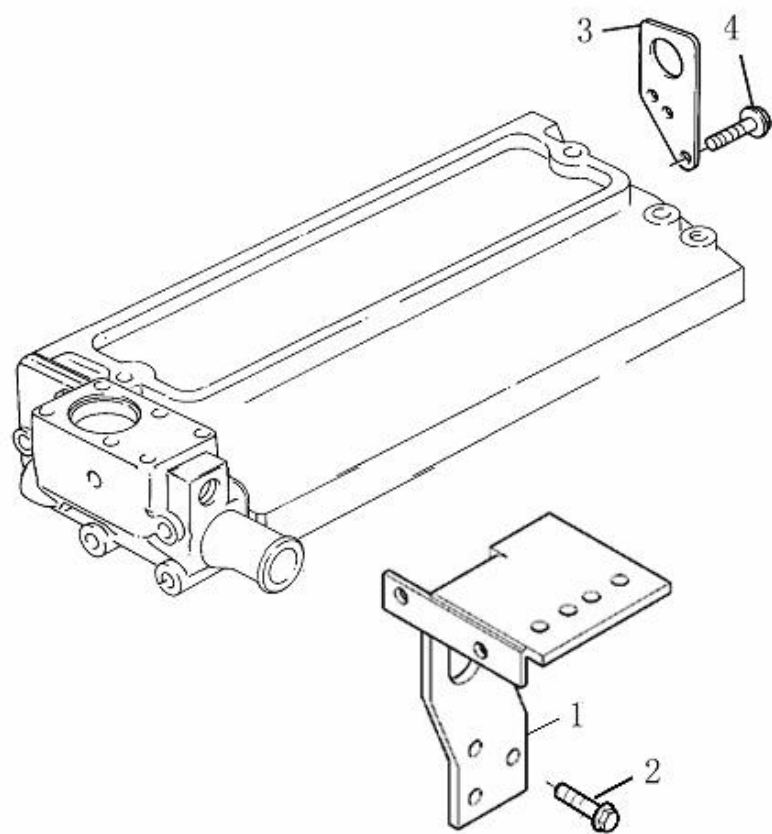


1004-4TART82P02-23 10.23-吊耳 CONDOLE EAR

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T74502249	吊耳	BRACKET,LIFTING	1	
2	T2314J003	螺栓	BOLT	3	
3	T3654W003	后吊耳	REAR LIFTING RING	1	

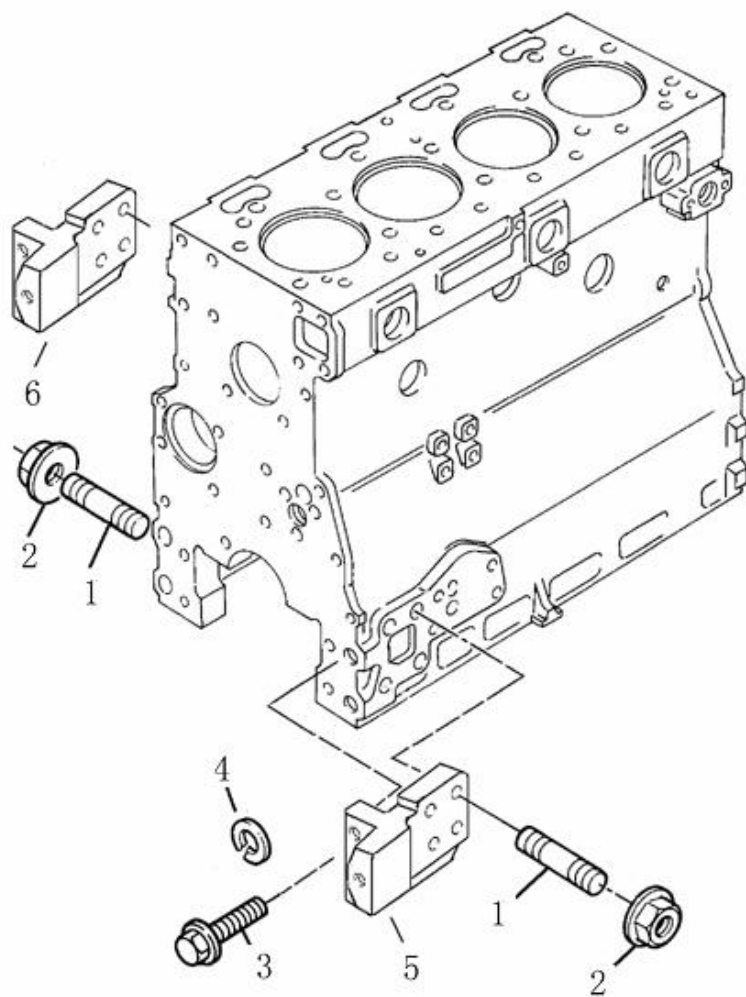


1004-4TART82P02-24 10.24-支架 BRACKET

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T2313M101	双头螺柱	8.8-A3L STUD	8	
2	T2318A605	螺母	NUT	8	
3	Q150B1640Q	螺栓	BOLT	4	
4	Q40316	垫圈	WASHER	4	
5	T66003001	左前支架	LEFT FRONT BRACKET	1	
5	T66003001	左前支架	LEFT FRONT BRACKET	1	
6	T66003002	右前支架	RIGHT FRONT BRACKET	1	

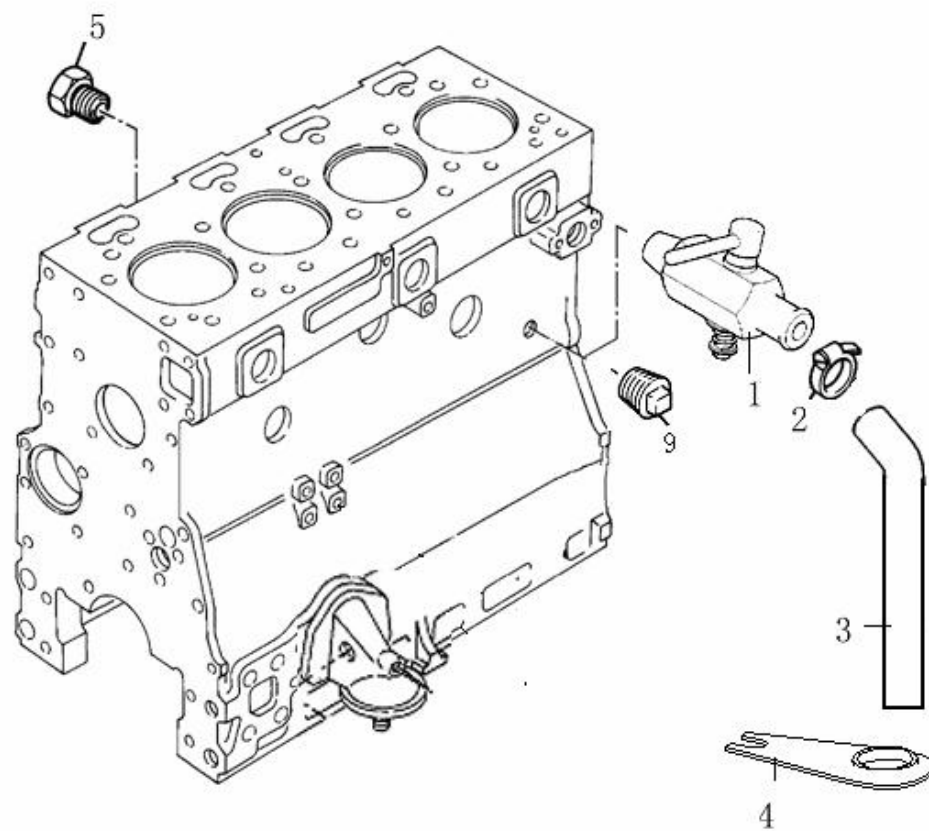


1004-4TART82P02-25 10.25-放水阀 DRAIN VALVE

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T62204003	放水开关	DRAIN SWITCH	1	
2	T0180063A	卡箍	CLAMP HOOP	1	
3	T64403007	放水管	DRAIN PIPE	1	
4	T64403008	支架	SUPPOT BRACKET	1	
5	T32161114	堵	PLUG	1	

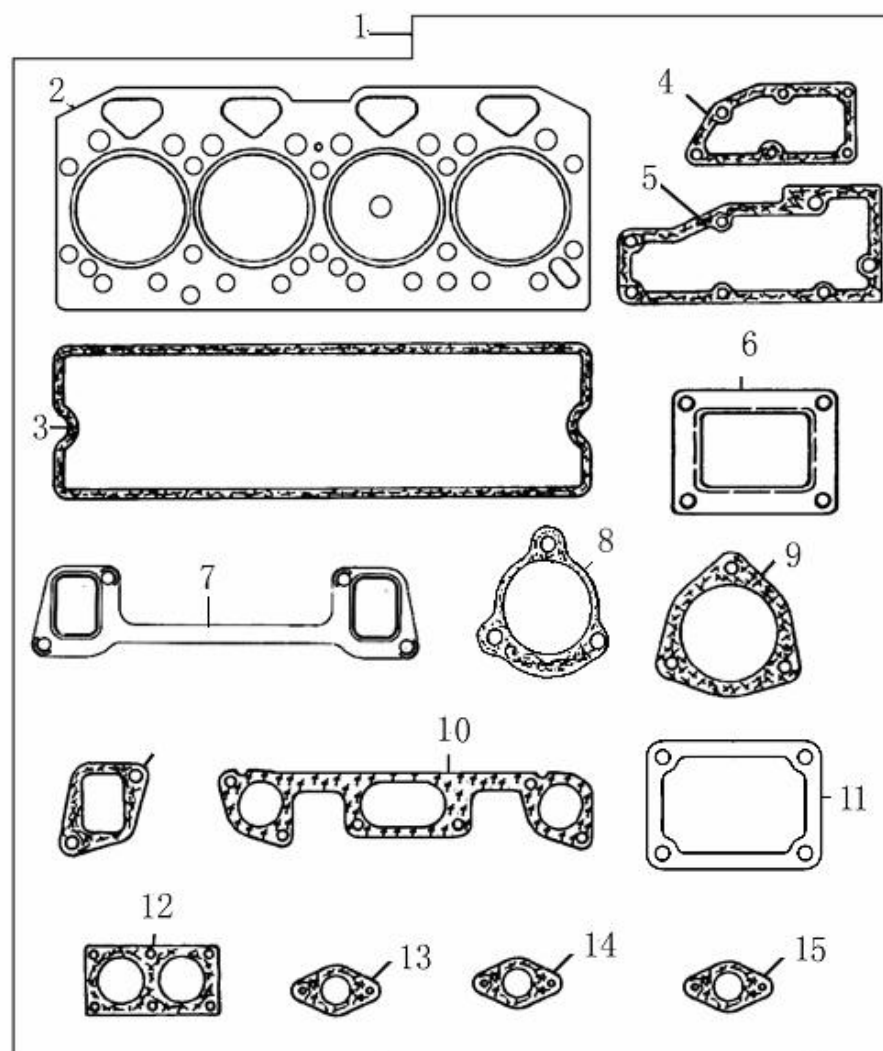

1004-4TART82P02-26 10.26-顶部维修组件 TOP SERVICE KIT

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TU5LT0178	顶部垫片	TOP WASHER	1	

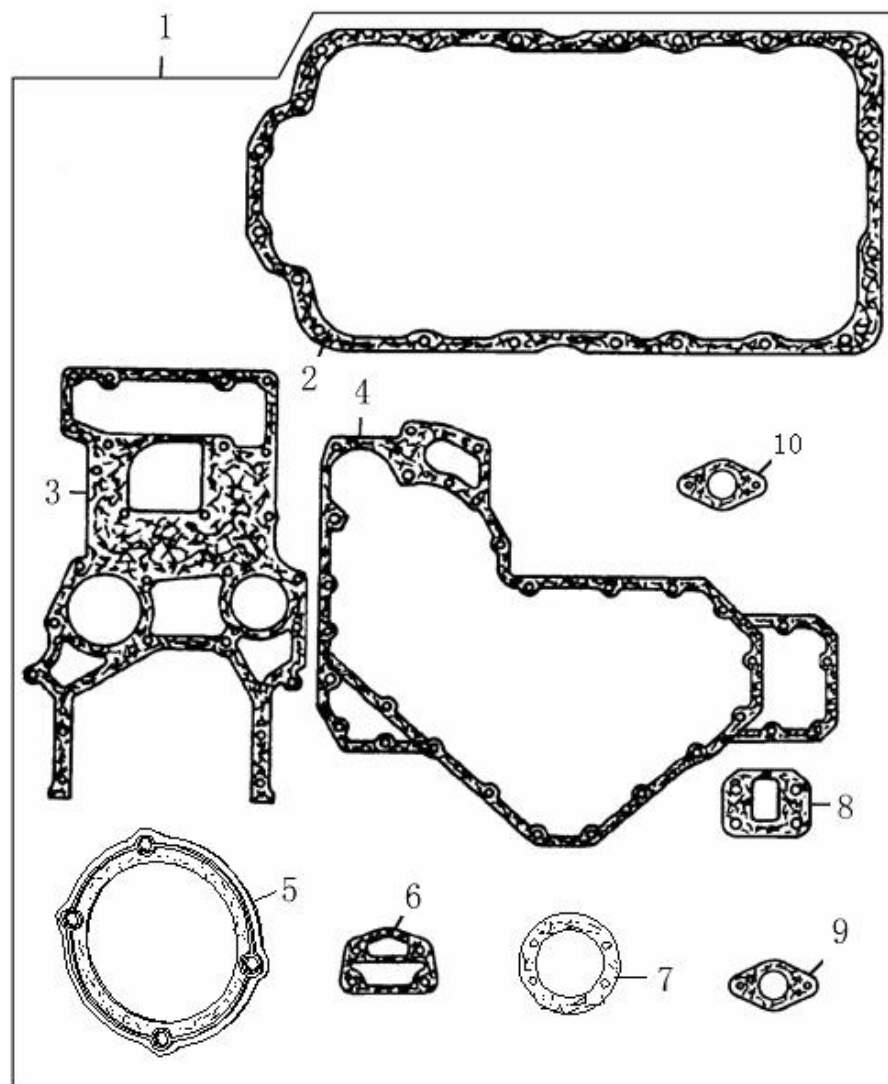


1004-4TART82P02-27 10.27-底部垫片总成 BOTTOM SERVICE KIT

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TU5LB0051	底部垫片	BOTTOM WASHER	1	


1004-4TART82P02-28 10.28-其他 OTHER

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T752220003	温控开关	TEMPERATURE CONTROL SWITCH	1	
2	T3381A002	橄榄体	OLIVE	1	
3	T73209517	管	PIPE	1	
4	T754010051	温控开关线束	HARNESS	1	
5	T754010040	预热塞线束	HARNESS	1	
6	T73201645	预热塞线束	HARNESS	1	

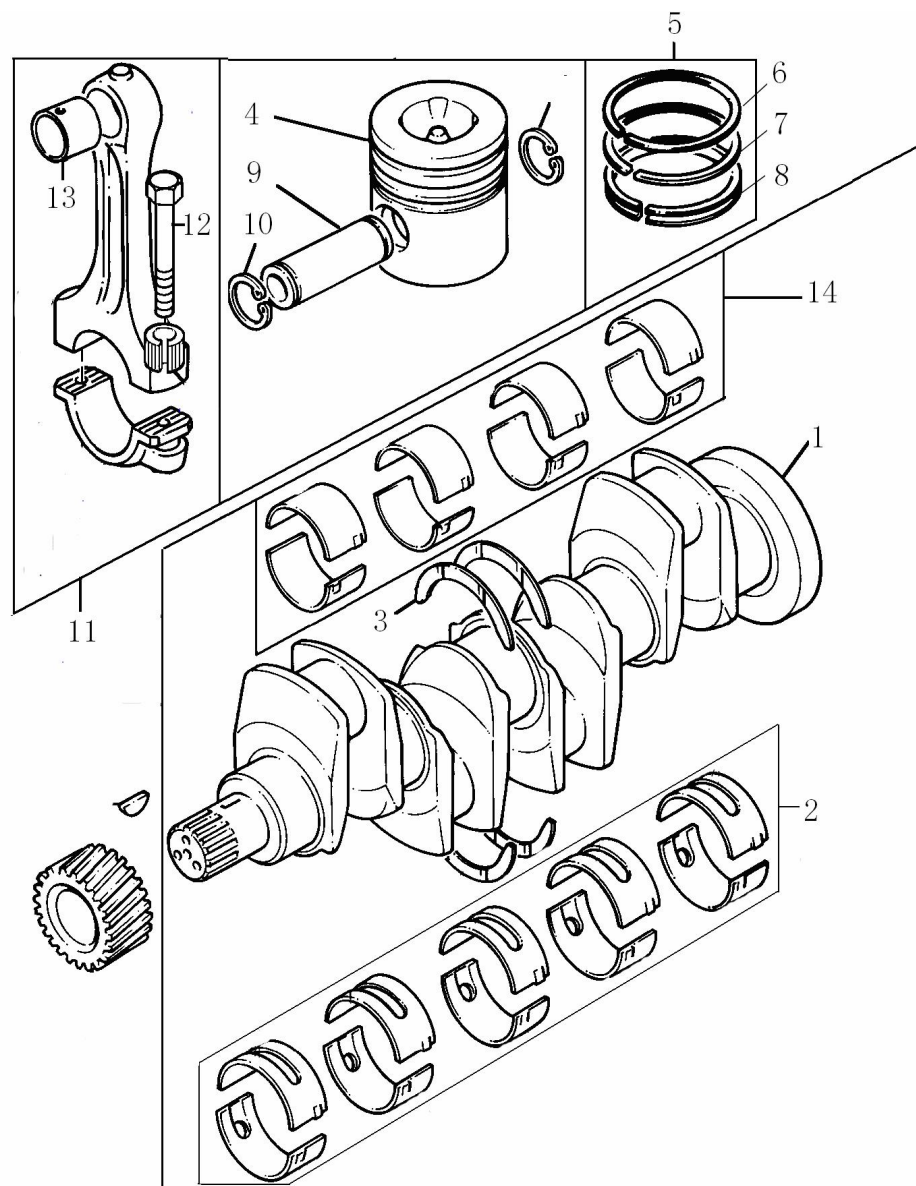


1004-4TART82P02-03 10.3-曲轴活塞及连杆 CRANKSHAFT PISTONS & CONNECTING RODS

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T31315681	曲轴	CRANK SHAFT	1	
10	T2721332	卡簧	CIRCLIP	8	
11	T4115C211	连杆	CONNECTING ROD	4	
11	T4115C211	连杆总成	CONNECTING ROD ASSEMBLY	4	
14	T31132011	轴瓦	BEARING	4	
2	T81558	主轴瓦	MAIN BEARING	1	
3	TZZ90001	止推片总成	THRUST SHIM ASSEMBLY	1	
4	T62409006	活塞	PISTON	4	
5	T4181A026	活塞环总成	PISTON RING ASSEMBLY	4	
9	T3313T005	活塞销	PISTON PIN	4	

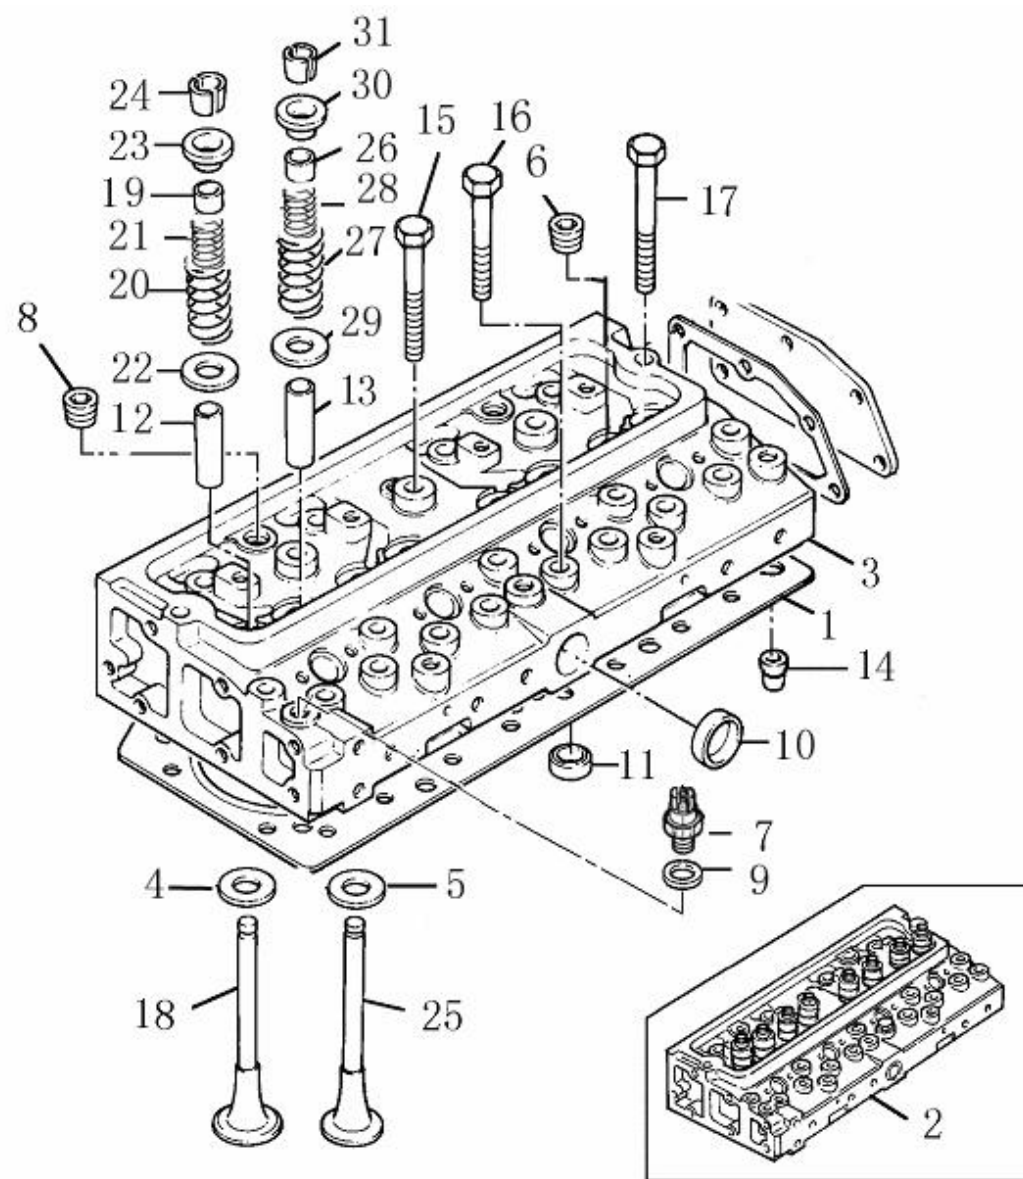


1004-4TART82P02-04 10.4-气缸盖 CYLINDER COVER

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T72505008	缸盖垫	CYLINDER HEAD GASKET	1	
10	T0650710	碗堵	COREHOLE PLUG	1	
11	T32417121	出沙孔堵	PLUG	4	
11	T32417121	出沙孔堵	PLUG	4	
12	T3343F041A	气门导管	VALVE STEM GUIDE	4	
13	T3343J021A	气门导管	VALVE STEM GUIDE	4	
13	T3343J021A	气门导管	VALVE STEM GUIDE	4	
14	T2114A046	定位销	THIMBLE	2	
15	T32166219	螺栓	BOLT	8	
16	T32166221	螺栓	BOLT	12	
17	T32166222	螺栓	BOLT	2	
18	T3142L072	进气门	AIR INLET VALVE	4	
19	T33817117B	密封圈	SEAL RING	4	
2	T3712H074Z	缸盖(总成)	CYLINDER HEAD	1	
20	T31745122	气门弹簧	VALVE SPRING	4	
21	T31744133	气门弹簧	VALVE SPRING	4	
22	T33415118	垫圈	WASHER	4	
23	T33424107	气门座	VALVE SEAT	4	
24	T33173108	气门锁夹	LOCK	8	
25	T3142A051	排气门	EXHAUST VALVE	4	
3	T3712H074	气缸盖	CYLINDER COVER	1	
4	T3324E003	进气门座	AIR INLET VALVE SEAT	4	
4	T3324E003	进气门座	AIR INLET VALVE SEAT	4	
5	T3314A122	排气门座	INSERT-VALVE SEAT(OUTLET)	4	
6	T0650586	螺堵	SCREW PLUG	4	

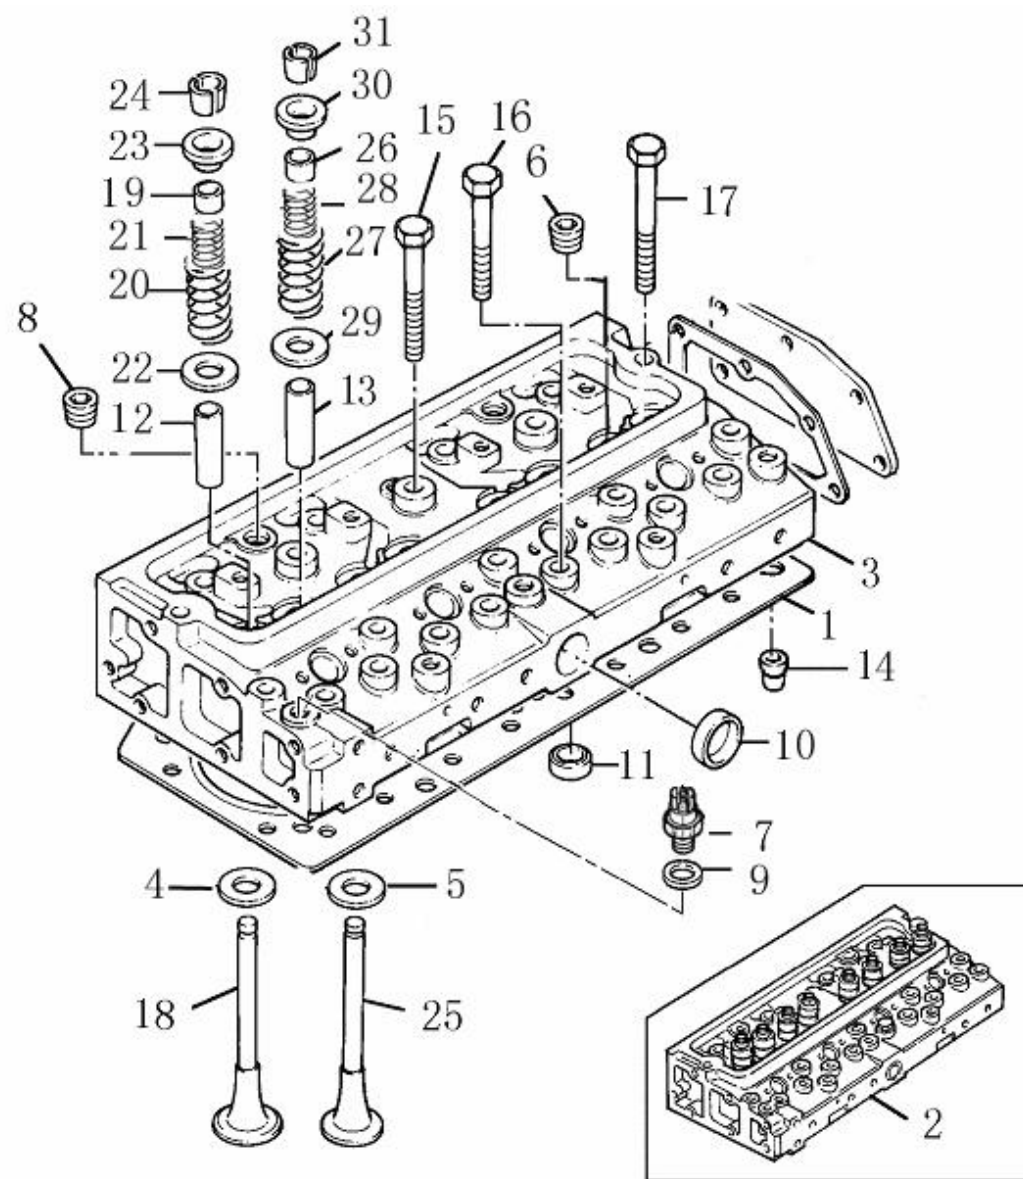


1004-4TART82P02-04 10.4-气缸盖(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
6	T0650586	螺堵	SCREW PLUG	4	
7	T0650203	堵	PLUG	1	
8	T2431154	堵	PLUG	2	
9	T2411157	垫圈	WASHER	1	

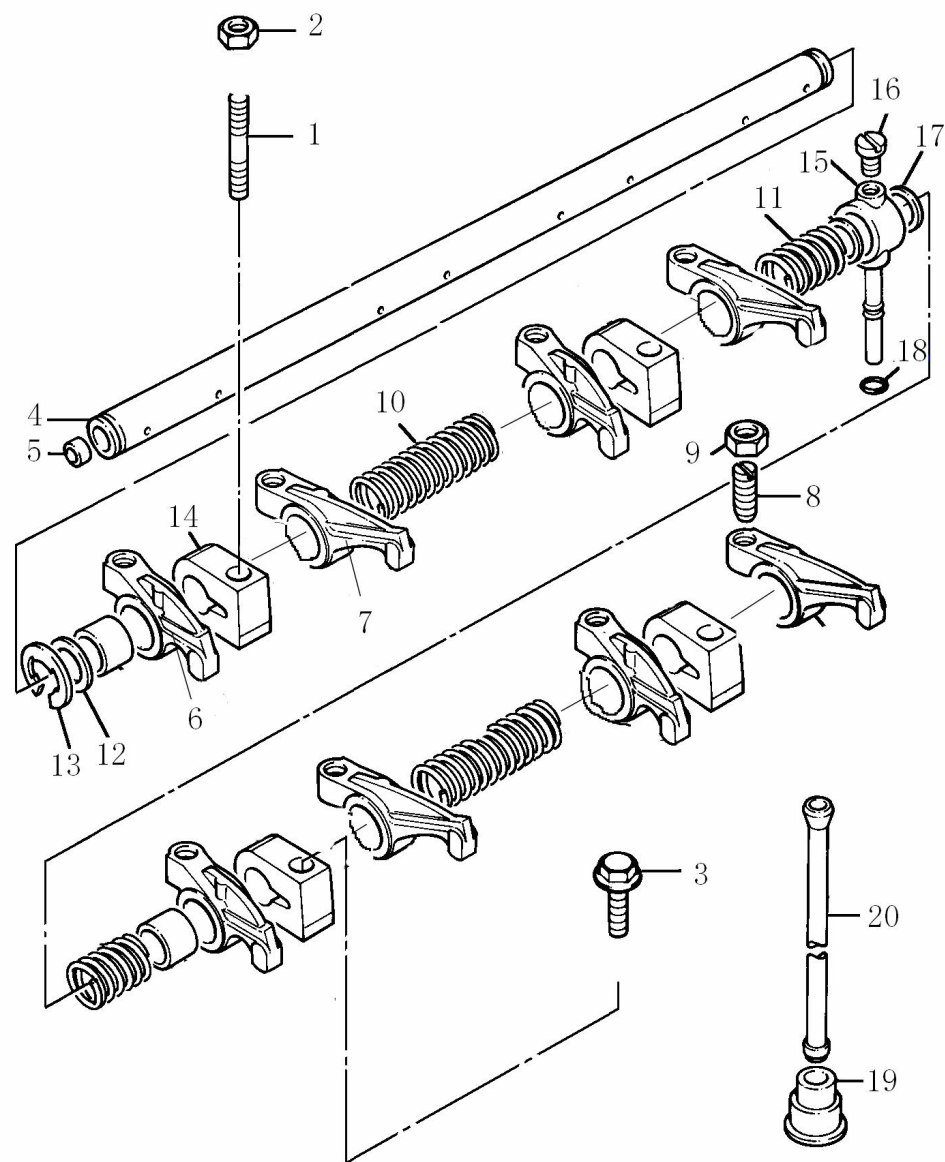


1004-4TART82P02-05 10.5-摇臂轴 ROCKER SHAFT

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T2313H331	双头螺柱	8.8-A3L STUD	3	
10	T31744123	弹簧	SPRING	2	
11	T31743108	弹簧	SPRING	2	
12	T33117434	垫圈	WASHER	2	
13	T0170151	卡簧	CIRCLIP	2	
14	T3818X901	支架	SUPPOT BRACKET	4	
15	T3775E012	接头	CONNECTING JOINT	1	
16	T2233022	螺栓	BOLT	1	
17	T3311K015	垫片	WASHER	2	
18	T33811113	橄榄体	OLIVE	1	
19	T3142U031	挺柱	TAPPET	8	
19	T3142U031	挺柱	TAPPET	8	
2	T2318A605	螺母	NUT	3	
20	T31434307	推杆	PUSH ROD	8	
3	T2314J607	螺栓	BOLT	1	
4	T31411124	摇臂轴	ROCKER SHAFT	1	
5	T0650507	堵	PLUG	2	
6	T4115R306	左摇臂	LEFT ROCKER	4	
7	T4115R305	右摇臂	RIGHT ARM SHAFT	4	
8	T32114145	调节螺钉	ADJUSTING SCREW	8	
9	T0576052	螺母	NUT	8	

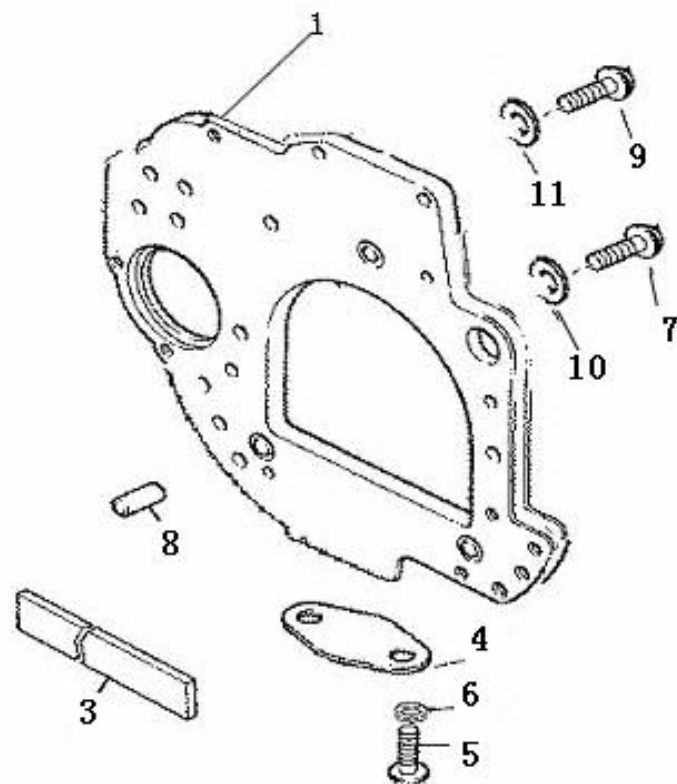


1004-4TART82P02-07 10.7-飞轮壳 FLYWHEEL HOUSING

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T73631004A	飞轮板	FLYWHEEL PLATE	1	
10	GBT93-D16	弹簧垫圈	SPRING WASHER	4	
2	T73606004	飞轮板定位套	FLYWHEEL PLATE LOCATING BUSH	2	
3	T36843154	密封条	SEAL STRIP	1	
4	T73631009	盖板	COVER PLATE	1	
5	Q150B0610Q	螺栓	BOLT	2	
6	Q40306	弹簧垫圈	SPRING WASHER	2	
7	T2314J204	螺栓	BOLT	6	
8	T0350025	飞轮壳定位销	FLYWHEEL HOUSING DOWEL PIN	2	
9	GBT5783-M12X45	六角头螺栓	BOLT	2	

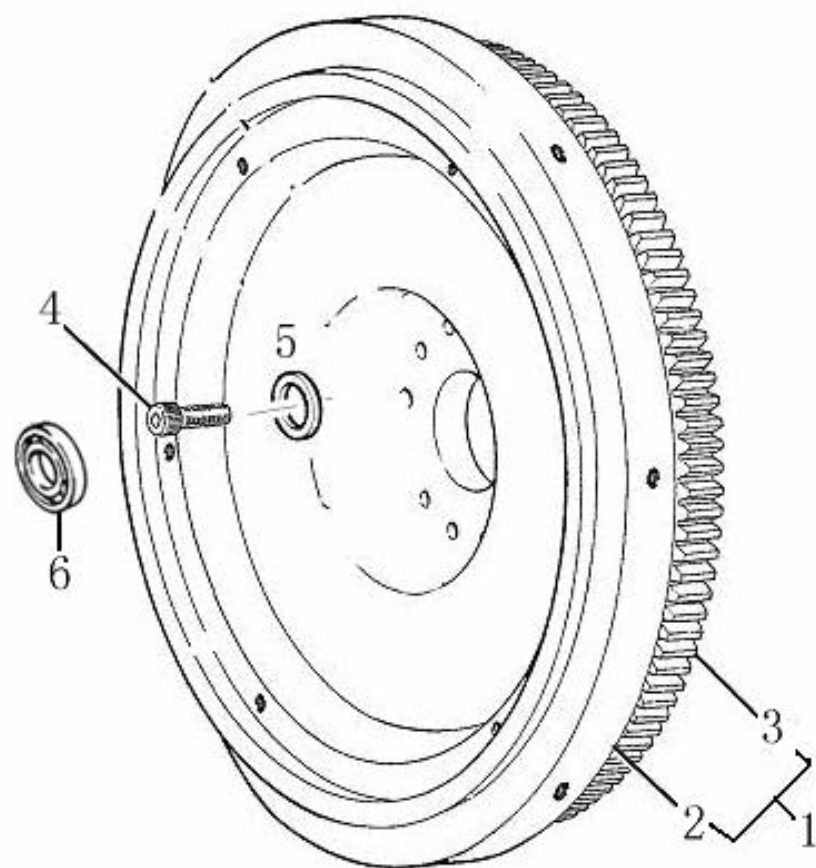

1004-4TART82P02-08 10.8-飞轮及启动齿圈 FLYWHEEL & STARTER RING


标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T63640800K1	飞轮部	FLYWHEEL ASSEMBLY	1	
4	T2185103	螺栓	BOLT	10	
5	T33117127	垫圈	WASHER	10	
6	GBT276-6303-2Z	深沟球轴承	BEARING	1	

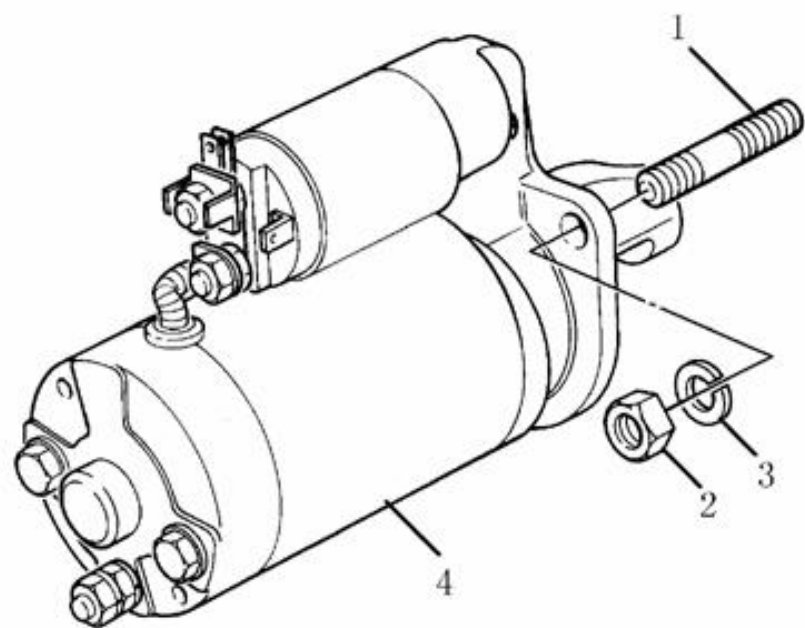

1004-4TART82P02-09 10.9-起动电机 STARTING MOTOR

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	T2313C078	双头螺柱	8.8-A3L STUD	3	
2	Q340B10	螺母	NUT	3	
3	Q40310	弹簧垫圈	SPRING WASHER	3	
4	T837010005	起动电机	Motor Starter	1	


TD904.11 空气滤清系总成

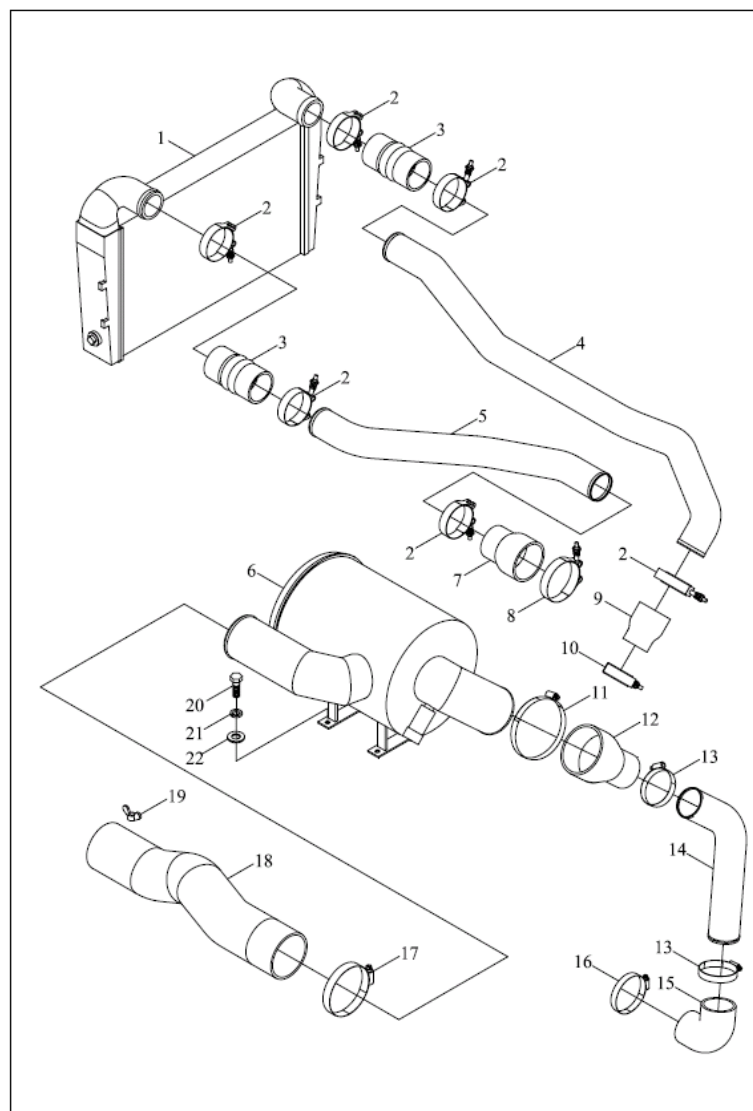

TD904.11 11-空气滤清系总成 11-AIR CLEANER ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TD904.11.2	中冷器	INTERCOOLER	1	2011-11_
10	SLTB42	环箍	Clip	1	2011-11_
11	Q676127	B型蜗杆传动式软管环箍	B-TYPE WORM TRANSMISSION HOSE CLAMP	1	2011-11_
12	TD904.11-11	空滤器连接胶管一	AIR FILTER CONNECTING RUBBER PIPE 1	1	2011-11_
13	Q67676	环箍	Clip	2	2011-11_
14	TD904.11-01	空滤器连接管	AIR FILTER CONNECTING PIPE	1	2011-11_
15	TD904.11-12	空滤器连接胶管二	AIR FILTER CONNECTING RUBBER PIPE 2	1	2011-11_
16	Q67683	环箍	Clip	1	2011-11_
17	Q676108	B型蜗杆传动式软管环箍	B-TYPE WORM TRANSMISSION HOSE CLAMP	1	2011-11_
18	TD904.11-02	进气软管	AIR INLET HOSE	1	2011-11_
19	GBT62-M10-A3L	蝶形螺母	BUTTERFLY NUT	1	2011-11_
2	SLTB54	环箍	Clip	6	2011-11_
20	GBT5783-M10×25-A3L	螺栓	BOLT	4	2011-11_
21	GBT93-10-A0P	标准型弹簧垫圈	WASHER	4	2011-11_
22	GBT95-10-A0P	垫圈	WASHER	4	2011-11_
3	TD904.11-03	接管	CONNECTING TUBE	2	2011-11_
4	TD904.11-05	中冷器出气管	AIR OUTLET PIPE OF INTERCOOLER	1	2011-11_
5	TD904.11-06	中冷器进气管	AIR INLET PIPE OF INTERCOOLER	1	2011-11_
6	TD904.11.1	空滤器总成	AIR FILTER ASSEMBLY	1	2011-11_
6.1	TD904.11.1-05	空滤器滤芯	AIR FILTER ELEMENT	0	2011-11_
7	TD904.11-07	接管二	CONNECTING TUBE 2	1	2011-11_
8	SLTB74	环箍	Clip	1	2011-11_
9	TD904.11-04	接管一	TUBE 1	1	2011-11_


TD904.131 冷却系总成

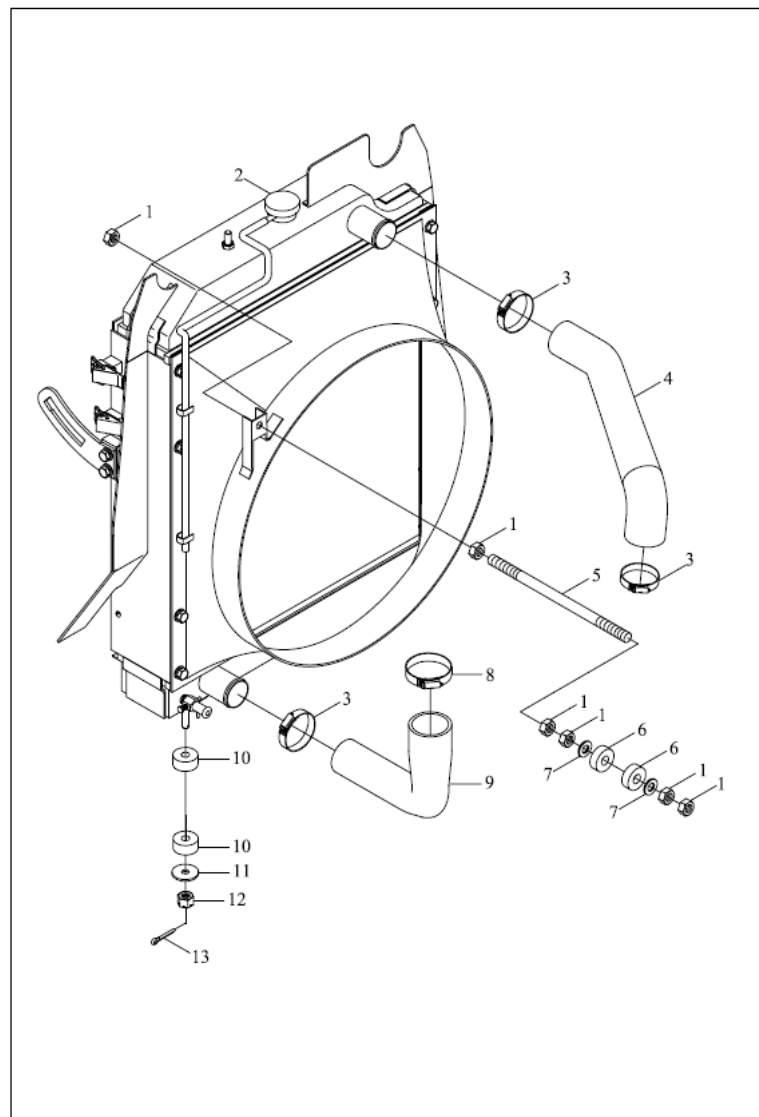

TD904.131 13.1-冷却系总成 13.1-COOLING SYSTEM ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT6172.1-M10-A3L	螺母	NUT	6	2011-11_
10	FT650.13.112	橡胶垫块	RUBBER PAD BLOCK	4	2011-11_
11	FT650.13.116	垫片	WASHER	2	2011-11_
12	GBT6178-M10-A3L	1型六角开槽螺母	NUT (PAGE81)	2	2011-11_
13	GBT91-2.5X28-A0P	开口销	PIN	2	2011-11_
2	TD904.131.1	散热器总成	RADIATOR ASSEMBLY	1	2011-11_
3	Q67664	B型蜗杆传动式软管环箍	B-TYPE WORM TRANSMISSION HOSE CLAMP	3	2011-11_
4	TD904.131-01	水箱进水胶管	WATER TANK INLET RUBBER HOSE	1	2011-11_
5	JBT953-M10X280-Q-A2L	等长双头螺柱	STUD	1	2011-11_
6	FT650.13.135	橡胶垫块	RUBBER PAD BLOCK	2	2011-11_
7	GBT97.1-10-A0P	平垫圈	WASHER	2	2011-11_
8	Q67670	B型蜗杆传动式软管环箍	B-TYPE WORM TRANSMISSION HOSE CLAMP	1	2011-11_
9	TD800.131-02	水箱出水胶管	WATER TANK OUTLET RUBBER HOSE	1	2011-11_


TD904.132 垫板焊接总成

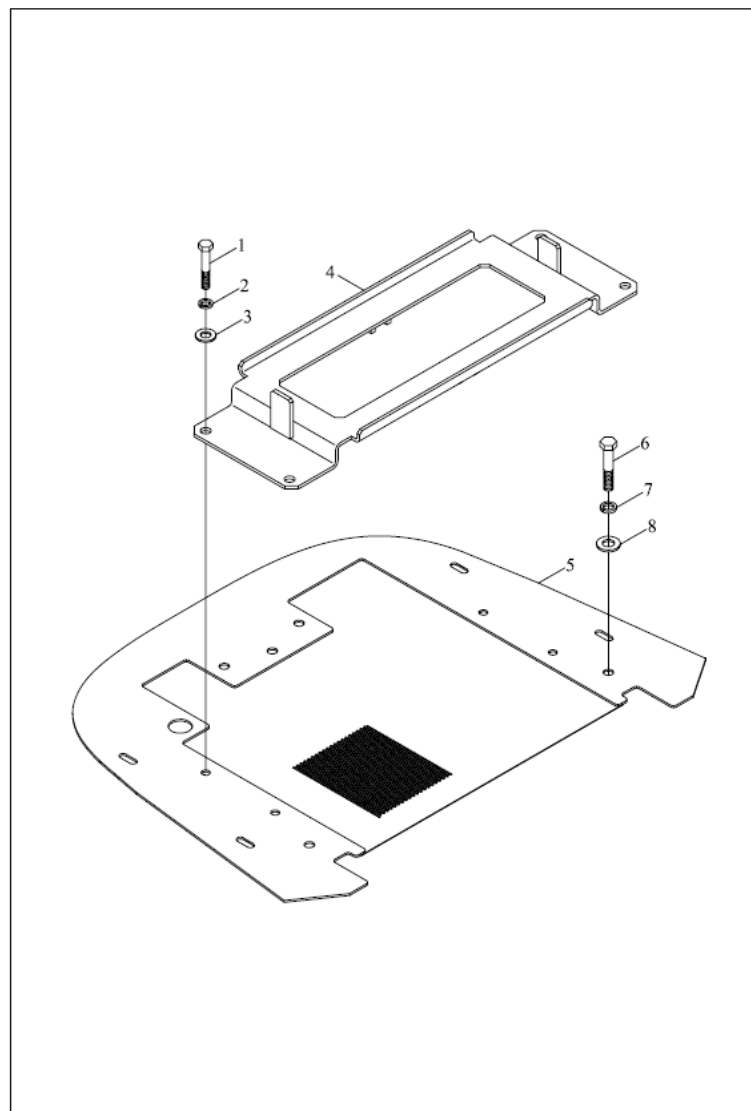

TD904.132 13.2-垫板焊接总成 13.2-MAT BOARD WELDMENT ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT5783-M10X25-A3L	螺栓	BOLT	4	2011-11_
2	GBT93-10-A0P	标准型弹簧垫圈	WASHER	4	2011-11_
3	GBT97.1-10-A0P	垫圈	WASHER	4	2011-11_
4	TD800.132.2	电瓶安装支架	BATTERY INSTALLATION BRACKET	1	2011-11_
5	TD800.132A.1	水箱垫板焊合	RADIATOR BACKING BOARD WELDMENT	1	2011-11_
6	GBT5783-M12X25-A3L	六角头螺栓	BOLT	2	2011-11_
7	GBT93-12-A0P	弹簧垫圈	SPRING WASHER	2	2011-11_
8	GBT97.1-12-A0P	平垫圈	WASHER	2	2011-11_


TD800.201 手油门操纵总成

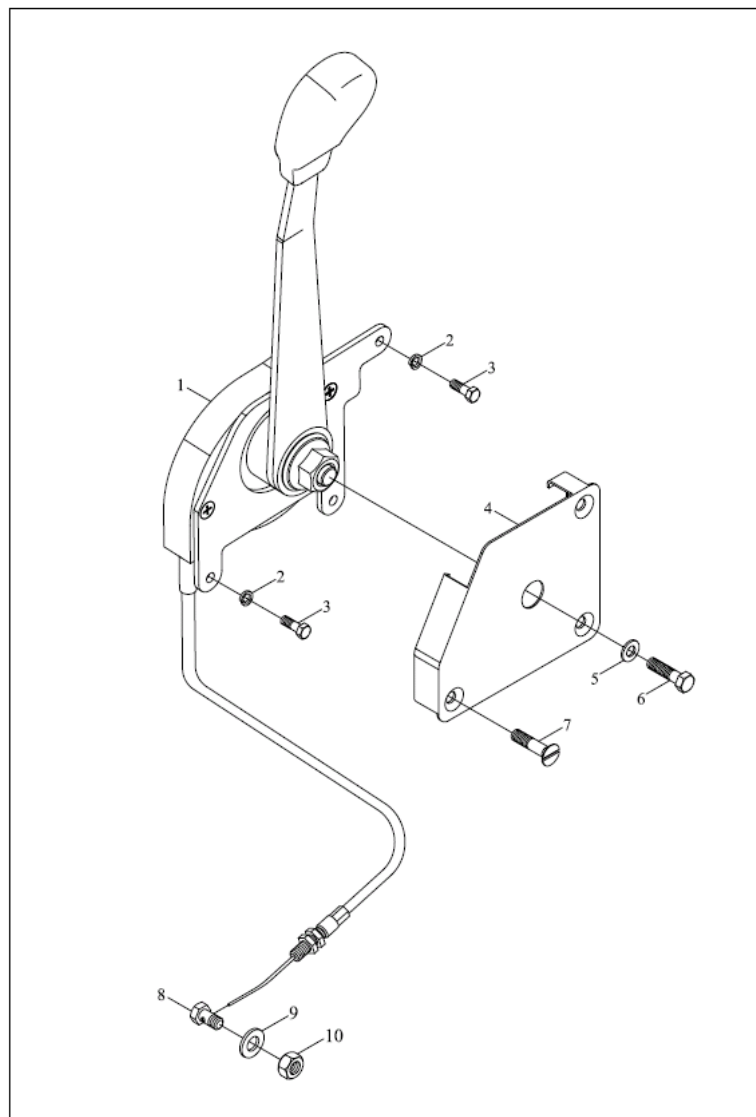

TD800.201 20.1-手油门操纵总成 20.1-HAND THROTTLE CONTROL ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TA700.201-01	手油门总成	HANDLE THROTTLE ASSEMBLY	1	2010-06_
1	TD800.201-01	手油门总成	HANDLE THROTTLE ASSEMBLY	1	2010-07_
1	FT800.20L.019	手油门总成	HANDLE THROTTLE ASSEMBLY	1	1998-08_
10	GBT6170-M8-A2L	螺母	NUT	1	2011-11_
2	GBT93-6-A0P	弹簧垫圈	SPRING WASHER	3	2011-11_
3	GBT5781-M6X16-A2L	六角头螺栓	BOLT	3	2011-11_
4	FT700.20.324	手油门盖	HAND THROTTLE COVER	1	2011-11_
5	GBT5780-M10X45-A3L	六角头螺栓	BOLT	1	2011-11_
6	GBT96-10-A0P	垫圈	WASHER	1	2011-11_
7	GBT68-M8X30-A2L	开槽沉头螺钉	SCREW	3	2011-11_
8	FT650.20.133	紧固螺钉	LOCKING SCREW	1	2011-11_
9	GBT97.1-8-A0P	平垫圈	WASHER	1	2011-11_


TA700.202 脚油门总成

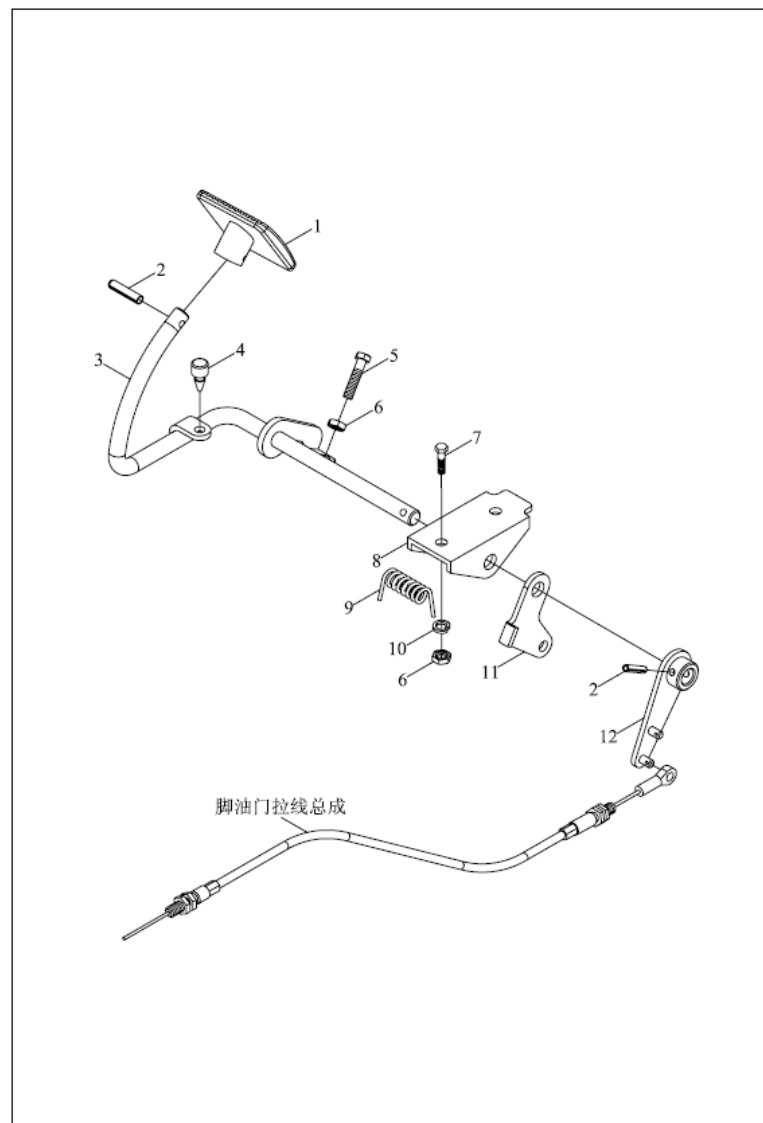

TA700.202 20.2-脚油门总成 20.2-FOOT THROTTLE ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
0	FT65.45.393	油门踏板密封套	THROTTLE PEDAL SEAL SLEEVE	1	2008-11_
1	FT650.20.101	脚踏板	FOOT PEDAL	1	2011-11_
10	GBT93-8-A0P	垫圈	WASHER	2	2011-11_
11	FT650.20.114	手油门摇臂	HAND THROTTLE ROCKER	1	2011-11_
12	FT650.20.011	脚油门摇臂焊合	FOOT THROTTLE ROCKER ARM WELDMENT	1	2011-11_
2	GBT879.1-5X20-A0P	销	PIN	2	
3	FT800.20.013	脚踏板摇臂焊合	FOOT PEDAL ROCKER ARM WELDMENT	1	2011-11_
4	FT650.20.107	橡胶塞	RUBBER RING	1	2011-11_
5	GBT5781-M8X45-A2L	六角头螺栓	BOLT	1	2011-11_
6	GBT6172.1-M8-A2L	螺母	NUT	3	2011-11_
7	GBT5781-M8X20-A2L	六角头螺栓	BOLT	2	2011-11_
7	GBT5781-M8X20-A2L	六角头螺栓	BOLT	2	2011-11_
8	FT650.20.108	油门支架	THROTTLE PEDESTAL	1	2011-11_
9	FT650.20.104	扭簧	TORSION SPRING	1	2011-11_


TD800.203 拉线总成

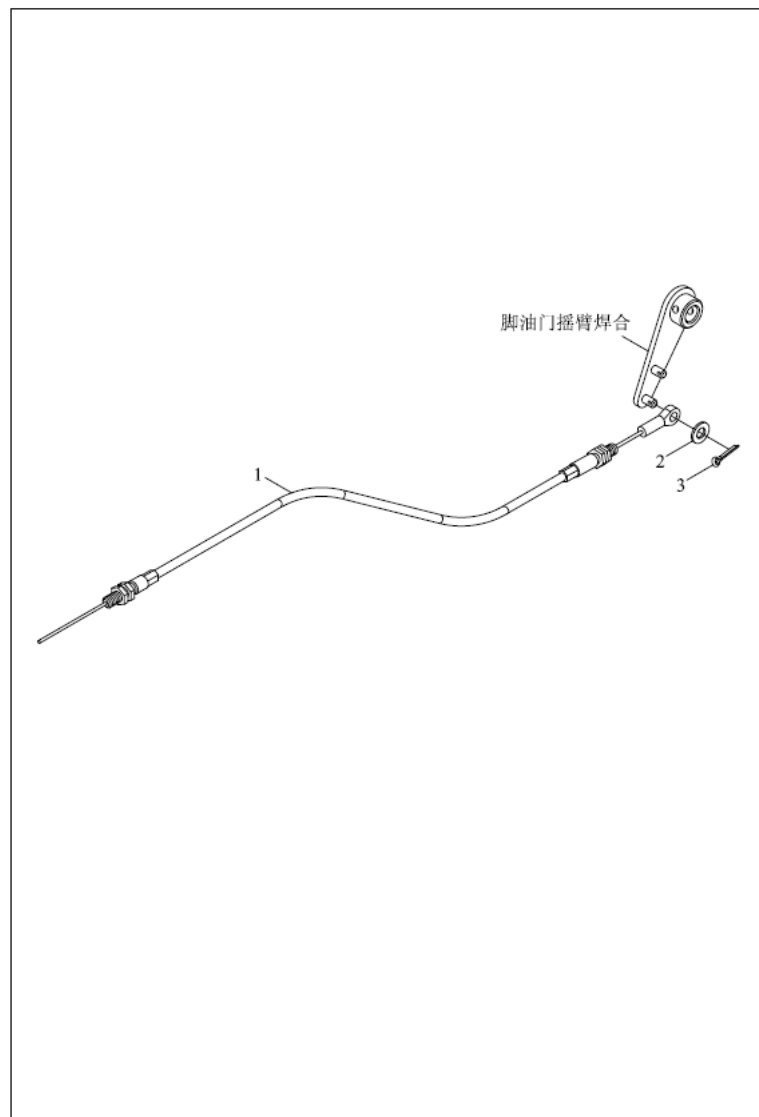

TD800.203 20.3-拉线总成 20.3-PULL WIRE ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TA550.203A.2	脚油门拉线总成	FOOT THROTTLE WIRE ASSEMBLY	1	2007-12_
1	FT800.20.014a	脚油门拉线总成	FOOT THROTTLE WIRE ASSEMBLY	1	
1	TD800.203.1	脚油门拉线总成	FOOT THROTTLE WIRE ASSEMBLY	1	2006-08_
2	GBT97.1-6-A0P	平垫圈	WASHER	2	2009-05_
3	GBT91-2 × 12-A0P	开口销	PIN	2	2009-05_


FT800. 21C. 001 离合器总成

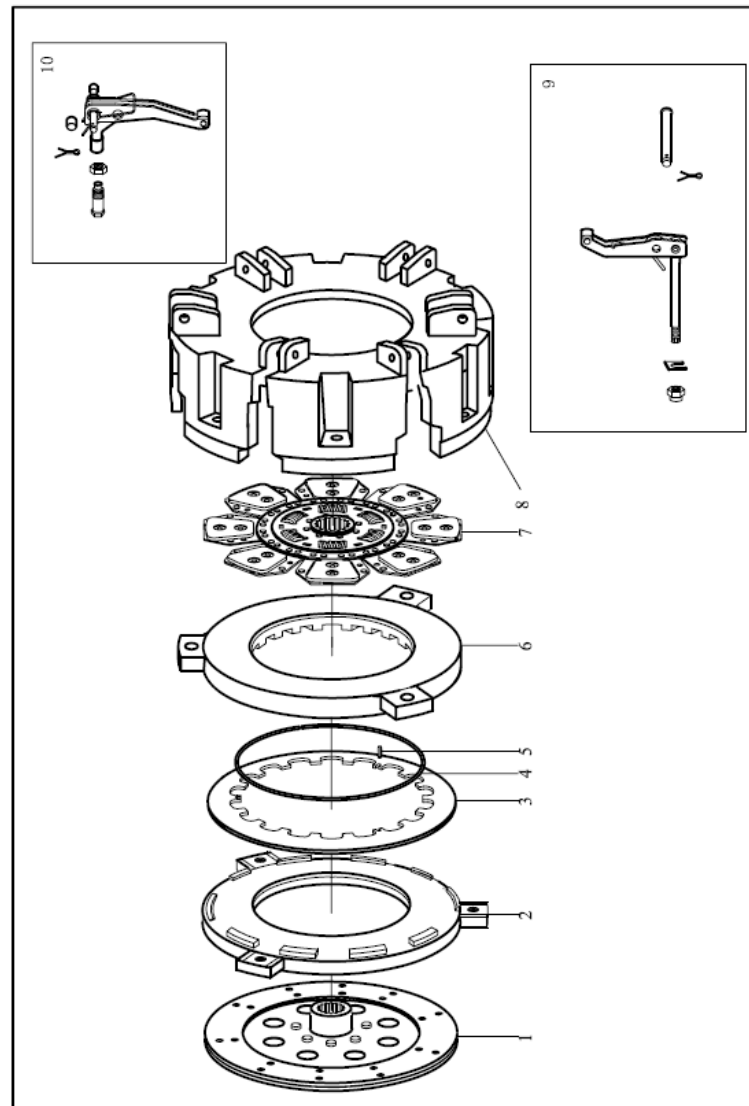

FT800.21C.001 21-离合器总成 21-CLUTCH ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	L-03031-0757-04	副离合器从动盘总成	AUXILIARY CLUTCH DRIVEN PLATE ASSEMBLY	1	2011-11_
10	L-02615-0051-02	主分离杆总成	MAIN RELEASE LEVER ASSEMBLY	3	2011-11_
2	L-02103-0733-00	副离合器压盘	AUXILIARY CLUTCH PRESSURE PLATE	1	2011-11_
3	L-04130-0003-01	膜片弹簧	FILM SPRING	1	2011-11_
4	L-02165-0105-01	支承圈	SUPPORT WASHER	1	2011-11_
5	L-00454-0002-00	弹性圆柱销	PIN	1	2011-11_
6	L-02103-0732-10	主离合器压盘	MAIN CLUTCH PRESSURE PLATE	1	2011-11_
7	L-03031-0117-00	主从动盘总成	MAIN DRIVEN PLATE ASSEMBLY	1	2011-11_
8	L-02101-0215-06	离合器壳	CLUTCH HOUSING	1	2011-11_
9	L-02615-0031-02	副分离杆总成	AUXILIARY RELEASE LEVER ASSEMBLY	3	2011-11_


FT800A.21C.002 离合器操纵总成-1

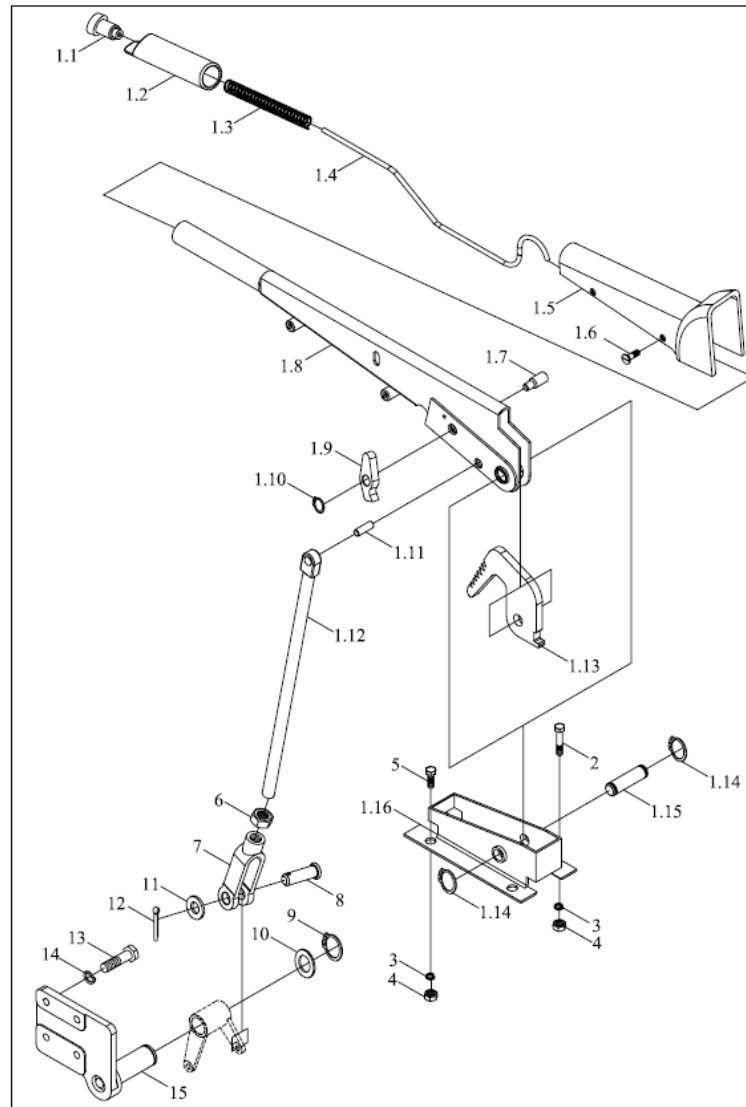

FT800A.21C.002-1 21.1-离合器操纵总成-1 CLUTCH CONTROL ASSEMBLY-1

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT800A.21.043	副离合操纵把手总成	AUXILIARY CLUTCH CONTROL HANDLE	1	2011-11_
1.1	FT800A.43.065	制动联锁杆焊合	ASSEMBLY	1	2011-11_
1.1	FT800A.21.045	按钮总成	BRAKE CONNECTING LOCK ROD WELDMENT	1	2011-11_
1.11	FT800A.21.323	销	BUTTON ASSEMBLY	1	2011-11_
1.12	FT800A.21.337a	副离合拉杆	PIN	1	2011-11_
			AUXILIARY CLUTCH PULL ROD		
1.13	FT800A.43.310	棘轮		1	2011-11_
1.14	GB/T894.1-13	轴用弹性挡圈	RATCHET WHEEL	2	2009-04_
1.15	FT800A.21.321	销轴	SNAP RING	1	2011-11_
1.16	FT800A.21.065	副离合操纵把手固定座合件	PIN	1	2011-11_
1.2	FT800A.21.319	操纵把手套	AUXILIARY CLUTCH CONTROL HANDLE FIXING	1	2011-11_
			SEAT UNIT		
1.3	FT800.43.180	弹簧	CONTROLLING HANDLE SLEEVE	1	2011-11_
1.4	FT800A.21.315	顶杆		1	2011-11_
1.5	FT800A.21.320	护罩	SPRING	1	2011-11_
1.6	GB/T68-M4X10-4.8-A2L	开槽沉头螺钉	TOP ROD	4	2009-04_
1.7	FT800A.21.322	小销轴	BONNET	1	2011-11_
			SCREW		
1.8	FT800A.21.044	操纵把手总成	SMALL PIN SHAFT	1	2011-11_
1.9	FT800A.21.314	棘爪		1	2011-11_
10	GB/T894.1-30	挡圈	CONTROLLING HANDLE ASSEMBLY	1	
11	GB/T882-B10X30	销轴	PAWL	1	2004-01_
12	GB/T848-10-A0P	小垫圈	RETAINER RING	1	2004-01_
			PIN		
13	GB/T91-3.2X20-A0P	开口销	WASHER	1	2004-01_
13	GB/T91-3.2X20-A0P	开口销		1	2004-01_
14	GB/T848-30-A0P	小垫圈	PIN	1	2004-01_
15	FT800A.21.070	副离合支撑轴焊合	PIN	1	2011-11_
2	GB/T5781-M8X30-A2L	六角头螺栓	WASHER	2	2004-01_


FT800A.21C.002 离合器操纵总成-1

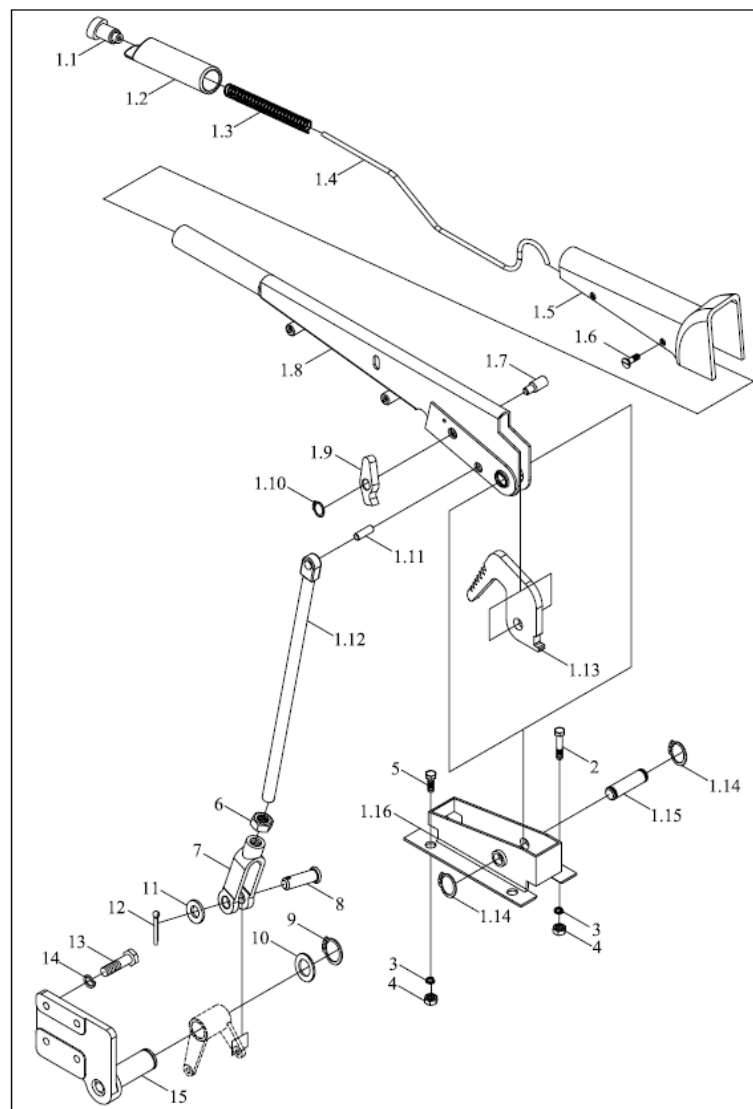

FT800A.21C.002-1 21.1-离合器操纵总成-1(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
3	GBT93-8-A0P	垫圈	WASHER	4	2004-01_
4	GBT41-M8-5-A2L	六角螺母	HEXAGON NUT	4	2004-01_
5	GBT5781-M8X16-A2L	六角头螺栓	BOLT	2	2004-01_
6	GBT6171-M10X1-A2L	螺母	NUT	1	2004-01_
7	FT800.21.240	拉杆前叉	PULL ROD FRONT FORK	1	2011-11_
8	GBT5781-M10X30-A3L	六角头螺栓	BOLT	4	2004-01_
9	GBT93-10-A0P	标准型弹簧垫圈	WASHER	4	2004-01_


FT800A.21C.002 离合器操纵总成-2

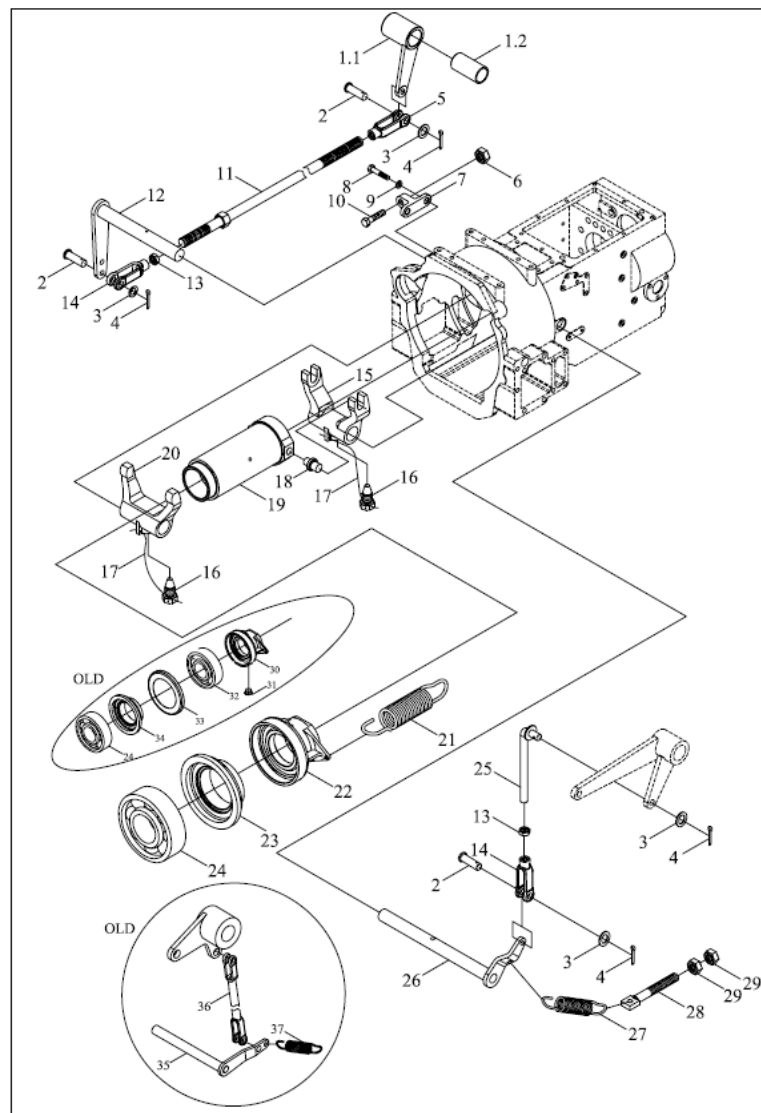

FT800A.21C.002-2 21.2-离合器操纵总成-2 CLUTCH CONTROL ASSEMBLY-2

标号 No.	代号 Code	名称 Description	数量 Quantity	备注 Remark
1	FT800A.21.062a	副离合转毂合件	1	2011-11_
1	FT800A.21.062a	副离合转毂合件	1	2011-11_
1.1	FT800A.21.338a	副离合转毂	1	2011-11_
1.2	FT800A.21.386	转轴衬套	1	2010-10_
1.2	FT800A.21.372	副离合转轴衬套	1	2004-01_
10	GBT5781-M10X60-A2L	六角头螺栓	1	2004-01_
11	FT800A.21.059a	副离合拉杆焊合	1	2011-11_
12	FT800.21.028	副离合摇摆轴焊合	1	2011-11_
13	GBT6171-M10X1-A2L	螺母	2	2011-11_
14	FT800.21.240	拉杆前叉	2	2011-11_
15	FT800.21.204	主离合拨叉	1	2011-11_
16	FT800.21.239	紧定螺钉	2	2011-11_
17	TA800.212B-02	低碳钢丝	2	2011-11_
18	FT800.21.213	圆柱销	2	2011-11_
19	FT800.21C.205	主离合分离轴承座	1	2011-11_
2	GBT882-B10X30	销轴	3	2011-11_
20	FT800.21.203	副离合拨叉	1	2011-11_
21	FT800.21.215	副离合回位弹簧	2	2011-11_
22	FT800.21C.202a	副离合轴承座	1	2009-04_
23	GBT292-7016AC	角接触球轴承	1	2004-01_
24	TA800.212-02	推力轴承99 67 13	1	2011-11_
25	FT800A.21.080	中间杆焊合	1	2011-10_
25	FT800A.21.071	中间杆焊合	1	2010-01_
26	FT800A.21.058a	主离合摇臂轴焊合	1	2010-01_
27	FT800A.21.383	回位弹簧	1	2011-11_


FT800A.21C.002 离合器操纵总成-2

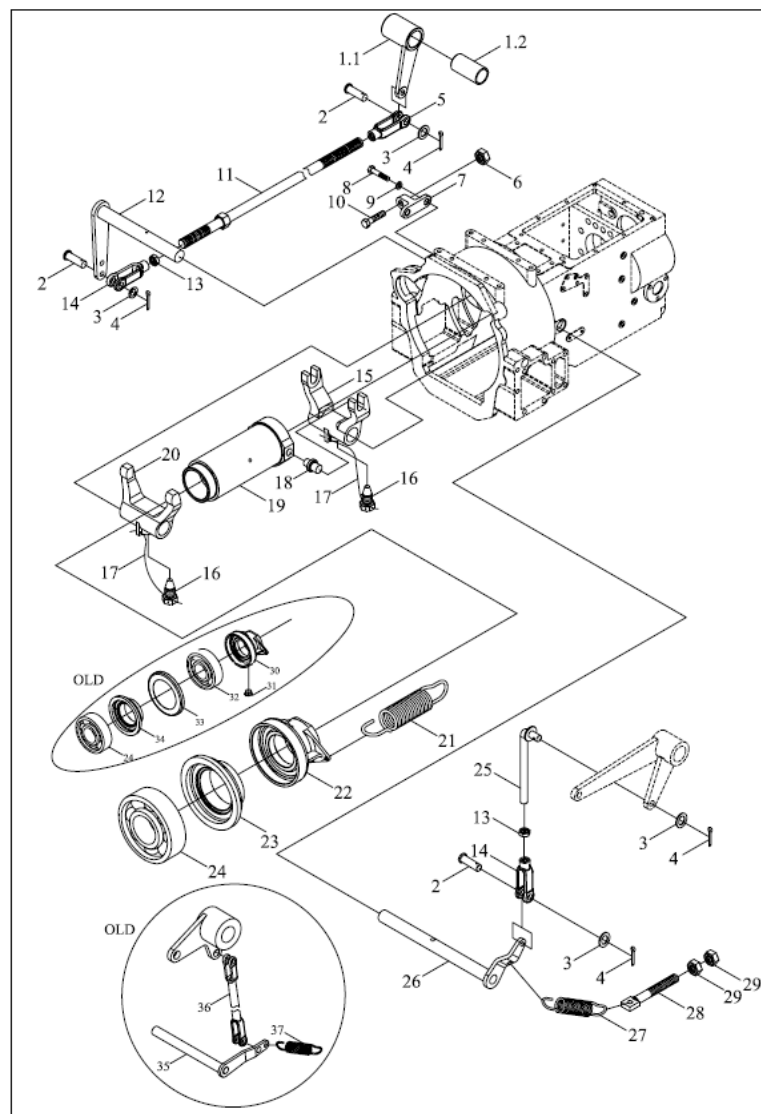

FT800A.21C.002-2 21.2-离合器操纵总成-2(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
28	FT800A.21.335	叉形接头	FORK JOINT	1	2011-11_
29	GB/T6170-M8-A2L	螺母	NUT	2	2011-11_
3	GB/T848-10-A0P	小垫圈	WASHER	4	2011-11_
30	FT800.21C.202	副离合器轴承座	AUXILIARY CLUTCH BEARING SEAT	1	2004-01_
31	JBT7940.2-45dM10X1	接头式压注油杯	FORCED FILLING OIL CUP、 W/JOINT	1	2011-11_
32	TA820.213-10	分离轴承	BEARING	1	2009-04_
33	FT800.21.209	防尘盖	DUSTPROOF COVER	1	2004-01_
34	FT800.21C.301	副离合分离盘	AUXILIARY CLUTCH RELEASE DISC	1	1998-08_
35	FT800A.21.058	主离合摇臂轴焊合	MAIN CLUTCH ROCKER SHAFT WELDMENT	1	2008-03_
36	FT800A.21.335a	叉形接头	FORK JOINT	1	2008-07_
37	FT800.21.206	离合踏板回位弹簧	CLUTCH PEDAL RETURN SPRING	1	2011-11_
4	GB/T91-3.2X20-A0P	开口销	PIN	4	2011-11_
4	GB/T91-3.2X20-A0P	开口销	PIN	4	2011-11_
5	FT800.21.241	拉杆后叉	PULL ROD REAR FORK	1	2011-11_
6	GB/T6170-M10-A3L	螺母	NUT	1	2011-11_
7	FT800.21.212	限位座	LIMITING SEAT	1	2011-11_
8	GB/T5783-M10X25-A3L	螺栓	BOLT	2	2011-11_
9	GB/T93-10-A0P	标准型弹簧垫圈	WASHER	2	2011-11_


FT800A.21C.002 离合器操纵总成-3

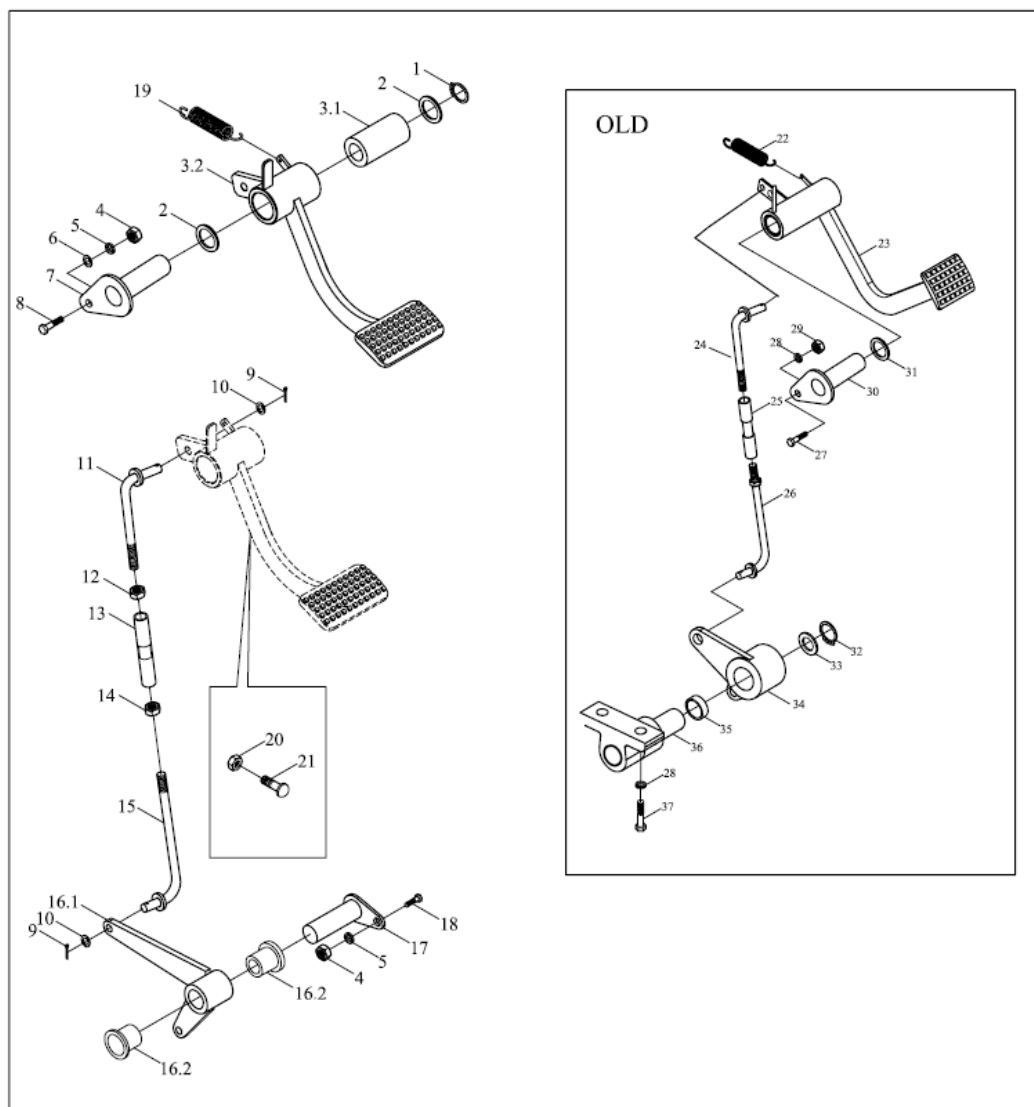

FT800A.21C.002-3 21.3-离合器操纵总成-3 CLUTCH CONTROL ASSEMBLY-3

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT894.1-30	挡圈	RETAINER RING	1	2011-11_
10	GBT848-10-A0P	小垫圈	WASHER	2	2011-11_
11	FT800A.21.061	主离合短拉杆焊合	MAIN CLUTCH SHORT PULL ROD WELDMENT	1	2011-11_
12	GBT6171-M10X1-LH-A2L	螺母	NUT	1	2011-11_
13	FT800A.21.353	中间杆	MIDDLE ROD	1	2011-11_
14	GBT6171-M10X1-A2L	螺母	NUT	3	2011-11_
15	FT800A.21.060	主离合长拉杆焊合件	MAIN CLUTCH LONG PULL ROD WELDMENT	1	2011-11_
16	FT800A.21.072	过渡杠杆压合件	TRANSITION LEVER PRESSURE UNIT	1	2011-11_
16	FT800A.21.072	过渡杠杆压合件	TRANSITION LEVER PRESSURE UNIT	1	2011-11_
16.1	FT800A.21.073	过渡杠杆焊合件	TRANSITION LEVER WELDMENT	1	2011-11_
16.2	FT800A.21.380	支承轴衬套	SUPPORT SHAFT BUSH	2	2011-11_
17	FT800A.21.074	过渡杠杆支撑轴焊合	TRANSITION LEVER SUPPORT SHAFT	1	2011-11_
18	GBT5783-M8X20-A2L	螺栓	WELDMENT	1	2011-11_
19	FT800A.21.373	回位弹簧	BOLT	1	2011-11_
2	FT800A.43.305	隔套	RETURN SPRING SPACER BUSH	2	2011-11_
20	GBT6170-M10-A3L	螺母		1	2011-11_
21	FT800.43.030	调整螺钉	NUT	1	2011-11_
22	FT800.21.215	副离合回位弹簧	ADJUSTING SCREW	1	2011-11_
24	FT800A.21.061	主离合短拉杆焊合	AUXILIARY CLUTCH RETURN SPRING	1	2011-11_
25	FT800A.21.353	中间杆	MAIN CLUTCH SHORT PULL ROD WELDMENT MIDDLE ROD	1	2011-11_
26	FT800A.21.060	主离合长拉杆焊合件		1	2011-11_
27	GBT5783-M8X20-8.8-A2L	六角头螺栓	MAIN CLUTCH LONG PULL ROD WELDMENT	1	2011-06_
28	GBT93-8-AOP	弹簧垫圈	BOLT	12	2011-11_
29	GBT6170-M8-8-A2L	I型六角螺母	SPRING WASHER	8	2011-06_
3.1	FT800A.21.308	离合踏板毂衬套	I-TYPE HEXAGON NUT	1	1998-08_


FT800A.21C.002 离合器操纵总成-3

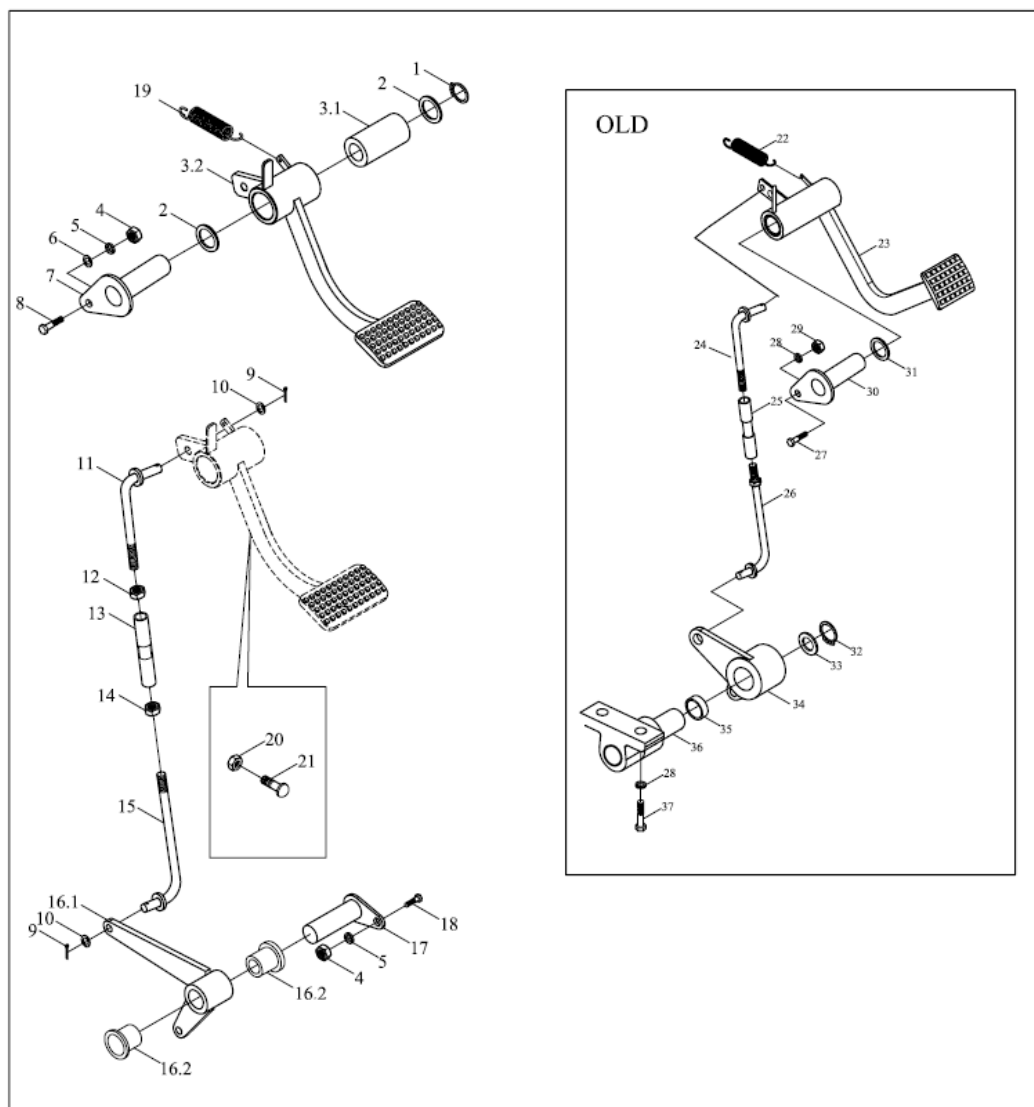

FT800A.21C.002-3 21.3-离合器操纵总成-3(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
3.1	FT800A.21.385	离合踏板毂衬套	CLUTCH PEDAL HUB BUSH	1	2010-10_
3.2	FT800A.21.050	离合摇臂焊合	CLUTCH ROCKER WELDMENT	1	2011-11_
30	FT800A.21.049	离合踏板支承轴焊合	CLUTCH PEDAL SUPPORTING SHAFT	1	2011-11_
31	FT800A.43.305	隔套	WELDMENT	2	2011-11_
32	GBT894.1-20	挡圈20	SPACER BUSH	1	2011-11_
			BLOCKING RING		
33	GBT848-20-A0P	小垫圈		1	2009-04_
34	FT800A.21.040	过渡杠杆合件	WASHER	1	2011-11_
35	FT800A.21.332	小隔套	TRANSITION LEVER UNIT	1	2011-11_
36	FT800A.21.052	转轴支座焊合总成	SMALL SPACER BUSH	1	2011-11_
4	GBT6170-M8-A2L	螺母	ROTARY SHAFT SEAT WELDMENT ASSEMBLY	2	2011-11_
			NUT		
5	GBT93-8-A0P	垫圈		2	2011-11_
6	GBT97.1-8-A0P	平垫圈	WASHER	1	2011-11_
7	FT800A.21.049	离合踏板支承轴焊合	WASHER	1	2011-11_
8	GBT41-8-A0P	六角螺母	CLUTCH PEDAL SUPPORTING SHAFT	3	
9	GBT91-3.2X20-A0P	开口销	WELDMENT	2	2011-11_
			HEXAGON NUT		
9	GBT91-3.2X20-A0P	开口销	PIN	2	2011-11_
			PIN		


TD800.22J 排气系总成

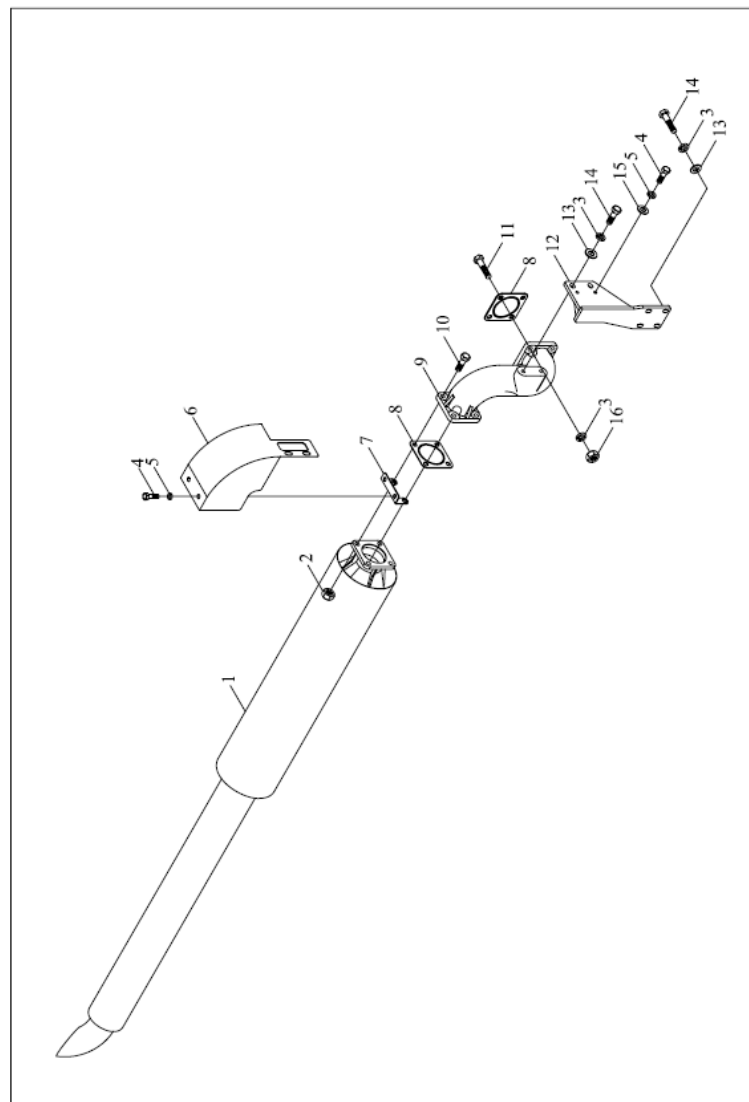

TD800.22J 22-排气系总成 22-EXHAUST SYSTEM ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TD800.22J.1	消音器总成	MUFFLE ASSEMBLY	1	2011-11_
10	GBT5783-M10X40-A3L	螺栓	BOLT	4	2011-11_
11	GBT5783-M10X35-A3L	螺栓	BOLT	4	2011-11_
12	TD800.22C.1	排气弯管支架焊合	EXHAUST BENDING PIPE BRACKET WELDMENT	1	
13	GBT97.1-10-A0P	平垫圈	WASHER	6	2011-11_
14	GBT5783-M10X25-A3L	螺栓	BOLT	6	2011-11_
15	GBT97.1-8-A0P	平垫圈	WASHER	2	
16	GBT6170-M10-A3L	螺母	NUT	4	2011-11_
2	SPL6175PT-M10X1.5-8F3	施必牢2型六角自锁防脱螺母	HEXAGON SELF-LOCKING NUT、STYLE 2	4	2011-11_
3	GBT93-10-A0P	标准型弹簧垫圈	WASHER	10	2011-11_
4	GBT5783-M8X16-A2L	螺栓	BOLT	4	2011-11_
5	GBT93-8-A0P	垫圈	WASHER	4	2011-11_
6	TD800.22C.3	护网	GUARD NET	1	2011-11_
7	TD800.22C.4	支架焊合	BRACKET WELDMENT	1	2011-11_
8	FT65.22.130	密封垫合件	SEAL GASKET UNIT	2	2011-11_
9	FT800B.22B.111a	排气弯管1	EXHAUST BENDING PIPE 1	1	2011-08_


TD804.311 前桥总成

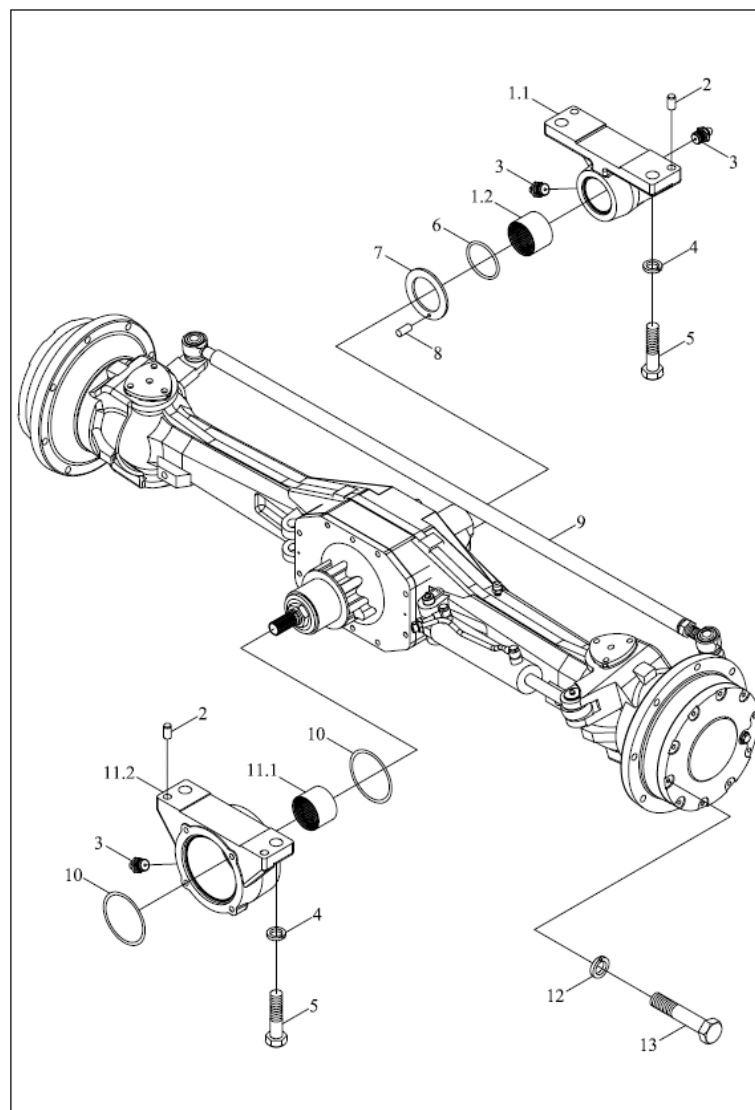

TD804.311 31.1-前桥总成 31.1-FRONT AXLE ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
0	TD804.311-1	前桥总成-1	31FRONT AXLE ASSEMBLY-1	0	2011-11_
0	TD804.311-5	前桥总成-5	31FRONT AXLE ASSEMBLY-5	0	2011-11_
0	TD804.311-5	前桥总成-5	31FRONT AXLE ASSEMBLY-5	0	2011-11_
0	TD804.311-4	前桥总成-4	31FRONT AXLE ASSEMBLY-4	0	2011-11_
0	TD804.311-3	前桥总成-3	31FRONT AXLE ASSEMBLY-3	0	2011-11_
0	TD804.311-2	前桥总成-2	31FRONT AXLE ASSEMBLY-2	0	2011-11_
1	TD804.311.2	前驱动桥前支座总成	FRONT DRIVING AXLE FRONT SEAT ASSEMBLY	1	2011-11_
1.1	FT804.31.108	前驱动桥前支座	FRONT DRIVING AXLE FRONT SEAT	1	2011-11_
1.2	FT804.31.109	前驱动桥前座衬套	FRONT DRIVING AXLE FRONT SEAT BUSH	1	2011-11_
11	TD804.311.1	前驱动桥后支座总成	FRONT DRIVING AXLE REAR SEAT ASSEMBLY	1	2011-11_
11.1	FT804.31.103	前驱动桥后座衬套	FRONT DRIVING AXLE REAR SEAT BUSH	1	2011-11_
11.2	FT804.31.104	前驱动桥后安装座	FRONT DRIVING AXLE REAR INSTALLATION	1	2011-11_
12	FT654.32.104	垫圈	SEAT	16	2011-11_
12	FT654.32.104	垫圈	WASHER	16	2011-11_
13	GB/T5786-M16X1.5X40-10.9-A3L	六角头螺栓	WASHER BOLT	16	2011-11_
3	JBT7940.1-M10X1	直通式压注油杯		3	2011-11_
5	GB/T5786-M18X1.5X60-A3L	六角头螺栓	STRAIGHT PRESSURE FILLING OIL CUP	4	2011-11_
7	FT804.31.110	垫环	BOLT	1	2011-11_
7	FT804.31.110	垫环	PAD RING PAD RING	1	2011-11_


TD804.312 托架总成

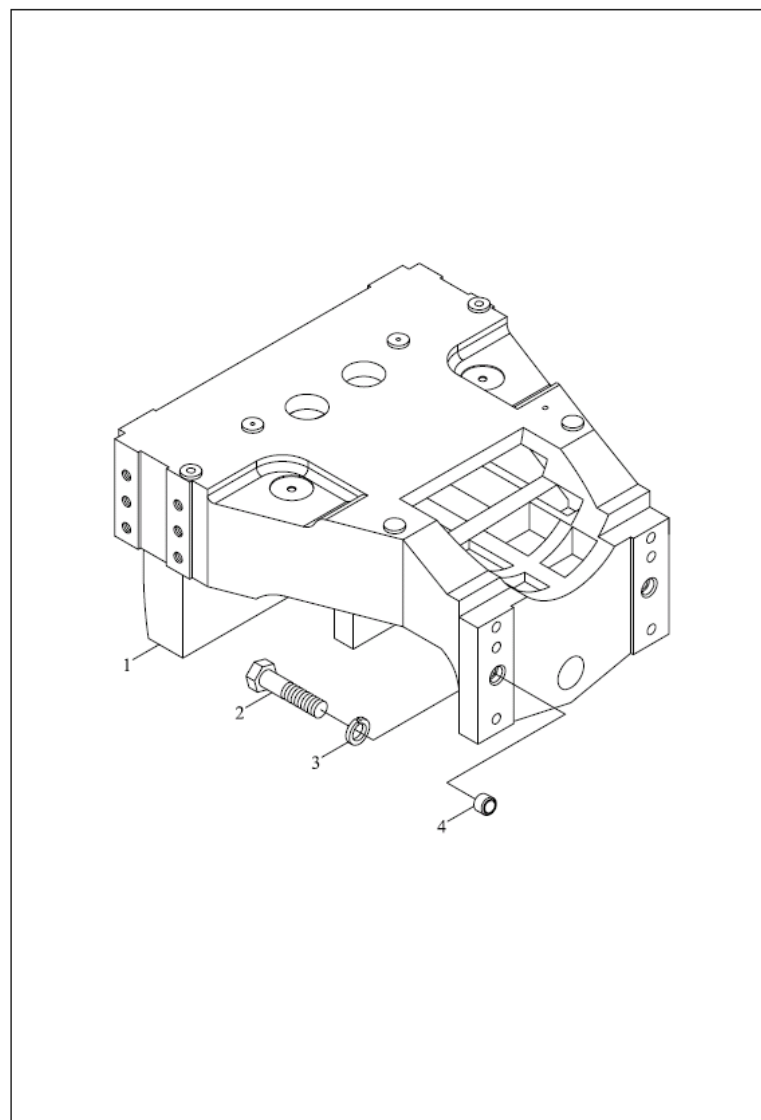

TD804.312 31.2-托架总成 31.2-BRACKET ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TD804.312-01	托架	BRACKET	1	2011-11_
2	TD800.312-02	螺栓	BOLT	8	2011-11_
3	GB/T93-16-AOP	垫圈	WASHER	8	2011-11_
4	FT800.31.120	托架连接套	BRACKET CONNECTING SLEEVE	2	2011-11_


TD800.313A 托架前体总成

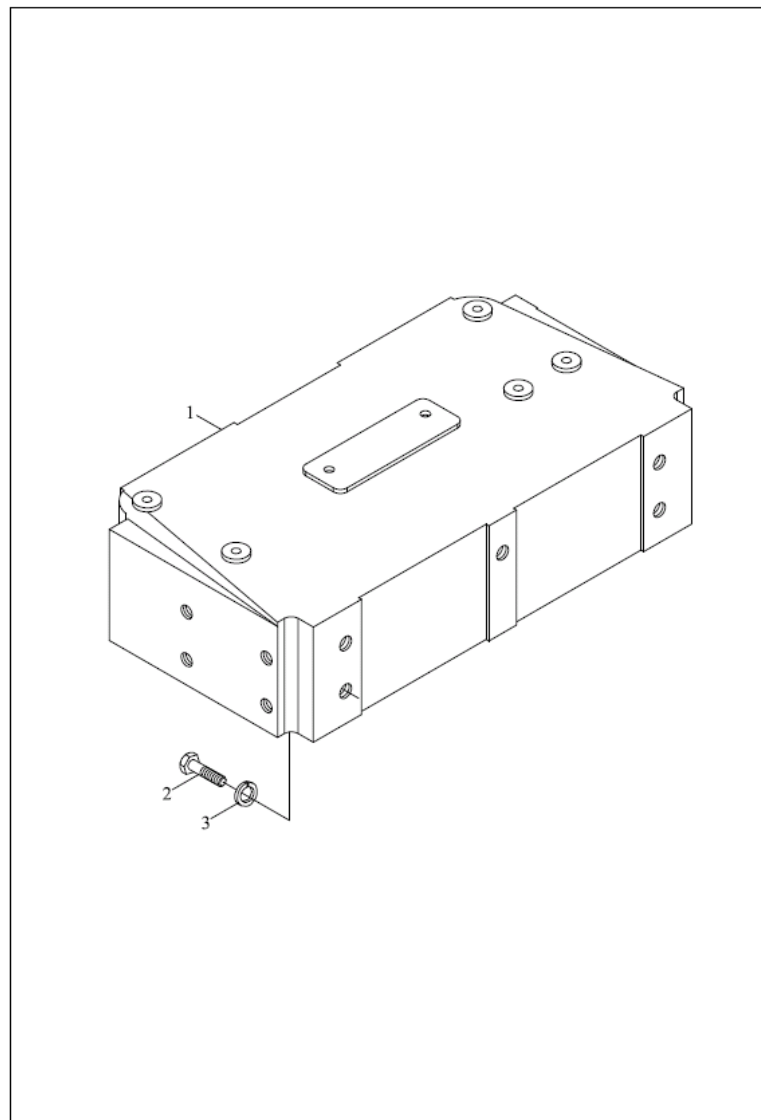

TD800.313A 31.3-托架前体总成 31.3-BRACKET FRONT BODY ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TD800.313A-01	托架前体	BRACKET FRONT BODY	1	
2	GBT5783-M16X45-8.8-A3L	六角头螺栓	BOLT	5	2013-07_
3	FT800.34.108	平垫圈	WASHER	1	2011-09_


FT804B.32F.001 前驱动轮总成

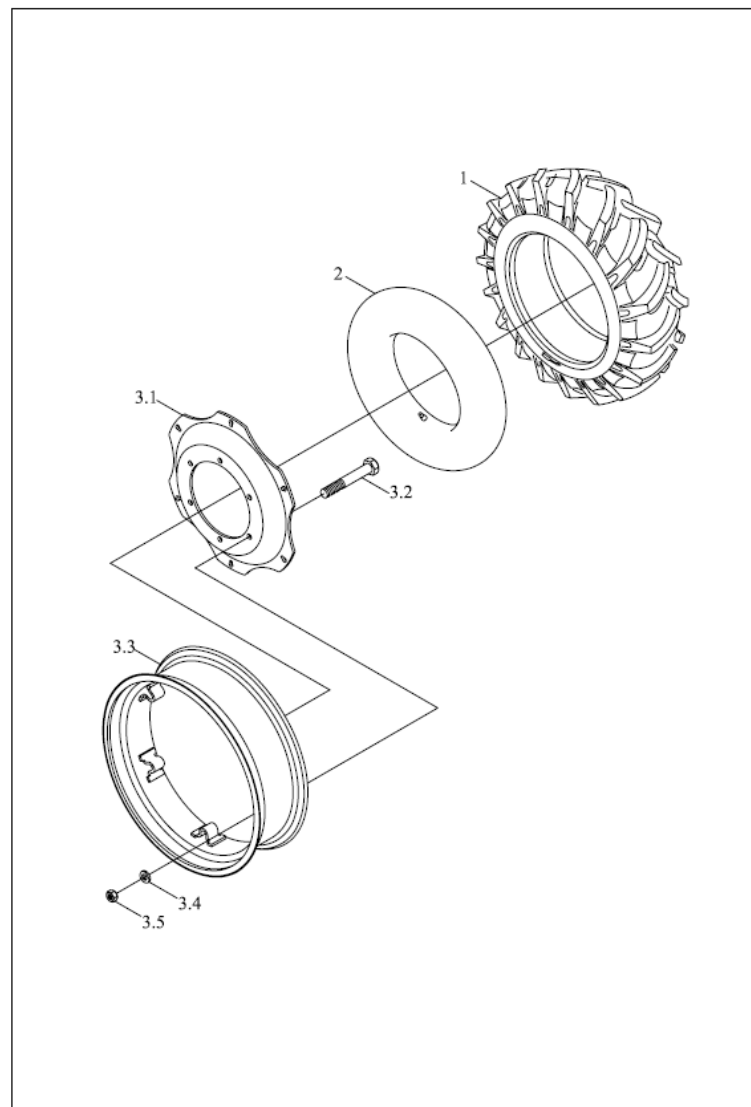

FT804B.32F.001 32-前驱动轮总成 32-FRONT DRIVING WHEEL ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT2979-11.2-24-6PR-R	拖拉机驱动轮普通断面斜交结构外胎	DRIVING WHEEL OUTER TUBE	2	2013-02_
1	GBT1192-11.2-24-6PR	外胎	OUTER TUBE	2	2011-11_
2	GBT2979-11.2-24-R	拖拉机驱动轮内胎	DRIVING WHEEL INNER TUBE	2	2013-02_
2	GBT1192-11.2-24	内胎	INNER TUBE	2	2011-11_
3	FT804B.32F.010	轮辋辐板总成	RIM SPOKE ASSEMBLY	2	2011-11_
3.1	FT804.32.103	辐板	SPOKE PLATE	2	2011-11_
3.2	GBT5785-M14X1.5X70-10.9-A3L	六角头螺栓	BOLT	12	2011-11_
3.3	FT804.32F.011	轮辋焊合总成	RIM WELDMENT ASSEMBLY	2	2011-11_
3.4	FT804.32.104	垫圈	WASHER	12	2011-11_
3.5	GBT6171-M14X1.5-10-A3L	1型六角螺母	NUT	12	2011-11_


FT820.34F.001 后驱动轮总成

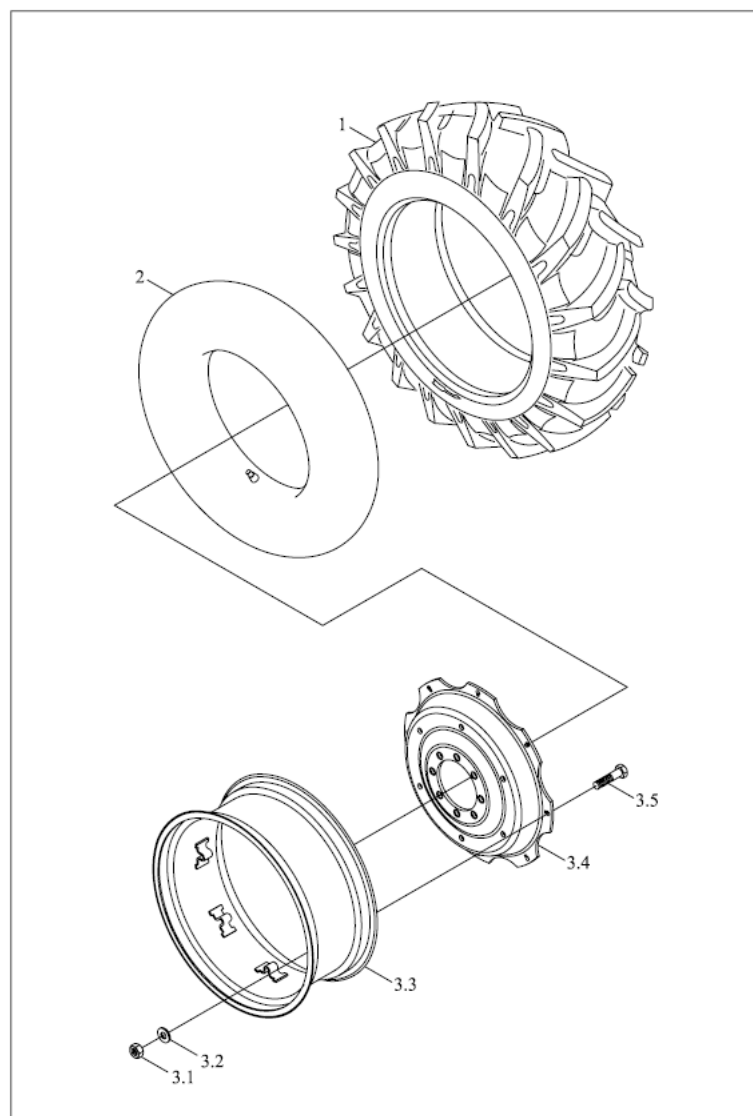

FT820.34F.001 34-后驱动轮总成 34-REAR DRIVE WHEEL ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT1192-18.4-30-10PR	拖拉机驱动轮普通断面斜交结构外胎	DRIVING WHEEL OUTER TUBE	1	2011-11_
2	GBT1192-18.4-30	拖拉机驱动轮内胎	DRIVING WHEEL INNER TUBE	1	2011-11_
3	FT820.34F.011	轮辋总成	RIM ASSEMBLY	1	2011-11_
3.1	GBT6171-M16X1.5-10-A3L	1型六角螺母	NUT	8	2011-11_
3.2	FT800.34.108	平垫圈	WASHER	8	2011-11_
3.3	FT820.34F.012	轮辋焊合	WHEEL RIM WELD	1	2011-11_
3.4	FT800.34B.013	辐板焊合	SPOKE PLATE WELDMENT	1	2011-11_
3.5	FT804.34.107	轮辋螺栓	RIM BOLT	8	2011-11_


FT800.35.001 牵引装置总成

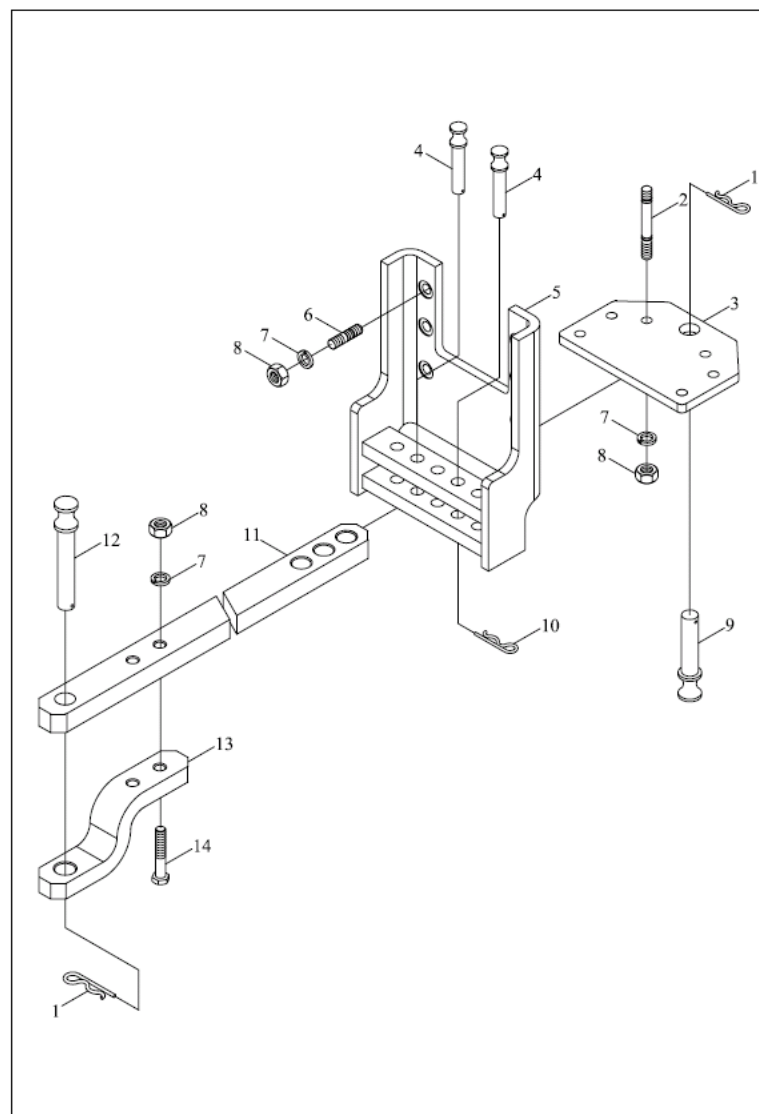

FT800.35.001 35-牵引装置总成 35-TOWING MECHANISM ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT800.35.112	弹性锁销	SPRING LOCK PIN	2	2011-11_
10	FT65.35.103	弹性锁销	SPRING LOCK PIN	2	2011-11_
10	FT65.35.103	弹性锁销	SPRING LOCK PIN	2	2011-11_
11	FT800.35.103	摆杆	UPPER PART U-HOOK	1	2011-11_
12	FT800.35.109	牵引销	HITCH PIN	1	2011-11_
13	FT800.35.104	弯板	BENDING PLATE	1	2011-11_
13	FT800.35.104	弯板	BENDING PLATE	1	2011-11_
14	GBT5782-M16X90-A2L	六角头螺栓	BOLT	2	2011-11_
2	GBT899-GM16-M16X110-A2L	双头螺柱	8.8-A3L STUD	6	2011-11_
3	FT800.35.012	下拉杆支座底板焊合	LOWER LINK SEAT BOTTOM PLATE	1	2011-11_
4	FT800.35.102	限位销	LIMITING PIN	2	2011-11_
5	FT800.35.011	支承架焊合	BRACKET WELDMENT	1	2011-11_
6	GBT899-GM16-M16X40-A2L	双头螺柱	8.8-A3L STUD	6	2011-11_
7	GBT93-16-AOP	垫圈	WASHER	14	2013-07_
8	GBT6170-M16-AOP	螺母	NUT	14	2013-07_
9	FT800.35.101	摆销	SWING PIN	1	2011-11_


TD800A.371C 变速箱壳体总成

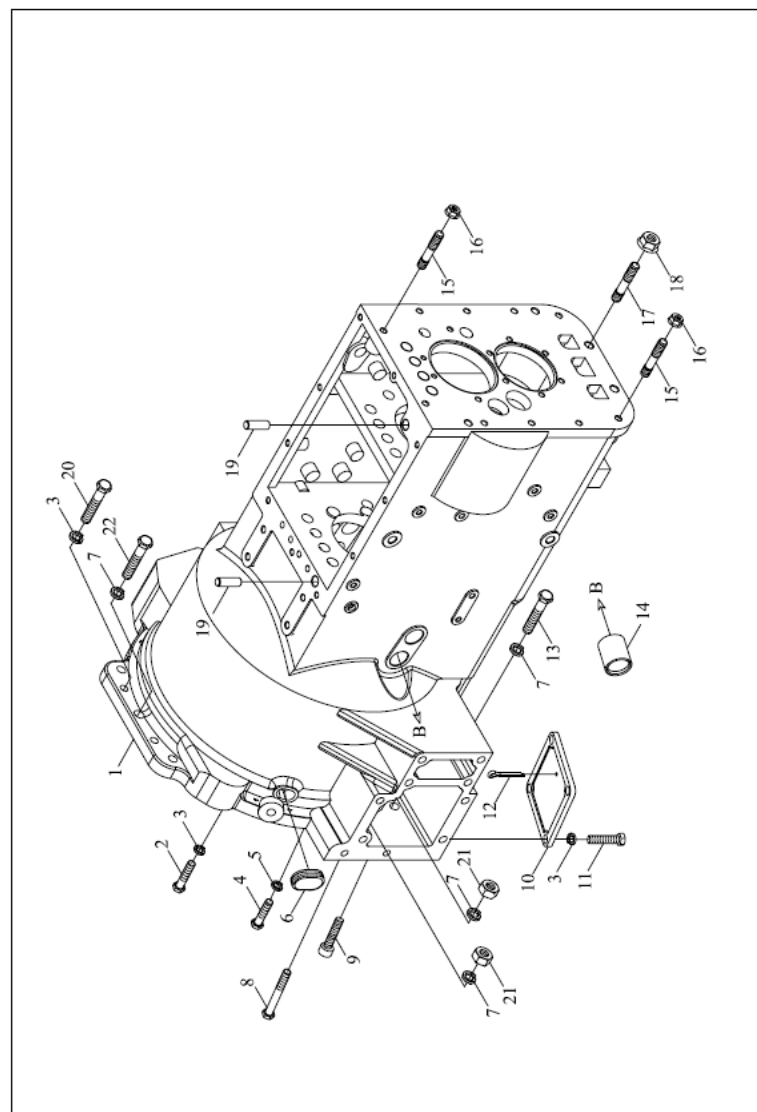

TD800A.371C 37.1-变速箱壳体总成 37.1-GEARBOX HOUSING ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TD800A.371C-01	变速箱壳体	GEAR BOX	1	2011-11_
10	FT800A.37.181	检视窗盖	INSPECTION WINDOW COVER	1	2011-11_
12	GBT91-5X25-A0P	开口销	PIN	1	2011-11_
13	TD800A.371C-02	专用螺栓	SPECIAL BOLT	4	2011-11_
14	FT800.37.198	分离叉轴衬套	RELEASE FORK SHAFT BUSH	4	2011-11_
15	GBT899-AM12-M12X1.5X40-A3L	双头螺柱	8.8-A3L STUD	10	2011-03_
16	SPL6177.2-M12X1.5-F3	六角法兰面螺母	NUT	10	2011-11_
17	GBT899-AM16-M16X1.5X40-10.9-A3L	双头螺柱	8.8-A3L STUD	2	2011-03_
17	GBT899-AM16-M16X1.5X45-A3L	双头螺柱	8.8-A3L STUD	2	2008-06_
18	SPL6177.2-M16X1.5-F3	六角法兰面螺母	NUT	2	2011-11_
19	GBT119.1-16m6X28-A0P	圆柱销	PIN	2	2011-11_
2	GBT5783-M12X40-A3L	螺栓	BOLT	5	2011-11_
20	GBT5782-M12X65-10.9-A2L	六角头螺栓	BOLT	2	2004-01_
20	GBT5782-M12X65-10.9-A2L	六角头螺栓	BOLT	2	2004-01_
21	GBT6170-M16-A3L	螺母 M16-A3L	NUT	4	2011-11_
22	GBT5783-M16X45-8.8-A3L	六角头螺栓	BOLT	1	2013-04_
3	GBT93-12-A0P	弹簧垫圈	SPRING WASHER	11	2011-11_
4	GBT5783-M10X50-A3L	六角头螺栓	BOLT	1	
4	GBT5783-M10X40-10.9-A3L	六角头螺栓	BOLT	1	2009-05_
5	GBT93-10-A0P	标准型弹簧垫圈	WASHER	1	2011-11_
6	FT800.37.316	橡胶塞	RUBBER RING	1	2011-11_
7	GBT93-16-A0P	弹簧垫圈	SPRING WASHER	9	2011-11_
8	GBT5782-M16X90-A2L	六角头螺栓	BOLT	2	2011-11_
9	GBT70.1-M16X80-10.9-A3L	内六角圆柱头螺钉	SCREW	2	2004-01_
9	GBT70.1-M16X80-10.9-A3L	内六角圆柱头螺钉	SCREW	2	2004-01_


TD800A.372G 主副变速总成-1

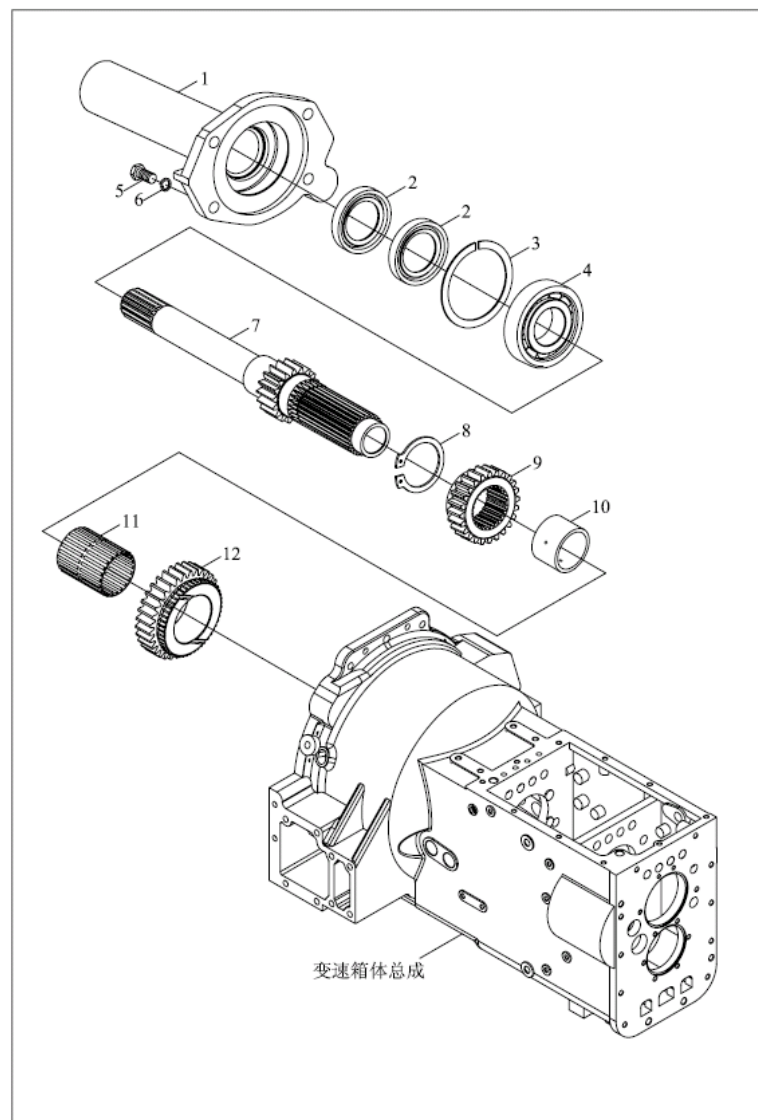

TD800A.372G-1 37.2.1-主副变速总成-1 MAIN/ASSISTANT GEAR ASSEMBLY-1

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT800.37C.107	输入轴轴承座	INPUT SHAFT BEARING SEAT	1	2011-11_
10	FT800.37.117C	衬套	SLEEVE	1	2011-11_
12	TD800A.372F-02	Ⅲ档主动齿轮	Ⅲ DRIVING GEAR	1	2011-11_
2	GBT9877.1-FB50X72X8F	内包骨架旋转轴唇形密封	O RING	2	2011-11_
3	FT800.37.172	调整垫片	ADJUSTING WASHER	999	2011-11_
4	GBT276-6310	轴承	BEARING	1	2011-11_
5	GBT5783-M10X25-A3L	螺栓	BOLT	4	2011-11_
6	GBT93-10-AOP	标准型弹簧垫圈	WASHER	4	2011-11_
7	FT800.37C.011	输入轴总成	INPUT SHAFT ASSEMBLY	1	2011-11_
8	GBT894.1-55	轴用弹性挡圈	SNAP RING	1	2011-11_
9	TD800A.372F-01	Ⅱ档主动齿轮	Ⅱ DRIVING GEAR	1	2011-11_


TD800A.372G 主副变速总成-2

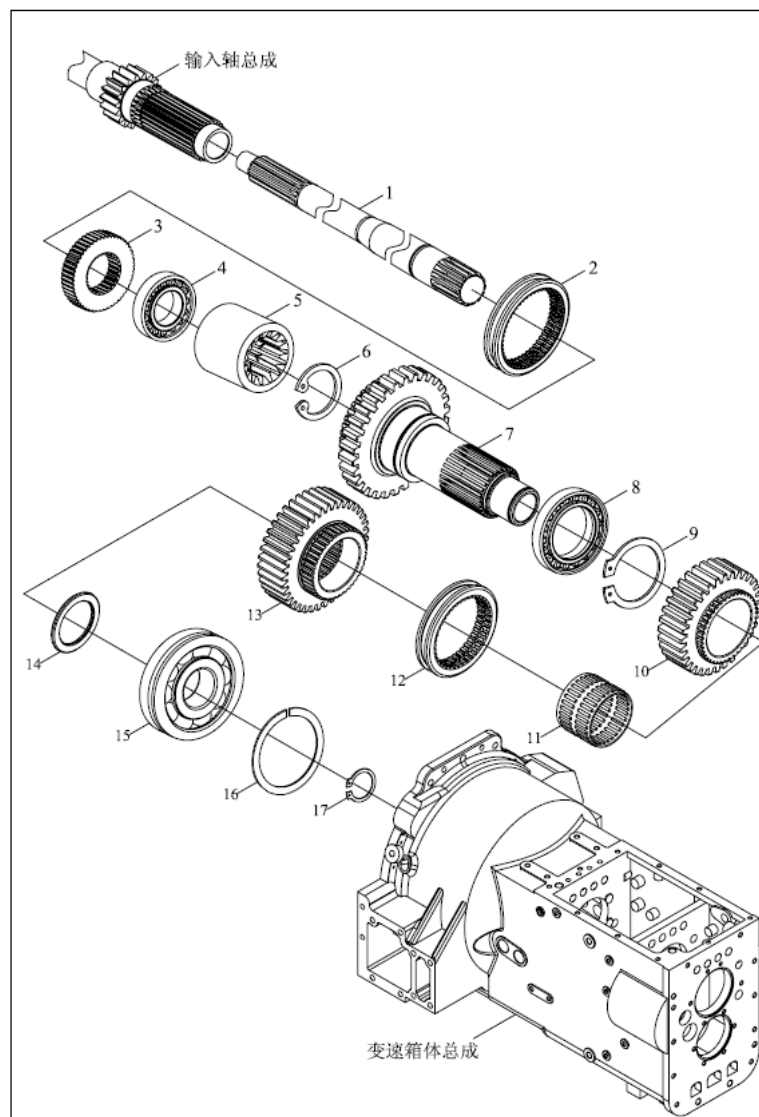

TD800A.372G-2 37.2.2-主副变速总成-2 MAIN/ASSISTANT GEAR ASSEMBLY-2

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT800.37C.104	动力输出前段轴	PTO FRONT SHAFT	1	2011-11_
10	TD800A.372F-04	副变速低档主动齿轮	AUXILIARY LOW DRIVING GEAR	1	2011-11_
11	QSFZ-B019-K55X62X46ZW	滚针轴承	NEEDLE BEARINGS	1	2004-01_
11	QLWZB120-K55X62X46ZW	滚针轴承	NEEDLE BEARINGS	1	2010-03_
12	TD800A.372F-05	副变速低档啮合套	AUXILIARY LOW GEAR SHIFT COLLAR	1	2011-11_
13	TD800A.372F-06	梭式换挡主动齿轮	SHUTTLE SHIFT DRIVING GEAR	1	2011-11_
14	TD800A.372F-07	中间轴档圈	MIDDLE SHAFT RETAINER RING	1	2011-11_
15	GBT276-6408N	深沟球轴承	BEARING	1	2011-11_
16	GBT305-110-116.6	止动环	THRUST RING	1	2004-01_
17	GBT894.1-40	挡圈40	WASHER 40	1	2011-11_
2	FT800.37.118	Ⅲ-Ⅳ档啮合套	Ⅲ-Ⅳ SHIFT COLLAR	1	2011-11_
3	FT800.37.119	Ⅲ-Ⅳ档啮合齿座	Ⅲ-Ⅳ ENGAGING GEAR SEAT	1	2011-11_
4	TD800A.372F-15	轴承	BEARING	1	2011-11_
5	FT800.37.106	动力输出轴连接套	PTO SHAFT CONNECTING SLEEVE	1	2011-11_
6	GBT893.1-28	挡圈	RETAINER RING	1	2011-11_
7	TD800A.372F-03	梭式换挡中间轴	SHUTTLE SHIFT MIDDLE SHAFT	1	2011-11_
8	TD800A.372F-16	轴承	BEARING	1	2011-11_
8	TD800A.372F-16	轴承	BEARING	1	2011-11_
9	GBT894.1-70	轴用弹性挡圈	SNAP RING	1	2011-11_


TD800A.372G 主副变速总成-3

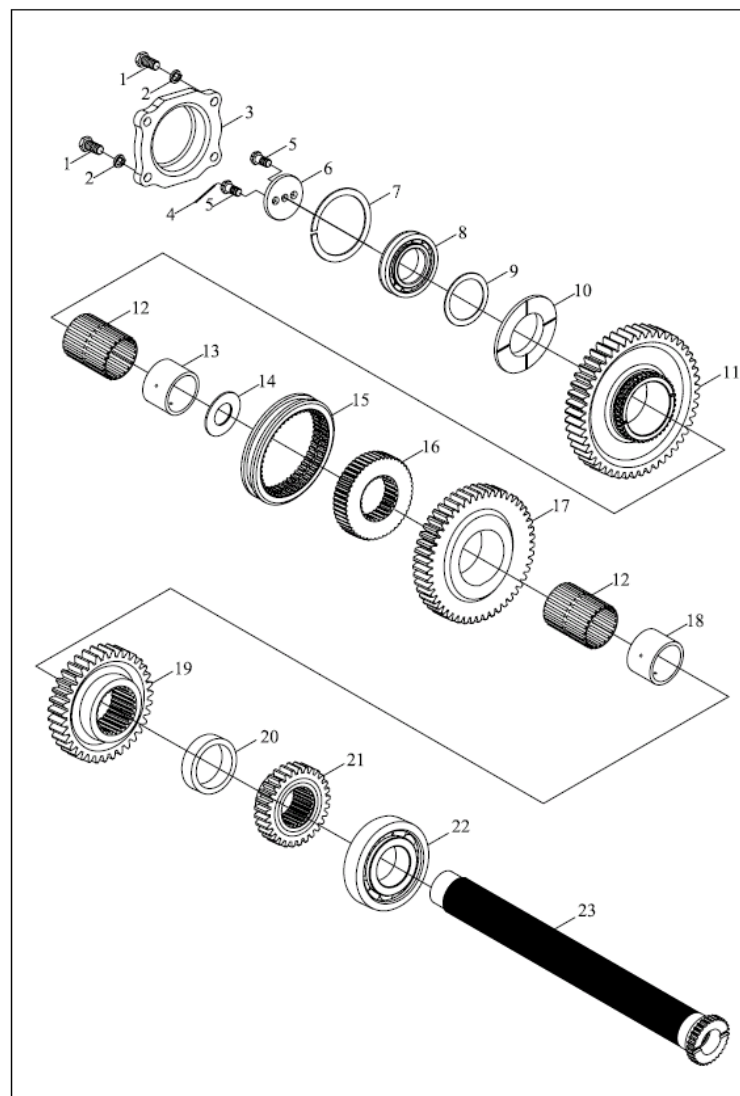

TD800A.372G-3 37.2.3-主副变速总成-3 MAIN/ASSISTANT GEAR ASSEMBLY-3

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT5783-M10X25-A3L	螺栓	BOLT	4	2011-11_
10	FT800.37.178C	中间轴止推环	MIDDLE SHAFT THRUST RING	1	2011-11_
11	FT800.37.124C	I 档从动齿轮	I DRIVEN GEAR	1	2011-11_
12	QSFZB019-K64X74X41ZW	滚针轴承	NEEDLE BEARINGS	2	2004-01_
13	FT800.37.123C	衬套	SLEEVE	1	2011-11_
14	FT800.37.209C	隔套二	SPACER BUSH 2	1	2011-11_
15	FT800.37.118	III-IV档啮合套	III-IV SHIFT COLLAR	1	2011-11_
16	FT800.37.119	III-IV档啮合齿座	III-IV ENGAGING GEAR SEAT	1	2011-11_
17	TD800A.372F-14	II 挡从动齿轮	II DRIVEN GEAR	1	2011-11_
18	FT800.37.117C	衬套	SLEEVE	1	2011-11_
19	TD800A.372F-13	III挡从动齿轮	III DRIVEN GEAR	1	2011-11_
2	GBT93-10-A0P	标准型弹簧垫圈	WASHER	4	2011-11_
20	FT800.37.176	中间轴隔套	MIDDLE SHAFT SPACER BUSH	1	2011-11_
21	TD800A.372F-11	IV 档从动齿轮	IV DRIVEN GEAR	1	2011-11_
22	GBT283-NUP211E	圆柱滚子轴承	BEARING	1	2011-11_
23	TD800A.372F-12a	中间轴	MIDDLE SHAFT	1	2013-07_
23	TD800A.372F-12	中间轴	MIDDLE SHAFT	1	2011-11_
3	FT800.37.179	中间轴端盖	MIDDLE SHAFT END COVER	1	2011-11_
4	FT800A.37A.244	热镀锌钢丝	ZINC-COATED STEEL WIRE	1	2011-11_
5	TD800A.372-01	专用螺栓	SPECIAL BOLT	2	2011-11_
6	FT800.37.187	挡圈	RETAINER RING	1	2011-11_
7	GBT305-90-96.5	止动环	THRUST RING	1	2011-11_
8	GBT276-6210	深沟球轴承	BEARING	1	2010-12_
8	GBT276-6210N	深沟球轴承	BEARING	1	2011-11_
9	FT804.42.109	调整垫片	ADJUSTING WASHER	999	2011-11_


TD800A.372G 主副变速总成-4

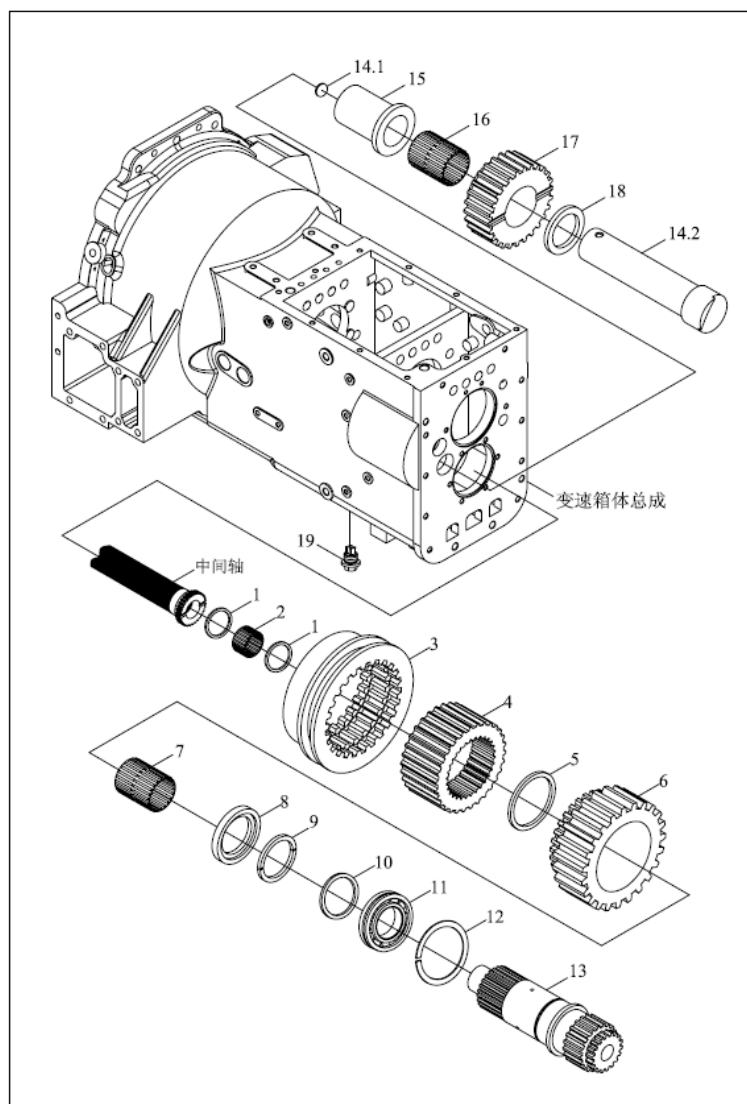


TD800A.372G-4 37.2.4-主副变速总成-4 MAIN/ASSISTANT GEAR ASSEMBLY-4

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT800.37.175	滚针轴承隔圈	NEEDLE BEARING SPACER RING	2	2011-11_
10	FT800.37.206	调整垫片	ADJUSTING WASHER	999	2011-11_
11	GB/T276-6211	深沟球轴承	BEARING	1	2011-11_
12	GB/T305-100-106.5	止动环	THRUST RING	1	2011-11_
13	TD800A.372F-08a	输出轴	OUTPUT SHAFT	1	2013-07_
13	TD800A.372F-08	输出轴	OUTPUT SHAFT	1	2011-11_
14	TF1004.372.2	惰轮轴总成	IDLER SHAFT ASSEMBLY	1	2011-06_
14	FT800.37D.023	惰轮轴总成	IDLER SHAFT ASSEMBLY	1	2004-01_
14.1	QCT387-14	塞片	PLUG PIECE	1	2011-11_
14.2	TF1004.372.2-01	惰轮轴	IDLER SHAFT	1	2011-06_
14.2	FT800.36D.136	惰轮轴	IDLER SHAFT	1	2004-01_
15	FT800.37D.232	惰轮隔套	IDLER SHAFT SPACER BUSH	1	2011-11_
16	QLWZB120-K35X45X43ZW	滚针轴承	NEEDLE BEARINGS	1	2010-03_
16	QSFZB019-K35X45X43ZW	滚针轴承	NEEDLE BEARINGS	1	2004-01_
17	FT800.37D.326	惰轮	IDLER	1	2011-11_
18	FT800.37D.233	档圈	RETAINER RING	1	2011-11_
19	FT65.38.026	油塞总成	Oil Plug assembly	1	2011-11_
19	FT65.38.026	油塞总成	Oil Plug assembly	1	2011-11_
2	TD800A.372F-17	滚针轴承	NEEDLE BEARINGS	1	2011-11_
3	TD800A.372F-09	梭式换挡啮合齿套	MESHING BUSH OF SHUTTLE GEAR	1	2011-11_
4	TD800A.372F-10	梭式换挡啮合齿座	SHUTTLE SHIFT SHIFT GEAR SEAT	1	2011-11_
5	FT800.37D.240	隔套	SPACER BUSH	1	2011-11_
6	FT800.37D.128	梭式换挡从动齿轮	SHUTTLE SHIFT DRIVEN GEAR	1	2011-11_
7	QSFZB019-K55X65X43ZW	滚针轴承	NEEDLE BEARINGS	1	2004-01_
8	FT800.37D.190	止推环挡圈	THRUST RETAINER RING	1	2004-01_

TD800A.372G 主副变速总成-4

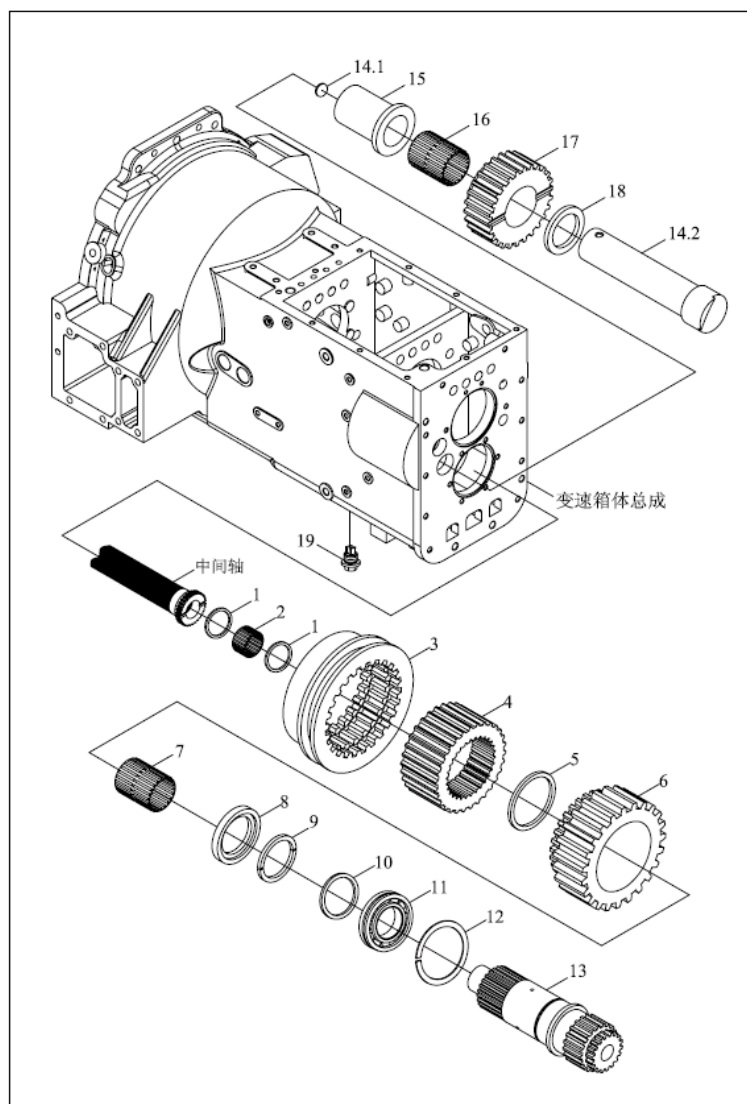


TD800A.373B 操纵机构总成-1

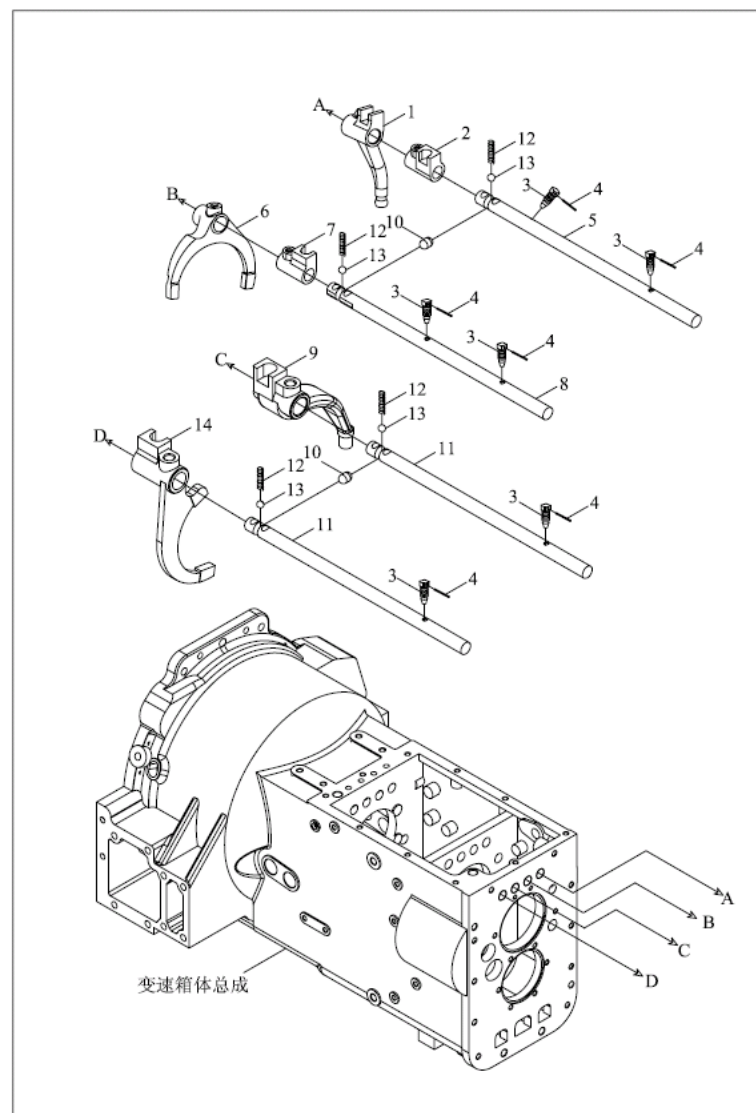

TD800A.373B-1 37.3.1-侧置操纵总成-1 SIDE CONTROL ASSEMBLY-1

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT800.37.154	I-II 档拨杆	I-II GEAR DIAL ROD	1	2011-11_
1	FT800.37.154	I-II 档拨杆	I-II GEAR DIAL ROD	1	2011-11_
10	FT800.37.177	互锁销	MUTUAL PIN	2	2011-11_
11	FT800A.37.320a	副变速拨叉轴	AUXILIARY GEARSHIFT FORK SHAFT	2	2011-11_
12	FT800.37.139	弹簧	SPRING	4	2011-11_
13	GBT308-10-G100-b	钢球	BALL	4	2011-11_
14	TD800A.373B-03	副变速低档拨叉	AUXILIARY LOW GEAR FORK	1	2011-11_
2	TD800A.373B-05	I-II 档拨头	I-II GEAR FORK HEAD	1	2011-11_
3	FT800.37.194	紧定螺钉	LOCKING SCREW	6	2011-11_
4	FT800.37.015B	主变速操纵手柄球总成	MAIN GEARSHIFT HANDLE BALL ASSEMBLY	1	2011-08_
4	FT800A.37A.244	热镀锌钢丝	ZINC-COATED STEEL WIRE	6	2011-11_
5	FT800A.37.318	I-II 挡叉轴	I-II GEAR FORK SHAFT	1	2011-11_
6	FT800.37.158	III-IV 档拨叉	III-IV FORK	1	2011-11_
7	TD800A.373B-01	III-IV 档拨头	III-IV GEAR FORK HEAD	1	2011-11_
8	FT800A.37.319	III-IV 挡叉轴	III-IV GEAR FORK SHAFT	1	2011-11_
9	TD800A.373B-02	梭式换挡拨杆	SHUTTLE SHIFT DIAL ROD	1	2011-11_


TD800A.373B 操纵机构总成-2

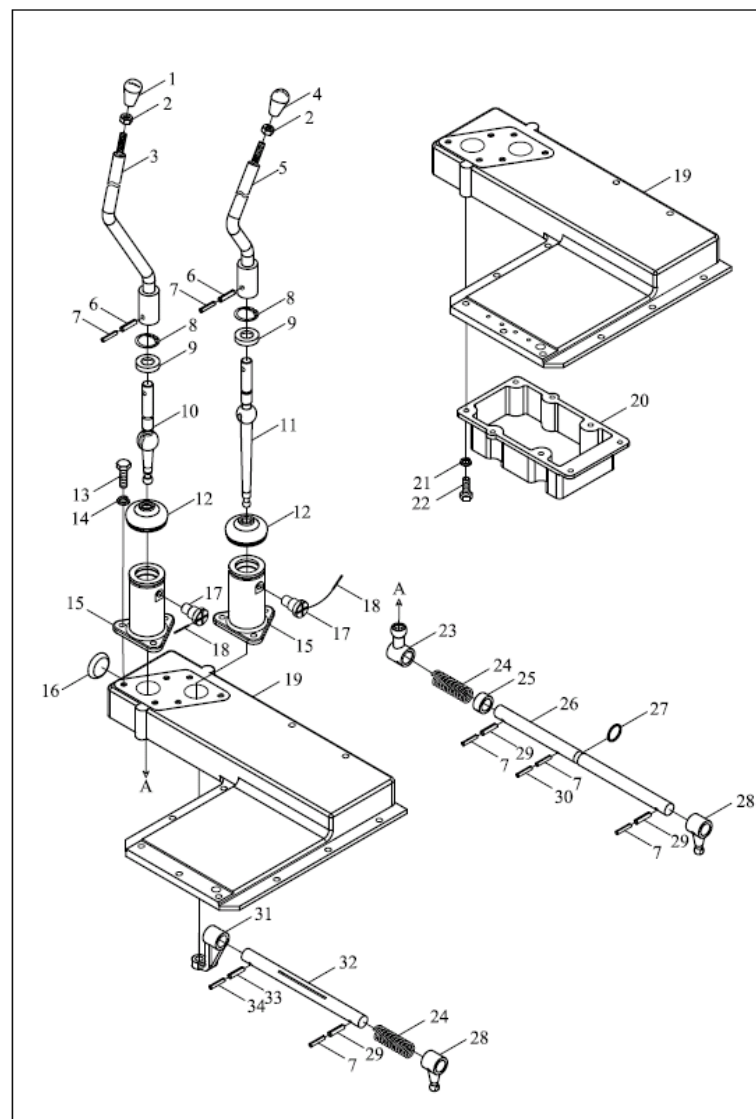

TD800A.373B-2 37.3.2-侧置操纵总成-2 SIDE CONTROL ASSEMBLY-2

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TD800A.373B.1.1	副变速操纵手柄总成	AUXILIARY GEARSHIFT CONTROL HANDLE	1	2011-11_
10	TD800A.373B.1-03	副变速操纵杆	ASSEMBLY	1	2011-11_
10	TD800A.373B.1-03a	下操纵杆	AUXILIARY GEARSHIFT CONTROL ROD	1	2011-08_
11	TD800A.373B.1-05	下操纵杆	LOWER CONTROL ROD	1	2011-11_
12	FT800A.37.307	橡胶套	LOWER CONTROL ROD RUBBER SLEEVE	2	2011-11_
13	GBT5781-M10X20-A3L	六角头螺栓		6	2011-11_
14	GBT93-10-A0P	标准型弹簧垫圈	BOLT	6	2011-11_
15	TD800A.373B.1-04	副变速变速杆支座	WASHER	1	2011-11_
16	Q722-24	碗形塞片	AUXILIARY GEARSHIFT LEVER SEAT	2	2011-11_
17	FT800A.37.326	变速杆定位销	PLUG PIECE GEARLEVER LOCATING PIN	4	2011-11_
18	TF1004.374-02	低碳钢丝		2	2011-11_
19	FT800A.37N.308a	侧操纵盖	LOW CARBON STEEL WIRE	1	2011-11_
2	GBT6170-M10-A3L	螺母	SIDE CONTROL COVER	2	2011-11_
20	FT800A.37.309a	侧操纵下盖	NUT	1	2011-08_
20	FT800A.37.309	侧操纵下盖	SIDE CONTROL LOWER COVER SIDE CONTROL LOWER COVER	1	2004-01_
21	GBT93-8-A0P	垫圈		8	2011-11_
22	GBT5781-M8X20-A2L	六角头螺栓	WASHER	8	2011-11_
22	GBT5781-M8X20-A2L	六角头螺栓	BOLT	8	2011-11_
23	TD800A.373B.1-02B	变速杆操纵拨头	BOLT	1	2011-08_
23	TD800A.373B.1-02c	变速杆操纵拨头	GEARSHIFT LEVER CONTROL DIAL HEAD GEARSHIFT LEVER CONTROL DIAL HEAD	1	2012-01_
23	TD800A.373B.1-02a	副变速操纵拨头		1	2004-01_
24	FT800A.37.311	弹簧	AUXILIARY GEARSHIFT CONTROL DIAL HEAD	2	2011-11_
25	FT800A.37.314	隔套	SPRING	1	2011-11_
26	TD800A.373B.1-01	副变速操纵传递杆	SPACER BUSH	1	2011-11_
26	TD800A.373B.1-01b	副变速操纵传递杆	AUXILIARY GEARSHIFT CONTROL	1	2012-01_


TD800A.373B 操纵机构总成-2

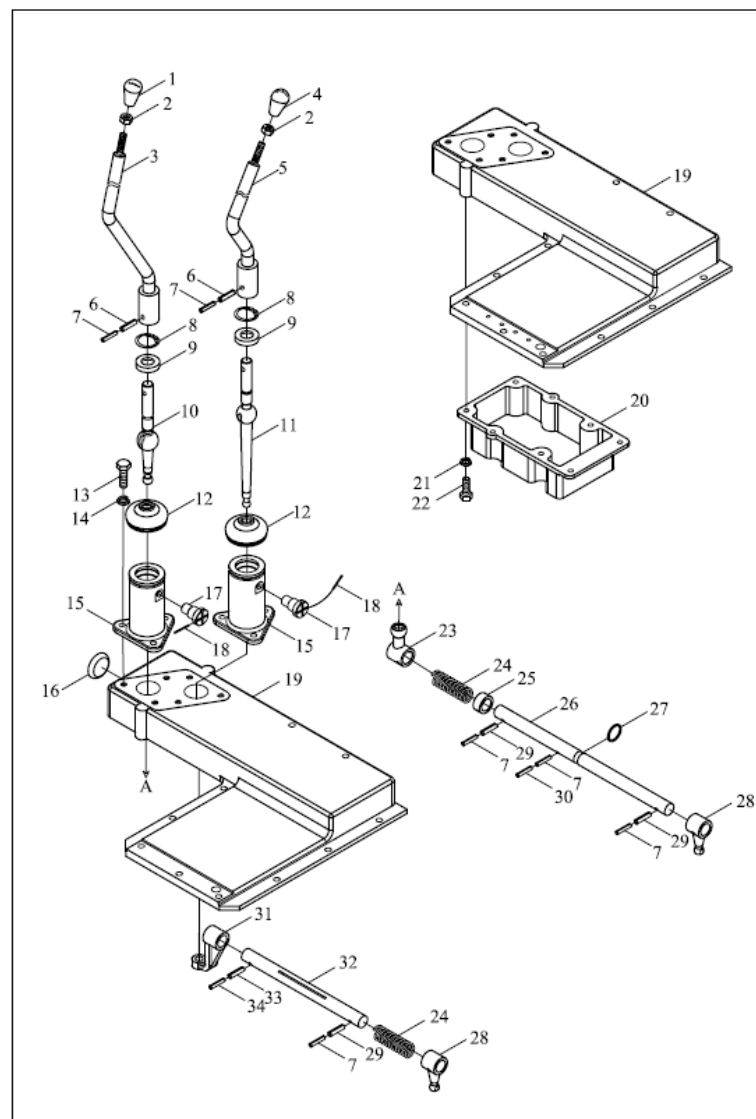

TD800A.373B-2 37.3.2-侧置操纵总成-2(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
26	TD800A.373B.1-01	副变速操纵传递杆	AUXILIARY GEARSHIFT CONTROL	1	2011-11_
27	GBT3452.1-18.0X2.65G	液压气动用O形橡胶密封圈	TRANSMISSION ROD	2	2011-11_
28	FT800A.37.315	内操纵拨头	O-SEAL RING	2	2004-01_
28	FT800A.37.315a	内操纵拨头	INNER CONTROL FORK HEAD	2	2012-01_
29	GBT879.1-8X32	弹性圆柱销	INNER CONTROL FORK HEAD	4	2011-11_
			PIN		
3	TD800A.373B.1.3a	副变速操纵杆焊合		1	2011-11_
3	TD800A.373B.1.3b	副变速操纵杆焊合	AUXILIARY GEARSHIFT CONTROL ROD	1	2011-08_
30	GBT879.1-3X32	弹性圆柱销	WELDMENT	1	2011-11_
31	FT800A.37.310	外操纵拨头	AUXILIARY GEARSHIFT CONTROL ROD	1	2011-11_
31	FT800A.37.310a	外操纵拨头	WELDMENT	1	2012-01_
			PIN		
32	FT800A.37.312	主变速操纵传递杆	OUTER CONTROL FORK HEAD	1	2004-01_
32	FT800A.37.312b	主变速操纵传递杆	OUTER CONTROL FORK HEAD	1	2012-01_
32	FT800A.37.312a	主变速操纵传递杆		1	2011-08_
33	GBT879.1-5X30	弹性圆柱销	MAIN GEARSHIFT CONTROL TRANSFER ROD	2	2011-11_
34	GBT879.1-3X30	弹性圆柱销	MAIN GEARSHIFT CONTROL TRANSFER ROD	2	2011-11_
			MAIN GEARSHIFT CONTROL TRANSFER ROD		
4	FT800.37.015a	主变速操纵手柄总成	PIN	1	2004-01_
5	TD800A.373B.1.2a	主变速操纵杆焊合	PIN	1	2004-01_
5	TD800A.373B.1.2b	主变速操纵杆焊合		1	2011-08_
6	GBT879.1-8X35	弹性圆柱销	MAIN GEARSHIFT CONTROL HANDLE ASSEMBLY	2	2011-11_
7	GBT879.1-5X32	弹性圆柱销	MAIN GEARSHIFT CONTROL ROD WELDMENT	7	2011-11_
			MAIN GEARSHIFT CONTROL ROD WELDMENT		
8	GBT893.1-40	挡圈	PIN	2	2011-11_
9	FT800A.37.305	尼龙座	PIN	2	2011-11_
			RETAINER RING		
			NYLON SEAT		


TD800A.373B 操纵机构总成-3

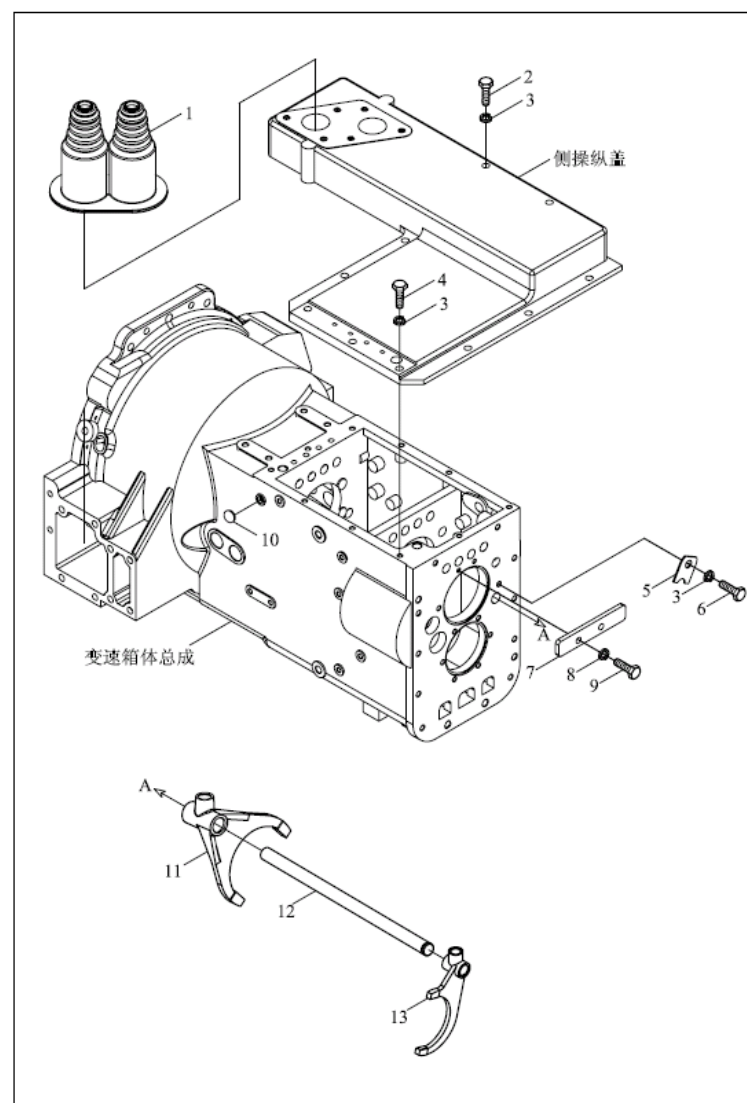

TD800A.373B-3 37.3.3-侧置操纵总成-3 SIDE CONTROL ASSEMBLY-3

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TF1004.452-11	密封套	SEAL SLEEVE	1	2011-11_
10	QCT387-14-A0P	塞片	PLUG PIECE	1	2011-11_
11	FT800.37.161c	I-II 档拨叉	I-II GEAR FORK	1	2011-11_
12	FT800.37.153	中间拨叉轴	MIDDLE FORK SHAFT	1	2011-11_
13	TD800A.373B-04	副变速拨叉	AUXILIARY GEARSHIFT FORK	1	2004-01_
13	TF1004.373-02	副变速拨叉	AUXILIARY GEARSHIFT FORK	1	2011-01_
13	TF1004.373-02	副变速拨叉	AUXILIARY GEARSHIFT FORK	1	2011-01_
2	TD800A.373-01	专用螺栓	SPECIAL BOLT	2	2011-11_
3	GBT93-10-A0P	标准型弹簧垫圈	WASHER	11	2011-11_
4	GBT5783-M10X25-A3L	螺栓	BOLT	8	2011-11_
5	FT800.37.169	定位板	LOCATING PLATE	1	2011-11_
6	GBT5783-M10X20-A3L	螺栓	BOLT	1	2011-11_
7	FT800A.37.327	换档限位板	GEARSHIFT LIMITING PLATE	1	2011-11_
8	GBT93-8-A0P	垫圈	WASHER	2	2011-11_
9	GBT5781-M8X20-A2L	六角头螺栓	BOLT	2	2011-11_
9	GBT5781-M8X20-A2L	六角头螺栓	BOLT	2	2011-11_


TD800A.374B 爬行档机构总成

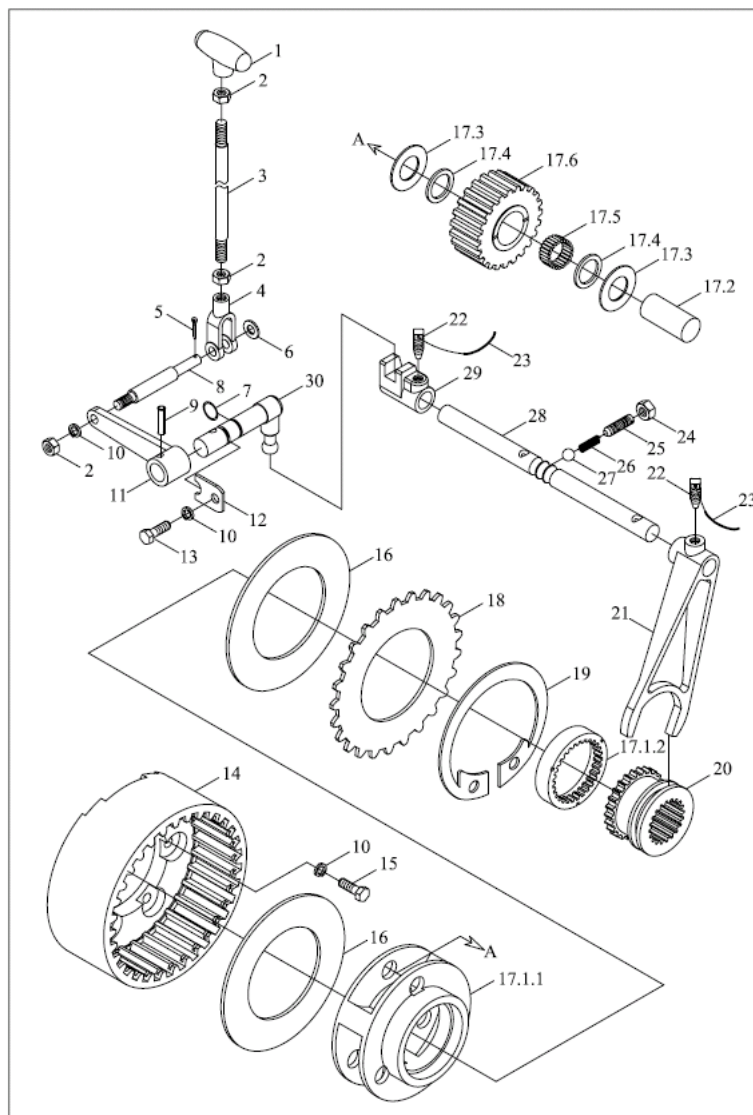

TD800A.374B 37.4-爬行档机构总成 37.4-CREEPER GEAR MECHANISM ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT65.38.051	拉压手柄	PULL/PRESS HANDLE	1	2011-11_
11	FT800A.37A.040	爬行档摇臂焊合	CREEPER ROCKER WELDMENT	1	2011-11_
12	FT800.37.169	定位板	LOCATING PLATE	1	2011-11_
13	GBT5781-M10X20-A3L	六角头螺栓	BOLT	1	2011-11_
14	FT800.37D.210	内齿圈	INNER GEAR RING	1	2011-11_
15	GBT5783-M10X25-A3L	螺栓	BOLT	6	2011-11_
16	FT800.37D.230	耐磨垫片	WEARABLE WASHER	2	2011-11_
17	FT800.37D.018	行星架总成	PLANET CARRIER ASSEMBLY	1	2011-11_
17.1	FT800.37A.024	行星架焊合	PLANET CARRIER WELDMENT	1	2011-11_
17.11	FT800.37A.217	行星架	PLANET CARRIER	1	2011-11_
17.12	FT800.37A.226	行星齿座内齿环	INNER GEAR RING OF PLANET GEAR	1	2011-11_
17.2	FT800.37A.213	行星齿轮轴	PLANET GEAR SHAFT	3	2011-11_
17.3	FT800.37A.212	行星齿轮衬圈	PLANET GEAR LINER	6	2011-11_
17.4	FT800.37A.214	滚针隔圈	NEEDLE SPACER RING	6	2011-11_
17.5	GBT309-4X25.8	滚针	NEEDLE	57	2011-11_
17.6	FT800.37D.211	行星齿轮	PLANETARY GEAR	3	2011-11_
18	FT800.37D.216	行星架垫板	PLANET CARRIER MAT PLATE	1	2011-11_
19	GBT893.1-170	孔用弹性挡圈	SNAP RING	1	2011-11_
2	GBT6172.1-M10-A3L	螺母	NUT	3	2011-11_
20	FT800.37A.218	爬行档接合套	CREEPER GEAR CONNECTING SLEEVE	1	2011-11_
21	FT800.37A.225	高低档拨叉	HIGH AND LOW GEAR FORK	1	2011-11_
22	FT800.37.194	紧定螺钉	LOCKING SCREW	2	2011-11_
23	FT800A.37A.244	热镀锌钢丝	ZINC-COATED STEEL WIRE	2	2011-11_
24	GBT6172.1-M12-A3L	螺母	NUT	1	2011-11_
25	GBT71-M12X40-A3L	开槽锥端紧定螺钉	SCREW	1	2011-11_


TD800A.374B 爬行档机构总成

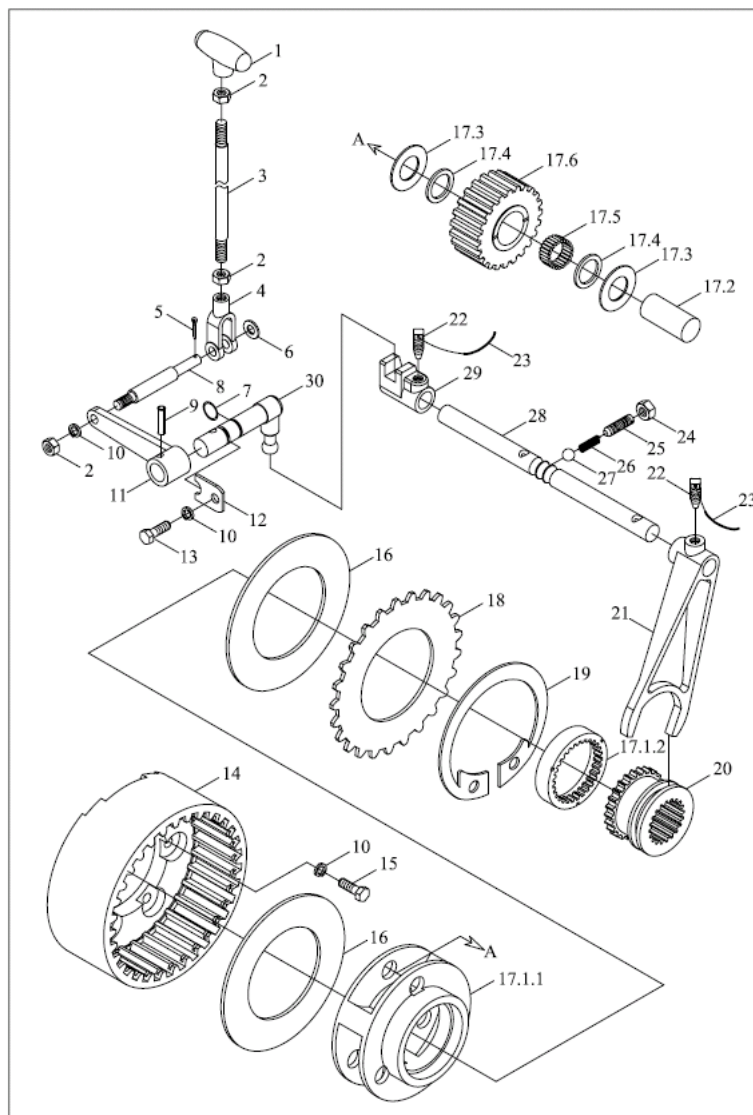

TD800A.374B 37.4-爬行档机构总成(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
26	FT800.37.139	弹簧	SPRING	1	2011-11_
27	GB/T308-10-G100-b	钢球	BALL	1	2011-11_
28	FT800.37A.220	爬行档拨叉轴	CREEPER GEAR FORK SHAFT	1	2011-11_
29	TD800A.374B-01	爬行挡拨头	CREEPER GEAR FORK HEAD	1	2011-11_
3	FT800A.37A.242	拉杆	PULL ROD	1	2011-11_
30	FT800A.37A.224	爬行挡摇臂	CREEPER GEAR ROCKER	1	2011-11_
4	FT65.43.134	右旋连接叉	RIGHT REVOLVING CONNECTING FORK	1	2011-11_
5	GB/T91-3.2X22-A0P	开口销	PIN	1	2011-11_
6	GB/T97.1-10-A0P	平垫圈	WASHER	1	2011-11_
7	GB/T3452.1-17.0X1.80G	液压气动用O形橡胶密封圈	O-SEAL RING	1	2011-11_
8	FT800A.37A.243	拉杆	PULL ROD	1	2011-11_
8	FT800A.37A.243	拉杆	PULL ROD	1	2011-11_
9	GB/T879.1-8X30	弹性圆柱销	PIN	1	2011-11_


TD804A.38 后桥箱总成-1

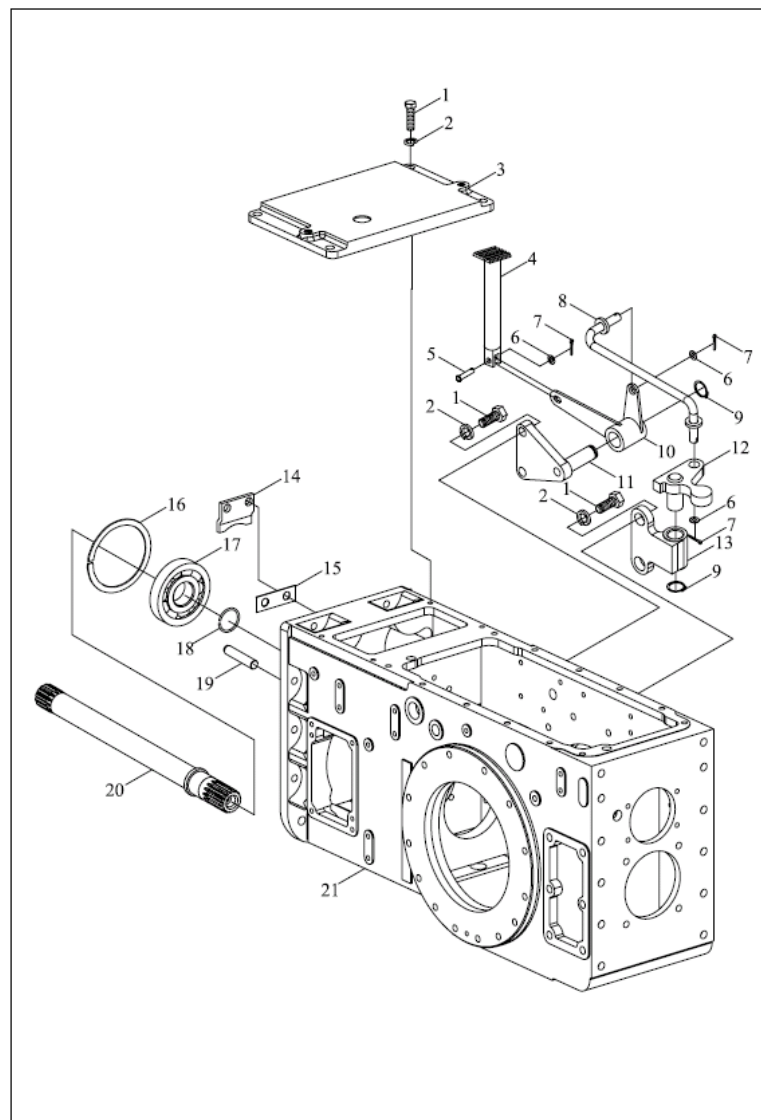

TD804A.38-1 38.1-后桥箱总成-1 REAR AXLE CASE ASSEMBLY-1

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT5781-M10X25-A3L	六角头螺栓	BOLT	14	2011-11_
10	FT800A.38.016	摇臂焊合	ROCKER WELDMENT	1	2011-11_
11	FT800A.38.252	转轴	ROTATING SHAFT	1	2011-11_
12	FT800A.38.250	拨块	SHIFTING BLOCK	1	2011-11_
13	FT800A.38.251	安装座	FIX SEAT	1	2011-11_
14	FT800.38.123	压板	PRESSURE PLATE	1	2011-11_
15	FT800.38.124	锁片	LOCK SHIM	1	2011-11_
16	GBT305-7278.6	止动环	THRUST RING	1	2013-07_
17	GBT276-6306N	深沟球轴承	BEARING	1	2011-11_
18	GBT895.2-30	挡圈	RETAINER RING	1	2011-11_
19	GBT119.1-12m6X30-A0P	圆柱销	PIN	2	2011-11_
19	GBT119.1-12m6X30-A0P	圆柱销	PIN	2	2011-11_
2	GBT93-10-A0P	标准型弹簧垫圈	WASHER	12	2011-11_
20	FT800.38.125	动力输出中段轴	MIDDLE SHAFT OF PTO	1	2011-11_
21	FT800.38.101d	后桥箱体	REAR AXLE HOUSING	1	2007-06_
3	FT800.38.102	后桥箱盖	REAR AXLE HOUSING COVER	1	2011-11_
4	FT800A.38.017	踏板焊合	PEDAL WELDMENT	1	2011-11_
5	GBT882-8X24	销轴	PIN	1	2011-11_
6	GBT95-8-AOP	平垫圈	WASHER	3	2013-07_
8	FT800A.38.258	拉杆	PULL ROD	1	2011-11_
9	GBT894.1-20	挡圈20	BLCKING RING	2	2011-11_


TD804A.38 后桥箱总成-2

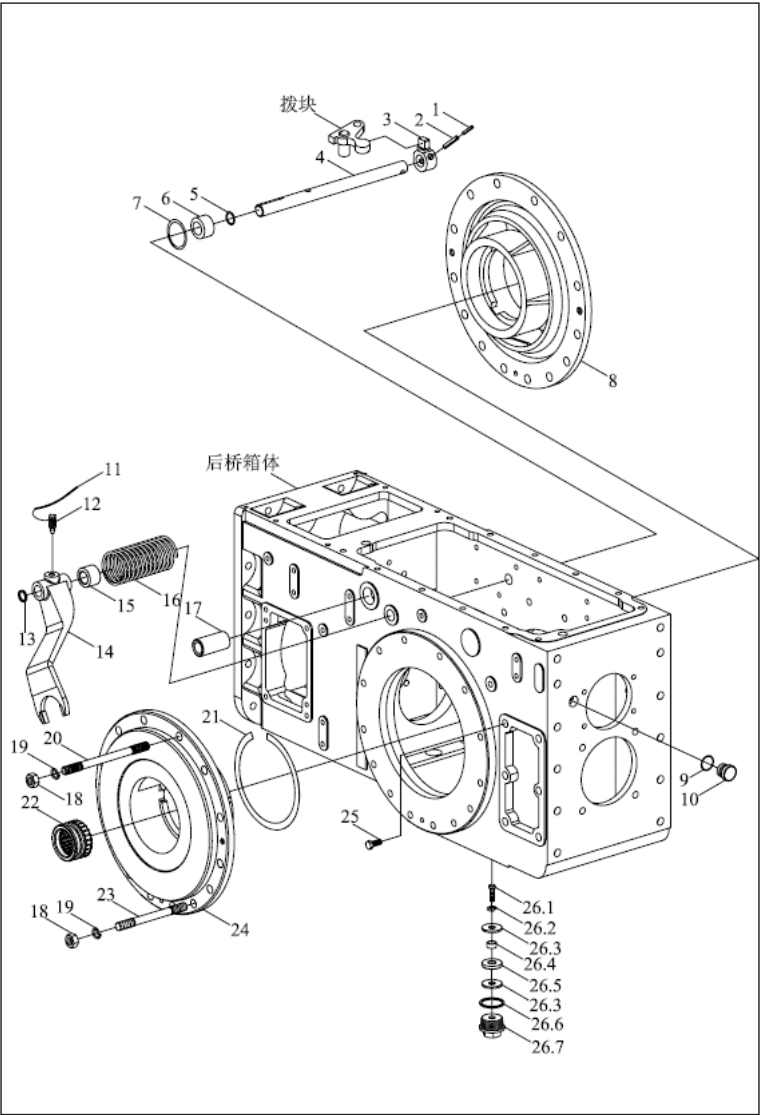

TD804A.38-2 38.2-后桥箱总成-2 REAR AXLE CASE ASSEMBLY-2

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT879.1-5X40	弹性圆柱销	PIN	1	2011-11_
1	GBT879.1-5X40	弹性圆柱销	PIN	1	2011-11_
10	FT800.38.115	堵塞	PLUG	1	2011-11_
11	TF1004.374-02	低碳钢丝	LOW CARBON STEEL WIRE	1	2011-11_
12	FT800.37.194	紧定螺钉	LOCKING SCREW	2	2011-11_
13	Q72220	碗形塞片	PLUG PIECE	1	2011-11_
14	FT800.38.114	差速锁拨叉	DIFFERENTIAL LOCK FORK	1	2011-11_
15	FT800.38.206	隔套	SPACER BUSH	1	2011-11_
16	FT800.38.112	差速锁弹簧	DIFFERENTIAL LOCK SPRING	1	2011-11_
17	FT800.38.134	衬套	SLEEVE	1	2011-11_
18	GBT6171-M14X1.5-A3L	1型六角螺母	NUT	28	2011-11_
19	GBT93-14-A0P	弹簧垫圈	SPRING WASHER	28	2011-11_
19	GBT93-14-A0P	弹簧垫圈	SPRING WASHER	28	2011-11_
2	GBT879.1-8X40	弹性圆柱销	PIN	1	2011-11_
20	GBT899-AM14-M14X1.5X200-A3L	双头螺柱 (禁用)		2	2011-11_
21	FT800.38.221	调整垫片	ADJUSTING WASHER	999	2011-11_
22	FT800.38.113	差速锁啮合套	DIFFERENTIAL LOCK SHIFT COLLAR	1	2011-11_
23	GBT899-AM14-M14X1.5X190-A3L	双头螺柱 (禁用)		26	2011-11_
24	FT800.38.108	左轴承座	LEFT BEARING SEAT	1	2011-11_
25	FT800A.38.238	螺栓	BOLT	2	2004-01_
25	TD800A.38-01	螺栓	BOLT	2	2009-03_
26	FT800.38.014	放油螺塞总成	OIL DISCHARGING SCREW PLUG ASSEMBLY	1	2011-11_
26.1	GBT5781-M10X25-Zn.D	六角头螺栓	BOLT	1	2013-07_
26.3	FT800.38.144	磁铁压紧垫圈	MAGNET PRESSURE WASHER	2	2011-11_
26.4	FT800.38.145	隔磁铝套	SPACING MAGNETISM ALUMINUM SLEEVE	1	2011-11_


TD804A.38 后桥箱总成-2

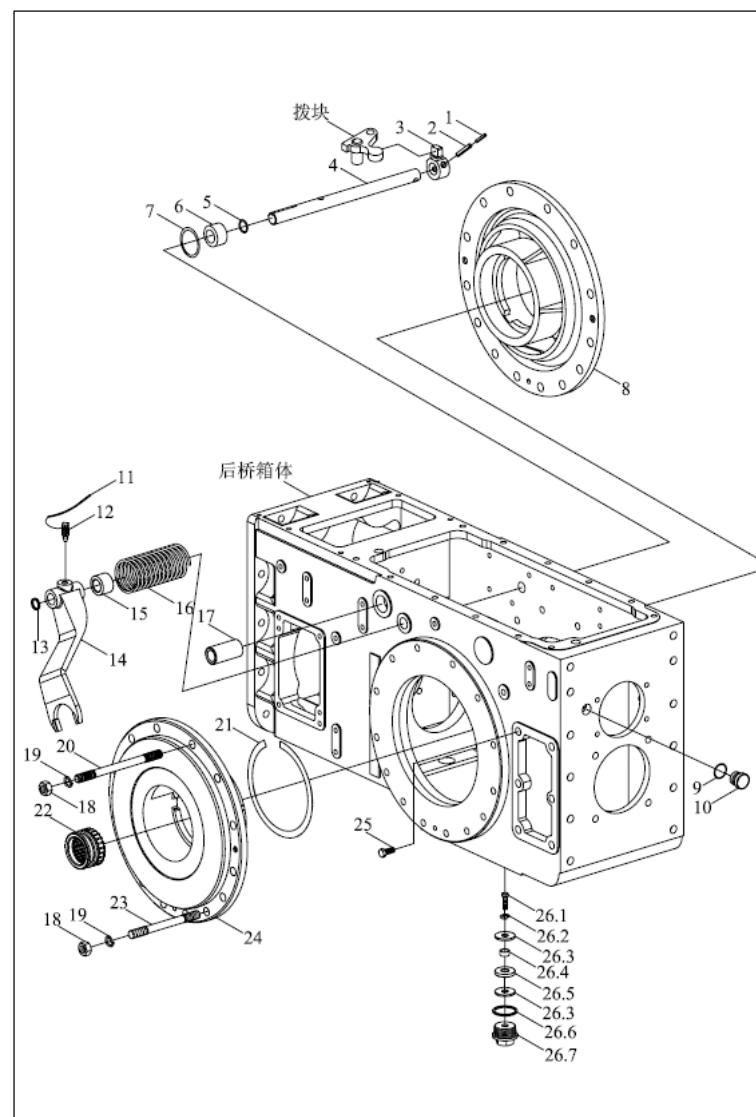

TD804A.38-2 38.2-后桥箱总成-2(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
26.5	FT800.38.143	磁铁	MAGNET	1	2011-11_
26.6	JBT982-36	组合密封垫圈	COMBINED SEAL GASKET	1	2011-11_
26.7	FT800.38.141	放油螺塞	OIL DISCHARGING SCREW PLUG	1	2011-11_
3	FT800.38.109	拨块	SHIFTING BLOCK	1	2011-11_
4	FT800.38.111	差速锁拨叉轴	DIFFERENTIAL LOCK FORK SHAFT	1	2011-11_
5	GBT3452.1-20X2.65G	液压气动用O形橡胶密封圈	O-SEAL RING	1	2011-11_
6	FT800A.38.259	套筒	SLEEVE	1	2011-11_
6	FT800A.38.259	套筒	SLEEVE	1	2011-11_
7	GBT3452.1-30X2.65G	液压气动用O形橡胶密封圈	O-SEAL RING	1	2011-11_
8	FT800.38.106	右轴承座	RIGHT BEARING SEAT	1	2011-11_
9	GBT3452.1-17X2.65G	液压气动用O形橡胶密封圈	O-SEAL RING	1	2011-11_


TD804A.38 后桥箱总成-3

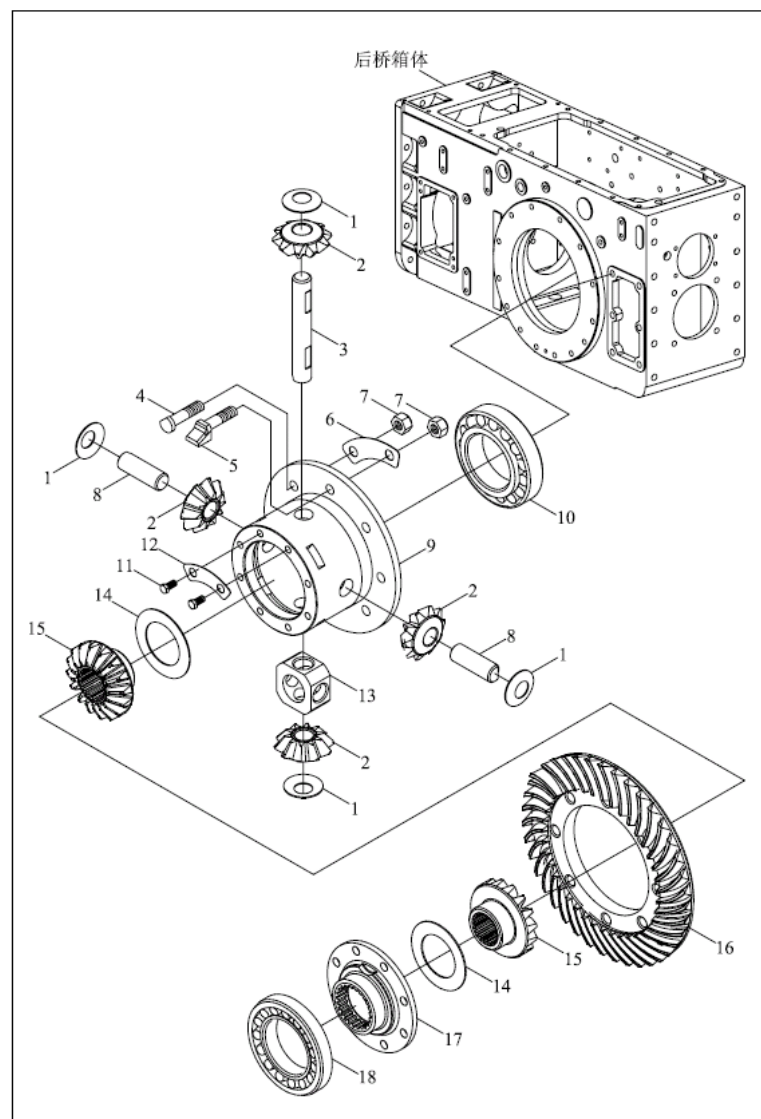

TD804A.38-3 38.3-后桥箱总成-3 REAR AXLE CASE ASSEMBLY-3

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
0	FT800.38.012	差速器总成	DIFFERENTIAL ASSEMBLY	1	2011-11_
1	FT800.38.216	行星齿轮垫片	PLANET GEAR WASHER	4	2011-11_
10	GB/T297-32216	圆锥滚子轴承	BEARING	1	2011-11_
10	GB/T297-32216	圆锥滚子轴承	BEARING	1	2011-11_
11	GB/T5783-M12X25-A3L	六角头螺栓	BOLT	8	2011-11_
12	FT800.38.218	锁片	LOCK SHIM	4	2011-11_
13	FT800.38.132	中心环	CENTRAL RING	1	2011-11_
14	FT800.38.210	半轴齿轮垫片	HALF SHAFT GEAR WASHER	2	2011-11_
15	FT800.38.130	半轴齿轮	HALF SHAFT GEAR	2	2011-11_
16	FT800.38.129	大圆锥齿轮	BIG TAPER GEAR	1	2011-11_
17	FT800.38.133	差速器盖	DIFFERENTIAL HOUSING	1	2011-11_
18	GB/T297-30216	圆锥滚子轴承	BEARING	1	2011-11_
2	FT800.38.217	行星齿轮	PLANETARY GEAR	4	2011-11_
3	FT800.38.215	行星齿轮轴	PLANET GEAR SHAFT	1	2011-11_
4	FT800.38.211	大圆锥齿轮固定螺钉	LOCKING BOLT	4	2011-11_
5	FT800.38.212	行星齿轮轴止动螺钉	PLANET GEAR SHAFT THRUST SCREW	4	2011-11_
6	FT800.38.213	锁片	LOCK SHIM	4	2011-11_
7	GB/T6171-M14X1.5-A3L	1型六角螺母	NUT	8	2011-11_
8	FT800.38.131	短行星齿轮轴	SHORT PLANETARY GEAR SHAFT	2	2011-11_
9	FT800.38.128	差速器壳体	DIFFERENTIAL HOUSING	1	2011-11_


TD804A.38 后桥箱总成-4

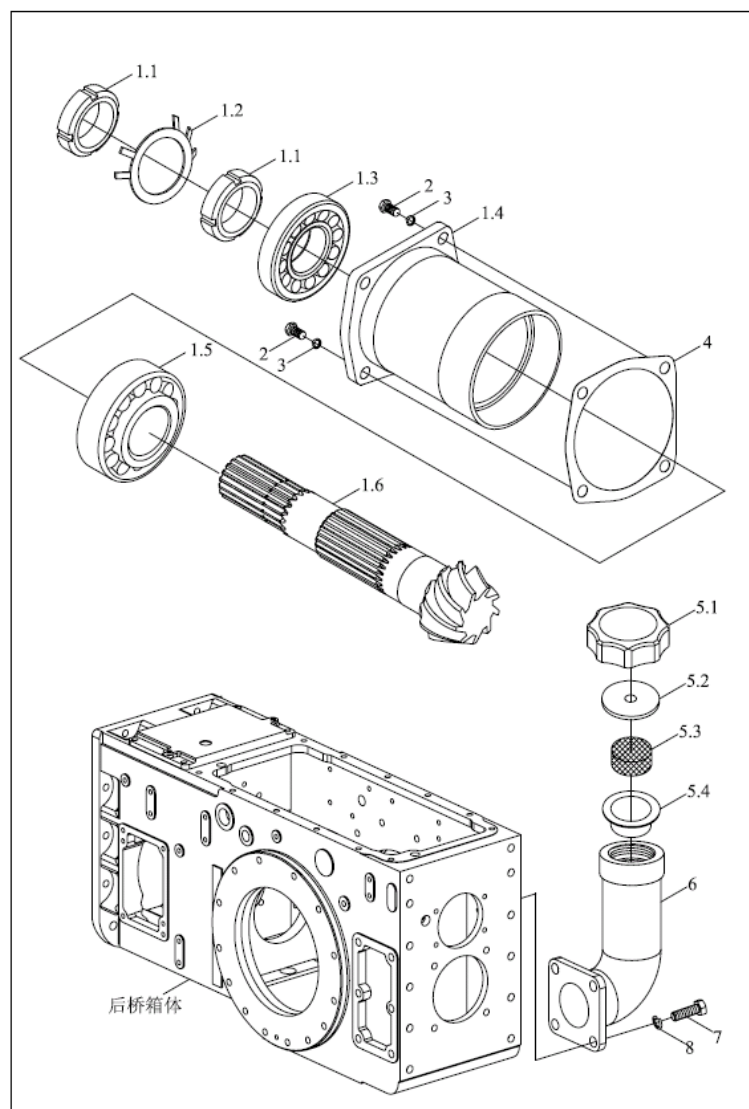

TD804A.38-4 38.4-后桥箱总成-4 REAR AXLE CASE ASSEMBLY-4

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT800.38.011	小圆锥齿轮总成	SMALL TAPER GEAR ASSEMBLY	1	2011-11_
1.1	FT800.38.207	圆螺母	ROUND NUT	2	2011-11_
1.2	GBT858-50	止动垫圈	WASHER	1	2011-11_
1.3	GBT297-30310	圆锥滚子轴承	BEARING	1	2011-11_
1.4	FT800.38.205	小圆锥齿轮轴承座	SMALL TAPER GEAR BEARING SEAT	1	2011-11_
1.5	GBT297-32311	圆锥滚子轴承	BEARING	1	2011-11_
1.6	FT800.38.126	小圆锥齿轮	SMALL TAPER GEAR	1	2011-11_
2	GBT5783-M12X35-A3L	螺栓	BOLT	4	2011-11_
2	GBT5783-M12X35-A3L	螺栓	BOLT	4	2011-11_
3	GBT93-12-A0P	弹簧垫圈	SPRING WASHER	4	2011-11_
4	FT800.38.208	调整垫片	ADJUSTING WASHER	999	2011-11_
5	FT800.38.017	后桥加油口盖总成	REAR AXLE FILLING CAP COVER ASSEMBLY	1	2011-11_
5.2	FT800.38.149	加油口盖隔圈	SPACER RING OF OIL FILLING CAP COVER	1	2011-11_
5.3	TA650.502.3-04	海绵	SPONGE	1	2011-11_
5.4	FT800.38.148	加油口橡胶垫	RUBBER GASKET OF OIL FILLING CAP	1	2011-11_
6	FT800.38.103a	后桥加油口管	REAR AXLE FILLING CAP PIPE	1	2011-11_
7	GBT5781-M10X25-A3L	六角头螺栓	BOLT	14	2011-11_
8	GBT93-10-A0P	标准型弹簧垫圈	WASHER	12	2011-11_


TD804A.38 后桥箱总成-5

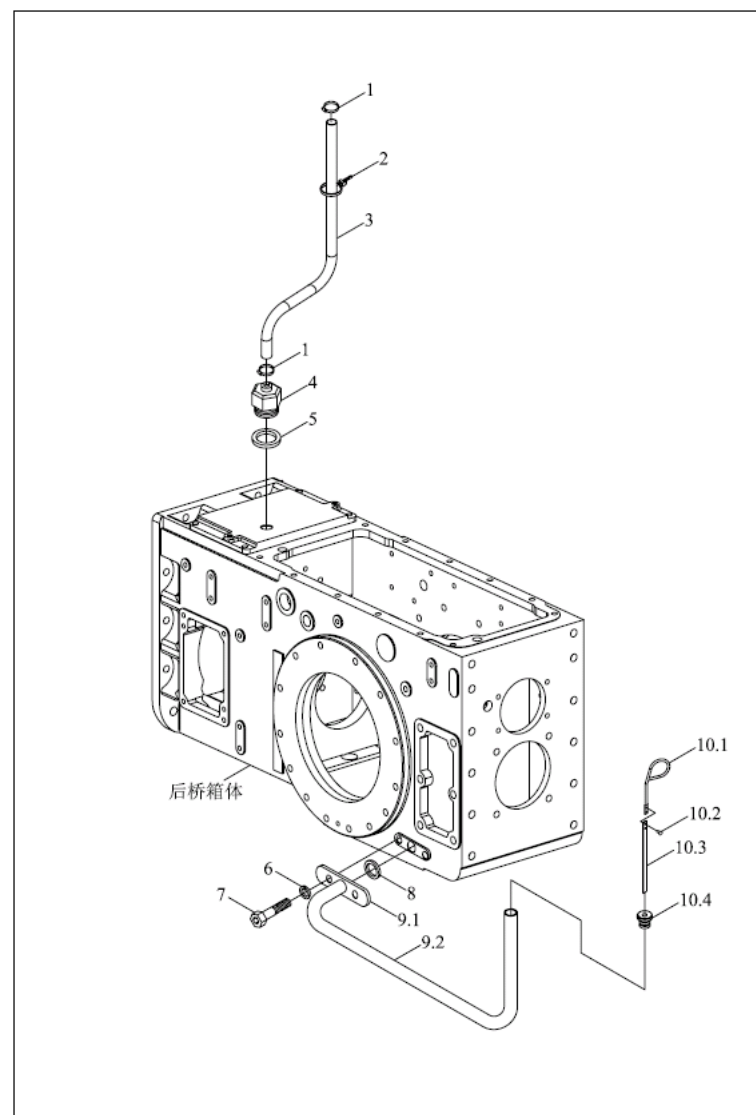

TD804A.38-5 38.5-后桥箱总成-5 REAR AXLE ASSEMBLY-5

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	Q675B12	A型蜗杆传动式软管环箍	A-TYPE WORM TRANSMISSION HOSE CLAMP	2	2011-11_
10	FT800A.38.018	油尺总成	DIPSTICK ASSEMBLY	1	2011-11_
10.1	FT800A.38.216	油尺把手	DIPSTICK HANDLE	1	2011-11_
10.2	GBT867-2X3	半圆头铆钉	RIVET	2	2011-11_
10.3	FT800A.38.217	油尺	OIL DISTICK	1	2011-11_
10.4	FT800A.38.218	橡胶座	RUBBER SEAT	1	2011-11_
2	Q674-05100	塑料紧箍带	PLASTIC FASTEN STRIP	1	2011-11_
2	Q674-05100	塑料紧箍带	PLASTIC FASTEN STRIP	1	2011-11_
3	FT800A.38.195	呼吸软管	BREATH HOSE	1	2011-11_
4	FT65.55.176	呼吸接头	BREATH JOINT	1	2011-11_
5	JBT982-12	组合密封垫圈	COMBINED SEAL GASKET	1	2011-11_
6	GBT93-8-A0P	垫圈	WASHER	2	2011-11_
7	GBT70.1-M8X25-A2L	内六角圆柱头螺钉	SCREW	2	2011-11_
8	GBT3452.1-15X2.65G	液压气动用O形橡胶密封圈	O-SEAL RING	1	2011-11_
9	FT800A.38.019	油尺管总成	DIPSTICK TUBE ASSEMBLY	1	2011-11_
9.1	FT800A.38.239	油尺管座	OIL DIPSTICK PIPE SEAT	1	2011-11_
9.1	FT800A.38.239	油尺管座	OIL DIPSTICK PIPE SEAT	1	2011-11_
9.2	FT800A.38.235	油尺管	OIL DIPSTICK PIPE	1	2011-11_
9.2	FT800A.38.235	油尺管	OIL DIPSTICK PIPE	1	2011-11_


FT800.39.002 右最终传动总成

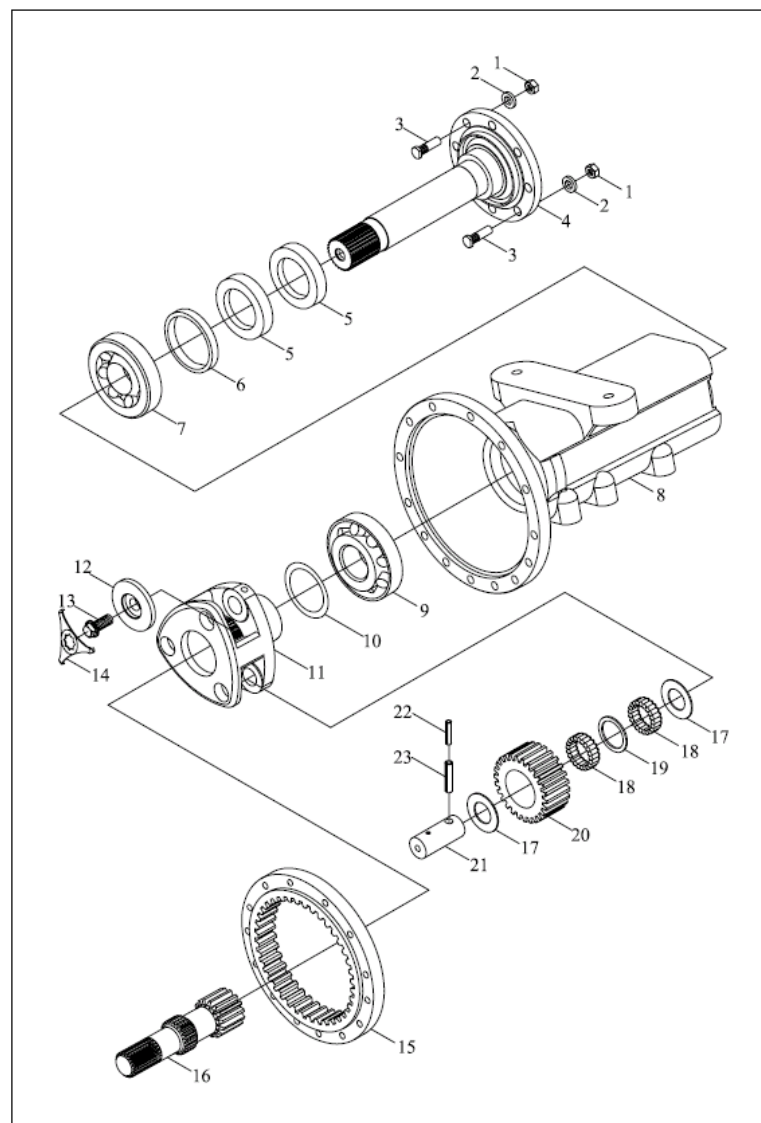


FT800.39.002 39-右最终传动总成 39-RIGHT FINAL TRANSMISSION ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT6176-M20X1.5-A3L	2型六角螺母	HEXAGON NUT, TYPE-2	8	2011-11_
10	FT800.39.117	调整垫片	ADJUSTING WASHER	999	2004-01_
10	FT800.39.117a	调整垫片	ADJUSTING WASHER	999	2011-01_
11	FT800.39.104	行星架	PLANET CARRIER	1	2011-11_
12	FT800.39.106b	行星架压板	PLANET CARRIER PRESSURE PLATE	1	2014-05_
12	FT800.39.106	行星架压板	PLANET CARRIER PRESSURE PLATE	1	2008-06_
12	FT800.39.106a	行星架压板	PLANET CARRIER PRESSURE PLATE	1	2011-01_
13	FT800.39.105	行星架固定螺栓	PLANET CARRIER FIXING BOLT	1	2004-01_
13	FT800.39.105a	行星架固定螺栓	PLANET CARRIER FIXING BOLT	1	2007-10_
14	FT800.39.112	止推垫片	THRUST WASHER	1	2004-01_
14	FT800.39.112a	止推垫片	THRUST WASHER	1	2007-10_
15	FT800.39.108	最终传动齿圈	FINAL TRANSMISSION GEAR RING	1	2011-11_
16	FT800.39.114	右半轴	RIGHT HALF SHAFT	1	2011-11_
17	FT800.39.110	行星轮滚针外隔圈	PLANET GEAR ROLL NEEDLE OUTER SPACER	6	2011-11_
18	FT800.39.118	滚针	RING NEEDLE	126	2011-11_
19	FT800.39.109	滚针内隔圈		3	2011-11_
2	FT800.39.130	垫圈	NEEDLE INNER SPACER RING	8	2011-11_
20	FT800.39.107	行星齿轮	WASHER	3	2011-11_
21	FT800.39.111	行星齿轮轴	PLANETARY GEAR	3	2011-11_
22	GBT879.1-8X32	弹性圆柱销	PLANET GEAR SHAFT PIN	3	2011-11_
23	GBT879.1-12X32	弹性圆柱销		3	2011-11_
3	FT800.39.101d	驱动轮固定螺栓	PIN	8	2011-11_
4	FT800.39.012	驱动轴焊合件	DRIVING WHEEL FIXING BOLT	1	2011-11_
5	GBT9877.1-FB100X130X12D	内包骨架旋转轴唇形密封	DRIVING SHAFT WELDMENT	2	2007-07_
6	FT800.39.120	油封隔圈	O RING	1	2011-11_

FT800.39.002 右最终传动总成

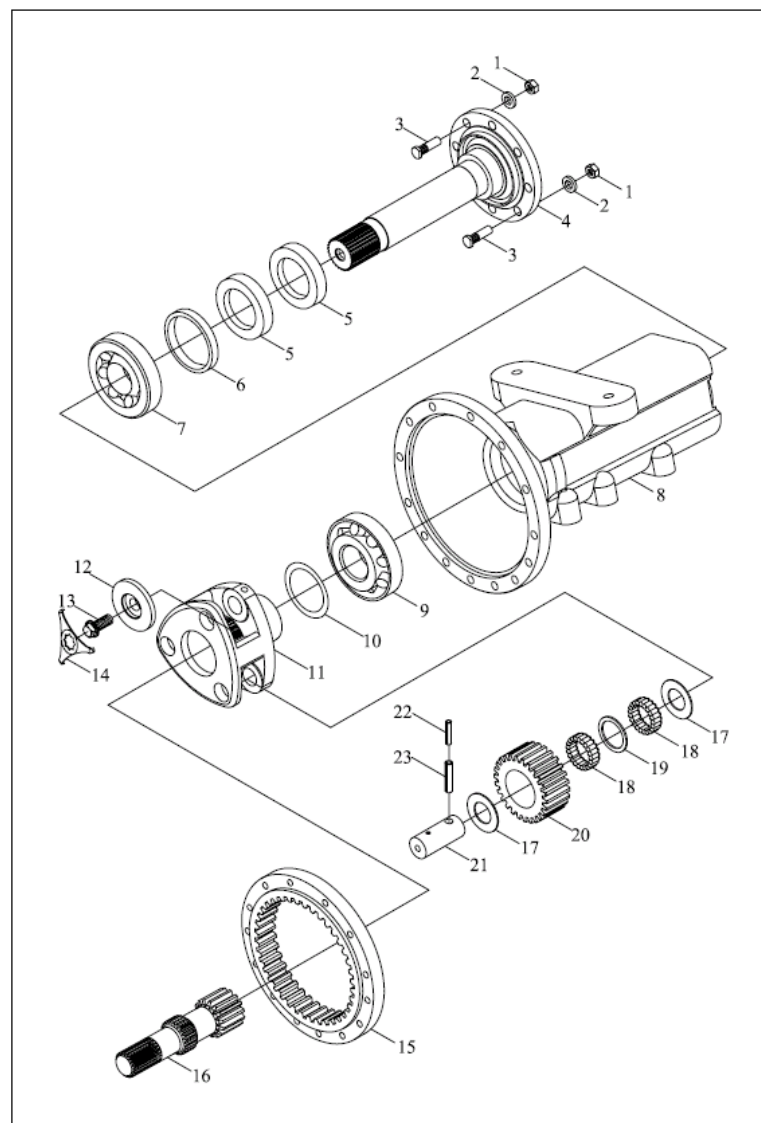


FT800.39.001 左最终传动总成

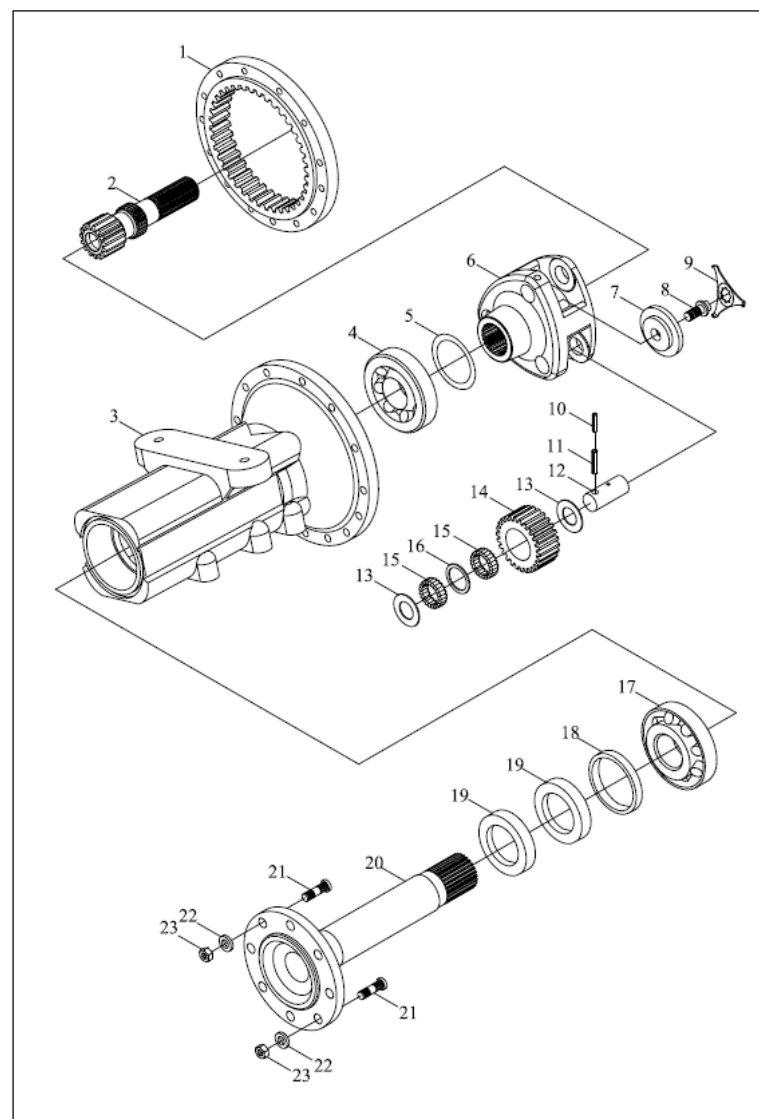

FT800.39.001 39-左最终传动总成 39-LEFT FINAL TRANSMISSION ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT800.39.108	最终传动齿圈	FINAL TRANSMISSION GEAR RING	1	2011-11_
10	GBT879.1-8X32	弹性圆柱销	PIN	3	2011-11_
11	GBT879.1-12X32	弹性圆柱销	PIN	3	2011-11_
12	FT800.39.111	行星齿轮轴	PLANET GEAR SHAFT	3	2011-11_
13	FT800.39.110	行星轮滚针外隔圈	PLANET GEAR ROLL NEEDLE OUTER SPACER RING	6	2011-11_
14	FT800.39.107	行星齿轮		3	2011-11_
15	FT800.39.118	滚针	PLANETARY GEAR	126	2011-11_
16	FT800.39.109	滚针内隔圈	NEEDLE	3	2011-11_
17	GBT297-30215	圆锥滚子轴承	NEEDLE INNER SPACER RING	1	2011-11_
18	FT800.39.120	油封隔圈	BEARING	1	2011-11_
			OIL SEAL SPACER RING		
19	GBT9877.1-FB100X130X12D	内包骨架旋转轴唇形密封		2	2011-11_
2	FT800.39.113	左半轴	O RING	1	2011-11_
20	FT800.39.012	驱动轴焊合件	LEFT HALF SHAFT	1	2011-11_
21	FT800.39.101c	驱动轮固定螺栓	DRIVING SHAFT WELDMENT	8	2011-11_
22	FT800.39.130	垫圈	DRIVING WHEEL FIXING BOLT WASHER	8	2011-11_
23	GBT6176-M20X1.5-LH-A3L	2型六角螺母		8	2011-11_
3	FT800.39.103a	半轴壳	HEXAGON NUT, TYPE-2	1	2011-11_
4	GBT297-30214	圆锥滚子轴承	HALF SHAFT HOUSING	1	2011-11_
4	FT800.39.106a	行星架压板	BEARING	1	2011-01_
5	FT800.39.117	调整垫片	PLANET CARRIER PRESSURE PLATE ADJUSTING WASHER	999	2011-11_
5	FT800.39.117a	调整垫片		999	2011-01_
6	FT800.39.104	行星架	ADJUSTING WASHER	1	2011-11_
7	FT800.39.106	行星架压板	PLANET CARRIER	1	2008-06_
7	FT800.39.106b	行星架压板	PLANET CARRIER PRESSURE PLATE	1	2014-05_
8	FT800.39.105a	行星架固定螺栓	PLANET CARRIER PRESSURE PLATE	1	2007-10_


FT800.39.001 左最终传动总成

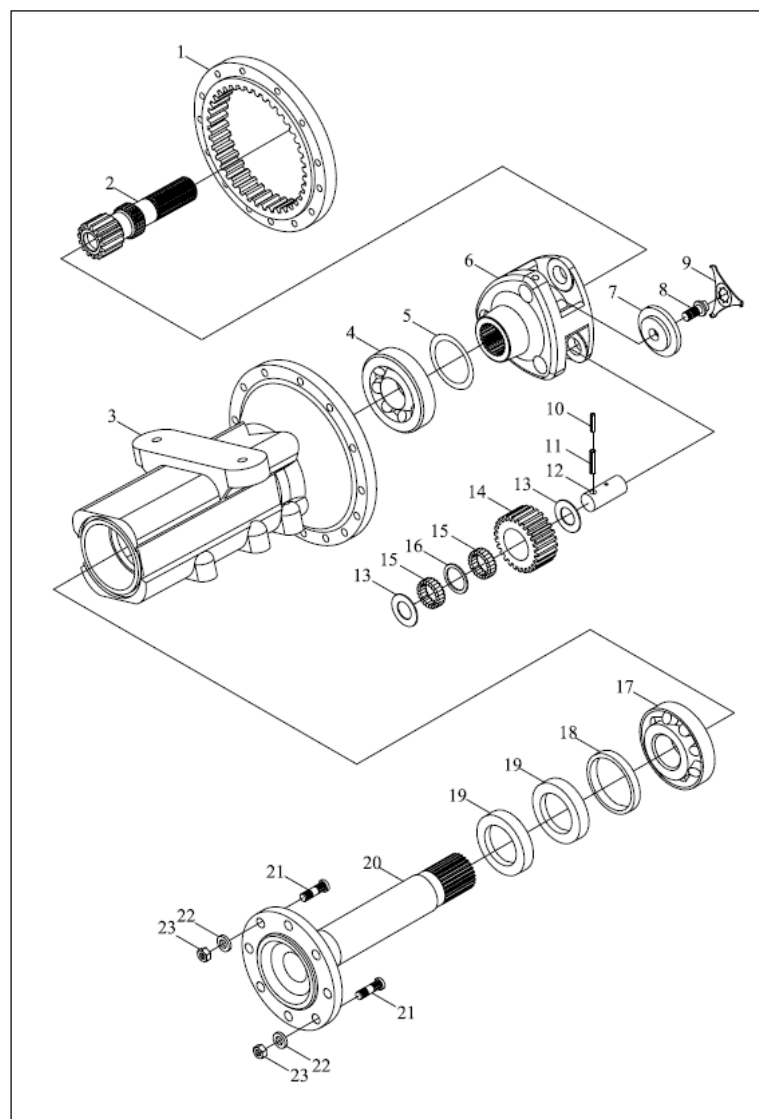

FT800.39.001 39-左最终传动总成(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
8	FT800.39.105	行星架固定螺栓	PLANET CARRIER FIXING BOLT	1	2004-01_
9	FT800.39.112	止推垫片	THRUST WASHER	1	2004-01_
9	FT800.39.112a	止推垫片	THRUST WASHER	1	2007-10_


FT804A.40A.001 全液压转向总成-1

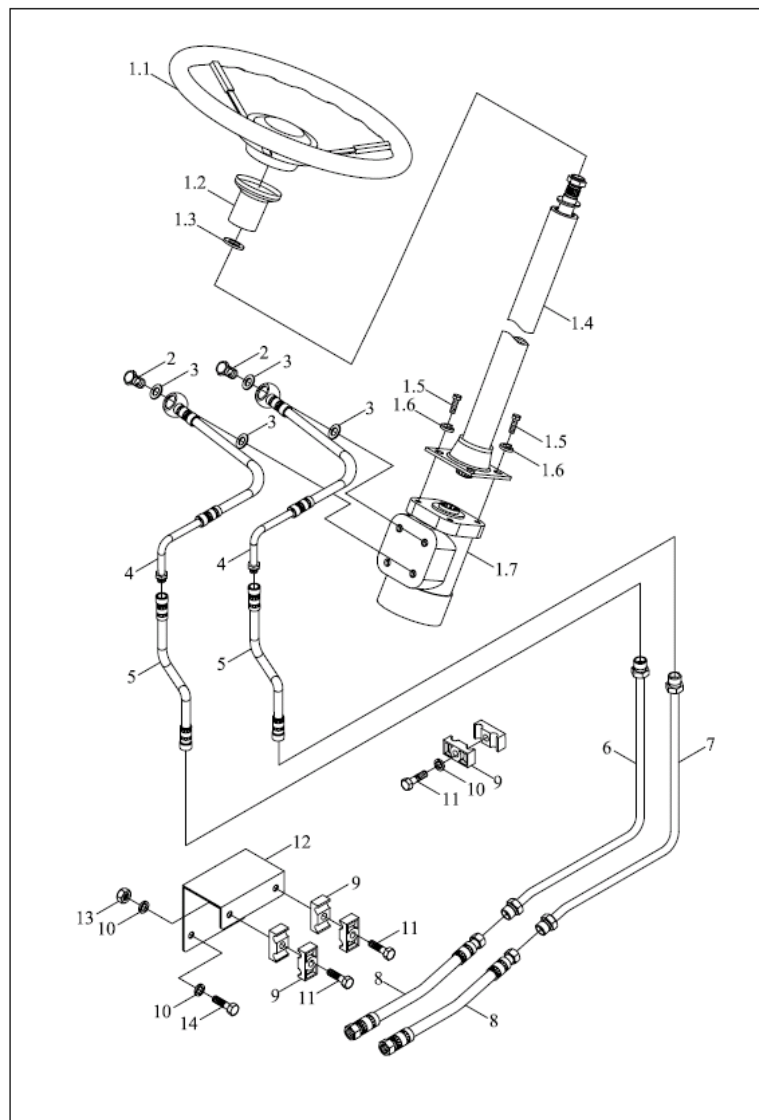

FT804A.40A.001-1 40.1-全液压转向总成-1 40FULL HYDRAULIC STEERING ASSEMBLY-1

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT804A.40L.011	转向器及方向盘总成	REDIRECTOR AND STEERING WHEEL ASSEMBLY	1	2011-11_
1.1	FT800A.40L.050	转向盘总成	STEERING WHEEL ASSEMBLY	1	2011-11_
1.2	FT650.40.014	喇叭电刷座总成	HORN BRUSH SEAT ASSEMBLY	1	2011-11_
1.3	GBT97.1-16-AOP	垫圈	WASHER	1	
1.4	FT800A.40L.034	转向管柱总成	STEERING PIPE COLUMN ASSEMBLY	1	2011-11_
1.5	GBT5783-M10×25-8.8-A3L	六角头螺栓	BOLT	4	
1.6	GBT93-10-AOP	标准型弹簧垫圈	WASHER	4	2011-11_
1.7	FT804.40L.032	转向器及阀块总成	REDIRECTOR AND VALVE BLOCK ASSEMBLY	1	2011-11_
10	GBT93-8-AOP	弹簧垫圈	SPRING WASHER	8	2011-11_
11	GBT5781-M8X45-A2L	六角头螺栓	BOLT	3	2011-11_
12	FT800A.40.103	固定板	FIXED PLATE	1	2011-11_
13	GBT6170-M8-A2L	螺母	NUT	3	2011-11_
14	GBT5781-M8X16-A2L	六角头螺栓	BOLT	2	2011-11_
2	FT650.40.102	空心螺栓M20X1.5	HOLLOW BOLT M20X1.5	2	2011-11_
3	JBT982-20	组合密封垫圈	COMBINED SEAL GASKET	6	2011-11_
4	FT800A.40L.015a	高压软管总成3	HIGH PRESSURE HOSE ASSEMBLY 3	2	2010-03_
4	FT800A.40L.015	高压软管总成3	HIGH PRESSURE HOSE ASSEMBLY 3	2	
4.5	TD800.402A.1	转向器出油胶管总成	OIL OUTLET HOSE ASSEMBLY OF REDIRECTOR	2	2011-09_
5	FT800A.40L.018a	高压输油胶管总成	HIGH PRESSURE OIL HOSE ASSEMBLY	2	2010-03_
5	FT800A.40L.018	高压输油胶管总成	HIGH PRESSURE OIL HOSE ASSEMBLY	2	
6	FT800A.40.019	输油左硬管总成	LEFT OIL PIPE ASSEMBLY	1	2011-11_
7	FT800A.40.024	输油右管总成	OIL CONVEYING RIGHT PIPE ASSEMBLY	1	2011-11_
8	FT650.40.029	油缸右软管总成	OIL CYLINDER RIGHT HOSE ASSEMBLY	2	2004-01_
8	FT804A.40.010	油缸右软管总成	OIL CYLINDER RIGHT HOSE ASSEMBLY	2	2010-03_
8	FT650.40.029a	油缸右软管总成	OIL CYLINDER RIGHT HOSE ASSEMBLY	2	2008-08_


FT804A.40A.001 全液压转向总成-1

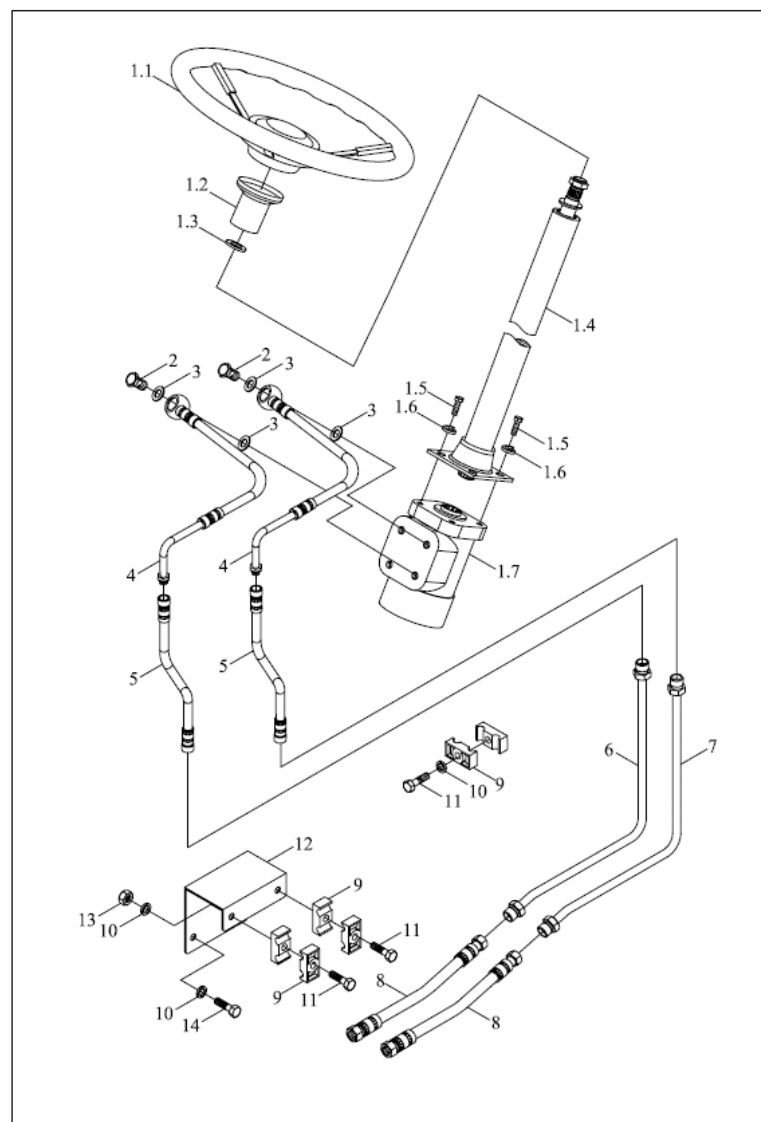

FT804A.40A.001-1 40.1-全液压转向总成-1(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
9	FT354.40C.121	双管夹	DOUBLE PIPE CLAMP	6	2011-11_


FT804A.40A.001 全液压转向总成-2

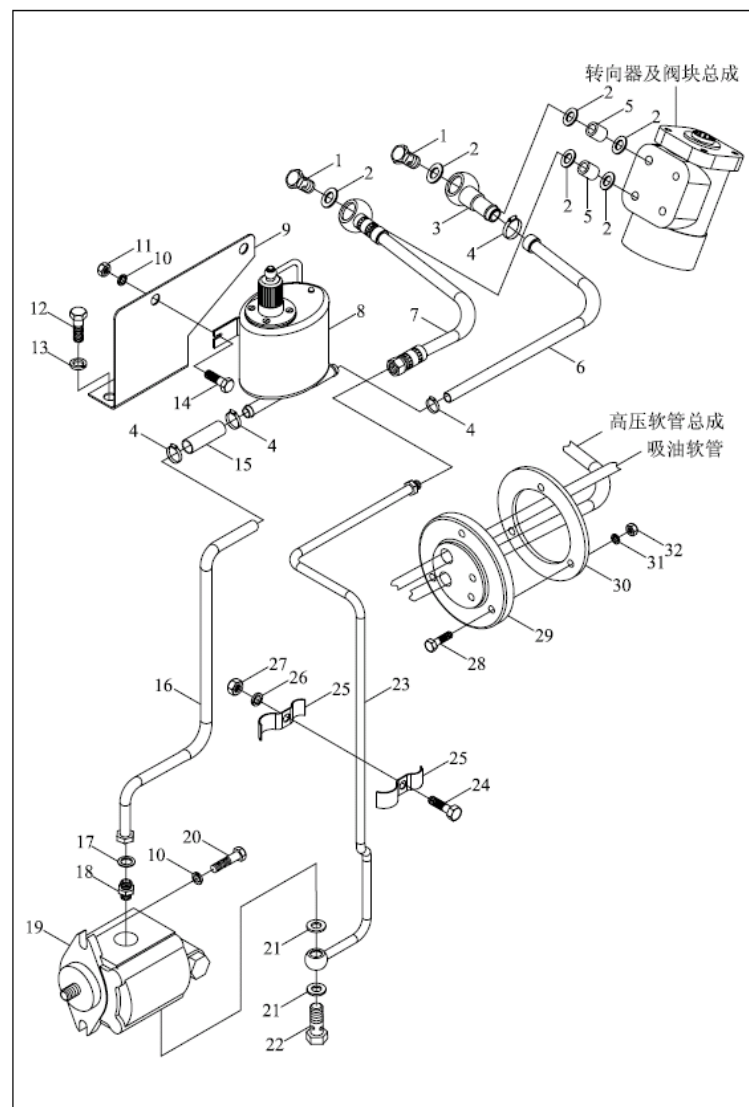

FT804A.40A.001-2 40.2-全液压转向总成-2 40FULL HYDRAULIC STEERING ASSEMBLY-2

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT800.40L.110	空心短螺栓	HOLLOW SHORT BOLT	2	2011-11_
10	GBT93-10-AOP	标准型弹簧垫圈	WASHER	4	2011-11_
11	GBT6170-M10-A3L	螺母	NUT	2	2011-11_
12	GBT5781-M12X30-A3L	六角头螺栓	BOLT	2	2011-11_
13	GBT93-12-AOP	垫圈	WASHER	2	2011-11_
14	GBT5781-M10X20-A3L	六角头螺栓	BOLT	2	2011-11_
15	FT800A.40L.101	进油软管	OIL INLET HOSE	1	2011-11_
16	FT800A.40A.023	油泵吸油钢管总成	OIL PUMP INLET STEEL PIPE WELDMENT	1	2011-11_
17	JBT982-27	组合密封垫圈	COMBINED SEAL GASKET	1	2011-11_
17	JBT982-27	组合密封垫圈	COMBINED SEAL GASKET	1	2011-11_
18	FT700.40G.102	卡套式端直通接头体	STRAIGHT PIPE JOINT BODY	1	2011-11_
19	FT800A.40A.028	转向泵总成	STEERING PUMP ASSEMBLY	1	2011-11_
2	JBT982-20	组合密封垫圈	COMBINED SEAL GASKET	6	2011-11_
20	GBT5781-M10X25-A3L	六角头螺栓	BOLT	2	2011-11_
21	JBT982-18	组合密封垫圈	COMBINED SEAL GASKET	2	2011-11_
21	JBT982-18	组合密封垫圈	COMBINED SEAL GASKET	2	2011-11_
22	FT700.40G.109	空心螺栓	HOLLOW BOLT	1	2011-11_
23	FT800A.40A.026	油泵输油钢管总成	OIL PUMP STEEL PIPE ASSEMBLY	1	2011-11_
24	GBT5781-M6X30-A2L	六角头螺栓	BOLT	3	
25	FT800.40L.108	短油管夹	SHORT OIL PIPE CLAMP	4	2011-11_
26	GBT93-6-AOP	垫圈	WASHER	3	
27	GBT6170-M6-A2L	螺母	NUT	3	2011-11_
28	GBT5781-M8X30-A2L	六角头螺栓	BOLT	3	2011-11_
29	FT800A.40L.106	减震块	ABSORBER	1	2011-11_
3	FT800A.40L.111	出油钢管	OIL OUTLET STEEL PIPE	1	2011-11_


FT804A.40A.001 全液压转向总成-2

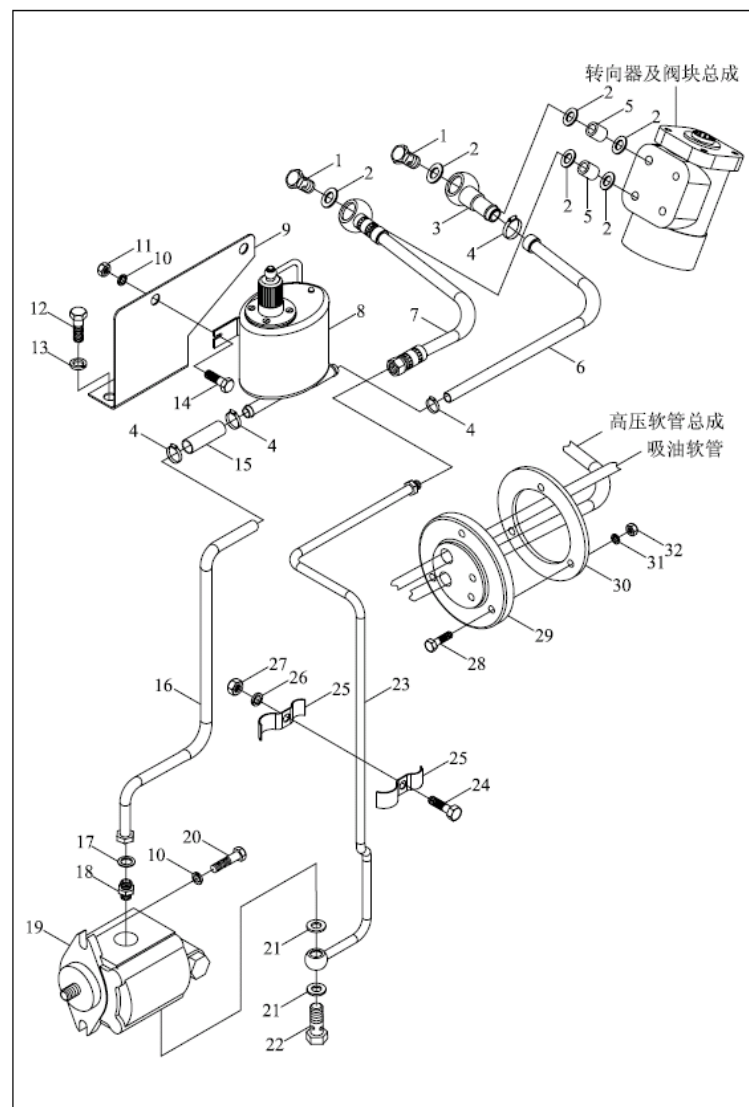

FT804A.40A.001-2 40.2-全液压转向总成-2(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
30	FT800A.40L.107	垫板	PAD BOARD	1	2011-11_
31	GBT93-8-A2L	标准型弹簧垫圈	WASHER	3	
32	GBT6170-M8-A2L	螺母	NUT	3	2011-11_
4	ZBJ15001-d32	喉箍	HOOP	4	2011-11_
5	FT800.40.109	短接管	SHORT CONNECTING PIPE	2	2011-11_
6	FT800A.40L.102	吸油软管	OIL SUCTION HOSE	1	2011-11_
7	FT800A.40L.028	高压软管总成	HIGH PRESSURE HOSE ASSEMBLY	1	2011-11_
8	FT800A.40L.020	转向油箱及呼吸器总成	STEERING OIL TANK AND BREATH ASSEMBLY	1	2011-11_
9	FT800A.40A.017	转向油箱支架总成	STEERING OIL TANK BRACKET ASSEMBLY	1	2011-11_


TD800.411C 动力输出轴总成

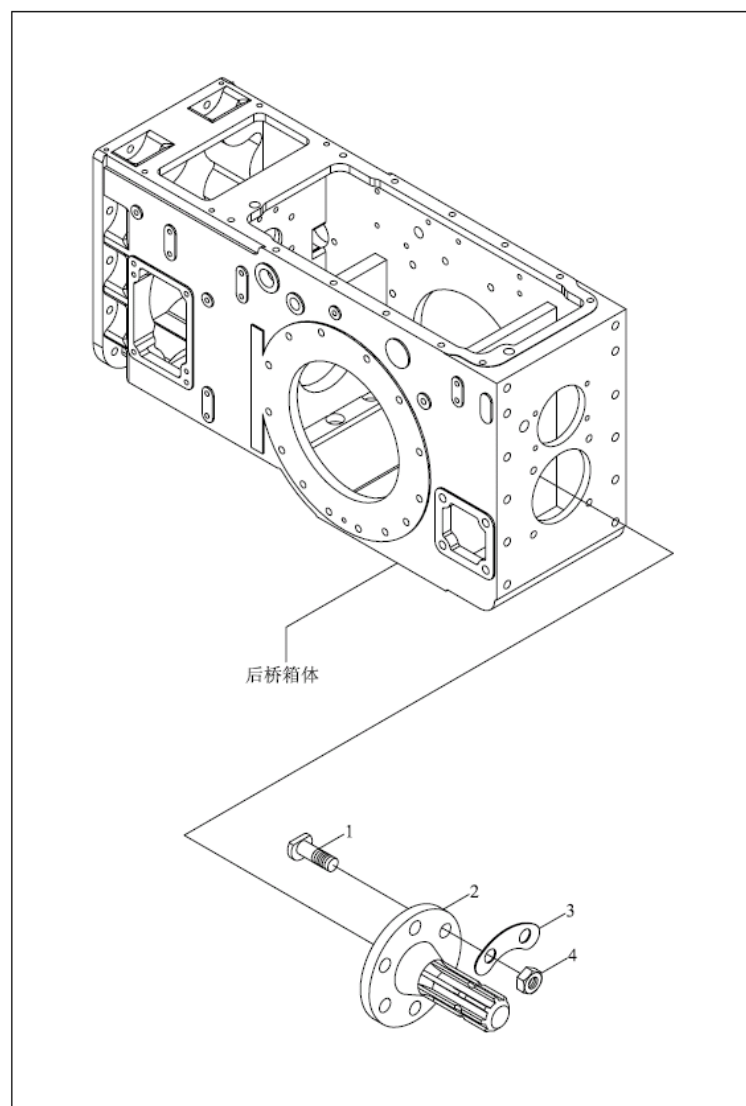

TD800.411C 41.1-动力输出轴总成 41.1-PTO SHAFT ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT800A.41.143	动力输出轴连接螺栓	PTO SHAFT CONNECTING BOLT	6	2011-11_
2	FT800A.41C.107	I 35型动力输出轴	TYPE-I 35 PTO SHAFT	1	2011-11_
3	FT800A.41.144	锁片	LOCK SHIM	3	2011-11_
4	GBT6176-M14X1.5-A3L	2型六角螺母	HEXAGON NUT, TYPE-2	6	2011-11_


TD800.412A 动力输出齿轮总成-1

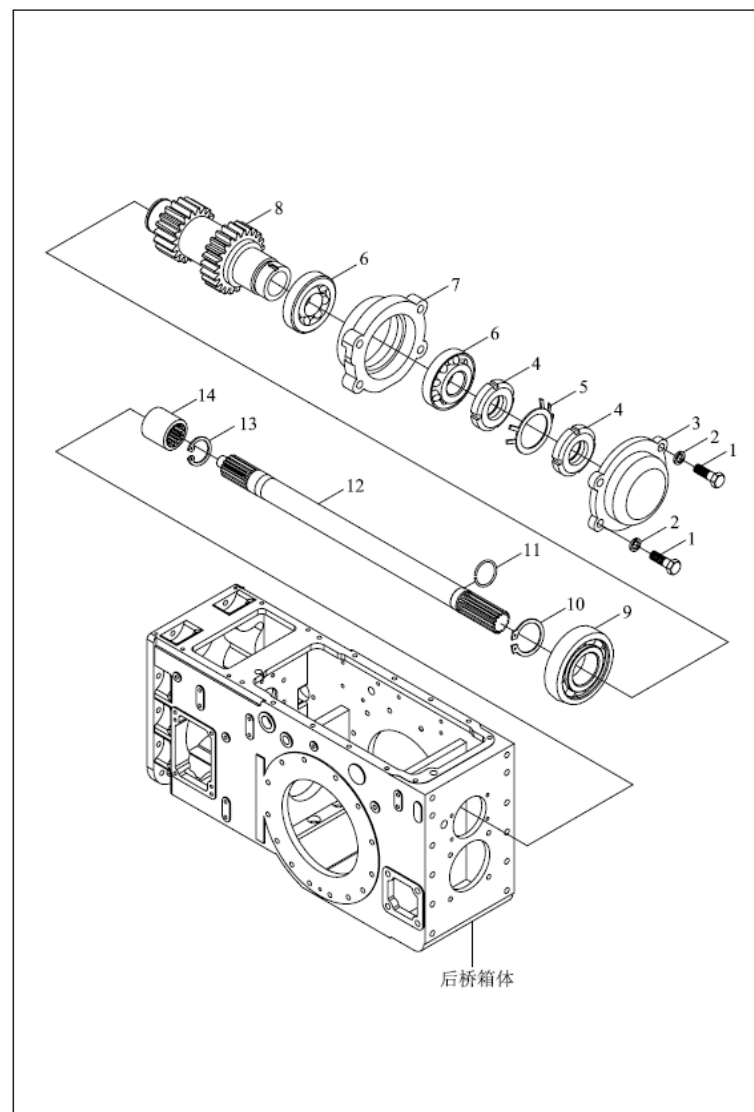

TD800.412A-1 41.2.1-动力输出齿轮总成-1 PTO GEAR ASSEMBLY-1

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT5783-M10X40-A3L	螺栓	BOLT	4	2008-06_
1	GBT5783-M10X45-8.8-A3L	六角头螺栓	BOLT	4	2010-12_
10	GBT894.1-45	挡圈	RETAINER RING	1	2011-11_
11	GBT895.2-30	挡圈	RETAINER RING	1	2011-11_
12	FT800.41.105	动力输出传动轴	PTO TRANSMISSION SHAFT	1	2011-11_
13	GBT893.1-28	挡圈	RETAINER RING	1	2011-11_
14	FT800.37.106	动力输出轴连接套	PTO SHAFT CONNECTING SLEEVE	1	2011-11_
2	GBT93-10-A0P	标准型弹簧垫圈	WASHER	4	2011-11_
3	FT800A.41.117	双联齿轮轴承座压盖	DUAL GEAR BEARING SEAT PRESS COVER	1	2011-11_
4	GBT812-M48X1.5-A3L	圆螺母	ROUND NUT	2	2004-01_
5	GBT858-48	圆螺母用止动垫圈	THRUST RING	1	2011-11_
6	GBT297-30210	圆锥滚子轴承	BEARING	2	2011-11_
7	FT800A.41.116	动力输出双联齿轮后轴承座	REAR BEARING SEAT OF PTO DUAL GEAR	1	2011-11_
8	FT800A.41A.101	动力输出低高档主动双联齿轮	PTO LOW AND HIGH GEAR MAIN DRIVING	1	2011-11_
9	GBT276-6309	深沟球轴承	TWIN GEAR BEARING	1	2011-11_


TD800.412A 动力输出齿轮总成-2

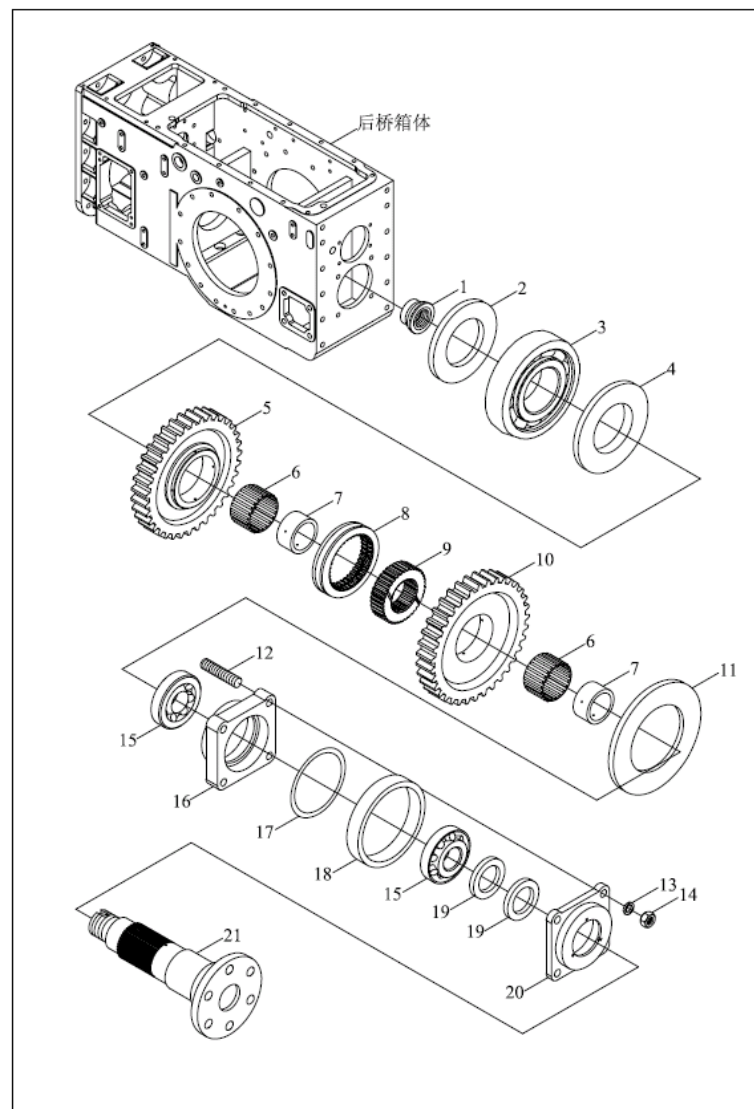

TD800.412A-2 41.2.2-动力输出齿轮总成-2 PTO GEAR ASSEMBLY-2

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT800A.41.139	动力输出传动轴锁紧螺母	PTO TRANSMISSION SHAFT LOCKNUT	1	2011-11_
10	FT800A.41.102	动力输出高档被动齿轮	PTO HIGH GEAR DRIVEN GEAR	1	2011-11_
11	FT800A.41.142	动力输出传动轴后挡圈	REAR CIRCLIP OF PTO TRANSMISSION SHAFT	1	2011-11_
12	GBT899-AM14-M14X1.5X65-A3L	双头螺柱	8.8-A3L STUD	4	2011-11_
12	GBT899-AM14-M14X1.5X65-A3L	双头螺柱	8.8-A3L STUD	4	2011-11_
13	GBT93-14-A0P	弹簧垫圈	SPRING WASHER	4	2011-11_
13	GBT93-14-A0P	弹簧垫圈	SPRING WASHER	4	2011-11_
14	GBT6176-M14X1.5-A3L	2型六角螺母	HEXAGON NUT, TYPE-2	4	2011-11_
15	GBT297-30212	圆锥滚子轴承	BEARING	2	2011-11_
16	FT800A.41.124	动力输出传动轴后轴承座	REAR BEARING SEAT OF PTO TRANSMISSION SHAFT	1	2011-11_
17	FT800A.41.152	调整垫片		999	2011-11_
18	FT800A.41.153	挡圈	ADJUSTING WASHER	1	2004-01_
19	GBT9877.1-FB70X90X10D	内包骨架旋转轴唇形密封	RETAINER RING	2	2011-11_
2	FT800A.41.140	动力输出传动轴前挡圈	O RING	1	2011-11_
20	FT800A.41.125	动力输出传动轴后油封座	FRONT CIRCLIP OF PTO TRANSMISSION SHAFT REAR OIL SEAL SEAT OF PTO TRANSMISSION SHAFT	1	2011-11_
21	FT800A.41.108	动力输出传动轴	PTO TRANSMISSION SHAFT	1	2011-11_
3	GBT276-6210	深沟球轴承		1	2011-11_
4	FT800A.41.141	动力输出传动轴中间挡圈	PTO TRANSMISSION SHAFT	1	2011-11_
4	FT800A.41.141	动力输出传动轴中间挡圈	BEARING	1	2011-11_
5	FT800A.41A.104	动力输出低档被动齿轮	MIDDLE CIRCLIP OF PTO TRANSMISSION SHAFT MIDDLE CIRCLIP OF PTO TRANSMISSION SHAFT	1	2011-11_
6	QSFZB019-K68X78X34	滚动轴承	PTO LOW GEAR DRIVEN GEAR	2	2011-11_
7	FT800A.41.113	动力输出高档齿轮滑套		2	2011-11_
8	FT800.37.118	Ⅲ-Ⅳ档啮合套	ROLLING BEARING	1	2011-11_
9	FT800.37.119	Ⅲ-Ⅳ档啮合齿座	PTO HIGH GEAR SLIDING SLEEVE Ⅲ-Ⅳ SHIFT COLLAR	1	2011-11_


TD800.413 动力输出操纵机构总成

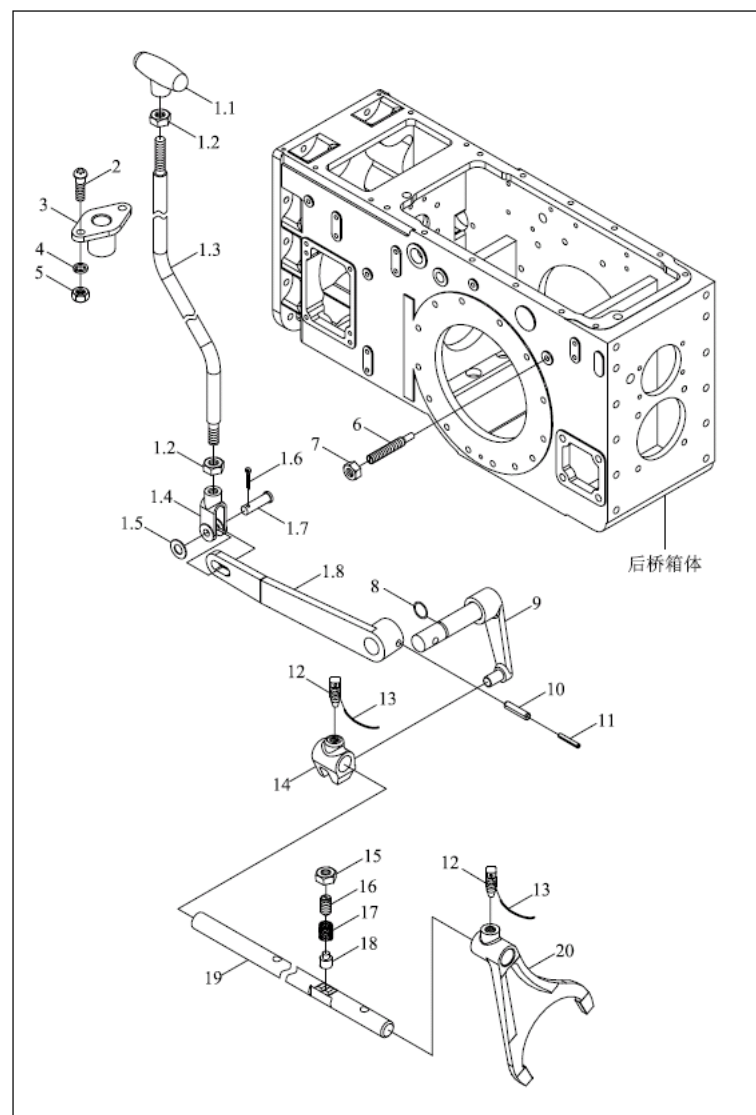

TD800.413 41.3-动力输出操纵机构总成 41.3-PTO CONTROL MECHANISM ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT800A.41.147	动力输出操纵杆	PTO CONTROL ROD	1	2011-11_
1.1	FT800A.41.013	动力输出操纵杆总成	PTO CONTROL ROD ASSEMBLY	1	2011-11_
1.2	GBT6170-M10-A2L	螺母	NUT	2	2004-01_
1.3	FT65.38.051	拉压手柄	PULL/PRESS HANDLE	1	2011-11_
1.4	FT804.42.150	拉杆前叉	PULL ROD FRONT FORK	1	2011-11_
1.5	GBT97.1-8-A0P	平垫圈	WASHER	1	2004-01_
1.6	GBT91-3X20-A0P	开口销	PIN	1	2013-07_
1.7	GBT882-B8X26-A2L	销轴	PIN	1	2004-01_
1.8	FT800A.41.146	动力输出摇臂	PTO ROCKER	1	2013-07_
10	GBT879.1-8X35	弹性圆柱销	PIN	1	
11	GBT879.1-5X35	弹性圆柱销	PIN	1	2011-11_
12	FT800.37.194	紧定螺钉	LOCKING SCREW	2	2011-11_
13	FT800A.41.241	热镀锌钢丝	ZINC-COATED STEEL WIRE	2	2011-11_
14	FT800.41.240	拨头	FORK HEAD	1	2011-11_
15	GBT6172.1-M16-A3L	螺母	NUT	1	2011-11_
16	TD800.41-03	锥端紧定螺钉	TAPER LOCKING SCREW	1	2011-11_
17	FT800.41.246	锁定销弹簧	LOCKING PIN SPRING	1	2011-11_
17	FT800.41.246	锁定销弹簧	LOCKING PIN SPRING	1	2011-11_
18	FT800.41.245	锁定销	LOCKING PIN	1	2011-11_
19	FT800.41.106a	拨插轴	FORK SHAFT	1	2010-05_
19	FT800.41.106	拨叉轴	FORK SHAFT	1	
2	GBT818-M6X16-A2L	十字槽盘头螺钉	SCREW	2	2004-01_
20	FT800A.41.114	动力输出高低档拨叉	PTO HIGH AND LOW GEAR FORK	1	2011-11_
3	FT800A.41.173	密封衬座	SEAL LINER SEAT	1	2011-11_
4	GBT93-6-A0P	弹簧垫圈	SPRING WASHER	2	2004-01_


TD800.413 动力输出操纵机构总成

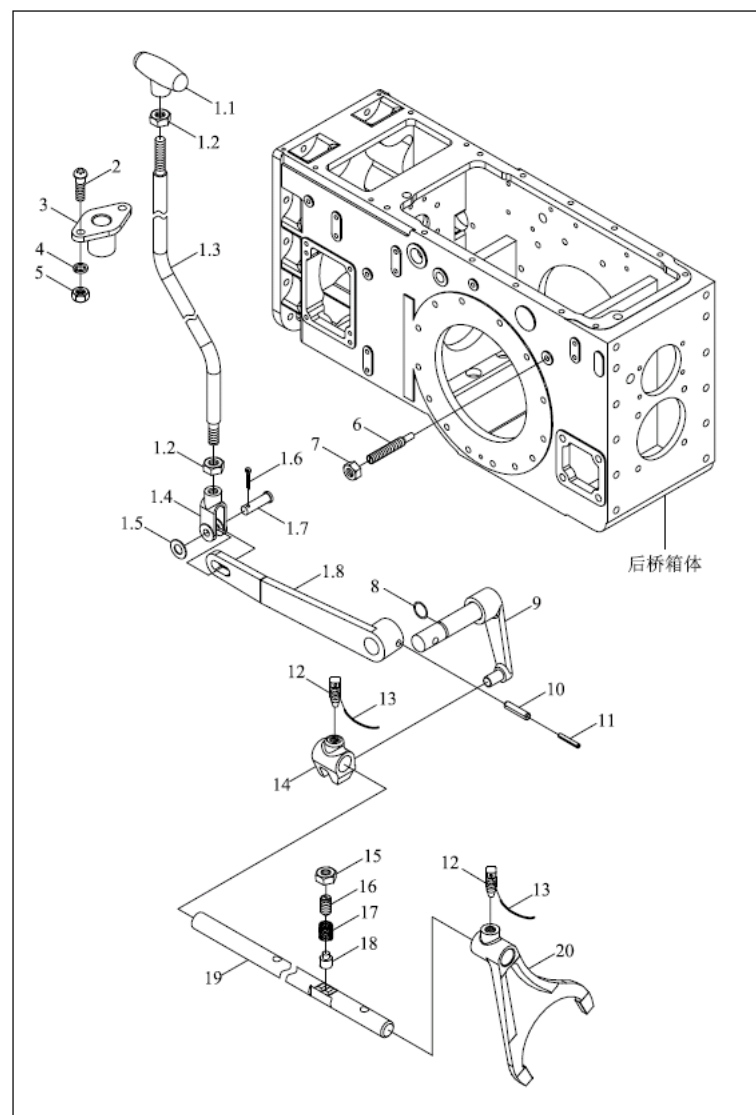

TD800.413 41.3-动力输出操纵机构总成(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
5	GBT6170-M6-A2L	螺母	NUT	2	2004-01_
6	TD800.41-04	紧定螺钉	LOCKING SCREW	1	2011-11_
7	GBT6170-M12-A3L	螺母	NUT	1	
8	GBT3452.1-17X1.8G	液压气动用O形橡胶密封圈	O-SEAL RING	1	
9	FT800.41.011	动力输出操纵内摇臂总成	PTO CONTROL INNER ROCKER ASSEMBLY	1	2011-11_


TD800.414B 动力输出防护罩总成

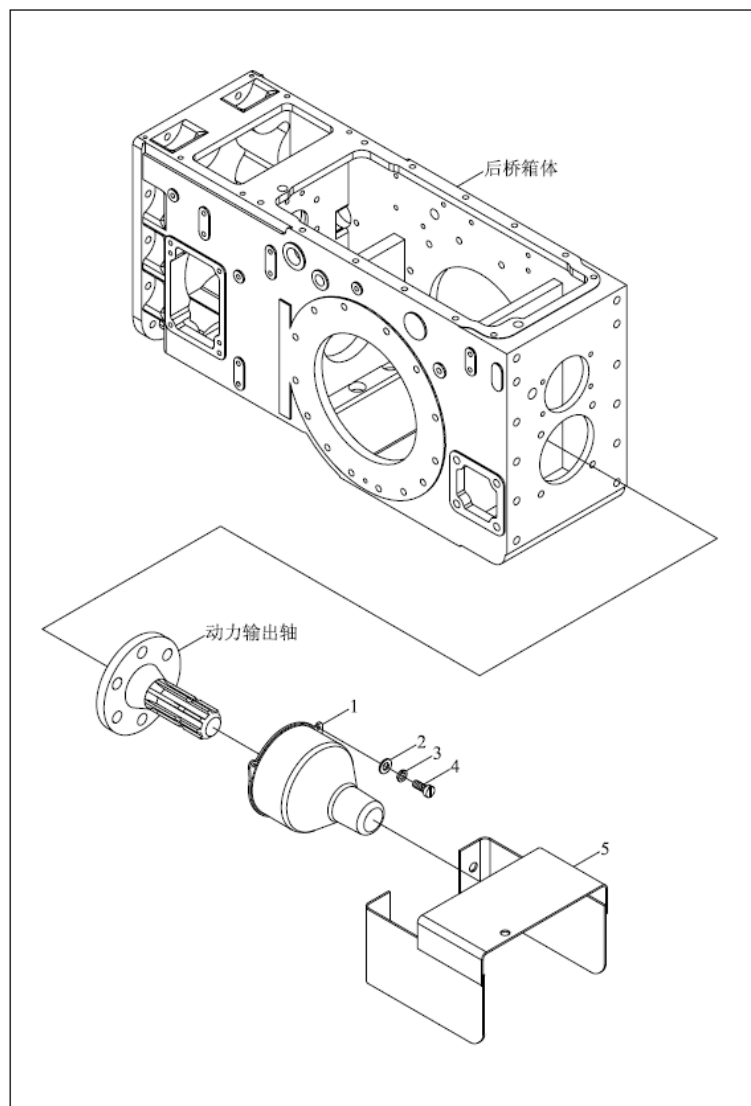

TD800.414B 41.4-动力输出防护罩总成 41.4-PTO BONNET INSTALLATION ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TD800.411A-02	动力输出轴头护罩	PTO SHAFT HOOD SHIELD	1	2011-11_
2	GBT97.1-5-A0P	垫圈	WASHER	2	2011-11_
3	GBT93-5-A0P	标准型弹簧垫圈	WASHER	2	2011-11_
4	GBT65-M5X12-A2L	开槽圆柱头螺钉	SCREW	2	2011-11_
5	FT800A.41.016	防护罩焊合	SHIELD WELDMENT	1	2011-11_


TD904.421B 分动箱总成-1

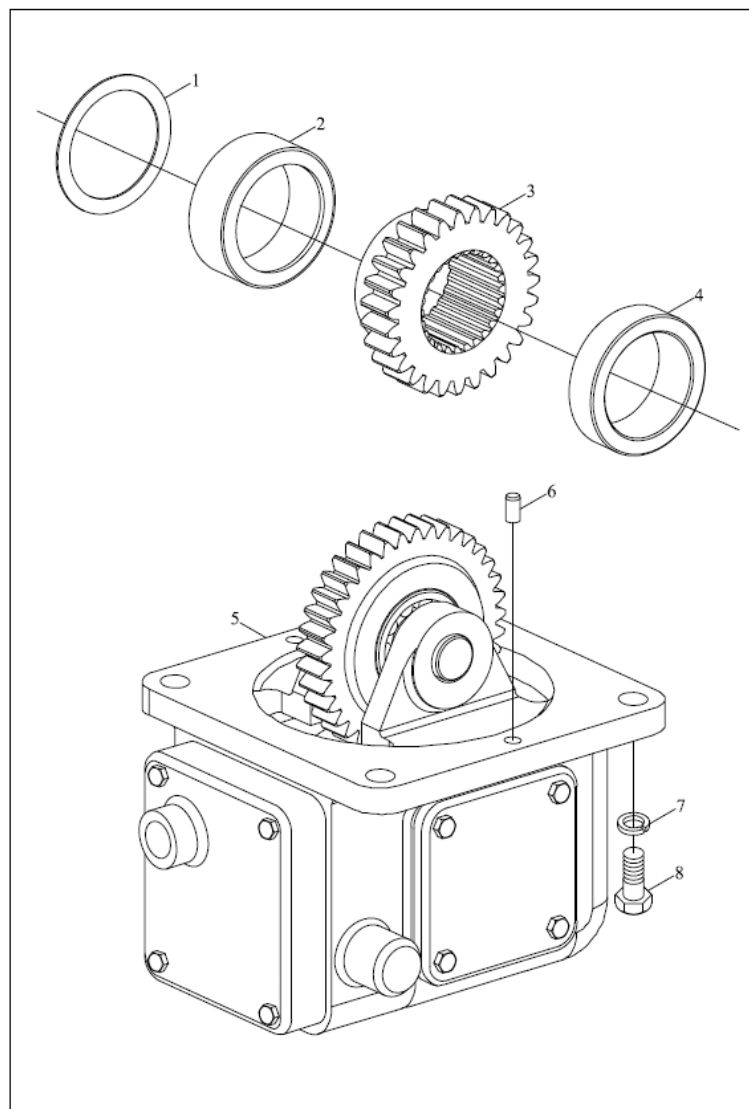

TD904.421B-1 42.1.1-分动箱总成-1 TRANSFER CASE ASSEMBLY-1

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT804.42.109	调整垫片	ADJUSTING WASHER	1	2011-11_
2	FT804.42.101	隔套	SPACER BUSH	1	2011-11_
3	FT804.42.102a	主动齿轮	DRIVING GEAR	1	2011-11_
4	FT804.42.111	隔套	SPACER BUSH	1	2011-11_
5	TD904.421A.1	分动箱箱体总成	TRANSFER CASE HOUSING ASSEMBLY	1	2011-11_
6	GBT119.1-8h8X16-A0P	圆柱销	PIN	2	2011-11_
7	GBT93-14-A0P	弹簧垫圈	SPRING WASHER	4	2011-11_
7	GBT93-14-A0P	弹簧垫圈	SPRING WASHER	4	2011-11_
8	GBT5781-M14X35-A3L	六角头螺栓	BOLT	4	2011-11_

TD904.421B 分动箱总成-2

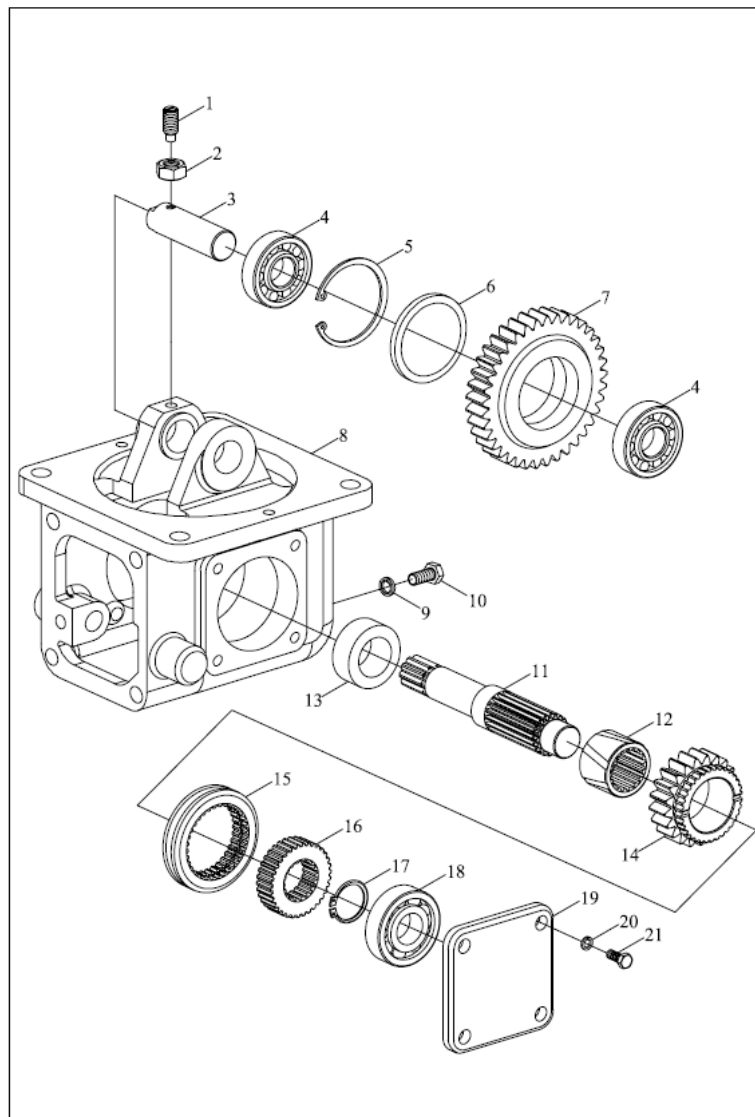


TD904.421B-2 42.1.2-分动箱总成-2 TRANSFER CASE ASSEMBLY-2

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
0	TD904.421A.1	分动箱箱体总成	TRANSFER CASE HOUSING ASSEMBLY	1	2011-11_
1	GB/T75-M10X25-A3L	开槽长圆柱端紧定螺钉	SCREW	1	2011-11_
10	FT804.42.110	螺堵	SCREW PLUG	1	2011-11_
11	FT804.42.118b	分动箱齿轮轴	TRANSFER CASE GEAR SHAFT	1	2008-12_
11	FT804.42.118b	分动箱齿轮轴	TRANSFER CASE GEAR SHAFT	1	2008-12_
11	FT804.42.118a	分动箱齿轮轴	TRANSFER CASE GEAR SHAFT	1	2004-01_
12	FT804.42.117c	齿轮衬套	GEAR BUSH	1	2011-11_
13	FT804.42.119a	隔套	SPACER BUSH	1	2011-11_
14	FT804.42.116a	被动齿轮	DRIVEN GEAR	1	2011-11_
15	FT804.42.114	啮合套	SHIFT COLLAR	1	2011-11_
16	FT804.42.115	啮合齿座	MESH GEAR SEAT	1	2011-11_
17	GB/T894.1-38	轴用弹性挡圈	SNAP RING	1	2011-11_
18	GB/T276-6306	深沟球轴承	BEARING	1	2011-11_
19	FT804.42.112	后盖	COVER REAR	1	2011-11_
2	GB/T6170-M10	螺母M10	NUT M10	1	2011-11_
20	GB/T93-10-AOP	标准型弹簧垫圈	WASHER	4	2011-11_
21	GB/T5781-M10X25-A3L	六角头螺栓	BOLT	4	2011-11_
3	FT804.42.104a	中间齿轮轴	MIDDLE GEAR SHAFT	1	2011-11_
3	FT804.42.104a	中间齿轮轴	MIDDLE GEAR SHAFT	1	2011-11_
4	GB/T283-NJ305E	圆柱滚子轴承	BEARING	2	2011-11_
4	GB/T283-NJ305E	圆柱滚子轴承	BEARING	2	2011-11_
5	GB/T893.1-62	孔用挡圈62	BLOCKING RING - HOLE	1	2011-11_
6	FT804.42B.161a	垫圈	WASHER	1	2011-11_
7	FT804.42.103a	中间齿轮	MIDDLE GEAR	1	2011-11_
8	FT804.42.105a	分动箱体	TRANSFER CASE BODY	1	2011-11_

TD904.421B-2 42.1.2-分动箱总成-2(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
9	JBT982-18	组合密封垫圈	COMBINED SEAL GASKET	1	2011-11_
9	JBT982-18	组合密封垫圈	COMBINED SEAL GASKET	1	2011-11_


TD904.421B 分动箱总成-3

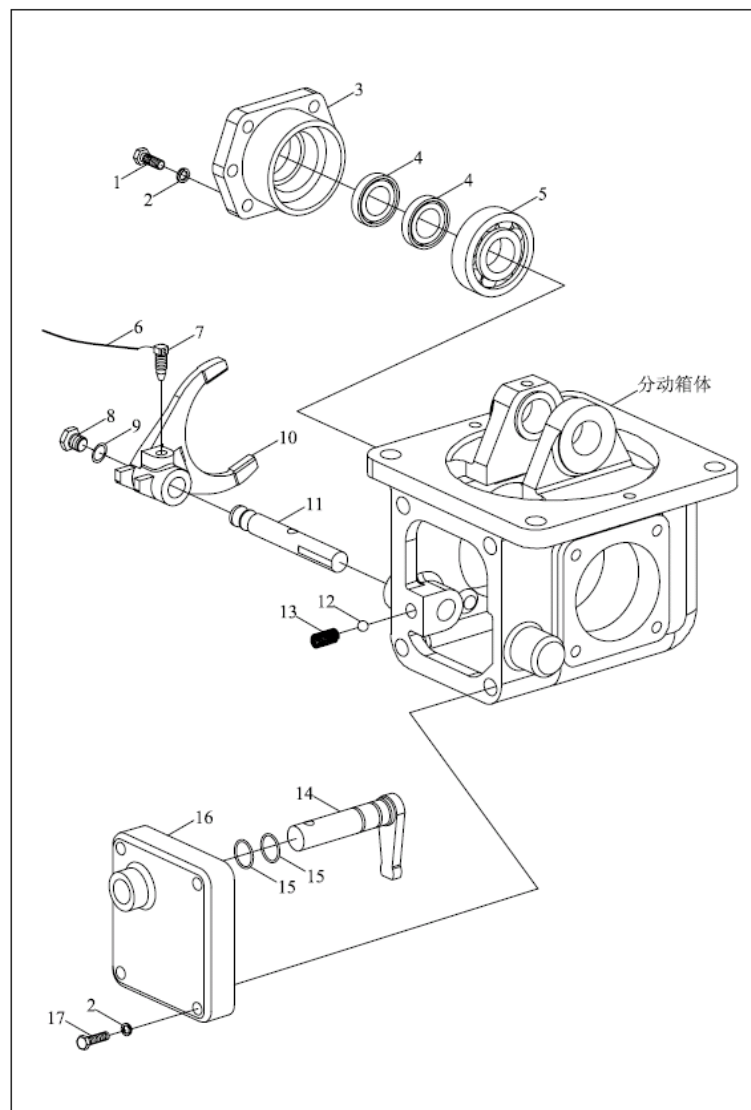

TD904.421B-3 42.1.3-分动箱总成-3 TRANSFER CASE ASSEMBLY-3

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
0	TD904.421A.1	分动箱箱体总成	TRANSFER CASE HOUSING ASSEMBLY	1	2011-11_
1	GB/T75-M10X30-A3L	开槽长圆柱端紧定螺钉	SCREW	4	2011-11_
10	FT804.42.107	分离拨叉	RELEASE SHIFT FORK	1	2011-11_
11	FT804.42.108	拨叉轴	FORK SHAFT	1	2011-11_
12	GB/T308-10-G100-b	钢球	BALL	1	2011-11_
13	FT804.42.151	弹簧	SPRING	1	2011-11_
14	FT804.42.010	转轴焊合	ROTARY SHAFT WELDMENT	1	2011-11_
15	GB/T3452.1-17.0X1.80G	液压气动用O形橡胶密封圈	O-SEAL RING	1	2011-11_
16	FT804.42.106	侧盖	SIDE COVER	1	2011-11_
2	GB/T93-10	垫圈10	WASHER 10	8	2011-11_
3	FT804.42.120	前盖	FRONT COVER	1	2011-11_
4	GB/T9877.1-FB30X52X7D	内包骨架旋转轴唇形密封	O RING	2	2011-11_
5	GB/T276-6306	深沟球轴承	BEARING	1	2011-11_
6	TD904.421.2-04	锁紧钢丝	LOCKING STEEL WIRE	1	2011-11_
7	FT800.37.194	紧定螺钉	LOCKING SCREW	1	2011-11_
8	FT804.42.110	螺堵	SCREW PLUG	1	2011-11_
9	JBT982-18	组合密封垫圈	COMBINED SEAL GASKET	1	2011-11_
9	JBT982-18	组合密封垫圈	COMBINED SEAL GASKET	1	2011-11_


TD904.422A 分动箱传动轴及护罩总成-1

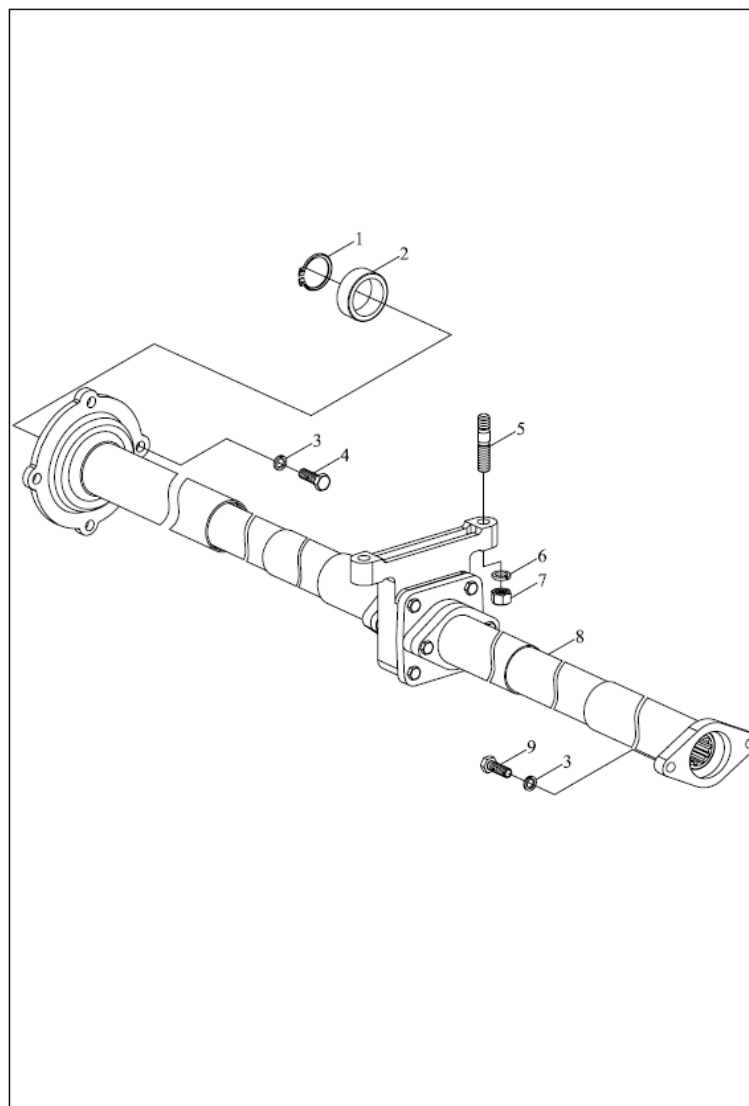

TD904.422A-1 42.2.1-分动箱传动轴及护罩总成-1 TRANSFER CASE COVER ASSEMBLY-1

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT894.1-30	挡圈	RETAINER RING	2	2011-11_
2	FT804.42.131	隔套	SPACER BUSH	1	2004-01_
2	FT804.42.131a	隔套	SPACER BUSH	1	2008-12_
2	FT804.42.131a	隔套	SPACER BUSH	1	2008-12_
3	GBT93-10-A0P	标准型弹簧垫圈	WASHER	6	2011-11_
4	GBT5783-M10X25-A3L	螺栓	BOLT	4	2011-11_
5	GBT899-AM16-M16X1.5X50-A3L	双头螺柱	8.8-A3L STUD	2	2011-11_
6	GBT93-16-A0P	弹簧垫圈	SPRING WASHER	2	2011-11_
7	GBT6176-M16X1.5	2型六角螺母	HEXAGON NUT, TYPE-2	2	2011-11_
8	TD904.422A.1	分动箱传动轴及护罩装配	TRANSFER CASE TRANSMISSION SHAFT AND BONNET INSTALLATI	1	2011-11_
9	GBT5783-M10X30-A3L	螺栓	BOLT	2	2011-11_


TD904.422A 分动箱传动轴及护罩总成-2

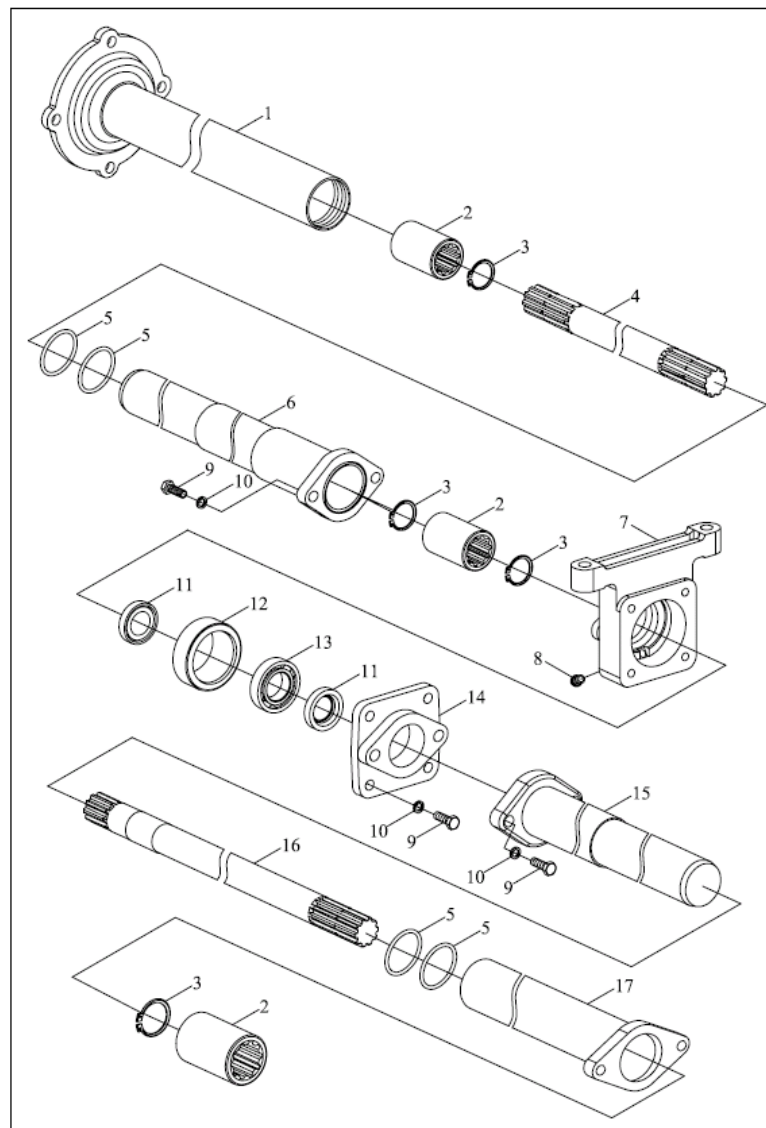

TD904.422A-2 42.2.2-分动箱传动轴及护罩总成-2 TRANSFER CASE COVER ASSEMBLY-2

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
0	TD904.422A.1	分动箱传动轴及护罩装配	TRANSFER CASE TRANSMISSION SHAFT AND	1	2011-11_
1	FT804A.42.016	外护套焊合 (二)	BONNET INSTALLATI	1	2011-11_
10	GBT93-10-A0P	标准型弹簧垫圈	OUTER SLEEVE WELDMENT (2)	8	2011-11_
11	GBT9877.1-FB30X52X7D	内包骨架旋转轴唇形密封	WASHER	2	2011-11_
12	FT804.42.128	橡胶圈	O RING	1	2011-11_
			RUBBER RING		
13	GBT276-6006	轴承		1	2011-11_
14	FT804.42.127	支承座盖	BEARING	1	2011-11_
15	FT804.42.014	内护套焊合 (一)	SUPPORT SEAT COVER	1	2011-11_
16	FT804.42.125b	中间传动轴	INNER SLEEVE WELDMENT (1)	1	2008-12_
16	FT804.42.125a	中间传动轴	MIDDLE TRANSMISSION SHAFT	1	
			MIDDLE TRANSMISSION SHAFT		
17	FT804.42.011	外护套焊合 (一)		1	2011-11_
17	FT804.42.011	外护套焊合 (一)	OUTER SLEEVE WELDMENT (1)	1	2011-11_
2	FT804.42.123a	花键套	OUTER SLEEVE WELDMENT (1)	3	
2	FT804.42.123b	花键套	SPLINE BUSH	3	2008-12_
3	GBT894.1-30	挡圈	SPLINE BUSH	4	2011-11_
			RETAINER RING		
4	FT804A.42.130a	前传动轴		1	2008-12_
4	FT804A.42.130	前传动轴	FRONT TRANSMISSION SHAFT	1	
5	GBT3452.1-45.0X3.55G	液压气动用O形橡胶密封圈	FRONT TRANSMISSION SHAFT	4	
5	GBT3452.1-46.2X3.55G	液压气动用O形橡胶密封圈	O-SEAL RING	4	2012-11_
6	FT804.42.015	内护套焊合 (二)	O-SEAL RING	1	2011-11_
			INNER SLEEVE WELDMENT (2)		
7	FT804A.42.129	支承座		1	2011-11_
8	JBT7940.1-M10X1	直通式压注油杯	SUPPORTING SEAT	1	2011-11_
9	GBT5783-M10X30-A3L	螺栓	STRAIGHT PRESSURE FILLING OIL CUP	8	2011-11_
			BOLT		


TD904.423 分动箱操纵总成

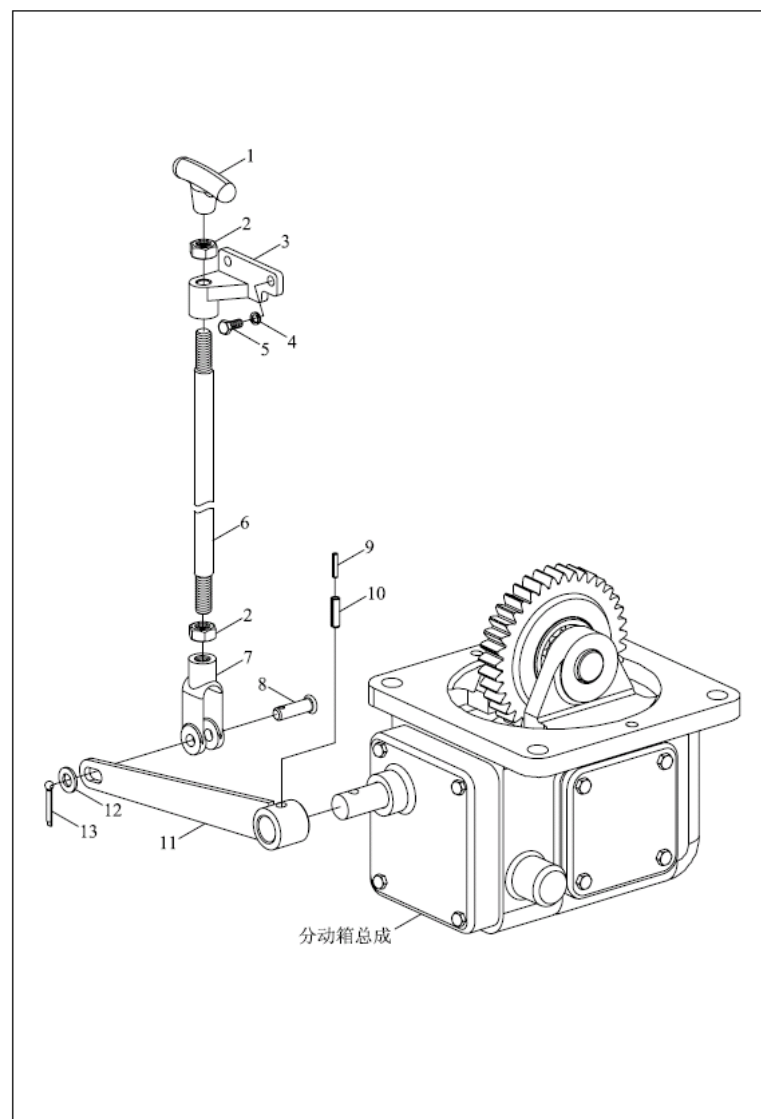

TD904.423 42.3-分动箱操纵总成 42.3-TRANSFER CASE CONTROL ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT65.38.051	拉压手柄	PULL/PRESS HANDLE	1	2011-11_
10	GBT879.1-8X30	弹性圆柱销	PIN	1	2011-11_
11	FT804A.42.012	摇臂焊合	ROCKER WELDMENT	1	2011-11_
12	GBT97.1-8-A0P	平垫圈	WASHER	1	2011-11_
13	GBT91-3.2X20-A0P	开口销	PIN	1	2011-11_
13	GBT91-3.2X20-A0P	开口销	PIN	1	2011-11_
2	GBT6170-M10-A3L	螺母	NUT	2	2011-11_
3	FT804A.42.121	导向管	GUIDE PIPE	1	2011-11_
3	FT804A.42.121	导向管	GUIDE PIPE	1	2011-11_
4	GBT93-10-A0P	标准型弹簧垫圈	WASHER	2	2011-11_
5	GBT5781-M10X25-A3L	六角头螺栓	BOLT	2	2011-11_
6	FT804A.42.122	操纵杆	CONTROL ROD	1	2011-11_
7	FT804.42.150	拉杆前叉	PULL ROD FRONT FORK	1	2011-11_
8	GBT882-B8X26	销轴	PIN	1	2011-11_
9	GBT879.2-5X30	弹性圆柱销	PIN	1	2011-11_


TD800.43 制动系总成-1

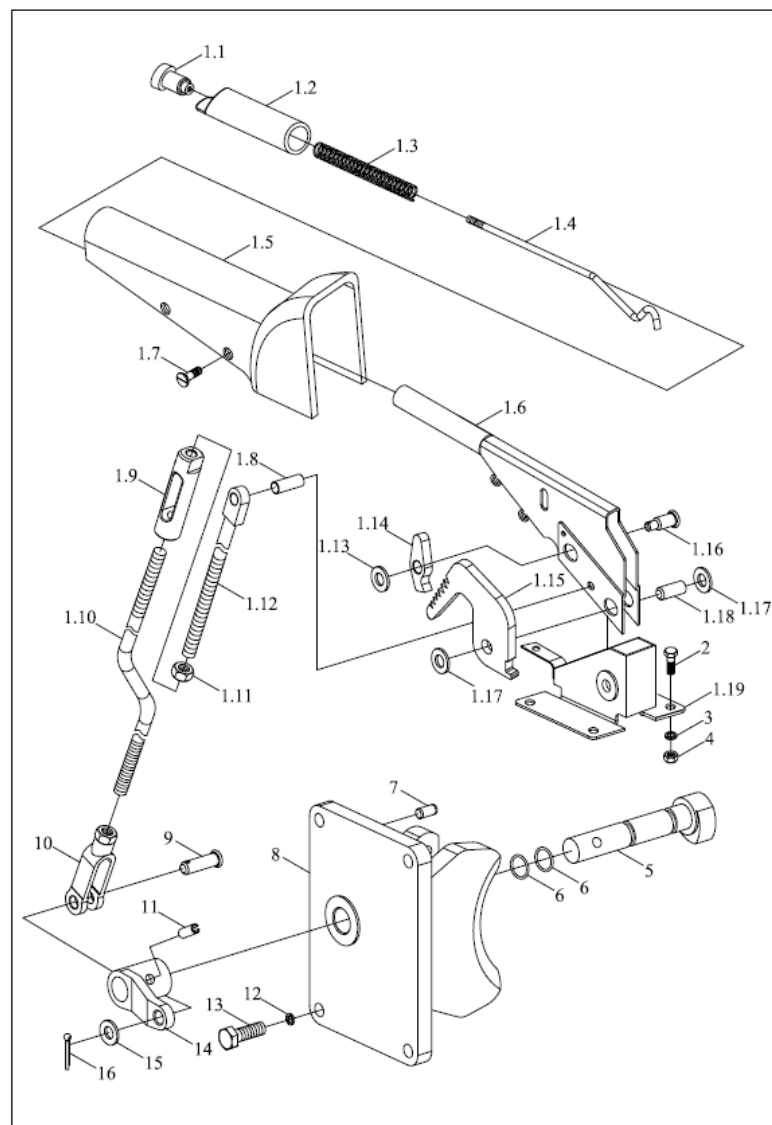

TD800.43-1 43.1-制动系总成-1 43BRAKING SYSTEM ASSEMBLY-1

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
0	FT800A.43.014	手制动总成	HANDLE BRAKE ASSEMBLY	1	2011-11_
1	FT800A.43.051	手制动操纵把手总成	HAND BRAKE CONTROLLING HANDLE	1	2011-11_
1.1	FT800A.43.403	手制动长拉杆	ASSEMBLY	1	2011-11_
1.1	FT800A.21.045	按钮总成	HANDLE BRAKE LONG PULL ROD	1	2011-11_
1.11	GBT6171-M10X1-A2L	螺母	BUTTON ASSEMBLY	1	2011-11_
			NUT		
1.12	FT800A.43.402	手制动短拉杆		1	2011-11_
1.13	GBT894.1-6	轴用弹性挡圈	HAND BRAKE SHORT PULL ROD	1	2011-11_
1.14	FT800A.21.314	棘爪	SNAP RING	1	2011-11_
1.15	FT800A.43.310	棘轮	PAWL	1	2011-11_
1.16	FT800A.21.322	小销轴	RATCHET WHEEL	1	2011-11_
			SMALL PIN SHAFT		
1.17	GBT894.1-13	轴用弹性挡圈		2	2011-11_
1.18	FT800A.21.321	销轴	SNAP RING	1	2011-11_
1.19	FT800A.43.058	手制动操纵把手固定座焊合	PIN	1	2011-11_
1.2	FT800A.21.319	操纵把手套	HANDLE FIXING SEAT WELDMENT OF HAND	1	2011-11_
1.3	FT800.43.180	弹簧	BRAKE	1	2011-11_
			CONTROLLING HANDLE SLEEVE		
1.4	FT800A.21.315	顶杆	SPRING	1	2011-11_
1.5	FT800A.21.320	护罩		1	2011-11_
1.6	FT800A.21.044	操纵把手总成	TOP ROD	1	2011-11_
1.7	GBT68-M4X10-A2L	开槽双头螺钉	BONNET	4	2011-11_
1.8	FT800A.21.323	销	CONTROLLING HANDLE ASSEMBLY	1	2011-11_
1.9	TG1204.435-01	调节套筒	PIN	1	2011-11_
10	FT800.21.240	拉杆前叉		1	2011-11_
11	GBT879.1-8X30	弹性圆柱销	ADJUSTING SLEEVE	1	2011-11_
12	GBT93-10-AOP	标准型弹簧垫圈	PULL ROD FRONT FORK	4	2011-11_
14	FT800A.43.321	转柄	PIN	1	2011-11_


TD800.43 制动系总成-1

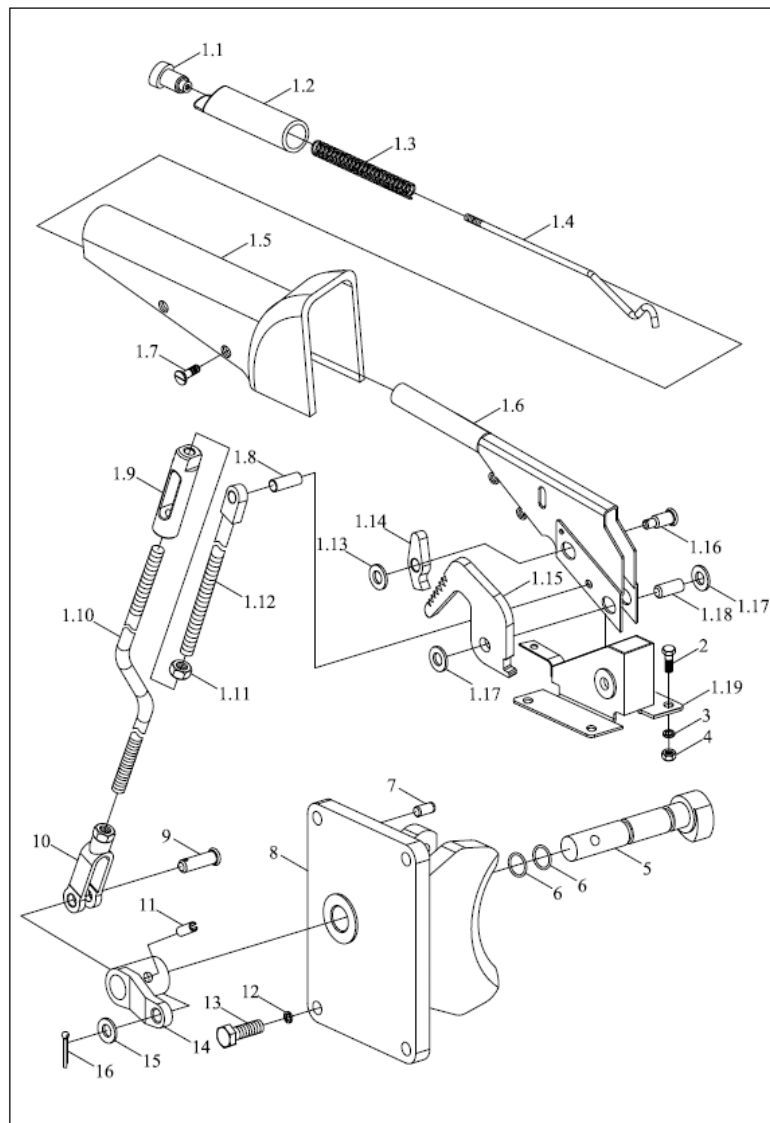

TD800.43-1 43.1-制动系总成-1(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
15	GBT97.1-10-AOP	垫圈	WASHER	1	2011-11_
2	GBT5781-M8X20-A2L	六角头螺栓	BOLT	4	2011-11_
2	GBT5781-M8X20-A2L	六角头螺栓	BOLT	4	2011-11_
3	GBT93-8-AOP	弹簧垫圈	SPRING WASHER	4	2011-11_
4	GBT6170-M8-A2L	螺母	NUT	4	2011-11_
5	FT800.43.169	制动凸轮轴	BRAKE CAMSHAFT	1	2011-11_
6	GBT3452.1-15X2.65G	液压气动用O形橡胶密封圈	O-SEAL RING	2	2011-11_
8	FT800.43.132	盖座	COVER SEAT	1	2011-11_
9	GBT882-B10X30	销轴	PIN	1	2011-11_


TD800.43 制动系总成-2

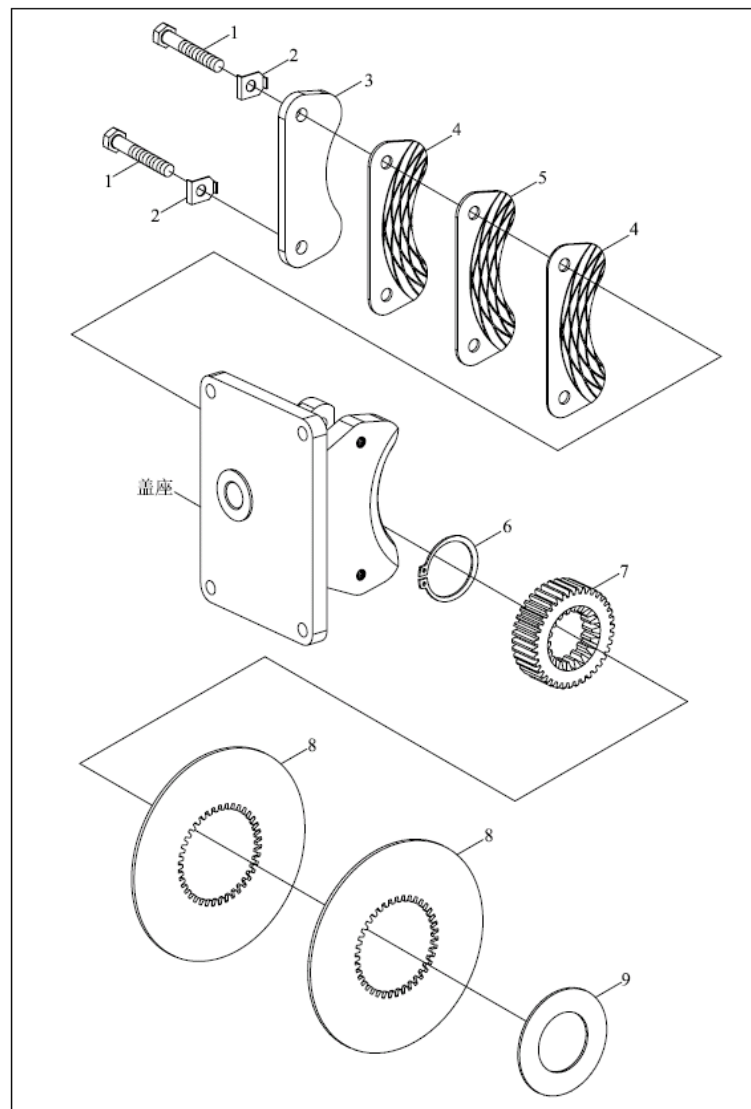

TD800.43-2 43.2-制动系总成-2 43BRAKING SYSTEM ASSEMBLY-2

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
0	FT800A.43.014	手制动总成	HANDLE BRAKE ASSEMBLY	1	2011-11_
1	FT800.43.194	螺栓	BOLT	2	2011-11_
3	FT800.43.131	压板	PRESSURE PLATE	1	2011-11_
4	FT800.43.023	磨擦片合件	FRICTION PLATE UNIT	2	2011-11_
5	FT800.43.024	中间磨擦片合件	MIDDLE FRICTION PLATE UNIT	1	2011-11_
7	FT800.43.136	花键套轮	SPLINE BUSH WHEEL	1	2011-11_
8	FT800.43.141	钢片	STEEL PIECE	2	2011-11_
9	FT800.43.142	调整垫片	ADJUSTING WASHER	999	2011-11_

TD800.43 制动系总成-3

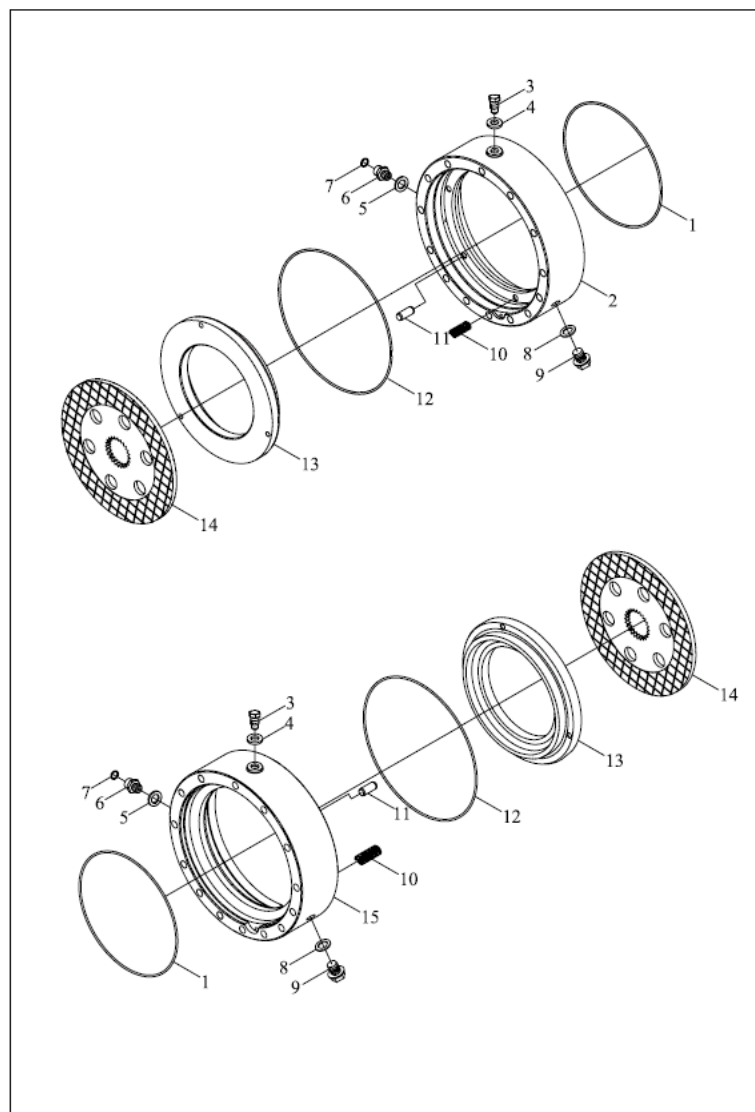


TD800.43-3 43.3-制动系总成-3 43BRAKING SYSTEM ASSEMBLY-3

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
0	FT800.43.015	制动器总成	BREAK ASS.	1	2011-11_
1	FT800.43.149	O形密封环	O-SEAL RING	2	2011-11_
10	FT800.43.173	弹簧	SPRING	6	2011-11_
11	GBT119-D10X22	圆柱销	PIN	6	2011-11_
12	FT800.43.150	O形密封环	O-SEAL RING	2	2011-11_
13	FT800.43.151	制动器活塞	BRAKE PISTON	2	2011-11_
14	FT800.43.027	磨擦片组合件	FRICTION PLATE UNIT	2	2011-11_
15	FT800.43.147a	左制动器缸体	LEFT BRAKE CYLINDER HOUSING	1	2011-11_
15.1	FT800.43.147	左制动器缸体	LEFT BRAKE CYLINDER HOUSING	1	2011-11_
15.1	FT800.43.147	左制动器缸体	LEFT BRAKE CYLINDER HOUSING	1	2011-11_
2	FT800.43.153a	右制动器缸体	RIGHT BRAKE CYLINDER	1	2011-11_
2.1	FT800.43.153	右制动器缸体	RIGHT BRAKE CYLINDER	1	2011-11_
2.1	FT800.43.153	右制动器缸体	RIGHT BRAKE CYLINDER	1	2011-11_
3	FT800.43.152	放气螺塞	DISCHARGE AIR PLUG	2	2011-11_
4	FT800.43.156	防尘圈		2	2011-11_
5	JBZQ4454-16X20	密封垫	SEAL GASKET	2	2011-11_
6	FT800.43.130	接头体	JOINT BODY	2	2011-11_
8	JBZQ4454-10X13.5	密封圈	SEAL RING	2	2011-11_
9	JBTZQ4450-M10X1	螺塞	SCREW PLUG	2	2011-11_

TD800.43-4 43.4-制动系总成-4 43BRAKING SYSTEM ASSEMBLY-4

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT5781-M8X20-A2L	六角头螺栓	BOLT	1	2011-11_
1	GBT5781-M8X20-A2L	六角头螺栓	BOLT	1	2011-11_
10	TD800.43-01	踏板回位弹簧	PEDAL RETURN SPRING	2	2011-11_
11	FT800.43.103	调整螺钉	ADJUSTING SCREW	2	2011-11_
12	FT800A.43C.014	右制动摇臂合件	RIGHT BRAKE ROCKER UNIT	1	2011-11_
12.1	GBT879.1-5X16	弹性圆柱销	PIN	1	2011-11_
12.2	FT800A.43.065	制动联锁杆焊合	BRAKE CONNECTING LOCK ROD WELDMENT	1	2011-11_
12.3	FT800A.43C.016	右制动摇臂焊合	RIGHT BRAKE ROCKER WELDMENT	1	2011-11_
12.4	FT800A.43.307	制动踏板毂衬套	BRAKE PEDAL HUB BUSH	1	2011-11_
13	FT800A.43.401	锁销	PIN	1	2011-11_
2	FT800A.43.053	制动踏板支承轴焊合	BRAKE PEDAL SUPPORT SHAFT WELDMENT	1	2011-11_
3	GBT93-8-A0P	垫圈	WASHER	1	2011-11_
4	GBT6170-M8-A2L	螺母	NUT	1	2011-11_
5	GBT894.1-30	挡圈	RETAINER RING	1	2011-11_
6	FT800A.43.305	隔套	SPACER BUSH	4	2011-11_
7	FT800A.43C.013	左制动摇臂合件	LEFT BRAKE ROCKER WELDMENT	1	2011-11_
7.1	FT800A.43.307	制动踏板毂衬套	BRAKE PEDAL HUB BUSH	1	2011-11_
7.2	FT800A.43C.015	左制动摇臂焊合	LEFT BRAKE ROCKER WELDMENT	1	2011-11_
8	GBT6170-M10-A3L	螺母	NUT	2	2011-11_
9	FT800.43.030	调整螺钉	ADJUSTING SCREW	2	2011-11_


TD800.43 制动系总成-5

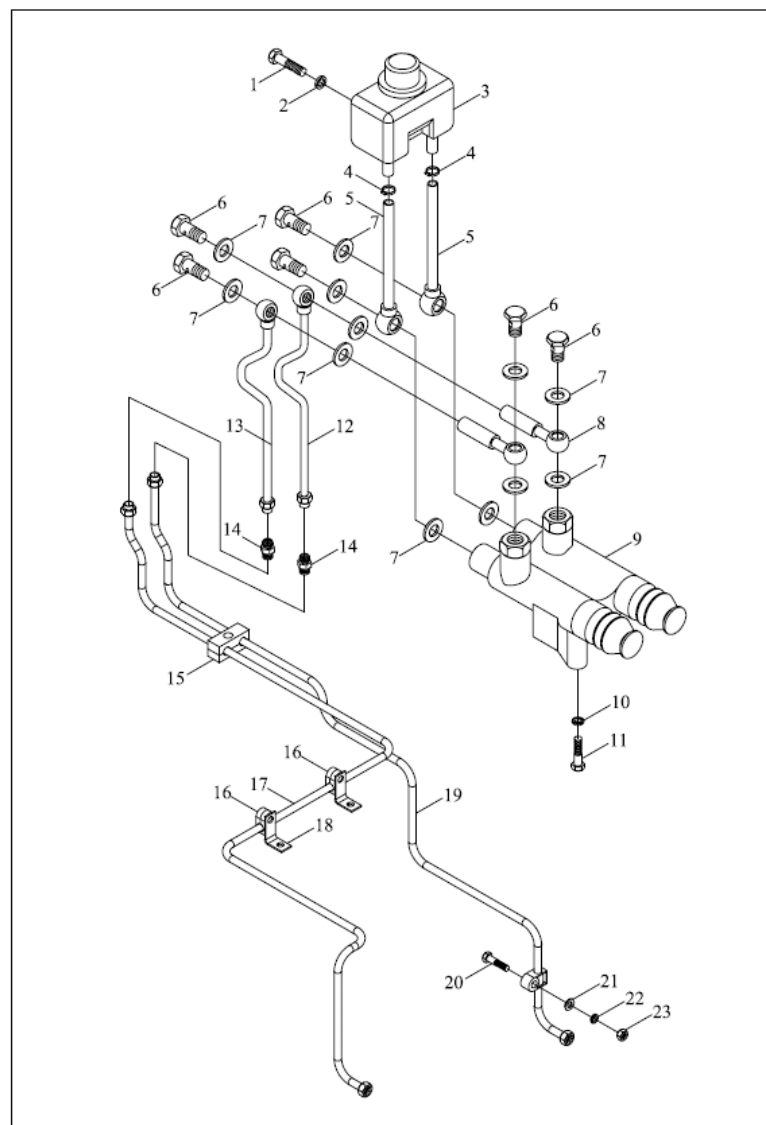

TD800.43-5 43.5-制动系总成-5 43BRAKING SYSTEM ASSEMBLY-5

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT5781-M8X20-A2L	六角头螺栓	BOLT	1	2011-11_
1	GBT5781-M8X20-A2L	六角头螺栓	BOLT	1	2011-11_
10	GBT93-10-A0P	标准型弹簧垫圈	WASHER	3	2011-11_
11	GBT5783-M10X30-A3L	螺栓	BOLT	3	2011-11_
12	FT800A.43C.012b	右制动短油管总成	RIGHT BRAKE SHORT OIL PIPE ASSEMBLY	1	2011-11_
12.1	FT800A.43C.012a	右制动短油管总成	RIGHT BRAKE SHORT OIL PIPE ASSEMBLY	1	2011-11_
13	FT800A.43C.011b	左制动短油管总成	LEFT BRAKE SHORT OIL PIPE ASSEMBLY	1	2011-11_
13.1	FT800A.43C.012a	右制动短油管总成	RIGHT BRAKE SHORT OIL PIPE ASSEMBLY	1	2011-11_
14	FT800A.43.315	卡套式直通接头体	JOINT	2	2011-11_
15	F600210	管夹组合（六）	PIPE CLAMP COMBINATION (6)	2	2011-11_
16	F600190	管夹组合（五）	PIPE CLAMP COMBINATION (5)	3	2011-11_
17	FT800A.43.056b	左制动长油管总成	LEFT BRAKE LONG OIL PIPE ASSEMBLY	1	2011-11_
17	FT800A.43.056b	左制动长油管总成	LEFT BRAKE LONG OIL PIPE ASSEMBLY	1	2011-11_
17.1	FT800A.43.056a	左制动长油管总成	LEFT BRAKE LONG OIL PIPE ASSEMBLY	1	2011-11_
18	FT800A.43.335	油管固定板	FIXED PLATE OF OIL PIPE	2	2011-11_
19	FT800A.43.057b	右制动长油管总成	RIGHT BRAKE LONG OIL PIPE ASSEMBLY	1	2011-11_
19.1	FT800A.43.056a	左制动长油管总成	LEFT BRAKE LONG OIL PIPE ASSEMBLY	1	2011-11_
2	GBT93-8-A0P	弹簧垫圈	SPRING WASHER	1	2011-11_
20	GBT5780-M6X40-A2L	六角头螺栓	BOLT	1	2011-11_
20	GBT5780-M6X40-A2L	六角头螺栓	BOLT	1	2011-11_
21	GBT97.1-6-A0P	平垫圈	WASHER	1	2011-11_
22	GBT93-6-A0P	弹簧垫圈	SPRING WASHER	1	2011-11_
23	GBT6170-M6-A2L	螺母	NUT	1	2011-11_
3	TG1204.433.2	制动器油箱总成	BRAKE OIL TANK ASSEMBLY	1	2011-11_
3.1	FT800.43.018	制动油箱	BRAKE OIL TANK	1	2011-11_


TD800.43 制动系总成-5

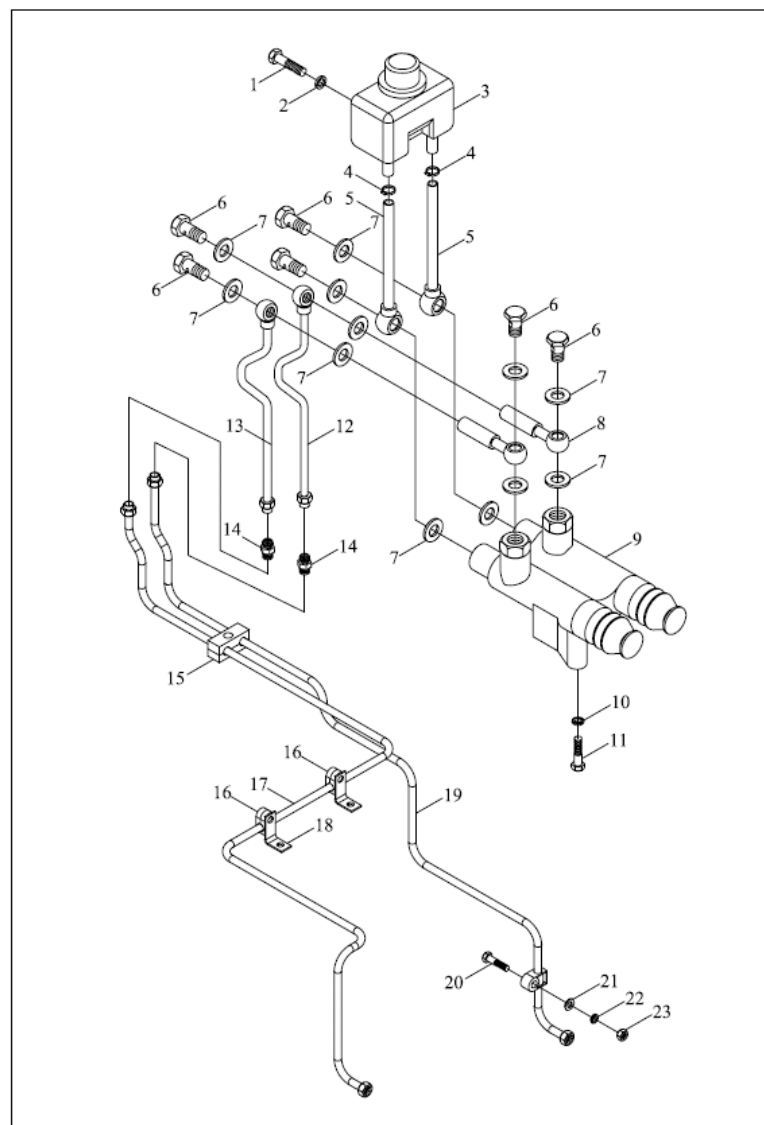

TD800.43-5 43.5-制动系总成-5(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
4	Q67516	A型蜗杆传动式软管环箍	A-TYPE WORM TRANSMISSION HOSE CLAMP	2	2011-11_
5	TD800.43.1	输油胶管总成	OIL CONVEYING HOSE ASSEMBLY	2	2011-11_
6	FT800.43.115	油管接头螺钉	OIL PIPE JOINT SCREW	6	2011-11_
7	JBZQ4454-12X16	密封垫	SEAL GASKET	12	2011-11_
8	FT800A.43C.017	管接头焊合件	PIPE JOINT WELDMENT UNIT	2	2011-11_
9	FT800A.43C.018	制动泵总成	BRAKE PUMP ASSEMBLY	1	2011-11_


FT800A.44.001 座椅安装总成

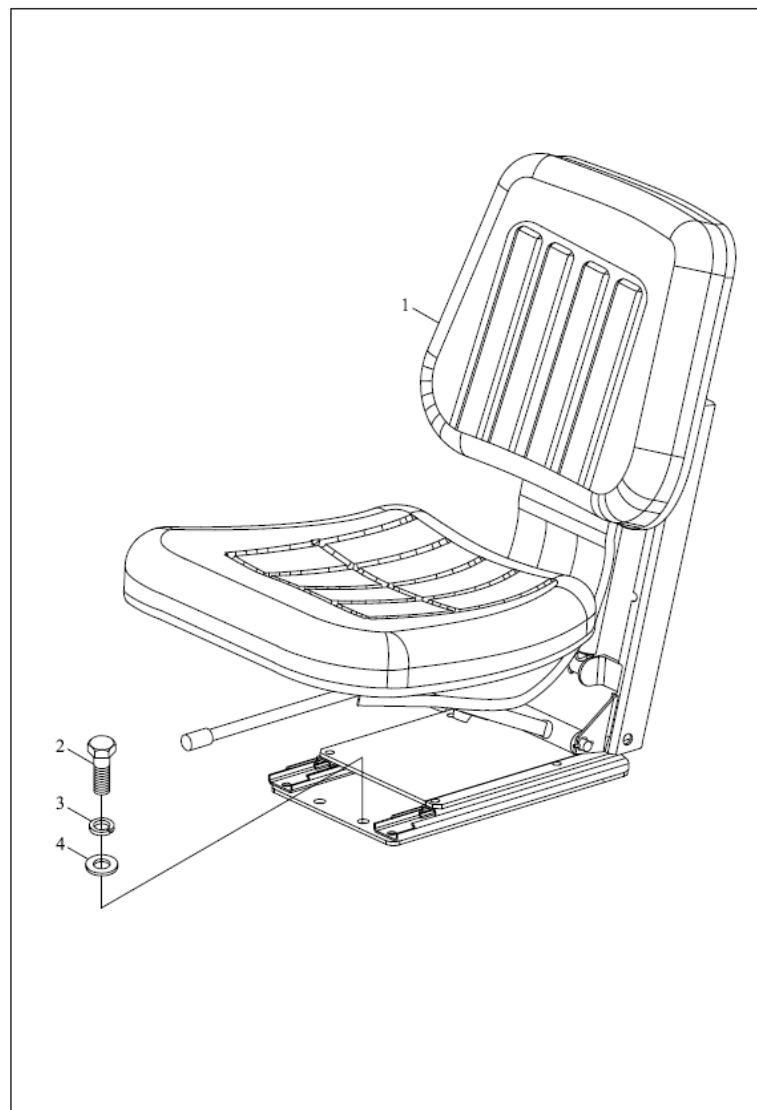

FT800A.44.001 44-座椅安装总成 44SEAT INSTALLATION ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT800A.44.011	座椅总成	SEAT ASSEMBLY	1	2011-11_
2	GBT5783-M12X35-A3L	螺栓	BOLT	4	2011-11_
2	GBT5783-M12X35-A3L	螺栓	BOLT	4	2011-11_
3	GBT93-12-A0P	弹簧垫圈	SPRING WASHER	4	2011-11_
4	GBT97.1-12-A0P	平垫圈	WASHER	4	2011-11_


TD800.454E 操纵盖板总成

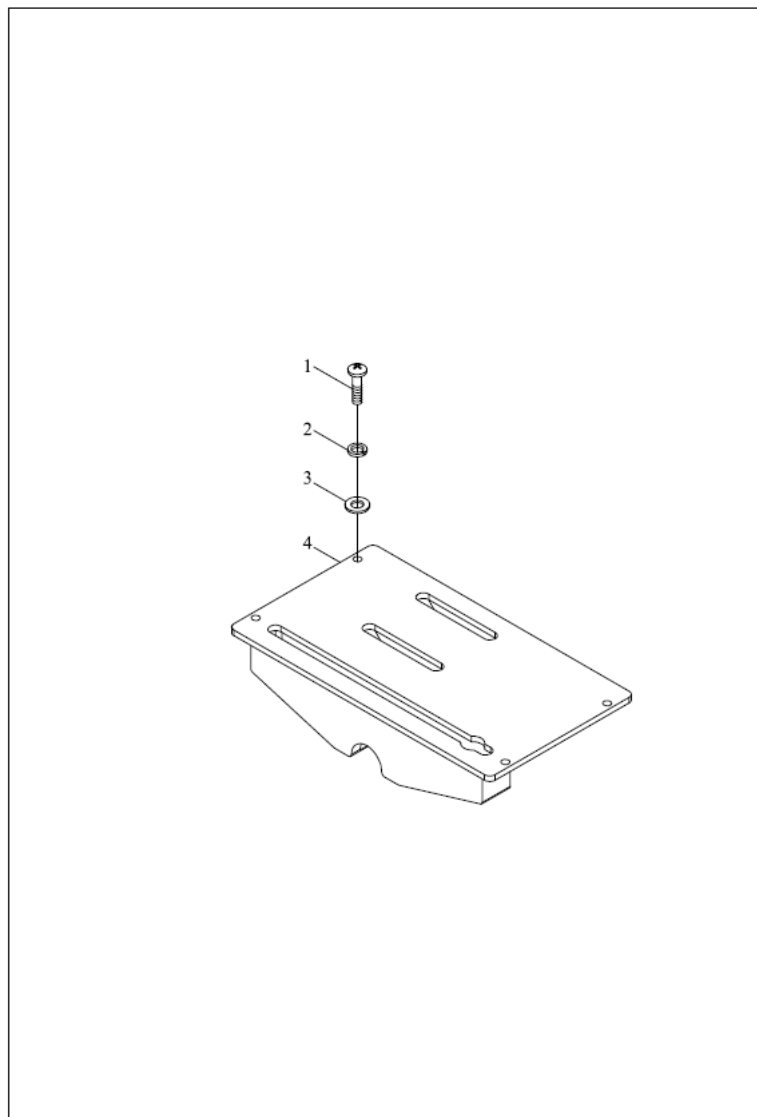

TD800.454E 45.4-操纵盖板总成 45.4-CONTROLLING COVER PLATE ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT818-M5X16-A2L	十字槽盘头螺钉	SCREW	4	2013-04_
2	GBT93-5-AOP	标准型弹簧垫圈	WASHER	4	2011-11_
3	GBT97.1-5-AOP	平垫圈	WASHER	4	2011-11_
4	FT804A.45.097	盖板组合	COVER PLATE COMBINATION	1	2011-11_


TD800.456A 仪表台装配总成

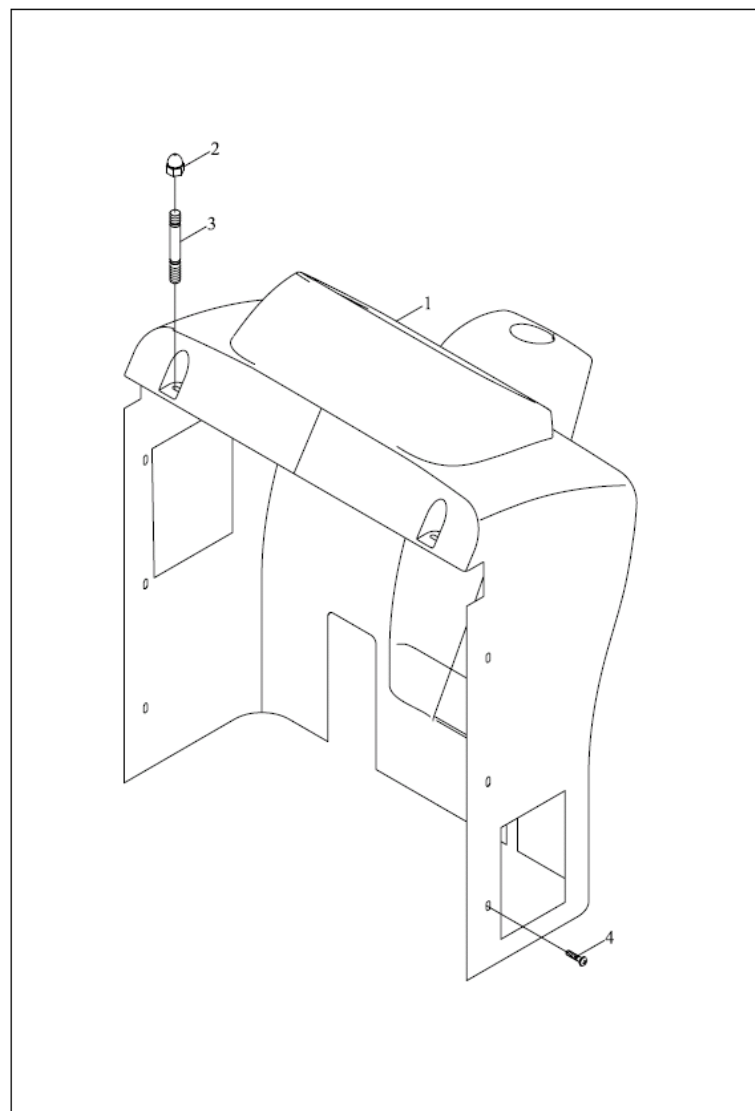

TD800.456A 45.6-仪表台装配总成 45.6-DASHBOARD INSTALLATION ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT800A.45B.020	仪表台总成	DASHBOARD ASSEMBLY	1	2011-11_
2	FT65.45.999	1型六角螺母	NUT	2	2011-11_
3	GBT901-M6X60-A1L	等长双头螺柱	STUD	2	2011-11_
4	FT800A.45.900	塑料螺钉	PLASTIC SCREW	6	2004-01_
4	GBT818	螺钉M4x16	SCREW M4X16	6	2010-06_


TD800.457 前连接装置总成

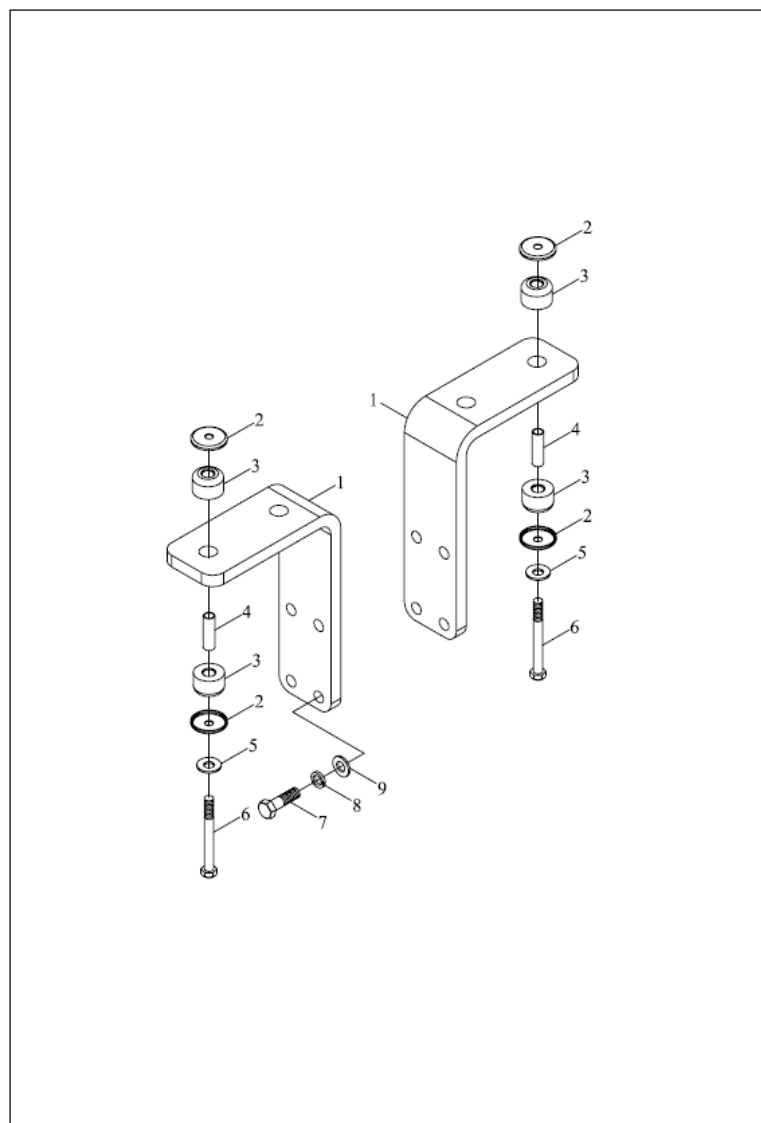

TD800.457 45.7-前连接装置总成 45.7-FRONT CONNECTION EQUIPMENT ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TD800.457-01	前连接板	FRONT CONNECTING PLATE	2	2011-11_
2	FT800A.45.112	减震垫座	SHOCK ABSORBER SEAT	8	2011-11_
3	FT800A.45.110	减震块	ABSORBER	8	2011-11_
4	FT800A.45.111	间管	SPACER SPOOL	4	2011-11_
5	GBT96-16-A0P	大垫圈	WASHER	4	2011-11_
6	GBT5782-M16X130-A2L	六角头螺栓	BOLT	4	2011-11_
7	GBT5783-M16X45	螺栓	BOLT	8	
8	GBT97.1-16-A0P	垫圈	WASHER	8	2011-11_
9	GBT93-16-A0P	弹簧垫圈	SPRING WASHER	8	2011-11_


TD800.458A 后连接装置总成

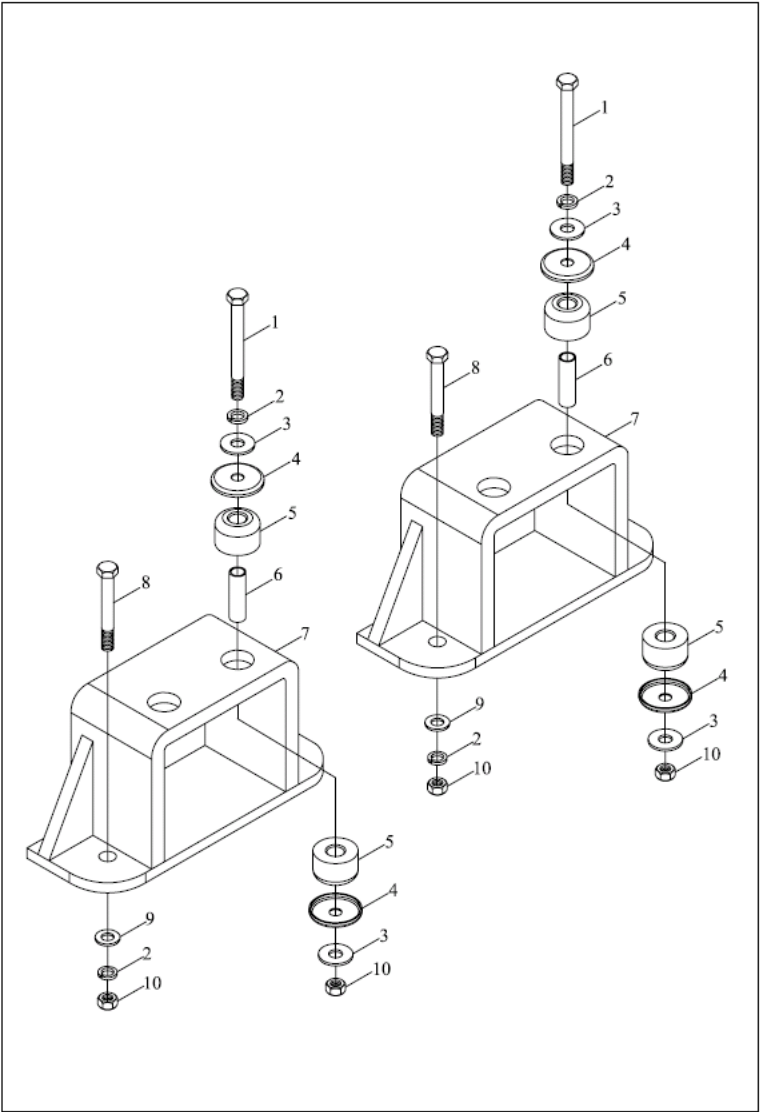

TD800.458A 45.8-后连接装置总成 45.8--REAR CONNECTING EQUIPMENT ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT5782-M16X160-A2L	六角头螺栓	BOLT	4	2011-11_
10	GBT6170-M16-A3L	螺母 M16-A3L	NUT	8	2011-11_
2	GBT93-16-A0P	弹簧垫圈	SPRING WASHER	8	2011-11_
3	GBT96.1-16-A0P	垫圈16-A0P	WASHER	8	2011-11_
4	FT800A.45.112	减震垫座	SHOCK ABSORBER SEAT	8	2011-11_
5	FT800A.45.110	减震块	ABSORBER	8	2004-01_
5	TD800.457B.1.2	减震块	ABSORBER	8	2009-06_
5	TD800.457B.1.2	减震块	ABSORBER	8	2009-06_
6	FT800A.45.111	间管	SPACER SPOOL	4	2011-11_
7	FT800A.45C.014	地板后连接焊合件	FLOOR REAR CONNECTING WELDMENT	2	2011-11_
8	GBT5783-M16X90-8.8-A2L	六角头螺栓	BOLT	4	2004-01_
9	GBT97.1-16-A0P	垫圈	WASHER	4	2011-11_


FT800A.46.001 安全架总成

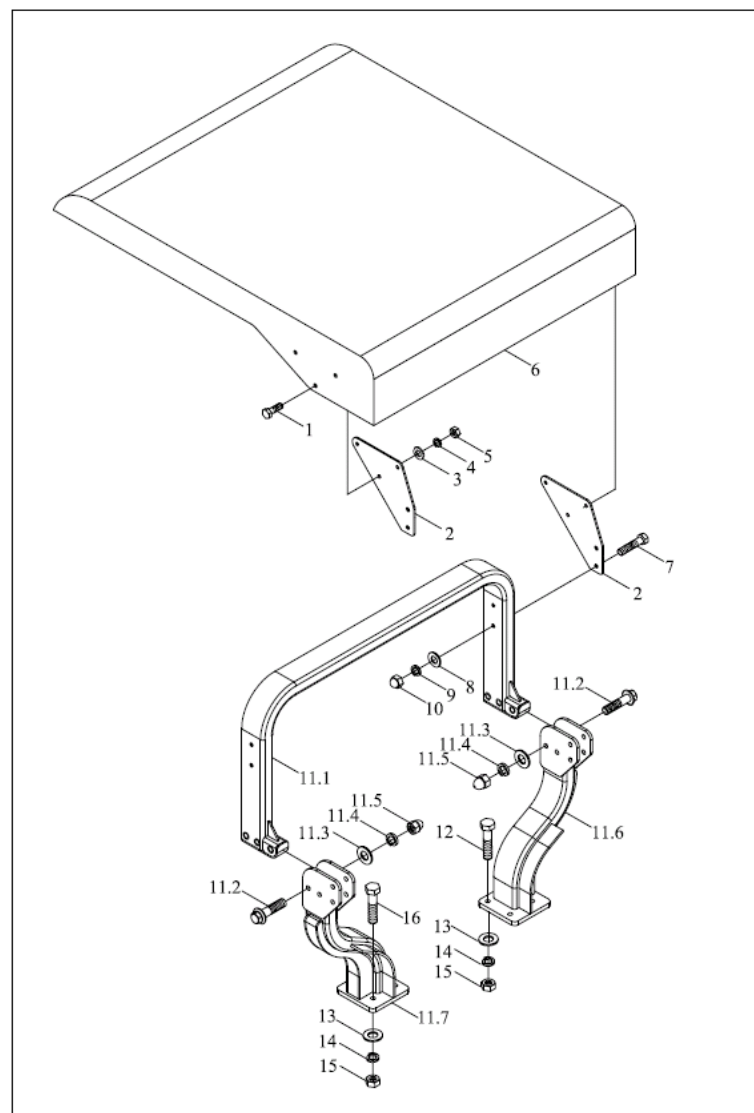

FT800A.46.001 46-安全架总成 46-SAFETY FRAME ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT5783-M10X30-A3L	螺栓	BOLT	6	2011-11_
10	GBT802-M12-A2L	螺母	NUT	4	
11	FT800A.46.040	支撑梁安装总成	SUPPORT BEAM INSTALLATION ASSEMBLY	1	2011-11_
11	FT800A.46.040	支撑梁安装总成	SUPPORT BEAM INSTALLATION ASSEMBLY	1	2011-11_
11.1	FT800A.46.010	安全架上梁总成	SAFETY FRAME UPPER BEAM ASSEMBLY	1	2011-11_
11.1	FT800A.46.010	安全架上梁总成	SAFETY FRAME UPPER BEAM ASSEMBLY	1	2011-11_
11.2	GBT5782-M16X100-A2L	六角头螺栓	BOLT	6	2011-11_
11.3	GBT95-16-A0P	垫圈	WASHER	6	2011-11_
11.4	GBT93-16-A0P	弹簧垫圈	SPRING WASHER	6	2011-11_
11.5	GBT802-M16	组合式盖形螺母	NUT	6	
11.6	FT800A.46.030	右支撑梁总成	RIGHT SUPPORT BEAM ASSEMBLY	1	2011-11_
11.7	FT800A.46.020	左支撑梁总成	LEFT SUPPORT BEAM ASSEMBLY	1	2011-11_
12	GBT5782-M16X90-A2L	六角头螺栓	BOLT	8	2011-11_
13	GBT96-16-A0P	大垫圈	WASHER	8	2011-11_
14	GBT93-16-A0P	弹簧垫圈	SPRING WASHER	8	2011-11_
15	GBT6170-M16-A3L	螺母 M16-A3L	NUT	8	2011-11_
2	FT800A.46.101	遮阳棚固定板	SHADOW LOCKING PLATE	2	2011-11_
3	FT400.46.021	垫圈合件	WASHER UNIT	6	2011-11_
4	GBT93-10-A0P	标准型弹簧垫圈	WASHER	6	2011-11_
5	GBT802-M10-6	组合式盖形螺母	NUT	6	2011-11_
6	FT65.46A.012	遮阳棚总成	SHADOW ASSEMBLY	1	2004-01_
6	FT800A.46.480	遮阳棚	SHADOW	1	2011-05_
7	GBT5782-M12x80-A2L	螺栓	BOLT	4	2011-11_
8	GBT95-12-A0P	垫圈12-A0P	WASHER	4	2011-11_
9	GBT93-12-A0P	弹簧垫圈	SPRING WASHER	4	2011-11_


TD800.471D 机罩总成-1

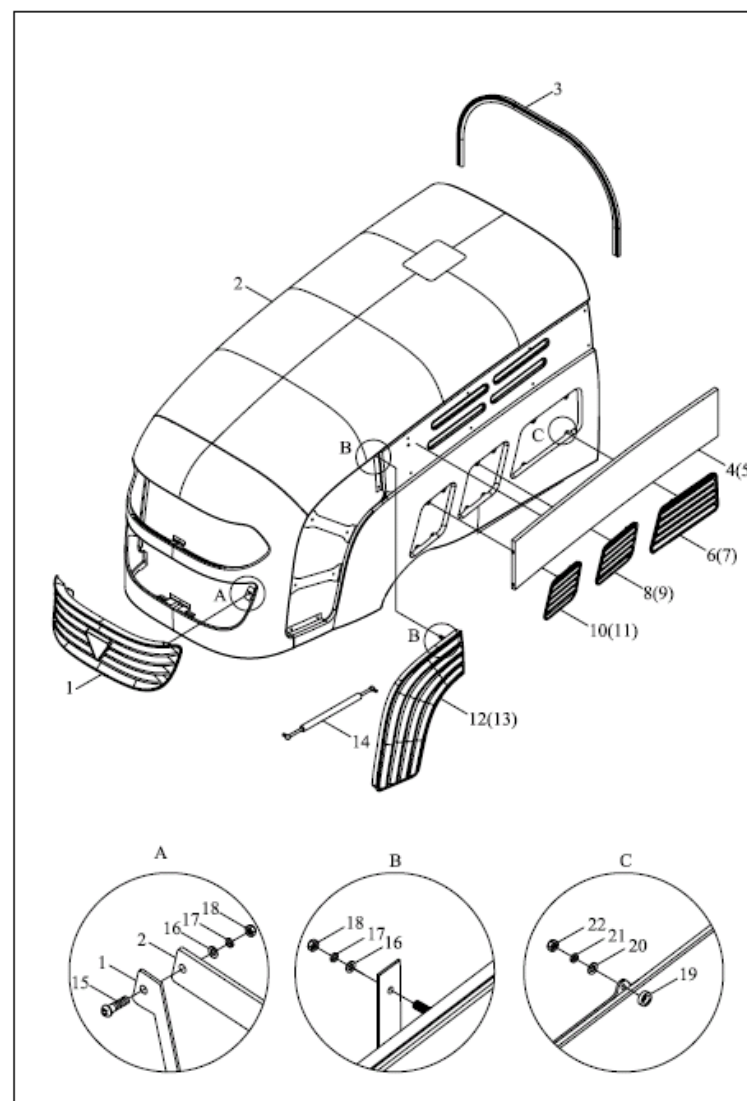

TD800.471D-1 47.1.1-机罩总成-1 BONNET ASSEMBLY-1

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TG1204.471A-05	机罩前脸网眼板	BONNET FRONT MESH BOARD	1	2011-11_
10	FT800B.47.306	左前下栅格	LEFT FRONT LOWER GRID	1	2011-11_
11	FT800B.47.307	右前下栅格	RIGHT FRONT LOWER GRID	1	2011-11_
11	FT800B.47.307	右前下栅格	RIGHT FRONT LOWER GRID	1	2011-11_
12	TG1204.471A-03	机罩左侧网眼板	BONNET LEFT MESH PLATE	1	2011-11_
12	TG1204.471A-03	机罩左侧网眼板	BONNET LEFT MESH PLATE	1	2011-11_
13	TG1204.471A-04	机罩右侧网眼板	BONNET RIGHT MESH PLATE	1	2011-11_
14	TD800.471-01	机罩气弹簧	BONNET PNEUMATIC SPRING	2	2011-11_
15	GBT5783-M6X16-A3L	螺栓	BOLT	20	2013-07_
16	GBT97.1-6-A0P	平垫圈	WASHER	20	2011-11_
17	GBT93-6-A0P	弹簧垫圈	SPRING WASHER	20	2011-11_
18	GBT6170-M6-A2L	螺母	NUT	20	2011-11_
19	TB400B.471-18	垫块	PAD BLOCK	24	2011-11_
2	TD800.471D.1	机罩焊合	BONNET WELDMENT	1	2011-11_
20	GBT97.1-5-A0P	垫圈	WASHER	40	2011-11_
21	GBT93-5-A0P	标准型弹簧垫圈	WASHER	40	2011-11_
22	GBT6170-M5-A2L	1型六角螺母	NUT	40	2011-11_
3	FT800B.47.242	机罩密封条	BONNET SEAL STRIP	1	2011-11_
4	FT800B.47.304	左后装饰板	LEFT REAR ADORN BOARD	1	2011-11_
5	FT800B.47.305	右后装饰板	RIGHT REAR ADORN BOARD	1	2011-11_
6	FT800B.47.310	左后下栅格	LEFT REAR LOWER GRID	1	2011-11_
7	FT800B.47.311	右后下栅格	RIGHT REAR LOWER GRID	1	2011-11_
7	FT800B.47.311	右后下栅格	RIGHT REAR LOWER GRID	1	2011-11_
8	FT800B.47.308	左中下栅格	LEFT MIDDLE LOWER GRID	1	2011-11_
9	FT800B.47.309	右中下栅格	RIGHT MIDDLE LOWER GRID	1	2011-11_


TD800.471D 机罩总成-2

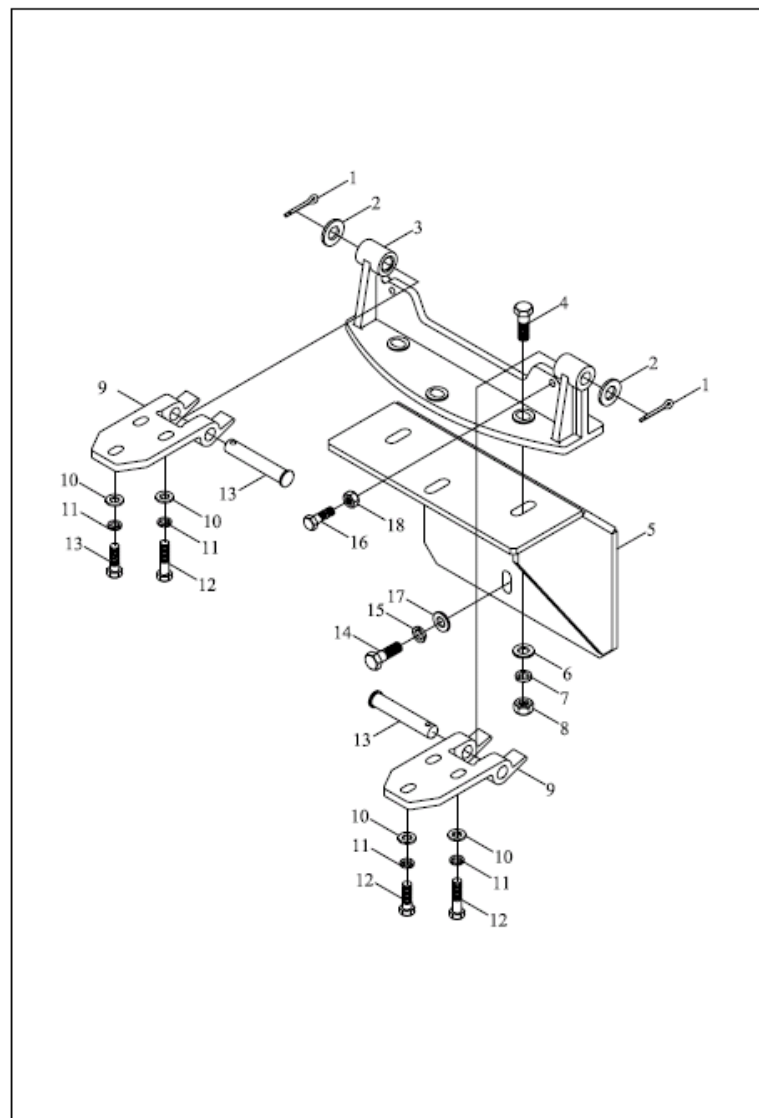

TD800.471D-2 47.1.2-机罩总成-2 BONNET ASSEMBLY-2

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT91-5X32-A0P	开口销	PIN	2	2011-11_
10	GBT97.1-10-A0P	平垫圈	WASHER	6	2011-11_
11	GBT93-10-A0P	标准型弹簧垫圈	WASHER	6	2011-11_
12	GBT5783-M10X30-A3L	螺栓	BOLT	6	2011-11_
13	GBT882-B16X90-A0P	销轴	PIN	2	2013-07_
14	GBT5783-M12X30-A3L	螺栓	BOLT	3	2011-11_
15	GBT93-12-A0P	弹簧垫圈	SPRING WASHER	3	2011-11_
16	GBT5783-M10X40-A3L	螺栓	BOLT	2	2011-11_
17	GBT97.1-12-A0P	平垫圈	WASHER	3	2011-11_
18	GBT6170-M10-A3L	螺母	NUT	2	2011-11_
2	GBT97.1-16-A0P	垫圈	WASHER	2	2011-11_
3	FT800B.47B.162	铰链下座	HINGE LOWER SEAT	1	2011-11_
4	GBT5782-M12X50-A3L	螺栓	BOLT	3	2011-11_
5	TD800.471D.2.1	机罩下支架焊合	BONNET LOW BRACKET WELDMENT	1	2011-11_
6	GBT97.1-12-A0P	平垫圈	WASHER	3	2011-11_
7	GBT93-12-A0P	弹簧垫圈	SPRING WASHER	3	2011-11_
8	GBT6170-M12-A3L	螺母	NUT	3	2011-11_
9	FT800B.47B.161	铰链上座	HINGE UPPER SEAT	2	2011-11_


TD800.472B 机罩下围板总成

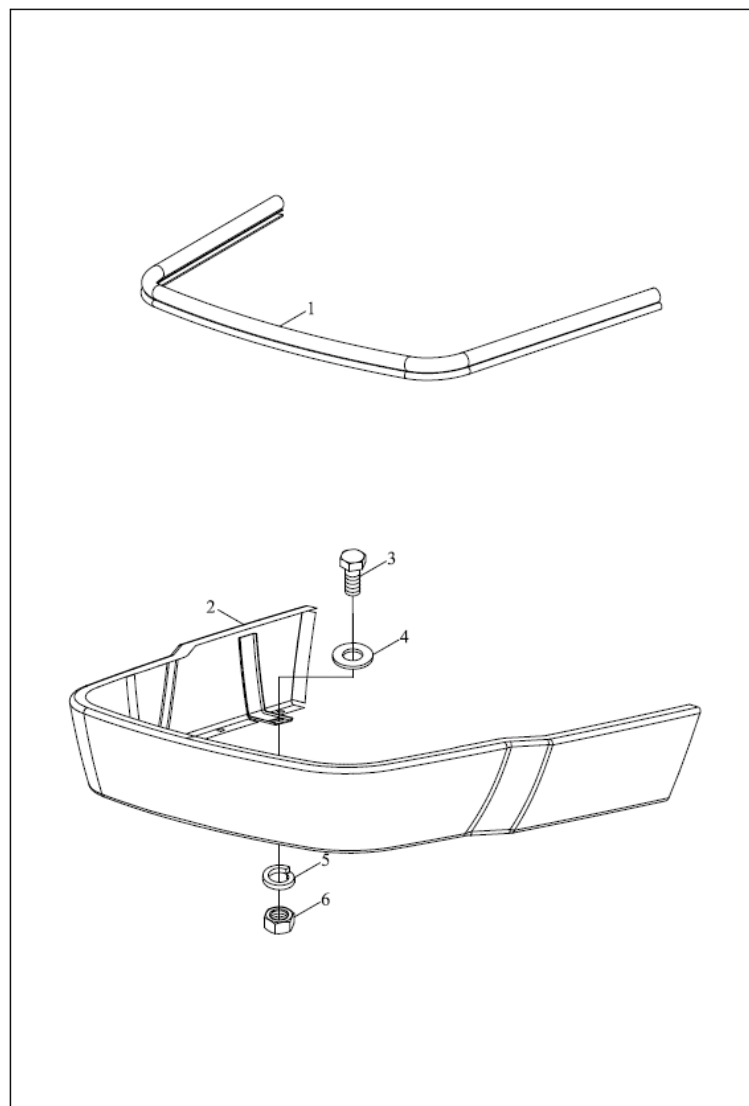

TD800.472B 47.2-机罩下围板总成 47.2-BONNET LOW PLATE ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT800B.47.241	机罩下围板密封条	BONNET LOW PLATE SEAL STRIP	1	2011-11_
2	TD800.472B.1	机罩下围板焊合	BONNET LOW PLATE WELDMENT	1	2011-11_
3	GBT5783-M8X25-A2L	螺栓	BOLT	6	2011-11_
4	GBT97.1-8-A0P	平垫圈	WASHER	6	2011-11_
5	GBT93-8-A0P	垫圈	WASHER	6	2011-11_


TD800.474B 机罩锁操纵总成

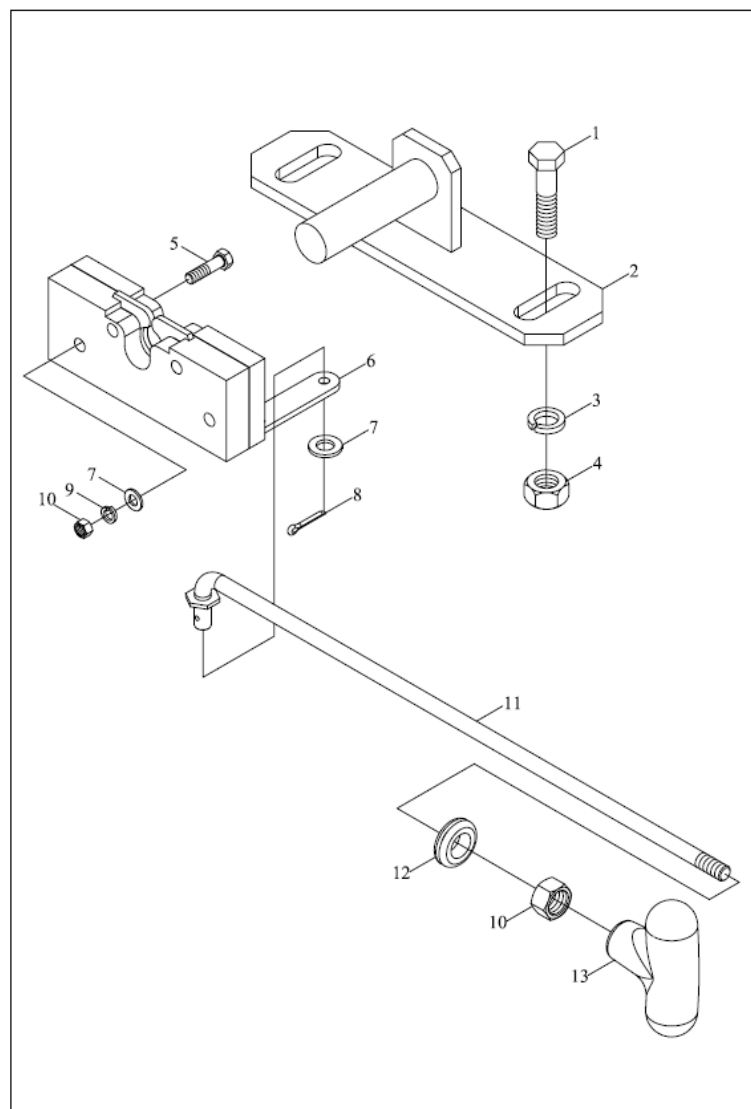

TD800.474B 47.4-机罩锁操纵总成 47.4-BONNET LOCK CONTROL ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT5783-M10X30-A3L	螺栓	BOLT	2	2011-11_
1	GBT5783-M8X30-A3L	六角头螺栓全螺纹	BOLT	2	2009-04_
10	GBT6170-M6-A2L	螺母	NUT	5	2011-11_
11	TD800.474B.2	拉杆焊合	WELDED PUSHING ROD	1	2011-11_
12	TB450.473-02	胶圈	RUBBER RING	1	2011-11_
13	FT800A.47.056	手柄总成	HANDLE ASSEMBLY	1	2011-11_
2	TD800.474B.1	机罩锁柱焊合	BONNET LOCK COLUMN WELDMENT	1	2011-11_
2	TD800.474B.1	机罩锁柱焊合	BONNET LOCK COLUMN WELDMENT	1	2011-11_
3	GBT93-10-A0P	标准型弹簧垫圈	WASHER	2	2011-11_
4	GBT97.1-8-A0P	平垫圈	WASHER	2	2009-04_
4	GBT97.1-10-A0P	平垫圈	WASHER	2	2011-11_
5	GBT5783-M6X35-8.8-A1L	六角头螺栓	BOLT	4	
6	TH350.473-01	机罩锁	BONNET LOCK	1	
6	TG1654.471A.2.1-01	机罩锁	BONNET LOCK	1	2011-02_
7	GBT97.1-6-A0P	平垫圈	WASHER	5	2011-11_
8	GBT91-1.6X26-A0P	开口销	PIN	1	2011-11_
9	GBT93-6-A0P	弹簧垫圈	SPRING WASHER	4	2011-11_


TD800.475F 机罩密封装配总成

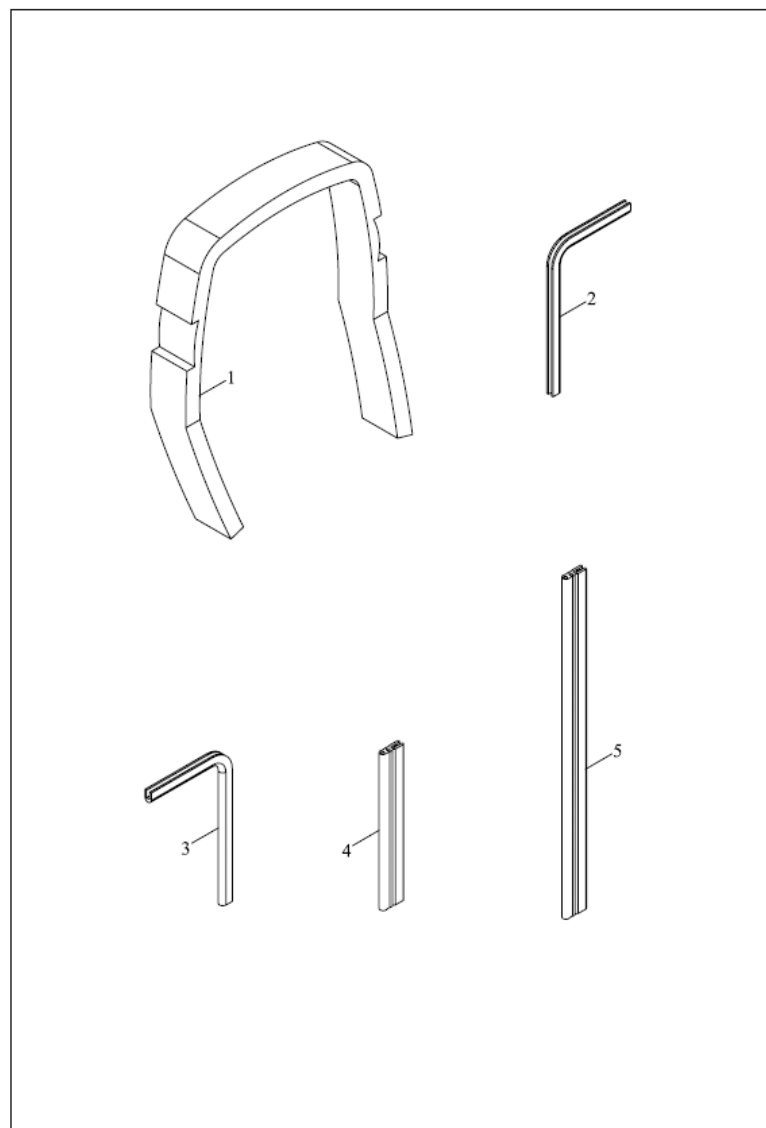

TD800.475F 47.5-机罩密封装配总成 47.5-BONNET SEAL INSTALLATION ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TD800.475F-01	密封块	PACKING WASHER	1	2011-11_
2	TD800.475B-06	密封压条	SEAL PRESSURE STRIP	1	2011-11_
3	TD800.475F-04	密封压条 (一)	SEAL PRESSURE STRIP (1)	1	2011-11_
4	TD800.475F-03	密封条 (二)	SEALING STRIP (2)	1	2011-11_
5	TD800.475F-02	密封条 (一)	SEAL PIECE (1)	2	2011-11_


TD900.481N 发动机线束安装总成

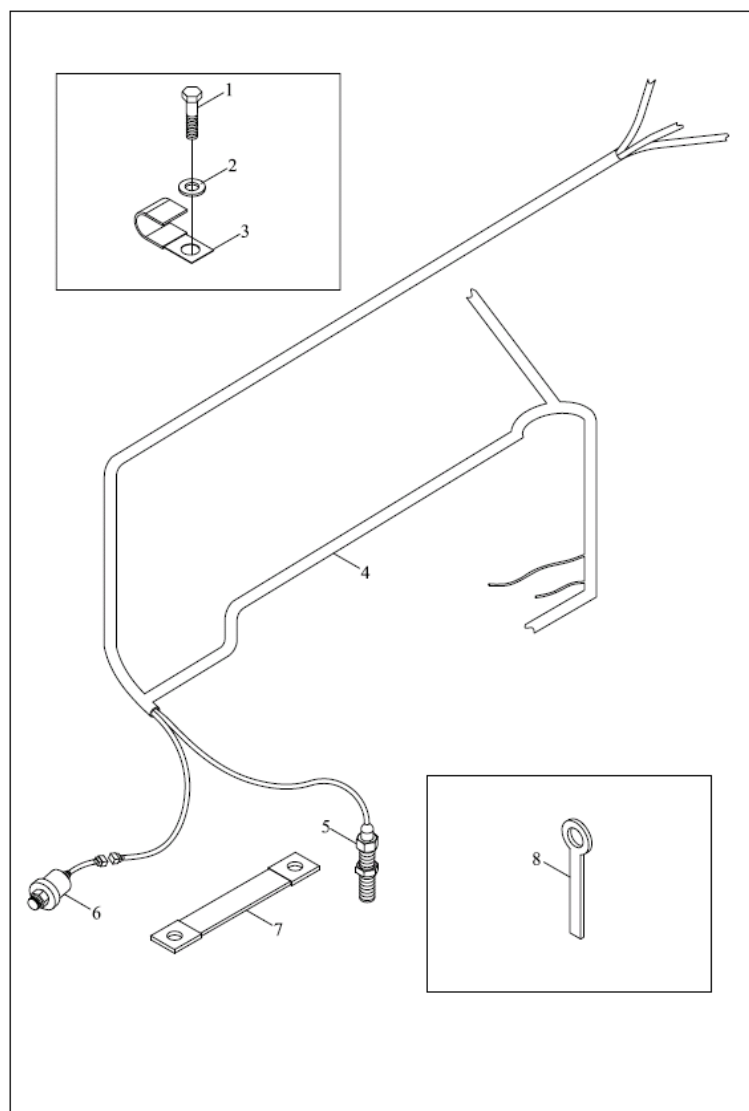

TD900.481N 48.1-发动机线束安装总成 48.1-ENGINE HARNESS INSTALLATION ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
2	GBT93-8-A0P	垫圈	WASHER	2	2011-11_
3	FT65.48.095	线束紧固夹 (一)	HARNESS TIGHTEN CLIP (1)	2	2011-11_
4	TD900.481M.1	发动机线束总成	ENGINE HARNESS ASSEMBLY	1	2011-11_
5	TD800.481F.2	转速传感器	RPM SENSOR	1	2011-11_
6	FT65.48.073a	机油压力传感器	OIL PRESSURE SENSOR	1	2010-01_
6	FT700.48G.073a	机油压力传感器	OIL PRESSURE SENSOR	1	2004-01_
7	TD800.481F.3	搭铁线	WIRE GROUND	1	2011-11_
8	TA600.486-01	线束紧固夹	HARNESS TIGHTEN CLIP	1	2011-11_


TD900.482K 车身线束安装总成

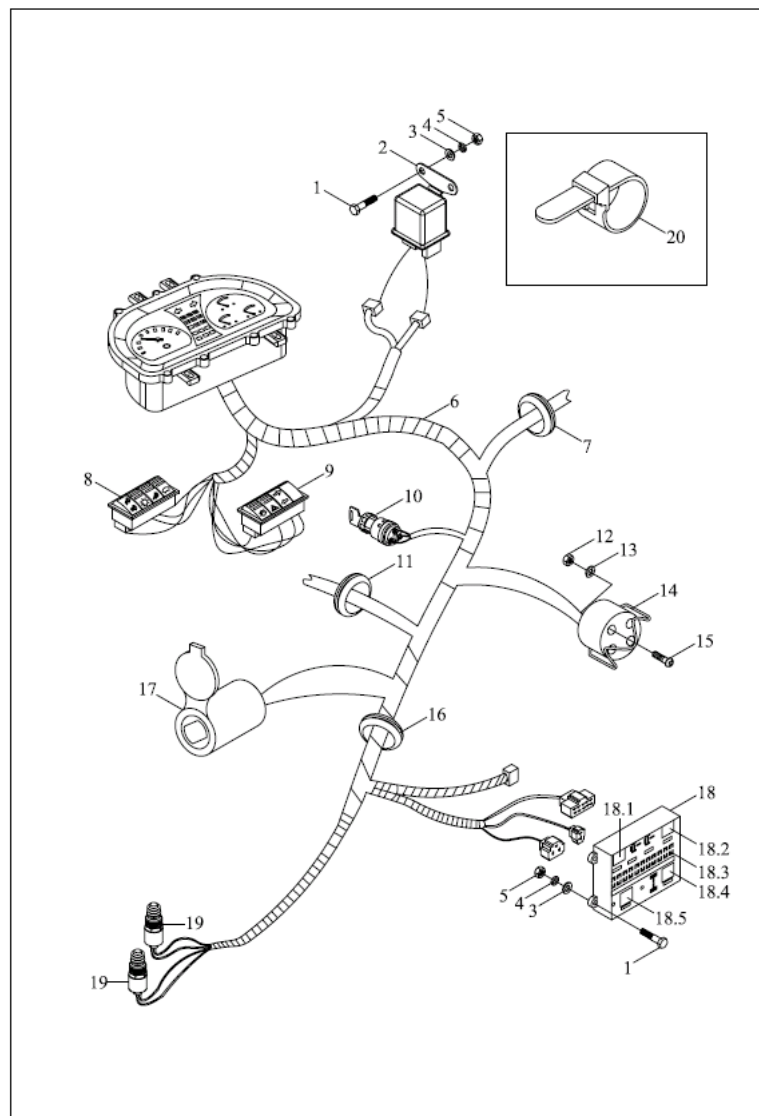

TD900.482K 48.2-车身线束安装总成 48.2-BODY HARNESS INSTALLATION ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT5783-M6X12-A2L	六角头螺栓	BOLT	6	2011-11_
10	FT300.48.064	点火锁	IGNITION LOCK	1	2011-11_
11	FT800A.48L.101	过线胶圈(一)	RUBBER RING (1)	1	2011-11_
12	GBT6170-M4-A2L	1型六角螺母	NUT	2	2011-11_
12	GBT6170-M4-A2L	1型六角螺母	NUT	2	2011-11_
13	GBT97.1-4-A0P	垫圈	WASHER	2	2011-11_
14	FT800.48B.068	工作灯插座	WORKING LIGHT SOCKET	1	2011-11_
15	GBT68-M4X35-A1L	开槽沉头螺钉	SCREW	2	2011-11_
16	FT800A.48L.106	过线胶圈(五)	RUBBER RING (5)	1	2011-11_
17	FT800.48B.069	充电器插座	CHARGER SOCKET	1	2011-11_
18	DE2383.51.6-04	保险片	FUSE	2	2011-11_
18	DE2383.51.6-06	保险片	FUSE	3	2011-11_
18	TD800.482D.3	电器盒总成	ELECTRIC BOX ASSEMBLY	1	2011-11_
18	DE2383.51.6-05	保险片	FUSE	9	2011-11_
18.1	TD800.482D.3.2	灯光继电器	LIGHT RELAY	1	2011-11_
18.2	TD800.482D.3.3	预热继电器	PREHEATING RELAY	1	2011-11_
18.3	GE20H4.34.13-01	保险片(5A)	FUSE (5A)	1	2011-11_
18.4	TD800.482D.3.4	闪光继电器	FLASH RELAY	1	2011-11_
18.5	TD800.482D.3.1	主电源继电器	MAIN POWER RELAY	1	2011-11_
19	FT300.48.033	制动灯开关	BRAKE LIGHT SWITCH	2	2011-11_
2	FT300.48.055	启动继电器	STARTING RELAY	1	2011-11_
20	3724D01-201	可松式扎带	RELEASABLE TIE	6	2011-11_
3	GBT97.1-6-A0P	平垫圈	WASHER	6	2011-11_
4	GBT93-6-A0P	弹簧垫圈	SPRING WASHER	6	2011-11_
5	GBT6170-M6-A2L	螺母	NUT	6	2011-11_


TD900.482K 车身线束安装总成

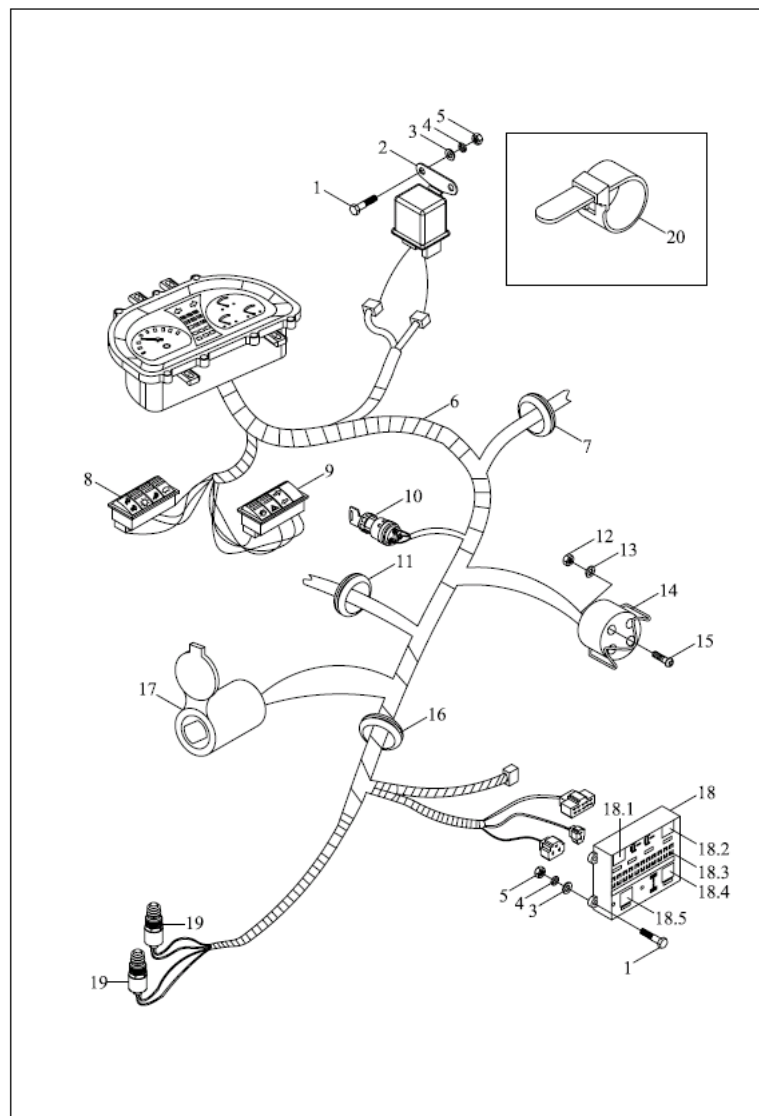

TD900.482K 48.2-车身线束安装总成(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
6	TD800.482E.1	车身线束总成	BODY HARNESS ASSEMBLY	1	2011-11_
7	TF1004.482-01	过线胶圈	RUBBER RING	2	2011-11_
7	TF1004.482-01	过线胶圈	RUBBER RING	2	2011-11_
8	TD900.482A.1	左翘板开关	LEFT PADDLE SWITCH	1	2011-11_
9	FT65.48.652	四联翘板开关(二)	FOUR-FUNCTION SWITCH(TWO)	1	2011-11_


TD800.483A 前灯线束安装总成

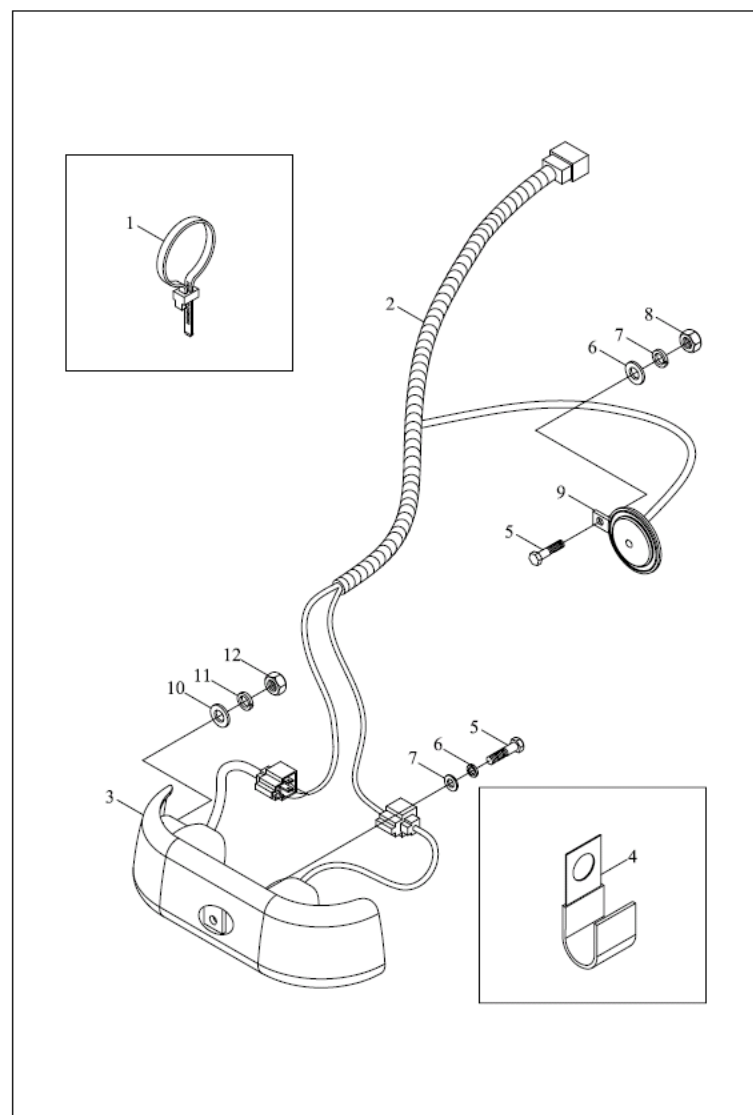

TD800.483A 48.3-前灯线束安装总成 48.3-FRONT LAMP HARNESS INSTALLATION ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	Q67405200	塑料紧箍带	PLASTIC FASTEN STRIP	1	2011-11_
10	GBT97.1-6-A0P	平垫圈	WASHER	2	2011-11_
11	GBT93-6-A0P	弹簧垫圈	SPRING WASHER	2	2011-11_
12	GBT6170-M6-A2L	螺母	NUT	2	2011-11_
2	FT800A.48L.021	前灯线束总成	FRONT LAMP HARNESS ASSEMBLY	1	
2	TD800.483A.1	前灯线束总成	FRONT LAMP HARNESS ASSEMBLY	1	2011-11_
3	FT600B.48B.031	前灯组合总成	FRONT LAMP COMBINATION ASSEMBLY	1	2011-11_
4	FT65.48.095	线束紧固夹 (一)	HARNESS TIGHTEN CLIP (1)	2	2011-11_
5	GBT5783-M8X16-A2L	螺栓	BOLT	3	2011-11_
6	GBT97.1-8-A0P	平垫圈	WASHER	3	2011-11_
7	GBT93-8-A0P	垫圈	WASHER	3	2011-11_
8	GBT6170-M8-A2L	螺母	NUT	1	2011-11_
9	FT65.48.340	电喇叭	ELECTRIC HORN	1	2011-11_


TD900.484 后灯线束安装总成

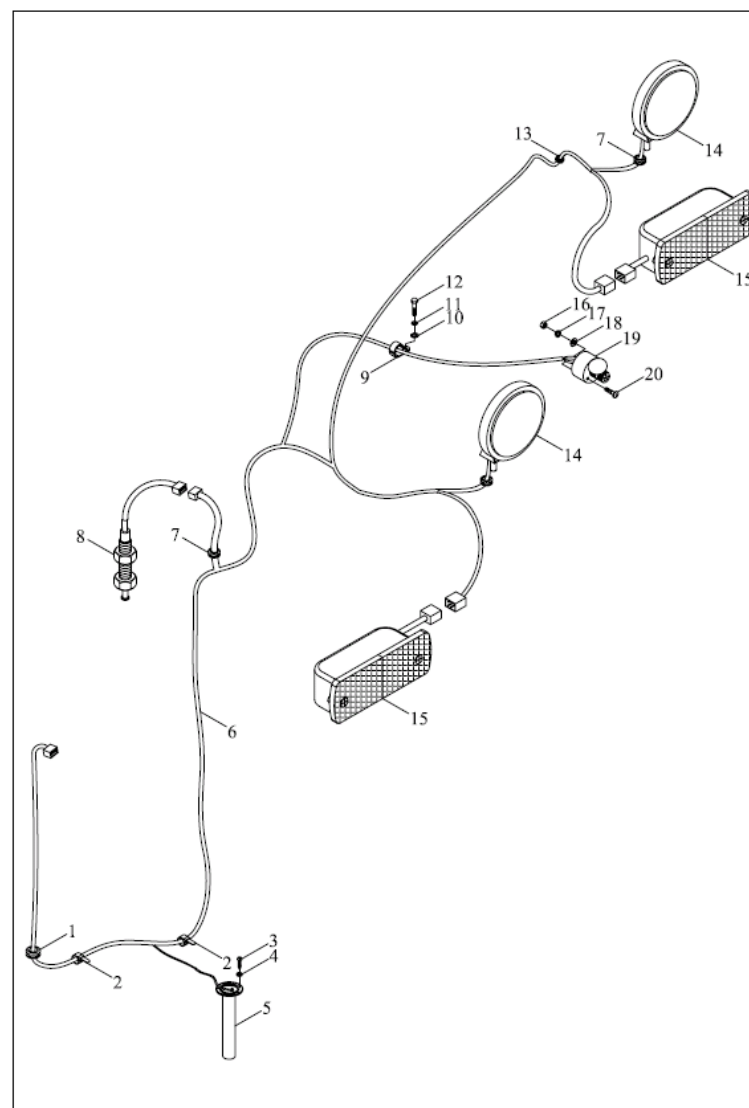

TD900.484 48.4-后灯线束安装总成 48.4-REAR LAMP HARNESS INSTALLATION ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TF1004.482-01	过线胶圈	RUBBER RING	1	2011-11_
1	TF1004.482-01	过线胶圈	RUBBER RING	1	2011-11_
10	GBT97.1-12-A0P	平垫圈	WASHER	1	2011-11_
11	GBT93-12-A0P	弹簧垫圈	SPRING WASHER	1	2011-11_
12	GBT5783-M12X25-A3L	六角头螺栓	BOLT	1	2011-11_
13	FT65.48.092	穿线胶圈 (3)	THROUGH HARNESS WASHER 3	2	2011-11_
14	FT800A.48L.053	后照灯总成	REAR LAMP ASSEMBLY	2	2011-11_
15	FT65.48.052a	后尾灯总成	TAIL LAMP ASSEMBLY	1	2012-02_
15	FT800A.48L.052	后尾灯总成	TAIL LAMP ASSEMBLY	2	2011-11_
16	GBT6170-M5-A2L	1型六角螺母	NUT	3	2011-11_
17	GBT93-5-A0P	标准型弹簧垫圈	WASHER	3	2011-11_
18	GBT97.1-5-A0P	垫圈	WASHER	3	2011-11_
19	TD900.484.2	后挂车插座	REAR TRAILER SOCKET	1	2012-02_
19	FT65.48.080	后挂车插座	REAR TRAILER SOCKET	1	2011-11_
2	3724D01-201	可松式扎带	RELEASABLE TIE	6	2011-11_
20	GBT819.1-M5X35-A2L	十字槽沉头螺钉	CUNERSUNK FLAT HEAD SCREW WITH CROSS	3	2011-11_
3	GBT818-M4X10-A2L	十字槽盘头螺钉	RECESS	5	2011-11_
4	GBT93-4-A0P	标准型弹簧垫圈	SCREW	5	2011-11_
5	TD800.484.2	油量传感器	WASHER	1	2011-11_
6	TD900.484.1	后灯线束总成	OIL QUANTITY SENSOR	1	2011-05_
			REAR LAMP HARNESS ASSEMBLY		
6	TD800.484.1a	后灯线束总成		1	2004-01_
7	FT65.48.094	穿线胶圈(二)	REAR LAMP HARNESS ASSEMBLY	3	2011-11_
8	FT800A.48L.088	驻车制动开关	RUBBER RING (2)	1	2011-11_
9	FT800A.48L.106	过线胶圈 (五)	PARKING BRAKE SWITCH	1	2011-11_
			RUBBER RING (5)		


TD800.485A 蓄电池安装总成

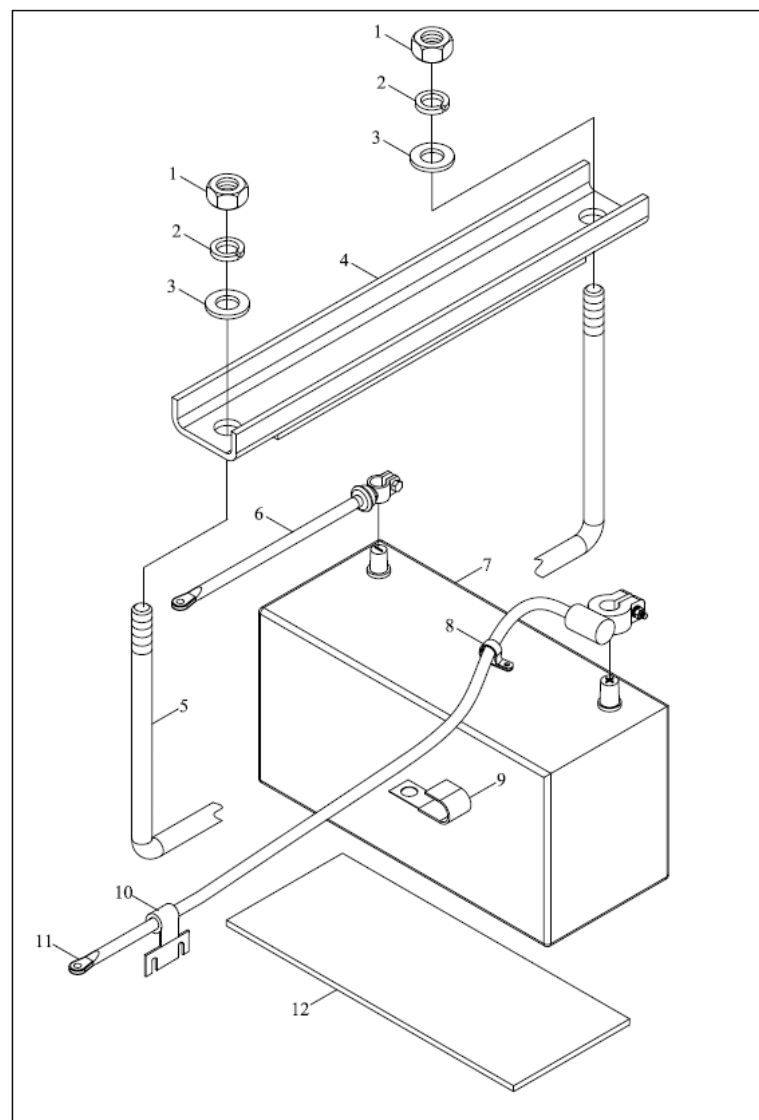

TD800.485A 48.5-蓄电池安装总成 48.5-BATTERY INSTALLATION ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT6170-M10-A3L	螺母	NUT	2	2011-11_
10	FT65.48.112	电源线固定板	POWER WIRE FIXING PLATE	1	2011-11_
11	FT65.48.090	电源线	POWER WIRE	1	
11	FT65.48.090a	蓄电池电源线	BATTERY POWER WIRE	1	2006-04_
11	FT65.48.090	电源线	POWER WIRE	1	
12	FT450.48.102	蓄电池减震垫	BATTERY SHOCK ABSORPTION MAT	1	2009-11_
12	TB450.485.1	蓄电池减震垫	BATTERY SHOCK ABSORPTION MAT	1	2010-08_
12	TG1204.485-03	橡胶垫 (一)	RUBBER GASKET (1)	1	2011-11_
2	GBT93-10-A0P	标准型弹簧垫圈	WASHER	2	2011-11_
3	GBT97.1-10-A0P	平垫圈	WASHER	2	2011-11_
4	TG1204.485-02	电瓶压板	BATTERY PRESS PLATE	1	2011-11_
5	TG1204.485-01	电瓶U型拉杆	U-TYPE PULL ROD OF BATTERY	1	2011-11_
6	FT65.48.091	车身搭铁线	BODY GROUNDING WIRE	1	2011-11_
7	TG1204.485.1	蓄电池总成	BATTERY ASSEMBLY	1	2011-11_
8	TD800.485A-03	固定夹	LOCKING CLAMP	1	2011-11_
9	TD800.485A-04	线束紧固夹	HARNESS TIGHTEN CLIP	1	2011-11_


TD800.487 组合仪表总成

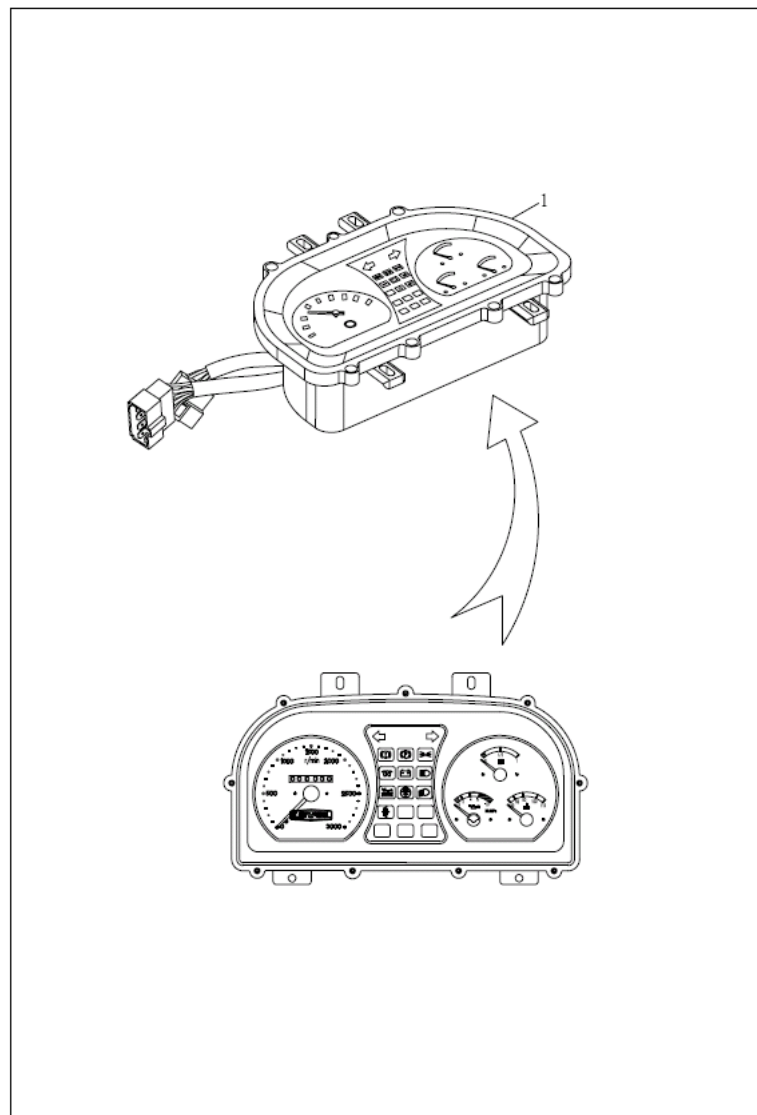

TD800.487 48.7-组合仪表总成 48.7-COMBINED INSTRUMENT ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT65.48.610c	组合仪表总成	COMBINED INSTRUMENT ASSEMBLY	1	2010-01_
1	FT700.48G.061b	组合仪表总成	COMBINED INSTRUMENT ASSEMBLY	1	2009-05_
1	FT700.48G.061a	组合仪表总成	COMBINED INSTRUMENT ASSEMBLY	1	


FT300.49.001Tool box assembly

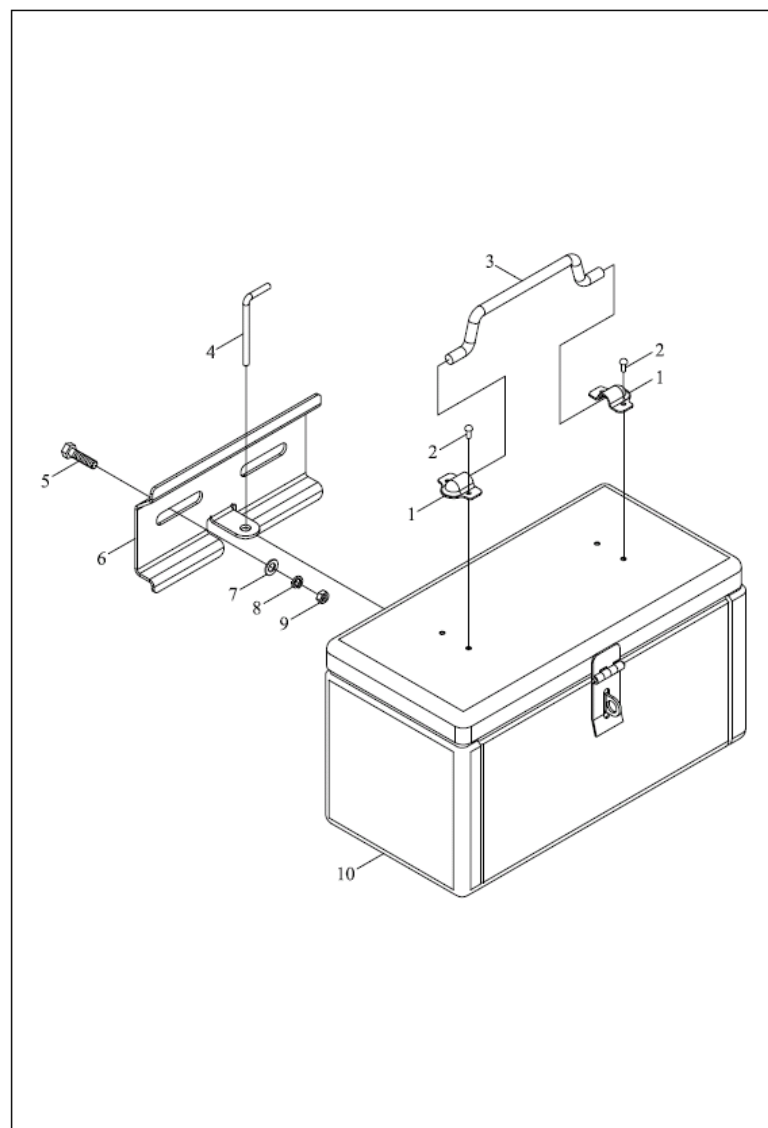

FT300.49.001 49-工具箱总成 49-TOOL BOX ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT5783-M12X25-A3L	六角头螺栓	BOLT	2	2011-11_
1	FT65.49.101	提手座	HANDLE SEAT	2	2003-11_
10	FT300.49.012	工具箱焊合总成	TOOL BOX WELDMENT ASSEMBLY	1	2003-11_
2	GBT 867-4X8	半圆头铆钉	RIVET	2	2003-11_
3	FT65.49.115	提手	HANDLE	1	2003-11_
4	FT65.49.102	插销	CROSS PIN	1	2003-11_
5	GBT5783-M12X35-A3L	螺栓	BOLT	2	2003-11_
5	GBT5783-M12X35-A3L	螺栓	BOLT	2	2003-11_
6	FT65.49.103	固定支板	FIXING SUPPORT PLATE	1	2003-11_
7	GBT97.1-12-A0P	平垫圈	WASHER	2	2003-11_
8	GBT93-12-A0P	弹簧垫圈	SPRING WASHER	2	2003-11_
9	GBT6170-M12-A3L	螺母	NUT	2	2003-11_


TD800.501A 主油箱总成

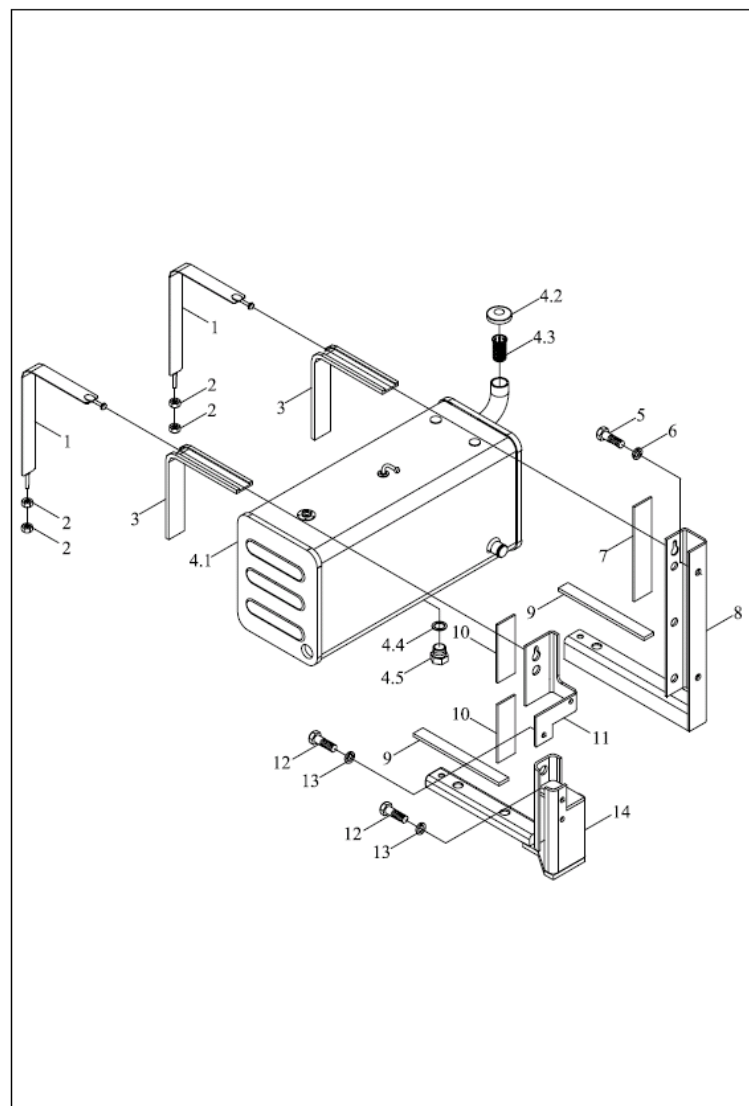

TD800.501A 50.1-主油箱总成 50.1-MAIN OIL TANK ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT800A.50.051	主油箱轧带总成	MAIN OIL TANK BELT ASSEMBLY	2	2011-11_
1	FT800A.50.051	主油箱轧带总成	MAIN OIL TANK BELT ASSEMBLY	2	2011-11_
10	TD800.501-05	油箱短胶垫	OIL TANK SHORT RUBBER GASKET	2	2011-11_
11	TD800.501.3	上支架焊合	UPPER BRACKET WELDMENT	1	2011-11_
12	GBT93-10-A0P	标准型弹簧垫圈	WASHER	4	2011-11_
13	GBT5783-M10X20-A3L	螺栓	BOLT	4	2011-11_
14	TD800.501.4	下支架焊合	LOWER BRACKET WELDMENT	1	2011-11_
2	GBT6170-M10-A3L	螺母	NUT	4	2011-11_
3	FT800A.50.209	主油箱轧带橡胶条	MAIN OIL TANK BELT RUBBER STRIP	2	2011-11_
4	TD800.501A.1	主油箱总成	MAIN OIL TANK ASSEMBLY	1	2011-11_
4.1	TD800.501A.1.2	主油箱焊合	MAIN OIL TANK WELDMENT	1	2011-11_
4.2	TD800.501A.1.1	油箱盖	OIL TANK COVER	1	2011-11_
4.3	FT300.50.015	滤网总成	FILTER MESH ASSEMBLY	1	2011-11_
4.4	JBT982-16	组合密封垫圈	COMBINED SEAL GASKET	1	2011-11_
4.5	FT65.50.226	放油螺塞	OIL DISCHARGING SCREW PLUG	1	2011-11_
5	GBT5783-M16X35-A3L	六角头螺栓	BOLT	2	2011-11_
6	GBT93-16-A0P	弹簧垫圈	SPRING WASHER	2	2011-11_
7	FT800A.50.207	主油箱橡胶垫 (一)	MAIN OIL TANK RUBBER WASHER (1)	1	2011-11_
8	TD800.501.2	主油箱前支架焊合	MAIN OIL TANK FRONT BRACKET WELDMENT	1	2011-11_
9	TD800.502-01	油箱胶垫	OIL TANK RUBBER WASHER	2	2011-11_


TD800.502 副油箱总成

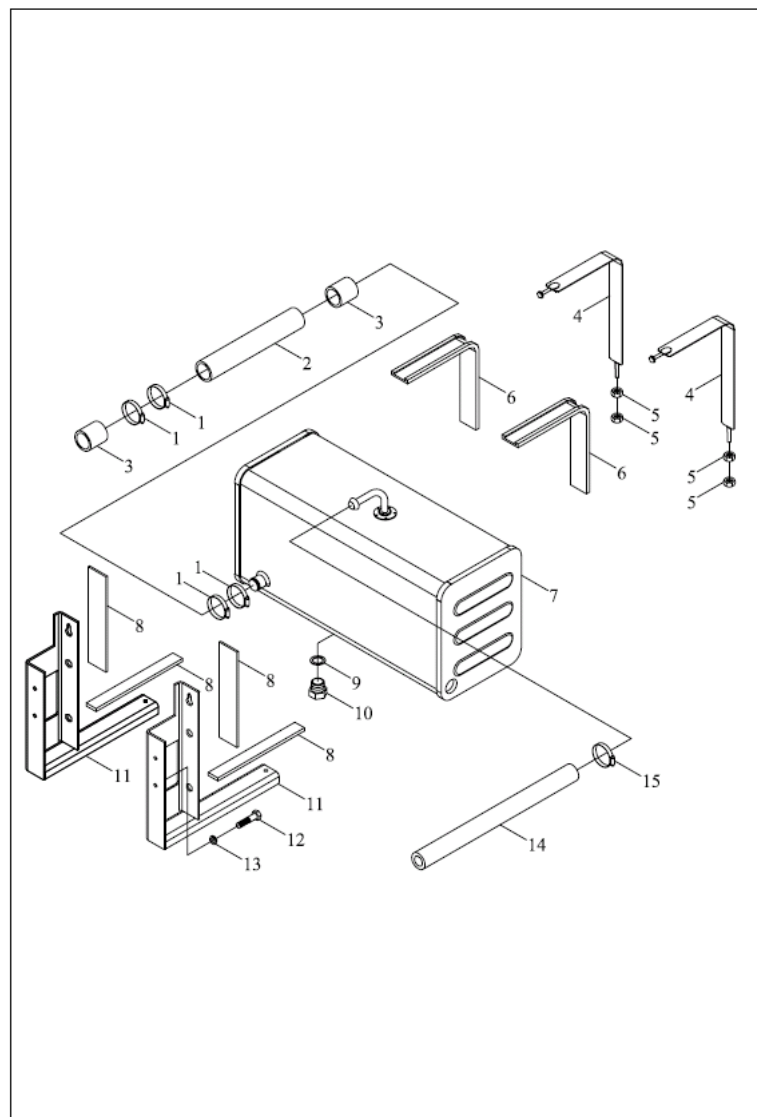

TD800.502 50.2-副油箱总成 50.2-AUXILIARY OIL TANK ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	Q67645	卡箍	CLAMP HOOP	4	2011-11_
10	FT65.50.226	放油螺塞	OIL DISCHARGING SCREW PLUG	1	2011-11_
11	TD800.502.2	副油箱支架焊接	AUXILIARY OIL TANK BRACKET WELDMENT	2	2011-11_
11	TD800.502.2	副油箱支架焊接	AUXILIARY OIL TANK BRACKET WELDMENT	2	2011-11_
12	GBT5783-M10X20-A3L	螺栓	BOLT	4	2011-11_
13	GBT93-10-A0P	标准型弹簧垫圈	WASHER	4	2011-11_
14	TD800.502-04	排气软管	EXHAUST HOSE	1	
14	TD800.505-01	呼吸软管	BREATH HOSE	1	2006-05_
15	Q673B23	钢带型弹性环箍	CLAMP	2	2011-11_
2	TD800.502-03	主副油箱连接管	MAIN/ASSISTANT OIL TANK CONNECTING PIPE	1	
2	TD800.502-03a	主副油箱连接管	MAIN/ASSISTANT OIL TANK CONNECTING PIPE	1	2006-04_
3	TD800.502-05	橡胶连接管	RUBBER CONNECTING PIPE	2	2011-11_
4	TD800.502.3	副油箱扎带焊接	AUXILIARY OIL TANK FASTENING TIE	2	2011-11_
5	GBT6170-M10-A3L	螺母	WELDMENT	4	2011-11_
6	TD800.502-02	副油箱扎带橡胶条	NUT	2	2011-11_
7	TD800.502.1	副油箱焊接	AUXILIARY OIL TANK FASTENING TIE RUBBER STRIP	1	2011-11_
8	TD800.502-01	油箱胶垫		4	2011-11_
9	JBT982-16	组合密封垫圈	AUXILIARY OIL TANK WELDMENT OIL TANK RUBBER WASHER COMBINED SEAL GASKET	1	2011-11_


TD800.503A 进出油管总成

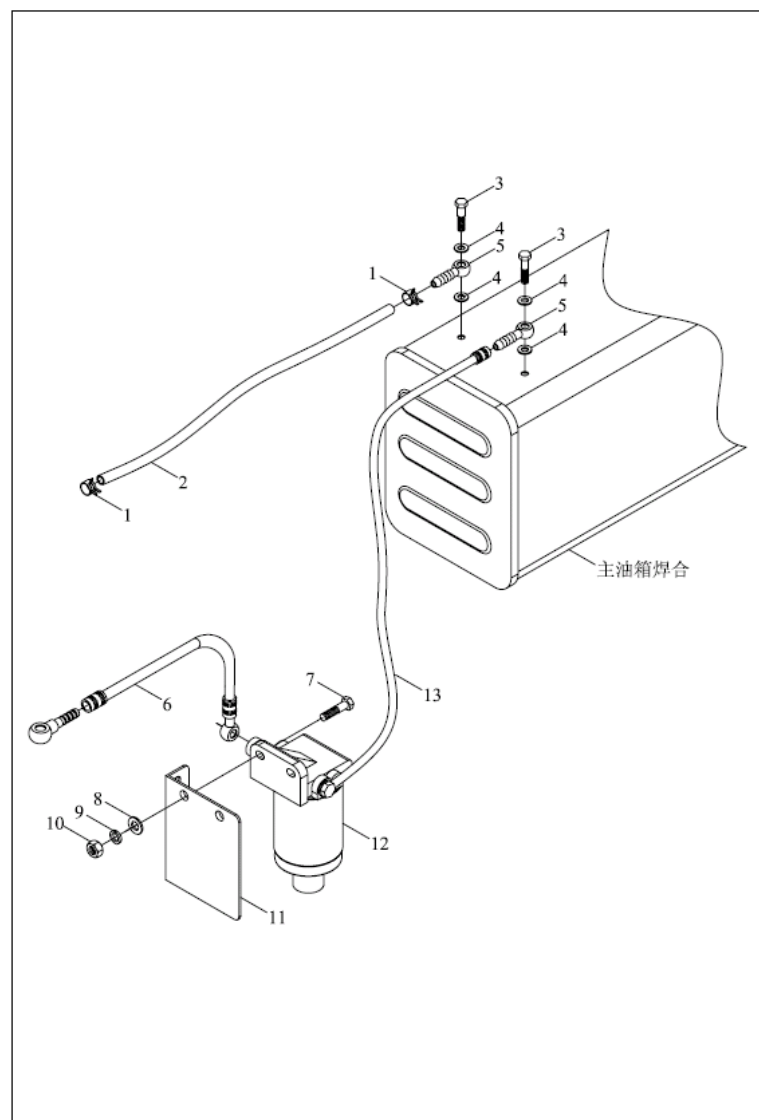

TD800.503A 50.3-进出油管总成 50.3-OIL INLET/OUTLET PIPE ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	Q673B155	钢带型弹性环箍	CLAMP	2	2011-11_
10	GB/T6170-M8-8-A2L	I型六角螺母	I-TYPE HEXAGON NUT	2	2012-08_
11	TD800.503A-01	安装支架	INSTALLATION BRACKET	1	2011-11_
12	FT800A.50.061a	旋装柴滤器总成	FUEL FILTER ASSEMBLY	1	2011-11_
13	TD800.503A.1	出油管总成	OIL OUTLET PIPE ASSEMBLY	1	2011-11_
2	FT800A.50P.101a	回油管	OIL RETURN PIPE	1	
2	FT700.50G.121	回油管	OIL RETURN PIPE	1	2011-11_
3	FT65.50.106	空心螺栓	HOLLOW BOLT	2	2011-11_
4	JBT982-14	组合密封垫圈	COMBINED SEAL GASKET	4	2011-11_
4	JBT982-14	组合密封垫圈	COMBINED SEAL GASKET	4	2011-11_
5	FT800A.50.162	油管接头	JOINT	1	2011-11_
6	FT800A.50P.081	输油管总成	OIL CONVEYING PIPE ASSEMBLY	1	2011-11_
7	GB/T5783-M8X30-A2L	螺栓	BOLT	2	2011-11_
8	GB/T97.1-8-A0P	平垫圈	WASHER	2	2011-11_
9	GB/T93-8-A0P	垫圈	WASHER	2	2011-11_


TD800.55D 提升器装置总成-1

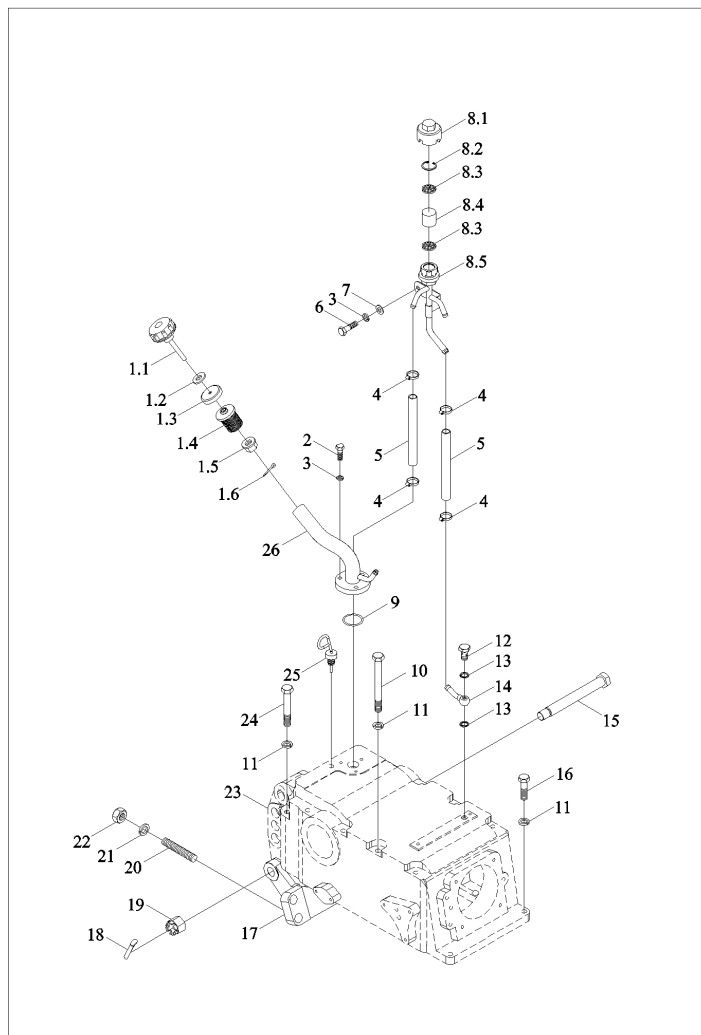

TD800.55D-1 55.1-提升器装置总成-1 LIFT INSTALLATION ASSEMBLY-1


标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
0.1	TD-B02223	TD提升器维修包	RISER KIT	1	2014-01_
1	TA700.55A.7	螺塞总成	PLUG,THREADED	1	2013-05_
1	FT300.55B.029	油管塞总成	OIL PIPE PLUG ASSEMBLY	1	2011-11_
1.1	FT700.55D.029	手轮总成 I	HANDLE WHEEL ASSEMBLY I	1	2011-11_
1.2	JBT982-8	组合垫圈	COMBINED GASKET	1	2011-11_
1.3	FT700.55D.129	盖板	COVER PLATE	1	2011-11_
1.4	FT300.55B.165	张紧胶套	TENSION RUBBER SLEEVE	1	2011-11_
1.5	FT300.55B.166	调节螺母	ADJUSTING NUT	1	2011-11_
1.6	GBT91-3.2X16-A0P	开口销	PIN	1	2011-11_
10	TD800.55B-02	六角头螺栓	BOLT	8	2011-11_
11	GBT93-12-A0P	弹簧垫圈	SPRING WASHER	12	2011-11_
12	FT700.55D.147	空心螺栓	HOLLOW BOLT	1	2011-11_
13	JBT982-8	组合垫圈	COMBINED GASKET	2	2011-11_
14	TD800.55B.4	呼吸连接钢管总成	BREATH CONNECT STEEL PIPE ASSEMBLY	1	2011-11_
15	FT800.55.120a	连接螺栓	CONNECTING BOLT	1	2011-11_
16	GBT5783-M12X40-A3L	螺栓	BOLT	2	2011-11_
17	FT800.55.119b	上拉杆支座	UPPER PULL ROD SUPPORT SEAT	1	2011-11_
18	GBT91-4X36-A0P	开口销	PIN	1	2011-11_
19	GBT6181-M20-A9L	螺母	NUT	1	2011-11_
19	GBT6181-M20-A9L	螺母	NUT	1	2011-11_
2	GBT5781-M8X30-A2L	六角头螺栓	BOLT	3	2011-11_
21	GBT93-16-A0P	弹簧垫圈	SPRING WASHER	4	2011-11_
22	GBT6170-M16-A2L	螺母	NUT	4	2011-11_
23	TD800.55D.1	提升器总成	LIFTER ASSEMBLY	1	2011-11_
24	GBT899-GM16-M16X50-8.8-A3L	双头螺栓	8.8-A3L STUD	8	2011-11_

TD800.55D 提升器装置总成-1

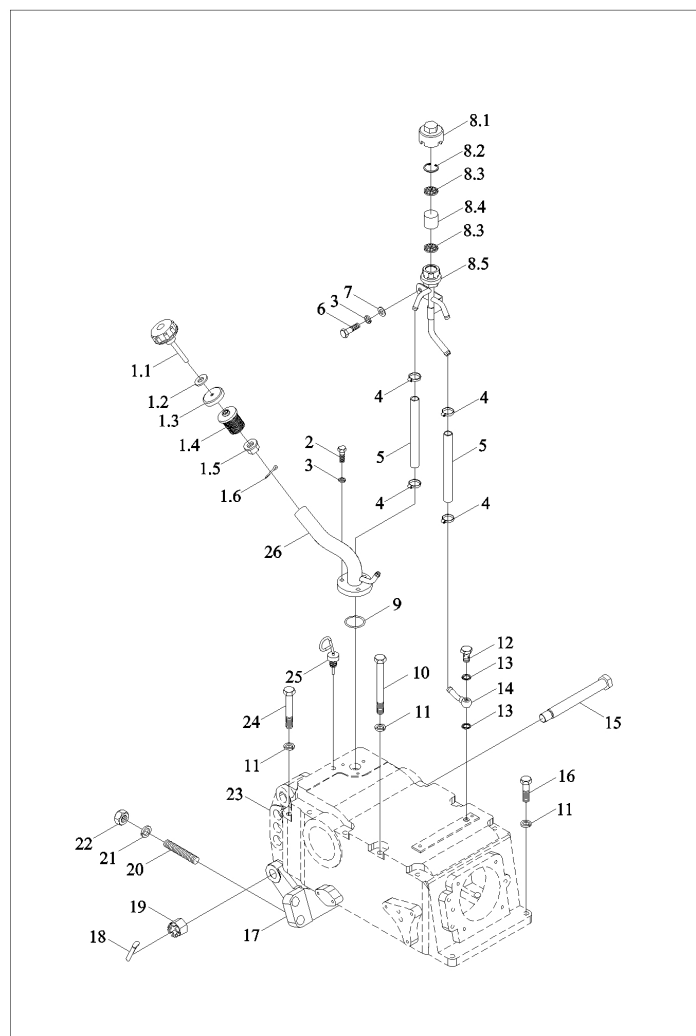


TD800.55D-1 55.1-提升器装置总成-1(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
25	TA700.55.4	油位标尺总成	DIPSTICK ASSEMBLY	1	2011-11_
25.1	2011.10.15	油位标尺总成	DIPSTICK ASSEMBLY	1	2011-11_
26	TD800.55B.2	加油管焊合	OIL FILLING PIPE WELDMENT	1	2011-11_
3	GBT93-8-A0P	垫圈	WASHER	4	2011-11_
4	Q67516	A型蜗杆传动式软管环箍	A-TYPE WORM TRANSMISSION HOSE CLAMP	4	2011-11_
5	TD800.55B.3-01	连接胶管	CONNECTING RUBBER PIPE	2	2011-11_
6	GBT5783-M8X16-A2L	螺栓	BOLT	1	2011-11_
7	GBT97.1-8-A0P	平垫圈	WASHER	1	2011-11_
8	TD800.55B.3	呼吸器总成		1	2011-11_
8.1	FT700.55D.136	呼吸器盖	RESPIRATOR COVER	1	2011-11_
8.1	FT700.55D.136	呼吸器盖	RESPIRATOR COVER	1	2011-11_
8.2	GBT893.1-26	孔用弹性挡圈	SNAP RING	1	2011-11_
8.3	FT650.40.167	座板	SEAT PLATE	2	2011-11_
8.4	FT700.55D.109	呼吸器滤芯	BREATH FILTER ELEMENT	1	2011-11_
8.5	TD800.55B.3.1	呼吸体焊合	BREATHER BODY WELDMENT	1	2011-11_
9	GBT3452.1-34.5X2.65G	液压气动用O形橡胶密封圈	O-SEAL RING	1	2011-11_

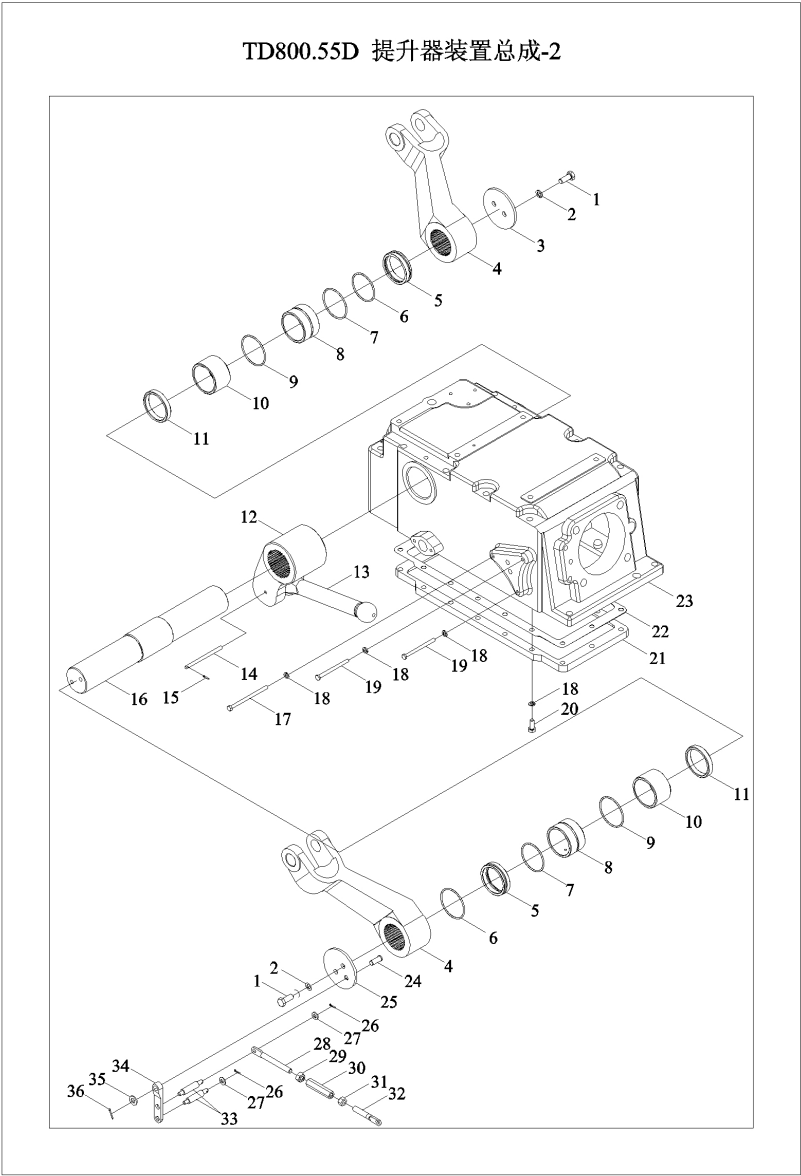

TD800.55D-2 55.2-提升器装置总成-2 LIFT INSTALLATION ASSEMBLY-2


标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
0	TD800.55D.1	提升器总成	LIFTER ASSEMBLY	1	2011-11_
1	GB/T5783-M10X20	螺栓	BOLT	4	2011-11_
10	650.55.159	轴套 II	BUSH 2	2	2011-11_
11	650.55.158	隔套	SPACER BUSH	2	2011-11_
12	FT800.55.129B	内提升臂	INNER LIFTING ARM	1	2011-11_
13	FT800.55.130B	活塞顶杆	PISTON TOP ROD	1	2011-11_
14	GB/T882-B6X74	销轴	PIN	1	2011-11_
15	GB/T91-2X20	销	PIN	1	2009-11_
16	550.55.108	提升轴	LIFTING SHAFT	1	2011-11_
17	GB/T5782-M8X100	六角头螺栓	BOLT	1	2011-11_
18	GB/T93-8	垫圈8	WASHER 8	19	2011-11_
19	GB/T5782-M8X80	六角头螺栓	BOLT	2	2009-11_
2	GB/T93-10	垫圈10	WASHER 10	4	2011-11_
20	GB/T5781-M8X16	六角头螺栓全螺纹C级		16	2009-11_
21	650.55.113-2	底盖板	COVER;UNDER	1	2011-11_
22	650.55.112-2	纸垫	GASKET 0.5	1	2011-11_
23	FT800.55.110A	提升器壳体	LIFTER HOUSING	1	2011-11_
24	650.55.143-2	销轴 II	PIN 2	1	2011-11_
25	650.55.144	右举臂压板	RIGHT LIFT ARM PRESSURE PLATE	1	2011-11_
26	GB/T91-2X14	销	PIN	2	2009-11_
27	GB/T97.1-8	垫圈	WASHER	2	2011-11_
28	FT65.55.124	后调节杆	REAR ADJUSTING ROD	1	2011-11_
29	GB/T6170-M10	螺母M10	NUT M10	1	2011-11_
3	650.55.116	左举臂压板	PRESSURE PLATE OF LEFT LIFT ARM	1	2011-11_
30	FT65.55.123	调节螺套	ADJUSTING SCREW SLEEVE	1	2011-11_

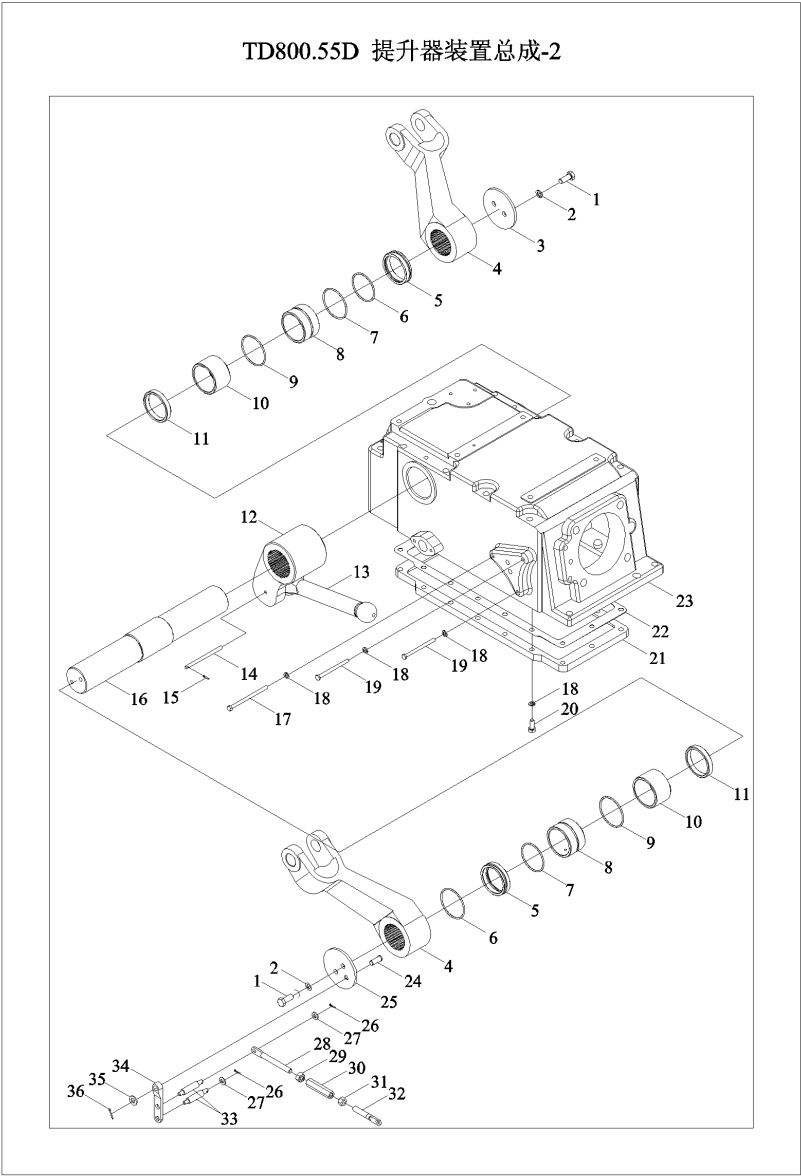

TD800.55D-2 55.2-提升器装置总成-2(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
31	FT65.55.126	螺栓	BOLT	1	2011-11_
32	FT65.55.125	前调节杆	FRONT ADJUSTING ROD	1	2011-11_
33	FT800.55.143-1	销轴 I	PIN 1	2	2011-11_
34	650.55.142	中间臂	MIDDLE ARM	1	2011-11_
35	GBT97.1-10	垫圈10	WASHER 10	1	2011-11_
36	GBT91-2.5X16	开口销	PIN	1	2013-10_
4	FT800.55.107A	举臂	LIFTING ARM	2	2011-11_
5	FT800.55.106	力调节弹簧垫片	FORCE ADJUSTING SPRING WASHER	2	2011-11_
6	GBT3452.1-60X2.65	液压气动用O形橡胶密封圈	O-SEAL RING	2	2011-11_
7	GBT3452.1-56X2.65	液压气动用O形橡胶密封圈	O-SEAL RING	2	2011-11_
8	650.55.114	铜轴套	COPPER SHAFT SLEEVE	2	2011-11_
9	GBT3452.1-56x5.3	O形密封圈	O RING	2	2009-11_


TD800.55D 提升器装置总成-3

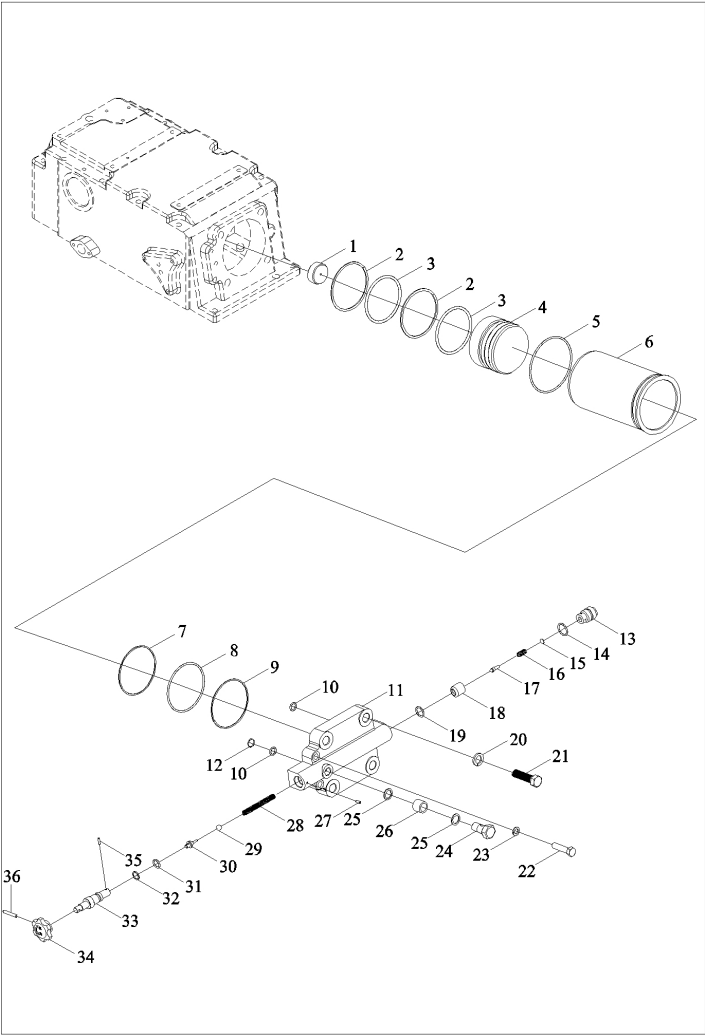

TD800.55D-3 55.3-提升器装置总成-3 LIFT INSTALLATION ASSEMBLY-3

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
0	TD800.55D.1	提升器总成	LIFTER ASSEMBLY	1	2011-11_
1	650.55.132	活塞球座	PISTON BALL SEAT	1	2011-11_
10	GB/T3452.1-12.5X2.65	O形密封圈	O RING	2	2011-11_
11	FT65.55.144a	油缸盖	OIL CYLINDER COVER	1	2011-11_
11	FT65.55.144a	油缸盖	OIL CYLINDER COVER	1	2011-11_
12	FT65.55.174	薄垫圈	THIN WASHER	1	2011-11_
13	650.55.139	安全阀螺塞	PLUG SAFETY VALVE	1	2011-11_
14	GB/T3452.1-23.6X2.65	液压气动用O形橡胶密封圈	O-SEAL RING	1	2011-11_
14	GB/T3452.1-23.6X2.65	液压气动用O形橡胶密封圈	O-SEAL RING	1	2011-11_
15	650.55.152	调整垫片	ADJUSTING WASHER	999	2011-11_
16	300.55.133	油缸安全阀弹簧	SAFTY VALVE SPRING OF OIL CYLINDER	1	2011-11_
17	300.55.134	油缸安全阀体	SAFTY VALVE BODY OF CYLINDER	1	2011-11_
18	650.55.136	安全阀座	SAFETY VALVE SEAT	1	2011-11_
19	GB/T3452.1-19X2.65	液压气动用O形橡胶密封圈	O-SEAL RING	1	2011-11_
2	GB/T1235-110X101X2	挡圈	RETAINER RING	2	2011-11_
20	GB/T93-18	垫圈	WASHER	4	2011-11_
21	GB/T5783-M18X1.5X60	螺栓	BOLT	4	2011-11_
22	GB/T5783-M12X50	六角头螺栓全螺纹	BOLT	2	2011-11_
23	GB/T93-12	垫圈	WASHER	2	2011-11_
24	65.55.103	空心螺栓	HOLLOW BOLT	1	2011-11_
25	CF250B.55.302	铝垫	ALUMINUM GASKET	2	2011-11_
26	650.55.149	隔套	SPACER BUSH	1	2011-11_
27	GB/T57-M5X12	螺钉	SCREW	1	2011-11_
28	650.55.135	调节阀弹簧	ADJUSTING VALVE SPRING	1	2011-11_
29	GB/T308-φ12	钢球	BALL	1	2011-11_


TD800.55D 提升器装置总成-3

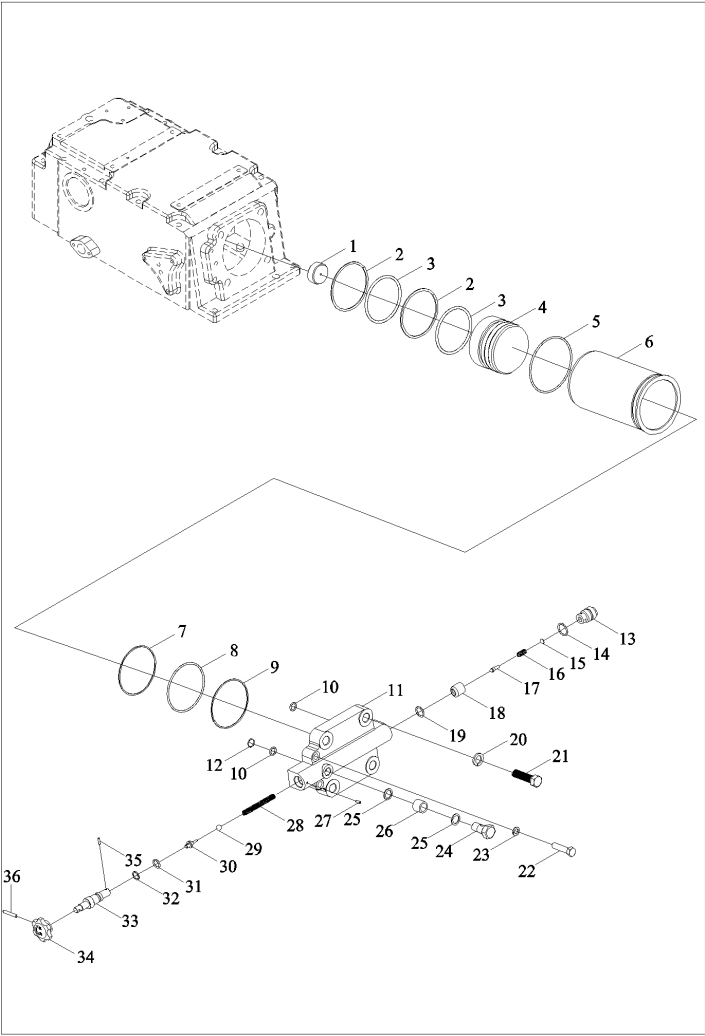

TD800.55D-3 55.3-提升器装置总成-3(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
3	GBT3452.1-100X5.3	O形密封圈	O RING	2	2011-11_
30	650.55.146	调节阀	ADJUSTING VALVE	1	2011-11_
31	GBT3452.1-15X2.65	液压气动用O形橡胶密封圈	O-SEAL RING	1	2011-11_
32	FT65.55.175	挡圈	RETAINER RING	1	2011-11_
33	FT65.55.141	调节杆	ADJUSTING ROD	1	2011-11_
34	E300.55.140A	速度下降阀手轮	SPEED DROP VALVE HAND WHEEL	1	2011-11_
34	E300.55.140A	速度下降阀手轮	SPEED DROP VALVE HAND WHEEL	1	2011-11_
35	300.55.138	销	PIN	1	2011-11_
36	GBT879-4X20	销	PIN	1	2011-11_
4	650.55.131	活塞	PISTON	1	2011-11_
4	650.55.131	活塞	PISTON	1	2011-11_
5	GBT3452.1-118X3.55	液压气动用O形橡胶密封圈	O-SEAL RING	1	2011-11_
6	FT65.55.109a	缸筒	CYLINDER TRUNK	1	2011-11_
7	FT65.55.121	矩形密封圈	RECTANGULAR SEAL RING	1	2011-11_
8	GBT3452.1-103X3.55	液压气动用O形橡胶密封圈	O-SEAL RING	1	2011-11_
9	GBT1235-110X104X1.5	挡圈	RETAINER RING	1	2011-11_


TD800.55D 提升器装置总成-4

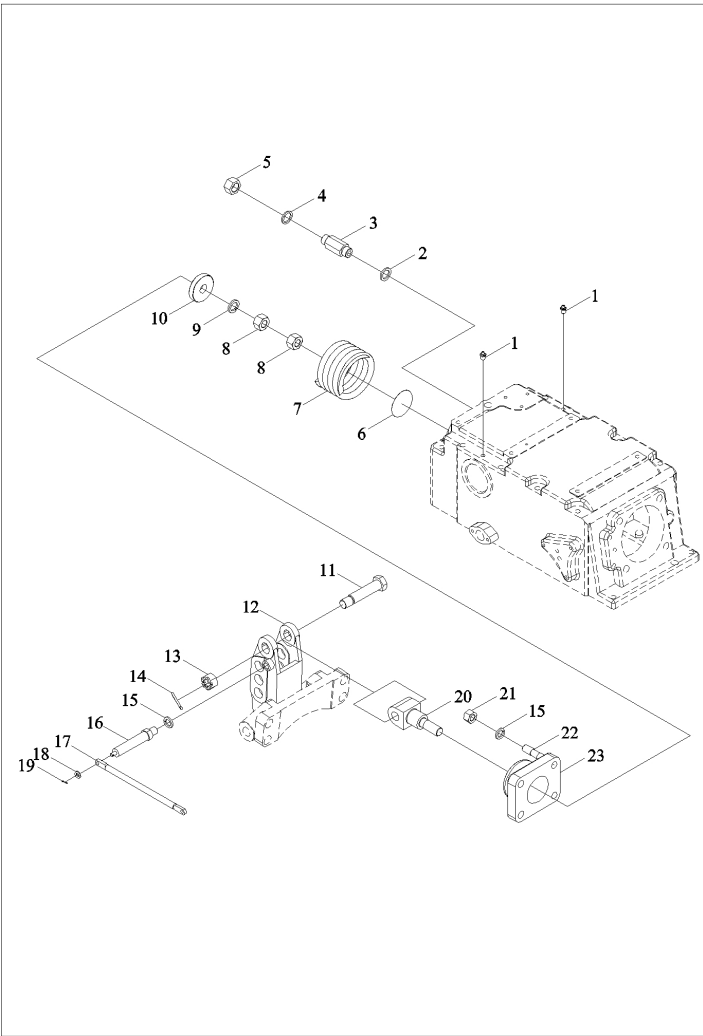

TD800.55D-4 55.4-提升器装置总成-4 LIFT INSTALLATION ASSEMBLY-4

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
0	TD800.55D.1	提升器总成	LIFTER ASSEMBLY	1	2011-11_
1	GBT1152-M10X1	油杯	OIL CUP	2	2011-11_
10	650.55.103	弹簧压板	SPRING PRESSURE PLATE	1	2011-11_
11	650.55.121	螺栓	BOLT	1	2011-11_
12	FT800.55.101	连接架	CONNECTING BRACKET	1	2009-11_
13	GBT6181-M20	螺母	NUT	1	2009-11_
14	GBT91-4X36	销	PIN	1	2009-11_
15	GBT93-16	垫圈 16	WASHER	5	2011-11_
16	FT800.55.145	销	PIN	1	2011-11_
17	FT800.55.140	连接杆		1	2011-11_
18	GBT97.1-8	垫圈	WASHER	1	2011-11_
19	GBT91-2X14	销	PIN	1	2009-11_
2	650.55.151	垫片	WASHER	1	2011-11_
20	650.55.102	力调节传感接头	FORCE ADJUSTING SENSOR JOINT	1	2011-11_
21	GBT6170-M16	螺母	NUT	4	2011-11_
22	GBT899-M16-M16X50	双头螺柱	8.8-A3L STUD	4	2011-11_
22	GBT899-M16-M16X50	螺柱	STUD	4	2011-11_
23	FT800.55.104	弹簧座	SPRING SEAT	1	2011-11_
3	FT800.55.150	放油接头	OIL DISCHARGING JOINT	1	2011-11_
4	25.55.117	输油管垫片	WASHER OF OIL CONVEYING PIPE	1	2011-11_
5	25.55.114	输油管螺母	OIL CONVEYING PIPE NUT	1	2011-11_
6	650.55.153	力调节弹簧调整垫片	ADJUSTING WASHER OF FORCE ADJUSTING	1	2011-11_
7	650.55.154	力调节弹簧	SPRING	1	2011-11_
8	GBT6171-M20X1.5-8	螺母	FORCE ADJUSTING SPRING	2	2011-11_
8	GBT6171-M20X1.5-8	1型六角螺母	NUT	2	2011-11_


TD800.55D 提升器装置总成-4

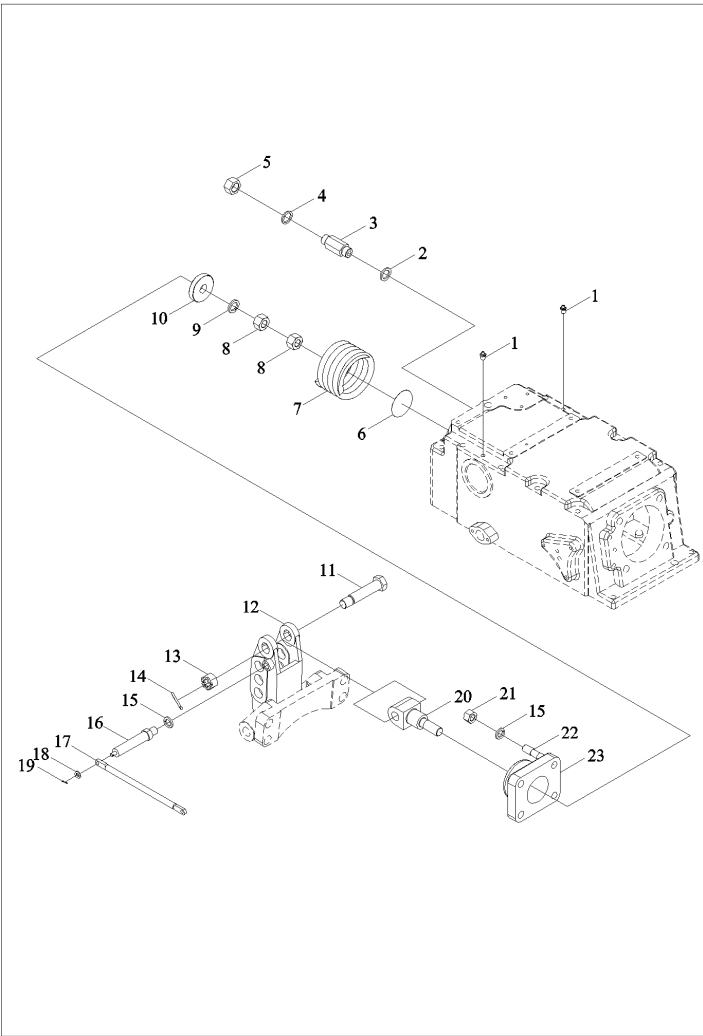

TD800.55D-4 55.4-提升器装置总成-4(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
9	FT800.55.101a	连接架	CONNECTING BRACKET	1	2007-08_
9	GBT93-20	垫圈	WASHER	1	2013-10_


FT800.56.001a 悬挂机构总成-1

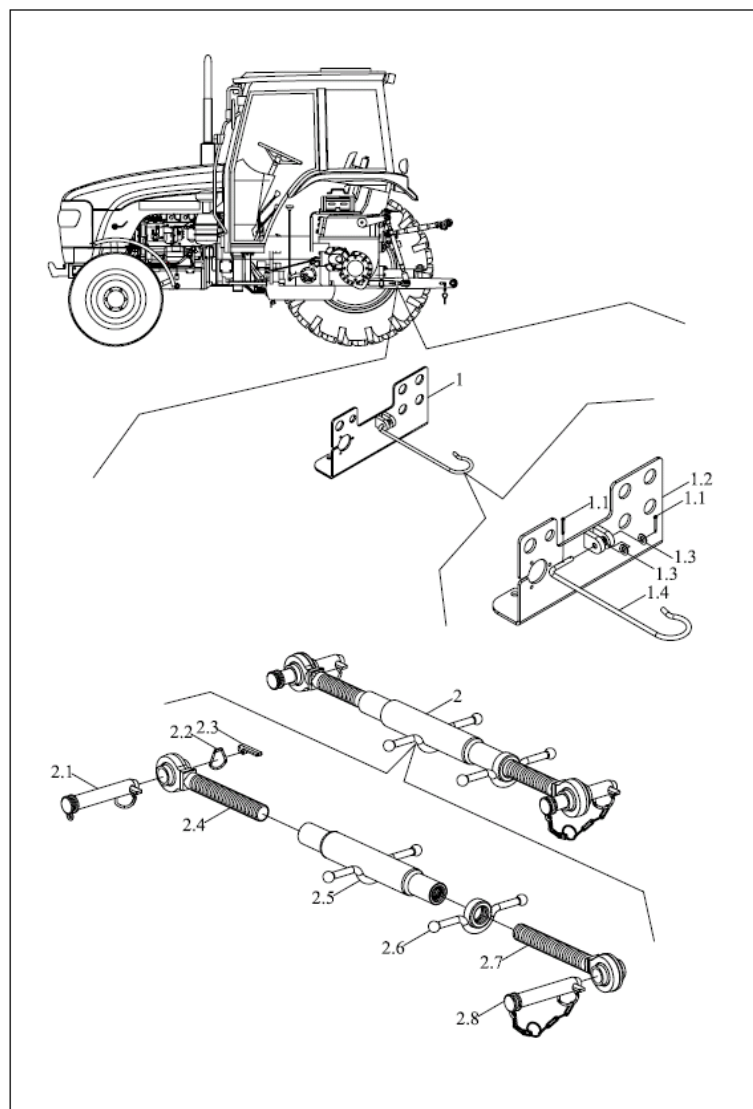

FT800.56.001a-1 56.1-悬挂机构总成-1 SUSPENSION MECHANISM ASSEMBLY-1

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT800.56.032b	上拉杆固定卡组合	UPPER PULL ROD FIXED CLIP COMBINATION	1	2011-11_
1.1	GBT91-2.5X14-A0P	开口销	PIN	2	2011-11_
1.1	GBT91-2.5X14-A0P	开口销	PIN	2	2011-11_
1.2	FT800.56.035d	连接板焊合件	CONNECTING PLATE WELDMENT	1	2011-11_
1.3	GBT97.1-8-A0P	平垫圈	WASHER	2	2011-11_
1.4	FT800.56.263a	固定卡	LOCKING CLAMP	1	2011-11_
2	FT800.56.017	上拉杆总成	UPPER PULL ROD ASSEMBLY	1	2011-11_
2.1	FT800.56.247	上拉杆前销	UPPER PULL ROD FRONT PIN	1	2004-01_
2.1	FT800.56.017.1	上拉杆前销	UPPER PULL ROD FRONT PIN	1	2009-11_
2.2	FT800.56.223	锁销环	LOCKING PIN RING	1	2011-11_
2.3	FT800.56.224	锁销	PIN	1	2011-11_
2.4	FT800.56.025	上拉杆前调节螺杆挤压总成	UPPER PULL ROD FRONT ADJUSTING SCREW	1	2011-11_
2.5	FT800.56.024	调节螺管手柄焊合总成	EXTRUSION ASSEMBL	1	2011-11_
2.6	FT800.56.029	上拉杆锁紧螺帽总成	ADJUSTING SCREW HANDLE WELDMENT	1	2011-11_
2.7	FT800.56.023	上拉杆后调节螺杆挤压总成	ASSEMBLY	1	2011-11_
2.8	FT800.56.027	上拉杆销及锁销总成	UPPER PULL ROD LOCKING NUT ASSEMBLY	1	2011-11_
			UPPER PULL ROD REAR ADJUSTING SCREW		
			EXTRUSION ASSEMBLY		
			UPPER PULL ROD PIN AND LOCK PIN ASSEMBLY		


FT800.56.001a 悬挂机构总成-2

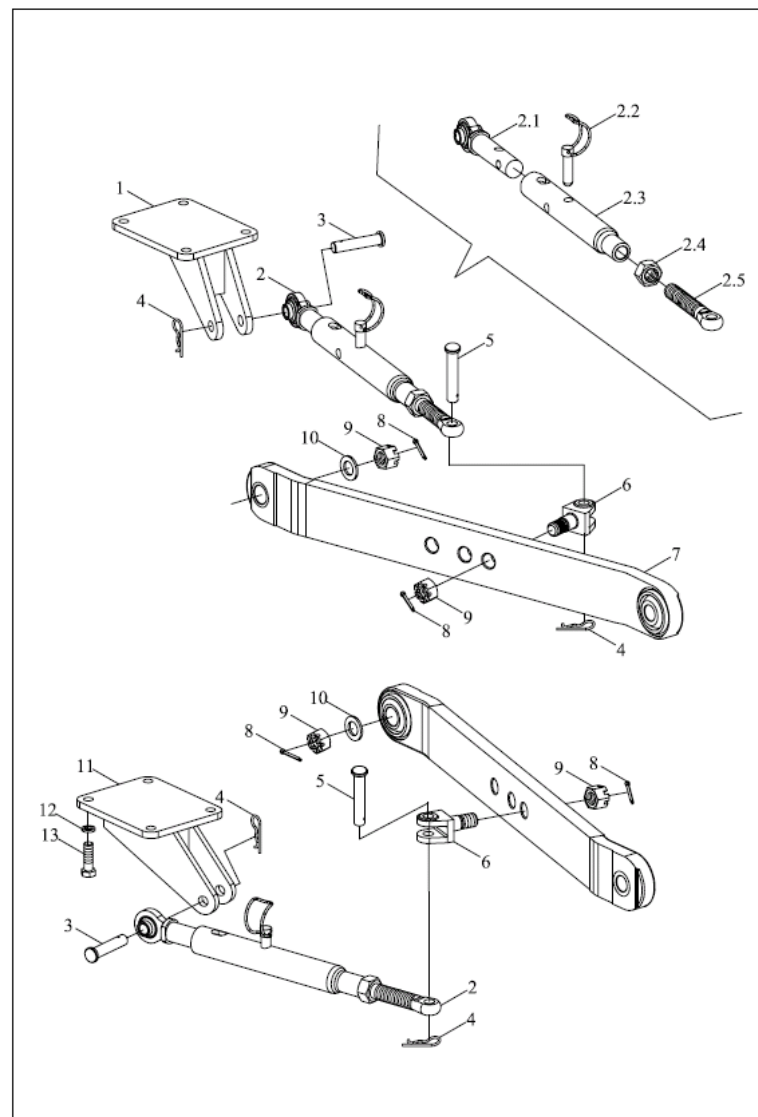

FT800.56.001a-2 56.2-悬挂机构总成-2 SUSPENSION MECHANISM ASSEMBLY-2

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT800.56.026	右限位杆连接叉焊合总成	RIGHT LIMITING ROD CONNECTING FORK WELD	1	2011-11_
10	GB/T95-24-A0P	平垫圈	ASSEMBLY	2	2011-11_
11	FT800.56.014	左限位杆连接叉焊合总成	WASHER	1	2011-11_
12	GB/T5783-M16X40-A3L	六角头螺栓	LEFT LIMITING ROD CONNECTING FORK WELD	8	2011-11_
13	GB/T93-16-AOP	垫圈	ASSEMBLY	8	2011-11_
			BOLT		
2	FT800.56.011a	限位杆总成	WASHER	2	2011-11_
2.1	FT800.56.018	限位杆铆合总成		2	2011-11_
2.2	FT800.56.019	限位杆锁销总成	LIMIT ROD ASSEMBLY	2	2011-11_
2.3	FT800.56.036	限位杆导管焊合	LIMIT ROD RIVET ASSEMBLY	2	2011-11_
2.4	FT800.56.264	梯形螺母	LIMIT ROD LOCK PIN ASSEMBLY	2	2011-11_
			LIMIT ROD GUIDE PIPE WELDMENT		
2.5	FT800.56.107	调节螺杆	TRAPEZOIDAL NUT	2	2011-11_
3	FT800.56.101	销轴		2	2011-11_
4	FT800.56.207	弹簧锁销	ADJUSTING SCREW	6	2011-11_
5	FT800.56.103	销轴	PIN	2	2011-11_
6	FT800.56.104	限位杆螺栓	SPRING LOCK PIN	2	2011-11_
			PIN		
7	FT800.56.012a	下拉杆焊接总成	LIMIT ROD BOLT	2	2011-11_
8	GB/T91-5X40-AOP	开口销		4	2011-11_
9	GB/T9459-M24X2-A3L	六角开槽薄螺母	LOWER PULL ROD WELDMENT ASSEMBLY	4	2011-11_
			PIN		
			NUT		


FT800.56.001a 悬挂机构总成-3

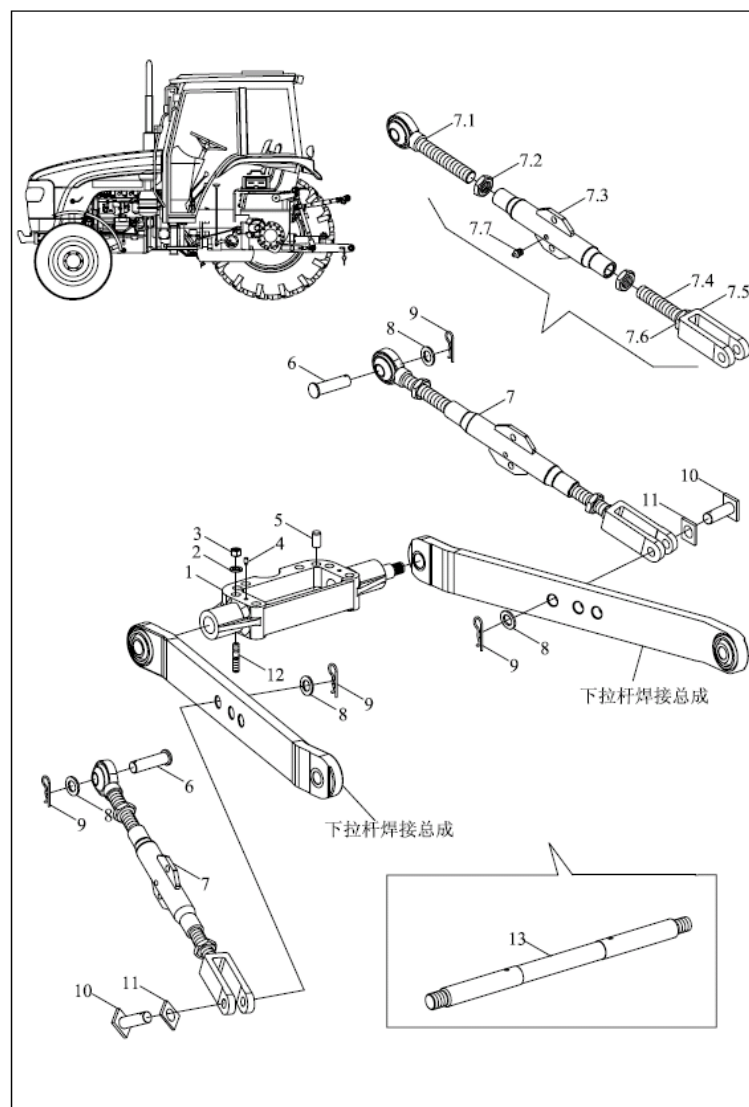

FT800.56.001a-3 56.3-悬挂机构总成-3 SUSPENSION ASSEMBLY-3

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT800.56.112d	下拉杆支架	LOWER PULL ROD BRACKET	1	2011-11_
10	FT800.56A.041	提升杆后联接种焊接	LIFTING ROD REAR CONNECTING PIN	2	2011-11_
11	FT800.56A.261	挡板	WELDMENT	2	2011-11_
12	GBT899-M16X95-8.8-A2L	双头螺栓	RETAINER PLATE	6	
13	FT800.56.102d	下拉杆支承杆	8.8-A3L STUD	1	2011-11_
			SUPPORT ROD OF LOWER PULL ROD		
2	GBT93-16-A0P	弹簧垫圈		6	2011-11_
3	GBT6170-M16-A2L	螺母	SPRING WASHER	6	2011-11_
4	GBT72-M8X16-A2L	开槽锥端定位螺钉	NUT	2	2011-11_
4	GBT72-M8X16-A2L	开槽锥端定位螺钉	A2L SCREW	2	2011-11_
5	GBT119-B20X35	圆柱销	A2L SCREW	2	2011-11_
			PIN		
6	FT800.56.124	销轴		2	2011-11_
7	FT800.56.015b	提升杆总成	PIN	2	2011-11_
7.1	FT800.56.020a	上螺杆铆合总成	LIFTING ROD ASSEMBLY	2	2011-11_
7.2	FT800.56.265	梯形螺母	UPPER SCREW ROD RIVET ASSEMBLY	2	2011-11_
7.3	FT800.56.031a	提升杆导管焊接	TRAPEZOIDAL NUT	2	2011-11_
			LIFTING ROD GUIDE PIPE WELDMENT		
7.4	FT800.56A.259	螺杆		2	2011-11_
7.5	FT800.56.258b	提升杆叉		2	2011-11_
7.5	FT800.56.258b	提升杆叉	LIFTING ROD FORK	2	2011-11_
7.6	FT800.56A.264	左旋梯形螺母	LIFTING ROD FORK	2	2011-11_
7.7	JBT7940.1-M10X1	直通式压注油杯	LEFT TRAPEZOIDAL NUT	2	2011-11_
			STRAIGHT PRESSURE FILLING OIL CUP		
8	FT800.56.262	垫圈		2	2011-11_
9	FT800.56.115	弹簧锁销 II	WASHER	2	2011-11_
			SPRING LOCKING PIN II		


TD800.57C 分配器装配总成-1

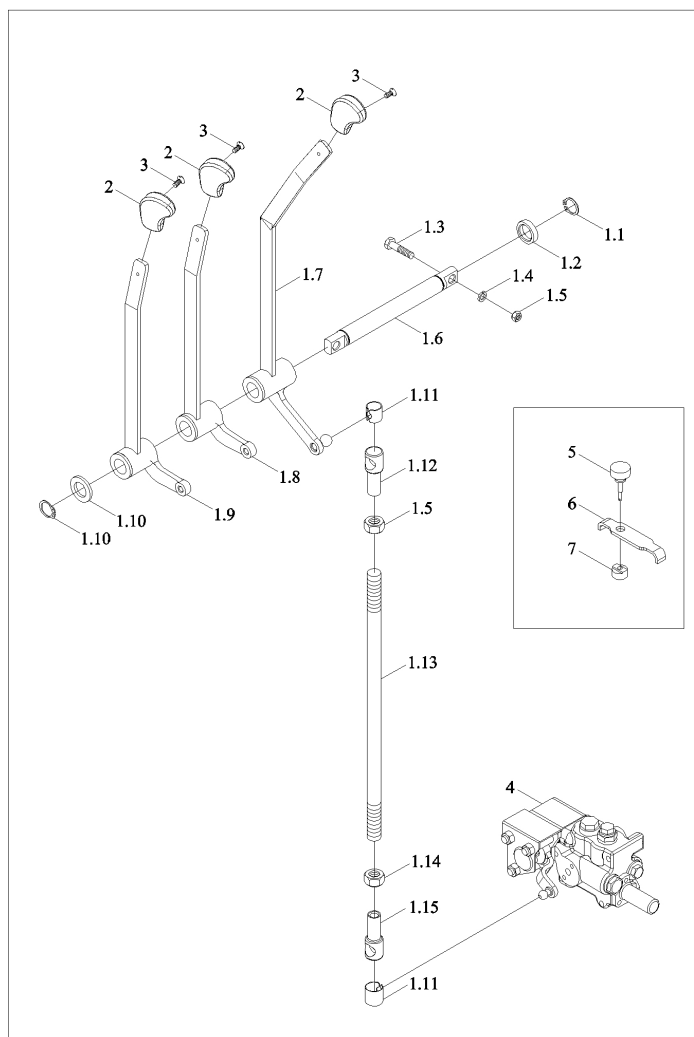

TD800.57C-1 57.1-分配器装配总成-1 DISTRIBUTOR INSTALLATION ASSEMBLY-1

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TD800.57C.1	分配器操纵机构总成	DISTRIBUTOR CONTROL MECHANISM ASSEMBLY	1	2011-11_
1.1	GB/T894.1-18	挡圈	RETAINER RING	2	2013-10_
1.1	GB/T894.1-20	挡圈20	BLCKING RING	2	2011-11_
1.1	TF1004.583A.9-03	垫圈	WASHER	1	2013-10_
1.1	GB/T6170-M8-A2L	螺母	NUT	3	2011-11_
1.11	FT800A.57.107	夹头	CLIP HEAD	2	2011-11_
1.12	FT800A.57.108	球面联接盖	SPHERICAL SURFACE CONNECTING COVER	1	2011-11_
1.13	FT800A.57.109a	操纵拉杆	CONTROL PULL ROD	1	2011-11_
1.14	GB/T6170-M8-LH-8-A2L	1型六角螺母	NUT	1	2011-11_
1.15	FT700.58E.103	左旋球面联接盖	LEFT BALL SURFACE CONNECTING COVER	1	2011-11_
1.15	FT700.58E.103	左旋球面联接盖	LEFT BALL SURFACE CONNECTING COVER	1	2011-11_
1.2	FT800A.57.103a	限位套1	LIMITING SLEEVE I	1	2013-10_
1.3	FT800A.57.011	操纵臂压合总成	OPERATING ARM WELDED ASSEMBLY	1	2011-11_
1.3	GB/T5783-M8X30-8.8-A2L	六角头螺栓	BOLT	2	2013-10_
1.4	GB/T93-8-A0P	垫圈	WASHER	2	2013-10_
1.4	TB504.552-04	手柄头总成	HANDLE HEAD ASSEMBLY	1	2010-10_
1.5	GB/T6170-M8-8-A2L	1型六角螺母	I-TYPE HEXAGON NUT	3	2013-10_
1.5	GB/T68-M4X10-A2L	开槽双头螺钉		1	2011-11_
1.6	FT800A.57.102a	固定轴	FIXING SHAFT	1	2013-10_
1.6	FT800A.57.103	限位套1	LIMITING SLEEVE I	2	2011-11_
1.7	FT800A.57.102	固定轴	FIXING SHAFT	1	2011-11_
1.7	TD800.57C.1.1	操纵臂压合总成1	CONTROL ARM ASSEMBLY	1	2013-10_
1.8	GB/T5783-M8X30-A2L	螺栓	BOLT	2	2011-11_
1.8	TD800.57C.1.2	操纵臂压合总成1	CONTROL ARM ASSEMBLY	1	2013-10_
1.9	TD800.57C.1.3	操纵臂压合总成2	CONTROL ARM ASSEMBLY	1	2013-10_


TD800.57C 分配器装配总成-1

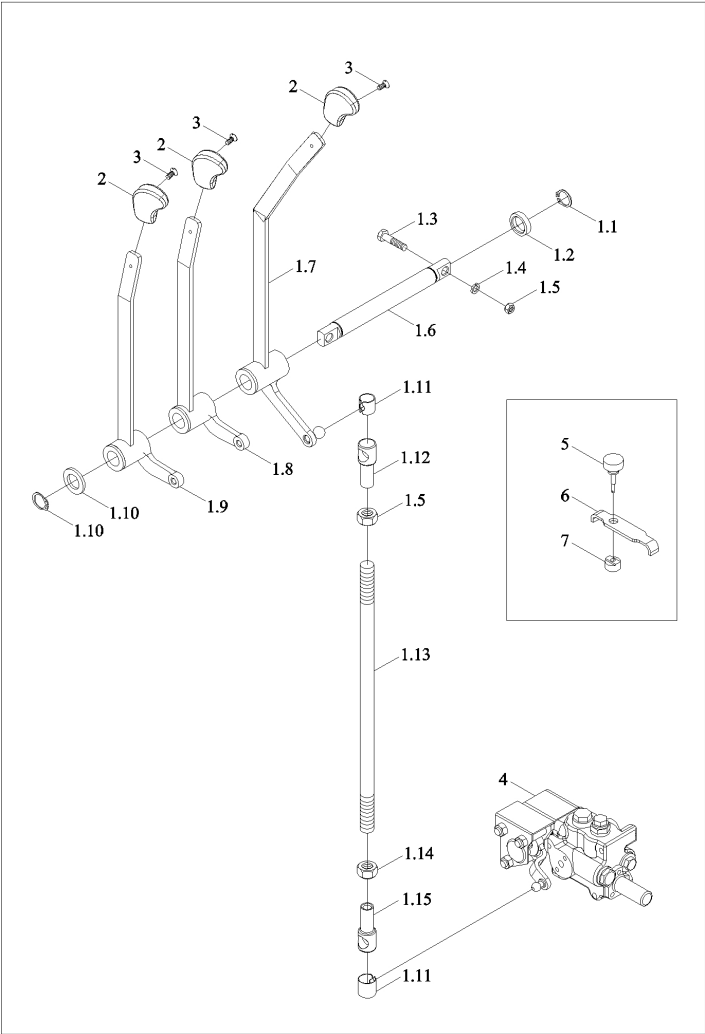

TD800.57C-1 57.1-分配器装配总成-1(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1.9	GBT93-8	垫圈8	WASHER 8	2	2011-11_
2	FT800A.57.020	分配器总成	DISTRIBUTER ASSEMBLY	1	2011-11_
3	FT65.57.014	调节手柄头总成	ADJUSTING HANDLE HEAD ASSEMBLY	2	2011-11_
3	GBT68-M4X10-4.8-A2L	开槽沉头螺钉	SCREW	1	2013-10_
4	FT800A.57.124	定位弯板	LOCATING BENDING PLATE	2	2011-11_
5	FT65.57.104	定位螺母	LOCATING NUT	2	2011-11_


TD800.57C 分配器装配总成-2

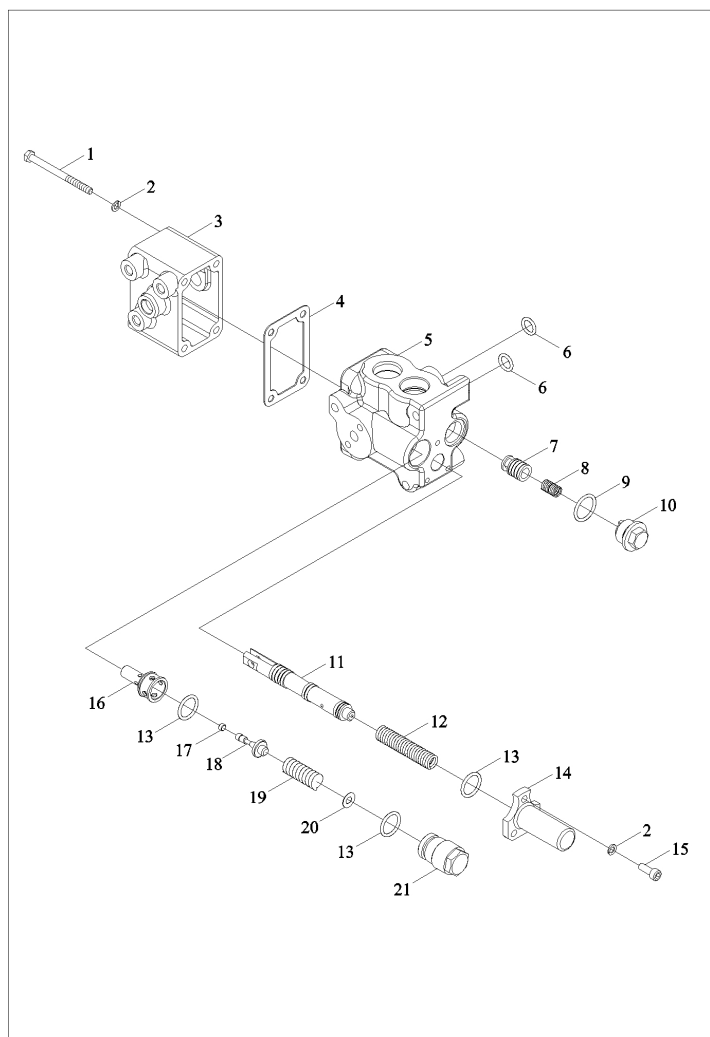

TD800.57C-2 57.2-分配器装配总成-2 DISTRIBUTOR INSTALLATION ASSEMBLY-2


标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
.5	FT800A.57.020	分配器总成	DISTRIBUTER ASSEMBLY	1	2011-11_
1	GB/T5783-M6X75	螺栓	BOLT	4	2011-11_
10	T30.57.102-1	回油阀堵塞	OIL RETURN VALVE PLUG	1	2011-11_
11	T30.57.122A	主控制阀	MAIN CONTROL VALVE	1	2011-11_
12	T30.57.112	主阀弹簧	MAIN VALVE SPRING	1	2011-11_
13	GB/T3452.1-19X2.65	液压气动用O形橡胶密封圈	O-SEAL RING	3	2011-11_
14	T30.57.113	主阀前盖	MAIN VALVE FRONT COVER	1	2011-11_
15	GB/T70-M6X16	内六角圆柱头螺钉	SCREW	3	2011-11_
16	T30.57.127	安全阀座	SAFETY VALVE SEAT	1	2011-11_
17	T30.57.128	安全阀堵头	SAFETY VALVE PLUG	1	2011-11_
18	T30.57.107	安全阀体	SAFETY VALVE BODY	1	2011-11_
18	T30.57.107	安全阀体	SAFETY VALVE BODY	1	2011-11_
19	T30.57.106	安全阀弹簧	SAFETY VALVE SPRING	1	2011-11_
2	GB/T93-6	垫圈	WASHER	7	2011-11_
20	FT65.57.133	调整垫片	ADJUSTING WASHER	1	2010-01_
20	T30.57.156~158	调整垫片	ADJUSTING WASHER	1	2013-10_
21	T30.57.105	安全阀弹簧座	SPRING SEAT OF SAFETY VALVE	1	2011-11_
3	FT800A.57.122	侧盖	SIDE COVER	1	2011-11_
4	T30.57.118	纸垫	GASKET 0.5	1	2011-11_
5	T30.57.115-2A	分配器壳体	DISTRIBUTOR HOUSING	1	2011-11_
6	GB/T3452.1-11.8X2.65	液压气动用O形橡胶密封圈	O-SEAL RING	2	2011-11_
6	GB/T3452.1-11.8X2.65	O形密封圈	O RING	2	2011-11_
7	T30.57.104-2	回油阀体	OIL RETURN VALVE BODY	1	2011-11_
8	T30.57.103-1	回油阀弹簧	SPRING	1	2011-11_
9	GB/T3452.1-21.2X2.65	液压气动用O形橡胶密封圈	O-SEAL RING	1	2011-11_

TD800.57C 分配器装配总成-3

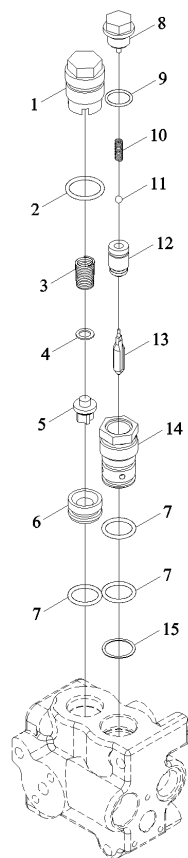

TD800.57C-3 57.3-分配器装配总成-3 DISTRIBUTOR INSTALLATION ASSEMBLY-3


标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
0	FT800A.57.020	分配器总成	DISTRIBUTER ASSEMBLY	1	2011-11_
1	T30.57.145B	单向阀堵塞	ONE-WAY VALVE PLUG	1	2011-11_
10	T30.57.140-1	下降阀弹簧	DOWNWARD VALVE SPRING	1	2011-11_
11	GBT308-φ 5.0000G40b	钢球	BALL	1	2013-10_
11	GBT308-5-G100-b	钢球	BALL	1	2010-01_
12	T30.57.139	下降阀体	DOWNWARD VALVE BODY	1	2011-11_
13	T30.57.114	推销	PUSH PIN	1	2011-11_
14	T30.57.138	下降阀套	DOWNWARD VALVE SLEEVE	1	2011-11_
15	T30.57.159~161	调整垫片	ADJUSTING WASHER	999	2013-10_
2	GBT3452.1-22.4X2.65	液压气动用O形橡胶密封圈	O-SEAL RING	1	2013-10_
2	FT800A.57.013	单面摩擦盘总成	SINGLE FRICTION DISC ASSEMBLY	1	2013-07_
3	T30.57.144B	单向阀弹簧	ONE-WAY VALVE SPRING	1	2011-11_
4	T30.57.164	单向阀体垫	ONE-WAY VALVE BODY GASKET	1	2011-11_
5	T30.57.142B	单向阀体	ONE-WAY VALVE BODY	1	2011-11_
6	T30.57.143B	单向阀座	ONE-WAY VALVE SEAT	1	2011-11_
7	GBT3452.1-19X2.65	液压气动用O形橡胶密封圈	O-SEAL RING	3	2011-11_
8	T30.57.137	下降阀堵塞	DOWNWARD VALVE PLUG	1	2011-11_
9	GBT3452.1-16X1.8	液压气动用O形橡胶密封圈	O-SEAL RING	1	2011-11_

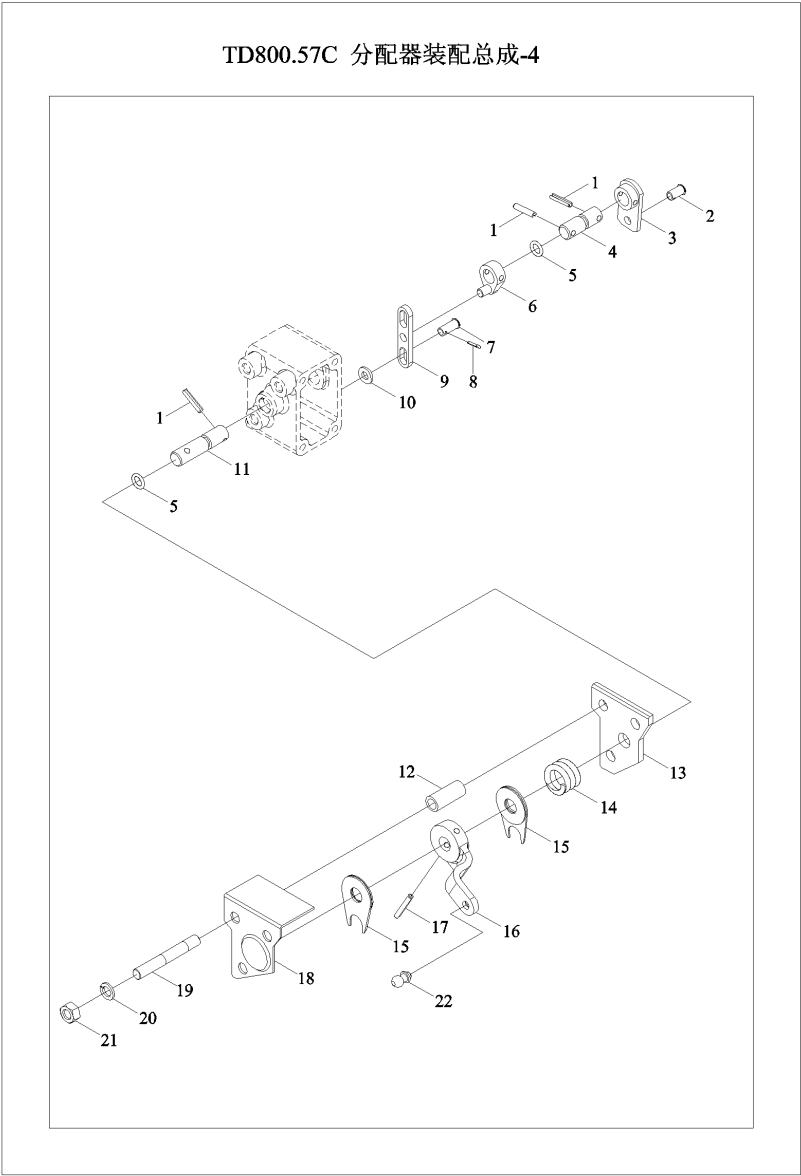

TD800.57C-4 57.4-分配器装配总成-4 DISTRIBUTOR INSTALLATION ASSEMBLY-4

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
0	FT800A.57.020	分配器总成	DISTRIBUTER ASSEMBLY	1	2011-11_
1	GBT879-5X24	销	PIN	3	2011-11_
10	GBT97.1-8	垫圈	WASHER	1	2011-11_
11	FT800A.57.120	手柄轴	HANDLE SHAFT	1	2011-11_
12	FT800A.57.119	限位套4	LIMITING SLEEVE 4	3	2011-11_
13	FT800A.57.114	固定板	FIXED PLATE	1	2011-11_
14	FT800A.57.112	弹簧	SPRING	1	2011-11_
15	FT800A.57.013	单面摩擦盘总成	SINGLE FRICTION DISC ASSEMBLY	2	2011-11_
16	FT800A.57.118	操纵曲柄	CONTROL CRANK	1	2011-11_
17	GBT879-5X35	销	PIN	1	2011-11_
18	FT800A.57.110	挡板	RETAINER PLATE	1	2011-11_
19	GBT899-GM10-M10X60-8.8	螺栓	BOLT	3	2011-11_
2	E300.57.135	销轴	PIN	1	2011-11_
20	GBT93-10	垫圈10	WASHER 10	3	2011-11_
21	GBT6170-M10	螺母M10	NUT M10	3	2011-11_
22	FT800A.57.113	球头	BALL JOINT	1	2013-10_
3	T30.57.133-2	反馈臂	FEEDBACK ARM	1	2011-11_
4	T30.57.109	反馈轴	FEEDBACK SHAFT	1	2011-11_
5	GBT3452.1-9.5X2.65	O形密封圈	O RING	2	2011-11_
6	T30.57.120	反馈小臂	FEEDBACK ARM	1	2011-11_
7	T30.57.125	销轴	PIN	1	2011-11_
8	GBT91-2X12	开口销	PIN	1	2011-11_
9	T30.57.119	摆杆	UPPER PART U-HOOK	1	2011-11_


FT804A.58H.001 油泵油管滤油器总成

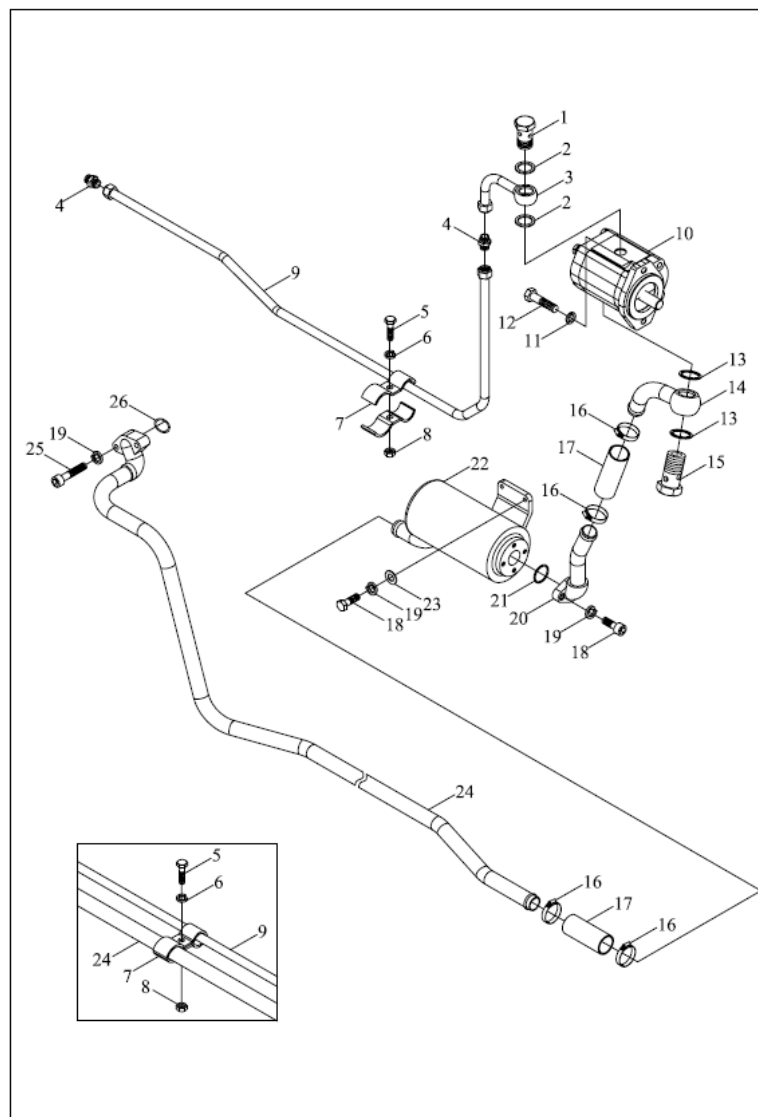

FT804A.58H.001 58-油泵油管滤油器总成 58-OIL PUMP/PIPE/FILTER ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT700.58G.103	空心螺栓-2	HOLLOW BOLT -2	1	2004-01_
10	FT700.58G.010	齿轮泵	GEAR PUMP	1	2004-01_
10	FT700.58B.020	齿轮泵	GEAR PUMP	1	2009-01_
11	GBT93-10-A0P	标准型弹簧垫圈	WASHER	2	2011-11_
12	GBT5783-M10X30-A3L	螺栓	BOLT	2	2011-11_
13	JBT982-27	组合密封垫圈	COMBINED SEAL GASKET	2	2011-11_
13	JBT982-27	组合密封垫圈	COMBINED SEAL GASKET	2	2011-11_
14	FT750.58.050	吸油短管焊接-2	OIL SUCTION SHORT PIPE WELDMENT-2	1	2011-11_
14	FT750.58.050	吸油短管焊接-2	OIL SUCTION SHORT PIPE WELDMENT-2	1	2011-11_
15	FT700.58G.101	空心螺栓-1	HOLLOW BOLT -1	1	2011-11_
16	JBT8870-d40	喉箍	HOOP	4	2011-11_
17	FT650.58.105	胶管	RUBBER HOSE	2	2011-11_
18	GBT5783-M8X20-A2L	螺栓	BOLT	4	2011-11_
19	GBT93-8-A0P	垫圈	WASHER	6	2011-11_
2	JBT982-22	组合密封垫圈	COMBINED SEAL GASKET	2	2009-01_
2	JBT982-18	组合密封垫圈	COMBINED SEAL GASKET	2	2004-01_
2	JBT982-18	组合密封垫圈	COMBINED SEAL GASKET	2	2004-01_
20	FT750.58.040	吸油短管焊接-1	OIL SUCTION SHORT PIPE WELDMENT-1	1	2011-11_
21	GBT3452.1-32.5X2.65G	液压气动用O形橡胶密封圈	O-SEAL RING	1	2011-11_
22	FT804A.58.080	滤油器总成	OIL FILTER ASSEMBLY	1	2011-11_
22.1	FT804A.58.080-01	滤芯	FILTER	1	2011-11_
23	GBT97.1-8-A0P	平垫圈	WASHER	2	2011-11_
24	FT750.58.030	吸油长管焊接	OIL SUCTION LONG PIPE WELDMENT	1	2011-11_
25	GBT5783-M8X50-A2L	六角头螺栓	BOLT	2	
26	GBT3452.1-26.5X2.65G	液压气动用O形橡胶密封圈	O-SEAL RING	1	2011-11_


FT804A.58H.001 油泵油管滤油器总成

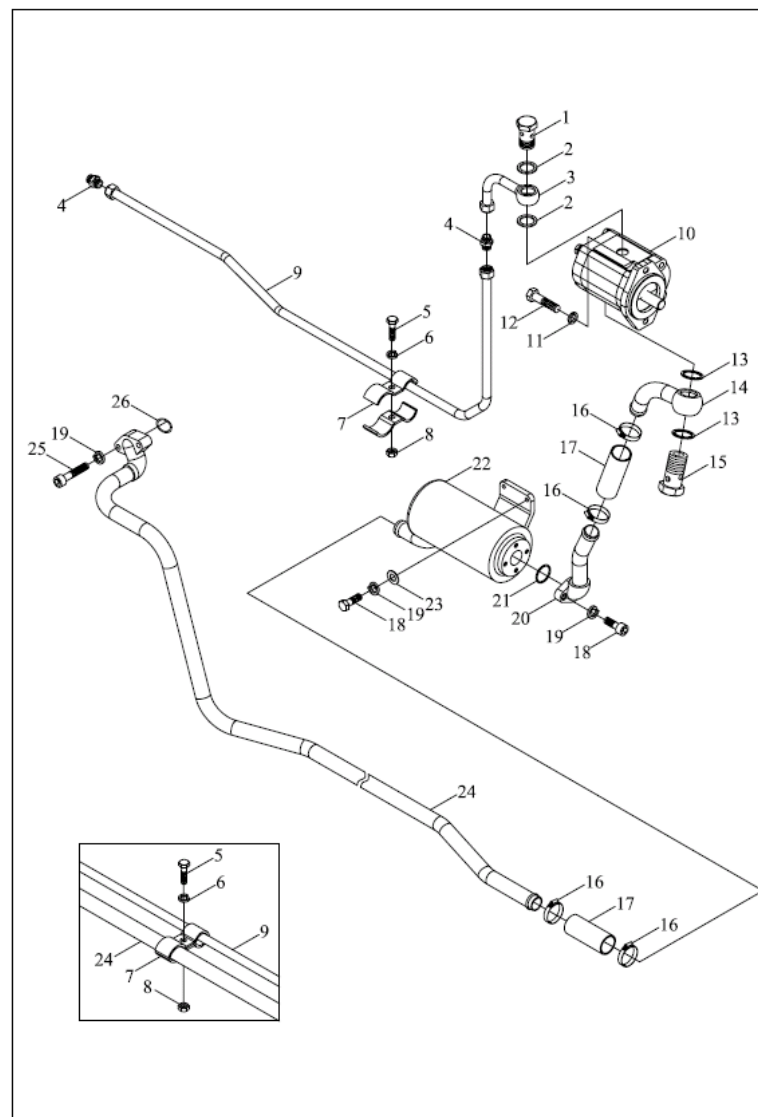

FT804A.58H.001 58-油泵油管滤油器总成(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
3	FT700.58G.021	压力油管焊合-1	PRESSURE OIL PIPE WELDMENT-1	1	2004-01_
3	TD800.581.2	油泵出油管焊合	OIL PUMP OUTPUT PIPE WELDMENT	1	2011-09_
3	FT700.58G.021a	压力油管焊合-1	PRESSURE OIL PIPE WELDMENT-1	1	2009-01_
4	FT700.58A.101	卡套式直通接头体	JOINT	2	2011-11_
5	GBT5783-M6X30-A2L	螺栓	BOLT	3	2011-11_
6	GBT93-6-A0P	弹簧垫圈	SPRING WASHER	3	2011-11_
7	FT650.58.060	油管夹与胶垫胶合	OIL PIPE CLAMP AND RUBBER WASHER	6	2011-11_
8	GBT6170-M6-A2L	螺母	NUT	3	2011-11_
9	FT804A.58.020	压力油管总成-2	PRESSURE OIL PIPE ASSEMBLY-2	1	2011-11_
9	FT804A.58.020a	高压油管总成	HIGH PRESSURE OIL PIPE ASSEMBLY	1	2011-09_


TD904.582A 多路阀油管总成-1

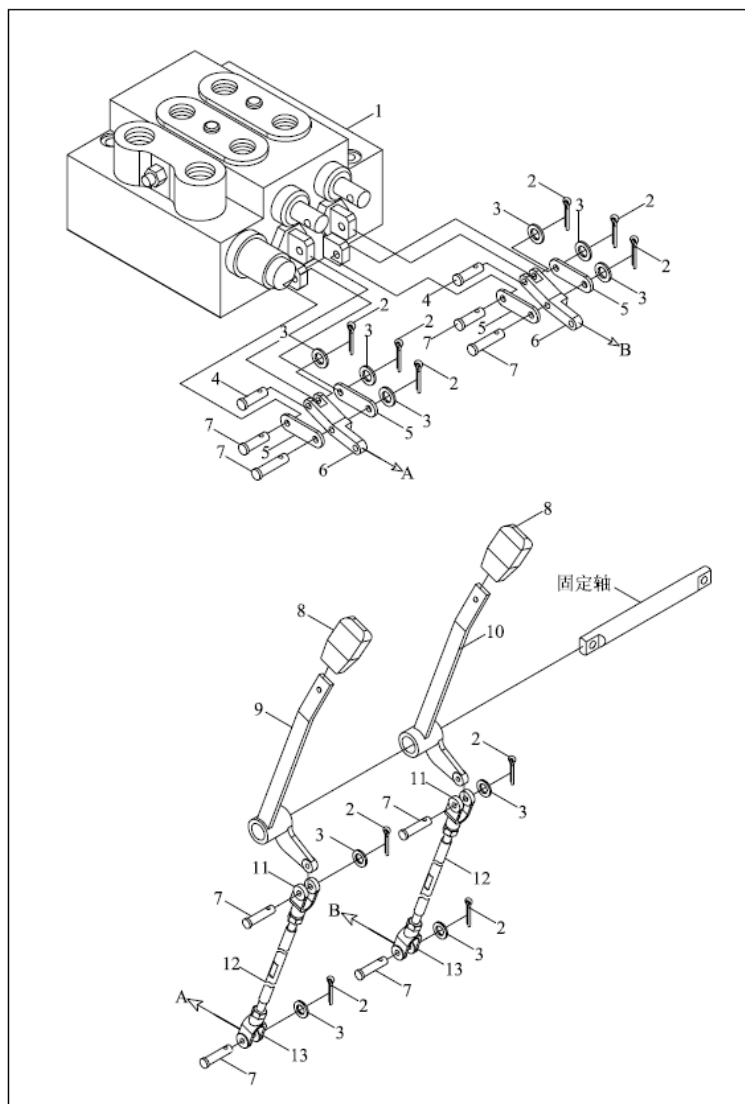

TD904.582A-1 58.2.1-多路阀油管总成-1 MULTI-WAY VALVE OIL PIPE ASSEMBLY-1

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT654.58.020	多路阀总成	MULTI-WAY VALVE ASSEMBLY	1	2011-11_
10	FT804A.58L.021	操纵杆焊合-1	CONTROL ROD WELDMENT-1	1	2011-11_
11	FT804A.58L.133	右旋拉杆叉	RIGHT REVOLVING PULL ROD FORK	2	2011-11_
12	FT804A.58L.134	拉杆	PULL ROD	2	2011-11_
13	FT804A.58L.136	左旋拉杆叉	LEFT REVOLVING PULL ROD FORK	2	2011-11_
2	GBT91-2X12-A0P	开口销	PIN	10	2011-11_
3	GBT97.1-6-A0P	平垫圈	WASHER	8	2011-11_
4	GBT882-B6X24-A0P	销轴	PIN	2	2011-11_
5	FT654.58.103	联接板	CONNECTING PLATE	4	2011-11_
6	FT804A.58L.132	摇臂	ROCKER	2	2011-11_
7	GBT882-B6X28-A0P	销轴	PIN	6	2011-11_
8	FT65.57.013	手柄头总成	HANDLE HEAD ASSEMBLY	2	2004-01_
8	FT65.57.013	手柄头总成	HANDLE HEAD ASSEMBLY	2	2004-01_
8	TB504.552-04	手柄头总成	HANDLE HEAD ASSEMBLY	2	2010-10_
9	FT804A.58L.022	操纵杆焊合-2	CONTROL ROD WELDMENT-2	1	2011-11_


TD904.582A 多路阀油管总成-2

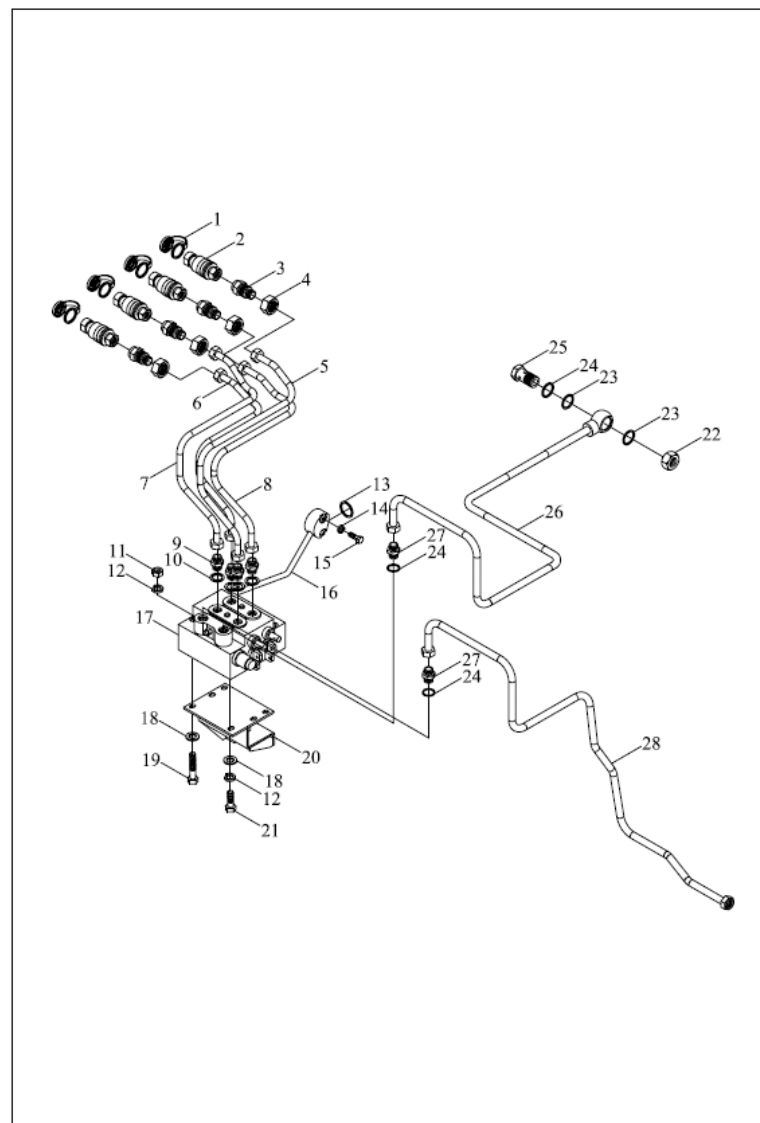

TD904.582A-2 58.2.2-多路阀油管总成-2 MULTI-WAY VALVE OIL PIPE ASSEMBLY-2

标号 No.	代号 Code	名称 Description	数量 Quantity	备注 Remark
1	FT354.58A.103	防尘盖	4	2011-11_
10	JBT982-18	组合密封垫圈	4	2011-11_
10	JBT982-18	组合密封垫圈	4	2011-11_
11	GBT6170-M10-A3L	螺母	3	2013-07_
12	GBT93-10-A0P	标准型弹簧垫圈	4	2011-11_
13	GBT3452.1-12.5X2.65G	液压气动用O形橡胶密封圈	1	2011-11_
14	GBT93-8-A0P	垫圈	2	2011-11_
15	GBT5783-M8X35-A2L	六角头螺栓	2	2013-07_
16	FT904.58A.020	分配器进油管焊合	1	2011-11_
17	FT654.58.020	多路阀总成	1	2011-11_
18	GBT95-10-A0P	垫圈	4	2011-11_
19	GBT5782-M10X70-A2L	六角头螺栓	3	2011-11_
2	FT654.58.010a	快换接头	4	2011-11_
20	FT804.58L.012	多路阀安装支架焊合	1	2011-11_
21	GBT5783-M10X20-A3L	螺栓	1	2011-11_
22	FT800.55.151	放油螺母	1	2011-11_
23	JBT982-20	组合密封垫圈	2	2011-11_
24	JBT982-22	组合密封垫圈	3	2011-11_
25	TD904.582-01	放油空心螺栓	1	2007-10_
25	FT804.58.101	空心螺栓	1	2004-01_
26	FT804.58L.013	回油管焊合-1	1	2011-11_
27	FT654.58B.102	卡套式端直通接头体1	2	2011-11_
28	FT904.58A.010	多路阀进油管总成	1	2011-11_
3	FT654.58B.101b	油管接头	4	2011-11_
4	GBT6173-M27X2-A0P	六角薄螺母	4	2011-11_


TD904.582A 多路阀油管总成-2

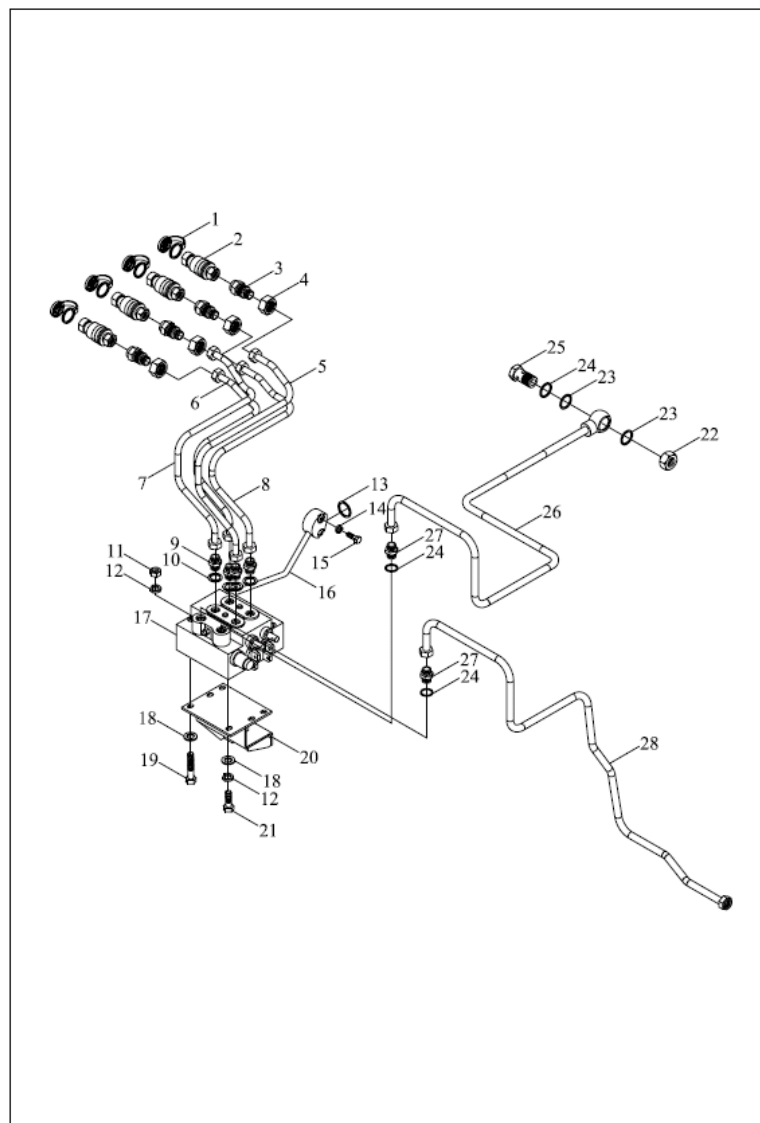

TD904.582A-2 58.2.2-多路阀油管总成-2(续)


标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
5	FT804.58.040	输出油管焊合-1-2	OIL OUTLET PIPE WELDMENT-1-2	1	2011-11_
6	FT804.58.060	输出油管焊合-2-1	OIL OUTLET PIPE WELDMENT-2-1	1	2011-11_
7	FT804.58.030	输出油管焊合-1-1	OIL OUTLET PIPE WELDMENT-1-1	1	2011-11_
8	FT804.58.050	输出油管焊合-2-2	OIL OUTLET PIPE WELDMENT-2-2	1	2011-11_
9	FT804.58.112	卡套式端直接头体	STRAIGHT PIPE JOINT BODY	4	2011-11_

TD800.583A 单路液压输出总成

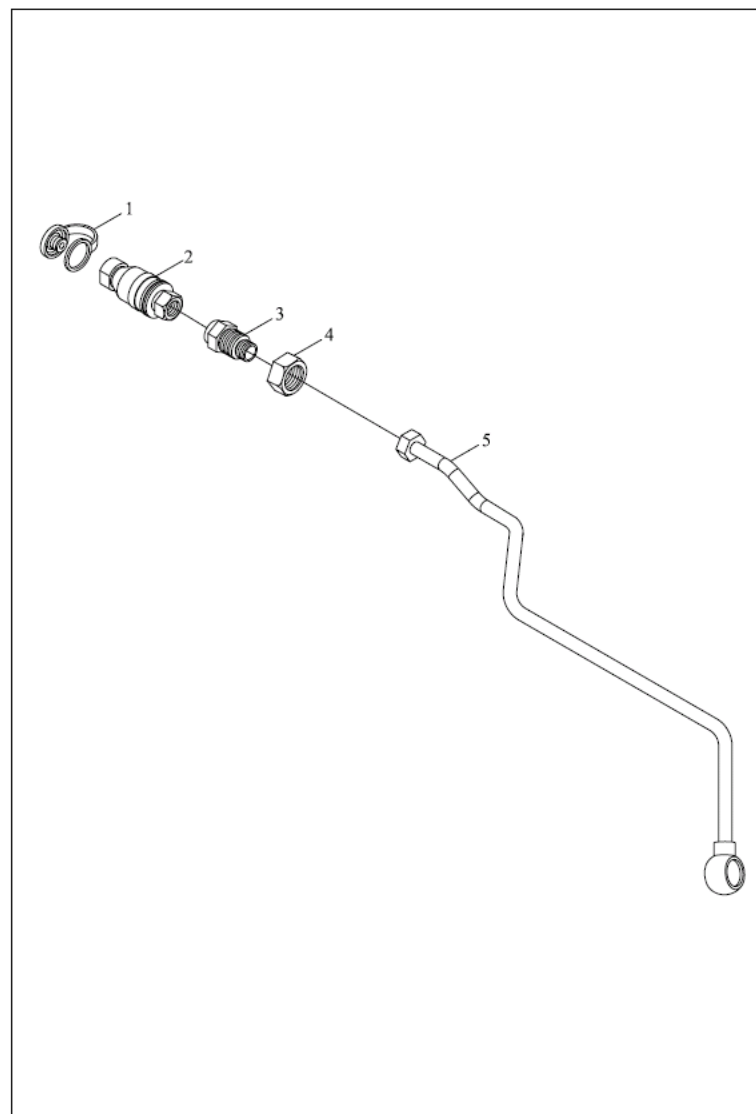

TD800.583A 58.3-单路液压输出总成 58.3-SINGLE-WAY HYDRAULIC OUTPUT ASSEMBLY


标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	FT354.58A.103	防尘盖	DUSTPROOF COVER	1	2011-11_
2	FT354.58A.030	快换接头	QUICK CHANGING JOINT	1	2011-11_
3	FT754.58.102	油管接头	JOINT	1	2011-11_
4	GBT6173-M27X2-A3L	六角薄螺母	NUT	1	2011-11_
5	FT800.55.021	液压输出管焊合	HYDRAULIC OUTPUT PIPE WELDMENT	1	2011-11_

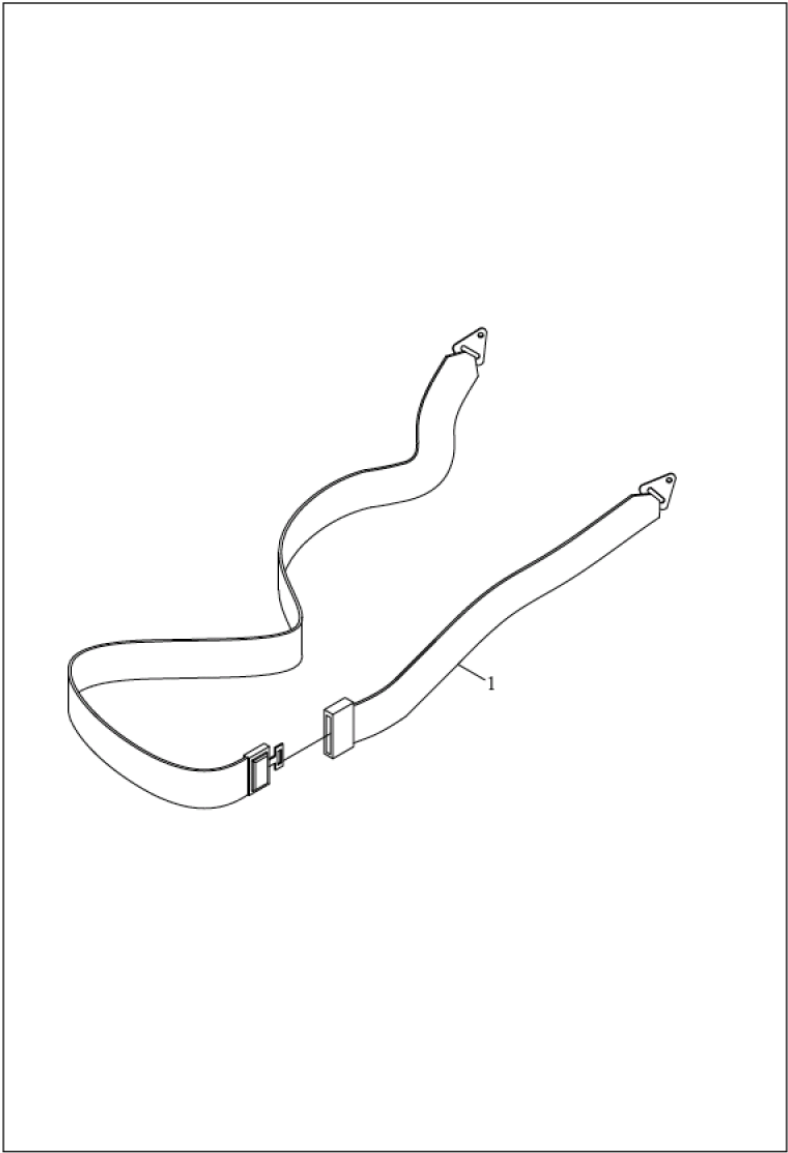

TA600.62ZC 62-安全带 62-SAFETY BELT

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TA600.62	安全带安装总成	SAFETY BELT INSTALLATION ASSEMBLY	1	2012-01_


FT800.74B.001 前配重总成

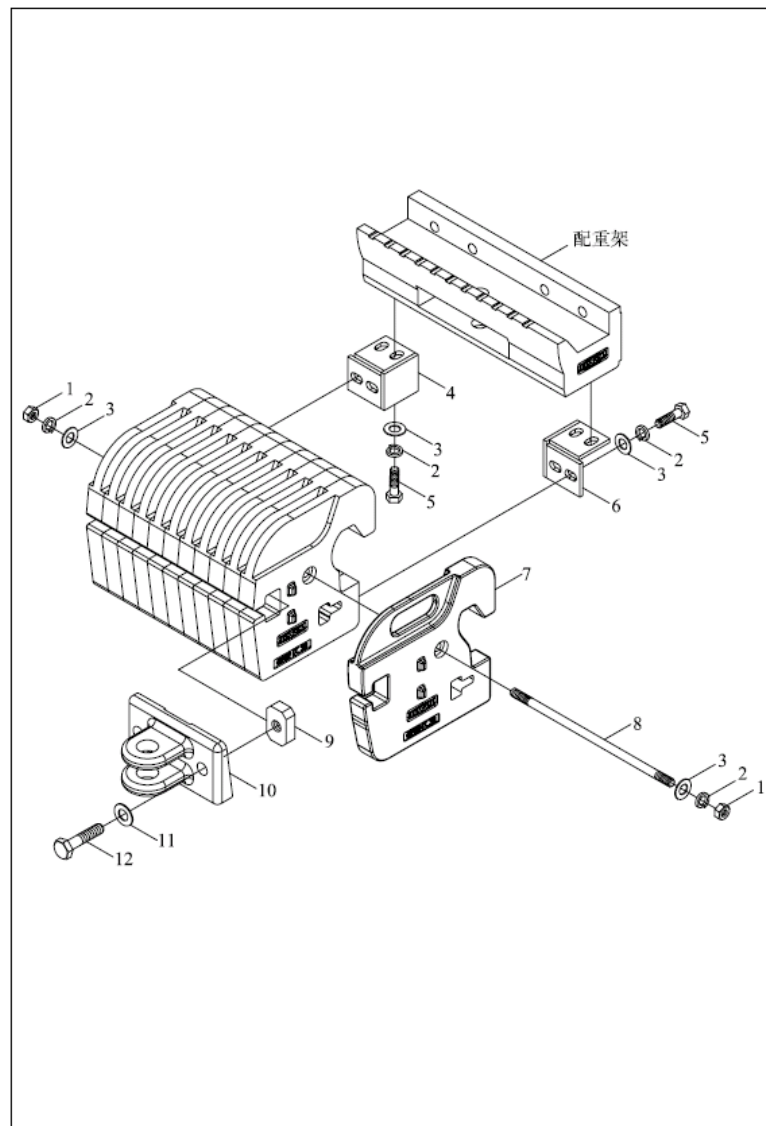

FT800.74B.001 74-前配重总成 74-FRONT BALLAST ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT6170-M16-8-A3L	1型六角螺母	NUT	2	2011-11_
10	FT650.74.107	牵引耳	TOWING LUG	1	2011-11_
11	GBT97.1-20-A0P	垫圈	WASHER	2	2011-11_
11	GBT97.1-20-A0P	垫圈	WASHER	2	2011-11_
12	GBT5785-M20X1.5X80-A3L	螺栓	BOLT	2	2011-11_
2	GBT93-16-A0P	弹簧垫圈	SPRING WASHER	10	2011-11_
3	GBT97.1-16-A0P	垫圈	WASHER	10	2011-11_
4	FT700.74B.010	右固定块焊接总成	RIGHT FIXING BLOCK WELDMENT ASSEMBLY	1	2011-11_
5	GBT5783-M16X35-A3L	六角头螺栓	BOLT	8	2011-11_
6	FT700.74B.011	左固定块焊接总成	LEFT FIXING BLOCK WELDMENT ASSEMBLY	1	2011-11_
7	FT800.74B.106a	配重块	BALLAST	11	2011-11_
8	F700.74B.107	联接螺栓	CONNECTING BOLT	1	2011-11_
9	FT650.74.108	牵引螺母	TOWING NUT	2	2004-01_
9	TA700.741-02	牵引板	TOWING PLATE	2	2009-12_


FT800.74B.002 前配重架总成

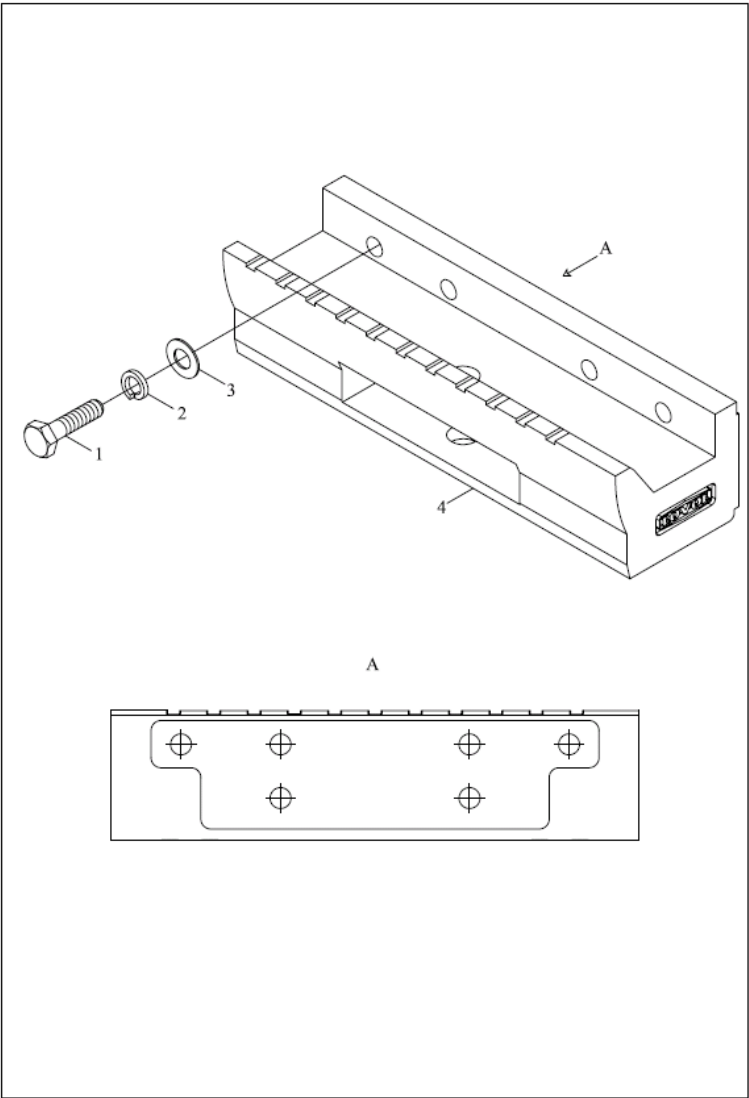

FT800.74B.002 74-前配重架总成 74-FRONT BALLAST BRACKET ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT5785-M18X1.5X70-10.9-A3L	六角头螺栓	BOLT	6	2004-01_
2	GBT93-18-AOP	弹簧垫圈	SPRING WASHER	6	2004-01_
3	GBT97.1-18-A0P	平垫圈	WASHER	6	2004-01_
4	FT800.74B.105a	配重架	BALLAST BRACKET	1	2009-08_
4	FT800.74B.105	配重架	BALLAST BRACKET	1	2008-03_


FT800.91B.001 后配重总成

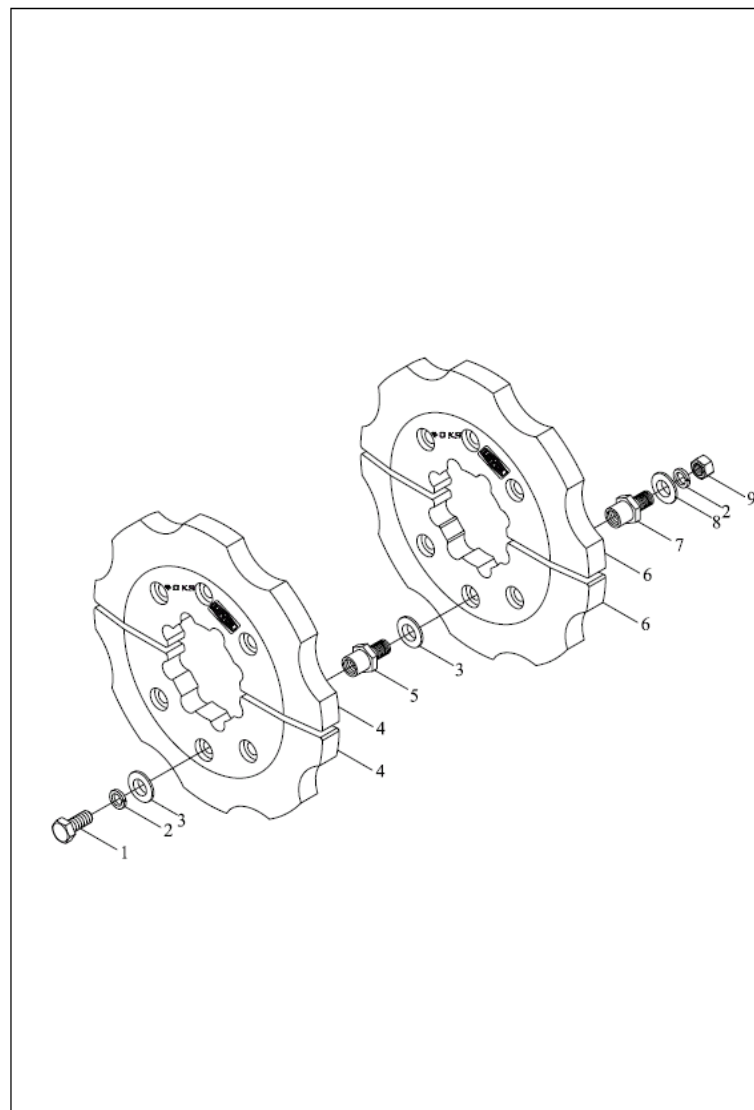

FT800.91B.001 91-后配重总成 91-REAR BALLAST ASSEMBLY

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT5783-M16X40-A3L	六角头螺栓	BOLT	6	2011-11_
2	GBT93-16-AOP	垫圈	WASHER	12	2004-01_
2	GBT93-16-A0P	弹簧垫圈	SPRING WASHER	12	2012-09_
3	FT800.34.108	平垫圈	WASHER	12	2011-11_
4	FT804.91.105	后配重	REAR BALLAST	2	2011-11_
5	FT804.91.102	配重螺钉 II	BALLAST SCREW II	6	2011-11_
6	FT800.91B.103	后配重 II	REAR BALLAST II	2	2011-11_
7	FT804.91.101	配重螺钉 I	BALLAST SCREW I	6	2011-11_
8	GBT97.1-16-AOP	垫圈	WASHER	6	2004-01_
9	GBT6170-M16-A3L	螺母 M16-A3L	NUT	6	2011-11_


TD804.311 前桥总成-1

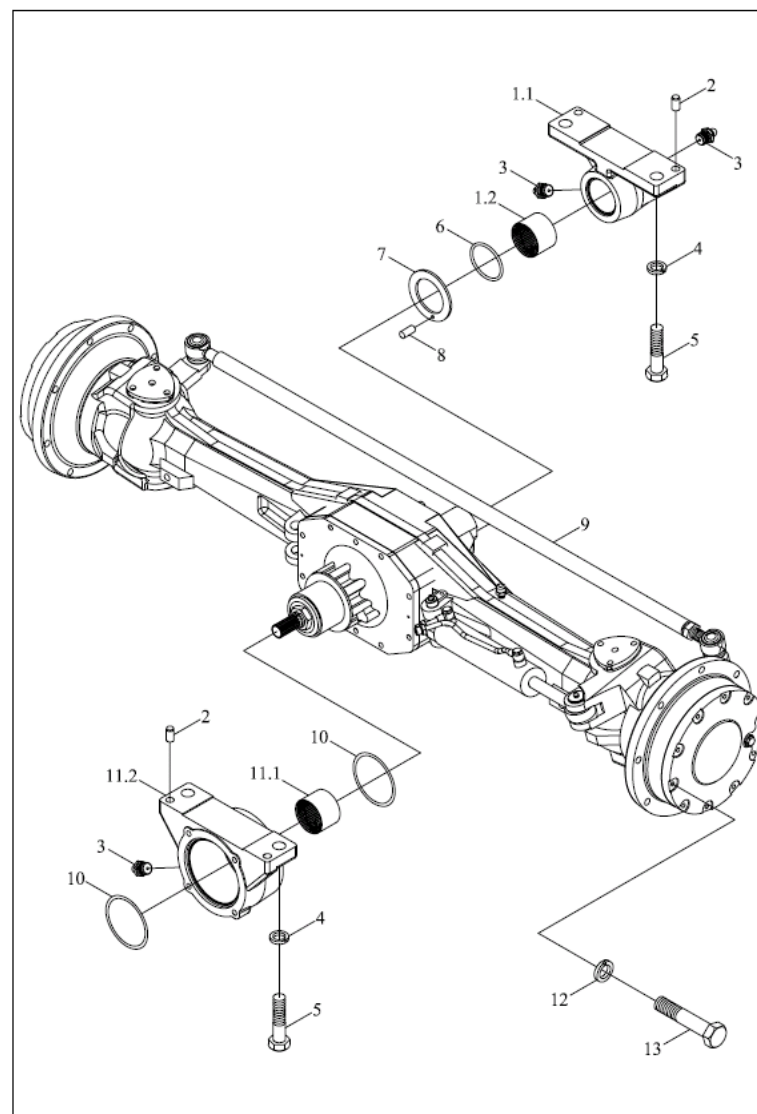

TD804.311-1 前桥总成-1 31FRONT AXLE ASSEMBLY-1

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	TD804.311.2	前驱动桥前支座总成	FRONT DRIVING AXLE FRONT SEAT ASSEMBLY	1	2011-11_
1.1	FT804.31.108	前驱动桥前支座	FRONT DRIVING AXLE FRONT SEAT	1	2011-11_
1.2	FT804.31.109	前驱动桥前座衬套	FRONT DRIVING AXLE FRONT SEAT BUSH	1	2011-11_
10	TD804.311-02-99.6X5.3G	O形圈	O-RING	2	2011-11_
11	TD804.311.1	前驱动桥后支座总成	FRONT DRIVING AXLE REAR SEAT ASSEMBLY	1	2011-11_
11.1	FT804.31.103	前驱动桥后座衬套	FRONT DRIVING AXLE REAR SEAT BUSH	1	2011-11_
11.2	FT804.31.104	前驱动桥后安装座	FRONT DRIVING AXLE REAR INSTALLATION	1	2011-11_
12	FT654.32.104	垫圈	SEAT	16	2011-11_
12	FT654.32.104	垫圈	WASHER	16	2011-11_
13	GBT5786-M16X1.5X40-10.9-A3L	六角头螺栓	WASHER BOLT	16	2011-11_
2	GBT119.1-12h8X24-A0P	圆柱销	PIN	4	
2	GBT119.1-12h8X24-A0P	圆柱销	PIN	4	
3	JBT7940.1-M10X1	直通式压注油杯	PIN	3	2011-11_
4	GBT93-18-AOP	弹簧垫圈	STRAIGHT PRESSURE FILLING OIL CUP	4	2011-11_
5	GBT5786-M18X1.5X60-A3L	六角头螺栓	SPRING WASHER BOLT	4	2011-11_
6	TD804.311-01-52.6X3.55G	O形圈	O-RING	1	2011-11_
7	FT804.31.110	垫环	PAD RING	1	2011-11_
7	FT804.31.110	垫环	PAD RING	1	2011-11_
8	GBT119.1-5h8X12-AOP	销	PIN	1	2011-11_
9	FT804.31.012	31-前驱动桥总成	31-FRONT DRIVING AXLE ASSEMBLY	1	2011-11_


TD804.311 前桥总成-2

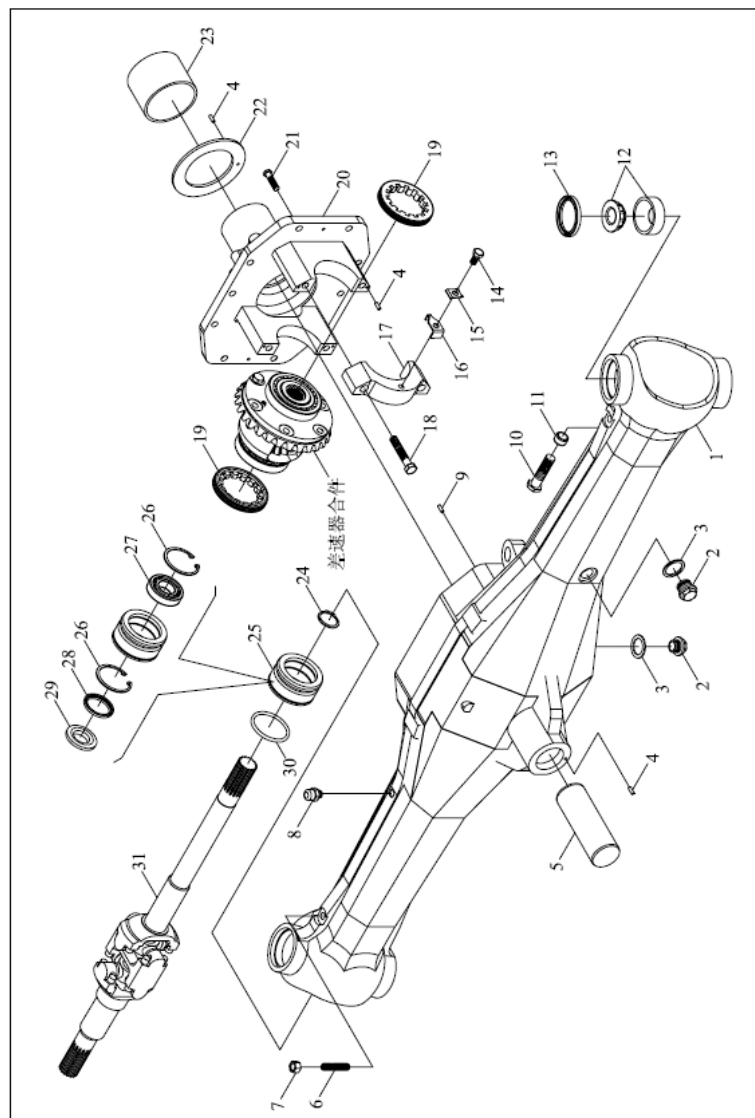

TD804.311-2 前桥总成-2 31FRONT AXLE ASSEMBLY-2

标号 No.	代号 Code	名称 Description	数量 Quantity	备注 Remark
1	5144521/11	前桥壳体	1	2011-11_
10	5126628-FT/1.40.211	限位螺栓M12X1.25X42	2	2011-11_
11	5126628-FT/12	隔套	999	2011-11_
12	5119699/1.40.240	主销球铰副	4	2011-11_
13	5121471/1.40.232	密封圈	4	2011-11_
14	GBT5786-M10X1.25X20	六角头螺栓	2	2011-11_
15	562659/1.41.032	调整螺母锁片	2	2011-11_
16	4996751/1.41.015	调整螺母止动片	2	2011-11_
17	4996748/1.41.005	锥传动支座瓦盖	2	2011-11_
18	14275334/10357/04	锁紧螺栓	4	2011-11_
19	4996750/1.41.008	调整螺母	2	2011-11_
2	10305114/14530	螺塞	2	2011-11_
20	5144525/15	锥传动支座	1	2011-11_
21	14274634/10357/04	锁紧螺栓M12X1.25X35	10	2011-11_
22	5136119/15	后减摩环	1	2011-11_
23	5136120/15	锥传动支座轴套	1	2011-11_
24	11068376/12245	挡圈35	2	2011-11_
25	4996755/1.40.038	半轴轴承座	2	2011-11_
26	11061076/12246	挡圈	4	2011-11_
27	GBT307-6007	轴承	2	2011-11_
28	5136002/1.41.538	油封	2	2011-11_
29	4996762/1.41.537	半轴油封挡圈	2	2011-11_
3	JBT982-22	组合密封垫圈	2	2011-11_
30	4966231/1.40.023	O形密封圈	2	2011-11_
31	5142040/20	右万向传动轴	1	2011-11_


TD804.311 前桥总成-2

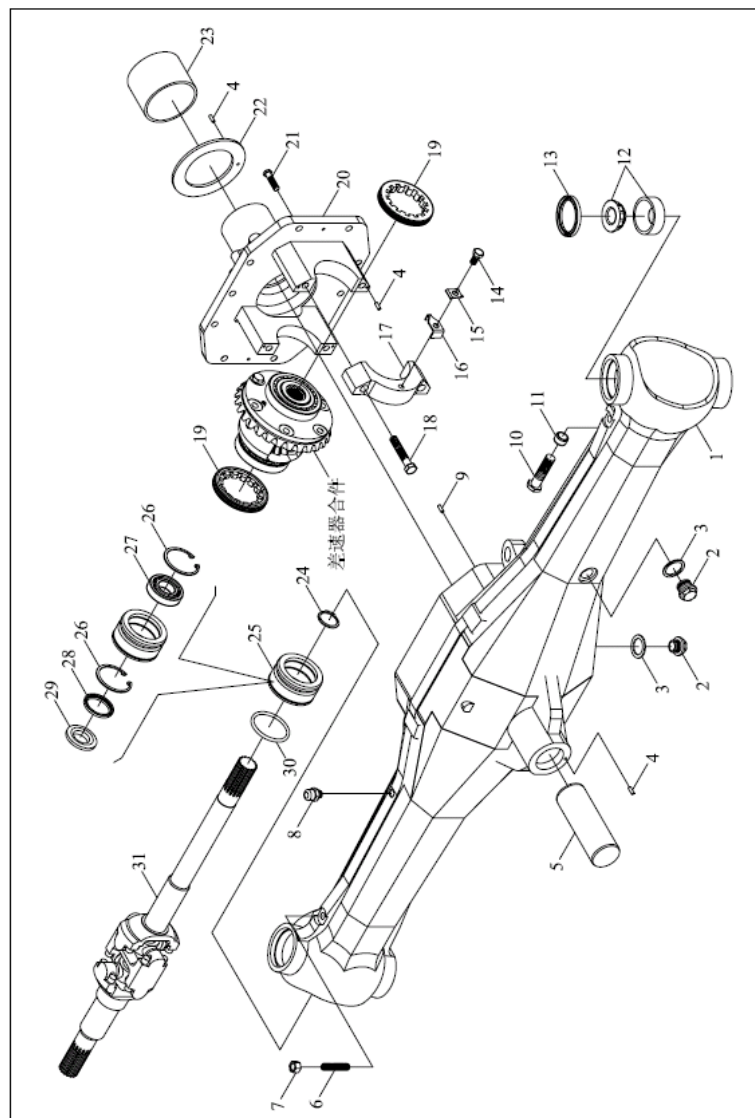

TD804.311-2 前桥总成-2(续)

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
4	4966244/1.41.016	定位销	THIMBLE	6	2011-11_
5	5140017/11	前桥摆销	FRONT AXLE SWING PIN	1	2011-11_
6	5100194/1.40.045	限位螺钉	LIMIT SCREW	2	2011-11_
7	14048814/10128	螺母	NUT	2	2011-11_
8	13413290/24628	通气塞总成	VENT PLUG ASSEMBLY	1	2011-11_
9	4988170/1.40.021	定位销	THIMBLE	2	2011-11_


TD804.311 前桥总成-3

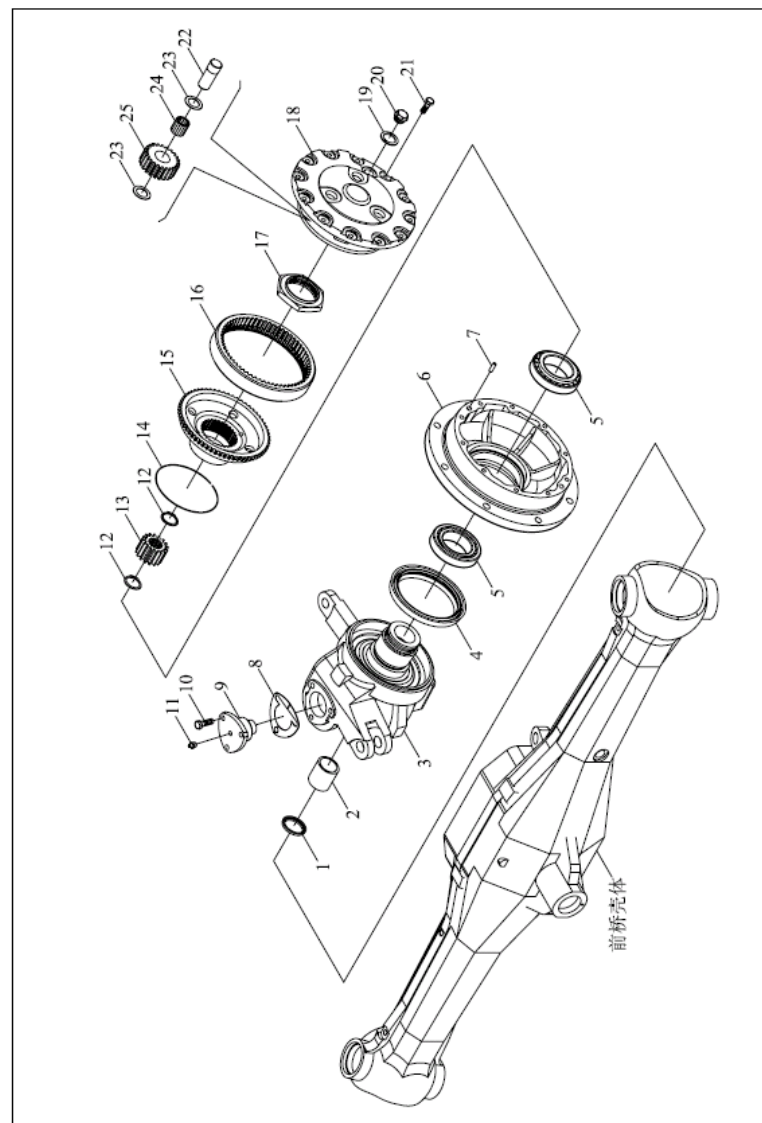


TD804.311-3 前桥总成-3 31FRONT AXLE ASSEMBLY-3

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	5133799/1.41.539	驱动叉轴油封	DRIVING FORK SHAFT OIL SEAL	2	2011-11_
10	14274534/10352/04	螺栓M12X1.25X30		12	2011-11_
11	GBT1152-M10X1	油杯	OIL CUP	4	2011-11_
12	5140018/20	轴用挡圈	RETAINER RING FOR SHAFT	4	2011-11_
13	5137107/20	太阳轮	SUN GEAR	4	2011-11_
14	4997571/1.41.549	齿圈挡环	GEAR RETAINER RING	2	2011-11_
15	5142047/20	齿圈支座	GEAR RING SUPPORT SEAT	2	2011-11_
16	5108749/1.41.543	齿圈	GEAR RING	2	2011-11_
17	5142020/12	锁紧螺母	LOCKING NUT	2	2011-11_
18	5137689/20	行星架	PLANET CARRIER	2	2011-11_
19	JBT982-22	组合密封垫圈	COMBINED SEAL GASKET	2	2011-11_
2	5104199/1.40.228	转向节衬套	STEERING BURL BUSH	2	2011-11_
20	10305114/14530	螺塞	SCREW PLUG	2	2011-11_
21	14233634/10357/04	螺栓	BOLT	24	2011-11_
22	4997509/1.41.547	行星齿轮轴	PLANET GEAR SHAFT	6	2011-11_
22	4997509/1.41.547	行星齿轮轴	PLANET GEAR SHAFT	6	2011-11_
23	4997510/1.41.552	行星齿轮轴承挡圈	PLANET GEAR BEARING RETAINER RING	12	2011-11_
24	5101693/1.41.546	滚针	NEEDLE	19	2011-11_
25	5108747/1.41.545	行星齿轮	PLANETARY GEAR	6	2011-11_
3	5142230-FT/12	左转向节	LEFT STEERING BURL	1	2011-11_
3.1	5142232-FT/12	右转向节	RIGHT STEERING BURL	1	2011-11_
4	8A5137109/12	轮毂油封	HUB OIL SEAL	2	2011-11_
5	5136951/12	前轮毂轴承	FRONT HUB BEARING	4	2011-11_
6	8A5142013/13	前驱动轮毂	FRONT DRIVING HUB	2	2011-11_
7	4985063/1.21.067	定位销	THIMBLE	4	2011-11_

TD804.311 前桥总成-3

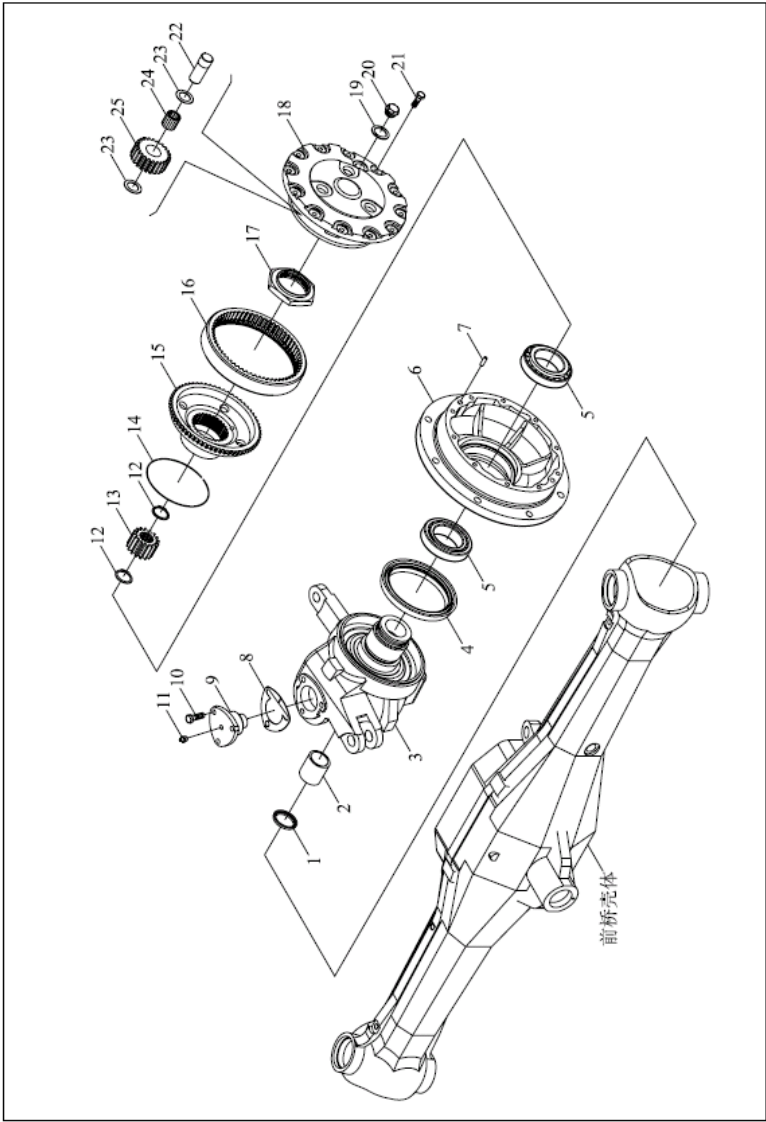


TD804.311 前桥总成-4

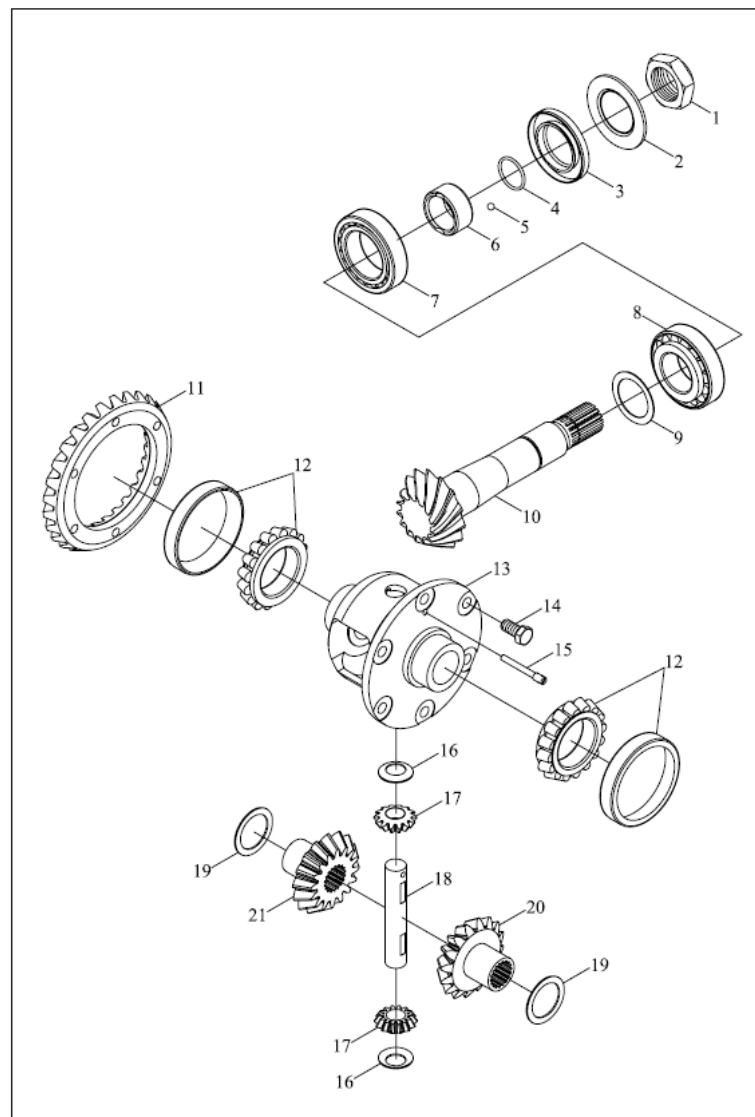

TD804.311-4 前桥总成-4 31FRONT AXLE ASSEMBLY-4

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	5143242/16	锁紧螺母	LOCKING NUT	1	2011-11_
10	5142024/16	小锥齿轮轴	SMALL TAPER GEAR SHAFT	1	2011-11_
11	5111094/16	大锥齿轮	BIG TAPER GEAR	1	2011-11_
12	GB/T307-32012	轴承	BEARING	2	2011-11_
13	4996747/1.41.402	差速器壳体	DIFFERENTIAL HOUSING	1	2011-11_
14	14274434/10357/04	螺栓	BOLT	8	2011-11_
15	4987976/1.32.428	销钉	PIN	1	2011-11_
16	4987975/1.32.425	行星齿轮止推垫圈	PLANET GEAR THRUST WASHER	2	2011-11_
17	885103870/1.32.415B	行星齿轮	PLANETARY GEAR	2	2011-11_
18	5148935/1.32.416	差速器行星齿轮轴	DIFFERENTIAL PLANETARY GEAR SHAFT	1	2011-11_
19	5148936/1.32.424	半轴齿轮止推垫圈	HALF SHAFT GEAR THRUST WASHER	999	2011-11_
2	4997451/1.41.143	油封挡圈	OIL SEAL RETAINER RING	1	2011-11_
20	5103868/1.32.413	左半轴齿轮	LEFT HALF SHAFT GEAR	1	2011-11_
21	5110716/1.41.502	右半轴齿轮	RIGHT HALF SHAFT GEAR	1	2011-11_
3	5135294/16-45X75X12	油封	OIL SEAL	1	
4	GB/T3452.1-31.5X1.8	液压气动用O形橡胶密封圈	O-SEAL RING	1	2011-11_
6	5142026/16	小锥齿轮轴油封环	OIL SEAL RING OF SMALL TAPER PINION	1	2011-11_
7	5133776/16	后轴承	SHAFT	1	2011-11_
8	5143109/16	前轴承	REAR BEARING	1	2011-11_
9	5142032/16	调整垫圈	FRONT BEARING ADJUSTING WASHER	1	2011-11_

TD804.311 前桥总成-5

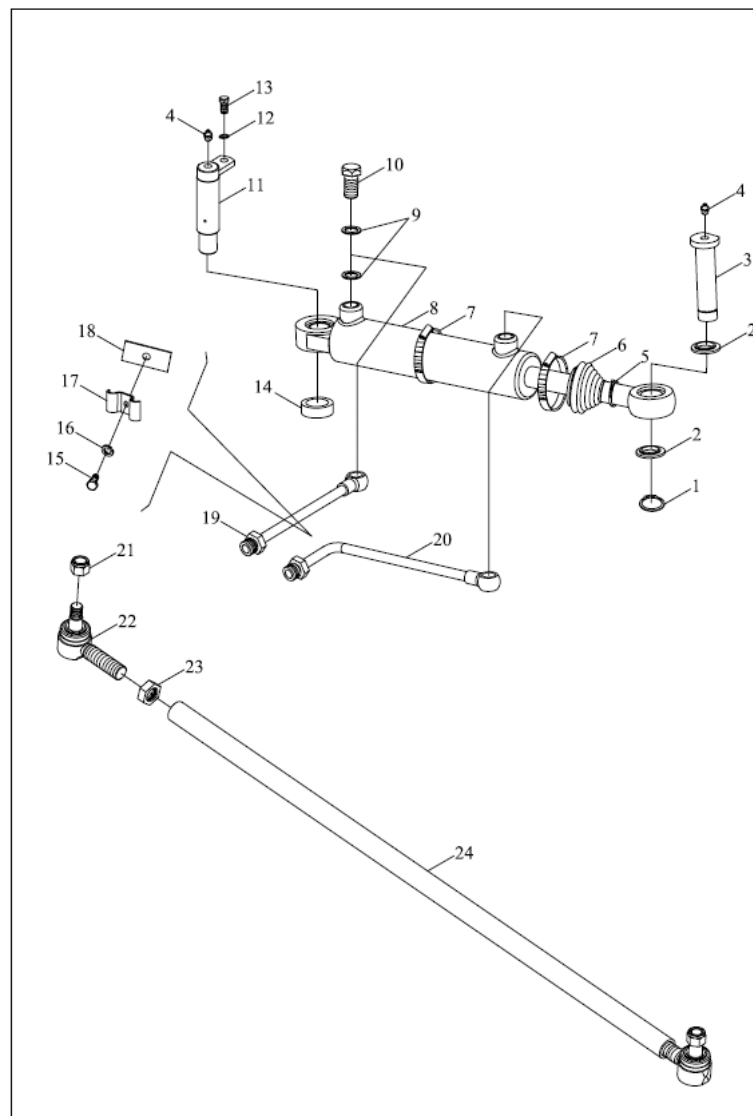

TD804.311-5 前桥总成-5 31FRONT AXLE ASSEMBLY-5

标号 No.	代号 Code	名称 Description		数量 Quantity	备注 Remark
1	GBT894.1-25	挡圈	RETAINER RING	1	2011-11_
10	10184314/14256	空心螺栓	HOLLOW BOLT	2	2011-11_
11	5142236/22	油缸销总成	OIL CYLINDER PIN ASSEMBLY	1	2011-11_
12	GBT7244-8	垫圈	WASHER	1	2011-11_
13	GBT5783-M8X16	螺栓	BOLT	1	2011-11_
14	5111576/1.63.591	油缸销垫圈	CYLINDER PIN WASHER	1	2011-11_
15	GBT5783-M6X16	螺栓	BOLT	1	2011-11_
16	GBT7244-6	重型弹簧垫圈		1	2011-11_
17	4999554/1.63.583	油管夹子	OIL PIPE CLIP	1	2011-11_
18	5138294/1.63.22	支板	BRANCH PLATE	1	2011-11_
19	5145031/22	左转向输油管总成	LEFT STEERING OIL PIPE ASSEMBLY	1	2011-11_
2	5111573/1.63.589	油缸销垫圈	CYLINDER PIN WASHER	2	2011-11_
20	5142238/22	右转向输油管总成	RIGHT STEERING OIL PIPE ASSEMBLY	1	2011-11_
21	12576014/10125	锁紧螺母	LOCKING NUT	2	2011-11_
22	5117314/1.40.516B	球铰接头总成	BALL ARTICULATION JOINT ASSEMBLY	1	2011-11_
23	10726914/10114	锁紧薄螺母	LOCKING THIN NUT	1	2011-11_
24	5142234/14	转向横拉杆合件	STEERING CROSS PULL ROD UNIT	1	2011-11_
3	5111572/1.63.584	油缸销	OIL CYLINDER PIN	1	2011-11_
4	GBT1152-M10X1	油杯	OIL CUP	2	2011-11_
7	JK-3X	环箍	Clip	2	2011-11_
8	5134221/22	转向油缸	STEERING OIL CYLINDER	1	2011-11_
9	JBT982-14	组合密封垫圈	COMBINED SEAL GASKET	4	2011-11_
9	JBT982-14	组合密封垫圈	COMBINED SEAL GASKET	4	2011-11_

