




WIRELESS REMOTE


PROGRAMMING INSTRUCTIONS

Use these instructions to establish communication between remote unit and receiver when either are replaced.

Step 1 – Remove the access cover from the side of the remote and plug in the coiled telephone cord.

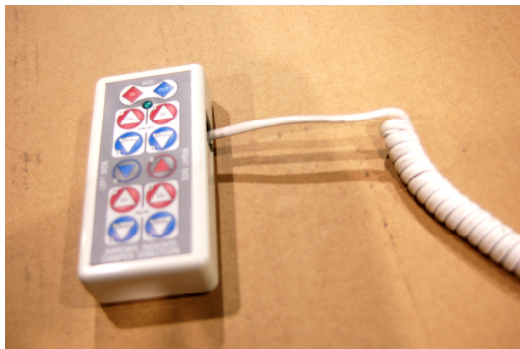


Step 2 – Plug the other end of the coiled cord into the left side phone style jack on receiver.

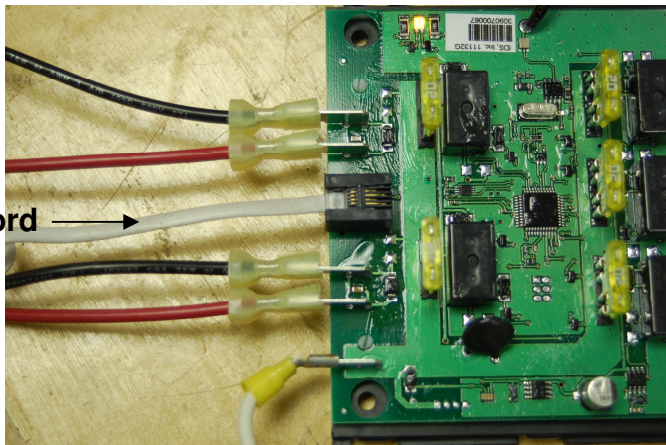


Coiled cord →

Step 3 – Simultaneously press the ALL UP & ALL DOWN buttons, (buttons 5&6). A green light will appear on the remote.

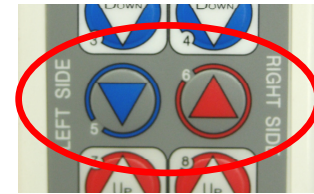

Step 4 – Press button # 8 five times, then press button # 0 five times.

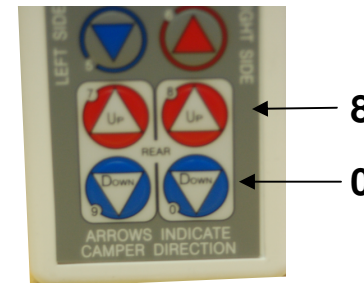

Step 5– Simultaneously press the ACC IN & OUT buttons. A green light will appear on the receiver.



Step 6– Remove coiled cable and check to see that receiver is responding to remote in wireless mode.