


TRILENNIUM 3000/3070/3500 PANIC RELEASE REHANDING

All Trilennium locks are typically handed for inswing applications when they are shipped. When being used on a outswing door, you must use the opposite hand lock and reverse the Panic Release feature.

⚠ Note:


Trilennium locks can only be re-handed from right hand inswing to left hand reverse and from left hand inswing to right hand reverse.

HANDING

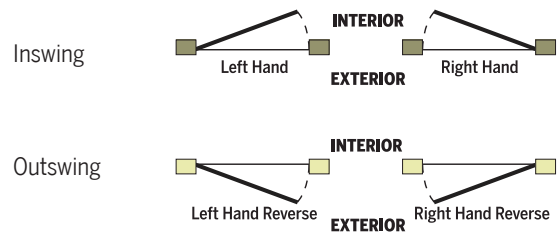

1. Part identification

There is one component that creates the panic release feature on the interior of the Trilennium mortise lock. The **long** drive arm is for the interior, the **short** drive arm for the exterior.

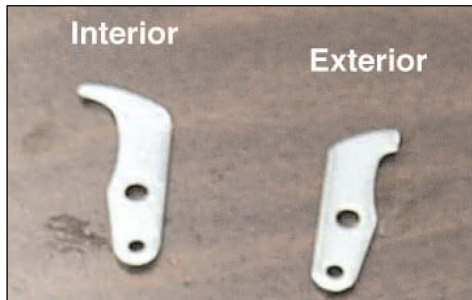


2a. Remove plastic covers

The black plastic rehanding covers are removable. Depress the snap lock using a fingernail and lift the cover out.



2b. Twist to remove

One edge is under the "I" beam, so twist it to the side slightly.

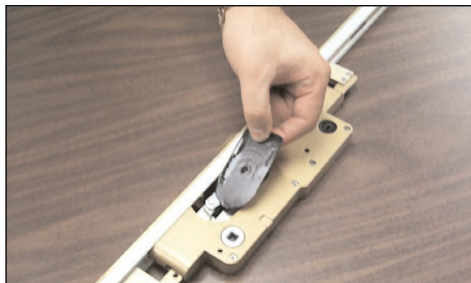

3. Reverse arms

Once you have removed both plastic covers, reverse the drive arms. Reference 2nd page for correct placement. Reinstall the covers.



TRILENNIUM 3000/3070/3500 PANIC RELEASE REHANDLING


DRIVE ARM POSITIONING REFERENCE:

Interior Side

Unlocked Position




Locked Position

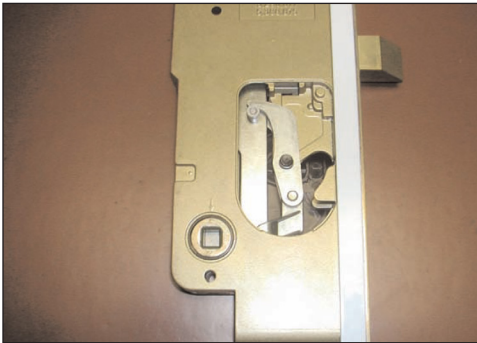


Exterior Side

Unlocked Position

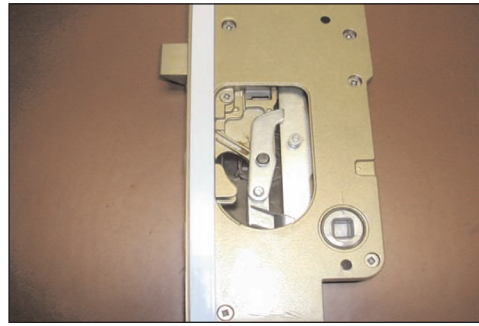

Locked Position

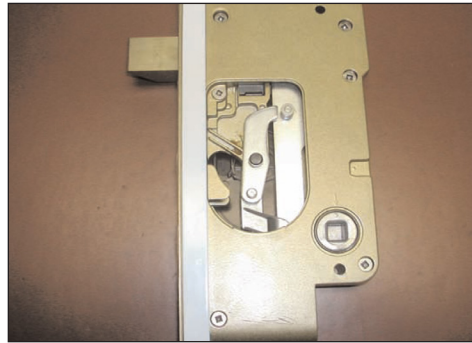

Innovation protected under patents and patents pending in U.S. and Canada. See www.endurapatents.com.

The information contained in this document is the confidential and proprietary information and trade secrets of Endura Products, Inc. Any disclosure, use or dissemination of such information without the express written permission of Endura Products, Inc. is strictly prohibited. Endura Products, Inc. also owns any and all intellectual property rights embodied in such information, including patent rights, copyrights, and trademark rights, and no license of any intellectual property right is intended, nor should any license be implied, as a result of the receipt of this document.

Rev. 09.01.17