



Fig 1

FRAME GROUP

NO	CODE	DESCRIPTION		QTY.	
1	8070064150GH02	顶蓬长管	LONG BAR	2	
2	6010062150GH00	顶蓬架焊接组件	TOP CAGE	1	
3	8010047250G000	R垫	R-WASHER	20	
4	57870805512505	法兰面螺栓M8X55	BOLT 5787 M8X55	14	
5	7010016250G000	φ 32塑料管座	TUBE SEAT φ 32	2	
7	8070067150GH02	边侧管焊接组件	SIDE BAR	2	
8	61870800012505	法兰自锁螺母M8	NUT 6187 M8	6	
9	8070065150G000	顶蓬直管焊接组件	CROSS BAR	1	
10	7010017250G000	φ 25塑料管座	TUBE SEAT φ 25	6	
11	8070066150GH01	车架焊接组件	FRAME	1	
12	9730060080G000	十字大盘头螺栓 军绿	BOLT 5789 M6X16	4	
13	61820600010005	尼龙自锁螺母	NUT 6177 M6	4	
14	610010210GH00	前挡泥板支架焊接组件 (右)	FRONT RIGHT FENDER BRACKET	1	
15	930006000000005	弹垫 φ 6	SPRING WASHER φ 6	4	
16	57890601410005	法兰面螺栓M6X14	FLANGE BOLT M6*14	9	
17	610006710GH00	前挡泥板支架焊接组件 (左)	FRONT LEFT FENDER BRACKET	1	
18	6000339150G000	油门线	THROTTLE CABLE	1	
19	6000050150G000	手刹线 (右)	PARKING BRAKE CABLE	1	
20	7020012250G000	脚踏垫	RUBBER FOOT PLATE	4	
21	6000104150G003	led大灯	WITH NET HEADLIGHT	2	
22	9090001250G000	头灯灯泡35W/35W/12V	BULB	2	
23	61770800012505	法兰面螺母M8	NUT 6177 M8	2	
24	8010049250G000	头灯减震圈	SHOCK ABSORBER	4	
25	57890805012505	法兰面螺栓M8X50	FLANGE BOLT M8*50	2	
26	6000114250G000	反射体 (圆、黄)	FRONT REFLECTOR	2	
27	6000083250G000	海绵护套1(车架)	FORM PADDING 1	2	
28	6000116250G000	海绵护套2(长管)	FORM PADDING 2	2	
29	6000300250G000	雨蓬海绵护套	FORM PADDING TOP	2	
30	6100061250G000	雨篷	CANOPY TOP	1	
31	8005000250G000R	倒车镜 (右)	REAR VIEW MIRROR (R)	1	
32	8005000250G000L	倒车镜 (左)	REAR VIEW MIRROR (L)	1	
33	7010034150G001	前右泥板(黄 红 蓝 白)	FRONT RIGHT FENDER	1	
34	7010034150G000	前左泥板(黄 红 蓝 白)	FRONT LEFT FENDER	1	
35	6502000080G000	装饰板	PLASTIC BODY 1	1	
36	6501000150G000	前面板(黄 红 蓝 白)	PLASTIC BODY 2 150	1	
37	6503000150G000	前导流罩	PLASTIC BUMPER 150	1	
38	2823420130005	螺栓2823 ST4. 2*13	SCREW 2823 ST4. 2X13	5	
39	94000000600005	卡片螺母M6	NUT 94 M6	5	
40	6000136250G000	低音喇叭	HORN. L	1	
41	6000135250G000	高音喇叭	HORN. H	1	
42	57890801612505	GB5789法兰面螺栓M8X16	GB5789 BOLT M8x16	2	

FIG. 1

FRAME GROUP

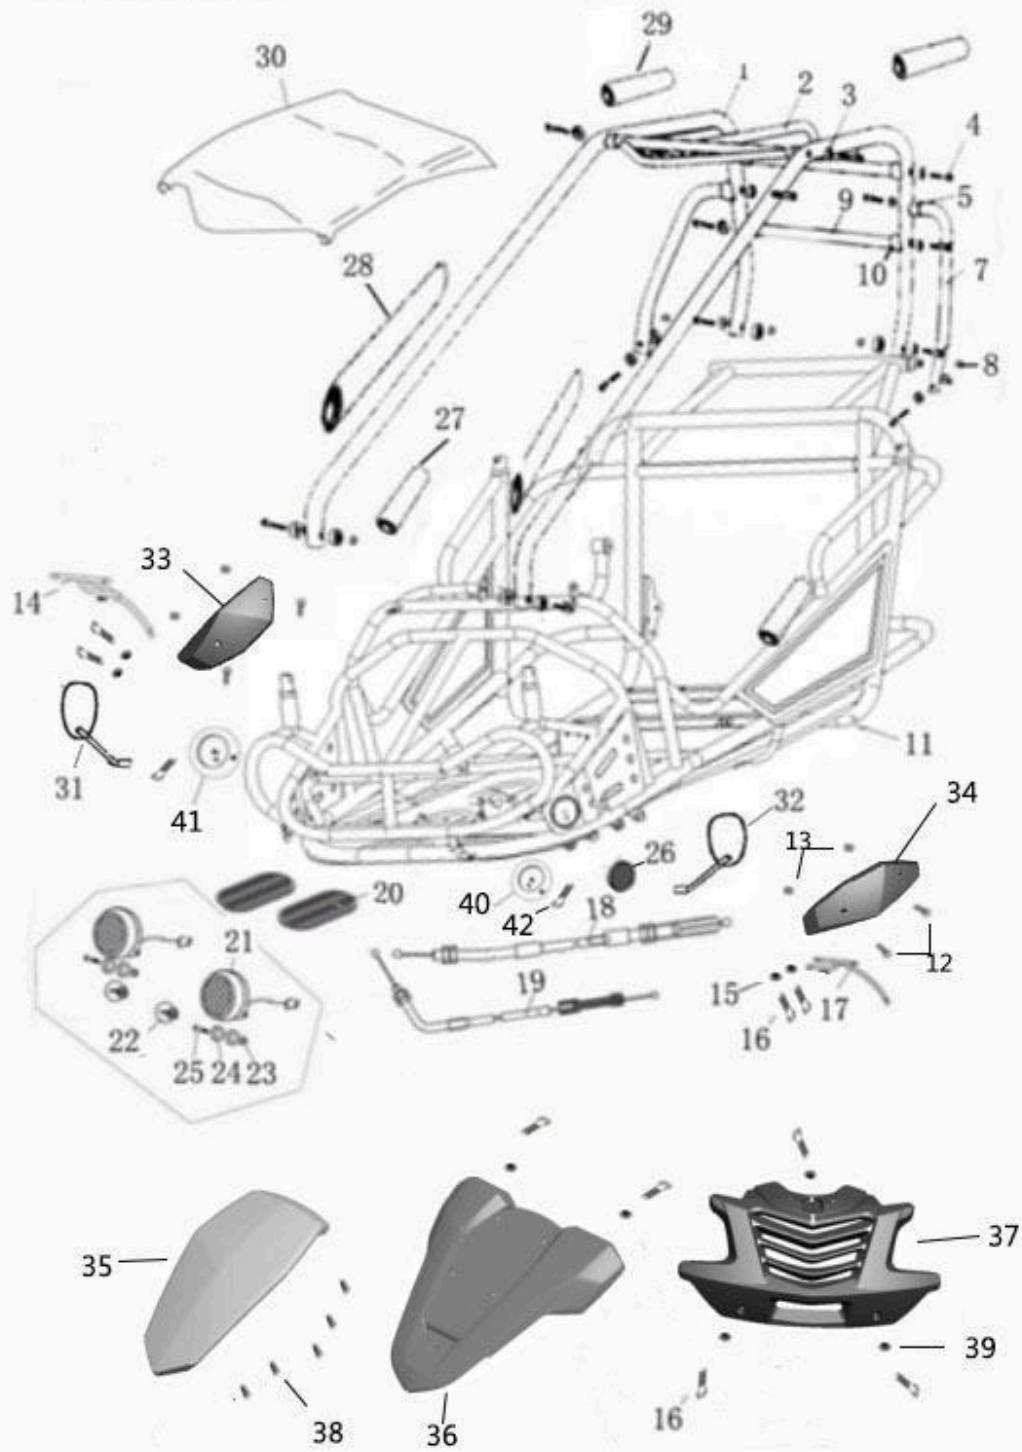


Fig 2: STEERING SHAFT ASSY

NO	CODE	DESCRIPTION		QTY.	
1	7010041250G000	方向盘罩（塑料）	COVER OF STEERING WHEEL	1	
2	57810601210005	5781六角头螺栓M6X12	HEXAGON BOLT M6X12	3	
3	7020038250G000	方向盘	STEERING WHEEL	1	
4	4011000150G000	方向盘安装柱	STEERING WHEEL SPORT	1	
5	7010026150G000	方向盘衬套	STEERING SHAFT	2	
6	57830802512505	六角螺栓M8X25	BUSH STEERING SHAFT	2	
7	93000800000005	Φ8弹垫	BOLT 5783 M8X25	2	
8	6000093250G000	方向万向节	SRPING WASHER Φ8	1	
9	7010003250G000	上摇架衬管	STEERING KNUCKLE	1	
10	4000100150G000	方向盘调节支架螺栓	STEERING GEAR ADJUSTING BOLT M8X255	1	
11	57890810512505	5789:M8*105	BOLT M8X105	1	
12	7010003250G000	上摇架尼龙衬套	TILT STEERING LOCKING BUSH	2	
13	61870800012505	M8自锁螺母	NUT 6187 M8	9	
14	4000051150G000	方向盘调节支架焊接组件	TILT STEERING HOUSING	1	
15	7020066250G000	方向连杆防尘套	BALL JOINT DUST COVER	2	
16	61870802512505	法兰面螺栓M8X25	BOLT 6187 M8X25	4	
17	3000007250G000	方向机总成	STEERING SHAFT ASSY.	1	
18	7020002250G000	防尘套	BALL JOINT DUST COVER L	1	
19	4000014250G000	转向机齿轮箱	STERRING GEAR	1	
20	9900016250G000	圆螺母M16X1.5(方向万向球头锁紧螺母)	NUT 99 M16X1.5	2	
21	4000008250G000	万向球头	STEERING BALL JOINT	2	
22	61701000012505	六角螺母M10*1.25	NUT 6170 M10X1.25	2	
23	7020002250G000	防尘套	BALL JOINT DUST COVER L	1	
24	8010157250G000	横拉杆	TIE TOD	2	
25	6000062250G000	球头	ROD END	2	
26	97001000000002	平垫Φ10	WASHER 97 Φ10	2	
27	93001000000002	弹垫Φ10	SPRING WASHER 93 Φ10	2	
28	94571000012505	开槽螺母M10X1.25	CASTLE NUT M10X1.25	2	
29	GB912502500002	开口销Φ2.5X25	COTTER PIN Φ2.5X25	2	
30	8020014250G000	方向器支架	STEERING GEAR BRACKET	2	
31	8020104250G000	脚踏垫上压板	PEDAL PAD PLATEN	2	
32	9708150250G000	油门踏板轴M8X150	THROTTLE PEDAL BOLT M8X150	1	
33	8040001250G000	右油门回位弹簧	THROTTLE RETURN SPRING R	1	
34	57870804512505	法兰面螺栓M8X45	BOLT 5787 M8X45	2	
35	61700800012505	六角螺母M8	NUT 6170 M8	2	
36	4000016250G000	油门踏板组件	THROTTLE PEDAL ASSY.	1	
37	7020036250G000	油门踏垫	THROTTLE PADEL PAD	1	
38	81800501610005	十字盘头螺钉M5X16	SCREW 818 M5X16	2	
39	97000500000005	平垫GB97 Ø5	WASHER 97 Ø5	2	
40	61700500010005	螺母 M5	NUT 6170 M5	2	
41	7020037250G000	刹车踏垫	BRAKE PADEL PAD	1	
42	4000015150G000	刹车踏板组件	BRAKE PADEL ASSY.	1	
43	8070044250G000	液刹泵保护板	MASTER CYLINDER BRACKET	1	
44	7010004250G000	踏杆衬套	PEDAL BUSHING	4	
45	8040007250G000	左刹车回位弹簧	BRAKE PEDAL RETURN SPRING L	1	
46	9708222250G000	刹车轴 M8*222	BRAKE PEDAL BOLT M8X222	1	

47	88200602800003	(轴销) 圆柱销6X28	PIN 6X28	1	
48	8030024250G001	液压泵顶针支架	SPINDLE BRACKET	1	
49	GB912001600002	开口销 ϕ 2X16	COTTER PIN ϕ 2X16	1	
50	57890803512505	法兰面螺栓M8X35	BOLT 5789 M8X35	2	

FIG.2

STEERING SHAFT ASSY.

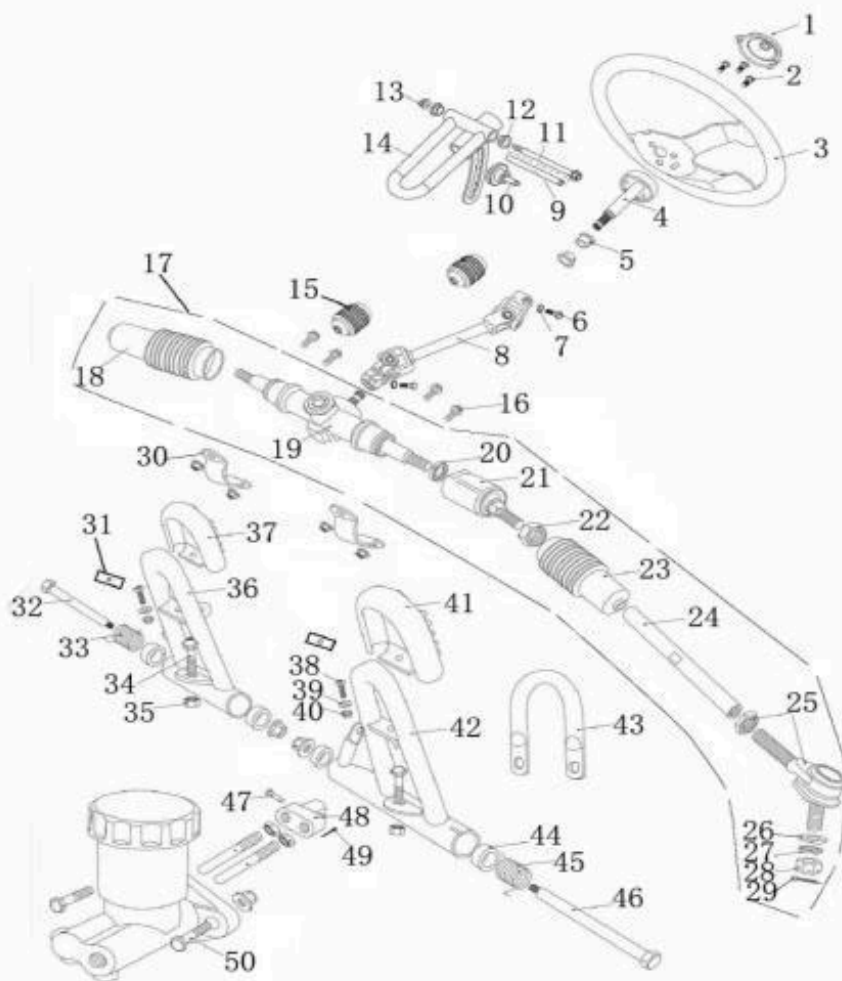


Fig 3:

SUSPENSION ARM ASSY

NO	CODE	DESCRIPTION		QTY.	
1	3000030250G000	右摇臂	STRUT & SPINDLE SUPPORT R	1	
2	57890810512505	法兰面螺栓M8X105	BOLT 5789 M8X105	2	
3	8010015250G000	上摇架衬管	UPPER SUSPENSION ARM COLLAR	2	
4	7010003250G000	上摇架衬套	UPPER SUSPENSION ARM BUSHING	4	
5	4000004250G000	上摇架焊接组件	UPPER SUSPENSION ARM	2	
6	61870800012505	法兰自锁螺母M8	NUT 6187 M8	2	
7	94571200012505	开槽螺母M12X1.25	CASTLE NUT M12	4	
8	7020025250G000	摇臂防尘套	BALL HEAD DUST SEAL	4	
9	8020053250G000	球头四方垫（方孔）（装配）	BALL HEAD SPACER	4	
10	3000029250G000	左摇臂	STRUT & SPINDLE SUPPORT L	1	
12	57891004012505	法兰面螺栓M10X1.25X40	BOLT 5789 M10X40	2	
13	61871000012505	M10X1.25自锁螺母	NUT 6187 M10	16	
14	6000325150G000	前减震器L=325	CUSHION ASSY. FR L=325	2	
15	5400600400N000	黄油嘴	LUBRICATING NIPPLE	6	
16	57891008012505	法兰面螺栓M10X1.25X80	BOLT 5789 M10X80	4	
17	8020034250G100	下摇架封盖	LOWER SUSPENSION ARM DUST CAP	8	
18	8010014250G000	下摇架衬管	LOWER SUSPENSION ARM COLLAR	4	
19	7010002250G000	连杆衬套	LOWER SUSPENSION ARM BUSHING	8	
20	9040001250G000	O型密封圈 ϕ 21.2X2.65	O-RING ϕ 21.2X2.65	8	
21	4000023250GH00	下摇架	LOWER SUSPENSION ARM ASSY	2	
22	57891004012505	法兰面螺栓M10X1.25X40	BOLT 5789 M10X40	2	
23	97001200000005	垫片 ϕ 12	WASHER 97 ϕ 12	4	
24	GB912503000002	开口销 ϕ 2.5X30	COTTER PIN ϕ 2.5X30	6	
25	57890801412505	法兰面螺栓M8X14	BOLT 5789 M8X14	4	
26	57830601610005	六角头螺栓M6X16	BOLT 5783 M6X16	12	
27	8010054250G000	前制动盘	BRAKE DISC	2	
28	YF047002500700	油封47X25-7	OIL SEAL 47X25-7	2	
29	62042RS00000000	轴承6204-2RS	BEARING 6204-2RS	2	
30	9710031250G000	轮胎螺栓M10X1.25X31	TIRE BOLT M10X1.25X31	8	
31	8010085250GH00	前轮毂	FRONT WHEEL HUB	2	
32	62022RS00000000	轴承6202-2RS	BEARING 6202-2RS	2	
33	7020050250G000	前轮胎A007 20*7-8	FRONT TIRE 20X7-8	2	
34	6000142250G000	前钢圈(铁 黑色)	FRONT RIM (IR, BK)	2	
35	7190018080G000	气门嘴	TIRE NIPPLE	2	
36	6000097250G000	右前轮总成（铁 黑）	FRONT WHEEL ASSY. R	1	
37	6000003250G000	左前轮总成（铁 黑）	FRONT WHEEL ASSY. L	1	
38	61871000012505	M10X1.25自锁螺母	NUT 6187 M10	16	
39	94571400015005	开槽螺母M14X1.5	CASTLE NUT M14	2	
40	7020039250G000	轮毂罩	FRONT HUB COVER	2	
41	97001400000005	垫片 ϕ 14	WASHER ϕ 14	2	
42	93000800000005	ϕ 8弹垫	SPRING WASHER 93 ϕ 8	4	

FIG. 3

SUSPENSION ARM ASSY.



Fig 4: REAR CARGO RACK/SEAT/BELT

NO	CODE	DESCRIPTION		QTY.	
1	6000387150G001	后扁尾灯	TAIL LIGHT	1	
2	9090002250G000	后尾灯灯泡	TAIL LIGHT BULB	1	
3	8080062150G000M	后货架	REAR CARGO RACK	1	
4	57870802012505	法兰面螺栓M8X20	BOLT 5789 M8X20	4	
5	61870800012505	M8自锁螺母	NUT 6187 M8	6	
6	8070078150G000M	后货架撑杆	RACK SUPPOT ARM	2	
7	600035550G000	分体式五点安全带	NEW 5PT SEAT BELT (BLAZER X)	2	
8	5100000150G001	新座椅	NEW SEAT	1	
9	6000379150G000	主座椅	SEAT RAIL SET	1	
10	37000804512503	T形螺栓 M8*45	T-SHAPE BOLT M8X45	2	
11	61770800012505	法兰螺母M8	NUT 6177 M8	2	
12	57870804012505	法兰螺栓M8X40	BOLT 5787 M8X40	2	
13	57870805512505	法兰面螺栓M8X55	BOLT 5787 M8X55	2	
14	8010047250G000	R垫	R-WASHER	4	
15	9700003250G000	螺母M7/A6"	BELT NUT M7/A6	9	
16	9700001250G000	螺栓M7/16" X28	SPECIAL BOLT M7/16"X28	9	
17	9700002250G000	安全带垫片 ϕ 12	WASHER ϕ 12	9	

FIG. 4

REAR CARGO RACK/SEAT/BELT


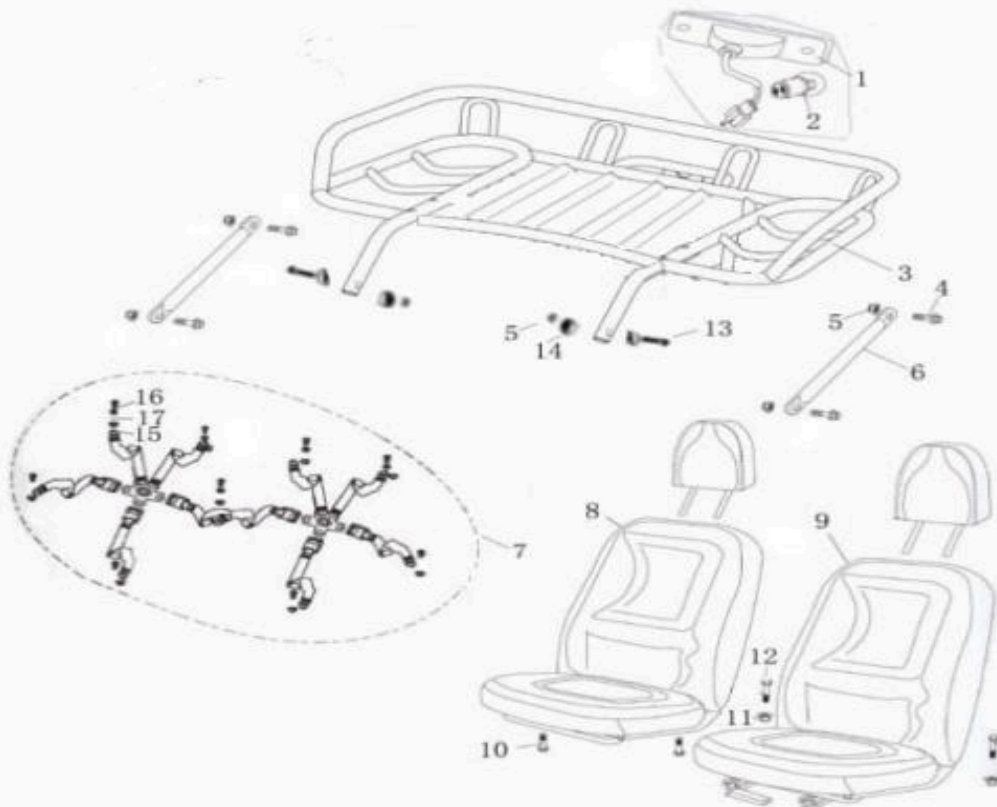


Fig 5: PARKING BRAKE LEVER ASSY.

NO	CODE	DESCRIPTION		QTY.	
1	6000042150G000	手刹杆组件	PARKING BRAKE LEVER ASSY.	1	
2	90746501610005	9074.6 M5X16	SCREW 9074.6 M5X16	1	
3	61870500012505	M5自锁螺母	NUT 6187 M5	1	
4	7020024150G000	手刹保护罩	REVERSE LEVER COVER	1	
5	57870802012505	法兰面螺栓M8X20	BOLT 5787 M8X20	2	
6	8040004150G000	手刹弹簧	CABLE SPRING	1	
7	61870800012505	自锁螺母M8	NUT 6187 M8	2	

FIG. 5 PARKING BRAKE LEVER ASSY.

PAR

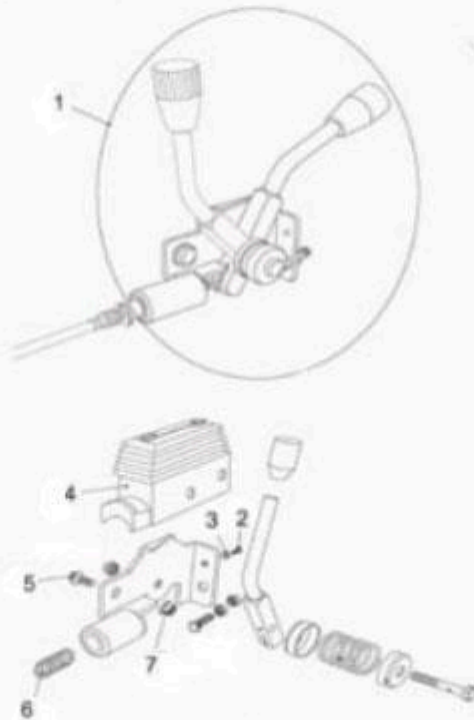

[illegible]

Fig 7: ELECTRIC MOTOR/CONTROLLER ASSY

NO	CODE	DESCRIPTION		QTY.	
1	8101000150G000	控制器60V70A	CONTROLLER	1	
2	1603010102	电机1200W 60H	ELECTRICAL MOTOR	1	
3	2000031150G000M	电机固定座焊接组件	Motor fixed	1	
4	1010202150G000	小链轮 (530 12齿)	Small chain wheel	1	
5	8009110080G000	锁片 (27-30)	locking plate	1	
6	57830601212505	六角螺栓6*12	BOLT M6*12	2	
7	70000501612505	内六角螺栓5*16	BOLT M5*16	4	
8	8147008080G100	链条调节器	CHAIN ADJUSTER	1	
9	61701200012505	六角螺母M12X1.25	NUT M12X1.25	1	
10	8010042250G000	调节器垫片35*6	WASHER-CHAIN ADJUSTER (Φ 12X Φ 35X6)	2	
11	8010041080G000	调节器衬套18*13.5	BUSHING-CHAIN ADJUSTER	1	
12	8020045080G000	调节器圆盖	BOTTOM CAP WASHER-CHAIN ADJUSTER	1	
13	7020001080G000	塑料尼龙衬套35*7	CAPWASHER-CHAIN ADJUSTER	1	
14	61871200012505	自锁螺母M12X1.25	NUT M12X1.25	1	
15	7020077080G000	缓冲衬套10*30*30/35	BUSHING	2	
16	57891004012505	法兰面螺栓M10X1.25X40	BOLT M10X1.25X40	1	
17	61871000012505	螺母M10X1.25	LOCKING NUT M10X1.25	4	
18	57891012512505	法兰面螺栓M10X1.25X125	BOLT M10X1.25X125	2	
19	57891021512505	螺栓M10X1.25X215	BOLT M10X1.25X215	1	
20	8010023150G000M	后摆臂轴套17*120	SPANNER	1	

Fig 7: ELECTRIC MOTOR/CONTROLLER ASSY

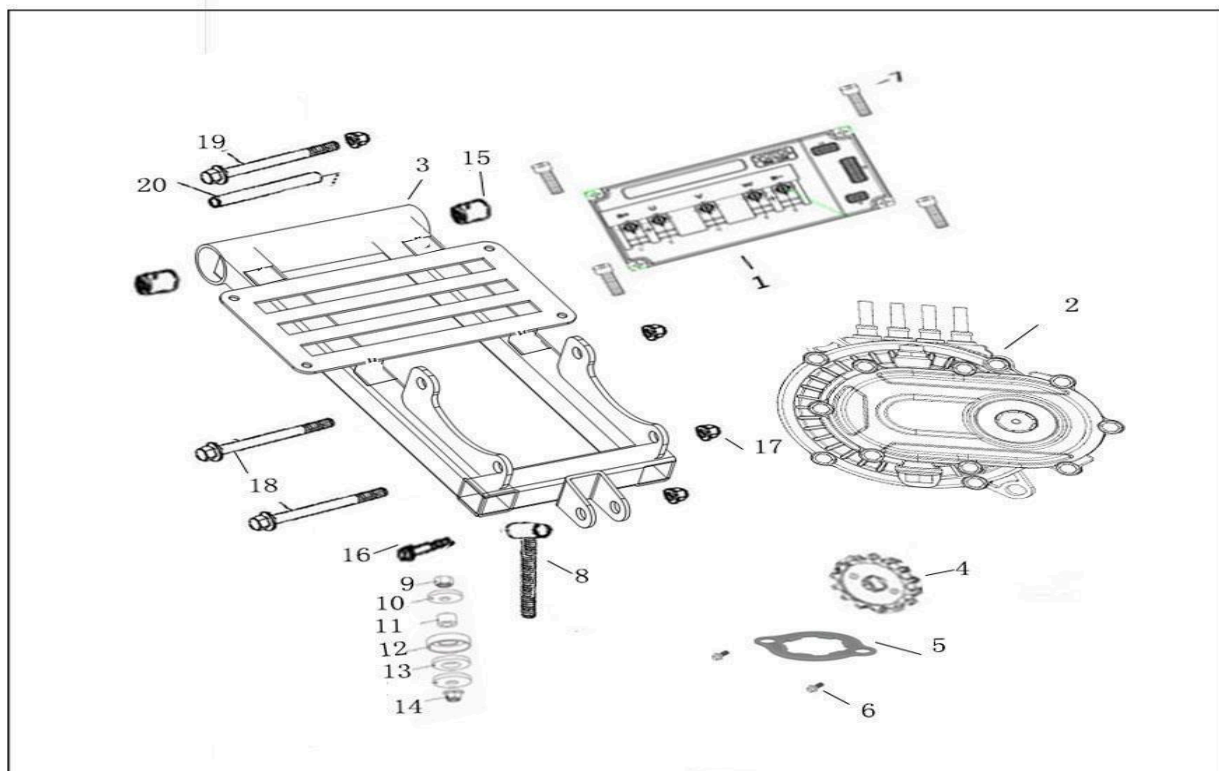


Fig:8

REAR HOUSING

NO	CODE	DESCRIPTION		QTY.	
1	57890802512505	法兰面螺栓M8X22	BOLT 5789 M8X22	4	
2	8010053250G000	后制动盘	BRAKE DISC	1	
3	61870800012505	法兰自锁螺母M8	NUT 6187 M8	14	
4	8010057150G0A0	后轮轴	REAR AXLE	1	
5	4200542150G000	530 52节链条	530 CHAIN 52	1	
6	8110077250G000	39齿链轮 (530)	SPROCKET 39T	1	
7	57890803012505	法兰面螺栓M8X30	BOLT 5789 M8X30	4	
8	YF050003400700	油封34*50*7	OIL SEAL 34*50*7	2	
9	8030008150G100	轴承座 (薄)	RR. AXLE BRG HOUSING COMP	2	
10	62062RS00000000	轴承6206-2RS	BEARING 6206-2RS	2	
11	8020028150G100	轴承压板	BEARING BASE	2	
12	57870804012505	法兰面螺栓M8X40	BOLT 5787 M8X40	6	
13	YF042003000700	油封30*42*7	OIL SEAL 30*42*7	2	
14	9710031250G000	轮胎螺栓 M10X1.25X31	TIRE BOLT M10X1.25X31	8	
15	8010056150GHA0	后轮毂	REAR WHEEL HUB	2	
16	7020052250G000	后轮胎A004 21*10-10	REAR TIRE 22X10-10	2	
17	6000143250G000	后钢圈(铁 黑)	REAR WHEEL (IR, BLAZER X)	2	
18	6000383250G000	左后轮总成(铁 黑)	REAR WHEEL ASSY L (BLAZER X)	1	
19	61871000012505	轮胎螺母M10X1.25 (自锁 螺母)	NUT 6187 M10X1.25	8	
20	97001600000005	平垫 ϕ 16	WASHER ϕ 16	2	
21	94571500015005	开槽螺母 M16X1.5	CASTLE NUT M16X1.5	2	
22	GB914004000002	开口销 Φ 4x40	COTTER PIN Φ 4x40	2	
23	7020039250G000	轮毂罩	HUB COVER	2	
24	6000052250G000	右后轮总成(铁 黑)	REAR WHEEL ASSY R (BLAZER X)	1	
25	7190018080G000	气门嘴	AIR VALVE	2	
26	6000149150G000	530H链条接头	CHAIN MASTER LINK 530	1	

FIG.8

REAR HOUSING

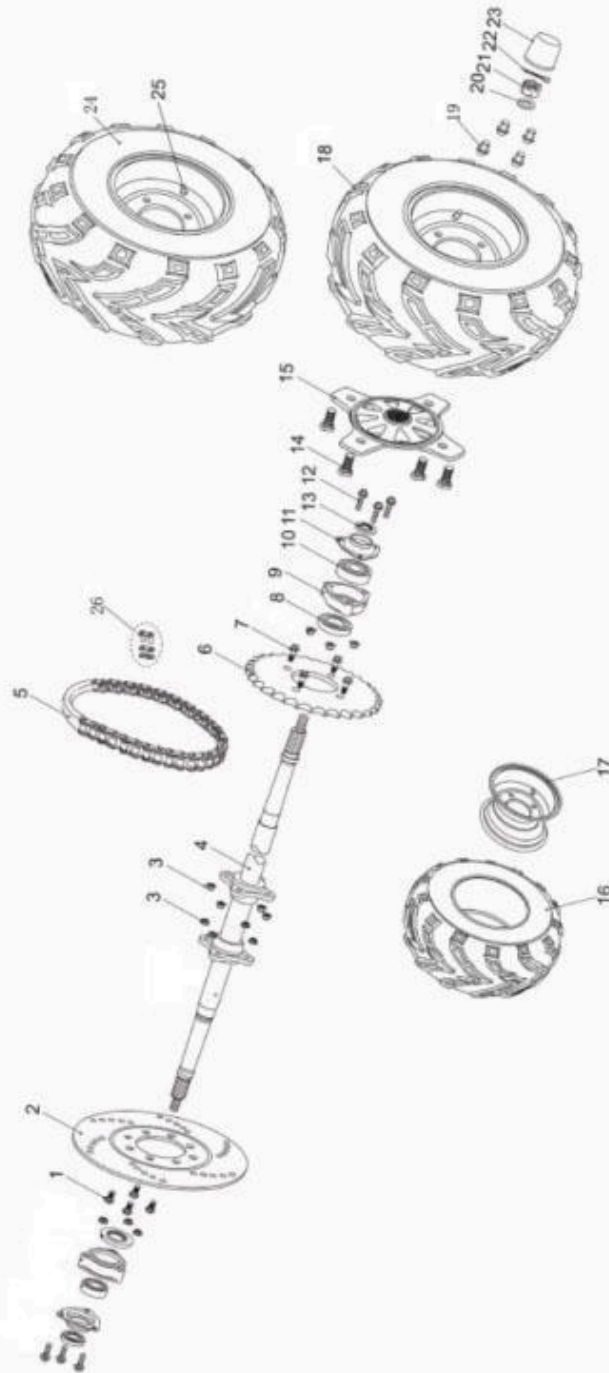


Fig: 9

WIRE HARNESS/ELECTRICAL/SWITCH

NO	CODE	DESCRIPTION		QTY.	
1	8002900080G000	转换器 (60V-12V)	CONVERTER	1	
2	6000160080G000	大灯开关	HEADLIGHT SWITCH	1	
3	6000144080G000	喇叭开关	HORN SWITCH	1	
4	6000165080G002	电门锁	POWER ON SWITCH	1	
5	8020218080G000	断路器	CIRCUIT BREAKER	4	
6	4000040080G000	仪表总成	SPEEDOMETER	1	
7	81800302510001	螺钉3*25	SCREW 818 M3X25	4	
8	61700300010002	六角螺母M3	NUT 6170 M8	4	
9	57890601412505	法兰面螺栓M6X14	bolt M6X14	6	
10	6000335080G000	电缆线	WIRE HARNESS	1	
11	12111208034	扎带200	RIBBIN 200mm	15	
12	5800143080G000M	仪表支架	SPEEDOMETER BRACKET	1	
13	8020239080G000M	断路器支架	CIRCUIT BREAKER BRACKET	1	
14	90740501212505	螺栓M5*12	BOLT M5X12	2	
15	6000270080G000	档杆开关	Shift rotation switch	1	
16	6000103150G000	USB插座	USB PLUG BASE	1	

FIG:9

WIRE HARNESS/ELECTRICAL/SWITCH

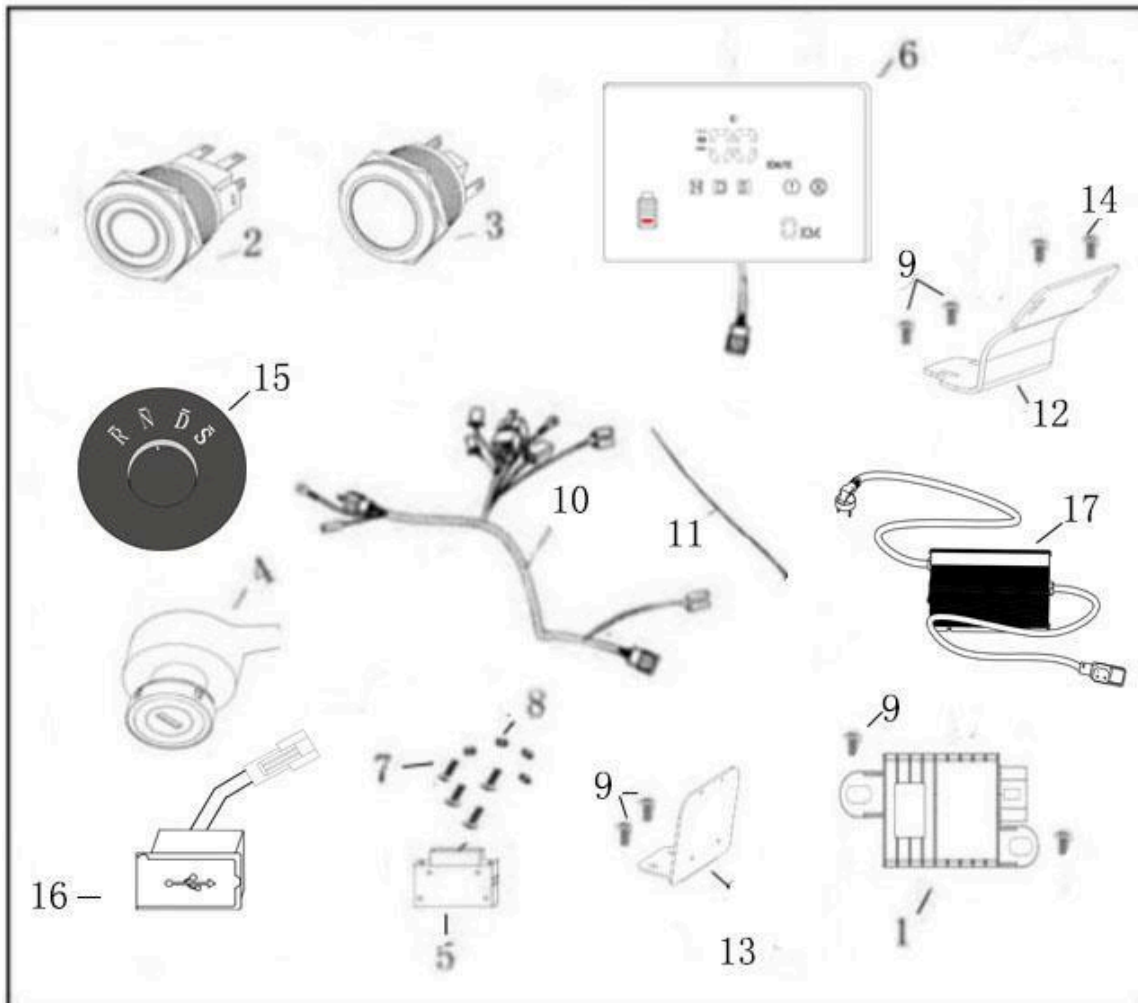


Fig 10

BRAKE ASSY

NO	CODE	DESCRIPTION		QTY.	
1	400000150G000	碟刹(左)	BRAKE ASSY.	1	
2	6000076250G000	制动油缸 (主泵)	MASTER CYLINDER	1	
3	6000095250G000	右前制动卡钳总成	FRONT BRAKE CALIPER R	1	
4	6000028250G000	左前制动卡钳总成	LEFT BRAKE CALIPER L	1	
5	7020016250G000	前制动蹄片	FRONT CALIPER BRAKE PAD	2	
6	6000092150G000	后制动卡钳总成	REAR BRAKE CALIPER	1	
7	7020022150G000	后制动蹄片	REAR CALIPER BRAKE PAD	1	
8	6000089250G000	左前制动油管	FRONT LEFT BRAKE HOSE	1	
9	6000090250G000	右前制动油管	FRONT RIGHT BRAKE HOSE	1	
10	6000091150G000	后制动油管	REAR BRAKE HOSE	1	
11	8010081250G000	制动顶针	NUT 6170 M8	1	
12	61700800012505	六角螺母M8	BRAKE PIN SPINDLE	2	
13	57890810012505	M8*100	BOLT M8X100	1	
14	57890801212505	M8*12	BOLT M8X12	1	
15	93000800000005	93: $\phi 8$	SPRING WASHER $\phi 8$	2	

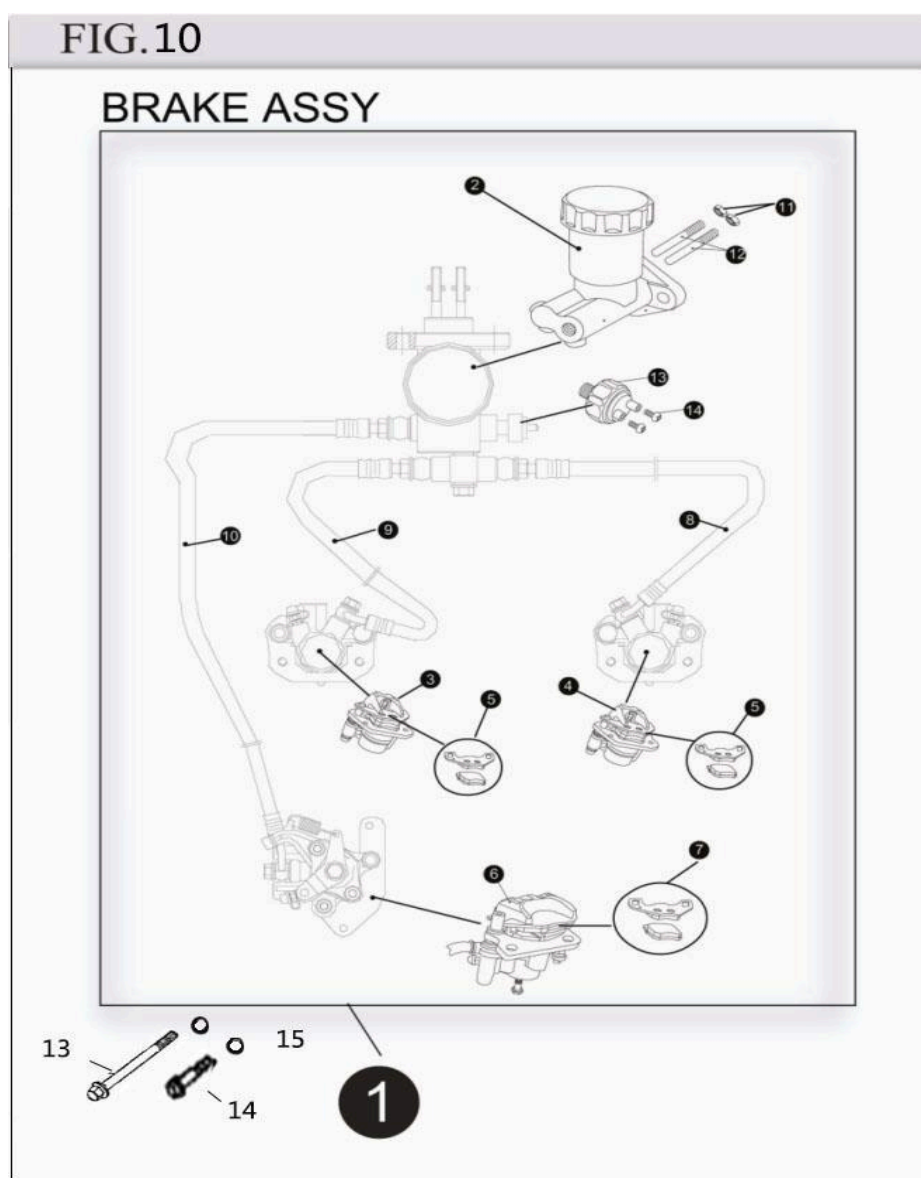


Fig 11

WARNING STICKERS ASSY

NO	CODE	DESCRIPTION		QTY.	
1	9072100150G000	150卡丁车1号警告贴花 (综合警告贴花1)	1# WARNING STICKER	1	
2	9072200150G000	150卡丁车2号警告贴花 (综合警告贴花2)	2# WARNING STICKER	1	
3	9072300150G000	150卡丁车3号警告贴花 (严禁长发警告贴花)	3# WARNING STICKER 150	1	
4	9072400050G000	50卡丁车4号警告贴花 (乘员超载警告贴花)	4# WARNING STICKER 50	1	
5	9072500050G000	50卡丁车5号警告贴花 (严禁上路警告贴花)	5# WARNING STICKER	1	
6	9072500150G000	150卡丁车5号警告贴花 (驻车操作指示贴花)	5# WARNING STICKER 150	1	
7	9072700050G000	50卡丁车7号警告贴花 (严禁攀爬警告贴花)	7# WARNING STICKER	1	
8	9072900050G000	50卡丁车9号警告贴花 (MIDE IN CHINA贴花)	9# WARNING STICKER 50	1	
9	9073000050G000	50卡丁车10号警告贴花 (安全带警告贴花)	10# WARNING STICKER 50	1	
10		防自燃警告贴花	10#WARNING STICKER	1	
11	9070411150G007	左前泥板标贴	FRONT LEFT FENDER STICKER BLAZER150X	1	
12	9070411150G008	右前泥板标贴	FRONT RIGHT FENDER STICKER BLAZER150X	1	
13	9070411150G002	前面板标贴左	FRONT LEFT STICKER BLAZER150X		
14	9070411150G003	前面板标贴右	FRONT RIGHT STICKER BLAZER150X		
15	9070411150G009	左后泥板标贴	REAR LEFT FENDER STICKER BLAZER150X	1	
16	9070411150G010	右后泥板标贴	REAR RIGHT FENDER STICKER BLAZER150X	1	
17	9070411150G004	左侧板标贴	LEFT SIDE PANEL STICKER BLAZER150X	1	
18	9070411150G005	右侧板标贴	RIGHT SIDE PANEL STICKER BLAZER150X	1	
19	9070411080G007	充电指示标贴	CHARGING INDICATOR STICKER	1	
20	9070411150G001	控制面板标贴	CONTROL PANEL STICKER	1	
21	9070411150G006	锂电盖板标贴 TRAILMASTER	COVER PLATE STICKER	1	
22	9077105150G000	150电动说明书 (BV)	OWNER' S MANUAL	1	
23	9070411080G012	车头TM商标滴塑	TM TRADEMARK DRIP STICKER	1	
24				1	

Fig 11 WARNING STICKERS ASSY

