



# HEADLIGHT ASSEMBLY WIRING CONNECTIONS

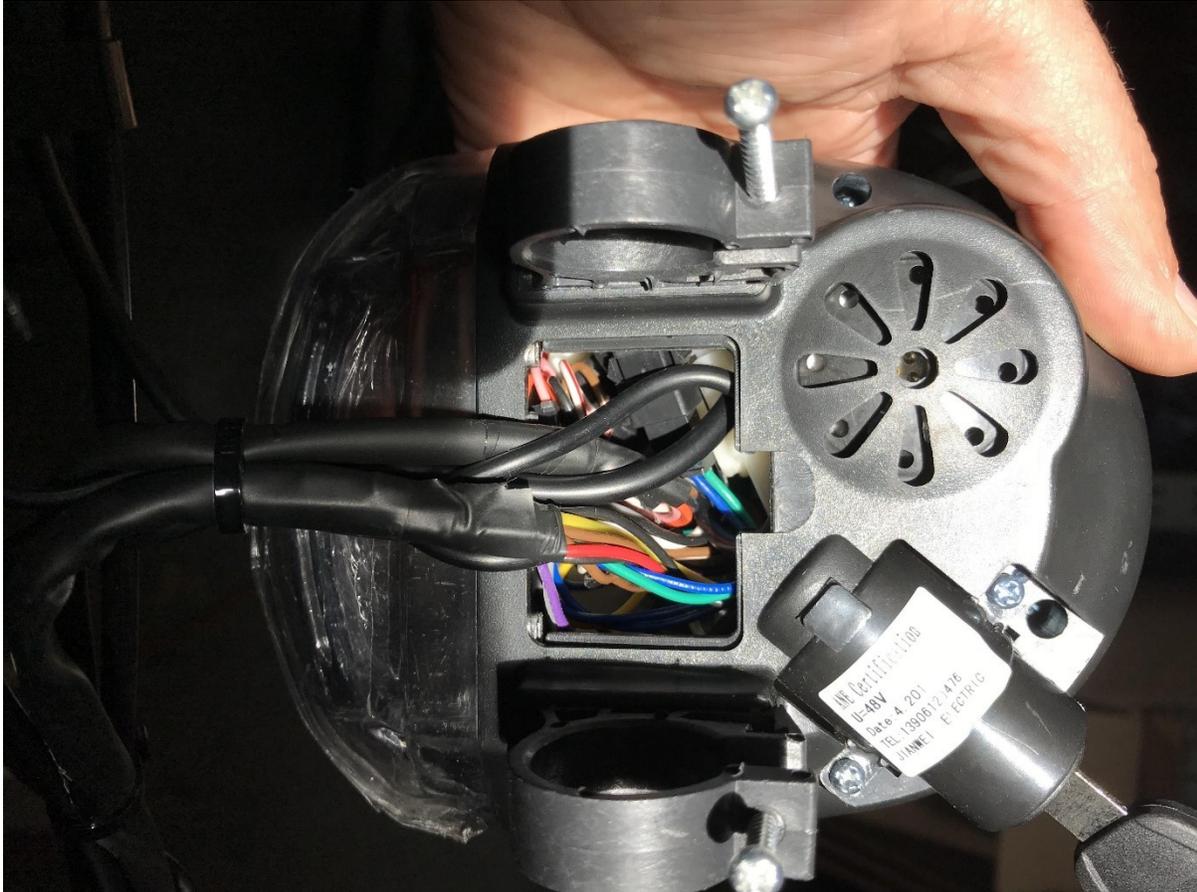


REMOVE HEADLIGHT, TURN UPSIDE DOWN, REMOVE WIRE COVER TO EXPOSE WIRING

# GENTLY PULL OUT WIRING

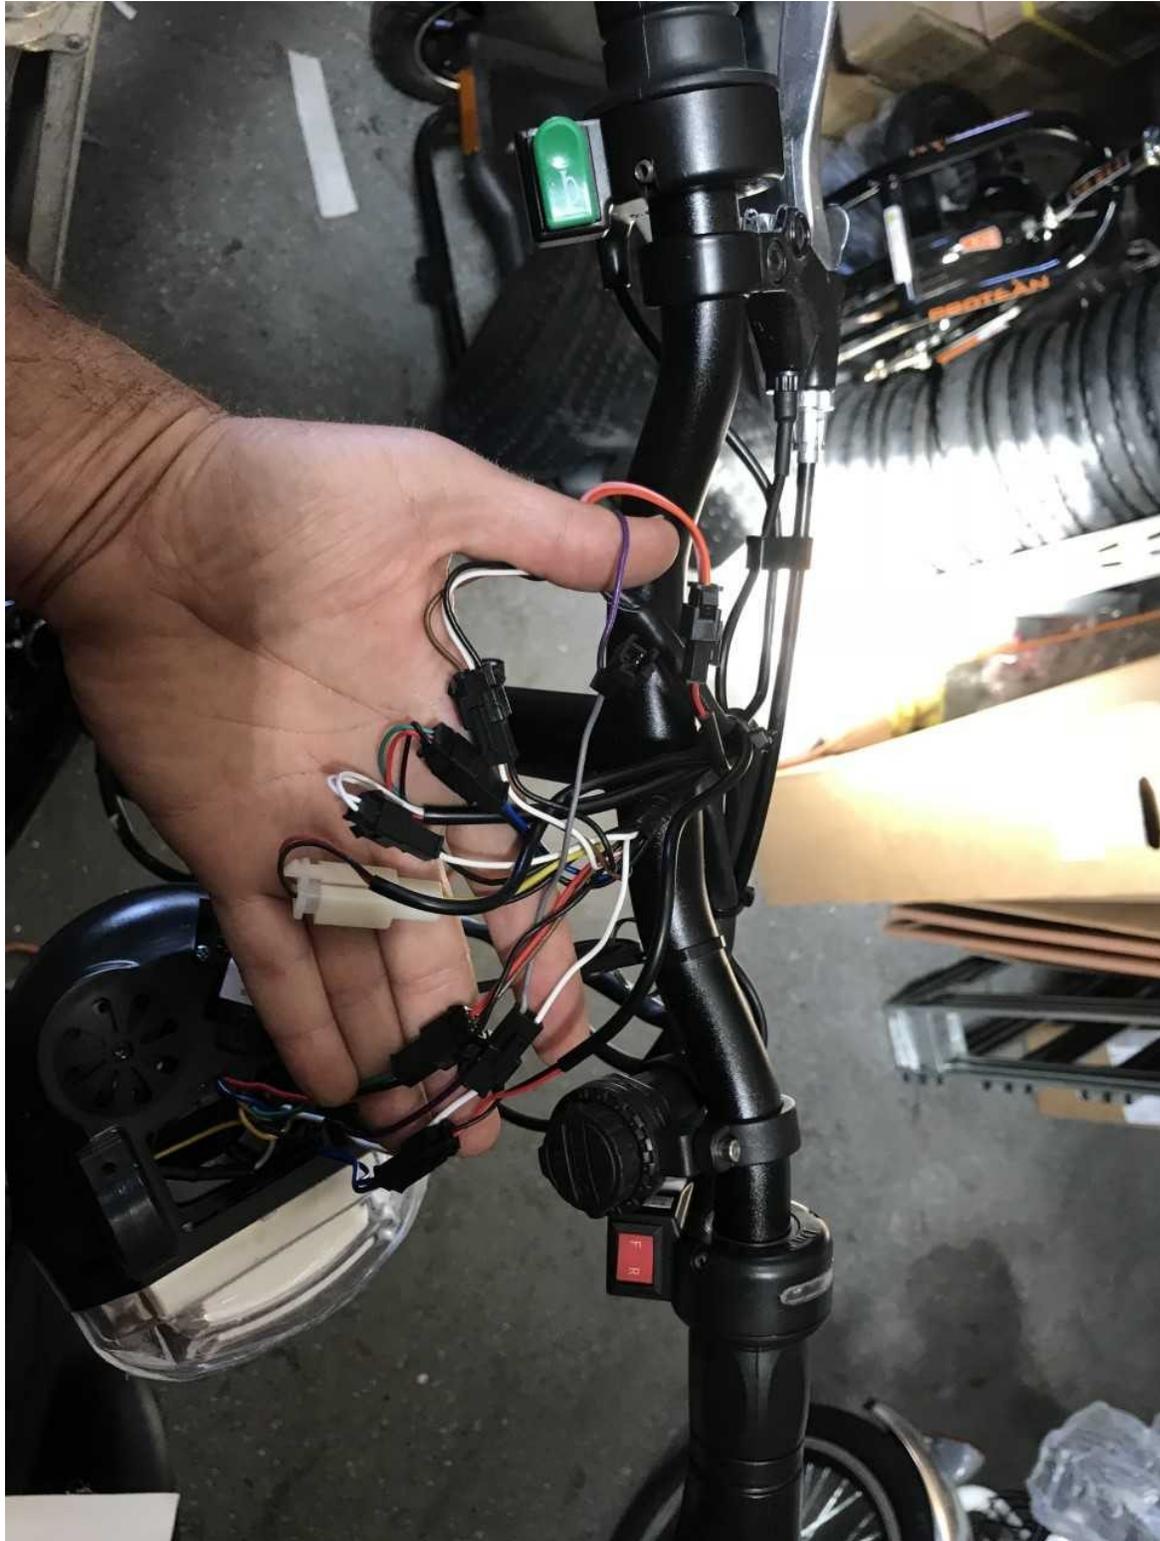


# THERE ARE 3 CONNECTORS IN THE HEADLIGHT ASSEMBLY

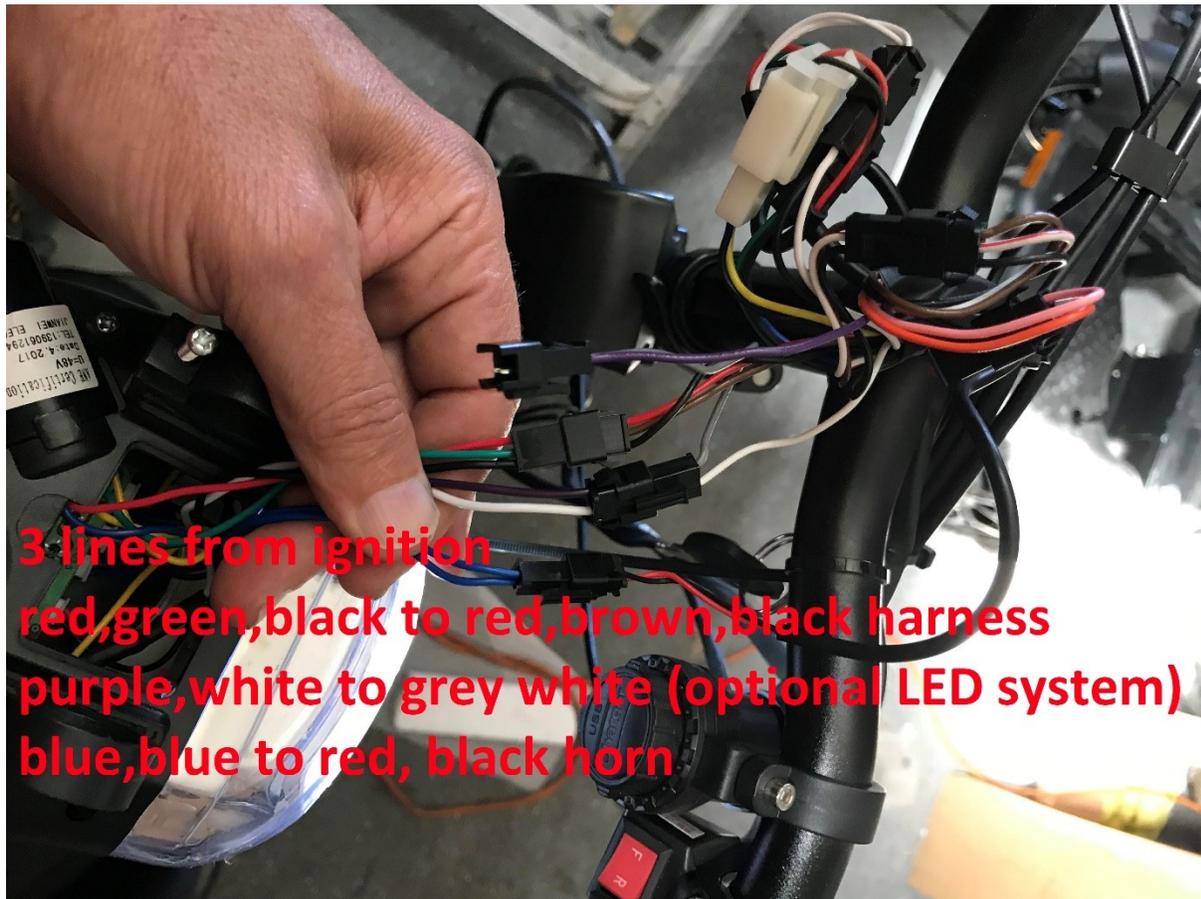

FROM HEADLIGHT ASSEMBLY:

- 1) (RED, GREEN, BLACK) CONNECTS TO WIRING HARNESS CONNECTOR (RED,BROWN,BLACK)
- 2) (PURPLE,WHITE) CONNECTS TO HARNESS (WHITE,GRAY) USED FOR OPTIONAL LED LIGHTS SWITCH
- 3) (BLUE, BLUE) CONNECTS TO HORN (RED, BLACK)


# HARNESS CONNECTORS

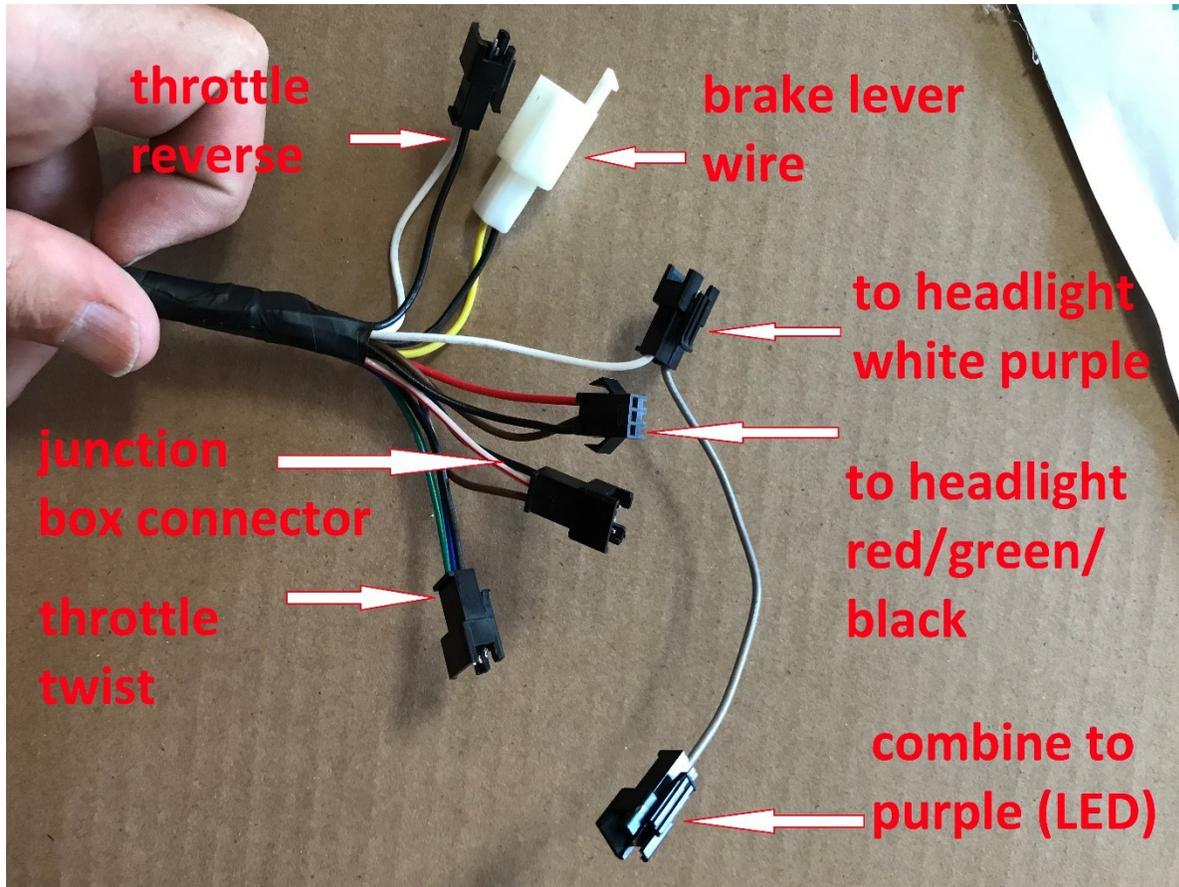

FROM TOP TO BOTTOM:


- 1) (BLACK,WHITE) CONNECTS TO THE THROTTLE FORWARD/REVERSE BUTTON (WHITE,WHITE)
- 2) (BLACK,YELLOW) CONNECTS TO BRAKE LEVER SAFETY SWITCH (RED,BLACK)
- 3) (WHITE,GRAY) CONNECTS TO HEADLIGHT (WHITE,PURPLE) OPTIONAL LED SWITCH
- 4) (RED,BROWN,BLACK) CONNECTS TO HEADLIGHT (RED,GREEN,BLACK)
- 5) (BLACK,WHITE W RED STRIPE,BROWN) CONNECTS TO (BLACK,WHITE W RED STRIPE,BROWN) OF BLACK JUNCTION BOX HARNESS HOUSING USB INVERTER/OPT. LED INV.
- 6) (BLACK,BLUE,GREEN) CONNECTS TO THROTTLE (BLACK,RED,GREEN)

# THROTTLE

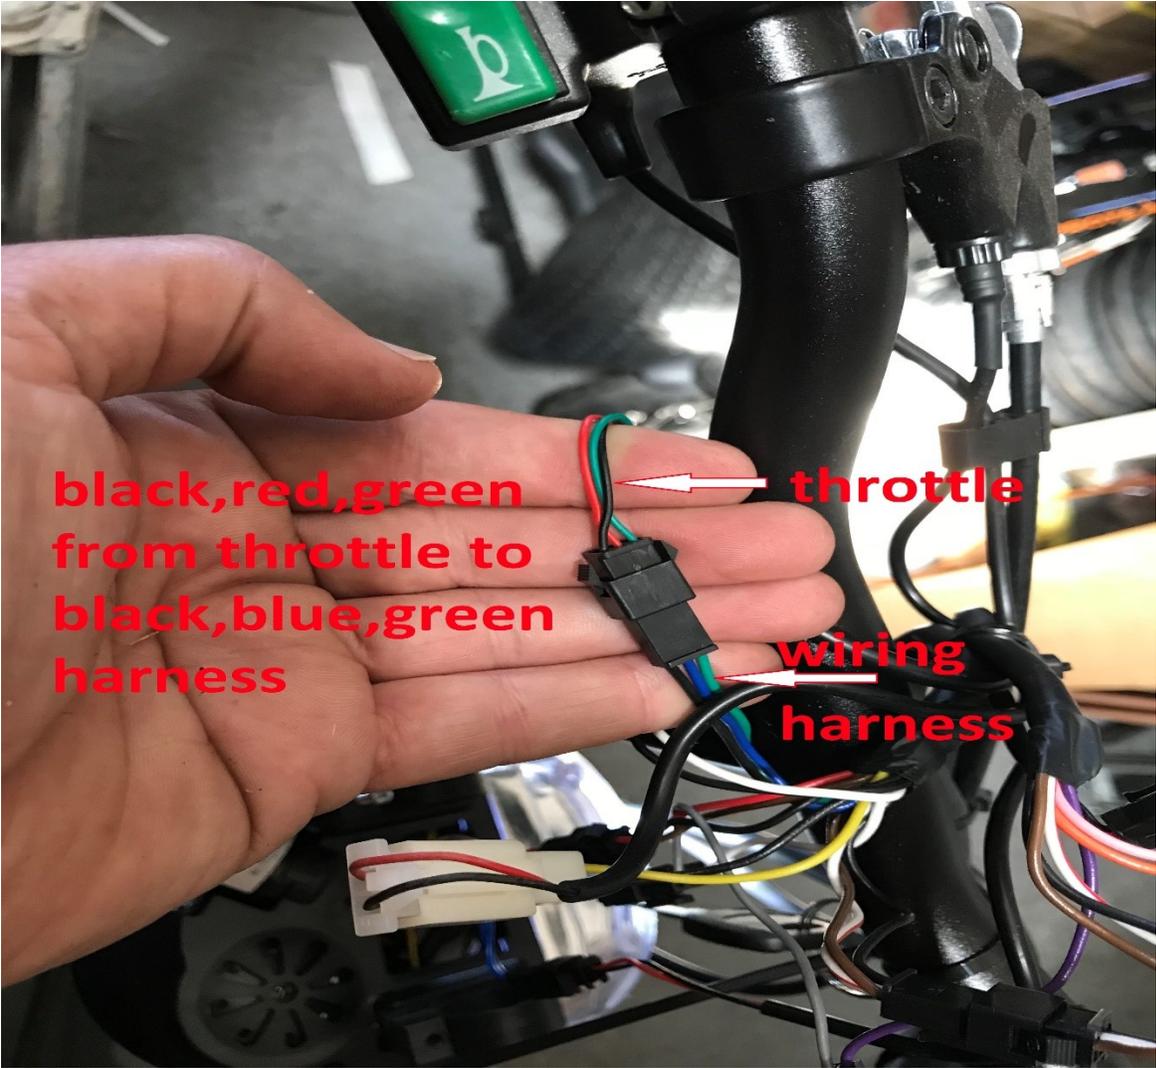


# THROTTLE TO WIRING HARNESS

# THROTTLE REVERSE SWITCH

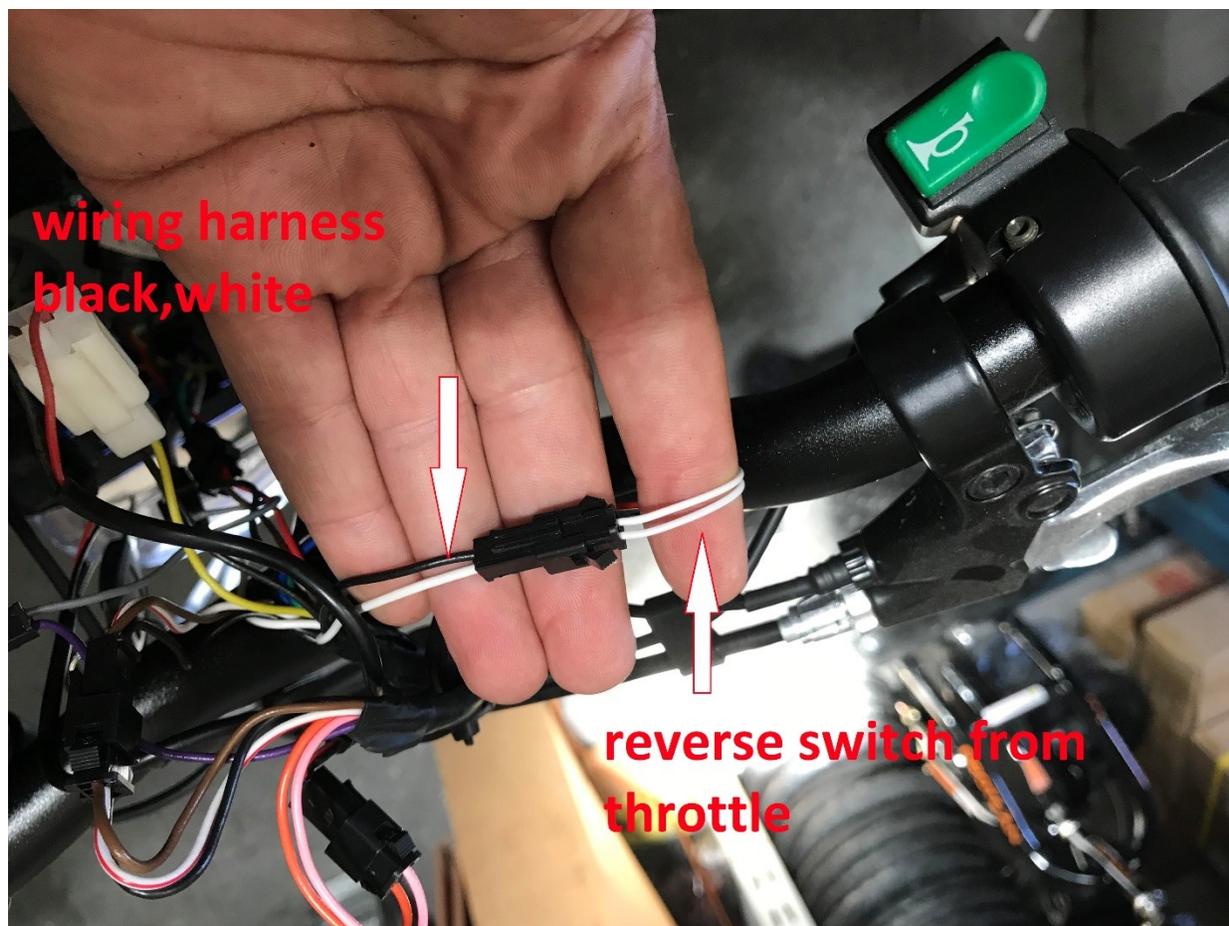

# REVERSE SWITCH TO HARNESS

# BRAKE SAFETY SWITCH

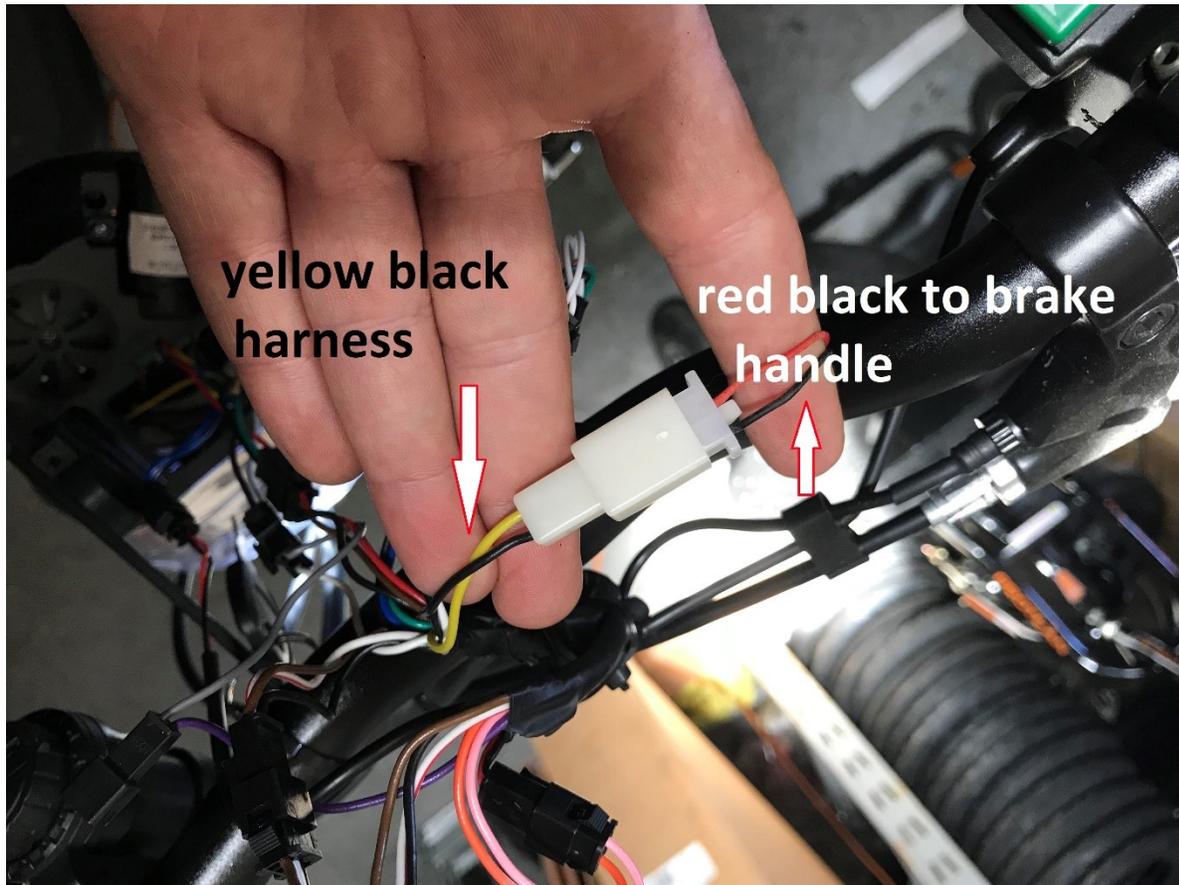

# BRAKE CONNECTOR TO HARNESS

# USB CONNECTOR



red, black USB port  
to junction box  
harness


orange, pink from  
junction box harness

# OPTIONAL LED LIGHTS



optional under the carriage LED  
Lights

# HARNESS TO JUNCTION BOX

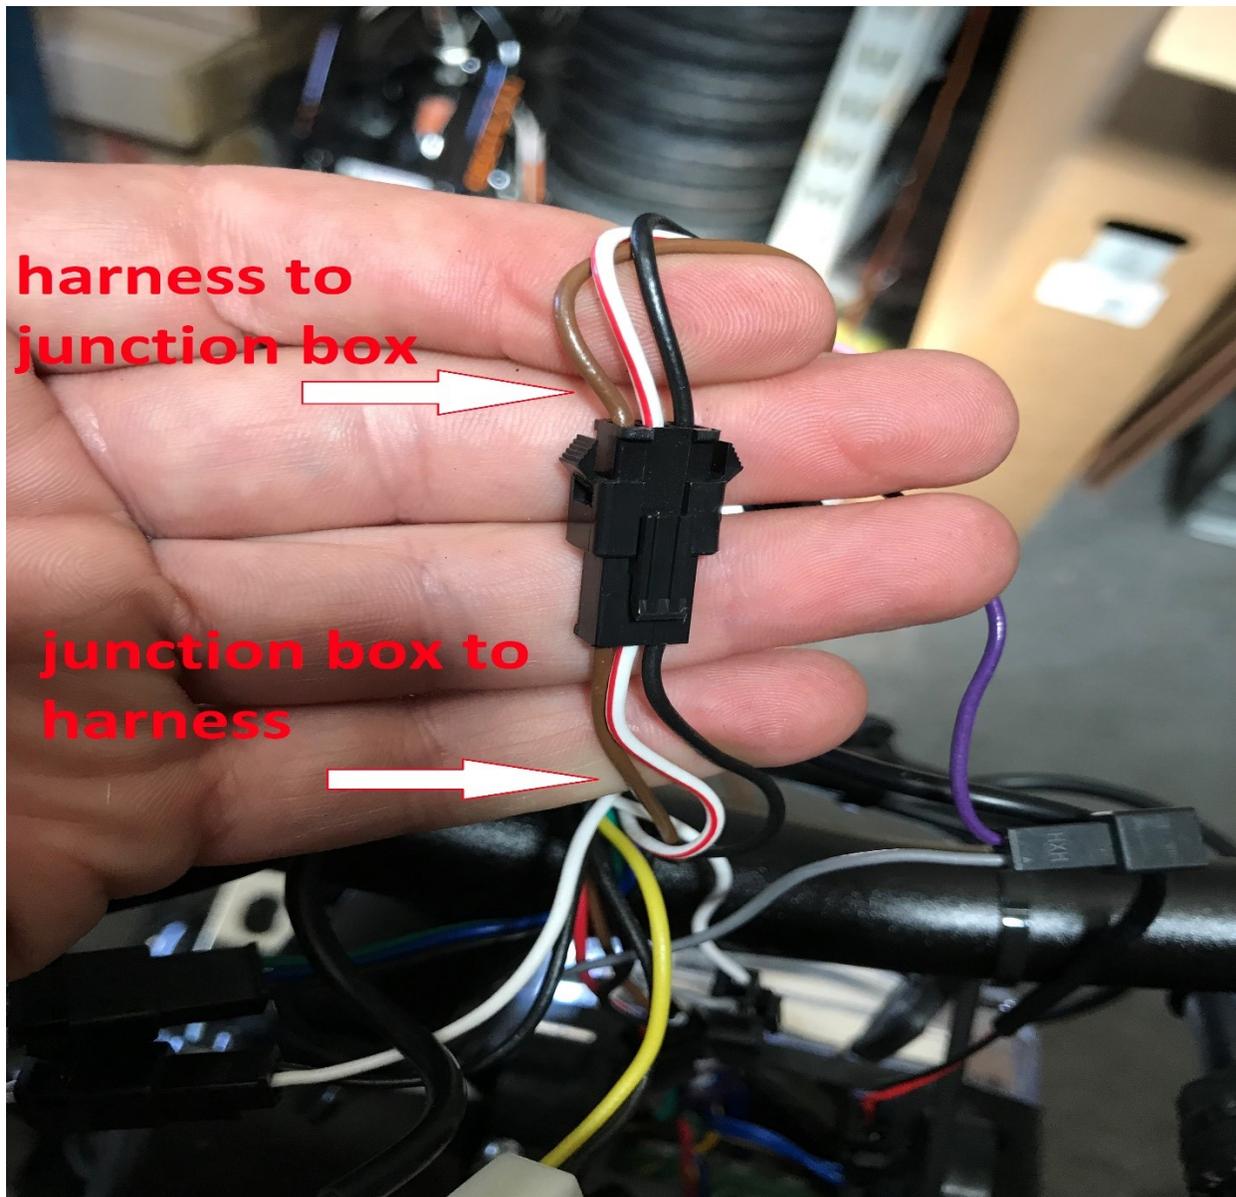

BLACK PLASTIC JUNCTION BOX MOUNTED ON  
VERTICAL HANDLEBAR SHAFT HOUSES INVERTERS  
FOR USB AND OPTIONAL LED LIGHTS

JUNCTION BOX SEPARATED FROM SCOOTER WITH  
WIRING EXPOSED



