# Gatewise Module Wiring

# Gatewise Staging:



Gatewise Bag

Misc. Bag

SIM Card

Battery

Gatewise Module

Gatewise Module Cover

Misc. Bag

Unused Jumper Developer Purposes

Gatewise Module Cover Screw Caps

Gatewise Module Cover Screws

Optional Mounting Screws

Terminal Blocks

5 PIN

4 PIN

3 PIN

# Wire Prep:



Keep Wire Length Around 4 ft



**Wire Strippers**



Peel back jacket using string

Reason: Reduce unwanted cuts in wire

Keep around 2 inches

Wire Jacket
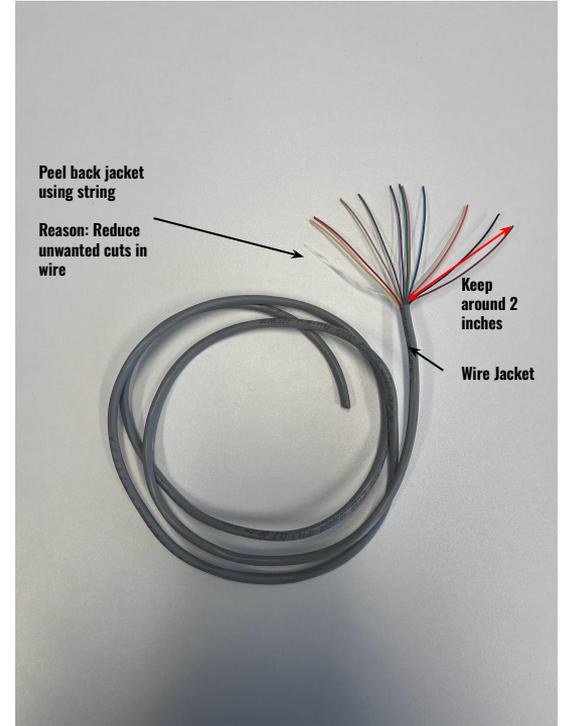
# Stripping Tips on Wire:



Peel back jacket using string.

Reason: Reduce unwanted cuts in wire.
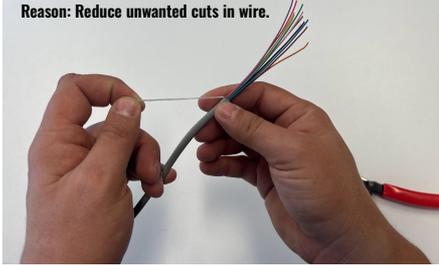


Gather all of your wires in one hand.
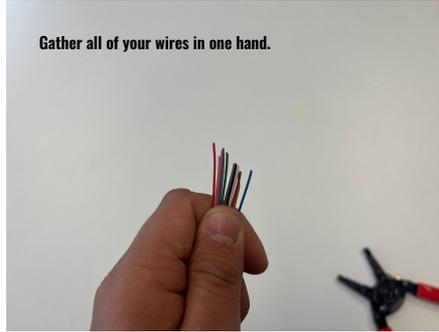


Cut off the tips to even the wire ends.
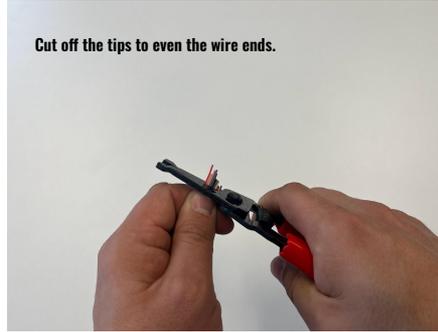


Keep holding the wires in one hand and with your forefinger and thumb grab individually each wire to cut.
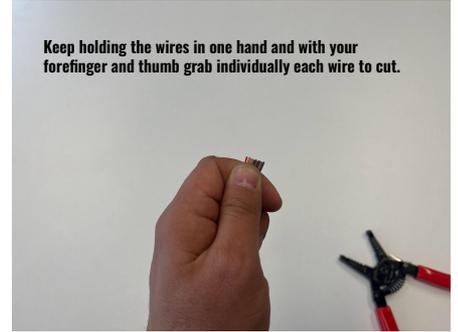


Grab your wire cutters with your other hand. Rest the wire cutters on your thumb and hold the wire ON 20/22 guage wire slot.
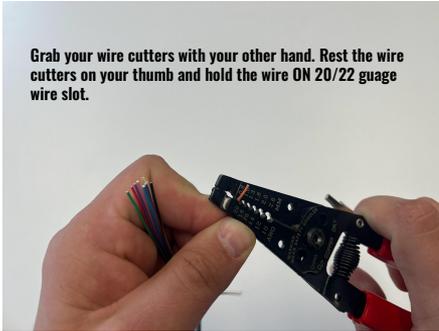


With the wire cutters in your hand peel back the jacket off the copper between ¼ in and ½ in
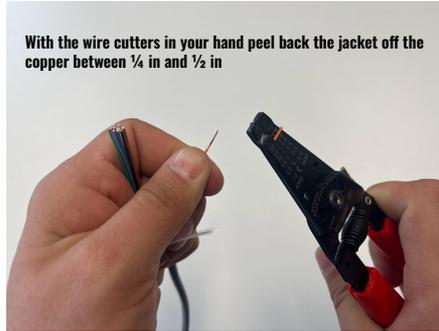


With your forefinger and thumb twist the copper end lightly.
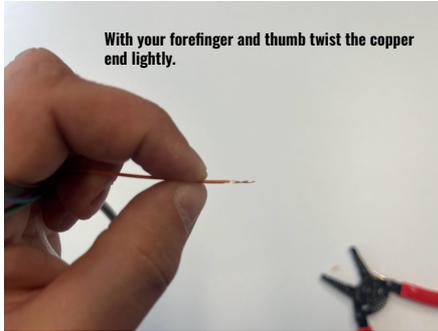


Between ¼ in to ½ inch Copper Exposed
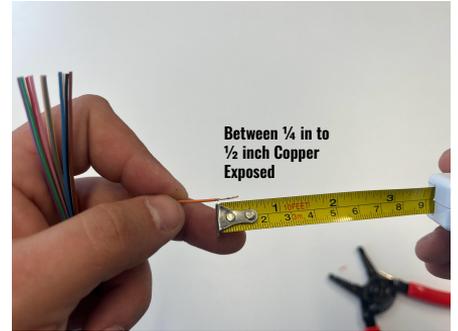
# Attaching Battery and Sim Card:



Sim Card Front

Sim Card Back

**Insert Sim Card**

Battery
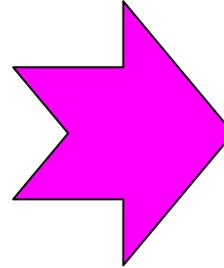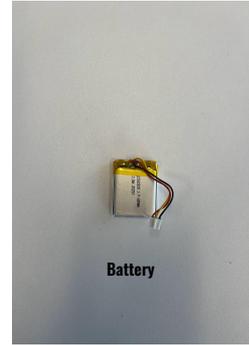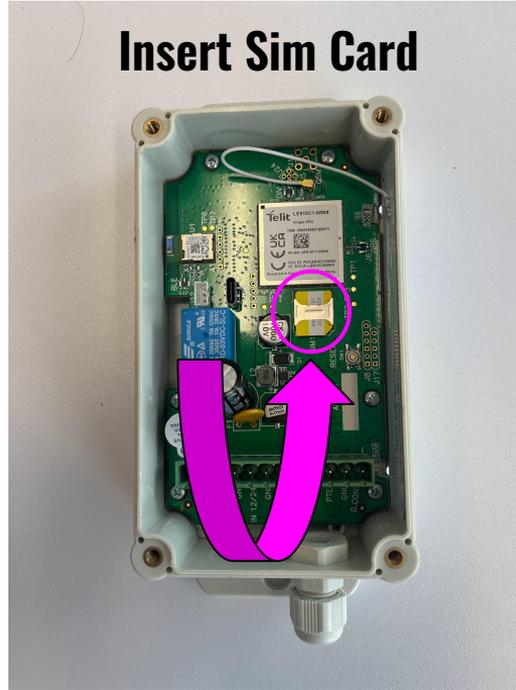
**Insert Battery**

# With Battery and Sim Card:
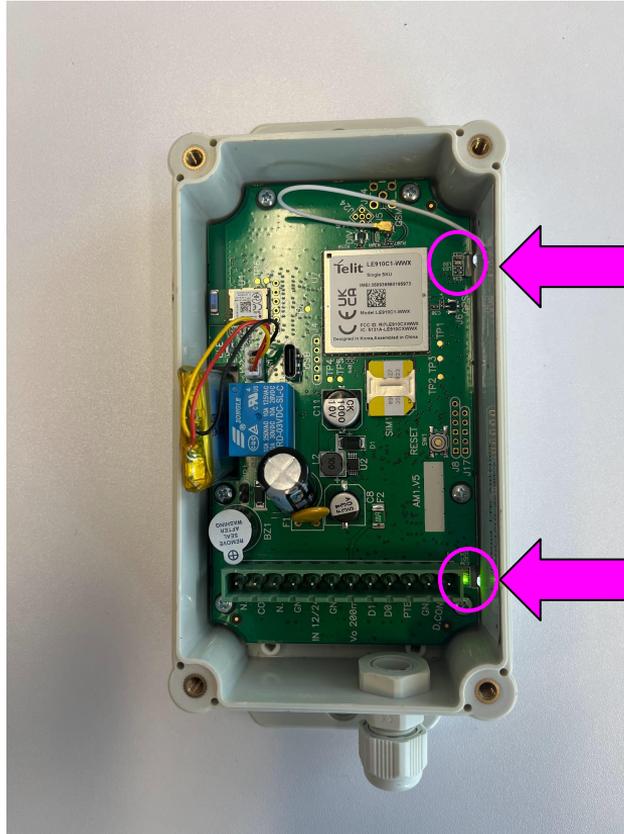


**Communication LED:** (When powered ON)
1: LED OFF - No Sim Card Inserted

2: LED Blinking - Normal Condition

3: LED Solid - Not Communicating

**Top Command LED:** 1 Pulse - Triggered     Solid Amber (Yellow) - Schedule Engaged

**Bottom Power LED:**
                Solid - (Not Applicable)
Ver.  V5 - V6  Blinking - Boot Up
                OFF - Normal Condition

# Terminating Wire to Terminal Blocks:
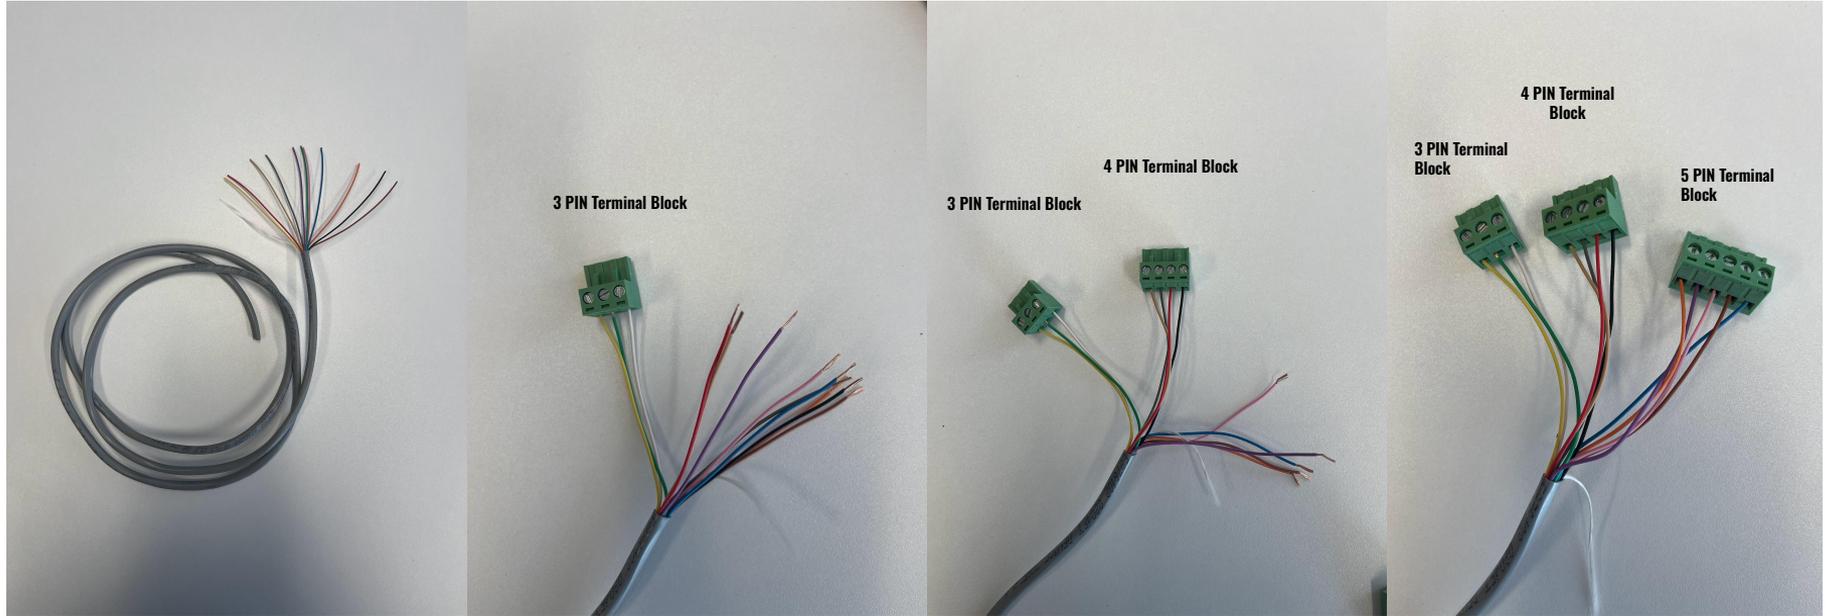
# Wire to Gatewise Module: Phase 1



Remove Rip String
Cut off with Wire Strippers

# Wire to Gatewise Module: Phase 2



1st:
3 PIN Terminal Block

2nd:
4 PIN Terminal Block

Push Wires Back with Finger to Dress Wire Neatly

3rd:
5 PIN Terminal Block

# Adding Back Sticker:



**GATEWISE**
Simple multifamily smart access

| | | |
|---|---|---|
| 1.N.O - White | | 7. 12/24 VDC Out - Tan |
| 2.COM - Green | | 8. D1 - Blue |
| 3.N.C - Yellow | | 9. D0 - Brown |
| 4.GND - Black | | 10. PTE- Pink |
| 5.12/24V AC/DC IN- Red | | 11. GND- Purple |
| 6.GND - Gray | | 12. D.CONT- Orange |

Name:_____
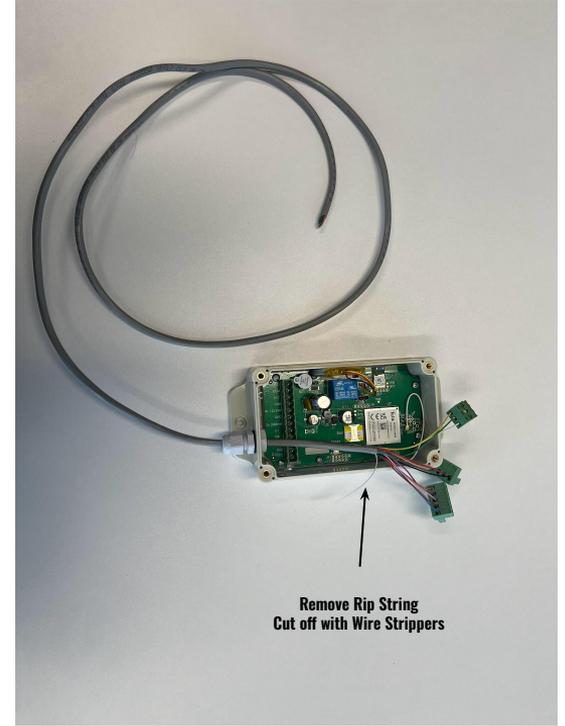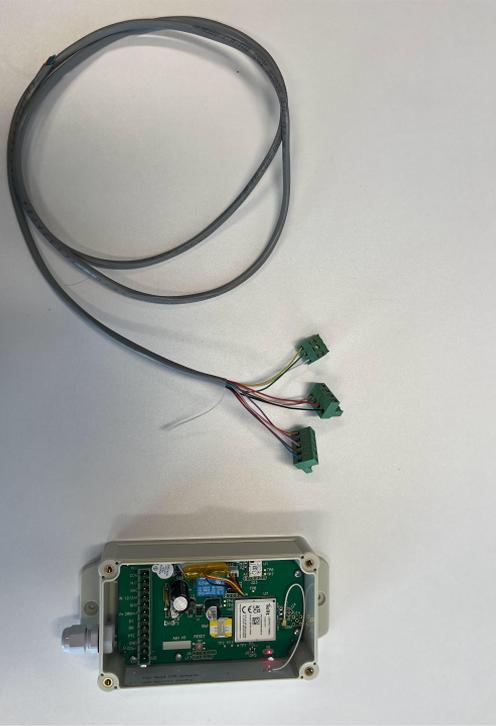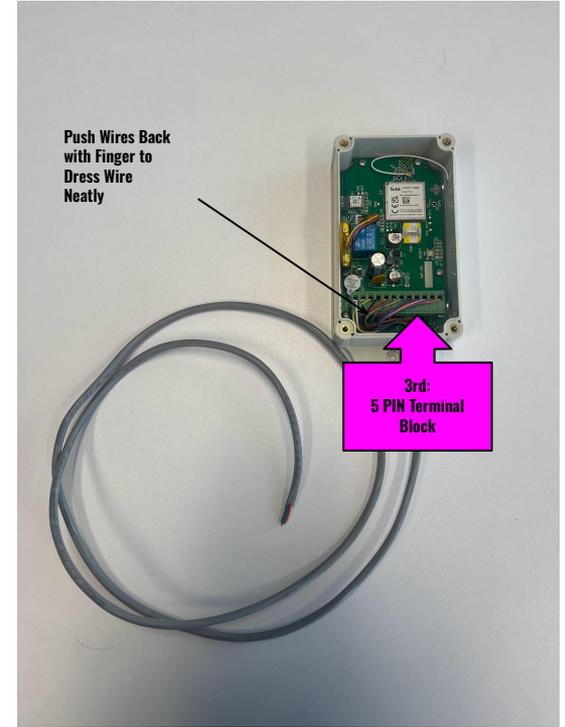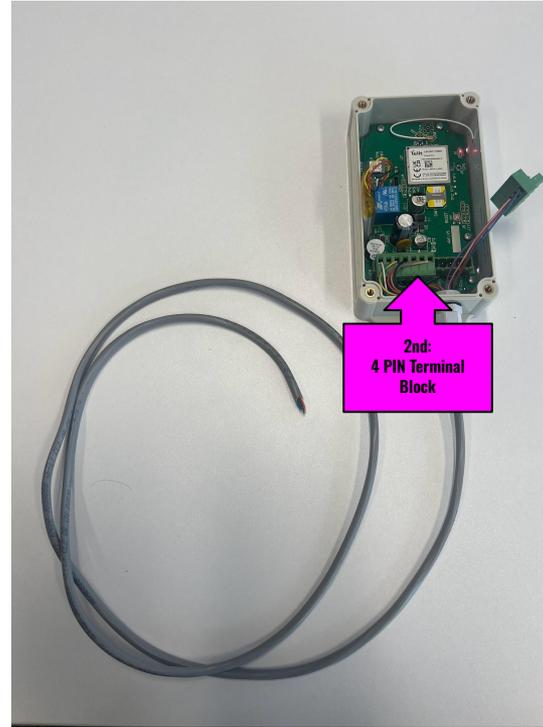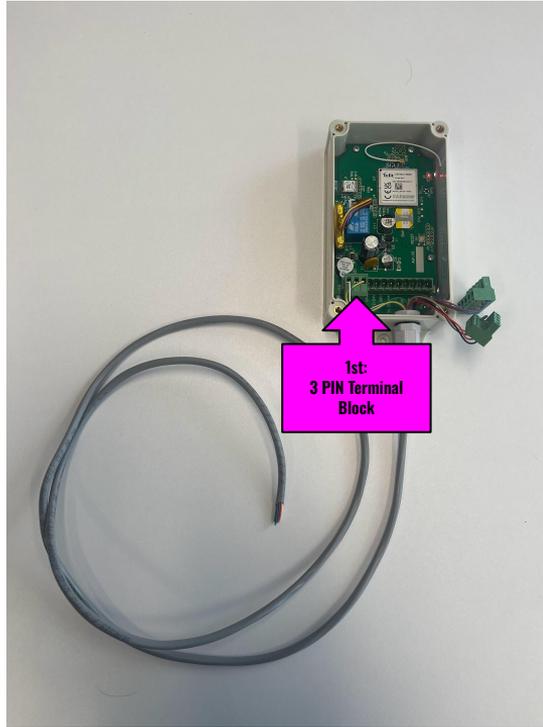
Make sure edges do not seap over

# Adding Front Sticker:



**Remove clear film**

**GATEWISE**
Simple multifamily smart access

**Simple app access for multifamily communities**

**Technical Support**
**1-888-444-9190**

**Join our Installer Partner Program!**

**Scan with your phone camera**

gatewise.com

**Make sure edges Do Not seap over**

# Ready for Shipping:



Wrap the Wire a couple time around the coil as the last preparation before putting gatewise module inside bag.

END.