



Getting Started with Your Hypex NCx500 Amplifiers

Please take a moment to review the following details on your new Hypex NCx500 Amplifiers.

What's Included


- Assembled amplifier
- Printed test results
- Power cord
- Allen wrench for front cover

Break-in period

When you first turn on the amplifiers, allow approximately 60 minutes warm-up time before critical listening. After the amplifiers have broken in for several hours, the starting warm-up time should be approximately 10 minutes.

Changing the amplifier gain settings

Gain is adjustable with the following jumpers shown on the amplifier board image.

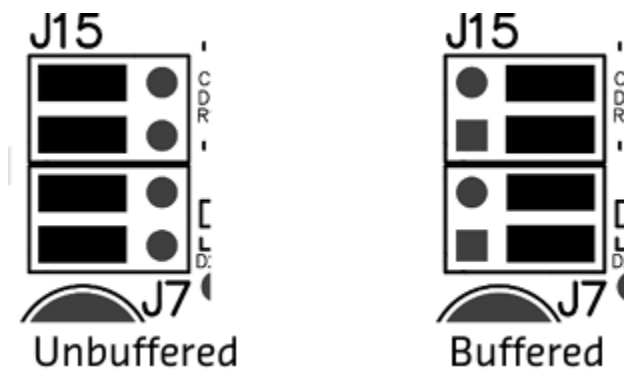

Voltage Gain Jumper Settings

Jumper Setting	Typical Gain
Unbuffered	11.5 dB
Buffered	26.8 dB

Installation

Be sure to install your Hypex Class D amplifier with adequate ventilation. You'll need at least one inch on top of the unit, preferably with an open front and rear.

Be sure to check out our Tech Blogs, Tech Videos and other Resources on deercreekaudio.com for the latest technology news and updates.

deercreekaudio.com
staff@deercreekaudio.com
720.726.9272