

Activ Form Cup Type, FFP2 NR Particle Filtering Half Mask




PRODUCT CODE: BM 011A FFP2 NR

PRODUCT DESCRIPTION


Activ Form filtering face piece provides effective respiratory protection in industrial environments where workers are exposed to non-volatile solid and/or liquid particles (dusts, mists, fumes). Cup Shape, Activ form Automatically fit to the face, Headband made by two elastic straps, between the filter material and sealed soft inner pad on nose, NR non reusable = single use,

BM 011A TECHNICAL CONDITIONS

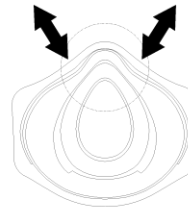

ActivForm

Automatically fits to the face. No manual Adjustments by the user are necessary.

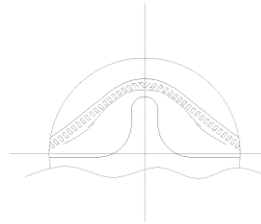


Nose Seal

The flexible nose seal improves fit and provides optimum wearing comfort.

NR (Non Reusable)


Single Use.

Comfortable and durable throughout the whole shift.

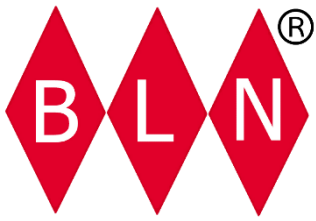

Activ Form Cup Type, FFP2 NR Particle Filtering Half Mask

Filtered air with **94,5%** of
>0.3 micron particles
removed

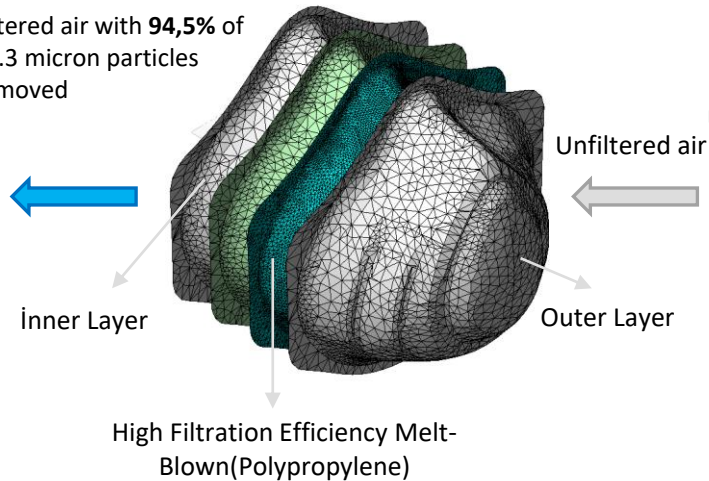

Applications

FFP2 disposable particulate respirators are approved for use against solid (non-oil) and liquid (oil) aerosols according to EN149:2001+A1:2009. They are suitable for protection from non-toxic harmful materials in concentrations up to 12xOEL or 12xAPF. (OEL = Occupational Exposure Limit, APF = Assigned Protection Factor.)


Hazard Type

Fine dust, fumes, water and oil based mists/aerosols in areas up to 12 x OEL (Occupational Exposure Limit)

Areas of Use

Against toxic dusts, e.g. aluminum oxide, bauxite, borax, brick dust, cellulose, metal, cement, coal Dust, gypsum, limestone, plaster of paris, pollen, portland cement, sucrose, sugar, brake dust, calcium oxide, china clay, concrete dust, cotton dust, granite, hay, lead dust and fume, particulate welding fumes (no heavy metal), silica, sodium hydroxide, wood dust (softwood), zinc oxide fume, copper, nickel, soot, pollen, house dust, pet hair in medical uses such as viruses, bacteria.



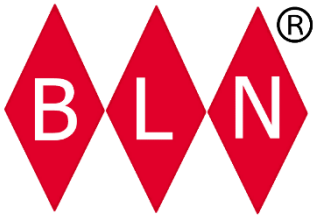

Activ Form Cup Type, FFP2 NR Particle Filtering Half Mask



PRODUCT CODE: BM 011A FFP2 NR

Certification

BLN ENDÜSTRİ SAN. ve TİC. LTD. ŞTİ.

FFP-masks meet the requirements of EN149:2001 +A1:2009 and are CE marked in accordance with the requirements of 2016/425(EU).

MNA LABORATUVARLARI SAN. TİC. LTD. ŞTİ.
adress: Küçükbakkalköy Mah. Yenidoğan Cad.
No:21 Ataşehir/İstanbul

Organism number 2841 is responsible for both type examination (Article 10) and monitoring of production (Article 11).


Instructions For Use

The user has to be trained and instructed in wearing the mask.

- FFP masks do not protect against gases and vapours.
- The oxygen concentration of the ambient atmosphere should be at 19,5 % Volume.
- These respirators may not be used if the concentration type, and properties of contaminants in the ambient atmosphere are unknown or at dangerous levels.
- Respirators should be disposed if damaged, if the breathing resistance becomes high due to clogging, or at the end of a shift.
- Never tamper with, alter or modify the respirator.

*Full sealing may not be achieved if the hair, hair and beard on the user's face remain between the sealing surfaces of the mask.


*There is a risk of creating static electricity in explosive environments.

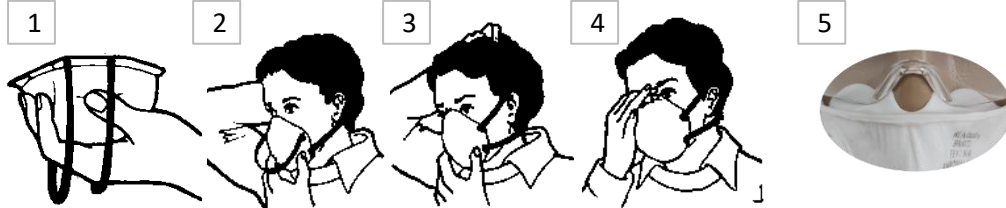

- 1) Hold the facepiece with the external convex part on your palm and the elastic straps under your hand (hold the breathing apparatus as shown in figure 1).
- 2) Position the facepiece under your chin with the nosepiece upwards.
- 3) Position the lower elastic strap under your ears and the upper one on the top of your head.
- 4) Check the facepiece seal before entering the working area through the test for leaktightness by breathing in and out deeply (in models equipped with an exhalation valve, close the valve with your palm). In case of detection of escapes of air, reposition the mask




-Static Electric



3 years
-End of Shelf Life



<80%
-Maximum relative humidity of storage conditions

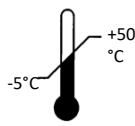

-5°C +50°C
-Temperature range of storage conditions



-See information supplied by the manufacturer

BLN ENDÜSTRİ SAN. ve TİC. LTD. ŞTİ.

info@bln.com.tr

Tel : +90282 655 53 93

www.bln.com.tr

**Ulaş Mah. ASMA. sok. No: 34/A Ergene, 59870
Tekirdağ, TÜRKİYE**