

NEED HELP?

Resolution in minutes. Guaranteed.



Amy

Customer Success Manager

“

My name is Amy, and
I am here to help!

”

help@tech8usa.com

Scan
TO TEXT



TIPS & TRICKS

Watch quick video demo



tech8usa.com/demo



Life
is about
Balance

World's Most Beautiful Mouse Mover
3D Hologram - Alien


GET STARTED

1

Connect the Mouse Mover to a 5V power source. **Only use the cable provided.**

2

Place the mouse on the spinning disc, ensuring the mouse sensor is on the disc.

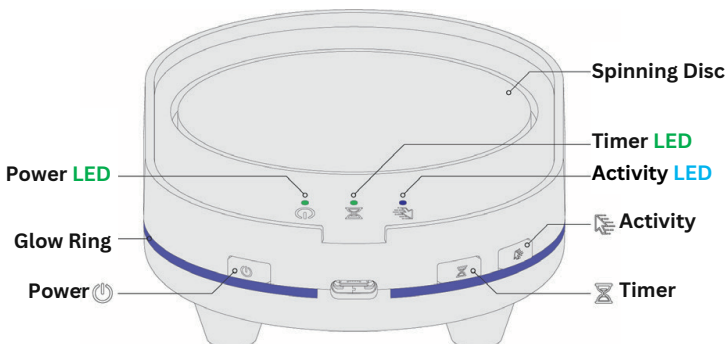

Optional Settings



Glow Ring: Press and hold Power button to cycle through **Blue**, **Red**, **Green**, OFF.



Activity (Arrow icon): Press Activity button to increase/ decrease random pauses between each disc spin, hence cursor movements on screen. Choose from 3 levels:



- High (LED turns **Red**): 10-12 seconds.
- Medium (LED turns **Blue**): 30-40 seconds.
- Low (LED turns **Green**): 50-60 seconds.

Note: Last used Activity setting is saved to device memory for next time the device is turned On.



Timer (Hourglass icon): Need to turn the Mouse Mover OFF after a certain time automatically? Press Timer button to cycle between 1 Hour (**Red**), 2 Hours (**Blue**) or Non-Stop (**Green**, default).

FEATURED IN

FT FINANCIAL
TIMES

SLATE

VICE

Daily **Mail**.com



THE WALL STREET JOURNAL.
WSJ

BuzzFeed

**The
Guardian**

“

If your boss is a micro-manager, get this mouse mover. If you are one of those bosses reading this review... no one likes you.

”



Invented, Patented, Trademarked,
Designed, Engineered & Packaged in
USA



FAQ

1. What does the Mouse Mover do?

The Mouse Mover prevents your computer from going to sleep by randomly moving your optical mouse. It prevents "Away" status on Team Lync, Zoom, Skype, WebEx etc.

2. Does it work with all mouse types?

Yes! Mouse Mover has been tested on most popular PC optical, laser, wired and wireless mouse. Also, it can accommodate most sizes.

3. Why is my device not turning on?

Make sure to only use the cable provided with the Mouse Mover. Also try connecting to a different USB port. Let us know if you still face issues.

4. How often will my mouse move?

Depending on the "Activity" level set, the spinning disc (thus your mouse), will pause for different lengths of time. e.g. Red is 10-12 seconds, Blue is 30-40 seconds, and Green is 50-60 seconds pause between each spin.

5. Can this be detected by my IT?

Tech8 Mouse Mover is a "mechanical device" and imitates a human physically moving the mouse. There is no software to install. Also, since our device does not have any data pins, you can even plug the device directly into the USB port of your PC, and it won't be visible in your "Device Manager".

6. What about Returns and replacements?

No problem! Contact us at help@tech8usa.com with your order number.

7. Is Tech8 USA an American company?

Yes, we are an American company created, set up and incorporated in Austin, and take pride in our roots and heritage.

FAQs, Troubleshooting, Tips and Tricks at
tech8usa.com/demo