



CCS-2519 Assembly Instructions


Contents:

CCS-2519 CAMERA STAND (GEN 3)

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	CCS-2205	TRAY, CAMERA STAND	1
2	CCS-4015	1/4-20 x 3/4" BHCS, 18-8 SS	5
3	CCS-2207	CAMSTAND HORIZONTAL	3
4	CCS-2208	CAMSTAND UPRIGHT	2
5	CCS-2009	CAMERA MOUNT, CLIP ON 20mm (30/90 DEG)	1


Note: the CCS-2519 supports two mounting orientations. Follow the instructions based on your intended orientation

Orientation 1:

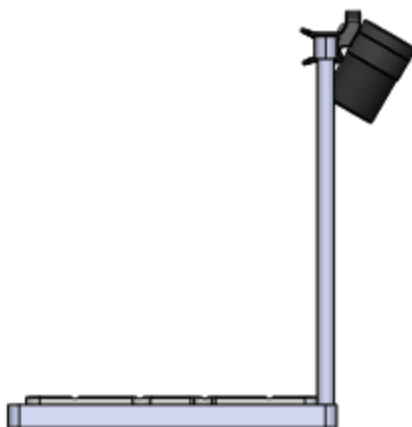

1. Using the provided hex key, pass one CCS-4015 fastener through a hole in CCS-2007 Camstand Horizontal and screw it into the threaded hole at the end of CCS-2208 Camstand Upright.
2. Repeat, using another CCS-2007 and CCS-2208.


3. Position the remaining CCS-2207 Camstand Horizontal such that the end of CCS-2208 of the assemblies from steps 1. and 2. align with the holes at the far ends of the remaining CCS-2207. Using the provided hex key, pass one CCS-4015 fastener through each hole and secure the CCS-2207 to CCS-2208.
4. Tighten all fasteners. If desired, place CCS-2205 Camera Stand Tray in place over the CCS-2207s to preserve the shape of the stand while tightening.

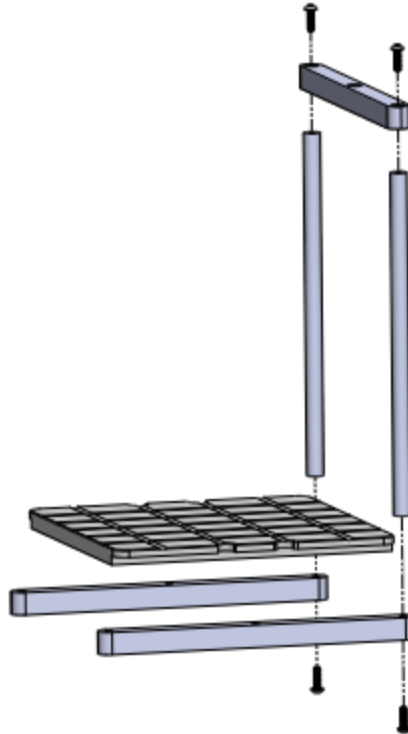


5. Attach the CCS-2009 Camera Mount Clip to the CleanCam using the 30-degree attachment point using the provided hex key and one CCS-4015.



6. Clip the assembly from step 5. to the assembled mount

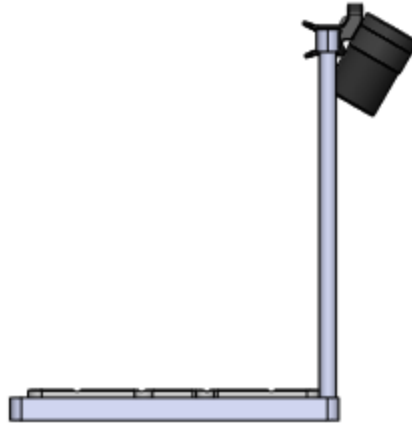


Orientation 2:

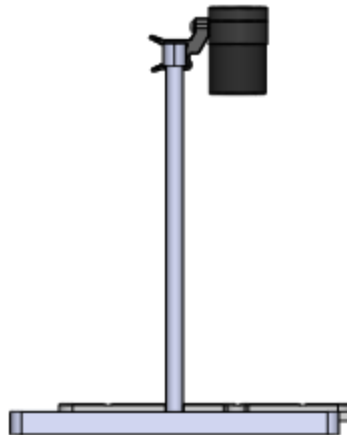

1. Using the provided hex key, pass one CCS-4015 fastener through the center hole in CCS-2007 Camstand Horizontal and screw it into the threaded hole at the end of CCS-2208 Camstand Upright.
2. Repeat, using another CCS-2007 and CCS-2208.
3. Position the remaining CCS-2207 Camstand Horizontal such that the CCS-2208 of the assemblies from steps 1. and 2. align with the holes at the far ends of the remaining CCS-2207. Using the provided hex key, pass one CCS-4015 fastener through each hole and secure the CCS-2207 to the CCS-2208.

4. Tighten all fasteners. If desired, place CCS-2205 Camera Stand Tray in place over the CCS-2207s to preserve the shape of the stand while tightening. Note: the CCS-2205 will be offset to one side.
5. Attach the CCS-2009 Camera Mount Clip to the CleanCam using the 90-degree attachment point using the provided hex key and one CCS-4015.

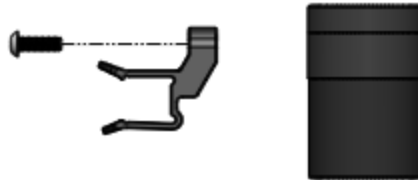

6. Clip the assembly from step 5. to the assembled mount. To maximize the amount of the CCS-2205 shown by the CleanCam during image capture, attach the assembly such that the CleanCam is oriented over the side of the mount that has slightly more than 50% of the CCS-2205's surface area.

