


Information Aqua Lung

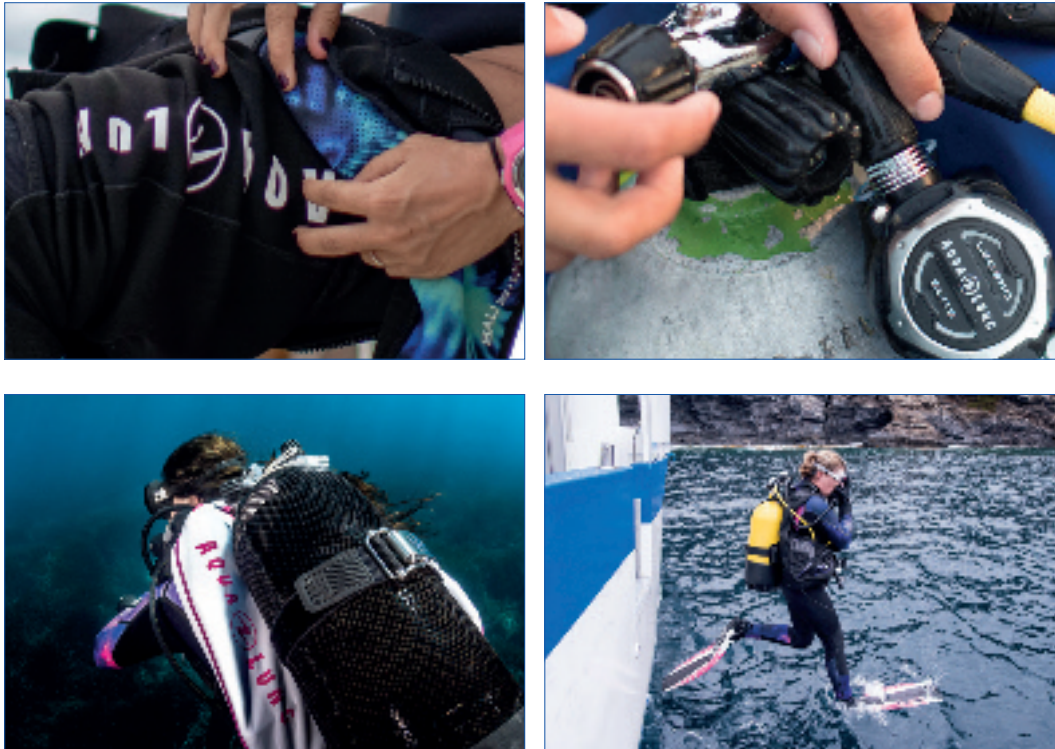

Dear Customers and Partners,

With the lockdown starting to end step by step, we are receiving more and more questions about how to clean and disinfect dive equipment.

In the document below, you'll find our recommendations on how to properly disinfect Aqua Lung dive equipment against COVID-19 without damaging the properties of our products, efficient vs Covid-19 and without effect on their qualities. All the products mentioned below are recommendations and easy to find/order on the Internet, but you can find the same kind of formulas in some other brands.

Aqua Lung Team



1°

REGULATOR

As mentioned, in the user manual, we recommend Steranios 2% from ANIOS laboratories.

This ready-to-use product allows total cold disinfection by soaking. It is active in 20 minutes. It is bactericidal, fungicidal, sporicidal, viricidal, active on HIV 1, HBV 1, Herpes-Virus and active on BK. It is composed of a 2% glutaraldehyde solution that is synergized and stabilized at neutral pH. And has been approved from Covid-19 treatment

You can find all the details about this products on the PDF enclosed.



The Aqua Lung +

Did you think about our reusable mouthpiece?

The fastest system on the market to easily change regulator mouthpieces.

The Aqua Lung clip is used on all our second stage regulators. It has held our Comfobite mouthpiece for more than 15 years.

It is not necessary to have tools to install or remove the clip. It is all made in high strength polymer. It has no metallic components and therefore does not risk getting oxidized or even blocked. It is easily cleaned and disinfected.

To open it gently introduce your fingernail under the lever and lift it. In 2 seconds the clip tension is released and the clip opens.

It is not necessary to cut and destroy the clip to remove it. It can be used over and over again.

The installation is simple and fast. Simply go around the mouthpiece that is in place, hook the end of the collar with the lever and then press it to lock and secure the assembly.

The pressure exerted by the clip on the mouthpiece allows the assembly to pass the tests of the EN 250A standard in terms of traction strength.



A great product for your rental equipment!



2°

NEOPRENE

The Septione Neoprene is efficient for cleaning and disinfecting all your neoprene gears (Wetsuits, Neoprene Drysuits, Hoods, Boots...), as well as protecting the elasticity and bringing flexibility and freshness to the suit.



How to use ?

Soak after diluting + Rinse

<https://www.abyssnaut.com/produit/produit-dentretien-desinfectant-pour-neoprene-septione-neoprene/>



3°

ABC and BCD's

The Septione Material is efficient for cleaning and disinfecting Fins, Masks, snorkels and BCD'S.

The Steranios 2% can be used also to conduct a cold disinfection on the entire BC inflator by submerging it in a bath of the solution. The Steranios can also be used to clean and disinfect the inside of the bladder. Do not submerge the entire BCD in a bath of solution, it can damage some materials such as threads.

How to use ?

Soak after diluting + Rinse

<https://www.abyssnaut.com/produit/produit-dentretien-desinfectant-pour-materiel-de-plongee-septione-materiel/>

