


QTECH SCIENTIFIC (I) PRIVATE LIMITED

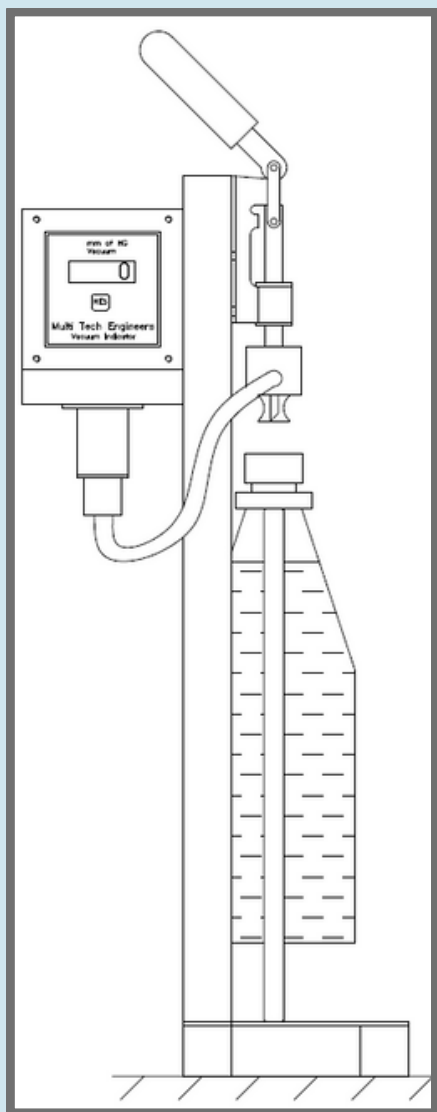


**VACUUM TESTER
OPERATING MANUAL**

VACUUM TESTER FOR HOT FILL PET BOTTLES

Operating Instructions : :

1. Place equipment on platform as shown in the diagram.
 2. Place Bottle in neck holder.
 3. Press red switch on the rear side of tester
 4. Indicator will display some reading or Zero
 5. Press RES button on front side.
 6. Hold handle grip and move downward till closure pierced.
 7. Hold handle firmly,
 8. Display will blink & indicate PEAK Vacuum.
 9. Release Handle and allow to move upward.
 10. The Display will blink till RES button is pressed,
 11. Charge Indicator whenever necessary.
- A charger is provided along with equipment.

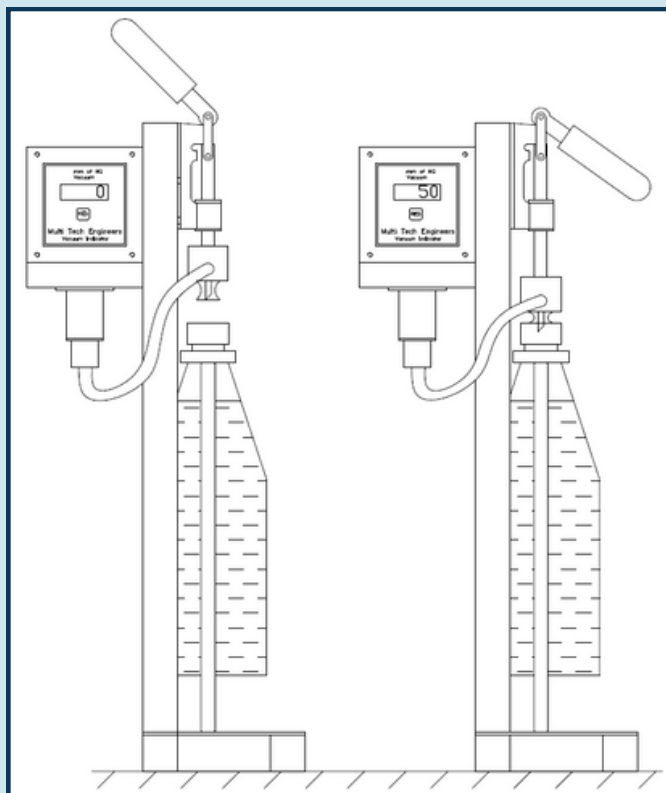

Contact Details:

QTECH SCIENTIFIC (I) PVT. LTD.

Contact No.: 9999007025

Email: info@qtechscientific.com

Website: www.qtechscientific.com

Address: 15B, HSIIDC, Sector-31,
Faridabad, Haryana-121003