
2021 - Version F



YOUR COMPLETE SOURCE FOR NDT EQUIPMENT, SUPPLIES AND SERVICE

NDT PRODUCTS CATALOG

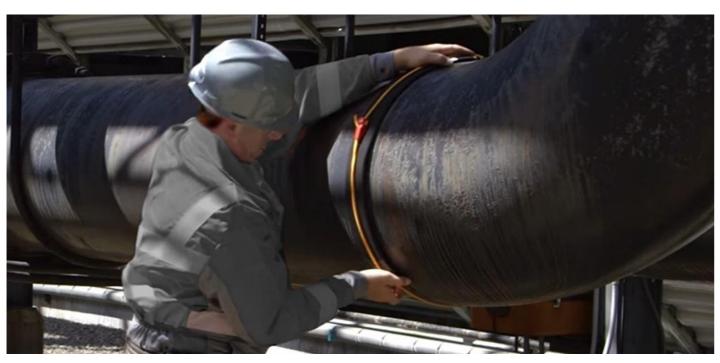

RADIOGRAPHY



MAGNETIC PARTICLE





LIQUID PENETRANT



ULTRASONIC

BLACKLIGHTS (UV-A)



VISUAL



LEAK DETECTION



HARDNESS TESTING



TABLE OF CONTENTS RADIOGRAPHY

INDUSTREX FILM & CHEMISTRY

	FILM PRODUCTS.		8
		Non-Interleaved (NIF) Film	•
		Non-Interleaved (NIF Roll) Film Roll	
		Ready Pack II	
		Ready Pack Roll	
		Lead Contactpak	
		Lead Pack Roll	
	CHEMICAL PROD	UCTS	8
		Automatic Chemicals	
		Manual Chemicals	
RADIOGRAPH			
RADIOGRAFI			•
	FILM VIEWING/ I		9
		LED Film Viewers	
		Densitometer & Density Step Tablets	10
	FILM MARKERS	South & AED Load Eigurop	10
		South & QED Lead Figures Lead Figure Cases	
		ID Printer (Film Flasher)	
		1" Reference Standard	
	TMAGE OUALITY	INDICATORS (IQI's)	11-12
		South Plaque Type Penetrameters	<u></u>
		#REF!	
		South Standard Penetrameter Shims	
		QED & South Wire Type IQI's	
	FILM HOLDERS		12-13
		Hexalon (FLEX & ULTRA) Intensifying Screens	
		Film Cassettes	
		Cloth Cassette Material	
		Backing Material	
	EXPOSURE AIDS.		13-14
		Cassette Holders	
		Swivel Clamps, Pipe Jigs & Source Stands	
		QED Mini Beam Collimator	
		Collimator Clamp	
		Industrial Tapes	
		Paint Markers	
	FILM STORAGE		15-16
		Interleave Paper	
		Film Storage Envelopes	
		70mm Film Storage Boxes (100 Count)	
		70mm Film Storage Boxes (25 or 49 Count) 100mm Film Storage Boxes (100 Count)	
		Toomin Thin Storage Doxes (Too Count)	
RADIATION S	SAFETY		
	WARNING SIGNS	& LABELS	17
		Radiation Signs	
		Barricade Rope & Reel	
		Barricade Tape	
		Adhesive Signs & Cones	
		Transport Labels	
	PERSONAL DOSIN	METRY	18-19
		Electronic Dosimeters	
		Survey Meter, Rate Alarm and Pencil Type Dosimeter	
		Dosimeter Chargers and Pouches	
DARKROOM			
	PROCESSING AID)S	19-20
	I IVACEOSTIAG ATD	Safelights	± <i>J</i> -20
		WOLF Developing Hangers (Clip-Type)	
		Developing Reels and Rod	
		Miscellaneous Darkroom Supplies	





MOBILE DARKRO	OMS	21-22
	Lemker & Harris Darkrooms	
	#REF!	
	Miscellaneous Darkroom Products	
AUTOMATIC FILM PROCES		
INDUSTREX PRO	CESSORS	23
	M37 Plus Film Processor M43iC Film Processor	
COMPUTERIZED RADIOGR		
CARESTREAM CR		24-25
	HPX-PRO Portable Digital CR System HPX-1 Plus Digital CR System	
CR TMAGING PLA	TES	26
	General Purpose (GP) High Resolution (HR) HR-PRO (High Resolution - Laminated) Imaging Plate Cleaner & Wipes	20
DIRECT RADIOGRAPHY (D	DR)	
•	SYSTEM. HPX-DR Non-Glass DDA Detector	27
X-RAY SYSTEMS & TUBES		
GOLDEN ENGINE	ERING. Portable Pulsed X-Ray Generators	28
COMET		29-30
	PXS EVO Series	
	Conventional X-Ray Systems	

MAGNETIC PARTICLE

MPI CONSUMABLES		
	ONSUMABLES	31
	Wet Fluorescent Magnetic Particles	
	Petroleum Base Suspension Vehicle	
	Water Conditioners and Additives	
	White Contrast Paint	
	Wet Visible Magnetic Particles	
	Dry Visible Magnetic Particles	
CIRCLE SYSTE	MS CONSUMABLES	32-33
	Wet Fluorescent Magnetic Particles	
	Odorless Inspection Oil	
	Water Conditioners, Additives & Wetting Agents	
	Wet Fluourescent & Visible (Dual) Magnetic Particles	
	Wet Visible Magnetic Particles	
	Underwater Magnetic Powdered Particles	
	White Contrast Paint	
	Dry Visible Magnetic Particle Powder	
	Dry Fluorescent & Visible (Dual) Magnetic Particle Powder	
MET-L-CHEK C	ONSUMABLES	34
	Wet Fluorescent Magnetic Particles	
	Petroleum Bath Vehicle	
	Wet Visible Magnetic Particles	
	White Contrast Paint	
	Dry Visible Magnetic Particle Powder	
SHERWIN CON	ISUMABLES	35
	Wet Fluorescent Magnetic Particles	
	Contrast Paint	
	Wet Visible Magnetic Particles	
	Magnetic Particle Fluid	
MPI CONSUMABLE AIDS		
MATERIAL ACC	CESSORIES	36
	Applicators & Centrifuge Tubes	





YOKES		
	PARKER RESEARCH/ MAGNAFLUX YOKES	6
	YOKE ACCESSORIES	86
MAGNETIC	PARTICLE AIDS	
	FIELD INDICATORS	37
	QUANTITATIVE QUALITY INDICATORS (QQIs)	
	TEST PIECES	57
MPI EQUI	1ENT & ACCESSORIES	_
	PORTABLE COIL	;
	Parker Portable Coil PORTABLE & MOBILE POWER PACKS	00
	Magnaflux P-70)0
	Magnaflux P-1500	
	Magnaflux M-Series	
		89
	A-Series	_
	AD-Series	
	D-Series	
	MD-Series	
	Universal WE	
	EQUIPMENT ACCESSORIES 4	Ю
	4/0 Cables & Connectors	
	Prods & Clamps	
	Copper Contact Pads & Conductors	
	Lead Contact Pads	
	Equipment Adapters	

LIQUID PENETRANT

LPI CONSUMABLES

	MAGNAFLUX CONSUMABLES	2
	ZYGLO - Fluorescent (Methods A & C)	
	ZYGLO - Fluorescent (Methods B, C & D)	
	ZYGLO - Fluorescent Water-Based (Method A)	
	SPOTCHECK - Visible (Methods A & C)	
	SPOTCHECK - Visible Water-Based (Methods A & C)	
	Remover & Emulsifiers	
	Developer	
	MET-L-CHEK CONSUMABLES 43-4	4
	FP Series - Fluorescent (Methods A & C)	
	FP Series - Fluorescent (Methods B, C & D)	
	VP Series - Visible (Methods A, B & C)	
	VP Series - Visible Bio Degradeable (Methods A & C)	
	VP Series - Visible High Temperature (Method C)	
	Emulsifiers	
	Cleaners & Removers	
	Developer	
	SHERWIN CONSUMABLES 45-4	6
	HM Series - Fluorescent (Methods A & C)	
	RC Series - Fluorescent (Methods B, C & D)	
	DP & KO Series - Visible (Methods A & C)	
	Removers/Cleaners	
	Emulsifiers	
	Developer	
LPI ACCESSO	RIES	
	MATERIAL ACCESSORIES	
	LPI Applicators & Sprayers	
	Monitoring Devices & Wiping Cloths	
	TAM PANEL & CLEANING UNIT	
	Hoffman Precision Star TAM Panels	
	Ultrasonic Cleaning Unit & Solution	





ADDITIONAL LPI PANELS/BLOCKS	48
NiCr Twin Cracked Test Panels	
Additional LPI Test Panels & Blocks	
LPI MEASURING AIDS	48
Crack Comparators	

BLACKLIGHTS

HANDHELD LED UV-A LAMPS

MAGNAFLUX H	HANDHELD	49
	EV6000 NDT Inspection Lamp	
SPECTRO-UV H	HANDHELD	
	UVISION 365 Series NDT Inspection Lamps	
FLASHLIGHT LED UV-A I	LAMP	
SPECTRO-UV	V FLASHLIGHT	50
	CLARITY 365 Series Kits	
FLASHLIGHT	Γ ACCESSORIES	50
	Y GLASSES	
OVERHEAD LED UV-A LA	AMPS	
MAGNAFLUX C	OVERHEAD	51
	ST700 Stationary Inspection LED UV Lamp	
SPECTRO-UV (OVERHEAD	51
	EDGE 13 SERIES UV-A LED Panel Lamps	
	EDGE 4 Wash Station Lamp	
LIGHT METERS		
	LIGHT METERS	52
	AccuPRO Series	
	AccuMAX Series	

ULTRASONIC

CALIBRATION	N BLOCKS	
	REFERENCE STANDARDS	53
ULTRASONIC	COUPLANT	
	GENERAL PURPOSE	54
	HIGH TEMPERATURE	54
	COUPLANT ACCESSORIES	54
INSPECTION	POINT SEALS	
	INSPECTION PLUGS	55
	INSPECTON LABELS	
	MANDREL AND HOLE SAWS	55
UT EQUIPMEN	ΝΤ	
	THICKNESS GAUGES	56-58
	#REF!	
	EHC-09 "Monochrome" Series Thickness Gauges	
	Danatronics ECHO Thickness Gauges	
	FLAW DETECTORS	58
	DAKOTA, Danatronics & SONATEST	
	TRANSDUCERS AND WEDGES	58
	DAKOTA, Danatronics, Olympus, SONATEST & Technisonic	
	CABLES	59

VISUAL

MEASURING DEVICES

WELDING GAUGES

VIDEO INSPECTION SYSTEM

WOHLER VIS 700 HD Inspection System & Accessories...... 59





LEAK DETECTION

VACUUM BOX TESTING

HARDNESS TESTING

TELEWELD

PHASE II

FLAWED TEST SPECIMENS

FLAWTECH

STANDARD SPECIMEN KITS	61
PRACTICAL EXAM SPECIMENS	61
UT THICKNESS SPECIMENS	61

SERVICE

EQUIPMENT CALIBRATION/CERTIFICATION

RADIOGRAPHY		
BLACKLIGHTS & LIGHT METERS		
MAGNETIC PARTICLE	-	
ULTRASONIC		
SPECIAL SERVICES LED FILM VIEWER MODIFICATION	63	
	05	
PREVENTATIVE MAINTENANCE (PM)		
FILM PROCESSORS		
FIELD SERVICE		
CALL-OUT RATES		





LOCATIONS

BUFFALO, NY

Quality Equipment Distributors, Inc.

75 Bank Street Orchard Park, NY 14127

Telephone: (716) 667-7703 Fax: (716) 667-7702 Email: sales@qeddirect.com

Outside Sales Representative

Tom Sisson Cell: (716) 907-7045 Email: tsisson@qeddirect.com

HOUSTON, TX

Quality Equipment Distributors, Inc.

4044 Strawberry Road Pasadena, TX 77504

Telephone: (713) 277-7913 Fax: (713) 588-1804 Email: txsales@qeddirect.com

Outside Sales Representative

CW Collier Cell: (281) 299-2438 Email: cwcollier@qeddirect.com

QUALITY



"As a business, Quality Equipment Distibutors (QED) is committed to excellence by providing superior customer service and support through the sale of QUALITY products to the Non-Destructive Testing industry. This commitment is rooted in the ongoing effort to involve our employees and partner with our suppliers; to continually improve our processes to meet the needs and requirements of our customers."

Certificate is Available for Download on our Website

Can't filled what you are locking for?

Please Contact one of our Distribution Centers for Further Assistance





RADIOGRAPHY INDUSTREX FILM & CHEMISTRY Corestream

FILM PRODUCTS

Get the T-Grain Emulsion Advantages

T-GRAIN Emulsion offers a state-of-the-art technology that's specifically designed for industrial radiographic testing applications. What does that mean for you?

Outstanding Image Quality

With a cold, clean image tone and low noise, you get a sharp, clear image every time.

Convenient Processing Flexibility

The films work well in standard process cycles—but they're just as effective in longer or shorter process cycles.

Superb Durability

The films are static resistant, more heat resistant than conventional systems, incredibly sturdy, and you'll get fewer artifacts from handling.

Non-Interleaved Film Roll (NIF Roll)

Size	AA400	T200	MX125	M100	HS800
70mm x 492'	5230263	5073465	5058961	5268396	5291687
70mm x 1,000'	6043475	6043392	6043426	-	-
90mm x 492'	5265459	5291992	5262795	8618480	-



Ready Pack	k II	50 5	Sheets/Box
Size	AA400	MX125	M100
3.5" x 17"	-	5289434	-
4.5" x 17"	-	5245154	-
5" x 7"	-	5238118	-
7" x 17"	8040552	5245147	-
8" x 10"	8278137	5245139	-
14" x 17"	8460636	5238134	5272844



Non-Interleaved Film (NIF)

100 Sheets/Box

Size	AA400	T200	MX125	M100	DR50	HS800
3.5" x 8.5"	-	6095772	6046916	5291406	-	-
3.5" x 10"	6046908	5284856	6041552	6041560	6041578	-
3.5" x 17"	1030295	8497711	5087283	6041354	6046619	-
4.5" x 10"	8139503	8385213	5087259	5282611	6041701	-
4.5" x 17"	1447234	8328494	5087275	5258538	6041719	-
5" x 7"	1543628	1921683	5245261	5258553	-	-
7" x 17"	1447655	8280745	5235890	5258504	6045090	-
8" x 10"	1447853	1490606	5245287	5282629	6045082	-
10" x 12"	6095988	6096002	6095970	6095962	6046635	-
11" x 14"	6095996	6095863	6095848	6095855	6046601	-
14" x 17"	6549471	6549463	6549455	8365728	6095533	6095558



Ready Pack Roll

\longrightarrow		
A101444	Y	
	$\langle $	

Size	AA400	MX125	M100
60mm x 90m	-	6046882	-
70mm x 90m	-	6046874	6046890
5" x 60m	-	5245220	-
14" x 60m	5073523	5245188	-

Lead Conta	ctpak	50 5	Sheets/ <mark>Box</mark>	
Size	AA400	T200	MX125	M100
4.5" x 10"	-	-	5245253	-
4.5" x 17"	5073507	6044978	6046940	5281241
5" x 7"	-	-	5241161	5259106
14" x 17"	5057740	-	5053749	-

Lead Pack Roll					
Size	AA400	T200	MX125	M100	
60mm x 90m	6046718	6046783	6046759	-	
70mm x 90m	6046726	6046791	6046767	6046734	
10mm x 90m	6046700	6046775	6046742	-	

CHEMICAL PRODUCTS

INDUSTREX Chemicals for manual and automatic processing support the evolving requirements of the non-destructive testing market. Our experience in imaging science spans over one hundred years. But it's an unbreakable commitment to product innovation and customer service that has allowed the INDUSTREX line of products to achieve superiority in the NDT industry.

INDUSTREX Chemicals for use with Automatic Processors

Item No.	Description	Replenishment Rates (m ²)	Pack/Size	Makes
8351413	Single Part Developer Starter	N/A	Bottle (39.8 oz)	10 Gallons
5315288	Single Part Developer Replenisher	665 mL	Case (2 x 5L)	10 Gallons
5327903	Single Part Developer Replenisher	665 mL	Drum (55 Gallon)	200 Gallons
5159082	LO Fixer and Replenisher	1200 mL	Case (2 x 5L)	10 Gallons
5327895	LO Fixer and Replenisher	1200 mL	Drum (55 Gallon)	200 Gallons



8



INDUSTREX Chemicals for use with Manual Processing

Item No.	Description	Replenishment Rates (m ²)	Pack/Size	Makes
5320635	Manual Developer	665 mL	Case (2 x 5L)	10 Gallons
1057009	Manual Developer Kit	665 mL	*	
*Developer F	Replenisher (2 x 5L & 1L - Ma	kes 12 Gallons) & Stop Bath (2 x 1L - Makes 10 (Gallons)	
1054873	Manual Stop Bath	N/A	Bottle (1L)	5 Gallons
5320643	Manual Fixer	1200 mL	Case (2 x 5L)	10 Gallons
1057017	Manual Fixer Kit	1200 mL	*	
*Fixer Replei	nisher (2 x 5L & 1L - Makes 1	2 Gallons) & Rinse Solution (2 x 1L - Makes 10 (Gallons)	
1057025	Manual Rinse Solution	N/A	Bottle (1L)	5 Gallons





RADIOGRAPHIC AIDS FILM VIEWING/ MEASURING DEVICES

LED Film Viewers

► QED Viewer Kits Include: Rugged Aluminum Carrying Case with LED Film Viewer, Foot Pedal, Operation Guide and Test Report

► LCNDT Viewer Kits Include: LED Film Viewer, External Mask, Foot Pedal, Manual, Test Report, Warranty Card and Carrying Bag depending on Model



Viewer pictured above has underwent Anti-Corrosion Treatment. See Service Section for More Information

9

Brand	Model	Viewing Window	Intensity	Max Viewing Density
OED	A2	2.5" x 8"	110.000 Cd/m.ca	4.1 D
QED	A8L	3.14" x 15.7"	110,000 Cd/m sq	4.1 D
	FV-2009 Plus	2.5" x 8"	120,000 Cd/m sq	4.1 D
	FV-2009T	2.5 × 0	120,000 60,111 54	
	FV-2010 Plus	4" x 15.8"	130,000 Cd/m sq	4.2 D
LCNDT	FV-2010T Plus	4 x 15.0	150,000 Cu/m Sq	7.2 D
	FV-2018 Iris	0.2" thru 4"	300,000 Cd/m sq	4.5 D
	FV-2014	13" x 16.1"	82,800 Cd/m sq	3.8 D


LCNDT Film Viewer Models ending in "T" include a Built-in Densitometer



Densitometer & Density Step Tablets

Brand	Item or Model	Measuring/Tablet Range	Description
	5009	0.00 - 5.00 D	SM-10 Portable B/W Transmission Densitometer
	5012	0.00 - 4.00 D	SM-12 Compact Densitometer (Built-in Light Source, Limited to a 3" Film Measuring Depth)
Faces Creedmaster	5014	0.00 - 4.00 D	SM-14 Compact Densitometer (Reads Directly from Film Viewers)
Eseco Speedmaster	5099	.08 - 4.00 D	4 Step Transmission Density Tablet (Uncertified)
	5005	.08 - 4.00 D	5 Step Transmission Density Tablet (NIST Certified)
5004		.15 - 5.00 D	21 Step Transmission Density Tablet (NIST Certified)
	DT-300	0.00 - 5.00 D	LCNDT Tabletop Densitometer (Replacement for X-Rite 301)
LCNDT	DT-100	0.00 - 5.00 D	LCNDT Portable Denistometer

LCNDT Densitometers do not include a Transmission Density Tablet

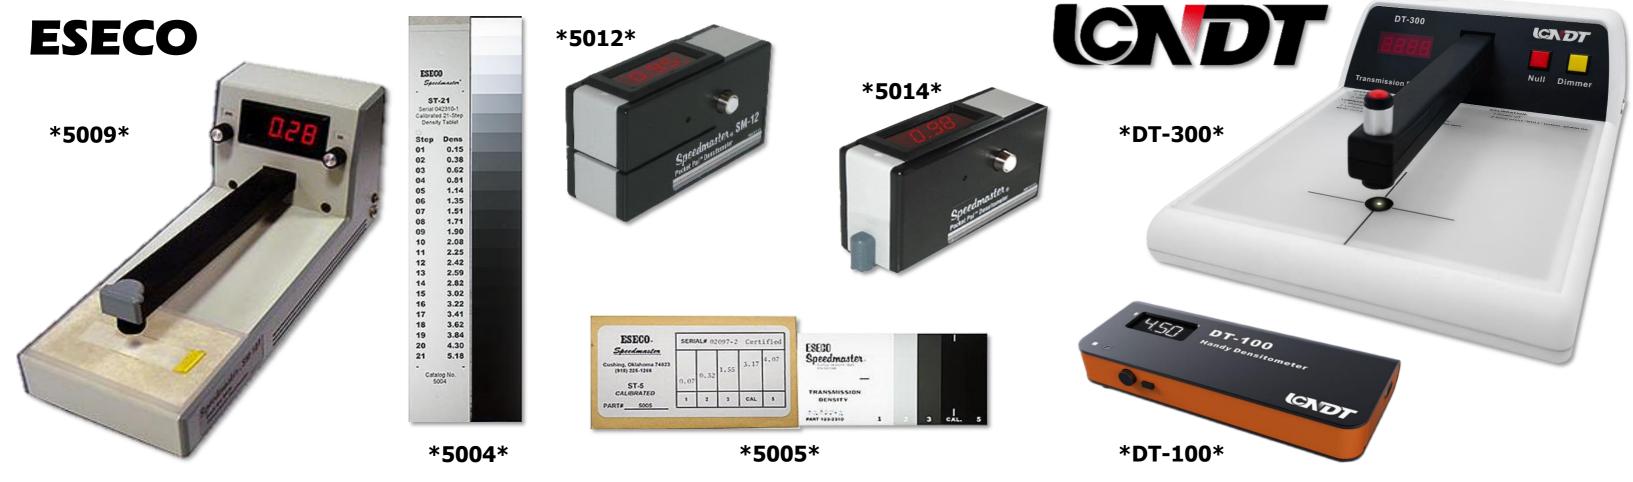






FILM MARKERS

South & QED Lead Figures

Our manufacturing process makes a clean, sharp-edged character, free of flash and porosity. All numbers and letters are pre-packed and sold in quantities as follows:

Item	Style	Quantity
1/4" Lead Figures	Deep "V" (South)	Pack of 100
1/4 Lead Figures	Flat Face (QED)	Pack OF 100
2/9" Load Figures	Deep "V" (South)	Pack of 50
3/8" Lead Figures	Flat Face (South)	Pack of 100
1/2" Load Figures	Deep "V" (South)	Pack of 50
1/2" Lead Figures	Flat Face (South)	Pack of 100
3/4" Lead Figures	High Energy (South)	Each

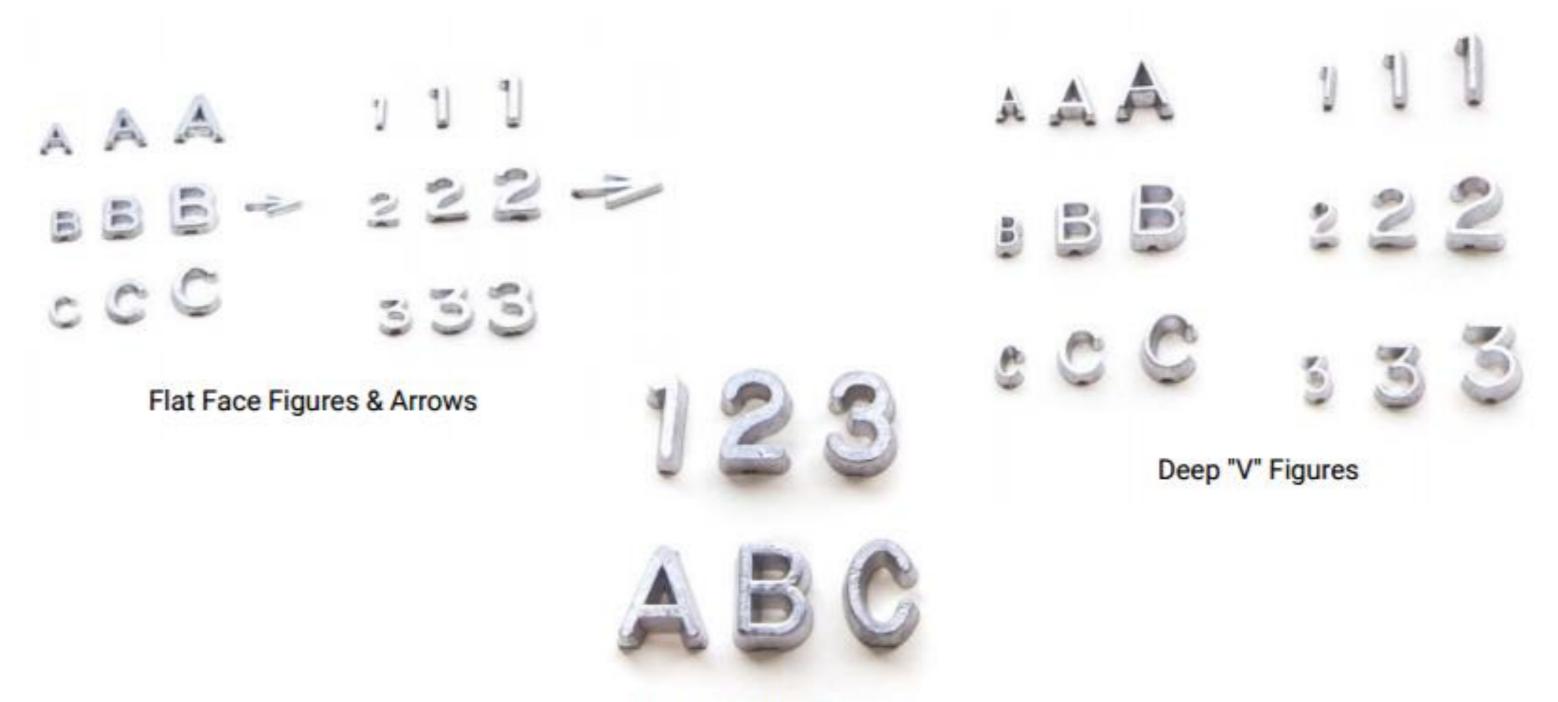

High Energy Figures

Lead Figure Cases

Designed to hold both numbers and letters. These lead number cases are made of ABS high impact plastic and contain a polyethylene sponge inside the cover which prevents accidental mixing of numbers and letters when the cover is closed.

Item	Color	Number of Compartments
LL-CASE	Red	38

ID Printer (Film Flasher)

Item	Description
17104	WOLF Manual ID Printer

1" Reference Standard

Like magic... 1" reference ball attaches itself to any ferromagnetic material, making a radiographers life just a little easier. The ball can be used as a reference for measuring pipe wall.

For accurate measurement, the ball must be put as near as possible to the exact side of the pipe parallel to the image media so that the enlargement of the pipe wall is the same as that of the ball.

If the comparator or ball is not touching the pipe because of insulation, aim the source at the center of the space between the two. This will help insure an equal amount of enlargement to the ball and the pipe wall. (Think of how the source side of an elliptical 2" weld is distorted more than the film side).

Item	Description
SP*001201	1" OD Magnetic Reference Ball (Includes Certificate of Conformance)
SP*001218	1" OD Non-Magnetic Reference Ball (Includes Certificate of Conformance)





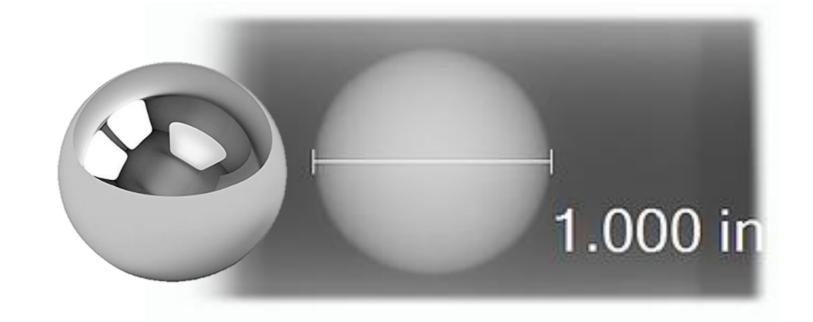








IMAGE QUALITY INDICATORS (IQI's)

South Plaque Type Penetrameters

SOUTH precision IQI's rigidly conform to and exceed requirements of each code. Lead figures identifying the IQI size are affixed to the IQI and each IQI is chemically etched identifying the specification. All IQI's are accompanied by a certificate of conformity and are traceable to the National Institute of Standards and Technology (NIST).



11

Item	Material Group	Material	Sizes
		Stainless Steel	#5, #7, #10, #12, #15, #17 and #20
ASTM E1025 (E142)	1		#25, #30, #35, #40, #45 and #50
	r	Aluminum	#5, #7, #10, #12, #15, #17 and #20
ACME Castion V	Z	Aluminum	#25, #30, #35, #40, #45 and #50
ASME Section V			#60, #70 and #80
	1		#90, #100, #110, #120, #130, #140 and #160
			#180 and #200

*API 1104 Specifies the use of IQI's Conforming to Requirements of ASTM E747 for Wire Type IQI's *Additional Codes, Sizes and Material Groups are available upon request

IQI SELECTION

All ASME sections reference ASME Secion V SE 1025 (identical to ASTM E1025). IQI selection for use is determined using Table T-276 as shown below:

Table T-276 IQI Selection						
	IQI					
		Source Side			Film Side	
Nominal Single-Wall Material Thickness Range, in. (mm)	Hole-Type Designation	Essential Hole	Wire-Type Essential Wire	Hole-Type Designation	Essential Hole	Wire-Type Essential Wire
Up to 0.25, incl. (6.4)	12	2T	5	10	2 <i>T</i>	4
Over 0.25 through 0.375 (6.4 through 9.5)	15	2 <i>T</i>	6	12	2 <i>T</i>	5
Over 0.375 through 0.50 (9.5 through 12.7)	17	2T	7	15	2 <i>T</i>	6
Over 0.50 through 0.75 (12.7 through 19.0)	20	2 <i>T</i>	8	17	2 <i>T</i>	7
Over 0.75 through 1.00 (19.0 through 25.4)	25	2 <i>T</i>	9	20	2 <i>T</i>	8
Over 1.00 through 1.50 (25.4 through 38.1)	30	2 <i>T</i>	10	25	2 <i>T</i>	9
Over 1.50 through 2.00 (38.1 through 50.8)	35	2 <i>T</i>	11	30	2 <i>T</i>	10
Over 2.00 through 2.50 (50.8 through 63.5)	40	2 <i>T</i>	12	35	2T	11
Over 2.50 through 4.00 (63.5 through 101.6)	50	2 <i>T</i>	13	40	2 <i>T</i>	12
Over 4.00 through 6.00 (101.6 through 152.4)	60	2 <i>T</i>	14	50	2 <i>T</i>	13
Over 6.00 through 8.00 (152.4 through 203.2)	80	2T	16	60	2T	14
Over 8.00 through 10.00 (203.2 through 254.0)	100	2 <i>T</i>	17	80	2T	16
Over 10.00 through 12.00 (254.0 through 304.8)	120	2T	18	100	2T	17
Over 12.00 through 16.00 (304.8 through 406.4)	160	2 <i>T</i>	20	120	2 <i>T</i>	18
Over 16.00 through 20.00 (406.4 through 508.0)	200	2 <i>T</i>	21	160	2T	20

South Standard Penetrameter Shims

Some codes require that shims be placed under the IQI to compensate for the thickness of a backing ring or weld reinforcement. Shims are supplied in the same materials as IQI's. They are usually available in increments of 1/16", from 1/16" thick thru 1.0". The general dimension (³/₄" W x 1³/₄" L) allows approximately 1/8" clearance on each side of the IQI they are to be used with.

Item	Image	Description
S-1/64-CS-SHIM		SOUTH 1/64" Carbon Steel Standard Penetrameter Shim (3/4" W x 13/4" L)
S-1/32-CS-SHIM		SOUTH 1/32" Carbon Steel Standard Penetrameter Shim (3/4" W x 13/4" L)
S-1/16-CS-SHIM	the second s	SOUTH 1/16" Carbon Steel Standard Penetrameter Shim (3/4" W x 13/4" L)
S-1/8-CS-SHIM		SOUTH 1/8" Carbon Steel Standard Penetrameter Shim (3/4" W x 13/4" L)
S-3/16-CS-SHIM		SOUTH 3/16" Carbon Steel Standard Penetrameter Shim (3/4" W x 13/4" L)
S-1/4-CS-SHIM		SOUTH 1/4" Carbon Steel Standard Penetrameter Shim (3/4" W x 13/4" L)
S-3/8-CS-SHIM		SOUTH 3/8" Carbon Steel Standard Penetrameter Shim (3/4" W x 13/4" L)
S-1/2-CS-SHIM		SOUTH 1/2" Carbon Steel Standard Penetrameter Shim (3/4" W x 13/4" L)
S-1-CS-SHIM		SOUTH 1.0" Carbon Steel Standard Penetrameter Shim (3/4" W x 13/4" L)

Item	Image	Description
S-1/64-SS-SHIM		SOUTH 1/64" Stainless Steel Standard Penetrameter Shim (3/4" W x 13/4" L)
S-1/32-SS-SHIM		SOUTH 1/32" Stainless Steel Standard Penetrameter Shim (3/4" W x 13/4" L)
S-1/16-SS-SHIM		SOUTH 1/16" Stainless Steel Standard Penetrameter Shim (34" W x 134" L)
S-1/8-SS-SHIM		SOUTH 1/8" Stainless Steel Standard Penetrameter Shim (34" W x 134" L)
S-3/16-SS-SHIM		SOUTH 3/16" Stainless Steel Standard Penetrameter Shim (34" W x 134" L)
S-1/4-SS-SHIM		SOUTH 1/4" Stainless Steel Standard Penetrameter Shim (34" W x 134" L)
S-3/8-SS-SHIM		SOUTH 3/8" Stainless Steel Standard Penetrameter Shim (3/4" W x 13/4" L)
S-1/2-SS-SHIM		SOUTH 1/2" Stainless Steel Standard Penetrameter Shim (3/4" W x 13/4" L)
S-1-SS-SHIM		SOUTH 1.0" Stainless Steel Standard Penetrameter Shim (3/4" W x 13/4" L)

*Additional Sizes and Materials are available upon request





QED & South Wire Type IQI's

The only IQI acceptable by API 1104 (20th Edition) and accepted as an alternative to plaque type IQI's by ASME Section V and AWS, these Wire Type IQI's are encapsulated in vinyl for durability. Available — in 4 sizes (Sets A, B, C and D) and inspected with instruments calibrated and traceable to the National — Institute of Standards and Technology (NIST).

ASTM E747 Wire Type IQI's are manufactured with 6 wires in each size, as shown in Table 1. Each size IQI covers a range of thicknesses for which it is used, based on a standard 2T level of inspection.

IQI SIZE	THICKNESS RANGE
Set A	.25" thru .75"
Set B	.75" thru 1.7"
Set C	1.7" thru 4.0"
Set D	4.0" thru 10.0"



TABLE 1 Wire IQI Sizes and Wire Identity Numbers						
SET	ΓA	SET B				
Wire Diameter in. (mm)	Wire Identity	Wire Diameter in. (mm)	Wire Identity			
0.0032 (0.08) ^A	1	0.010 (0.25)	6			
0.004 (0.1)	2	0.013 (0.33)	7			
0.005 (0.13)	3	0.016 (0.4)	8			
0.0063 (0.16)	4	0.020 (0.51)	9			
0.008 (0.2)	5	0.025 (0.64)	10			
0.010 (0.25)	6	0.032 (0.81)	11			
SET	ГC	SET	۲D			
Wire Diameter in. (mm)	Wire Identity	Wire Diameter in. (mm)	Wire Identity			
0.032 (0.81)	11	0.10 (2.5)	16			
0.040 (1.02)	12	0.126 (3.2)	17			
0.050 (1.27)	13	0.160 (4.06)	18			
0.063 (1.6)	14	0.20 (5.1)	19			
0.080 (2.03)	15	0.25 (6.4)	20			
0.100 (2.5)	16	0.32 (8)	21			

12

Item	Size	Wire Length	Material Group
		2"	1 (Stainless Steel)
		2	2 (Aluminum)
	Set A	3"	1 (Stainless Steel)
		5	2 (Aluminum)
		4"	1 (Stainless Steel)
		2"	1 (Stainless Steel)
		Z	2 (Aluminum)
ASTM E747	Set B	3"	1 (Stainless Steel)
			2 (Aluminum)
		4"	1 (Stainless Steel)
		2"	1 (Stainless Steel)
	Set C	2	2 (Aluminum)
		3"	1 (Stainless Steel)
		4"	1 (Stainless Steel)
	Set D	4"	1 (Stainless Steel)

*Additional lengths and Material Groups are available upon request

FILM HOLDERS

Hexalon (FLEX & ULTRA) Intensifying Screens

Hexalon is the popular industry standard lead intensifying screen when performing radiographic testing. The FLEX screen includes a proprietary fiber 90 backing for greater flex and durability. The ULTRA screen is the best production screen available and offers the greatest flexibility and resistance to crimping than any other screen on the market.

Item	Size	Thickness
FLEX	70mm V 10"	.005"
	70mm X 10"	.010"
A A A P A A A A A A A	70mm X 17"	.005"
pp p p p p p p p p p p p p p p p p p p	>	.010"
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	3.5" X 10"	.005"
LAND A ANTROPHON		.010"
Phillipping and the the	3.5" X 17"	.005"
the second states		.010"
talon.	4.5" X 10"	.005"
THE FRONT		.010"
and the second se	4.5" X 17"	.005"
		.010"
ULTRA	5" X 7"	.005"
the the the the		.010"
	7" X 17"	.005"
ARE BUT THE REAL OF THE REAL O	8" X 10"	.010"
A REAL CONTRACTOR		.005"
		.010" .005"
HEALEN RETER HEALEN RETER HEALEN RETER	10" X 12"	.010"
A CONTRACTOR CONTRACTO		.010
A CONSTRAINT OF THE ADDRESS OF THE A	11" X 14"	.010"
In the second se		.005"
Allow the second and	14" X 17"	.010"
	300'	.005"
2.75" (approx. 70mm wide)	180'	.010"
3.5" (approx. 90mm wide)	300'	.005"
	180'	.010"
4.5" (approx. 115mm wide)	300'	.005"
	180'	.010"
17" (approx. 432mm wide)	95'	.005"
	54'	.010"

*Cut Screens come standard with ½" radius cut corners





Film Cassettes

SOUTH - This completely flexible film holder (cassette) is easily molded around irregular shapes to ensure proper contact necessary in direct exposure technique. Made from vinyl treated paper with all edges reinforced with tape for durability, this rugged cassette is available in various sizes. Black Only.

► CLOTH - Tough, water resistant, and highly durable. Our cloth cassettes are made with the seam in the center, on the back cassette. One end of the cassettes is sealed with gaffers tape and the other includes a rubber band for easy opening and closing of the cassette.

*Custom Sizes are Available Upon Request

► WARREN - "Flexible" Type Film Holders: Outer Cover made of tough vinyl impregnated fiber stock but flexible enough to contour around shapes. Comes in two colors (specify when ordering) Blue or Black. Inner film envelope made of black shoe material for light tight protection.

*Also Available Upon Request - WARREN - "Semi-Rigid" or "Rigid" Film Holders. Ideal for Heavy Castings

Item	Size	SOUTH	CLOTH	WARREN
	70mm X 10"	X	X	X
	70mm X 17"	X	X	X
	3.5" X 10"	X	X	X
	3.5" X 17"	X	X	X
	4.5" X 10"	X	X	X
	4.5" X 17"	X	X	X
FILM CASSETTES	5" X 7"	X		X
	7" X 17"	X		X
	8" X 10"	X	N/ / A	X
	10" X 12"	X	X N/A	X
	11" X 14"	X		X
	14" X 17"	X		X

Cloth Cassette Material

This product is constructed by bonding a sheet of neoprene rubber between two high grade duct cloths of the finest quality durable fabrics. The combination of our dual chain stitch construction and the rugged light-proof material makes a product that has proven reliable for many years.

Item	Size
	70mm x 1'
BELTING	3.5" x 1'
	4.5" x 1'

Backing Material

Our .050" and .062" nylon backing is available in rolls, or cut to specified lengths with corners radiused. This flexible material will not buckle or deteriorate under normal use. Therefore, it can be used as support in new cassettes many times.

Item	Size	Thickness
	70 mm v 1	.050"
	70 mm x 1'	.062"
BACKING	2 F″ v 1	.050"
DACKING	3.5″ x 1'	.062"
	4.5″ x 1'	.050"
	4.3 X I	.062"



SOUTH MFG.



CLOTH







BACKING MATERIAL

EXPOSURE AIDS

Cassette Holders

Item	Description
SP*001312	Nylon RT Clamp with Rubber Molded Tips, 9 1/2" Length x 5" Opening
SP*001002	Magnetic Film Holders are made of a spring steel arc with a forty (40) lb. pull magnet attached through center of arc. Quick release mechanism allows the cassette to be changed without removing magnet from vessel. Holder end of spring steel is equiped with lead rubber to prevent back scattering exposure of the cassette
PM	Paddle magnets are made of a high-impact plastic with a circular ring magnet at one end and a 3" x 4" flap at the other end
SP*001085	1/4" Black Bungee Cord, 100' Roll

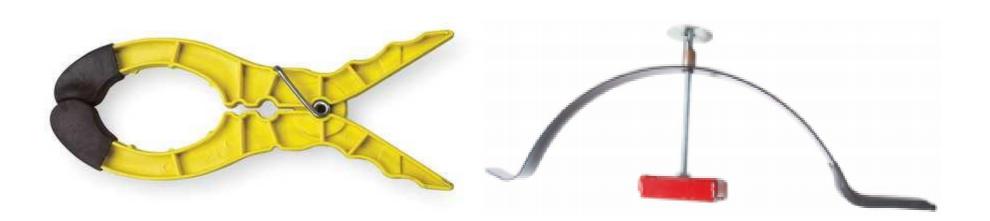

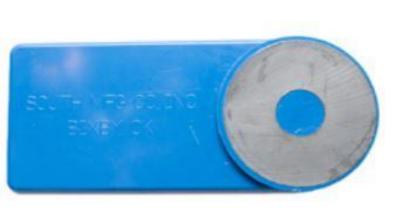











Swivel Clamps, Pipe Jigs & Source Stands

Item	Description	
SP*00001793	2.5" Heavy Duty Stainless Steel Grip Head with "T" Top and 5/8" Socket	
SP*001153	Swivel Clamp Holder	
SP*001305	2" Contact Jig (Standard)	
SP*001306	" Fitting to Fitting Contact Jig	
SP*001268	18" Aluminum Source Stick with Built-In Collimator Holder	
SP*001575	RT Jig - 11" C-Clamp with Welded Angle Iron and an 18" CS Rod Welded and Painted Black	
SP*001577	RT Magnetic Source Stand with (3) 90lb pull magnets including handle and crossbar painted black	
SP*001559	Aluminum Magnetic Source Stand with (2) 225lb pull magnets and a 18" x 5/8" rod	
SP*001082	Source Stand 8" x 10" Carbon Steel U-Channel Base with Threaded 5/8" Diameter x 36" Long Aluminum Rod	

*Custom Items are available upon request

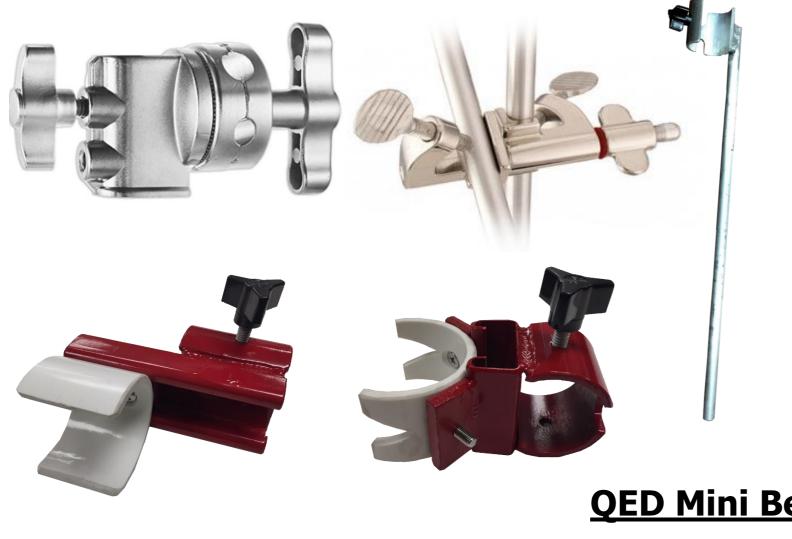

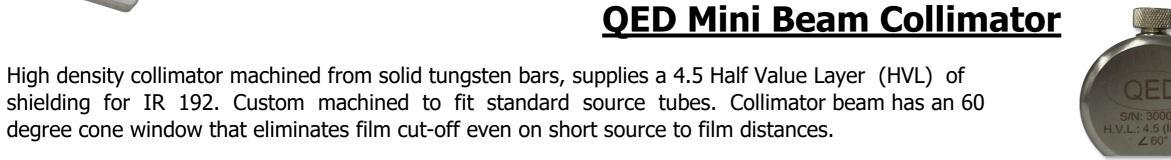

Item	Description
Q-CO-60M-4.5	60 Degree Angle Beam Mini Collimator, 4.5 HVL (Ir 192)

Collimator Clamp

Item	Description
C-CLAMP	Designed to fit 1.5" diameter Collimator. Made of .062" stainless spring steel with slotted ears to accommodate a 6 foot web belt (included) for securing to the pipe

Industrial Tapes

Item	Description	Size	UOM
PM2	Intertape Tan Kraft Flatback Paper Tape	1" v 60 Varda	Case of 36
PC 600	Shurtape Silver Cloth Duct Tape	1" x 60 Yards	Case of 48
TAPE-GAFFERS-1	DroTance Plack Clath Coffere Tano	1" x 55 Yards	Doll
TAPE-GAFFERS-2	ProTapes Black Cloth Gaffers Tape	2" x 55 Yards	Roll



Since the 1970's, Sakura has been developing markers and pens for use in industrial environments. Extensive research, development and user feedback have kept Sakura in the forefront of meeting the market demand for specific product performance in various industrial applications such as ship building, welding, HVAC, highway construction, aerospace, plumbing, automotive assembly, petrochemical, shipping and electronics.

Markal Valve Action is a fast-drying liquid paint marker that provides long-lasting, wear- and weather-resistant marks that are safe for almost any surface. As the most versatile liquid paint marker in the world, the xylene-free paint reduces user health risks and is available in 18 bold and fluorescent colors for accurate mark identification.

Brand	Model	Available Colors	Tip Diameter	Temperature Range
		11 - White, Black, Blue, Red, Green, Purple, Orange, Yellow, Fl. Lemon, Fl. Orange and Fl. Pink	13mm	14 - 392 °F
	Solid Marker Slim	4 - White, Black, Red and Yellow	10mm	
	SM Low Temperature	6 - White, Yellow, Red, Blue, Green and Black	13mm	
	SM Low Temperaure Slim	5 - White, Yellow, Red, Blue and Black	10mm	-40 - 212 °F
	SM Low Halogen	4 - White, Black, Red and Yellow	13mm	
SAKURA®	Pen-Touch Medium	10 - White, Black, Yellow, Red, Purple, Green, Blue, Gold, Silver and Copper	2mm	41 - 104 °F
Markal	Valve Action	18 - Brown, Purple, White, Yellow, Red, Black, Orange, Blue, Green, Gold, Light Green, Pink, Aluminum, Light Blue, Fl. Yellow, Fl. Green, Fl. Orange, Fl. Pink	3mm	-50 - 150°F

*Additional Brands and Models are Available Upon Request / Markers are Sold per Box of 12





FILM STORAGE

Interleave Paper

- ► In-house QED film interleaf paper (White in Color) is acid-free and comes in three common film sizes.
- ► South Interleaves (Yellow in Color) are produced using the alkaline paper making process and are available in most film sizes.





Film Storage Envelopes

High Grade 32 oz. Brownkraft Exposed Film Storage Envelopes. Available in both Unprinted and PRINTED.

Size	UOM
4 Fll x 10ll	Pack of 100
4.5" x 10"	Case of 500
4.5" X 17"	Pack of 100
4.5 \ 1/	Case of 500
5" X 7"	Pack of 100
5 /	Case of 1,000
フ!! \/ 1フ!!	Pack of 100
7" X 17"	Case of 500
0" V 10"	Pack of 100
8" X 10"	Case of 500
11" V 1 <i>4</i> "	Pack of 100
11" X 14"	Case of 500
14" V 17"	Pack of 100
14" X 17"	Case of 500

Printed Envelopes are Customized as per your Company Design or our Standard Layout

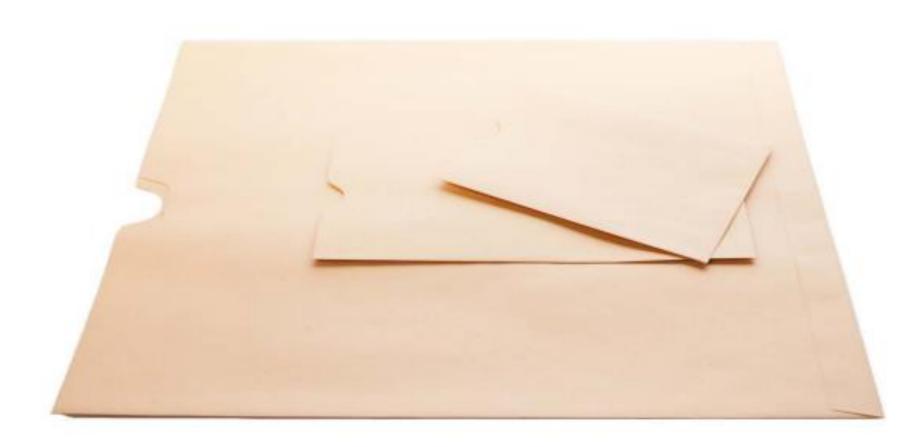

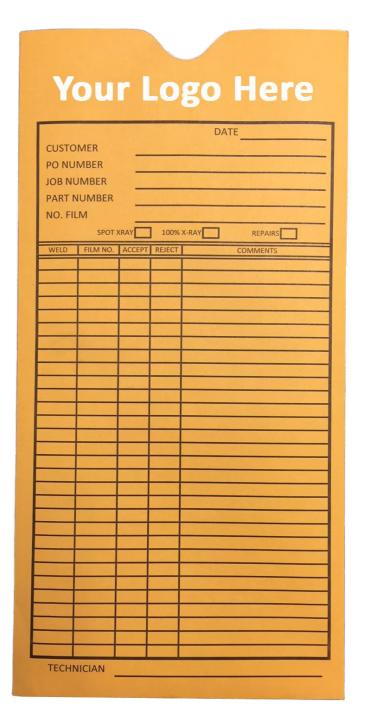

One time Set-Up Fee for all Printed Envelopes for the cost of the Metal Imprint Plate







70mm Film Storage Boxes (100 Count)

Item	Description
70mm x 100 Compartment	The top and bottom of our one-hundred (100) cell film storage box is constructed of heavy (200 BP) white corrugated cardboard. The die cut design with locking tabs is easily assembled by hand without the use of tape or staples. The pre-assembled one-hundred (100) cell divider sets in the bottom of the box, over a numbered grid that automatically denotes a space for each of the one- hundred (100) film.
	The separate lid is die cut design and printed with spaces allowing for all pertinent information as to the pipeline owner, engineering company, contractor, radiography contractor, job numbers, film numbers, etc. The lid also has a printed grid that allows space to record the disposition of each weld x-rayed. This 17" x 17" x 3" storage container allows an inventory of radiographs to be taken without calculating how many odd number films each box contains.

*Sold in Lots of 25 Only

70mm Film Storage Boxes (25 or 49 Count)

Item	Description
70mm x 25 or 49 Compartment	12" x 12" x 3" corrugated cardboard storage box with a pre-assembled forty-nine (49) or twenty five (25) cell egg crate divider can be assembled with tape or a box stapling machine.

*Sold in Lots of 10 Only

100mm Film Storage Boxes (100 Count)

Item	Description
	15 9/16" x 15 9/16" x 100mm (4") corrugated cardboard box with a pre-assembled 100 cell egg crate divider can be assembled with tape or a box stapling machine.

*Sold in Lots of 10 Only





70mm x 100 Compartment Box

70mm x 49 Compartment Box



100mm x 100 Compartment Box







RADIATION SAFETY WARNING SIGNS & LABELS


Radiation Signs

Our radiation signs, sun fast and sealed in two sheets of .016" vinyl, are manufactured in a variety of types. Our most popular are:

DANGER – High Radiation Area

CAUTION - Radiation Area Authorized Personnel Only

Available with Velcro for securing to a barrier rope or grommets on the corners of attachment to a flat surface.



Barricade Rope & Reel

SP*001212 - Sun-fast, non-conductive, and reusable, yellow/magenta polypropylene barricade rope is a safe and easy method for marking off radiation areas. Ideal for hanging Velcro secured signed on.

▶ RR - Made of high impact polyethylene with ABS handle and knob.

Item	Description
SP*001212	Radiation Barricade Rope, 5/16" diameter x 1'
RR	13" Polyethylene Reel (holds both Barricade Rope and Tape)
SP*001261	Storage Wheel with Side-Mounted Handle Allowing you to Quickly Wind and Unwind Barricade Tape or Rope

*Barricade Rope is Sold in 600' Rolls



Barricade Tape

Yellow/magenta barricade tape is safe, economical, and an easy method of marking a large radiation area quickly. The nylon reinforced tape is sun-fast, non-conductive, and



reusable. Available in the following:

Item	Size	Strength
BT-3/4"	34" X 150 ft. Roll	100 lb. Tensile Strength
BT-2"	2" X 150 ft. Roll	300 lb. Tensile Strength
BT-3"	3" X 1000 ft. Roll	500 lb. Tensile Strength

Adhesive Signs & Cones

► Adhesive Backed Vinyl Signs - 7" x 10" made with Outdoor Durable Vinyl.

Item	Description
H1418-AB	Caution Radiation Area Keep Out Sign, 7" x 10", Outdoor Durable Vinyl (Adhesive Backed)
H1402-AB	Caution High Radiation Area Sign, 7" x 10", Outdoor Durable Vinyl (Adhesive Backed)
SP*001252	Caution Radioactive Materials Sign, 7" x 10", Outdoor Durable Vinyl (Adhesive Backed)
SP*00001857	Blank Floor Sign (Yellow), 25" High x 12" Wide
OC-18	18" Orange Premium PVC Safety Cones - No Reflective Collar



Transport Labels

Item	Description	UOM
SP*001073	1 ¹ / ₂ " Diameter RQ Circle Labels	
SP*001074	4" x 4" Radioactive II D.O.T. Class 7 Hazard Labels	500/Roll
SP*001078	4" x 4" Radioactive III D.O.T. Class 7 Hazard Labels	











PERSONAL DOSIMETRY

Electronic Dosimeters

1 pSv

MIRION

RAD-60 ELECTRONIC DOSIMETER

RAD-60 Personal Alarm Dosimeter is a precise radiation measuring instrument for reliable detection and registration of radiation in order to ensure the personal safety of the user. It is suitable for a broad range of everyday radiation monitoring purposes in stand alone conditions.

KEY FEATURES:

- ► Solid state Detector
- ► Compact (3.1" x 2.6" x 0.8") and Lightweight (2.8 oz)
- ► Standard AAA Alkaline Battery (1800 Hours of Operation)
- ► Digital Display for Integrated Dose or Alternatively Dose Rate
- ► User Selectable Alarm Levels for Both Dose and Dose Rate
- ► Increased Buzzer Volume
- ► Ruggedized Clip Fixing / -4 °F to 122 °F operational, humidity up to 90% RH
- Measurement Range: Dose (0.1 mrem 999 rem) / Dose Rate (0.5 mrem/hr -300 rem/hr)

The ADR-1 Reader Head is designed to read and manage RAD-60 series electronic dosimeters in modern PC environment. The Reader can be used with Dose Control I Dosimetry System as well as with ADR-1/50 Dosimeter Configuration software.

MIRION

TECHNOLOGIES

DOSIMETER CONFIGURATION SOFTWARE

► Dose and Dose Rate reset

Dosimeter configuration set-up



▶ ID, Work code and Memo set-up

Item	Description
1233-218	RAD-60R Personal Alarm Dosimeter
1233-156	ADR-1 Dosimeter Reader. Includes: RS-232 cable and 12V power supply (No Software)
1233-163	ADR-1/50 Dosimeter Configuration Kit for RAD-60. Includes: ADR-1 Reader, ADR-1/50 Dosimeter Configuration Software, RS-232 cable and 12V power supply

DMC 3000 PERSONAL ELECTRONIC DOSIMETER

Our DMC 3000 Electronic Dosimeter represents over 25 years of real-world electronic dosimetry experience, continually refined through customer feedback.

The unique, high contrast and backlit LCD display provides a clear indication of wearer's doe and ambient dose rate for deep dose equivalent. More importantly, multiple methods (audible, visual, and tactile) are utilized to alert the wearer of alarm conditions.

The DMC 3000 provides all of this protection, for over 2500 hours of continuous use, with a single AAA alkaline battery.



KEY FEATURES:

- ► Loud, vibrating and dual ultrabright LED alarm
- ► Highly visible backlit display
- Simple 2-buttons navigation
- Additional modules (Beta, Neutron, telemetry and PRD)
- Superior X-ray and gamma energy response
- Exceeds applicable IEC and ANSI standards
- Excellent immunity to electromagnetic interference
- Designed for ruggedness and durability

ENVIRONMENTAL CHARACTERISTICS:

- ► Temperature range: 14°F to 122°F
- ► Relative humidity: < 90% at 108°F
- ► Storage: -4°F to 160°F
- Shock, vibration and drop resistant (5 feet on concrete)
- ► Waterproof IP67

MEASUREMENT RANGE:

- ▶ Dose: 0.1 mrem to 1000 rem
- ▶ Rate: 0.01 mrem/hr to 2000 rem/hr
- ► Saturation Indication: above 1000 rem or 1000 rem/hr

MECHANICAL CHARACTERISTICS:

- ► Case: Rugged, high impact polycarbonate-ABS
- ▶ Dimensions: 3.4 x 2.3 x 0.8 in max. without clip
- ▶ Weight: 3.1 oz with alkaline battery and clip

ALARM FEATURES: AUDIBLE & TACTILE

- ► Alarming speaker with level of 85 dB at 12 in, frequency < 4800 Hz
- Vibrating alarm
- VISUAL
- ► High efficiency red flash LED on front

Nuclear

Power

▶ 3 top LEDs for Alarming (Red), gamma counting (Green), and Hp (0.07) or Neutron HANDS-FREE DOSIMETER READER - LDM counting (Blue) 320D & LDM 320W

The LDM 320D and LDM 320W readers operate using software packages installed on computer (PC) and communicate with DMC 3000 dosimeter in hands-free data exchange mode.

When used with the DMC User software, it functions as an interface to read and write the internal data of the DMC 3000 dosimeters.





CUSTOMIZE

- Adjustable dose and dose rate alarms
- Adjustable and acknowledgeable dose and dose rate warnings
- ► Configurable visual and audible alarm chirp





& Defense







Homeland Labs and Security Education

Industrial and Manufacturing

Item	Description
153503	DMC 3000 Electronic Dosimeter for Gamma Radiation and X-Rays
150534	LDM 320D Dest Top Reader with USB Connection
150517	LDM 320W Wall Mounted Reader with USB Connection









NDS Products, Inc manufactures nuclear radiation detection instruments. These instruments are used in many fields, such as Industrial Radiography, Health Physics, Nuclear Power Plants, Geology, Medical, Emergency Response and a variety of other areas.

Survey Meter, Rate Alarm and Pencil Type Dosimeter

Item	Description
ND-2000	NDS Products 3 Range (0-1000, 0-100, 0-10 mR/hr) Survey Meter
RA-500	NDS Products 500 mR/hr Audible Rate Alarm
4329	W138, Pencil Type Dosimeter, 0-200 mR



Dosimeter Chargers and Pouches

► 750-6 Piezoelectric Dosimeter Charger can zero a variety of quartz or carbon fiber dosimeters by simply squeezing the lever of the piezoelectric generator. The charger requires absolutely no batteries...ever! By pulling the trigger, a dosimeter is easily placed in or removed from the Charger. The clamping action automatically holds the dosimeter for you. Ideal for using in Field Operations.

909B Dosimeter Charger - Easier charging, viewing, dosimeter protection and improved accuracy... these are the biggest reasons that the 909B Dosimeter Charger is the best value on the market today!

Item	Description
750-6	Pistol Grip Piezoelectric Dosimeter Charger
909B	Battery Powered Dosimeter Charger
SP*001221	Multi-Purpose Poly Holder, Fits Rate Alarms, Pencil Type Dosimeters & other Small Tools
RACASE	NDS Products Black Mesh Rate Alarm/Dosimeter Holder





909B



*SP*001221*



RACASE

DARKROOM PROCESSING AIDS

<u>Safelights</u>

Item	Description
PTP760U	Paterson Dome Safelight, with its 4.5" diameter, is designed to stand on a bench, hang on a wall or suspend from the ceiling.
SP*001535	18' LED Rope Safelight, Red (Lasts up to 50,000 hours); Easy to install; Hardware included
19198	The Swivel Safelight is perfect for direct spotlighting. This wall mounted unit swivels to any position. Easy to install via 2 keyholes, the Swivel Safelight includes a GBX Type filter, light bulb, and a 6' cord with a three prong plug.
SP*001674	24" Fixture and LED Tube Safelight (Lasts up to 50,000 hours)
SP*001675	24" LED Tube Safelight Only (Lasts up to 50,000 hours)









WOLF Developing Hangers (Clip-Type)

Clip-type hangers for tank development of sheet films. Four clips are attached to a stainless steel frame; the upper two are mounted on a bow string to keep the film taut. The interlock design of the clip results in accurate alignment of pin and hole and permits better washing in the clip areas. Larger sized have loop guides to hold the bow spring and top clips in line to maintain proper tension. Hangers hold two film - Made in the USA!

Item	Description
16317	WOLF Industrial Developing Hanger, Two Film, Clip/Tension Type, Stainless Steel Construction, 4.5" x 10"
16317-S	WOLF Industrial Developing Hanger, Two Film, Clip/Tension Type, Stainless Steel Construction, 4.5" x 10" with 3" Spacer
16319	WOLF Industrial Developing Hanger, Two Film, Clip/Tension Type, Stainless Steel Construction, 4.5" x 17"

Developing Reels and Rod

- Developing Reels are made of durable ABS plastic, designed for the developing of 70mm roll film. Each Developing Reel will hold 13 feel of roll film.
- ► Developing Rod is constructed with a 24" x 3/4" PVC pipe to ensure minimum contamination of chemicals; not fancy, but effective.

Item	Description
SP*001309	70mm Developing Reel
90MM-DR	90mm Developing Reel
100MM-DR	100mm Developing Reel
4.5"-DR	4.5" Developing Reel
ROD-PVC	Developing Rod, 24"L x ³ / ₄ " Diameter PVC





Miscellaneous Darkroom Supplies

► The Mini Comparater 7X is a handy and accurate optical measuring instrument composed of a #5 reticle. Compared with conventional magnifiers, the Mini Comparater 7X is smaller, more convenient for carrying and reasonably priced.

► MD-1 is a pocket-sized plastic scale to aid radiographers in the correct size identification of internal gas porosity and rounded indications in welds. Can be used in conjunction with the ASME codes dealing with rounded indications characteristics.

MD-2 is a pocket-sized plastic scale to aid radiographers in the correct size identification of indications in pipe welds with outside diameters greater than or equal to 60.33 mm (2-3/8 in.). Can be used in conjunction with API 1104.

Radiation Dose / Distance Calculator - This is a companion tool to the Radiation Exposure Calculators. This calculator estimates the hazard area associated with isotope radiographic operations. Can be used to assist auditors and radiation safety officers when checking the accuracy of radiation survey reports.

Exposure Calculator - Available in durable plastic, exposure calculators are designed to provide rapid and precise exposure times for gamma radiography of both Cobalt 60 and Iridium 192.

Carestream NDT Image Guide - This guide is designed to help you identify and understand a wide variety of casting and welding defects that appear on images obtained during Non-Destructive Testing (NDT).

Item	Description
SP*001237	14" x 17" Processor Clean-Up Film, 100/Pack
SP*00001770	Mini Comparater 7X with #5 Reticle and Fabric Pouch
MD-1	Model-1 (ASME) Film Image Scale w/certs
MD-2	Model-2 (API 1104) Film Image Scale w/certs
DDC	Radiation Dose/ Distance Calculator
EXPCALC-EN	Carestream Film Exposure Calculator, Iridium 192 (Same as JEM & other brands)
8924177	Carestream NDT Image Guide
300	GRALAB Model 300 Timer
Squeegee	Squeegee, 4.75" Wiper Length
3150SS	Immersion Heater
SP*001326	28" Plastic Stirring Paddle
SP*001072	7 1/4" Floating Thermometer w/ String Cord & F/C Display (30°F-120°F/ 0°C-50°C)

IDT Images

AN OVERVIEW

Carestream











MOBILE DARKROOMS

Lemker & Harris Darkrooms

Building Darkrooms Since 1975

Lemker & Harris is the leading manufacturer of mobile fiberglass RT darkrooms and developing tanks for the NDT service and inspection industry in the USA. We've been a family owned business operating since 1975.

We have three models of darkrooms in our "off the shelf" designs. They are the 6', 8', and 8' Generator. All of these models include a developing tank, front foil, 26 hanger dryer, driver side cabinet, and a cabinet above the developing tanks recessed into the foil. You then have the option of whether or not you want to go with the roof mount RV Style air conditioner, or if you want us to install a standard window unit.

We are here for the long haul and stand behind what we build. Our typical unit usable life is over a decade and with proper care, we see them last even longer.



Item	Description	
CR6 L&H 6' Darkroom w/ Rear Mount AC		
CR8 L&H 8' Darkroom w/ Rear Mount AC (Full bed width without generator compartment)		
CR8G	L&H 8' Generator Darkroom w/ Rear Mount AC (Generator compartment on driver's side)	

Roof Mount AC is an Available \$350 Option

6' Darkroom

This unit is the most popular with pipeline work. Combined with an 8' bed, you have ample storage for anything you may not want to load into a darkroom, but need on the right-of-way.





8' Darkroom

8' Generator Darkroom

This is just like our standard 8' unit, but with the exception of having a convenient storage compartment on the driver's side to store a generator. This unit is versatile as it allows you to have the interior space of an 8' unit with space to keep a generator for those times that there is no supplied power to hook up to.



Our 8' units give the technician the most room inside possible for them to work. They also have the most storage inside of the unit. For plant/shop work, this unit is a go to for many companies.



We will install your new darkroom on your truck at no additional cost, if you pick up at our Houston facility.





Miscellaneous Darkroom Products

L&H DEVELOPING TANKS

Our Developing Tanks are Widely Considered to be the Industry Standard

The standard design is (5) 10 gallon compartments, which we refer to as the "5 Even". This has been the design that 95%+ of companies have preferred for at least the past 15 years, but we are also happy to provide a developing tank built to your specifications to fit your needs.

Starting in late 2019, we replaced the welded stainless pipe/stud that was used to secure the lid with a serviceable stainless forged receiver with a removable stud that allows you to replace the threaded stud at any point if needed.

It is one of the many ways that we are constantly pushing ourselves to see if there is a better way for us to provide an even better product for our customers.







*SP*001764*

Item	Description		
SP*001764	L&H Developing Tank w/ 5 Even (10 Gallon) Compartments and PVC Plumbing		
SP*001499	SP*001499 21" Wide x 3/4" Thick x 1" Long Developing Tank Replacement Seal with Peel off Adhesive (Specify Length When Ordering)		
SP*001053	SP*001053 Replacement Low-Profile Darkroom Heater/Blower		
SP*001581	Source Overpack Box with Mounting Bracket Fits all OEM's Gamma Ray Projectors (ID: 16"L x 10"W x 10.5"H)		







*SP*00	1499*	*SP*001053*	*SP*001581*		
DARKROOM TRUCK STEP Black Truck Steps are Available Upon Request Rugged Steel Construction, Easy in and out of the truck. Slides into receiver hitch and lifts up during travel and down for use. Helps reduce or eliminate any possible falling accidents.					
Item		Description			
SP*001235	Darkroom Truck Step without Hand Rail, Yellow				
SP*001236	Darkroom Truck Step with Hand Rail, Yellow				





*SP*001235*







AUTOMATIC FILM PROCESSORS Corestream

INDUSTREX PROCESSORS

Quality Images, Efficient Output, Energy and Water Savings

INDUSTREX M37 Plus for space-saving design and mid-volume output or the INDUSTREX M43iC for high-volume output



M37 Plus Film Processor

The tabletop INDUSTREX M37 PLUS is ideal for automatic processing in mid-volume facilities. While compact, it offers the output you need and the excellent image quality and reliability you demand.

The new INDUSTREX M37 Plus film processor incorporates all the experience and features you've come to expect from the INDUSTREX line of products for NDT applications. The processor ensures totally automatic film handling and supports nine programmable-controlled processing channels that allows for flexibility in your day-to-day NDT film production.

Features Include:

- Ease of operation with nine programmable-controlled processing channels
- 17" processing width
- Capacity of 33 sheets/hour (14" x 17") in recommended processing cycle
- Intermediate rinse rack bath system
- Automatic replenishment system for developer and fixer
- Automatic anti-oxidation and anti-crystallization cycles
- Enhanced cold water cooling system
- Unit pre-configured with connection fittings to simplify installation of optional external chiller

Standard Accessories Include:

- Two 8 gallon replenishment storage tanks
- Light tight feed-tray cover
- Table stand
- Re-locatable controller unit for operator convenience
- Spare part kit

M43iC Film Processor

Designed to meet the needs of high-volume Non-Destructive Testing customers, the INDUSTREX M43iC provides multiple processing cycles and dry-to-dry processing in as little as five minutes.

This processor also comes standard with an integrated closed-loop chiller to ensure consistent temperature in hot environments or when water supply is not temperature controlled to further enhance capability and image quality in harsh NDT environments.

Features Include:

• Up to nine programmable-controlled processing channels for maintaining preferred settings such as processing speed, developer temperature, fixer temperature, dryer temperature and replenishment rates

- \bullet High processing capacity of up to 58 sheets/hour (14" x 17") in the recommended processing cycle for improved productivity
- An intermediate fix rinse system that enhances process uniformity to both sides of the film
- Feed-tray cover that allows for room light operation

• Integrated chiller unit that maintains developer temperature uniformity in hot environments

• Low level monitoring of all tank solutions

Standard Accessories Include:

- Replenishment storage tanks
- Light tight feed-tray cover
- Re-locatable controller unit for operator convenience
- Spare part kit









COMPUTERIZED RADIOGRAPHY (CR)





HPX-PRO Portable Digital CR System

The HPX-*PRO* CR system is built for high image quality, improved productivity and extreme portability. This nextgeneration system is lightweight (35 lbs.), portable CR imaging solution that is quick to deploy and rapidly produces high-quality images utilizing a new single-pass scan/erase protocol. The HPX-*PRO's* software incorporates a new user interface designed tp get you set-up and imaging fast, with batch mode

capacity to keep in pace with extreme process conditions like pipeline imaging. The new software tools also provide quick image analysis and customized reporting for generating unique customer reports in seconds. From hardware to software, to deep in the field and instant image sharing, the HPX-*PRO* is a complete system, designed to improve productivity.

HPX-PRO




Carestream spent a considerable amount of time working in the field with mobile x-ray technicians to help improve workflow. The HPX-PRO is only one piece of the total imaging solution. From shot time to final reporting, everything had room for improvement. And we met the NDT industries challange.

• Weighing in at just 35 lbs. and with a less than 12" width can be handheld with ease.

• Can be operated by using a common 24v power tool battery (4 hour standby/ 45 minutes active scanning and erasing per battery)

• INDUSTREX Custom Reporting tool will help you finish your day a lot sooner, and with more productivity. Once you have all your shots done, with the clikck of a button you can create customer reports in a matter of seconds.

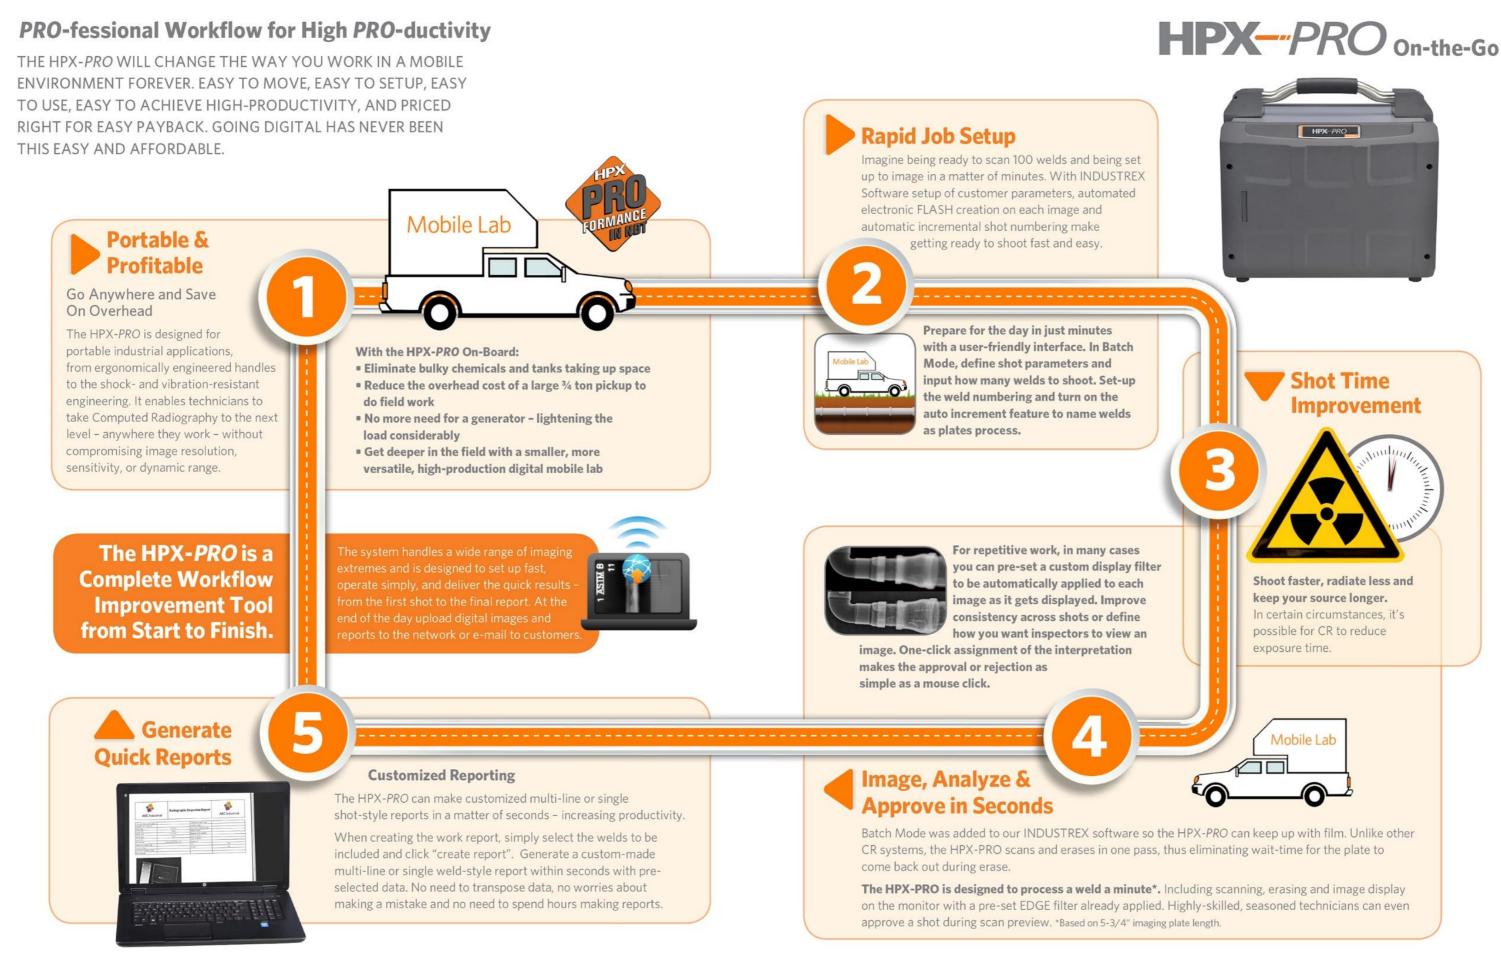





HPX-1 Plus Digital CR System

The HPX-1 Plus offers many improvements. Improved optics for better imaging, up to 30% faster throughput on long saturated plates (very high exposure), an improved imaging plate transport system to protect imaging plates, higher mechanical reliability and a more user-friendly DICONDE compliant software for the best experience in digital imaging.

The HPX-1 Plus is a full width CR reader capable of running laboratory a extra long imaging plates. The system has a wide dynamic range with high sensitivity, making it ideal for almost any type of imaging application. Whether you're using a gamma in the field. or X-ray source, the HPX-1 Plus' high sensitivity can help reduce shot time. It shows exceptional performance in weld

applications, delivering weld-quality images consistently and dependably.

Carestream's award-winning HPX family of digital products have improved field reliability and enhanced the capabilities in the NDT marketplace. Long plate and multi-plate scanning combined with SmartErase boosts output productivity so you can get more done in a day than ever before. Our exclusive positive pressure filtered air system keeps dust and dirt out for cleaner images in both the laboratory and in remote operations. With a shock and vibration resistant design your team can image in the harshest of environments brining a new level of confidence to digital imaging in the field.



Ultra High Image Quality

Pixel Pitch: 25µm, 35µm, 50µm and 100µm operation **Spatial Resolution**: 50 microns or better (12 lp/mm) **Laser Spot Size:** 20µm (measured at 85% of peak)



Positive Pressure Fans for Dirty NDT Environments

Let's face it, NDT environments can be dirty. Drum and flat bed style scanners collect contaminants on the surface where they can be transported into the system or into the optical path and be be imaged. HPX-1 Plus is the only CR system on the market that has positive airflow to keep contaminants outside the unit.



HPX-1 Plus





Dual Air Filters (including HEPA)

Clean air is critical to keeping the equipment cool and the imaging areas clean. The HPX- 1 Plus is the only system outfitted with dual filters to make sure the environment is kept outside.



Image Plate Flexibility

HPX systems are one of the most flexible CR systems on the market capable of handling raw imaging plates, multiple plates at one time, custom cut sizes (with Plate Carrier), hard cassettes and long Plates (up to 60") without special feed guides.



Plate Transportation System

The HPX-1 Plus plate transport system has always minimized contact with the imaging plate. Unlike magnetic plate drive systems that require uniquely designed imaging plates (which can be costly) or drum systems that advise using plate protective covers to avoid plate damage, the HPX-1 Plus run plates phosphor side up with a proven transport system that won't damage your imaging plates.



Improved Imaging

HPX-1 Plus' improved PMT's improve its sensitivity and reduce unwanted artifacts. CR systems often also make it possible to lower your exposure while still achieving the required sensitivity. Our adjustable PMT and Laser Power allow you fine tune every image for optimum capture every time.



Powerful Software

HPX-1 Plus is operated using our powerful INDUSTREX software that includes a host of features for measurement, custom designed EDGE Image Filters, full DICONDE compliance, and many other tools designed specifically for NDT.









CR IMAGING PLATES



The Carestream INDUSTREX improved Flex GP, HR and XL Blue Digital Imaging Plates are:

- Flexible Wrap around most shapes
- Sharp Better resolution than high-speed films, and a suitable replacement for many applications
- Available in Multiple Sizes To cover a wide range of applications
- Versatile Use in a rigid or flexible cassette
- Efficient Phosphor plates can be erased and reused thousands of times, require less exposure than film, and provide faster image access
- Certified All plates meet requirements for the highest system class per EN 14784-1 and ASTM E 2446



General Purpose (GP)

The general purpose imaging plate is ideal for shots where fine detail is not required. Good for profile shots. It requires the lowest dose, which helps productivity. This plate is best utilized for high energy X-ray or Gamma applications. Typical industries are security, military, and castings.

Item	Size
1008564	14" x 17"

High Resolution (HR)

The high resolution imaging plate is best for applications where the best imaging quality is required. This plate produces weld quality images, and has the best detectability (contrast sensitivity) in the industry. This plate can be used for general X-ray, and Iridium or Selenium applications. Typical industries are oil and gas and aerospace.

Item	Size
8802324	70mm x 10"
8348641	70mm x 17"
8094922	3.5" x 10"
1904267	3.5" x 17"
1680214	4.5" x 10"
1466945	4.5" x 17"
1848688	7" x 17"
1775576	8" × 10"
1174424	10" x 12"
8360521	14" x 17"

HR-PRO (High Resolution - Laminated)

The HR-PRO Plate is designed with improved physical properties for use in HPX-PRO Readers in tough handling environments.

Item	Size
1752955	70mm x 10"
1752971	70mm x 17"
1753110	3.5" x 10"
1753136	3.5" x 17"
1753235	4.5" x 10"
1753243	4.5" x 17"
1753292	6" x 17"

Imaging Plate Cleaner & Wipes

Item	Description	
8607020	Carestream X-OMAT Antistatic Cleaning Solution for Intensifying Screens, 8oz Bottle	
33390 KIMTECH Pure 100% Polypropylene W4 Dry Wipers 9" x 9", Pack of 100		







DIRECT RADIOGRAPHY (DR)



HPX-DR Non-Glass DDA Detector

NEW NON-GLASS DR!

Carestream NDT once again introduces breakthrough technology for NDT field imaging with our new non-glass DR detector. The new HPX-DR Non-Glass detector design incorporates a tougher plastic material instead of glass for maximum durability against the rigors of NDT field work.

The HPX-DR detector is unique in design – coming standard with a rugged, weatherproof enclosure perfect for remote field work. Unlike other panels that claim a weatherproof design when used inside their protective carrying case, this detector has an IP57 enclosure rating without the protective case! With the HPX-DR you can stop wrapping your DDA panel in bags and keep working in rain, snow, mud or whatever Mother Nature throws at you!

• **REDUCED EXPOSURE** - DDA panels are highly sensitive. Combine this with the ability to do frame averaging and you will likely be able to reduce your exposure time and still capture the sensitivity needed for your critical inspection task.

• **FASTER** - Uses no disposable media in the process, eliminating cassette loading and unloading time, developing, processing and reloading for the next shot. The HPX-DR detector offers quick start up and calibration, and rapid image display after acquisition. Produce high quality digital images in seconds for immediate analysis.

• **EASIER** - The HPX-DR detector is lightweight and compact with an all-weather design that is simple to operate. In the lab, it can be operated on a powered tether and in the field it can run 100% on battery. With the 'hot swap' feature the panel can remain on when changing batteries, increasing uptime.

• **WIRELESS** - The HPX-DR detector can operate completely wireless giving the user full freedom of movement and minimizing set-up time on site. This is especially helpful for rope access teams looking for minimal weight, high sensitivity and a powerful wireless connection.

Protective cover for lab use increases detector load limit up to 340 kg. (750 lbs.).






NEW NON-GLASS DR!

- 139µ Pixel Pitch
- 139µ Spatial Resolution
- GOS DRX Standard Scintillator
- Portable at 12.5 lbs (5.7 Kg)

The HPX-DR Non-Glass detector virtually

- Heavy Duty Shielding
- Exposure Range up to 3 MeV

HIGH RESOLUTION OUTPUT IN THE LAB OR IN THE FIELD

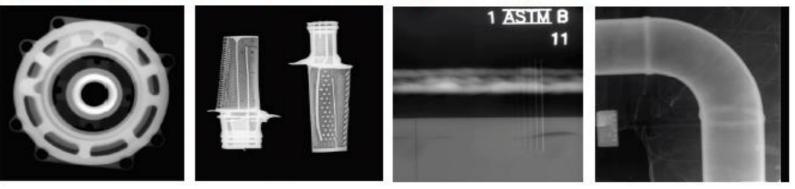

Mount kit with pipe cleats to reduce stress on the detector for pipeline imaging.













X-RAY SYSTEMS & TUBES



MANUFACTURER OF LIGHTWEIGHT, PORTABLE X-RAY MACHINES

Portable Pulsed X-Ray Generators

Golden Engineering X-ray generators are based on Pulsed X-ray technology. Pulsed X-rays generate a high intensity X-ray burst (pulse) in a very short period of time (10 to 50 nanoseconds depending on the model). The operator varies the overall dose of each exposure by changing the pulse setting. The pulse rate varies from 10 pulses per second to 25 pulses per second depending on the model. The generators can fire up to 200 pulses before a four-minute rest period.

Pulsed X-ray technology has inherent advantages for field operation compared to conventional constant potential X-ray machines or radioactive sources.

Golden X-ray generators are compatible with Conventional Radiographic Film, Computerized Radiography (CR) or Digital Radiography (DR) inspection systems. This provides users with the flexibility to develop a complete radiographic system best suited to their individual needs.

KEY BENEFITS:


1220230

Convenience - Minimal disruption to normal on-going operations

► Portability - Applications often require X-ray be transported and used in remote locations with no access to power

► Safety - May require inspections within a relatively close proximity to personnel. Golden Engineering Pulsed X-ray generators contain no radioactive material. Minimal leakage to side and rear of the machine and minimal exposure time reduces standoff distance around the machine and reduces the possibility of accidental exposure.

► Durability - Rugged design can be used in a variety of environmental conditions and temperatures between -10 to 120 Degrees F°

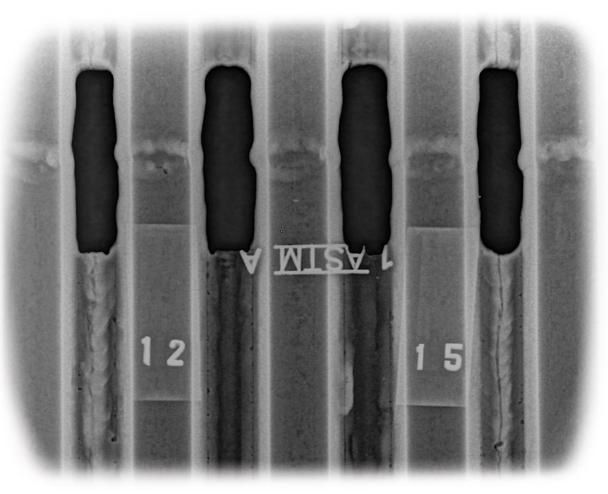

Model	Weight	kV	Penetration in Steel	Avg. Dose mR/Pulse*	Pulse Width	Pulse Rate per Second	Rear Standoff Distance
XR200	11 lbs.	150	0.50"	2.6	50 ns	10	10 Feet
XRS3	11.8 lbs.	270	1.00"	2.6	25 ns	15	10 Feet

XRS4	18.3 lbs.	370	1.75"	4.5 - 7	10 ns	9	20 Feet
**3 puls	es per count	t	From source				CAUTION A RADIATION THIS EQUIPMENT PRODUCES RADIATION WHEN ENERGIZED
	.50 kV, single-pack nel for radiograph			y military, law enforcem	ent and		
Item		Model			Descripto	n	

XR200 X-Ray (80 Char) 20V Kit 110V - Includes: XR200 Generator, 2 - 20V DeWalt Batteries, 110V Charger, Cable & Case

XRS3 X-RAY GENERATOR

The XRS-3 is a 270 kV, battery powered, pulsed X-ray generator. The XRS-3 is the most versatile unit because it provides exceptional penetrating ability, up to 1" of steel.

The compact design features a battery pack, sturdy glass tube, high voltage head and electronic controls in a single package that weighs less than 13 pounds.

It can withstand extreme environments including arctic and desert conditions.

XR200



Item	Model	Descripton
1320230	XRS3	XRS3 X-Ray (80 Char) 20V Kit 110V - Includes: XRS3 Generator, 2 - 20V DeWalt Batteries, 110V Charger, Cable & Case

XRS4 X-RAY GENERATOR

The XRS4 is a 370 kV, battery powered, pulsed X-ray generator.

Two features unique to the XRS-4 include a robust aluminum housing, and a bellows located in the handle. Both of these features improve the durability and longevity of the generator.

Weighing close to 19 pounds the XRS4 is significantly larger and heavier than other Golden Engineering generators. However, a 370 kV generator that penetrates more than 1.5 inches of steel and weighs less than 25 pounds is still considered extremely portable by industry standards.



Item	Model	Descripton
1410230	XRS4	XRS4 X-Ray (80 Char) 20V Kit 110V - Includes: XRS4 Generator, 2 - 20V DeWalt Batteries, 110V Charger, Cable & Case







COMET

Technology with Passion



Portable X-ray generators from Comet are light, of high-quality and have been designed for flexible field inspection, in all types of industrial environments. We build our products with years of experience, skilled engineers and components of the highest quality. The combination of our new PXS EVO tube heads and CONTROL EVO is the key to a significantly improved workflow.

PXS EVO DIRECTIONAL

The combination of our new PXS EVO tube heads and CONTROL EVO is the key to a significantly improved workflow. Because the units are lighter, they are faster to handle and reposition.

PXS EVO PANORAMIC

PXS EVO Series

BUILT TO LAST

Designed and built in Denmark; the PXS EVO systems are comprised of the best components and assembled with the utmost care – making them reliable, long lasting and a sound investment. They are fitted with a high quality metal ceramic X-ray tube and the robust composite casing now protects all vital parts even better. The systems meet the IP65 standard, making them fully operational in dusty and wet conditions.

SMARTER WORKFLOW

The ergonomic design and the low weight makes the PXS EVO systems easy to handle and re-position. A broad temperature range from -4°F to 122°F makes the EVO systems reliable and ensures smooth operation even in extreme environments. The intuitive interface allows for a smarter workflow.

HIGH PERFORMANCE

Built to meet the highest international safety standards, each unit is individually tested and measured for safety and accuracy. The PXS EVO systems features focal spots from 1.0 mm to 3.0 mm and ranges from 750 W to 900 W constant potential X-ray power ensuring high performance, shorter exposure times and high resolution results.

EVO CONTROL

The ergonomic design and shoulder strap makes the CONTROL EVO easy to handle and re-position. All information is clearly displayed on the 6.5" LCD color screen. The unit features an exposure calculator and has an intuitive interface with a wide range of advanced functionalities – equalling a smarter workflow.

	alculate exposure va	lues	
	Tube	EVO 225D	✓ Auto-calculate
	Material	Iron (Fe)	
	Film manufacturer		
	Film type	D7 (C5)	
	FFD	70 cm	[30 - 200]
	Density	2.0	[1.0 - 3.5]
000	Thickness	50 mm	
COMET	Voltage	225 kV	[40 - 225]
Technology with Passion	Current	4.0 mA	Factor 1.00
	Time	14:02 min.	Save as profile
	Save as p	orofile enter	Close

The panoramic $38^{\circ} \times 360^{\circ}$ X-ray beam, and the combination of up to 300 kV and 750 W, makes the PXS EVO a perfect choice for weld seem inspection of cylindrical vessels and pipes.

The re-engineered three-part lead belt is easy to mount and has as standard a 38° x 60° slit option allowing for directional use if required.



EXPOSURE CALCULATOR

The advanced built-in exposure calculator ensures fast exposure calculations and uniform results. It can calculate the minimum required film focus distance optimising the exposure time. It accommodates the use of a wide range of films, materials and settings.

PXS EVO WATER-COOLED

Special inspection jobs, may require special solutions. The water-cooled PXS EVO directional X-ray systems, offer 24/7 operation in ambient temperatures up to 86°F.

All directional PXS EVO tube heads are available in a hybrid cooled version, based on a water-cooled anode combined with an air cooled cathode end. The EVO series directional tube heads are available in 160-300 kV versions, all available with 1.0 mm small focal spot and the 225-300 kV variants also with 3.0 mm focal spot, in order to cover a broad range of applications.

Model	Height	Weight	Focal Spot Size	kV	mA	Beam Angle	Penetration in Steel
160D	24"	48 lbs.	1.0 mm	20 - 160 kV	0.5 - 7.0 mA	40° x 60°	1.30"
200D	25"	50 lbs.	1.0 mm	30 - 200 kV	0.5 - 6.0 mA	40° x 60°	1.85"
200P	26"	62 lbs.	0.4 x 4.0 mm	30 - 200 KV	0.5 - 0.0 MA	38° x 360°	1.59"
225D	28"	57 lbs.	3.0 mm	40 - 225 kV	0.5 - 5.5 mA	40° x 60°	
225DS	20	57 105.	1.0 mm	TU - 223 KV	0.5 - 3.5 IIIA	30° x 60°	2.15"
225D/1200	32"	62 lbs.	3.0 mm	25 - 225 kV	0.5 - 10 mA	40° x 60°	
300D	30.5"	64 lbs.	3.0 mm			40° x 60°	2.75"
300DS	50.5	01 105.	1.0 mm	50 - 300 kV	0.5 - 4.5 mA	30° x 60°	2.75
300P	32"	80 lbs.	0.5 x 5.5 mm			38° x 360°	2.60"

*Penetration Calculations are based upon 27.5" FFD / AA400-Type Film + Pb / Density = 2.0







COMET

Conventional X-Ray Systems

COMET Industrial X-Ray develops and manufactures metal/ceramic X-ray sources, and the related components, for the non-destructive examination of materials in the automotive, aviation pipeline and steel industries, and also for the stationary and mobile inspection of baggage and cargo at airports and borders.

COMET constantly works to improve and simplify X-ray technology and is a trusted engineering partner to well-known companies. COMET 's innovative technology has become the basis for an unprecedented combination of performance and compactness that offers customers a new realm of possibilities in the develop of their end systems.





INDUSTRIAL X-RAY TUBES

Comet unipolar and bipolar X-ray tubes are available for different industrial applications. The product range features metal ceramic tubes and ceramic tubes, from the smallest portable unit up to 600kV fixed systems.

UNIPOLAR TUBES

Comet's unipolar tubes are used in demanding industrial applications. The top areas are non-destructive testing, food inspection and thickness gauging.

BIPOLAR TUBES

The advantages of Comet bipolar tubes are high power, small dimensions, low weight, and rugged design.

HIGH VOLTAGE X-RAY GENERATORS

Comet Industrial X-ray generators are built for remarkably stable performance. Our generators are designed to meet the demanding requirements of industrial X-ray applications. They are the ideal workhorse for both film and real-time applications. All generators are factory-configured and pretested.

iVARIO GENERATORS

Our latest future-orientated iVario generators feature an even more flexible, modular design, and have been engineered to serve the tube in the best possible way.



COMET ACCESSORIES

What Comet provides next to main business: Besides tubes and generators, we are pleased to offer all of the necessary components for a customized X-Ray module.

INDUSTRIAL COOLERS / CHILLERS

A top-quality cooler is vital to the safe and reliable operation of your X-ray system. We supply a variety of coolers ideally balanced to work with Comet X-ray tubes.

HIGH-VOLTAGE SPRING LOADED CABLES

Comet supplies high-voltage cables in a variety of rated voltages and lengths. The advantages of the spring-loaded cable are higher up-time, lower installation costs, lower maintenance costs, and reduction in cable failures. The replacement of the elastomeric spring with a mechanical spring ensures constant pressure in the receptacle with a pressure indicator, ease of installation, and a reliable supply of power.

COMET CONTROLLER

The iVario generator can be controlled by the 19" external controller, which communication is based on the newly developed Ethernet Protocol. It comprises touchscreen panel, key switch, buttons and lamps as well as rotary knob. There can be an emergency stop incorporated into the controller.

The generator contains the tube library, with optimized tube profiles (ramp-up and rampdown profiles) that guarantee the longest possible lifespan for the tube and the best module (tube-generator) integration level.

Visualized tube diagrams with power levels allow to actively manage the tube lifetime. The intelligent, fully customizable arc-handling system reacts to the frequency of arcs this protects the generator, maximizes the tube's lifespan and maximizes potential uptime. In addition, the accurate filament control prevents the filament current overstress.

XRP GENERATORS

COMET Industrial X-ray generators are perfectly matched for highly stable performance. The high-frequency XRP generator has been designed to meet the tough requirements of modern industrial X-ray applications. The XRP generator is the ideal workhorse for both radiographic and real-time applications.









MAGNETIC PARTICLE MPI CONSUMABLES



<complex-block>

Wet Fluorescent Magnetic Particles

Item	Product	Container Size	Particle Suspension Vehicle
01-0130-71	14A	1 lb. Jar	Petroleum Distillate (Oil), Water
01-0130-75	14A	20 lb. Pail	Felloleum Distiliate (Oli), Water
01-1725-38	14A Aqua-Glo	Aerosol, Case of 12	Water
01-9130-41	14A Redi-Bath	27 oz. Bottles, Case of 6	Water
01-9130-35	14A Keul-Daul	1 Gallon, Case of 4	Water
01-0145-78		Aerosol, Case of 12	Petroleum Distillate (Oil)
01-0145-40	14AM	5 Gallon Pail	Felloleum Distiliate (Oli)
01-0179-71		1 lb. Jar	
01-0179-70	20B	15 lb. Pail	Water
01-0179-84		30 lb. Pail	
01-0191-73	MG-410	2 lb. Jar, Case of 6	Petroleum Distillate (Oil), Water
01-0196-73	MG-450A	2 lb. Jar, Case of 6	Water

Petroleum Base Suspension Vehicle

This petroleum distillate carrier oil provides excellent particle mobility, good suspension stability and enhanced corrosion protection for reliable, spec-compliant mag particle inspections

Item	Product	Container Size
01-2122-40		5 Gallon Pail
01-2122-30	Carrier II	20 Gallon Drum
01-2122-45		55 Gallon Drum

Water Conditioners and Additives



Item	Product	Description	Container Size
01-2190-40	AX-52	Water-Soluble Corrosion Inhibitor	5 Gallon Pail
01-2148-63	WA-2B	Water Conditioner	5 lb. Pail
01-9410-20	ZAF-2	Non-Silicone Antifoam	1 Gallon Jug





White Contrast Paint

A bright white, opaque NDT contrast paint, WCP-2 provides a high contrast background to improve probability of detection and sensitivity during visible magnetic particle inspections

Item	Product	Container Size
01-2250-78	WCP-2	Aerosol, Case of 12

Wet Visible Magnetic Particles

2	Item	Product	Container Size	Particle Suspension Vehicle
	01-1116-81	7C Black	25 lb. Pail	Petroleum Distillate (Oil), Water
	01-1580-78	7HF	Aerosol, Case of 12	Petroleum Distillate (Oil)

Dry Visible Magnetic Particles

7C BLACK

MAGNAVIS THF AEROSOL

> Part No. 01-1580-77 et Weight 300 g / 10.5 0 MAGNAFU

Item	Product	Container Size
01-1716-69	#1 Crov	10 lb. Pail
01-1716-87	#1 Gray	45 lb. Pail
01-1732-69	#2 Yellow	10 lb. Pail
01-1732-87	#2 Tellow	45 lb. Pail
01-1780-69	0A Dod	10 lb. Pail
01-1780-87	8A Red	45 lb. Pail











Magnetic Particle Inspection Materials

Wet Fluorescent Magnetic Particles

ltem	Product	Container Size	Particle Suspension Vehicle
FG-3125	Mi-Glow 834	2 lb. Jar	Water
FG-3126	WII-GIUW 034	30 lb. Pail	Valei
FG-3231	Mi-Glow 218X	2 lb. Jar	Water
FG-3238	WII-GIOW 210X	30 lb. Pail	valei
FG-3321	Mi-Glow 418	2 lb. Jar	Water
FG-3320	WII-GIOW 418	30 lb. Pail	valei
FG-3590	CircleSafe 778A	Aerosol, Case of 12	Water
FG-3571	Mi-Glow 778	Case of 4-1 Quart	Water
FG-3100	Mi-Glow 800	1 lb. Jar	Oil
FG-3102		12 lb. Pail	UI
FG-3130	CircleSafe 800A	Aerosol, Case of 12	Oil
FG-3143	Mi-Glow 800L	5 Gallon Pail	Oil
FG-3162	Mi-Glow 920	2 lb. Jar	Oil





Odorless Inspection Oils

A high flashpoint, refined petroleum distillate specifically designed for use in magnetic particle inspection with its high clarity, low fluorescence and no odor characteristics



ltem	Product	Container Size
FG-3883	CircleSol M	5 Gallon
FG-3880		55 Gallon





Water Conditioners, Additives & Wetting Agents

ltem	Product	Container Size
FG-2950	Anti-Foam 3	Case of 4-1 Quart
FG-3851	Cleaner 500	1 Gallon
FG-3510	Corrosion Inhibitor 7	Case of 4-1 Quart
FG-3515	Corrosion minipitor /	55 Gallon Drum
FG-2210	Wetting Agent 34	2 lb. Jar
FG-2211	Wetting Agent 34	30 lb. Pail
FG-3501	Motting Agent 771	Case of 4-1 Quart
FG-3506	Wetting Agent 771	55 Gallon Drum

Wet Fluorescent & Visible (Dual) Red Magnetic Particles Particle Suspension Vehicle Container Size Item Product 2 lb. Jar cle Systems. FG-3661 Mi-Glow 634 Water Circle Sustems 30 lb. Pail FG-3662 2 lb. Jar FG-2991 Oil Mi-Glow 601 Circle Systems, Inc. 12 lb. Pail FG-2992 Mi-Glow® 634 FG-3630 CircleSafe 850A Aerosol, Case of 12 Water P/N: FG-3661 Contents: 2 lbs. Batch: 20334 DOM: 14-AUG-1









Innovators in the Manufacturing of Magnetic Particle Inspection Materials

Wet Visible (Black) Magnetic Particles

ltem	Product	Container Size	Particle Suspension Vehicle
FG-2431	Mi-Glow 106	<mark>2 l</mark> b. Jar	Oil
FG-2438		30 lb. Pail	OII
FG-3609	CircleSafe 820AX	Aerosol, Case of 12	Oil
FG-3600	CircleSafe 820A	Aerosol, Case of 12	Water





Mi-Glow Underwater 1 is red particles pre-mixed with a powdered Wetting Agent for use in underwater inspection. The particles are used with visible light, black light and blue light. Designed to be used for a variety of underwater inspections.

Underwater Magnetic Powdered Particles

	-		
ltem	Product	Container Size	Particle Suspension Vehicle
FG-2701	Mi-Glow	2 lb. Jar	Water
FG-2703	Underwater 1	25 lb. Pail	Water
FG-2771	Mi-Glow	2 lb. Jar	Water
FG-2773	Underwater 528	25 lb. Pail	vvalei



White Contrast Paint

Specially formulated, fast drying white contrast paint, used to create a consistent background on the component surface in a visible magnetic particle inspection

Item	Product	Container Size
FG-3740	Mi-Glow WCP	Aerosol, Case of 12





Dry Visible Magnetic Particle Powder

ltem	Product	Container Size
FG-2551	Sir-Chem Dry Powder 61	10 lb. Jar
FG-2555	Gray	50 lb. Pail
FG-2571	Sir-Chem Dry Powder 63	10 lb. Jar
FG-2575	Red	50 lb. Pail
FG-2621	Sir-Chem Dry Powder 66	10 lb. Jar
FG-2625	Yellow	50 lb. Pail
FG-2631	Sir-Chem Dry Powder 68	10 lb. Jar
FG-2635	Blue	50 lb. Pail

Dry Fluorescent & Visible (Dual) Magnetic Particle Powder

Item	Product	Container Size
FG-2601	Sir-Chem Dry Powder 73	10 lb. Jar
FG-2605	Red	50 lb. Pail
FG-2641	Sir-Chem Dry Powder 75	10 lb. Jar
FG-2645	Green	50 lb. Pail













Wet Fluorescent Magnetic Particles

Item	Product	Container Size	Particle Suspension Vehicle
M-MPI-1400-bs12		Case, 12 Bath Shots	
M-MPI-1400-1	MPI-1400	1 lb. Jar	Oil
M-MPI-100-12		12 lb. Pail	
M-MPI-1400B-16	MDI 4400D	Aerosol, Case of 12	Oil.
M-MPI-1400B-5	MPI-1400B	5 Gallon Pail	Oil





Petroleum Bath Vehicle

MPI-Carrier Fluid C2 is a specialty petroleum based magnetic particle bath vehicle designed for high sensitivity fluorescent magnetic particle suspension

Item	Product	Container Size
M-MPI-FluidC2-05	MPI Eluid C2	5 Gallon Pail
M-MPI-FluidC2-55	MPI-Fluid C2	55 Gallon Drum

Wet Visible (Black) Magnetic Particles

Item	Product	Container Size	Particle Suspension Vehicle
M-MPI-80P-4		4.4 lb. Jar	Oil
M-MPI-80P-10	MPI-80P	10 lb. Pail	
M-MPI-80-16	MDL00	Aerosol, Case of 12	Oil
	MPI-80	5 Collon Dail	





5 Gallon Pall



White Contrast Paint

Item	Product	Container Size
M-WCP-81-16		Aerosol, Case of 12
M-WCP-81-1	WCP-81	1 Gallon Pail
M-WCP-81-5		5 Gallon Pail

Dry Visible Magnetic Particle Powder

Dry Visible Magnetic Particle Powder			MPI-866 Market and a second an	
ltem	Product	Temp. Range	Container Size	A set of the address
M-MPI-86B-6	MPI-86B		6.6 lb. Jar	
M-MPI-86B-11	Dark Blue	Up to 800° F	11 lb. Pail	
M-MPI-86B-50	Dark Dide		50 lb. Pail	
M-MPI-86G-6	MPI-86G		6.6 lb. Jar	
M-MPI-86G-11	Gray	Up to 800° F	11 lb. Pail	
M-MPI-86G-50			50 lb. Pail	
M-MPI-86R-6	MPI-86R		6.6 lb. Jar	
M-MPI-86R-11	Red	Up to 250° F	11 lb. Pail	
M-MPI-86R-50			50 lb. Pail	
M-MPI-86Y-6	MPI-86Y		6.6 lb. Jar	
M-MPI-86Y-11	V-II	Up to 800° F	11 lb. Pail	
M-MPI-86Y-50	Yellow		50 lb. Pail	



Met-L-Chek

et-L-Che











Wet Fluorescent Magnetic Particles

ltem	Product	Container Size	Particle Suspension Vehicle
GW-1	Glo-netic Powder Concentrate	1 lb. Jar	Oil or Water
GLO-NETIC-16		Aerosol, Case of 9	
GLO-NETIC-1	Glo-netic Premix	1 Gallon Pail	Oil
GLO-NETIC-5		2 Gallon Pail	





Contrast Paint

CP-1 Provides a High Contrast Strippable Background Coating.

CP-2 Provides a High Contrast Non Strippable Background Coating.

<u> </u>	11	5
ltem	Product	Container Size
CP-1-16		Aerosol, Case of 9
CP-1-1	CP-1	1 Gallon Pail
CP-1-5		5 Gallon Pail
CP-2-16		Aerosol, Case of 9
CP-2-1	CP-2	1 Gallon Pail
CP-2-5		5 Gallon Pail



Wet Visible (Black) Magnetic Particles Item Product Container Size Particle Suspension Vehicle BLACK-OXIDE-16 BLACK-OXIDE NO. 1 Aerosol, Case of 9 Oil





Magnetic Particle Fluid

ltem	Product	Container Size
MPF-5	MDE	5 Gallon Pail
MPF-55	MPF	55 Gallon Drum









MPI CONSUMABLE AIDS MATERIAL ACCESSORIES

Applicators & Centrifuge Tubes

Magnaflux Centrifuge Tubes are individually Calibrated to monitor the precise concentration of magnetic particles in suspensions made with Fluorescent and Visible magneticle particles as per ASTM E709, ASTM E1444 or ASME Section V.

► Type 2000 Magnetic Stripe Card is used for instantly evaluating the performance of the fluorescent wet-method bath as per ASTM E-709 & ASTM E-3024. This card can be used to quantitatively evaluate the performance of the fluorescent materials by displaying the number of indications that can be observed after the material has been applied to the stripe.

Item	Description
PB-1	Magnetic Powder Blower provides reliable and controlled application of magnetic inspection powder to areas previously inaccessible
RB-4	Green Rubber Powder Applicator
RB-1	Powder Removal Bulb, Blue
M2400B	SureShot Model M 24 oz. Capacity Black Anodized Aluminum Sprayer w/ Nozzle #602, Adjustable from Extra Fine Mist to Pin Stream
B8100PL	Atomizer Sprayer (Model B) 16 oz. Capacity Electroless Nickel Plated Aluminum Sprayer with Plastic Top
B8100CB	Atomizer Sprayer (Model B) 16 oz. Capacity Electroless Nickel Plated Aluminum Sprayer with Chrome Plated Brass Top
2800	Type 2000 Magnetic Stripe Card
SP*001682	Centrifuge Tube for Fluorescent Magnetic Particles, 0 - 1.0 ml in 0.05 graduations (Certified)
SP*001683	Centrifuge Tube for Visible Magnetic Particles, 0 - 1.5 ml in 0.10 graduations (Certified)
SP*001684	Centrifuge Tube Stand



PARKER RESEARCH/ MAGNAFLUX YOKES

Item	Description
B-100	Parker AC Contour Probe, 6.5 lbs.
B-200	Parker AC Contour Probe, 7.0 lbs. Slim line Ergonomic Handle and Oversized Operating Switch Provides a Comfortable Grip
B-300	Parker AC Contour Probe, 7.5 lbs.
DA-400	Parker AC/DC Contour Probe, 8.5 lbs.
628554	Magnaflux Y-2 AC Yoke, 4.8 lbs. (Detachable Cord)
625643	Magnaflux Y-7 AC/DC Yoke, 7.4 lbs.











YOKE ACCESSORIES

Item	Description			
TB-10	Magnetic 10lb Weight Lift Test Bar (Weight is stamped on each bar and is traceable to NIST)			
TB-10S-4	Set of 4 10lb Weight Lift Test Bars (Weight is stamped on each bar and is traceable to NIST)			
Y200-1	Parker Y-200 Yoke Light (designed to fit B-200 Contour Probe)			
Y300	Parker Y-300 Yoke Light (designed to fit B-300 Contour Probe)			
Y400	Parker Y-400 Yoke Light (designed to fit B-100 or DA-400 Contour Probe)			
628840	Magnaflux Y-2 LED Yoke Light			



TB-10 WEIGHT LIFT TEST BAR for calibration of Magnetic Impaction tokes	P	PARKER RESEARCH CORP. P.O. BOX 1406, Dunedin, Florida 34657 USA	2	4	Now CFS Bars required 6 Err DC Lit Test MADE IN U.S.A WEIGHT TRACEABLE TO NEST
TB-10 WEIGHT LIFT TEST BAR for calibration of Magnetic Inspection Yokes	P	A 2 E PARKER RESEARCH CORP. P.O. BOX 1406, Dunedin, Filorida 34697 USA	2	4	Neter (3-5) Bass required (6 tor OC Lin Two MADE IN U.S.A WEIGHT TRACEABLE TO NEST
TB-10 WEIGHT LIFT TEST BAR tor exiteration of Magnetic Impection Yokes		4 2 C PARKER RESEARCH CORP P.O. BOX 1406, Dunedin, Florida 34697 USA	2	4	Note: (3-5) Bars required 5 to DC LIR Two MACE IN U.S.A WEIGHT TRACEABLE TO NIST
TB-10 WEIGHT LIFT TEST BAR Write/Hand of Magnate Registration of Magnate		4 2 C PARKER RESEARCH CORP. P.O. BOX 1406, Dunedin, Florida 34697 USA	2	4	Non (34) Bars inquired 6 Sor DC UR Test MADE IN U.S.A WEIGHT TRACEABLE TO NET









MAGNETIC PARTICLE AIDS FIELD INDICATORS

Item	Description		
133034	FSM-2, Digital Magnetic Field Strength Meter (Calibrated) and Reference Block Kit		
SP*001105	Pie Gauge Magnetic Field indicator with Certification		
MG-25-10	Model 25 Magnetic Field Indicator, Range 10-0-10 (Calibrated)		
MG-25-20	Model 25 Magnetic Field Indicator, Range 20-0-20 (Calibrated)		
SP*001548	Economy Magnetic Field Indicator, Range 10-0-10 (Un-Calibrated)		














QUANTITATIVE QUALITY INDICATORS (QQIs)


Quantitative Quality Indicators (QQI) are magnetic particle test piece shims with artificial defects used to verify field direction and relative strength. QQI's are also used to balance multi-directional fields and to increase productivity by minimizing magnetizing shots.

Item	Description		
625551	ndard QQI, Model KSC-230, Circle-cross 0.002" shim thickness, 30% notch depth		
625552	Miniature QQI, Model KSC-4-230, Mini circle-cross, 4 per shim, 0.002" shim thickness, 30% notch depth		
625553	Standard QQI, Model KSC-430, Circle-cross, 0.004" shim thickness, 30% notch depth		
625554	Variable QQI, Model KSCT-234, Three circles, 0.002" shim thickness, 20% / 30% / 40% notch depth		
625555	Variable QQI, Model KSC4-234, Three circles, 0.004" shim thickness, 20% / 30% / 40% notch depth		

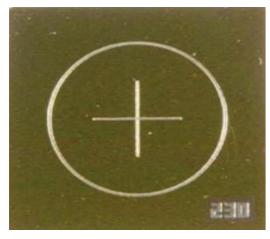

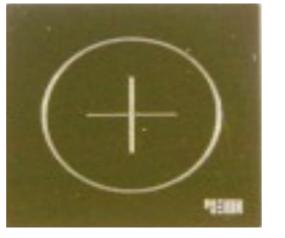

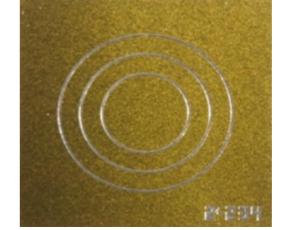

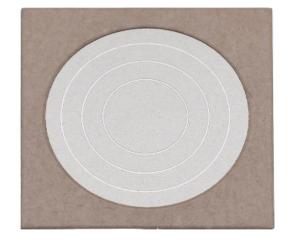

625551

625552

625553

625554

625555

TEST PIECES

► Magnetic Flux Indicator Strip - Flexible indicators used to detect directional orientation during the magnetic particle testing process. Each indicator contains three milled slots with widths of .0075", .009" and .010" that share a common depth. The indicators are manufactured from permeable magnetic steel sandwiched between two brass plates and designed for repeated use in setting and monitoring magnetic field strength in wet and dry MPI applications.

► Ketos Ring - System Performance Test Piece - The tool steel ring is manufactured to AS-5282 requirements to demonstrate magnetic particle system performance. A progressive series of sub-surface holes are used to verify equipment performance at different amperages using HWDC or FWDC waveforms.

► The Notch Defect Test Bar - System Performance Test Piece - The MPI test bar is a standardized test piece conforming to NAVSEA T907A-AS-GIB-010/271 requirements to demonstrate magnetic particle system performance. The test bar includes both surface and sub-surface defects in two directions to verify both circular and longitudinal fields using AC or DC waveforms.

► The MTU-3 Test Block is used to check the sensitivity of magnetic particle materials.

Item	Description		
008M004	Magnetic Flux Indicator Strips (Burma Castrol) Type I (G)eneral, Set of 5		
SP*001685	tos Ring (AS-5282 Ring), O-1 Tool Steel including Certification Report		
NA16	Notch Defect Test Bar (System Performance Test Piece - NAVSEA T907A-AS-GIB-010/271)		
MTU-3	Reference Block Type 1 /MTU-3/ EN ISO 9934-2:2002 Magnetic Particle Test Block		





MPI EQUIPMENT & ACCESSORIES PORTABLE COIL

Parker Portable Coil

The Parker PL-10 Portable Magnetizing Coil (9 7/8" inside diameter) is designed for magnetic particle inspection of ferrous metal parts. The coil allows for the use of either dry powder or wet fluorescent inspection media and may be used for demagnetizing as well.

The coil is molded in a tough black polyurethane material and comes equipped with the standard foot switch or a optional hand switch and 10' yellow neoprene power cord. The sealed electrical connection box has a 2" x 5" flat base allowing the coil to stand in a vertical position.

Item	Description		
PL-10H	Parker 10" Portable Magnetizing Coil with Hand Switch, 115VAC with Carrying Case		
PL-10F	Parker 10" Portable Magnetizing Coil with Foot Switch, 115VAC with Carrying Case		









PORTABLE POWER PACK UNITS

The Portable Power Packs are convenient and economical inspection units that are used in a wide range of magnetic particle applications that require only moderate power. They are ideal for large or heavy parts, in-service mobile equipment or job-site welds.

BENEFITS

► Find surface defects with AC current; switch cable connection to half wave DC (HWDC) for near-surface flaws

► Locate defects in any direction using prods, central conductor, coil (wrap part with 3-5 turns of cable)

► Infinitely variable current control

FEATURES

- ► Demagnetize your parts in AC mode by slowly turing the current dial to zero
- Built-in automatic-reset circuit breaker

► May be used as the main power source for the Magnaflux MAG Kit modular bench inspection system

SPECIFICATIONS

UNIT					
Model	P-70	P-1500			
Foot Print	17.5"L x 9"W x 8"H	22"L x 9.5"W x 9.5"H			
Weight	35 lbs.	93 lbs.			
Maximum Qutnut*	750 Amps	1500 Amps			
Maximum Output*	AC or HWDC	AC or HWDC			
Current Output*	115 VAC 50/60 Hz	230 VAC 50/60 Hz			
(single phase)	230 VAC 50/60 Hz	460 VAC 50/60 Hz			
Line Current	26 Amps @ 115 VAC	42 Amps @ 230 VAC			
Line Current	13 Amps @ 230 VAC	21 Amps @ 460 VAC			
New Dut Cycle	2 Minutes ON	2 Minutes ON			
Max Dut Cycle2 Minutes OFF2 Minutes OFF					
*Current ratings based on use of two 15-foot lengths of 4/0					
cable. *Other voltages available.					



<u>Magnaflux P-70</u>





STANDARD FEATURES:

- Digital Meter Display
- ► 2 Bus bars for connection
- Push button switch for AC output
- ► Push button switch for HWDC output
- Push button switch for mag

Momentary - mag as long as button is pushed

- Push button switch for demag
- One touch auto cycle

Switches to decaying AC automatically

- Push button switch for pulse
- 1/2 second on, 3 seconds off for 30 seconds
- Infinitely variable current control

Magnaflux P-1500

M-SERIES MOBILE POWER PACKS

The M-Series mobile power pack portable current generators facilitate testing of large and abnormally heavy parts with magnetic particle inspection. Magnaflux understands some parts cannot be moved so the magnetizing station needs to be brought to the part. The M-Series offers a solution by providing an adaptable mobile unit. These units feature AC or Half Wave DC output.

M-Series magnetic power packs are available in three configurations:

M-2030, M-2040 & M-2060

UNIT						
Model	M-2030 M-2040 M-2060					
Foot Print		46"L x 23"W x 39"H				
Weight	780 lbs.					
Maximum Output	3,000 Amps	4,000 Amps	6,000 Amps			
	AC or HWDC	AC or HWDC	AC or HWDC			
Available Voltages	380, 415, 460, 230, 380, 415, 460, 575 575 V V 380, 415, 460, 575					
Rated With	90' of 4/0 Cables 30' of 4/0 Cables Two 30' of 4/0 Cables in parallel					
Available Frequencies	50 or 60 Hz					

- ► 2 Fixed / 2 Swivel (with locks) Heavy-duty casters
- ► 115 Volt convenience Outlet (10 amp)
- ► PLC circuitry and thermal overload for circuitry protection
- ► Flow through cooling for heat dissipation
- ► Solid state switching (AC to HWDC)
- ► 7% Duty cycle (maximum output with 1/2 minute ON time)







MAGNAFLUX WET BENCH



AD-Series Magnetic Wet Benches w/ AC and DC Magnetization

The AD-Series magnetic benches provide 4,000 amps of Alternating Current and 5,000 amps of Direct Current magnetization for finding surface and sub-surface defects during wet method magnetic particle inspection. The two outputs are independently adjustable to set each magnetic field, circular or longitudinal.

Features:

- ► 5% duty cycle of 0.5 seconds on, 10 seconds off at maximum ouput
- ► Allen-Bradley PLC
- ► Simple touch-screen operator interface
- ► External pump system for particle bath agitation, circulation and application




A-Series Magnetic Wet Benches w/ AC Magnetization

The A-Series magnetic benches provide Alternating Current magnetization for finding surface defects during wet method magnetic particle inspection. The two outputs are independently adjustable to set each magnetic field, circular or longitudinal.

Features:

- ► 5% duty cycle of 0.5 seconds on, 10 seconds off at maximum ouput
- ► Allen-Bradley PLC
- ► Simple touch-screen operator interface
- ► External pump system for particle bath agitation, circulation and application

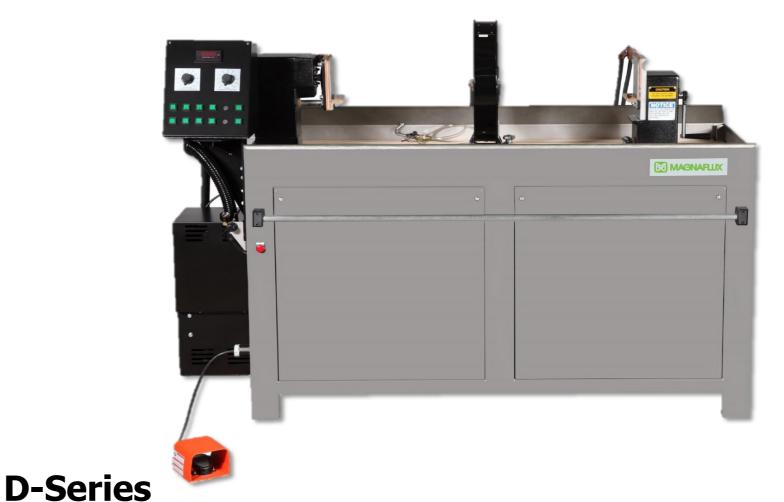

Magnetic Wet Benches w/ 3-Phase FWDC Capability

The D-Series is one of our most powerful wet magnetic benches. Providing 3-phase Full Wave Direct Current, this MPI equipment offers maximum magnetization for finding surface and sub-surface defects with clearer indications while using minimal power.



MD-Series

Multi-Directional Magnetic Wet Benches for AC, HWDC or 1-Phase FWDC Magnetization

The MD-Series multi-directional magnetic bench offers Alternating Current, Half Wave Direct Current and 1-phase Full Wave Direct Current for time-saving multidirectional magnetization which can find defects in all orientations with one mag-cycle.

The two outputs (contact and Flux Flow coil) each offer AC, HWDC or 1-Phase FWDC, and are independently adjustable to balance the magnet field intensity.

Features:

- ► 5% duty cycle of 0.5 seconds on, 10 seconds off at maximum ouput
- ► Allen-Bradley PLC
- ► Advanced touch-screen operator interface
- ► External pump system for particle bath agitation, circulation and application
- ► 1,000 customer-programmable techniques



<u>Universal WE</u>

Multi-Directional Magnetic Wet Bench

The Universal WE magnetic wet bench is multi-direction magnetic wet bench designed to completely magnetize the surfaceof parts up to 35 inches long in a single shot. Potentially cutting inspection time in half because the part can inspected in both directions at once. The Universal WE offers 200 - 2,000 Amps AC for contact shots and 1,500 - 15,000 Amp-turns AC for coil shots. The two outputs are independently adjustable to set each magnetic field, circular or longitudinal.

The two outputs are independently adjustable to set each magnetic field, circular or longitudinal.

Features:

► Allen-Bradley PLC

► Simple touch-screen operator interface

► External pump system for particle bath agitation, circulation and application

► Integrated ultra-low frequency, reversing, step-down DC demagnetization 1-touch control









EQUIPMENT ACCESSORIES

4/0 Cables & Connectors

We offer a range of cables and connectors to allow you to outfit your magnetic bench or electromagnetic current generator to suit your specific parts and process. Whether you are testing a large investment casting or doing mag particle inspection in a difficult to reach location, these heavy-duty cables and connectors will help you set-up your MPI machine just the way you need.

4/0 cables are essential for P-series, M-series, and CSV-series power packs. Cables can be used to flow magnetizing current through a large part or structure, or wrapped around pipes and long weldments for longitudinal magnetization. QED 4/0 cables are available in standard welding grade or heavy-duty grade with extra insulation and tinned conductors. Cables are factory terminated in a variety of lengths and a choice of standard lug connections or heavy-duty quick connect fittings.







Prods & Clamps



These handheld electrodes and contact clamps are convenient for conducting sectional magnetic particle inspections, like welds, castings or forgings, or testing parts that cannot be inspected on a wet horizontal bench, such as large fabrications, tubing, bars and tubular assemblies like aircraft mounts and fuselage sections.

Copper Contact Pads & Conductors

Copper contact pads come in a variety of shapes, sizes and types to make sure your magnetic bench is outfitted correctly for the parts you inspect.

Copper braided contact pads prevent arc burn by helping maintain proper electrical contact between test parts and contact heads. Choose a solid pad if you are inspecting parts with flat ends, pick a braided pad if your parts have rounded or irregular shaped ends.

Central Conductors - Solid Copper Bar Rods provide circular magnetization of hollow parts. Three standard sizes are available and custom sizes are available upon request.



Lead Contact Pads

This range of copper and lead contact pads come in a variety of shapes, sizes and types to make sure your magnetic bench is outfitted correctly for the parts you inspect. Contact pads prevent arc burning, and ensure good, reliable electrical contact between the headstock and part.


Choose a solid pad if you are inspecting parts with flat ends, pick a braided pad if your parts have rounded or irregular shaped ends.

Available Lead Contact Pads Include:

► Lead Contact Plate - Duplicates original headstock/tailstock contact plates. The soft lead provides excellent contact with test part - 6.75" x 6.625" x .25" Thick

► Lead Copper Braid Contact Plate - Copper impregnated lead contact plate that lasts 10 times longer than lead contact plates - 6.75" x 6.625" x .25" Thick



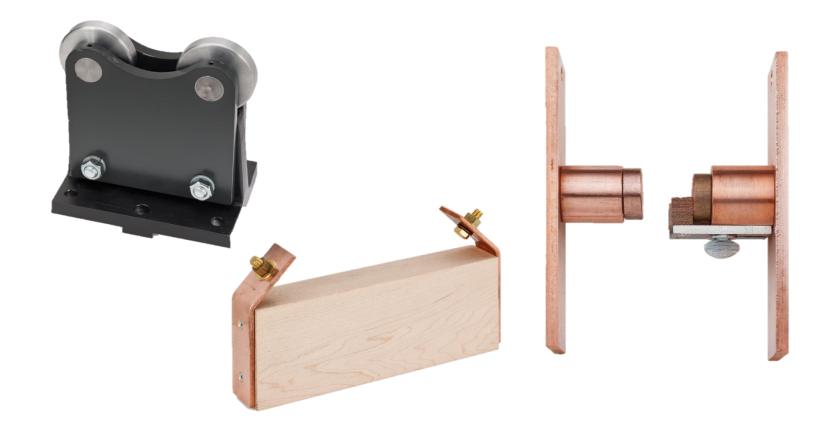

Equipment Adapters

Make sure your MPI bench works with every part you need to inspect with this range of equipment adapters. From large, heavy parts to small pieces like bolts, screws, and pins, QED equipment adapters help you get more out of your magnetic bench by helping you make it work for a wide variety of parts.

- ► Steady Rests Used to support and stabilize long or heavy parts such as crankshafts during the inspection process.
- ► Contact Block Permits remote testing of parts that are too heavy or too large for processing on unit. When clamped between head and tailstock, the block supplies magnetizing current to remote prods or clamps through flexible cable.
- ► Small Parts Adapters Permit the use of standard wet horizontal test units for inspection of small parts such as bolts, screws, pins, etc. Mounted directly to either the head or tail stock the solid copper adaptors maintain adequate clearance to proper clamping action.

Available Copper Contact Pads Include:

- ▶ Replacement Copper Braid Contact Pad 4.75" x 7.50"
- ► Copper Braid Contact Pad 4.75" x 10.50"
- ► Copper Double-Braided Contact Pad wih V-Block. Heavy braid provides contact over greater surface area. Built with neoprene, the V-Block base centers and supports test parts. The pad can be reversed to provide two wear faces. Fits all standard sized MPI units.

► Copper Double-Braided Contact Pad with Clip. Same performance as the V-Block but clips over headstock of smaller MPI units.







LIQUID PENETRANT LPI CONSUMABLES





ZYGLO[®] PENETRANTS

Fluorescent Penetrant - Type 1

Methods A (Water Washable) & Method C (Solvent Removable)

Item	Product	Sensitivity	Container Size
01-3159-40			5 Gallon Pail
01-3159-30	ZL-15B	Level ½ (Ultra Low)	20 Gallon Drum
01-3159-45			55 Gallon Drum
01-3263-40	ZL-19	Level 1 (Low)	5 Gallon Pail
01-3263-45	22-19		55 Gallon Drum
01-3272-78			Aerosol, Case of 12
01-3272-40	ZL-60D	Level 2 (Medium)	5 Gallon Pail
01-3272-30	22-000		20 Gallon Drum
01-3272-45			55 Gallon Drum
01-3274-40			5 Gallon Pail
01-3274-30	ZL-67	Level 3 (High)	20 Gallon Drum
01-3274-45			55 Gallon Drum
01-3267-40	ZL-56	Level 4 (Ultra High)	5 Gallon Pail
01-3267-45	2L-30		55 Gallon Drum





Fluorescent Penetrant - Type 1

Method B (Post-Emulsifiable, Lipophilic), Method C (Solvent Method D (Post-Emulsifiable, Hydrophilic)

ltem	Product	Sensitivity	Container Size
01-3123-40	ZL-2C	Level 2 (Medium)	5 Gallon Pail
01-3123-45		Level 2 (Medidin)	55 Gallon Drum
01-3187-78			Aerosol, Case of 12
01-3187-40	ZL-27A	Level 2 (Linda)	5 Gallon Pail
01-3187-30		Level 3 (High)	20 Gallon Drum
01-3187-45			55 Gallon Drum
01-3188-78			Aerosol, Case of 12
01-3188-40	ZL-37	Level 4 (Ultra High)	5 Gallon Pail
01-3188-30	22-37		20 Gallon Drum
01-3188-45			55 Gallon Drum

Fluorescent Penetrant (Water-Based) - Type 1 Methods A (Water Washable)

No petroleum distillates allowing direct drain disposal

ltem	Product	Sensitivity	Container Size
01-3137-40	ZL-4C	N/A	5 Gallon Pail
01-3137-45	26-40	11/2	55 Gallon Drum
01-3405-45	ZL-405	Level 1/2 (Liltra Low)	55 Gallon Drum
01-3405-67	22-405	Level 1/2 (Ultra Low)	275 Gallon Tote
01-3425-45	ZL-425		55 Gallon Drum
01-3425-67		Level 1 (Low)	275 Gallon Tote
01-3440-45	ZL-440	Level 2 (Medium)	55 Gallon Drum
01-3440-67			275 Gallon Tote



41









Visible Pene	etrant	- Ту	pe :	2

	and Type 2		
ltem	Product	Method	Container Size
01-5155-78			Aerosol, Case of 12
01-5155-35	SKL-SP2	C (Solvent Removable)	1 Gallon Pail
01-5155-40	SKL-SFZ		
01-5155-45			55 Gallon Drum
01-5190-78		A (Water Washable)	Aerosol, Case of 12
01-5190-35	SKL-WP2	A (Water Washaple)	1 Gallon Pail
01-5190-40	SIL-WFZ	C (Solvent Removable)	5 Gallon Pail
01-5190-45		C (Solvent Removable)	55 Gallon Drum

Visible/Fluorscent Penetrant (Water-Based)

Specially designed for chemically sensitive plastic parts

Item	Product	Method	Container Size
01-5125-40	SKL-4C	A (Water Washable)	5 Gallon Pail
01-5125-45	SRL-4C	C (Solvent Removable)	55 Gallon Drum





There is the second sec	ZYGLO TE-4E	PANSER of SD Pansers Of Order The One of the One of the One of the
	Lipophilic Emulsifier Emulsificante Lipofilico	The magnetized states are used to the state of the state of the states o
SPOTCHECK Skc-s Aerosol	************************************	An open of the second s
Nondestructive Testing Material Internates Para Ensayos No Destruction Mests applicable requirements br DANCER / CANCER / PELIGRO DRINGER / CANCER / PELIGRO	Connect of Sectors De PORTE DES INFANTS. Consulter la factore de Mantee de Sectors De La CANCE DE LOS MIÑOS. Referense a la Hoje de Datos de Seguridad antes de usarte. Para uso industrial. Net Contents 5 gal / 18.9 L	
a subject to an ADDA VAD FARLE services in the ADDA VAD FARLE services in the ADDA VAD FARLE services in the ADDA VAD FARLE CONTROL END FOR ADDA VAD FARLE CONTROL END FOR ADDA VAD FARLE ADDA VAD FAR		
when the distribution of the set		
MAGNAFLIX		

Remover & Emulsifiers								
Item	Product	Method / Class	Container Size					
01-5750-78		Class 2	Aerosol, Case of 12					
01-5750-35	SKC-S	Class Z	1 Gallon Pail					
01-5750-40	510-5	Nonhalogenated	5 Gallon Pail					
01-5750-45		(Flammable)	55 Gallon Drum					
01-3550-40		В	5 Gallon Pail					
01-3550-30	ZE-4E	(Post-Emulsifiable	20 Gallon Drum					
01-3550-45		Lipophilic)	55 Gallon Drum					
01-3625-40		D	5 Gallon Pail					
01-3625-30	ZR-10E	(Post-Emulsifiable	20 Gallon Drum					
01-3625-45		Hydrophilic)	55 Gallon Drum					

Developer

Item	Product	Form	Container Size
Item	Product	FOIII	Container Size
01-3328-69	ZP-4B	Form a	10 lb. Pail
01-3328-75	21 -40	(Dry Powder)	20 lb. Pail
01-3381-75	ZP-14A	Form b	20 lb. Pail
01-3381-89	2F-14A	(Water Soluble)	50 lb. Pail
01-3341-81	ZP-5B	Form c	25 lb. Pail
01-3341-01	26-90	(Water Suspendible)	ZO ID. Pali
		Form d/e	
01-3354-78	ZP-9F	(Nonaqueous Type 1	Aerosol, Case of 12
		& 2 - Solvent based)	
01-5352-78		Form d/e	Aerosol, Case of 12
01-5352-35	SKD-S2		1 Gallon Pail
01-5352-40	350-32	(Nonaqueous Type 1 & 2 - Solvent based)	5 Gallon Pail
01-5352-45		a z - Solvent based)	55 Gallon Drum



42









Fluorescent Penetrant - Type 1

Methods A (Water Washable) & Method C (Solvent Removable)

	meanous A (main mushaple) a meanou e (conventionable)				
Met-L-Chek	Item	Product	Sensitivity	Container Size	
FP=923 P The State of the Stat	M-FP-921-1p			1 Pint	
	M-FP-921-01	FP-921	Level 1 (Low)	1 Gallon Pail	
T-L-Chris	M-FP-921-05	11-321		5 Gallon Pail	
	M-FP-921-55			55 Gallon Drum	
	M-FP-922-1p			1 Pint	
	M-FP-922-01	FP-922	Level 2 (Medium)	1 Gallon Pail	
E T	M-FP-922-05	11-322		5 Gallon Pail	
IFP-923 The function of the f	M-FP-922-55			55 Gallon Drum	
The second secon	M-FP-923-16			Aerosol, Case of 12	
Known and in the Known and in the Kno	M-FP-923-1p			1 Pint	
WVF 405061_561481	M-FP-923-01	FP-923	Level 3 (High)	1 Gallon Pail	
And the second s	M-FP-923-05			5 Gallon Pail	
Rem infigure 1 Autom	M-FP-923-55			55 Gallon Drum	

Fluorescent Penetrant - Type 1

Method B (Post-Emulsifiable, Lipophilic), Method C (Solvent

Method D (Post-Emulsifiable, Hydrophilic)

Item	Product	Sensitivity	Container Size
M-FP-93A(M)-1pt			1 Pint
M-FP-93A(M)-01	FP-93A(M)	Level 2 (Medium)	1 Gallon Pail
M-FP-93A(M)-05	FF-35A(M)		5 Gallon Pail
M-FP-93A(M)-55			55 Gallon Drum
M-FP-95A(M)-16			Aerosol, Case of 12
M-FP-95A(M)-1pt			1 Pint
M-FP-95A(M)-01	FP-95A(M)	Level 3 (High)	1 Gallon Pail
M-FP-95A(M)-05			5 Gallon Pail
M-FP-95A(M)-55			55 Gallon Drum
M-FP-97A(M)-1pt			1 Pint
M-FP-97A(M)-01	FP-97A(M)	Level 4 (Ultra High)	1 Gallon Pail
M-FP-97A(M)-05	FF-3/A(IVI)	Level 4 (Olua high)	5 Gallon Pail
M-FP-97A(M)-55			55 Gallon Drum



Visible Penetrant - Type 2

		VISIDIE FEITELIA	int - Type Z		
		Item	Product	Method	Container Size
	Met-L-Chek	M-VP-30-16			Aerosol, Case of 12
	P VPP-30 P P Valide Name Walked Experience Forestare N V Market And C N V Market And	M-VP-30-1p			1 Pint
Contraction of the second	T And practice and the second	M-VP-30-01	VP-30	A (Water Washable)	1 Gallon Pail
	Ward your hand an approximate and approximate	M-VP-30-14	VF-50	C (Solvent Removable)	Case, 4-1 Gallon
H Harrison Francisco Franc		M-VP-30-05			5 Gallon Pail
		M-VP-30-55			55 Gallon Drum
		M-VP-31A-16		B (Post-Emulsifiable, Lipophilic) C (Solvent Removable)	Aerosol, Case of 12
VIP-30		M-VP-31A-1p			1 Pint
		M-VP-31A-01	VP-31A		1 Gallon Pail
		M-VP-31A-14	VI-SIA		Case, 4-1 Gallon
		M-VP-31A-05			5 Gallon Pail
	And Andreas Call And Andreas Walks	M-VP-31A-55			55 Gallon Drum

Visible Penetrant (Bio Degradeable) - Type 2

Item	Product	Method	Container Size
M-VBP-300-1p		A (Water Washable)	1 Pint
M-VBP-300-01	VBP-300		1 Gallon Pail
M-VBP-300-05	VBF-500	C (Solvent Removable)	5 Gallon Pail
M-VBP-300-55			55 Gallon Drum











Visible High (125° - 350° F) Temperature Penetrant - Type 2

Item	Product	Method	Container Size
M-VP-302-1p			1 Pint
M-VP-302-01	VP-302	C (Solvent Removable)	1 Gallon Pail
M-VP-302-05			5 Gallon Pail

Emulsifiers

ltem	Product	Туре	Method	Container Size
M-E-50-01			В	1 Gallon Pail
M-E-50-05	E-50	2 (Visible)	(Post-Emulsifiable	5 Gallon Drum
M-E-50-55			Lipophilic)	55 Gallon Drum
M-E-57-05	E-57	1 (Elucroscont)	B (Post-Emulsifiable	5 Gallon Drum
M-E-57-55	E-97	1 (Fluorescent)	Lipophilic)	55 Gallon Drum
M-E-58D-01			D	1 Gallon Pail
M-E-58D-05	E-58D	1 (Fluorescent)	(Post-Emulsifiable	5 Gallon Drum
M-E-58D-55			Hydrophilic)	55 Gallon Drum

Cleaners & Removers

Item	Product	Туре	Method	Class	Container Size
M-E-59-16					Aerosol, Case of 12
M-E-59-01	E-59	1 (Fluorescent)	С	2	1 Gallon Pail
M-E-59-14	Remover Only	2 (Visible)	(Solvent Removable)	Nonhalogenated	Case, 4-1 Gallon
M-E-59-05				(flammable)	5 Gallon Drum
M-E-59-55					55 Gallon Drum
M-E-59A-16					Aerosol, Case of 12
M-E-59A-01	E-59A	1 (Fluorescent)	С	2	1 Gallon Pail
M-E-59A-14	Cleaner & Remover	2 (Visible)	(Solvent Removable)	Nonhalogenated	Case, 4-1 Gallon
M-E-59A-05				(flammable)	5 Gallon Drum
M-E-59A-55					55 Gallon Drum
M-R-502-1p	R-502		С	3	1 Pint
M-R-502-01	High Temperature	2 (Visible)	(Solvent Removable)	Special Application	1 Gallon Pail
M-R-502-05	Remover				5 Gallon Drum
M-R-503-16					Aerosol, Case of 12
M-R-503-01	R-503	1 (Fluorescent)	С	2	1 Gallon Pail
M-R-503-14	Cleaner &	2 (Visible)	(Solvent Removable)	Nonhalogenated	Case, 4-1 Gallon
M-R-503-05	Remover			(flammable)	5 Gallon Drum
M-R-503-55	(Petroleum Free)				55 Gallon Drum
M-R-504-16					Aerosol, Case of 12
M-R-504-01	R-504	1 (Fluorescent)	С	2	1 Gallon Pail
M-R-504-14	Cleaner &	2 (Visible)	(Solvent Removable)	Nonhalogenated	Case, 4-1 Gallon
M-R-504-05	Remover (Non			(flammable)	5 Gallon Drum
M-R-504-55	Halogenated)				55 Gallon Drum

<image/>	<image/> <section-header></section-header>	<section-header><section-header></section-header></section-header>
	EX* 50 O P E 50 R	<section-header></section-header>

	Developer			
	Item	Product	Form	Container Size
	M-D-72A-1p		Form a	1 Pint
	M-D-72A-10	D-72A	(Dry Powder)	10 lb. Pail
	M-D-72A-25		(Diyi owder)	25 lb. Pail
	M-D-76B-10		Form b	10 lb. Pail
	M-D-76B-25	D-76B	(Water Soluble)	25 lb. Pail
	M-D-76B-50		(Water Soluble)	50 lb. Pail
	M-D-78B-10		Form c	10 lb. Pail
	M-D-78B-25	D-78B	(Water Suspendible)	25 lb. Pail
	M-D-78B-50		(Water Suspendible)	50 lb. Pail
	M-D-70-16			Aerosol, Case of 12
)	M-D-70-01		Form d/e	1 Gallon Pail
	M-D-70-14	D-70	(Nonaqueous Type 1 &	Case, 4-1 Gallon
	M-D-70-05		2 - Solvent based)	5 Gallon Pail
	M-D-70-55			55 Gallon Drum
	M-D-702-1p		Form f	1 Pint
	M-D-702-01	D-702	(Spacial Application)	1 Gallon Pail
	M-D-702-05		(Special Application)	5 Gallon Pail









Fluorescent Penetrant - Type 1 Level ½ (Ultra Low) thru Level 2 (Medium) Methods A (Water Washable) & Method C (Solvent Removable)

ltem	Product	Sensitivity	Container Size
HM-1-1			1 Gallon Can
HM-1-5	HM-1	Level 1/2 (Ultra Low)	5 Gallon Pail
HM-1-55			55 Gallon Drum
HM-2D-1			1 Gallon Can
HM-2D-5	HM-2D	Level 1 (Low)	5 Gallon Pail
HM-2D-55			55 Gallon Drum
HM-220-1			1 Gallon Can
HM-220-5	HM-220	Level 1 (Low)	5 Gallon Pail
HM-220-55			55 Gallon Drum
HM-3A-1			1 Gallon Can
HM-3A-5	HM-3A	Level 2 (Medium)	5 Gallon Pail
HM-3A-55			55 Gallon Drum
HM-406-16			Aerosol, Case of 9
HM-406-1	HM-406	Level 2 (Medium)	1 Gallon Can
HM-406-5	11141-400	Level 2 (Mediaiii)	5 Gallon Pail
HM-406-55			55 Gallon Drum
HM-412-1			1 Gallon Can
HM-412-5	HM-412	Level 2 (Medium)	5 Gallon Pail
HM-412-55			55 Gallon Drum
HM-440-1			1 Gallon Can
HM-440-5	HM-440	Level 2 (Medium)	5 Gallon Pail
HM-440-55			55 Gallon Drum







Fluorescent Penetrant - Type 1 Level 3 (High) thru Level 4 (Ultra High)

Methods A (Water Washable) & Method C (Solvent Removable)			
ltem	Product	Sensitivity	Container Size
HM-430-1			1 Gallon Can
HM-430-5	HM-430	Level 3 (High)	5 Gallon Pail
HM-430-55			55 Gallon Drum
HM-604-1			1 Gallon Can
HM-604-5	HM-604	Level 3 (High)	5 Gallon Pail
HM-604-55			55 Gallon Drum
HM-607-1			1 Gallon Can
HM-607-5	HM-607	Level 3 (High)	5 Gallon Pail
HM-607-55			55 Gallon Drum
HM-704-1			1 Gallon Can
HM-704-5	HM-704	Level 4 (Ultra High)	5 Gallon Pail
HM-704-55			55 Gallon Drum
HM-707-1			1 Gallon Can
HM-707-5	HM-707	Level 4 (Ultra High)	5 Gallon Pail
HM-707-55			55 Gallon Drum

Fluorescent Penetrant - Type 1 Method B (Post-Emulsifiable, Lipophilic), Method C (Solvent Removable) & Method D (Post-Emulsifiable, Hydrophilic)

Item	Product	Sensitivity	Container Size
RC-29-1			1 Gallon Can
RC-29-5	RC-29	Level 1 (Low)	5 Gallon Pail
RC-29-55			55 Gallon Drum
FP-22B-1			1 Gallon Can
FP-22B-5	FP-22B	Level 2 (Medium)	5 Gallon Pail
FP-22B-55			55 Gallon Drum
RC-50-1			1 Gallon Can
RC-50-5	RC-50	Level 2 (Medium)	5 Gallon Pail
RC-50-55			55 Gallon Drum
RC-65-16			Aerosol, Case of 9
RC-65-1	RC-65	Level 3 (High)	1 Gallon Can
RC-65-5	NC-03	Level 3 (mgn)	5 Gallon Pail
RC-65-55			55 Gallon Drum
RC-77-16			Aerosol, Case of 9
RC-77-1	RC-77	Level 4 (Ultra High)	1 Gallon Can
RC-77-5	NC-77	Level 4 (olua nigil)	5 Gallon Pail
RC-77-55			55 Gallon Drum
RC-88-1			1 Gallon Can
RC-88-5	RC-88	Level 4 (Ultra High)	5 Gallon Pail
RC-88-55			55 Gallon Drum









Visible Penetrant - Type 2	
Item Product Method Co	ontainer Size
DP-40-16 Ae	rosol, Case of 9
SHERWIN DP-40-1 DP-40 C (Solvent Removable)	1 Gallon Can
DP-40-5 DP-40 C (Solvent Removable)	5 Gallon Pail
DP-40-55	5 Gallon Drum
DP-50-16 Ae	rosol, Case of 9
	1 Gallon Can
SHERWIN PENETRANT DP-50 C (Solvent Removable)	5 Gallon Pail
PROCESS DP-50-55	5 Gallon Drum
PENETRAAT DP-51-16	rosol, Case of 9
BULL SALVENT REMOVED AND A STATE OF A STATE	1 Gallon Can
SHERWIN DP-40 SHERWIN SHERWIN DP-51-5 C (Solvent Removable)	5 Gallon Pail
	5 Gallon Drum
PENETRANT Penetr	1 Gallon Can
	5 Gallon Pail
	5 Gallon Drum
Aver Washable) Ae	rosol, Case of 9
KO-17-1 KO-17 C (Solvent Removable)	1 Gallon Can
KO-17-5	5 Gallon Pail

Removers/ Cleaners

Item	Product	Method / Class	Container Size
DR-60-16		Class 2	Aerosol, Case of 9
DR-60-1	DR-60	0/035 2	1 Gallon Can
DR-60-5	DIC-60	Nonhalogenated	5 Gallon Pail
DR-60-55		(Flammable)	55 Gallon Drum
DR-62-16		Class 2	Aerosol, Case of 9
DR-62-1	DR-62	0/035 2	1 Gallon Can
DR-62-5	DK-62	Nonhalogenated	5 Gallon Pail
DR-62-55		(Flammable)	55 Gallon Drum
DR-63-1		Class 2	1 Gallon Can
DR-63-5	DR-63	Nonhalogenated	5 Gallon Pail
DR-63-55		(Flammable)	55 Gallon Drum
DR-64-1		Class 2	1 Gallon Can
DR-64-5	DR-64	Nonhalogenated (Flammable)	5 Gallon Pail
KO-19-16		Class 2	Aerosol, Case of 9
KO-19-1	KO-19	Nonhalogenated	1 Gallon Can
KO-19-5		(Flammable)	5 Gallon Pail





Emulsifiers				
Item	Product	Method / Class	Container Size	
ER-85-1		В	1 Gallon Can	
ER-85-5	ER-85	(Post-Emulsifiable	5 Gallon Pail	
ER-85-55		Lipophilic)	55 Gallon Drum	
ER-83A-1		D	1 Gallon Can	
ER-83A-5	ER-83A	(Post-Emulsifiable	5 Gallon Pail	
ER-83A-55		Hydrophilic)	55 Gallon Drum	
ER-83B-1		D	1 Gallon Can	
ER-83B-5	ER-83B	(Post-Emulsifiable	5 Gallon Pail	
ER-83B-55		Hydrophilic)	55 Gallon Drum	
ER-83C-1		D	1 Gallon Can	
ER-83C-5	ER-83C	(Post-Emulsifiable	5 Gallon Pail	
ER-83C-55		Hydrophilic)	55 Gallon Drum	

Developer

ltem	Product	Form	Container Size
D-90G-15	D-90G	Form a	15 lb. Pail
		(Dry Powder)	
D-113G.1-25	D-113G.1	Form b	25 lb. Pail
	2	(Water Soluble)	20.00.1 20
D-110A.1-25	D-110A.1	Form c	25 lb. Pail
D-110A.1-20	B-HOAH	(Water Suspendible)	2010.1 01
D-100-16		Form d/e	Aerosol, Case of 9
D-100-1	D-100	(Nonaqueous Type 1 & 2 - Solvent based)	1 Gallon Can
D-100-5			5 Gallon Pail
D-100-55		oonen basea)	55 Gallon Drum
D-106-16		Form d/e	Aerosol, Case of 9
D-106-1	D-106	(Nonaguagua Tuna 1 8 2	1 Gallon Can
D-106-5	D-100	(Nonaqueous Type 1 & 2 - Solvent based)	5 Gallon Pail
D-106-55		Solvent Suscu)	55 Gallon Drum
D-350-16		Form d/e	Aerosol, Case of 9
D-350-1	D-350	(Nonaqueous Type 2 -	1 Gallon Can
D-350-5		Solvent based)	5 Gallon Pail









LPI ACCESSORIES MATERIAL ACCESSORIES

LPI Applicators & Sprayers

DEMA Injector Kit - For spraying Hydrophilic Emulsifier. The emulsifier is drawn into the water stream by the Dema valve, emitting an emulsifier/water spray. The Dema Injector allows the penetrant user to process parts with the Hydrophilic method without adding large dip tanks.

Item	Description
M2400B	SureShot Model M 24 oz. Capacity Black Anodized Aluminum Sprayer w/ Nozzle #602, Adjustable from Extra Fine Mist to Pin Stream
B8100PL	Atomizer Sprayer (Model B) 16 oz. Capacity Electroless Nickel Plated Aluminum Sprayer with Plastic Top
B8100CB	Atomizer Sprayer (Model B) 16 oz. Capacity Electroless Nickel Plated Aluminum Sprayer with Chrome Plated Brass Top
SP*001693	Dry Developer Sprayer, One Quart Capacity
SP*001694	NDT Rinse/Spray Gun Complete
520090	Magnaflux Water Spray Gun w/ Hose Adapter
SP*001695	244CT DEMA Injector Kit - for emitting an Hydrophilic Emulsifier/Water Spray



Monitoring Devices & Wiping Cloths

Refractometer - Easy to use device to measure the concentration of the Hydrophilic Emulsifier remover in water and is required to meet Pratt and Whitney and GE concentration specifications for Hydrophilic removers.

► Hydrometer - Water Based Developers are designed for optimum performacne within a specific concentration range. To control the concentration, the specific gravity is measured using the Hydrometer. If the reading is high, the concentration is high and water is generally added. If the reading is low, developer is added to the bath.

Item	Description
300	GRALAB Model 300 Timer
513829	Refractometer
5857	Hydrometer (for monitoring developer concentration)
RAGS-50	White Lint Free Rags, 50 lb. Box







TAM PANEL & CLEANING UNIT

Hoffman Precision Star TAM Panels

The Panel is made from a 0.100" stainless steel plate. Half of the test surface is hard coated with 0.003" hard alloy chrome. Five crack centers are evenly spaced in the hard coated strip. The crack centers are circular patterns forming a star. The un-plated side is grit blasted to Ra = 2.0 roughness for washability / background tests.

Kit Includes:

- Hoffman TAM Panel with Transparent Storage Box
- Calibration Certificate (includes measurements and 5 photos)
- ► Foil print, glued on the storage box (includes measurements and 5 photos)

TAM Panel Approvals:

- ▶ Pratt & Whitney TAM 146060
- ► Delta Air Lines / MTU Maintenance
- ► Rolls Royce / General Electric

-	and provide and the second sec	
6		
1		
	Precision TAM - PT Panel according to Pratt & Whitney specification: TAM 14646 Ø = 0,63 mm Ø = 1,27 mm Ø = 2,14 mm Ø = 3,59 mm Ø = 5,41 mm	
	* * * * *	
	For measurement of diameter a fluorescent penetrant level 2, water and dry developer was used Photos: Magnification factor 1:2.6	
	Serial number: Next recalibration no later than:	

*



47

Item	Description
SP*001637	Hoffmann Polished Precision TAM Panel Standard Kit
SP*001638	Hoffmann Polished Precision TAM Panel Standard Kit plus full size panel photo in Certificate
SP*001639	Hoffmann Grit Precision TAM Panel Standard Kit
SP*001640	Hoffmann Grit Precision TAM Panel Standard Kit plus full size panel photo in Certificate

Ultrasonic Cleaning Unit & Solution

Quickly and professionally clean your test panels with the desktop ultrasonic cleaning unit. It completely removes excess penetrant from indications as well as the surface of the panel. We recommend using Met-L-Chek 300LF or equivalent for proper cleaning.

Includes: Normal Frequency, Sweep & Degas Functions, Operator Temperature Controls, Digital Untrasonic Timer, Basket, Cover and Side Handles

Specifications: Ultrasonic Frequency - 40,000Hz, Tank Material - Stainless Steel, Temperature Controlled Heat for best cleaning performance, Unit Size - 10" L x 6"W x 9.5"H, Tank Dimensions - 9"L x 5.5"W x 4"H, Tank Capacity - 3/4 Gallon

Item	Description
SP*001696	Heated Ultrasonic Cleaning Unit
M-300LF-01	Met-L-Chek 300LF Aqueous Alkaline Concentrate, 1 Gallon Pail





ADDITIONAL LPI PANELS/BLOCKS

NiCr Twin Cracked Test Panels

NiCr Panels are used to compare new and used penetrants and can also be used for comparing performance of different penetrant materials or different processing techniques. Each sets consists of a pair of identical panels marked A and B with manufacturer's Certification and Crack photograph.

These panels are made by plating hard Nickel Chromium alloy on a 2mm thick brass substrate and stressing the panel in tension. The hard NiCr coating is brittle in comparison to the brass substrate so that the cracks created in the plated layer are limited to the thickness of the NiCr layer. The panel is then cut in half perpendicular to the direction of the cracks thus creating a matching pair of virtually identical cracks of controlled depth.

Specification Compliance: ASTM E1417, AMS 2647D, ISO 3452-3 & JIS Z 2343-3

Sensitivity* (Unofficial) Crack Depth Level		 Fluorescent Penetrant Sensitivity Levels are established by the USAF Laboratory at Wright Patterson AFB under highly controlled conditions.
50 µm	1, 2, 3, 4	Laboratory at Wight Fatterson Arb ander highly controlled conditions.
30 µm	2, 3, 4	• Sensitivity testing is not something the penetrant manufacturer or user can do. What you can do is compare samples using appropriate NiCr
20 µm	3, 4	Cracked Panels.
10 µm	4	



Item	Description
NiCr-10	NiCr Test Panels, 10µm (0.0004") Flaw Depth
NiCr-20	NiCr Test Panels, 20µm (0.0008") Flaw Depth
NiCr-30	NiCr Test Panels, 30µm (0.0012") Flaw Depth
NiCr-50	NiCr Test Panels, 50µm (0.002") Flaw Depth

Additional LPI Test Panels & Blocks

- ► WTP-1 SHERWIN Wash Test Panel is used to run monthly removability testing as required by ASTM E1417 and MIL-STD-6866. The panel is made of stainless steel measuring 4" x 6" and 0.090" thick with two parallel, "medium rought" strips, each 6" x 1.5" separated by a smooth 1" strip.
- ▶ WTP-2 SHERWIN Wash Test Panel is used to run removability tests. The 1.5" x 2"panel is made from 16 gauge 301 or 302 stainless steel, by grit blasting with 80 mesh aluminum oxide grit and 60 psi of air pressure. The roughened surface that is produced is free of scratches and blemishes.
- ► ADP-1 SHERWIN Aqueous Developer Test Panel is used to check the fluorescence and coverage of soluble and suspendable aqueous developers as per ASTM E1417. The panel is made of aluminum measureing 3" x 10".
- Cracked Aluminum Test Blocks compare sensitivity of different penetrants or sensitivity of new and used penetrants. This is done by processing one half of the block with used penetrant and the other half with fresh penetrant. A 1/8" wide groove separates the blocks two sides to facilitate side-by-side penetrant comparison.

Item	Description
WTP-1	SHERWIN Wash Test Panel (Removability as per ASTM E1417 & MIL-STD-6866)
WTP-2	SHERWIN Wash Test Panel (Removability)
ADP-1	SHERWIN Aqueous Developer Test Panel (as per ASTM E1417)
CAB	Cracked Aluminum Test Block

*Cracked Aluminum Test Blocks are meant for one-time use as once the penetrant gets in the crack it is very difficult to completely clean.







LPI MEASURING AIDS

Crack Comparators

Crack comparators are used to measure the actual size of indications identified during the liquid penetrant inspection process.

Item	Description
514048	Fluorescent Green General Purpose Crack Comparator, measured in increments 0.005" to 0.125"
514050	Fluorescent Green Pratt & Whitney (TAM 135273) Crack Comparator, measured in increments 0.010" to 0.180"
SP*001697	Fluorescent Green General Electric Crack Comparator, measured in increments 0.005" to 0.125"
SP*001698	Fluorescent Green Fractional Size Crack Comparator, measured from 1/64" to 1/4"
SP*001699	Fluorescent Green Swing Away General Purpose Crack Comparator, measured in increments 0.005" to 0.125"
SP*001481	Fluorescent Green Swing Away (TAM 190466) Crack Comparator, measured in increments 0.005" to 0.180"


 .125 I .090 I 	TAM135273 M (4.6 MM]	• .125 I • .090 I	0 1/4 0 7/32	SWING AWAY	SWING AWAY
 .060 .045 	○ [3.2 MM] ■ ○ [2.3 MM] ■ ○ [2.3 MM] ■	OG0 • .060 • • .045 • • .030 • ELECO.	SIZES 0 5/32 I	• A90 • 0)	
• .030 •	© [1.9 MM] ■ 060 0 [1.5 MM] ■			· £45 • 0	· 940 · · · · · · · · · · · · · · · · · · ·
· .025 · .020	• .045 • [1.1 MM] • • .030 • [0.8 MM] •	V SCALE N025 O020	LACTIONAL 0 1/8 1 0 3/32 1 1/16 1 . 3/64 1	· 225 · O	0 220 ·)
· .015 · .010	.015 - [04 MM] - .010 - .010 - [0.2 MM] -	015 010	• 1/32 •	Δ15 O) Δ10 O)	015 O 010 O
514048	*514050*	*SP*001697*	*SP*001698*	*SP*001699*	<pre> *SP*001481* </pre>







BLACKLIGHTS HANDHELD LED UV-A LAMPS

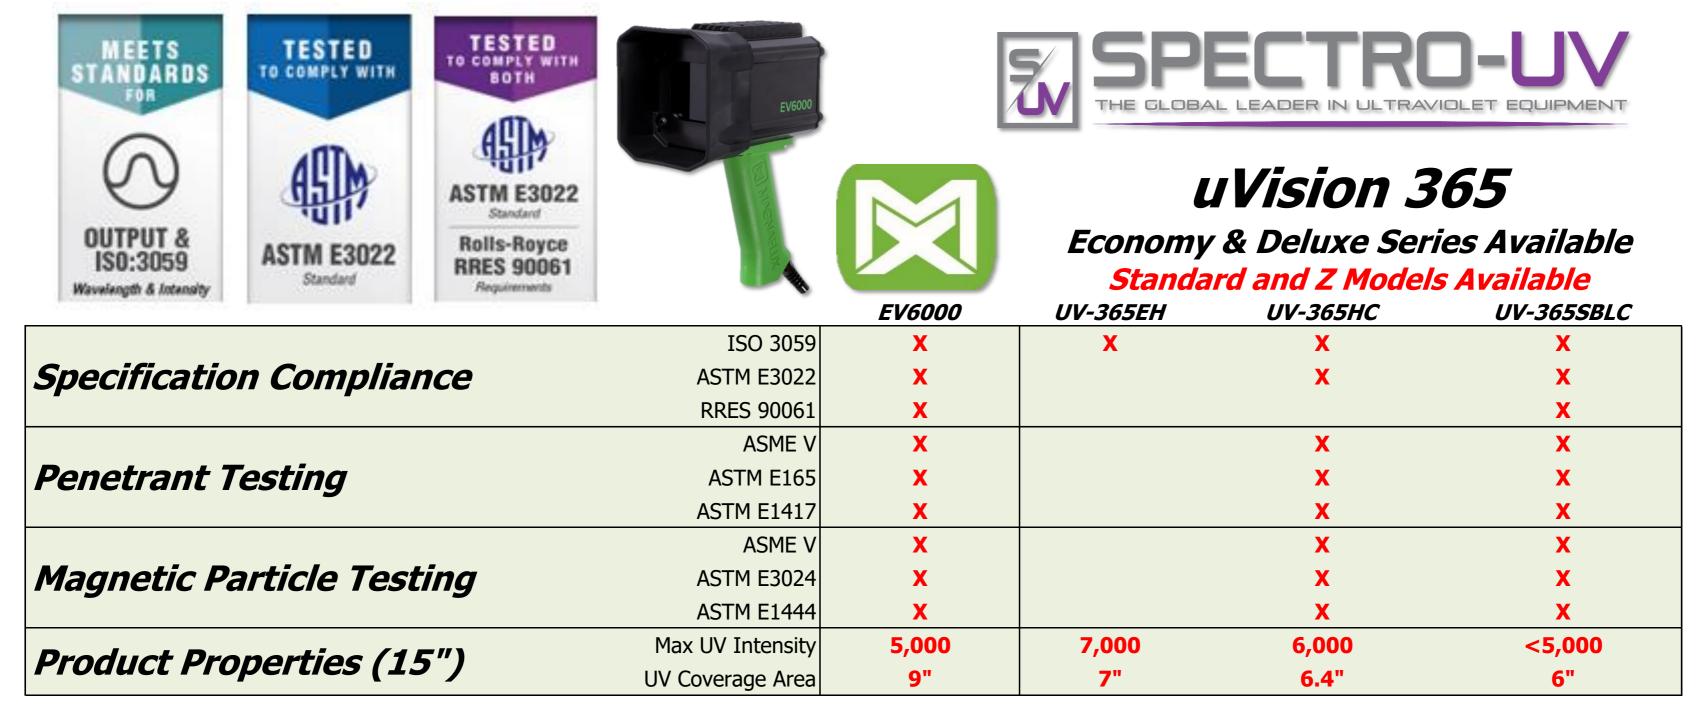

MAGNAFLUX HANDHELD

EV6000 NDT Inspection Lamp

The EV6000 is certified to NDT standards for LED UV lamps and certified for Aerospace Prime and OEM specifications for emission spectrum and beam profile. Each unit is shipped with a manufacturer's certificate of conformance which meets or exceeds all current specifications for use with fluorescent liquid penetrant and magnetic particle testing.

Item	Description
625784	EV6000 Hand-held LED UV lamp

SPECTRO-UV HANDHELD

UVISION 365 Series NDT Inspection Lamps

These lightweight, yet rugged lamps boast an IP65 rating, making them dust-tight and water resistant. Using a state-of-the-art heat sink, the uVision is mechanically cooled without the need for fans. In addition to the three powerful UV-A (365 nm) LEDs, it has a convenient white light LED for illuminating work areas. Compliant versions have embedded microprocessors to keep lamps within specifications. There are multiple power-source options as well.

Item	Series	Model	Description		
UV-365EH	ECONOMY	Standard	uVision, High intensity, (3) UV-A LEDs, (1) white light LED with FP-600 borofloat filter protector, heavy- duty 8 foot AC cord, UVS-30 spectacles and soft carrying case (100-120V/50-60Hz)		
UV-365ZEH	Meets ISO 3059 Specifications	Z	uVision, High intensity, (3) UV-A LEDs, (1) white light LED with FP-600 borofloat filter protector, In handle Lithium-ion Battery, 130448 Charger, 8' AC cord, UVS-30 spectacles & Protective Case (100-120V/50-60Hz)		
UV-365HC	DELUXE	Standard	uVision, High Intensity, (3) UV-A LEDs, (1) White Light LED w/ 128196 Faceplate w/ UV-A Pass Filter FP-600 Borofloat Filter Protector, 8' AC Cord, UVS-30 Spectacles & Protective Case (100-120V/50-60		
UV-365ZHC	Meets ISO 3059 & ASTM E3022 Specifications	Z	UVision, High Intensity, (3) UV-A LEDs, (1) White Light LED with 128196 Faceplate w/ UV-A Pass Filters, In-Handle Lithium-ion Battery, 130448 Charger, FP-600 Filter Protector, 8' AC Cord, UVS-30 Spectacles & Protective Case (100-120V/50-60Hz)		
UV-365SBLC	DELUXE	Standard	uVision, Standard Intensity, (3) UV-A LEDs, (1) White Light LED w/ 128196 Faceplate w/ UV-A Pass Filters, FP-600 Borofloat Filter Protector, 8' AC Cord, UVS-30 Spectacles & Protective Case (100- 120V/50-60Hz)		
UV-365ZSBLC	Meets ISO 3059, ASTM E3022 & RRES 90061 Specifications	Z	uVision, Standard Intensity, (3) UV-A LEDs, (1) White Light LED w/ 128196 Faceplate w/ UV-A Pass Filters, In-handle Lithium-ion Battery, 130448 Charger, FP-600 Filter Protector, 8' AC Cord, UVS-30 Spectacles & Protective Case (100-120V/50-60Hz)		













FLASHLIGHT LED UV-A LAMP

SPECTRO-UV FLASHLIGHT

Available in both Lithium Ion & Alkaline Battery Models





CLARITY 365 Series Kits

LITHIUM-ION







ALKALINE



cord, belt holster, UV-absorbing glasses & carrying case

Flashlight w/ battery, induction charging dock, AC power cord, USB power Flashlight with 3 C-Cell alkaline batteries, belt holster, UV-absorbing glasses and carrying case

Item	Model	Battery Type	UV-A Intensity	Visible Light	UV-A Coverage
SPN-CLR365-SC	Standard Intensity	Lithium-Ion	4,500 µW/cm²	< 1 foot-candle	4 Inches
SPN-CLR-BA		Alkaline	+,500 μw/cm-	(11 lux)	

FLASHLIGHT ACCESSORIES

Item	Battery Type	Description
RP-SM-01	Lithium-Ion & Alkaline	Spray Can Mount for CLARITY Flashlight
RP-FL-01		Optical Assembly for CLARITY Flashlight
RP-B-01		Li-ion Battery for CLARITY Flashlight
RP-BC-01	Lithium-Ion	Induction Battery Cap for CLARITY Flashlight
RP-C-01		Induction Charging Kit for CLARITY Flashlight
RP-BC-03	Alkaline	Battery Cap for CLARITY (Alkaline) Flashlight



UV-A SAFETY GLASSES

Item	Description
506249	UV-Absorbing Scratch Resistant Safety Glasses with Purple/Green Lens

*Safety Glasses are pictured Above







OVERHEAD LED UV-A LAMPS MAGNAFLUX OVERHEAD


ST700 Stationary Inspection LED UV Lamp

The ST700 projects an ultra-wide, even beam of UV-A light straight onto the inspection area, allowing for quick examination of parts with minimal part handling. The high intensity beam makes indications stand out bright and clear, speeding up the inspection process. The ST700 is certified to NDT standards for LED UV lamps and certified for Aerospace Prime and OEM specifications for emission spectrum and beam profile.

The IP65 aluminum case stands up to harsh environments and a range of mounting and angling options allow it to be set up anywhere in the inspection process; from mag benches to wash stations.

KEY BENEFITS:

- ► High intensity compliant UV-A illumination
- ▶ 20" x 26" wide, uniform beam profile at 36"
- ► IP65 sealed construction prevents damage from water, vapor or dust
- Angled mouting brackets
- No internal fan necessary
- ► No hot-spots in the beam profile
- ► Aerospace prime and OEM certified
- ► Certified to ASTM (E2297 & E3022), Airbus (AITM6-1001), Rolls Royce (RRES 90061) & NADCAP

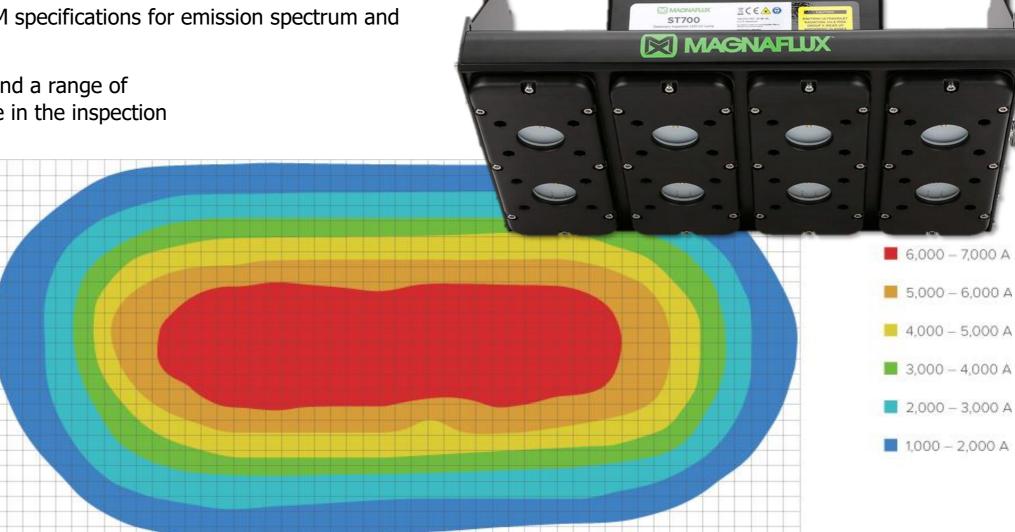

Item	Description	UV-A Intensity	Visible Light	UV-A Coverage
	ST700 Stationary overhead LED UV lamp	15" - 7,000 μW/cm²		15" - 13" x 25"
628243		36" - 3,000 μW/cm ²	< 1 fc / 10 lux	36" - 20" x 26"
		46" - > 1,000 μW/cm ²		46" - 22" x 25"

SPECTRO-UV OVERHEAD

EDGE 13 SERIES UV-A LED Panel Lamps

UV-A LED PANEL LAMPS

The first overhead LED UV-A lamp to guarantee an IP65 rating, compliance, and gang-ability.





KEY FEATURES:

► Gangable – link lamps together using single power source for greater coverage area

- ► IP 65 rating: the lamp is dust-proof and water-resistant
- ► Wide areas of coverage for optimal fluorescent response
- ► Integral black-light filters (EDG-13SBLC and EDG-13HC)
- ► Long-lasting UV-A lenses protect against solarization
- ► Versions Available Certified to ISO 3059, ASTM E3022, Airbus (AITM6-1001) & Rolly Royce (RRES 90061)

Item	Description	Certified to	UV-A Intensity	Visible Light	UV-A Coverage
EDG-13T	EDGE 13	ISO 3059	6,500 μW/cm²	< 1 fc / 11 lux	17" x 15"
EDG-13H			15,000 μW/cm ²	< 2 fc / 22 lux	18" x 16"
EDG-13HC		ISO 3059 & ASTM E3022	8,500 μW/cm ²		24" x 22"
EDG-13SBLC		ISO 3059, ASTM E3022 & RRES 90061	4,700 μW/cm²	< 1 fc / 11 lux	14.5" x 13"


*UV-A Intensity, Visible Light and UV-A Coverage ratings are all measurements at 15" from light source


EDGE 4 Wash Station Lamp

The EDGE 4 is a flood lamp engineered specifically for wash stations. It provides a very wide area of coverage without a high intensity. The IP65-rated housing allows the lamp to work in wet and dirty environments. Heat sinks keep the lamp cool without the need for a fan, so no dust or water can enter. Four UV-A LEDs provide a wide, uniform beam that is highly consistent and reliable.

KEY FEATURES:

- ► Ideal for Wash Stations
- ► IP65 rated rugged housing is dust-proof and water resistant
- ► Heat-dissipating housing. Fan-less and cool running
- ► 4 UV-A LEDs with long-lasting UV-A lense
- Adjustable mounting bracket
- ► Meets EN ISO 3059 on UV-A output for the removal of excess penetrant

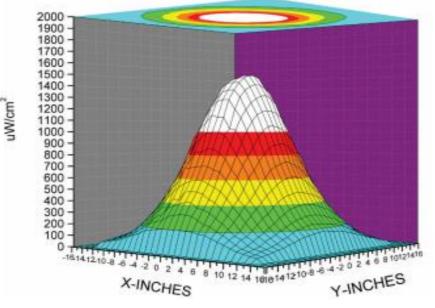

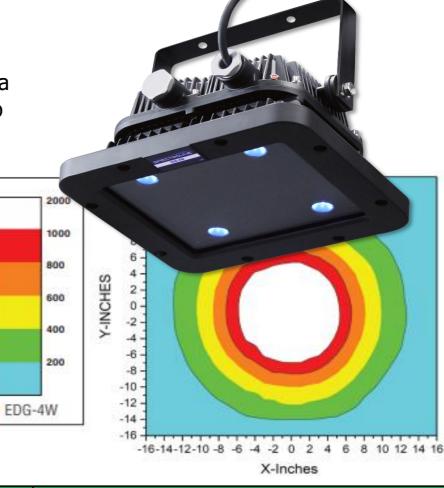

Item	Description	Certified to	UV-A Intensity	UV-A Coverage
EDG-4W	EDGE 4	ISO 3059	1,400 μW/cm ²	22" x 22"

*UV-A Intensity, Visible Light and UV-A Coverage ratings are all measurements at 48" from light source







LIGHT METERS SPECTRO-UV LIGHT METERS AccuPRO Series

The AccuPRO (XP-2000) readout unit features a single dual-wavelength sensor detector designed to measure both ultraviolet and visible light and is compiant with ASTM E2297.

KEY FEATURES:

- ► Accurate readouts for UV-A irradiance as well as visible illuminance
- Overall accuracy greater than \pm 5% per NIST standards
- One-touch PEAK with reset functions
- User-defined power save and automatic shutoff
- Mult-wavelength sensor directly attached to meter
- Convenient on-board recharging
- Powered by four rechargeable "AAA" nickel-metal hydride batteries (Included)
- Comes complete with AC charger and padded carrying case

Description Item XP-2000 AccuPRO Dual Sensor (UV-A/VIS), Complete with (4) Rechargeable "AAA" Nickel-Metal Hydride Batteries, AC Charger and Carrying Case

AccuMAX Series

The MOST Advanced, Microprocessor-Controlled Readout System

The AccuMax XRP-3000 is compact, lightweight and battery-operated for convenient use in the factory, field or any other location where measurements need to be taken. Measures both ultraviolet and visible light. Complies with ASTM specifications for MPI and FPI. Specially engineered for NDT applications.

KEY FEATURES:

- Microprocessor-controlled readout unit with dual-wavelength sensor detector
- ► Superior bandpass interference filter
- Choice of direct or USB connection between sensor detector and readout unit
- Excellent cosine response
- Sealed sensor housing and USB connection with water-resistant adapter





XS-555/L Luminance Sensor

The perfect accessory for the AccuMAX Series meter. Ideal for technicians performing radiographic examinations. Meets ASTM E1742 standard.



The AccuMAX XS-555/L luminance sensor detector measures the brightness of a visible light source and, unlike many competitive units, allows the user the choice of displaying the results in three distinct units of measure: candelas per square meter (cd/m2), candelas per square foot (cd/ft2) and footlamberts (fL).

SPECIFICATIONS

Luminance Range

- 0 1,000,000 cd/m²
- 0 90,000 cd/ft²
- 0 285,000 fL



TVAINA

Item	Description	
XRP-3000AccuMAX NDT Meter Kit, Complete with Digital Readout Unit (XR-1000) and Protective Rubber Boot (XRB-100), Dual UV-A/VIS Sensor (XDS-1000), Water-Resista USB Connector Cable (XCB-100) and Carrying Case (XCC-100)		
XR-1000 Digital Readout Unit for AccuMAX		
XDS-1000	Dual UV-A/VIS Sensor detector for AccuMAX	
XS-555/L	Luminance Sensor Detector, Visible (555nm)	

ECONOMICAL UV-A & VISIBLE LIGHT METERS

Item	Description	Measuring Range
SP*001477	LX1330B Digital Light Meter with Calibration	0 - 20,000 Fc (200,000 Lux)
SP*001197	UV513AB Digital UV-A/B Light Meter with Calibration	0 - 9,999 µW/cm ²



SP001477







ULTRASONIC CALIBRATION BLOCKS



REFERENCE STANDARDS

Block Type	Deservition	A 11	
	Description	Alloy	
		1018 Steel/ 7075	. 31° 62° 42° 50° 51° 60° 60°
I	Used for calibration of shear and longitudinal transducers, and verification of shear wedge exit point and refracted angle. Can also be used for resolution and sensitivity checking. In accordance with: IIW (International Institute of Welding) and ASTM E164.	Aluminum	INV TYPE 1 REFERENCE BLOCK 1018 STEEL SUN 4186 15
/1		304 Stainless Steel	CICURTIS
C		Wooden Case	1
		1018 Steel/ 7075 Aluminum	an as an as as as as as as as
	numbers 3, 5 and 8 through holes (3/64", 5/64" AND 8/64" diameter) for sensitivity	304 Stainless Steel	IIW TYPE 2 CALIBRATION BLOCK (IN.) 1018 STEEL SER NO. 3414 18 SER NO. 3414 18
·· (testing or surface wave inspection, and distance calibration marks to the 2.0" hole. In		C INDUSTRIES
	accordance with International Institute of Welding, ASTM E164 and U.S. Air Force NDI Manual T.O. 33B-1-1 specifications.		hutalinhat
	·	1018 Steel/ 7075	
	The Angle Beam Block also known as a "Rompas" block or simply "Angle Beam" is the	Aluminum	0° 30° 45° 60° Clourtis Clourtis ANCLE DE ANTIES
Andle Beam	ASTM and U.S. Air Force substitute for the DSC block for distance, beam index, refracted angle and sensitivity calibration. Block is 1.0" thick, contains a 1.0" radius	304 Stainless Steel	ANGLE BEAM BLOCK 1018 STEEL •09 S/N 3406 16 •0
	opposite a 2.0" radius, and a 5/64" diameter x 0.375" deep flat-bottom hole.	Wooden Case	
		wooden ease	
-	This 5-Step block comes in thicknesses of 0.100", 0.200", 0.300", 0.400" and 0.500".	1018 Steel	
OFD 5-Step Block	NOTE: Variations of this block are available if additional steps are preferred. Also,	304 Stainless Steel	
	larger step faces are offered for use with large diameter transducers. In accordance with ASTM E797.		
v		Plastic Case	
-	This 4-Step block comes in thicknesses of 0.250", 0.500", 0.750" and 1.000". NOTE:	1018 Steel/ 7075	00 0
4-Sten Block	Variations of this block are available if additional steps are preferred. Also, larger step	Aluminum 304 Stainless Steel	400 0.77 0.500
· I	faces are offered for use with large diameter transducers. In accordance with ASTM E797.		CICURTIS CINDUSTRIES
		Wooden Case	38
(Special Step Block for thickness and linearity calibration. This versatile block contains	1018 Steel/ 7075 Aluminum	2000
TIPSY	eight (8) steps. Set it down on one side and get the 1.0, 2.0, 3.0 and 4.0" steps. Then "TIP" it over and get the 1.5, 2.5, 3.5, and 4.5" steps.	304 Stainless Steel	CICURTIS 8
		Wooden Case	I STEP BLOCK
	ANAC type block used for shear ways distance and consitivity calibration. Contains a	1018 Steel/ 7075	
	1.0" radius opposite a 3.0" radius. The 3.0" radius includes a 0.375" deep x 0.032" wide radiused slot. Also contains a 0° reference point for checking exit point on wedge,	Aluminum	0° 45° 60° 70° • CURTIS
		304 Stainless Steel	DSC TEST BLOCK 1018 STEEL
ĉ	and a 0.125" diameter through hole and corresponding markings at 45°, 60°, and 70° for measuring actual refracted angle. In accordance with ASTM E164 and AWS		S/N 3407 16
	6.16.1B.	Wooden Case	
	Lead for distance analitude convertion, consitiuity levels and flow, double information	1018 Steel/ 7075	
	Used for distance amplitude correction, sensitivity levels and flaw depth information. Contains six 3/64" diameter side-drilled through-holes at distances of 0.25" to 2.75" in	Aluminum	NAVEHIPS CYLINDRICAL REFLECTOR BLOCK
NAVSHIP	0.25" increments. MTDs are engraved near both scan edges on one face. In accordance with MIL-STD-271G Figure 9, and NAVSHIPS Specification 0900-006-	304 Stainless Steel	CI CURTIS CI INDUSTRIES
		Wooden Case	
	5010/5000010.		
	Also called an RC block, the AWS Resolution Reference Block is used for checking	1018 Steel/ 7075 Aluminum	60° 70° 45°
	resolution capabilities of angle beam transducers. Contains three sets of 0.0625" diameter through-holes for 45°, 60° and 70°. In accordance with AWS Welding	304 Stainless Steel	70° AWS RESOLUTION BLOCK 1018 STEEL S/N 3410 16 60°
	Highway and Railway Bridges specification D2.0, and Structural Welding Code		45'
ŀ	ANSI/AWS D1.1.	Wooden Case	
		1018 Steel/ 7075	
	Used for beam profile measurement of angle beam transducers and measurement of	Aluminum	IOW BEAM DROFILE BLOCK MORE STEEL SIN 3415 THE OCIUMTINE
	transducer angles. Contains nine 1.5mm diameter x 22mm deep side drilled holes. In accordance with British Standard 2704 requirements.	304 Stainless Steel	I CTINDUSTRIES
c		Wooden Case	
		1018 Steel/ 7075	
1	AWS-type block used for shear wave distance calibration. Contains a 1.0" radius	Aluminum	
DC	overlaying a 2.0" radius on a 180° segment. In accordance with ASTM E164 and	304 Stainless Steel	CICURTIS
E	BRR/AWS X-1 specifications.	Wooden Case	DC TEST BLOCK SER. NO. 3408 1018 STEEL
		1018 Steel/ 7075 Aluminum	SC TEST BLOCK
	AWS-type block used for shear wave sensitivity calibration. Contains two 0.062"	304 Stainless Steel	(IN.) 70° 45°
	diameter through holes. In accordance with ASTM E164 and BRR/AWS requirements.		1018 STEEL
		Wooden Case	CICURTIS DS TEST BLOCK
		1018 Steel/ 7075	DS TEST BLOCK 1018 STEEL S/N 3561 16
	AWS-type block used for longitudinal distance and sensitivity calibration. Contains a	Aluminum	
	2.0" high section between two 4.0" sections. In accordance with AWS requirements.	304 Stainless Steel	
		Wooden Case	
		1018 Steel/ 7075	Re Re Re
	Used for establishment of primary reference responses for UT examination of welds.	Aluminum	
	Block contains three side-drilled holes at 1 5" deen minimum at 3/32" diameter. Hole	, adminiari	·····································
E	Block contains three side-drilled holes at 1.5" deep minimum at 3/32" diameter. Hole locations through the thickness are $\frac{1}{4}$, $\frac{1}{2}$, and $\frac{3}{4}$ T. Also contains two EDM notches	304 Stainless Steel	
E 3⁄4" x 6" x 7" r	•		







ULTRASONIC COUPLANT



GENERAL PURPOSE

• Echogel® 20 is an economical, basic-use couplant in medium-thick gel viscosity for ultrasonic inspections, like flaw detection/sizing and thickness gauging, where salt cake or metal corrosion salts are present. It provides good corrosion inhibition and resists viscosity breakdown on salt-caked boilers and other corroded materials.

• Ultragel® II is an industry-leading, high-performance, ultrasonic couplant for flaw detection and sizing, thickness gauging, flow metering and acoustic emission testing. This general-purpose medium viscosity gel is known for its outstanding performance, excellent corrosion protection, thixotropic properties and comprehensive range of specifications and approvals.

NDT technicians trust Magnaflux to supply couplant for ultrasonic testing that enhance sound transmission from the transducer to the test part to produce reliable nondestructive inspection results in flaw detection, thickness gauging, flow metering and acoustic emission testing.



• UT-X® Powder is a cost-effective couplant powder for flaw detection and thickness gaging applications where ferrous corrosion inhibition is required. UT-X Powder retains viscosity on salt caked boiler tubes, corroded pipe, structural steel, steel billets, welds and ship plate. Mixed with water at the inspection site, its compact and lightweight packets are easy to transport to a job site or to store as an emergency couplant for unanticipated shortages.

Item	Product	Temperature Range	Container Size
48-901			1 Gallon Cubitainer
48-905	Echogel 20	27 to 140°F	5 Gallon Cubitainer
48-955			55 Gallon Drum
25-901		-10 to 210°F	1 Gallon Cubitainer
25-905			5 Gallon Cubitainer
25-955			55 Gallon Drum
62-110		22 to 12005	1 Gallon Packet
62-510	UT-X Powder	32 to 120°F	5 Gallon Packet

HIGH TEMPERATURE

• Sono 600 is a versatile, multi-purpose couplant with a wide operating temperature range for flaw detection, thickness gauging and acoustic emission testing in petrochemical, power generation, automotive, aerospace, food processing equipment and pharmaceutical manufacturing.



• Sono 1100 provides coupling for high-temperature thickness gauging and will maintain acoustic coupling at high temperatures beyond 15 seconds to give ample time to obtain thickness readings. In most cases, the signal strength increases with time to the point of the couplant's thermal decomposition.

Item	Product	Temperature Range	Container Size
45-T04	Sana 600	700 to 775°F	4 oz Tube
45-901	Sono 600		1 Gallon Cubitainer
30-T04	Come 1100	0 to 7009E	4 oz Tube
30-901	Sono 1100	0 to 700°F	1 Gallon Pail

*Additional Couplant Options are Available Upon Request



	Echogel	Ultragel II	UT-X Powder	Sono 600	Sono 1100
Form	Gel	Gel	Powder	Thick Gel	Medium Paste
Viscosity*	5.5	5	Variable	N/A	N/A
Silicone				х	X
Glycerin		X			
Propylene Glycol	X	X		х	
Temperature Range	27 to 140°F	-10 to 210°F	32 to 120°F	700 to 775°F	0 to 700°F
SPECIFICATION CO	MPLIANCE				
API	X	X		х	X
ASME BPVC	X	x		х	X
ASTM F519	X	X			
ASTM F945		X			
AWS	x	x		х	X
Pratt & Whitney		x			
PWA 36604		X			

*Subjective measure on a 0 - 10 scale where 0 = water, 5 = medium gel, 10 = very thick paste

COUPLANT ACCESSORIES

Item	Description	
SP*001453	White Cylindrical 8 oz. Couplant Bottle with Flip Top Cap	
SP*001537	Franslucent 1 Gallon Couplant Jug with Handle & Pump	
SP*001492	5 Gallon Drum Pump	









INSPECTION POINT SEALS

INSPECTION POINT SEALS, LLC

IPS's patented Inspection Port, is the cost-effective way to access piping and vessels when performing CUI inspections. Our silicone and EPDM rubber ports are made with exacting standards and deliver the quality and craftsmanship you deserve.

Our patented locking ridges keep the sealing flanges secure and keep moisture out. We provide a watertight seal without screws, O-rings or caulk significantly reducing installation time. Unlike some of our competitors, the fastening mechanism does not require bending or subsequent compromising of the fastening materials. Our seals fit smooth, embossed or corrugated jacketing without the use of special tools. Even our caps are well thought out, attaching to the seal flange with a high quality stainless steel, crimped sleeved lanyard to prevent cap loss.

INSPECTION PLUGS



Item	Size	Material	Temp. Rating	Recommended Minimum Pipe Diameter
95E15	1.5"		-67°F to 340°F	Small Bore Insulated Piping
95E25	2.5"	EPM Rubber Construction		Minimum 5"
95E35	3.5"			Minimum 7"
95E50	5"			Large Diameter Piping & Vessels
95S15	1.5"			Small Bore Insulated Piping
95S25	2.5"	Cilicono Construction		Minimum 5"
95S35	3.5"	Silicone Construction	-130°F to 500F	Minimum 7"
95S50	5"			Large Diameter Piping & Vessels

*Additional Plug Options are Available Upon Request

INSPECTON LABELS

Inspection labels are specially designed to identify Thickness Measurement Locations (TML's) on non-insulated piping and vessels. Our UTL-2 and 3 inspection labels have protected write-on areas for recording TML numbers, line numbers, etc. All labels are UV stable and resistant to most solvents, oils and household chemicals.

Item

UTL-1	1 3/4" Elipse with 3/4" Diameter Holes	Roll of 200
UTL-2	3" x 3" Label, 1" Diameter Hole, 1" x 3" Legend Area	Box of 100
UTL-3 1 3/4" x 3" Label, 1" x 3" Write on Legend Area		DOX OF 100
UTL-5	1 1/4" Circular with 3/4" Diameter Holes	Roll of 200



UTL-1





UTL-5

MANDREL AND HOLE SAWS

The fastest and easiest way to cut accurate holes for installation of inspection plugs is with powered hole saws, and QED supplies the best. These aren't cheap hardware store saws, but heavy-duty industrial saws by Greenfield Industries. The mandrel separates from the cutting cup so you dont have to throw out the whole thing when the edge wears out; simply thread on a new cup and you're back in business.

▶ Blu-Mol Bi-Metal Hole Saws are of heavy-duty bi-metal construction for longer service life. 4/6 variable tooth provides faster, smoother cuts. Recommended for aluminum jacketing.

► RemGrit Carbide Grit Edge Hole Saws are made of tungsten carbide particles bonded to alloy steel for cutting extremely hard and abrasive materials. Recommended for stainless steel jacketing. Resists snagging.

Item	Description		
ARBOR	1/2" Arbor with mandrel and high speed drill bit		
Item	Size	Туре	
BM15	1.5"		
BM25	2.5"	Plue Mel Ri Metal Hele Saw Cup (Llees Arber)	
BM35	3.5"	Blue-Mol Bi-Metal Hole Saw Cup (Uses Arbor)	
BM50	5"		
RG15	1.5"		
RG25	2.5"	RemGrit Tungsten Carbide Hole Saw Cup (Uses Arbor)	
RG35	3.5"		







UT EQUIPMENT THICKNESS GAUGES

EHC-09 "Monochrome" Series Thickness Gauges

Danatronics most popular thickness gauges are those in our EHC-09 series. With thousands of units in the field, our durable, custom molded case with raise rubber keypad is IP54 rated and has proven it can handle your toughest jobs (this is bad help fix). The EHC-09 series is available in 6 models to suit every budget and application. What's best is our simple upgrade path where all gauges are capable of quickly and easily (directly from the keypad) adding any software options. Features include a graphic display with multiple languages, vibrate on alarm, fast minimum, echo to echo to ignore coatings, 100K reading Datalogger with export to excel, B-scan and live A-scan with waveform adjust.

Standard EHC-09 Wave Series includes: Ultrasonic thickness gauge, DKS-537, 5 MHz 0.375 inch diameter potted cable, operational manual, Data XL interface program, couplant, and transport case. See chart below for standard inclusions for each gauge.



*Limited 2 Year Warranty on Parts & Labor

Item	Specification	EHC-09DLW	EHC-09DL	EHC-09	EHC-09B	EHC-09A
Thickness Range:	0.020 – 20" in Steel	×	×	×	×	×
Hold Mode:	Holds display to retain last thickness reading with reverse video display	×	×	×	×	×
Freeze Mode:	Freezes display	×	×	×	×	×
Fast Min/Max Mode:	Simultaneously displays minimum or maximum and actual thickness value at 20 measurements per second	×	×	×	×	о
Units:	Inches/Millimeters/Microseconds	×	×	×	×	×
Alarms:	Minimum/Maximum depth, vibrates, beeps and display flashes as well as keypad illumination and vibration	×	×	×	N/A	о
Illuminating keypad:	F1= Red, F2 = Yellow and F3 = Green for easy, go/no-go testing	×	×	×	×	0
Gain:	Variable adjustment of gain	×	×	×	O	O
Differential Mode:	Displays the difference from the actual thickness measurement and a user entered reference value	×	×	×	o	о
Velocity Mode:	Displays acoustic sound speed	×	×	×	O	0
Non-Encoded B-Scan:	Displays a cross section of the test piece	×	×	0	O	O
Echo to Echo:	Measures the metal thickness only (ignore paint and coastings)	×	×	×	0	O
Datalogger:	Upgrade to Data Logger Version, 100,000 readings in linear, 2D, 3D grid or boiler alphanumeric files, 20 character file name, file compare, grid review and export to excel via Data XL interface program, also compatible with Ultrapipe	×	×	o	o	о
Carrying Pouch:	Custom molded with belt clip and elastic strap	×	×	0	O	0
Live Waveform (A-Scan)	Full adjustments, for gain in 1db step or AGC, main bang blank, blank after first received echo, range including zoom auto tracking to center echoes independent of material and rectification	×	o	O	o	о

EHC-09 Color Series

0 = Software options that are field upgradeable, no need to return the unit to the factory

Model	Description	
EHC-09A	Hand-Held Digital Ultrasonic thickness gage including, NIST Traceable calibration certificate	
EHC-09B	Hand-Held Digital Ultrasonic thickness gage including, NIST Traceable calibration certificate	
EHC-09	Hand-Held Digital Ultrasonic thickness gage including: Echo to Echo software, NIST Traceable calibration certificate	
EHC-09DL	Hand-Held Digital Ultrasonic thickness gage including: Echo to Echo & Datalogger w/ B-Scan software, NIST Traceable calibration certificate	
EHC-09DLW	Hand-Held Digital Ultrasonic thickness gage including: Echo to Echo, Datalogger w/ B-Scan & Live Waveform/A-scan software, NIST Traceable calibration certificate	

*EHC-09 "Color" Series Thickness Gauges are Available Upon Request

Danatronics ECHO Thickness Gauges



The perfect size of fit and function! Hold the ECHO in your hand and you will agree no detail has been overlooked and the ergonomics are unmatched by any thickness gage in the industry! The new ECHO series comes in 3 configurations; ECHO 9, ECHO 8 and ECHO 7. ECHO 9 is our corrosion gauge using dual transducers, ECHO 7 is our precision gage with 1 micron resolution using single element transducers and ECHO 8 is the ultimate unit combining both dual and single element transducers.

The ECHO series has a remarkable sunlight readable 3.5" color display, up to 32 Gb of micro SD memory, built-in rechargeable high capacity Li Ion battery all packaged in a custom case designed for IP67 rating. Not sure which model to choose? Don't worry, the ECHO series is fully capable of field upgrades directly from the keypad so you will never be stuck with an obsolete product or experience any downtime. ECHO Series can measure from .020" to 23" in steel in corrosion mode or as thin as .006" in steel when configured as a precision gauge.

Standard Inclusions: ECHO series ultrasonic thickness gauge, DKS-537, transducer up to 10 MHz, LM-06 cable, 2oz bottle of couplant, operation manual, Data XL interface program, USB cable, Charger Adapter, Transport Case *A transducer is included with each model.

*Limited 2 Year Warranty on Parts & Labor

	i mickness dauge
Model	Description
ECHO 9	Hand-Held Digital Ultrasonic CORROSION thickness gage including: Echo to Echo software, NIST Traceable calibration certificate
ECHO 9W	Hand-Held Digital Ultrasonic CORROSION thickness gage including: Echo to Echo & Live Waveform/A-Scan software, NIST Traceable calibration certificate
ECHO 9DL	Hand-Held Digital Ultrasonic CORROSION thickness gage including: Echo to Echo & Datalogger w/ B-Scan software, NIST Traceable calibration certificate
ECHO 9DLW	Hand-Held Digital Ultrasonic CORROSION thickness gage including: Echo to Echo, Datalogger w/ B-Scan & Live Waveform/A-Scan software, NIST Traceable calibration certificate

FCHO 9 - Corrosion Thickness Gauge

*ECHO 7 (Precision) & ECHO 8 (Corrosion and Precision) Series Thickness Gauges are Available Upon Request







DAKOTA ZX Series Thickness Gauges

The ZX Series of thickness gauges are packaged in an all aluminum case making them the most durable gauges on the market. The features included in the ZX Series offer a quality tool that will meet or exceed your application requirements. Our 5 year limited warranty indicates how we feel about the reliability and durability of the ZX Series gauges.

Applications: Corrosion & Pitting, Tube & Pipe, Tanks, Boilers, Glass, Variety of Applications

ZX Series Kits Include: Ultrasonic thickness gauge, selectable transducer, couplant, manual, plastic carrying case, certificate of calibration and AA batteries. PC software and data transfer cable included with data logging gauges. PC software available for download from website.



*Limited 5 Year Warranty

Models	Operating	Specifications			Store Store	A READ	
	Temperature	Display	Data	Measuring	Features	Warranty	
ZX-1 & ZX-2		Multi-function 7 segment 4.5 digit liquid crystal display with 0.500 in digital height. Backlight is selectable on/off/auto, and selectable brightness (Lo, Med, Hi) options.	N/A	Range: 0.025 - 36" (Dependent upon material and transducer type) Resolution: 0.001 inches Velocity Range: 0.0120 to .7300 in/µs PRF: 200Hz Display Update Rate: 10Hz Velocity Settings: ZX-1: Adjustable on keypad ZX-2: Adjustable on keypad and selectable from 8 factory presets and 2 programmable custom velocity options.	The ZX-1 & 2 are basic fixed velocity gauges that require no special training to operate. Calibration is done by simply scrolling to a known material velocity, or selecting a commin material from a lists of material types in the ZX-2. The gauges were designed and built to withstand the roughest industry conditions, are affordable, and backed by a 5 year limited warranty. If you're looking for a quality instrument to reliably meet or exceed your application expectations, look no further.		
ZX-3 & ZX-5/ZX-5DL	- 22 to 167F	Multi-function 7 segment 4.5 digit liquid crystal display with 0.500 in digital height. Backlight is selectable on/off/auto, and selectable brightness (Lo, Med, Hi) options.	Sequential data storage, 40 files of 250 readings per file, for 10,000 readings (ZX - 5DL).	Range: 0.025 - 36" (Dependent upon material and transducer type) Resolution: 0.001 inches Velocity Range: 0.0120 to .7300 in/µs PRF: 200Hz Display Update Rate: 10Hz Velocity Settings: Gain: 40-50dB range in 3dB steps	Zero: Manual or Auto Probe Diameter: Selectable probe diameter for improved linearity High Speed Scan: Display the lowest reading found during a scan. Scan speed at 100Hz. Differential Mode: Display the +/- difference from a nominal value entered (ZX-5 Series) Alarm Mode: High & low alarm limits with audible and visual indicators (ZX-5 Series) VX Velocity: Measure in terms of velocity for nodularity testing (ZX-5 Series)	5 Year Limited	
ZX-6 & ZX-6DL		Multi-function 7 segment 4.5 digit liquid crystal display with 0.500 in digital height. Additional icons to indicate features and modes. Backlight is selectable on/off/auto, and selectable brightness (Lo, Med, Hi) options.	Sequential data storage, 40 files of 250 readings per file, for 10,000 readings (ZX - 6DL).	Pulse-Echo Range: 0.025 - 36" Echo-Echo Range: 0.100 - 6" in base metal, and coating 0.001 - 0.075" (Dependent upon material and transducer type) Resolution: 0.001 inches Velocity Range: 0.0120 to .7300 in/µs PRF: 200Hz Display Update Rate: 10Hz Gain: 40-52dB range in 3dB steps Time Dependent Gain: Used in both Pulse-Echo and Echo-Echo modes depending upon transducer	Zero: Manual or Auto Probe Types: Selectable probe frequency & diameter for improved linearity High Speed Scan: Display the lowest reading found during a scan. Scan speed at 100Hz. Differential Mode: Display the +/- difference from a nominal value entered Alarm Mode: High & low alarm limits with audible and visual indicators VX Velocity: Measure in terms of velocity for nodularity testing	d	

*Additional Dakota Corrosion, Precision, Specialty and Racing Series Thickness Gauges are Available Upon Request

Model	Item	Description	
ZX-1	Z-300-0001	Single velocity calibration. Velocity manually set using the VEL key on the keypad. Backlit display.	
ZX-2	Z-301-0001	Single velocity calibration. Selectable 8 common material velocities, 2 custom velocities, or set manually using the VEL key. Backlit Display.	
ZX-3	Z-302-0001	Easy field calibration; 1 or 2 point options. Selectable 8 common material velocities, 2 custom velocities, or set manually using the CAL key. Auto/manual zero, adjustable gain, selectable probe diameter (linearity), high Speed Scanning, and Backlit Display.	
ZX-5	Z-303-0001	Same features as the ZX-3 plus Alarm Mode (high/low limits), Differential Mode, and VX velocity gauge. CDC compatible serial over USB (standard).	
		*Optional accessory RS232 serial or Bluetooth modules available	
ZX-5 DL	Z-304-0001	Same features as the ZX-5 (less serial over USB), plus an on-board data logger - Stores 10,000 readings in 40 files of 250 readings per file. USB-C connectivity, Includes transfer cable.	
ZX-6	Z-305-0001	Same features/options as the ZX-5, plus echo-echo through paint multi mode. Thru-Paint range: 0.100" – 6.0" of base metal, with coating thickness from 0.001 to 0.075". Six selectable high damped probe diameters and frequencies.	
		*Optional accessory RS232 serial or Bluetooth modules available	
ZX-6 DL	Z-306-0001	Same features as the ZX-6 (less serial over USB), plus an on-board data logger - Stores 10,000 readings in 40 files of 250 readings p file. USB-C connectivity, includes transfer cable.	

*Additional Dakota Corrosion, Precision, Specialty and Racing Series Thickness Gauges are Available Upon Request

FLAW DETECTORS DAKOTA, Danatronics & SONATEST

The DAKOTA DFX-8 Series Flaw Detector & Thickness Gauge

The DFX-8 series by Dakota is both an Ultrasonic Flaw Detector & a Multi-Mode Ultrasonic Thickness Gauge all in one quality instrument. The DFX-8 features an easy-to-use interface, a fantastic test range (from 0 inches to 100 feet), is lightweight (4.5 lbs) and cased in rugged IP-65 metal housing, making this machine a top-notch fully loaded instrument that doesn't skimp on quality.



Standard Inclusions: DFX-8 Series Flaw Detector including 4 GB SD internal & up to 64 GB external SD slot, lithium ion battery, battery charger, transport case, operating manual with DakView PC software & USB cable. Also features DAC, AWS, TCG, DGS sizing toolkits and a 4oz bottle of couplant.

*Limited 2 Year Warranty

Model	Item	Description
DFX-8	/_/5/1_00000	Dakota Ultrasonics DFX-8 Kit Includes: Operating Manuals, DakView3 PC Software & USB Cable, 4 oz. Couplant, Lithium Ion Battery, Line Power Adaptor, Universal Power Cable, Hard Carrying Case and Calibration Certificate
DFX-8+	Z-251-0001	Dakota Ultrasonics DFX-8+ Kit Includes: Operating Manuals, DakView3 PC Software & USB Cable, 4 oz. Couplant, Lithium Ion Battery, Line Power Adaptor, Universal Power Cable, Hard Carrying Case and Calibration Certificate







The Danatronics ECHO FD Flaw Detector

Mechanically the ECHO FD has been designed from the ground up to offer the latest in ergonomic design. ECHO FD has a convenient rubber boot with stand, 4 point chest harness, padded strap and even a finger hole for the ultimate in instrument balance. We even designed in the ability to use a magnetic pipe stand. All keys can easily be reached with your thumb and the keys are raised rubber keypad with superior tactile feedback. The "F" keys light up for alarm and charging conditions.

Standard Inclusions: ECHO FD including 2 GB SD card, li-ion battery, battery charger, transport case, manual with Data XL, USB cable, DAC, AWS software, API 5U, 2 gates, B-Scan, 2oz bottle of couplant and rubber booth with padded wrist strap and stand.





Model	Description
ECHO FD	Hand-Held Digital Ultrasonic FLAW DETECTOR including: 2 Independent Gates, DAC, AWS & Datalogger w/ B-Scan software, NIST Traceable calibration certificate

*ECHO 7FD, 8FD & 9FD Series Flaw Detectors with Thickness Gauge Modes are Available Upon Request

Sonatest WAVE Interactive Flaw Detector

What if you could tailor the settings on your UT device and alter it to your own process and people's needs? An instrument where all the useful parameters are pre-set and available in less than two clicks? Now you can.

Introducing WAVE by Sonatest. It integrates the latest technologies available in order to create a revolution in the ultrasonic non-destructive testing equipment market.

Not only is it innovative, but the customisable interface also optimises the daily workflow, and a unique and embedded interactive scan plan, with ray-tracing capability and simulation tools, consolidates your results.

Its wifi capability allows you to access it anywhere in the field, eases data transfer, application installation and manages calibration date and software version.





Utouch Technology

The Sonatest Utouch Technology allows your device to operate in the same way as a mobile phone. Combined with rugged components and an intelligent algorithm which makes the distinction between couplant and finger, the Sonatest WAVE is the first true industrial touch-screen device on the market.

	Waya Concept	Wave Applications	Up to 50 Apps	Transmitter	PRF	1500
♥ J19407/29 1954 29%	Wave Concept	Wave Utouch Technology	P-CAP Multi Touch	Transmitter	Pulser (Voltage)	100 to 500 V
		Crown and Root Geometries			Dynamic Range	120 dB
AWS TCG		Weld Overlay		Dessiver	Bandwidth	0.2 to 20 MHz
Wed API		TKY / Nozzle / Flange Geometries		Receiver	Filters	20 filters
Pipe Pipe		Cured Surface	Yes		Signal Averaging	Yes
CSC TKY DUN	Scan Plan	Live Raytracer			Battery Life	10 Hours
Curved surface		Projected A-Scan		Display Size (Resolution)		7" Wide
T-Joint Bolt		True Depth on Complex Shapes			Dimensions	8.7" x 6.8" x 2.5"
		Gates	4	Weight	3.7 lbs.	
U Z		DAC/Split DAC		General	IP Rating (Design)	IP 67
O Mar		TCG Op	Operation Temperature	-10°C to 45°C		
O NAVE	Mascuramenta	AVG/DGS			WiFi	Vec
	Measurements	AWS	Standard		Speaker and Audio Recording	Yes
		API				
		Curved Surface Correction (CSC)		Warranty 2 Year War	2 Year Warra	anty
		TKY and Complex Shapes				

Model	Description
	Sonatest WAVE BNC Package Includes: WAVE Flaw Detector with BNC Connectors, Battery & Charger (with mains cable), Ultrasonic Couplant, Ethernet Adapter & Cable, User Manual, Quick Start Guide, Certificate of Calibration and Conformance & Carrying Case

45

*Sonatest Sitescan and Masterscan Series Flaw Detectors are Available Upon Request

TRANSDUCERS AND WEDGES

DAKOTA, Danatronics, Olympus, SONATEST & Technisonic

QED offers a complete range of high performance, high technology ultrasonic transducers for thickness measurement, general flaw detection and Phased Array applications.

Each transducer is made to exact standards regarding acoustical, electronic and mechanical properties. Our transducers are tested thoroughly, typcially at three stages of manufacture. A complete range of transducer types are available with a variety of connector styles, case configurations, frequencies and element sizes.

A complete range of transducer types are available with a variety of connector styles, case configurations, frequencies and element sizes.

OLYMPUS



technisonic research inc.

Item	Manufacturer	Description
D790-SM	OLYMPUS	Dual Transducer, 5 MHz, 0.434" Tip Diameter, Straight Microdot Connector, to be used with the LCMD-316-5B Cable
LCMD-316-5B	OLTMP05	Dual Molded LEMO 00 to Microdot cable, 5 ft, for use with D790-SM













CABLES

We offer a complete line of transducer cables. These cables are designed for optimum performance and durability.

Item	Description	Cable Type	Length
Q-BM-6	BNC/Microdot		
Q-L0M-6	Lemo 00/Microdot		
SP*001647	BNC/BNC	RG 174	6'
Q-BL1-6	BNC/Lemo 1		
Q-BL0-6	BNC/Lemo 00		

*Custom Configurations and Lengths are Available Upon Request

VISUAL MEASURING DEVICES WELDING GAUGES

 Image: Non-Walk
 Image: Non

► Hi-Lo Welding Gauge - Measures root weld space, eliminates rejects - improves productivity

▶ Bridge Cam Gauge - Angle of preparation, 0-60 degree. Measuring: excess weld capping, depth of undercut, pitting, fillet weld length & throat size and misalignment

- ► V-WAC Undercuts/Pits to 1/4 Inch, Crowns to 1/4 Inch by 1/64 Inch Increments (Tolerance .006")
- ▶ Pipe Pit Gauge Range is 0 to 1/2" in 1/64" & .010 Increments. Arm can be locked in place at any dimension
- ► Automatic Weld Size Gauge for accurate measurement of butt fillet type welds. Check reinforcement, throat and determine the leg size of the fillet weld
- ▶ 7-Piece Fillet Weld Gauge Set Check Fillet Leg and Throat size, 1/8" to 1"

Item	Description
SP*001144	Economy Single Purpose Hi-Lo Welding Gauge (Inch)
SP*001145	V-WAC Welding Gauge (Inch)
SP*001146	Bridge Cam Gauge Welding Gauge (Inch & Metric)
SP*001147	Pipe Pit Welding Gauge (Inch)
SP*001148	Automatic Weld Size Welding Gauge (Inch)
SP*001149	7-Piece Fillet Weld Gauge Set (Inch & Metric)



_

VIDEO INSPECTION SYSTEM

WOHLER VIS 700 HD Inspection System & Accessories

The Wohler VIS 700 inspection camera offers exactly what professionals have been waiting for: razor sharp high definition images, a focus function for precise inspection, and now wireless locating. The Wohler VIS 700 is the ideal inspection camera for waste water pipes, flue gas and ventilation lines as well as NDT and plumbing applications.

Fully Digital Camera System

A new digital high-resolution sensor assures amazingly sharp images. With the Wohler VIS 700, professionals are able to plan their maintenance services on the basis of clearly visible facts. The displayed level indication ensures you to keep orientation in the pipe. The camera display shows the camera head position and angle for ease of navigation. The home function allows you to realign the camera head straight forward when needed. HD images are displayed for you on the brilliant, touch screen high-resolution monitor.

The Wöhler VIS 700 inspection camera is designed to transmit live video data to smart devices via Wireless LAN. While conducting an inspection, you have the option to stream live images and videos on a smartphone or tablet. You can also save all footage to an SD card for reviewing at a later time.

Individual Control of Sharpness

The focus function via touch screen or joystick makes it possible to precisely control the depth of focus. A simple tip on the joystick ensures a precise, crystal clear image on the screen. Additional settings and extras, such as the touch screen keyboard, are accessable by tapping the touchscreen monitor.



MEDIA WÖHLER VIS 700

WÖHLER

VIS 700 App

The free Wohler app allows control and video streaming on your smartphone / tablet. It can't get much more comfortable.

Item	Description		
7082	Wohler VIS 700 Monitor with 7" HD TFT-broad band color monitor incl. 5 ft connection cable, Glare shield, Li-Ion battery, Wohler HD pan-and tiltable camera head 1.5" (detachable), SD card 32 GB, Camera rod 0.34" x 0.22" - 100 ft long, 3 replacement plastic domes, Anti-slide mat, USB charger with USB-C cable and plastic carrying case		
7498	Wohler VIS 700 Monitor with 7" HD TFT-broad band color monitor incl. 5 ft connection cable, Glare shield, Li-Ion battery, Wohler HD miniature camera head 1" (detachable), Wohler HD pan-and tiltable camera head 1.5" (detachable), SD card 32 GB, Camera rod 0.34" x 0.22" - 100 ft long, 3 replacement plastic domes, Anti- slide mat, USB charger with USB-C cable, plastic carrying case, Guidance sleeve and Guidance sleeve with protection cage		

Item	Description	
8859	ohler HD Pan and Tilt 1.5" Color Camera Head (Detachable)	
7613	Wohler HD Miniature Camera Head 1" (Detachable)	
3675	/ohler Replacement Polycarbonate Domes for 1.5" Camera Head (10 pcs.)	
61094	Wohler Rechargable Battery VIS 700	
11168	Wohler VIS 700 USB Adaptor/Charger USB	







LEAK DETECTION VACUUM BOX TESTING VACUUM BOXES, ACCESSORIES & SOLUTION



Used for leak testing in building of ships, barges, tanks, or any seal weld application. All Vacuum Boxes come with a complete Venturi and Non-Certified Gauge.

Item	Design	Size
VB18	Flat	18"
VB30	Fidt	30"
VB18C	Corner	18"
VB30C	Comer	30"
VB30FX	Flexible	30"
VB3WIC	3 Way Inside Corner	Triangle - 9.9" x 8.6" with .25" Radius
VB24BT	Boat Tail Flat	24"

*Pricing is Based off a Non-Certified Gauge, Call for Pricing if a Certified Gauge is Required

Item	Design		
VB-PUMP	um Pump - Air Flow 26.5" Mercury; 110 Volt; 13 PSI		
VB-Venturi	Venturi made of steel with inlet thread of 3/8" NPT outlet and vacuum ports are 1/2" NPT able to Vacuum up to 23 Hg (Used with Compressed Air)		
VB-Gauge	2" Steel gauge with brass 1/4" NPT range is 0-30 Hg VAC (Non-Certified)		
VB-Gauge-C	2" Steel gauge with brass 1/4" NPT range is 0-30 Hg VAC (NIST Certified)		
SP*001550	Type 1 SHERLOCK 5-Second Leak Detector, 1 Gallon		



HARDNESS TESTING TELEWELD

BRINELL HARDNESS TESTING

Telebrineller hardness measurements are a direct comparison to a known physical reference and therefore, measurements are not subject to inaccuracies due to; alloy, thickness, geometry, position, etc., that are common with many other portable testers.

Item	Description		
BHNTS	Telebrineller Complete Set; Includes five (5) bars of selected hardness; Microscope; Computer; Bar Holder; Calculation Pad, all inside Carrying Case		
BHNXXX	Telebrineller Test Bars (Available in 145-350 Hardness)		
239-24	Halteman Filletester (Designed for Brinell Hardness Testing of fillet welds and other hard to reach areas)		

PHASE II

PORTABLE HARDNESS TESTER

State of the art, digital portable hardness tester is designed to test the hardness of large hard metal parts. Loaded with useful functions only found on high priced models the PHT-1800 portable hardness tester is clearly setting a new industry standard by being the most accurate, economically priced portable hardness tester on the market today. Fast test speeds coupled with memory and output, this unit is a hand's down winner whether you are out in the field or in the QC shop.

Item	Description
	Digital Portable Hardness Tester which can perform tests that easily convert to the most popular hardness scales (Rockwell, Brinell, Vickers, Shore, etc.). Includes: Base instrument, Impact device D, Calibrated test block, Custom carry case, Cleaning brush and Operation manual









FLAWED TEST SPECIMENS

STANDARD SPECIMEN KITS



FlawTech Standard Kit Specimens are designed to enhance the training and development of new and veteran technicians. Kits will assist with basic flaw detection and sizing of real flaws found in common weld geometries.

Item	NDT Method	Specimens/Kit	Discontinuities
DK-1	NDT Demonstration Kit (Includes x-ray film for RT pipe specimen)	5 (3 Plates, 1 Tee and 1 Pipe)	11 (2 each plates & tee, 3 in pipe)
RK-1	Radiography Kit (Includes x-ray film for each specimen)	10 (8 Plates, 1 Pipe and 1 Tee)	
VK-1	Visual Kit	10 (7 Plates and 3 Tees)	20(2 arch chargemen)
UK-1	Ultrasonic Kit	10 (8 Plates, 1 Pipe & 1 Tee)	20 (2 each specimen)
MK-1	Magnetic Particle/ Liquid Penetrant Kit	10 (8 Plates and 2 Tees)	
RR-1	Reference Radiograph Set	16 Radiographs	20 (Incl. 6 Processing Defects)



PRACTICAL EXAM SPECIMENS

- Practical exam specimens are larger than our "standard" kit specimens
- ▶ 12 UT and 12 MT / PT specimens to choose from



- ► Each specimen will contain 3 randomly placed "real" flaws
- ► Designed to enhance the training and qualification of level I & II personnel with regards to ISO9712, PCN & TC 1A
- Purchase any combination of specimens to make your set
- Custom specimens are available upon request



UT THICKNESS SPECIMENS

Corrosion, Erosion, and Lamination UT Thickness Training & Certification Plates

Specimen Type	Plate Size - 8" x 8"	Thickness	Discontinuities
		0.25″	
		0.375"	
Four (4) Section Plate		0.50″	2
		0.75″	
		1.0″	
Sixteen (16) Section Plate		0.25″	
		0.375"	
		0.50″	4
		0.75″	
		1.0″	







SERVICE

QED provides comprehensive repair services for equipment across all NDT modalities and manufacturers. Our team of qualified technicians will restore your equipment to working order in accordance with manufacturer standards quickly and efficiently, saving you time and money. We also provide onsite repairs, calibrations, and installations.

EQUIPMENT EVALUATION & REPAIR WHAT WE REPAIR

- ► UV Lights
- ► MPI Equipment (Yokes, Portables and Bench Units)
- ► LED Film Viewers
- Densitometers
- X-Ray Equipment (Controllers, Generators & Tubes)
- ► Radiation Safety/Survey Equipment
- ► Film Processors

	PAIR				NOS
	Сомто				X
u Vision" 365		Statu Canes			
	0			Se al	
o= ()					
South		FV-2009	Portable Industrial LED Film Viewer		
ect.	0	ICN DT'			. 5
5	<u> </u>				
		Contras Internal Internal Internal			

17 www.co 334.8 te

Item	Description		
SP*001437	-House Equipment Evaluaiton Fee		
ROC	Rush Order Charge		
ISTL	In-House Service Technican Labor (Hour)		

*In-House Evaluation Fee (Per piece of Equipment) will be waived if Equipment is Repaired or New Equipment is Purchased

EQUIPMENT CALIBRATION/CERTIFICATION

QED provides professional calibration services in compliance with the National Institute of Standards and Technology (NIST) for a wide range of meters, gauges, and other NDT equipment used in various industries.

RADIOGRAPHY

			RA-500 RATE ALARM	
Item	Code	Frequency	Description	
C-RSM	State & NRC	6 Months	Radiation Survey Meters	
C-ARM	State & NDC	12 Months	Alarming Rate Meters	
C-PD	State & NRC 12 Months		Pocket Dosimeters	
SP*001580	State & NDC	12 Months	Tracerco PED	
SP*001709	State & NRC 12 Months		Mirion PED (DMC 3000 & RAD-60R)	
SP*001503	ASME Sec. V	90 Days	Densitometer	
SP*001557	ASTM E1390	Upon Repair	Certification of Light Intensity on Film Viewers per ASTM E1390	
SP*001504	ASME Sec. V	12 Months	Certification of Density Step Tablet (All Brands)	

BLACKLIGHTS & LIGHT METERS

Item	Code	Frequency	Description
SP*001650	EN ISO 3059	12 Months	Certification of Light Output
SP*001335	ASTM E1444 & E1417	6 Months	Calibration of a Dual Sensor Light Meter (Non-Programable)
SP*001336	ASTM E1444 & E1417		Calibration of a Single Sensor Light Meter (Non-Programable)
SP*001527	ASME Sec. V, ASTM E3024	12 Months	Calibration of a Dual Sensor Light Meter (Non-Programable)
SP*001528	& E165	12 Months	Calibration of a Single Sensor Light Meter (Non-Programable)
XR-1000/R	ASTM		Calibration of AccuMAX XR-1000 Read Out Unit
XDS-1000/R	ASTM		Calibration of AccuMAX XDS-1000 Dual (UV-A / VIS) Light Sensor
XS-555/L/R	ASTM E1742	12 Months	Calibration of AccuMAX XS-555/L Luminance Sensor
XP-2000/R	ASTM	6 or 12 Months (Depending upon ASTM Standard)	Calibration of AccuPRO XP-2000 Dual (UV-A / VIS) Sensor Light Meter

MAGNETIC PARTICLE

Item	Code	Frequency	Description
SP*001026	ASTM E1444 & E3024	6 Months	Yokes (All Makes & Models)
SP*001262	Customer	12 Months	Certification of 10 lb. Test Weight
SP*001021	ASTM E1444 & E3024	6 Months	Magnetic Darticle Calibration (Bench er Dartable Unit)
SP*001529	ASME Sec. V	12 Months	Magnetic Particle Calibration (Bench or Portable Unit)
SP*001154	ASTM E1444 & E3024	6 Months	Analog Magnetometer/Gaussmeter Calibration
SP*001645	ASTM E1444	6 Months	Flootronic (Digital) Caucamator Calibratian
SP*001646	ASTM E3024	12 Months	Electronic (Digital) Gaussmeter Calibration

*Pricing does not include applicable travel expenditures if Calibration is required at Customer's location

ULTRASONIC

Item	Code	Frequency	Description
SP*001500	ASTM E317		Calibration of an Ultrasonic Thickness Gauge
SP*001562	ASME Sec. V	12 Months	Calibration of an Ultrasonic Flaw Detector
SP*001505	ASTM E797		Certification of Ultrasonic Thickness Step Wedges







SPECIAL SERVICES



Anti-Corrosion Treatment

LED FILM VIEWER MODIFICATION



 Item
 Description

 SP*001710
 Anti-Corrosion Treatment to LED Film Viewer (Includes a 6 Month Guarentee)

*Modification is available for most make and model LED Film Viewers

PREVENTATIVE MAINTENANCE (PM)

QED offers customized Preventative Maintenance Services to minimize downtime and ensure quality inspections. Our detailed electronic PM records allow us to not only identify unusal machine wear but also operator misuse that could cause premature equipment failure or safety concerns.

FILM PROCESSORS

Item	Brand	Model	Description
SP*001510	CADECTDEAM	M37 Plus	
SP*001455	CARESTREAM	M43iC	
SP*001359		NOVA	*Clean Racks/Tanks with Systems Cleaners and Replace Filters - Check Racks, Drive,
SP*001337	GE (AGFA)	M-ECO	Dryer and Pumps for Missing or Worn Parts*
SP*001348		NDT-U	

0. 0010.0		
SP*001454		
SP1001454	101-31	

*Above pricing is based upon PM being performed at Customer's location and does not include applicable travel expenditures



FIELD SERVICE CALL-OUT RATES

QED also provides on-site Field Repairs and Calibration services. Please call your local branch for more details.

Item	Description		
STT	Service Technician Travel		
STL	Service Technician Labor		
ESTL	Emergency (Rush) Service Technician Labor		

*The above rates are based off work being performed Monday - Friday (8AM-5PM). If work is needed to be performed outside of this time, then an Estimate will be provided

*A Four (4) Hour Labor (On-Site) Minimum applies for all local call-outs in addition to applicable Travel Time









www.qeddirect.com

"FOR ALL YOUR NDT EQUIPMENT, SUPPLIES AND SERVICE - THINK QUALITY"

REPRESENTING OVER 30 MANUFACTURERS



BUFFALO, NY

75 Bank Street Orchard Park, NY 14127 Telephone: (716) 667-7703 sales@geddirect.com

HOUSTON, TX

4044 Strawberry Road Pasadena, TX 77504 Telephone: (713) 277-7913 txsales@geddirect.com





