

Starlink Mini Vision Plus Pole Adapter & End Cap - V7

Fitting Instructions

- Remove the existing Vision Plus pole from your caravan or motorhome and unscrew the locking screw connecting the Antenna so it can be removed.
- Unscrew the locking screw at the bottom of the Vision Plus pole to remove the end cap.
- Push the Starlink Cable (and network cable if required) through the new end cap, then up through the Vision Plus Pole and then through the adapter fitting.



- Push the Adapter Fitting onto the end of the Vision Plus Pole and align the hole with the encapsulated stainless-steel nut inside the Adapter.



Version 7
June 2025

Starlink Mini Vision Plus Pole Adapter & End Cap - V7

Fitting Instructions

- Push the end cap on to the bottom end of the Vision Plus Pole and align the hole with the encapsulated stainless-steel nut inside the Adapter.



- Replace and tighten both locking screws on the Vision Plus Pole.
- Do not over tighten the locking screws as this can damage the encapsulated nut.



Version 7
June 2025

Starlink Mini Vision Plus Pole Adapter & End Cap - V7 Fitting Instructions

- Feed the Starlink Cable (and network cable if required) through the Starlink Pole Mount and connect the cables to the Starlink.



- Clip the Starlink Mount into the Starlink.




Version 7
June 2025

Questions or technical support please email - sales@3d-accessories.co.uk
Web - www.3d-accessories.co.uk

Starlink Mini Vision Plus Pole Adapter & End Cap - V7 Fitting Instructions

- Fit the Vision Plus Pole Adapter into the Starlink Mini mount, and tighten up the screw on the Mini Mount until the pole is secure.

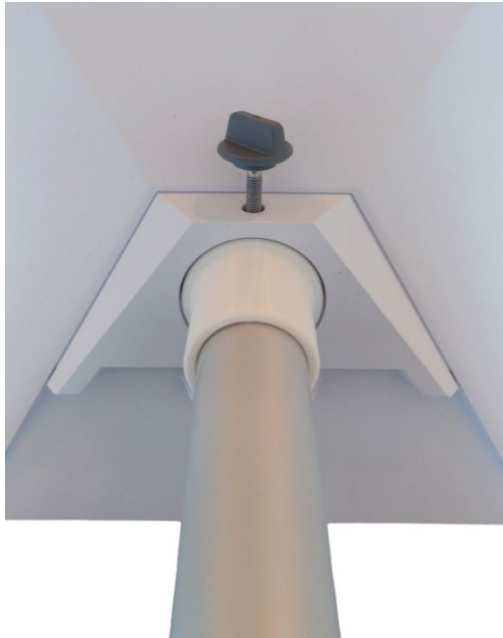

- Fit the Vision Plus Pole back into your Caravan or Motorhome.





3D
Accessories

Starlink Mini Vision Plus Pole Adapter & End Cap - V7 Fitting Instructions

- Adjust the positing of the Starlink by twisting the Vison Plus Pole in the usual way.



- It is advised that you lower and remove the Starlink before travel, to protect the Starlink from damage during transit.

Version 7
June 2025

Questions or technical support please email - sales@3d-accessories.co.uk
Web - www.3d-accessories.co.uk