


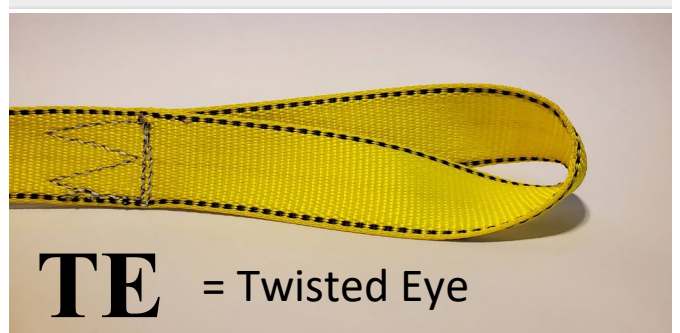
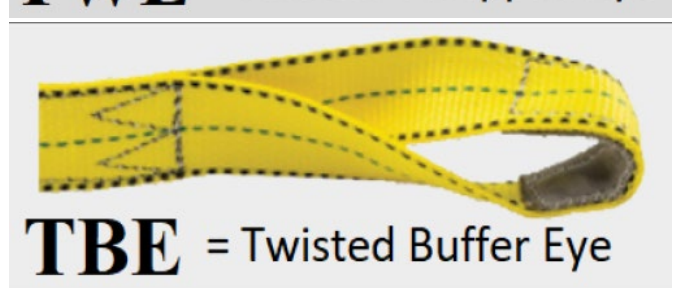
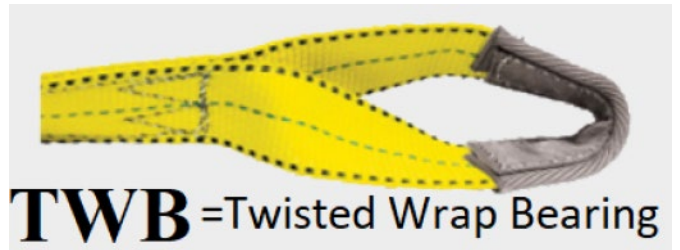
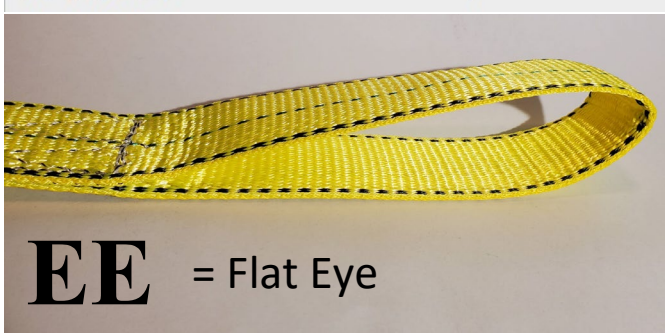


# Sling Prefixes

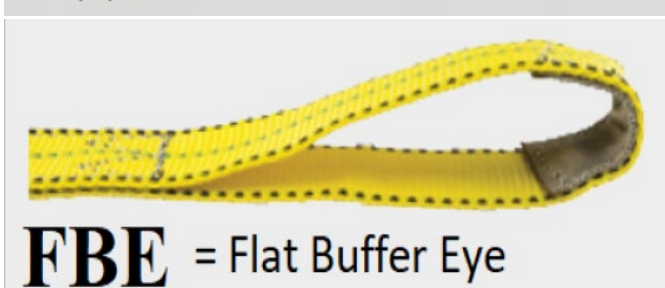

## Part Number Explanation

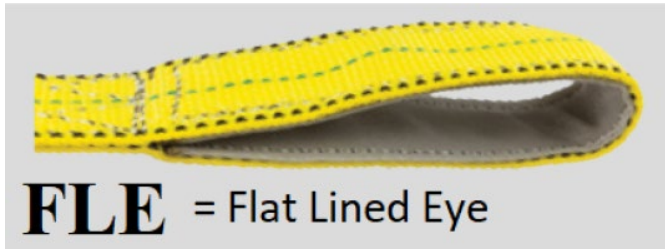

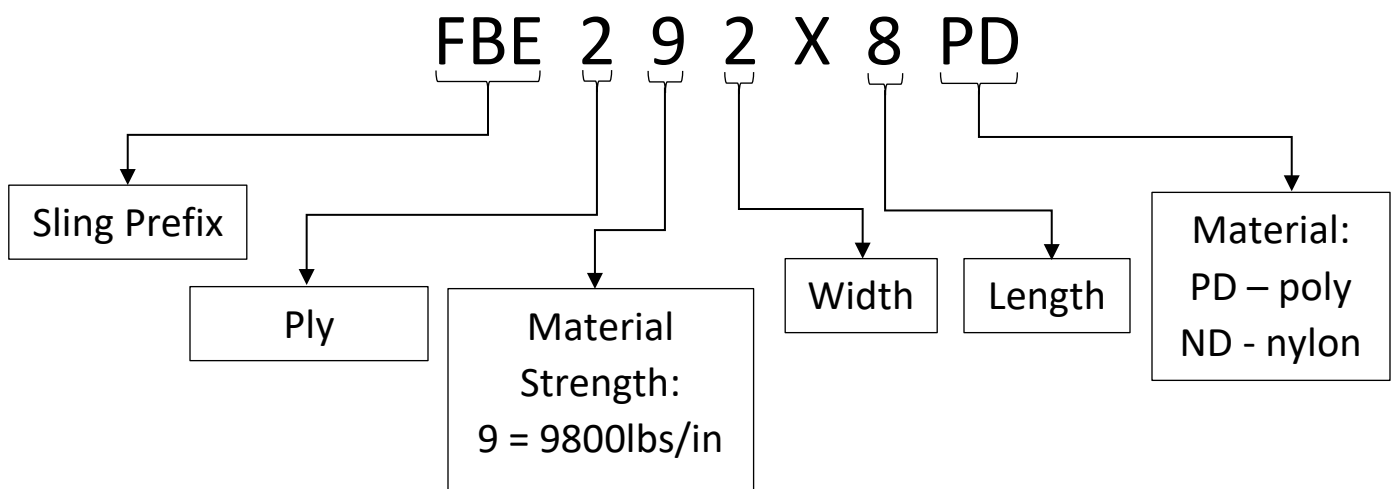


## INSPECTION CRITERIA FOR WEB SLINGS

The following photos illustrate some of the common damage that occurs to web slings, indicating that the sling should be taken out of service. For inspection frequency requirements, see the General Information section of this catalog and the safety bulletin provided with each sling.

### SURFACE AND EDGE CUTS

**WHAT TO LOOK FOR:** Broken fibers of equal length indicate that the sling has been cut by an edge. **Red core warning yarns may or may not be visible and are not required to show before removing slings from service.** It is important to realize that all of the fibers in web slings contribute to the strength of that sling.


**TO PREVENT:** Always protect synthetic slings from being cut by corners and edges by using cut protection. See the Sling Protection section in this catalog.

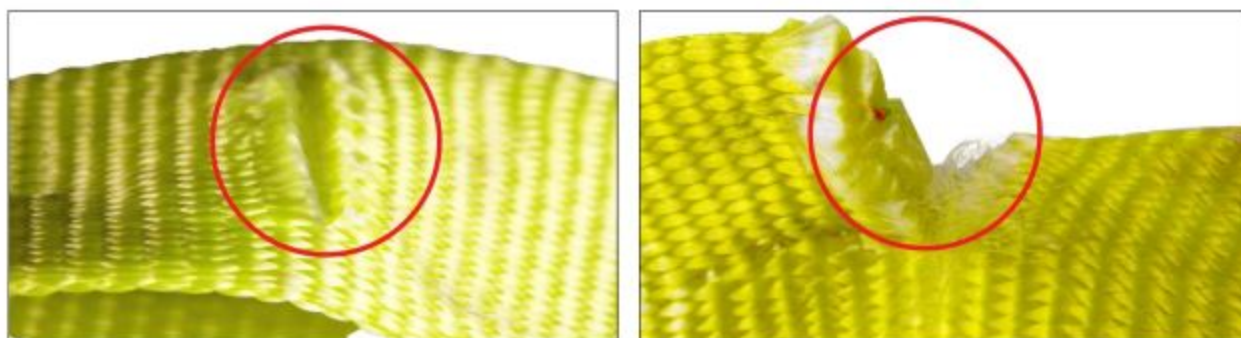

### HOLES, SNAGS & PULLS

**WHAT TO LOOK FOR:** Punctures or areas where fibers stand out from the rest of the sling surface.

**TO PREVENT:** Avoid sling contact with protrusions, both during lifts and while transporting or storing. See the Sling Protection section in this catalog.

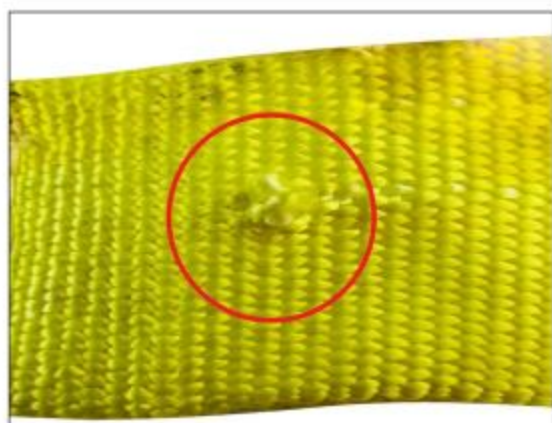

### ABRASIVE WEAR

**WHAT TO LOOK FOR:** Areas of the sling that look and feel fuzzy indicate that the fibers have been broken due to contact and movement against a rough surface. Affected areas are usually stained.

**TO PREVENT:** Never drag slings along the ground. Never pull slings from under loads that are resting on the sling. Use wear pads between slings and rough surface loads. See the Sling Protection section in this catalog.




## INSPECTION CRITERIA FOR WEB SLINGS

### HEAT / CHEMICAL

**WHAT TO LOOK FOR:** Melted or charred fibers anywhere along the sling. Heat and chemical damage can look similar and they both have the effect of damaging sling fibers and compromising the sling's strength. Look for discoloration and/or fibers that have been fused together and often feel hard or crunchy.


**TO PREVENT:** Never use nylon or polyester slings where they can be exposed to temperatures in excess of 200°F. Never use nylon or polyester slings in or around chemicals without confirming that the sling material is compatible with the chemicals being used.

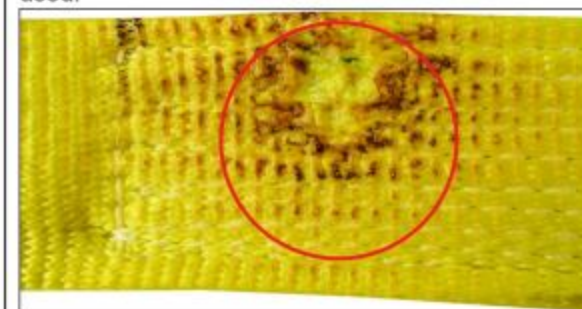

### KNOTS

**WHAT TO LOOK FOR:** Knots are rather obvious problems as shown below. Knots compromise the strength of slings by not allowing all fibers to contribute to the lift as designed. Knots may reduce sling strength by up to 50%.

**TO PREVENT:** Never tie knots in slings and never use slings that are knotted.

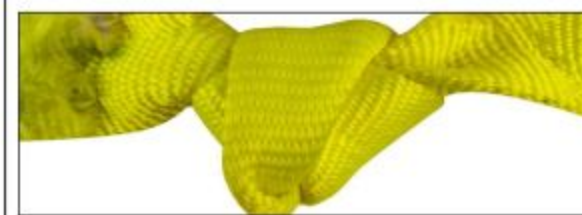


**Red Core Yarns** are an additional aid to warn of dangerous sling damage. All standard *Lift-All* Web Slings have this warning feature. The red core yarns become exposed when the sling surface is cut or worn through the woven face yarns. When red yarns are visible, the sling should be removed from service immediately. For other inspection criteria see OSHA/Manufacturer regulations in the General Information section of this catalog and the safety bulletin provided with each sling.

### BROKEN / WORN STITCHING

**WHAT TO LOOK FOR:** Loose or broken threads in the main stitch patterns. The stitch patterns in web slings have been engineered to produce the most strength out of the webbing. If the stitching is not fully intact, the strength of the sling may be affected.

**TO PREVENT:** Never pull slings from beneath loads where stitch patterns can get hung up or snagged. Never overload the slings or allow the load edge to directly contact the stitch pattern while lifting. Never place a sling eye over a hook or other attachment whose width/diameter exceeds 1/3 of the eye length.

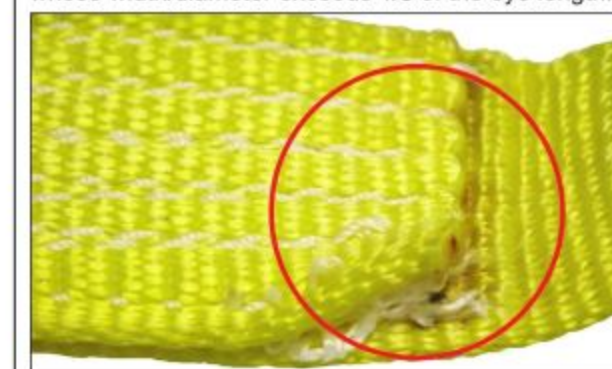

### ILLEGIBLE OR MISSING TAGS

**WHAT TO LOOK FOR:** If you cannot find or read all of the information on a sling tag, OSHA requires that the sling shall be taken out of service.

**TO PREVENT:** Never set loads down on top of slings or pull sling from beneath loads if there is any resistance. Load edges should never contact sling tags during the lift. Avoid paint or chemical contact with tags.



General Information  
Web Slings  
Round Slings  
Sling Protection  
Wire Rope  
Chain Slings  
Rigging Hardware  
Mesh Slings  
Load Huggers  
Tow Products  
Lift-All Hoists  
Hoist Rings  
Plate Clamps  
Lifting Devices

General Information  
Web Slings  
Round Slings  
Sling Protection  
Wire Rope  
Chain Slings  
Rigging Hardware  
Mesh Slings  
Load Huggers  
Tow Products  
Lift-All Hoists  
Hoist Rings  
Plate Clamps  
Lifting Devices