Linear Steam Head

- Quiet, even distribution of steam
- No field assembly required
- Finished Look

- No moving parts
- Minimal profile
- Aroma Feature

Linear Steamhead Installation


(3/4" NPT)


IMPORTANT: Do not disassemble steamhead. MrSteam's steamhead is shipped fully assembled and requires no additional assembly.


Locate steamhead 6-12 inches above floor, except for tub/shower enclosures; install 6 inches above tub top edge.

/ CAUTIONS

- Because the steamhead and direct steam emissions are very hot, locate the steamhead where incidental contact by bather with the steamhead or direct steam emission cannot occur.
- Linear Steam Head model 104480 is suitable for MrSteam generator models MS90– 400, MSSUPER1–3 and MX4-MX6.
- Two 104480 linear steamheads must be used for models MX4, 5 & 6
- Using model 104480 for any steam generator model larger than the MX6, or for any non MrSteam brand generators may result in an improper installation or hazardous condition.
- For residential use only.
- Install in a upright orientation only. Installation in a any other orientation may concentrate the steam and result in excessive temperatures.

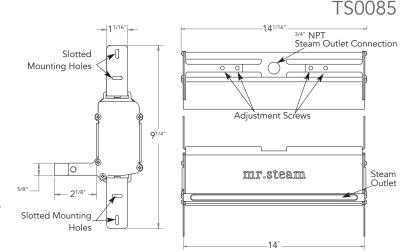

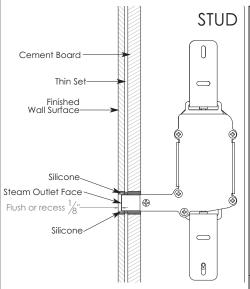

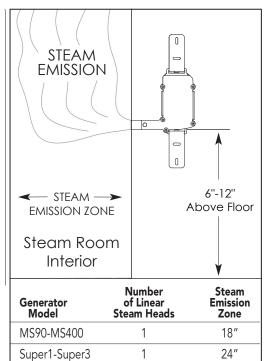

2

MX4-MX6

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.


MODEL	PROJECT INFORMATION	
104480 For MS90 - MSSUPER3 Two required for MX4, MX5 and MX6. BB BB CBB CBB CBB CBB CBB CBB CBB CBB	Location:	Contractor:
	Architect:	Submitted By:
	Engineer:	Date:
Notes:		

24"

Linear Steam Head® TS0085

Accessories

CAUTIONS because the Steam Head, Faceplate, Diverter, AromeTray, Escutcheon, Finished Diverter, and direct steam emission are very hot, locate the Steam Head, Faceplate, Diverter, AromeTray, Escutcheon, Finished Diverters where incidental contact by bather or direct steam emission cannot occur.

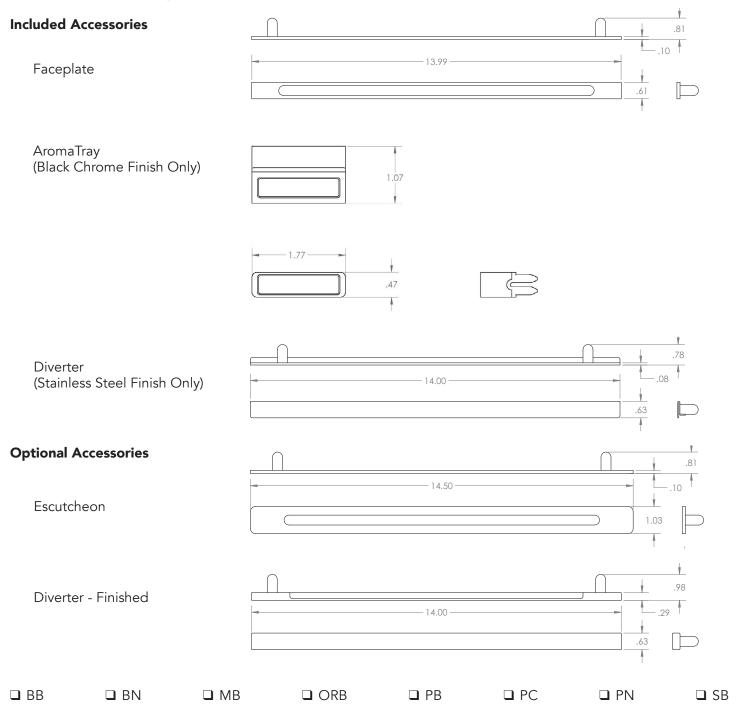

NOTE: Drawings are for illustrative purposes only. Consult with qualified designer, architect or contractor for steam room construction.