
# Scraan

RER & RHR & REN


Door / Digitizer Removal & Installation

Instructions

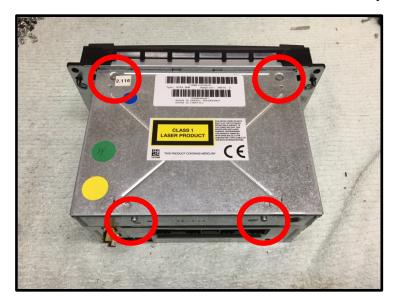


Step 1 –

Remove 4 TORX screws from top cover of radio

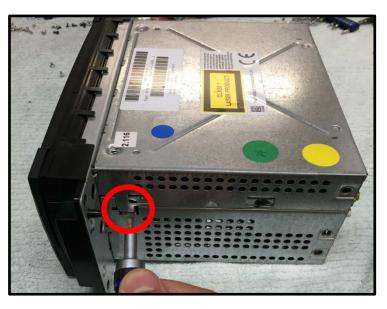

Step 2 –

Separate top cover by using screwdriver from side of radio

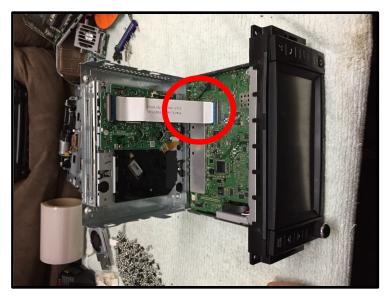


Step 3 –

Once top of radio is open, unclip ribbon connector and remove top



Step 4 –

Remove TORX screw and unclip all wires

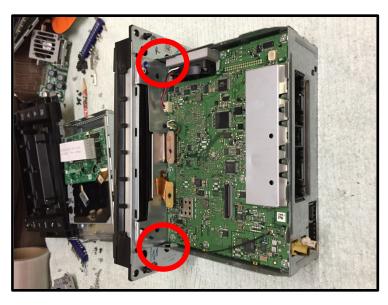

Step 5 –

Separate front of radio by pushing metal sides at these point while pulling apart



Step 6 -

With front of radio off slide pin connectors to inside to unlatch door



Step 7 –

With door off remove 5 TORX screws from back of door



Step 8 -

Straighten all metal tabs, separate back of door with screwdriver




Step 9 –

Once back of off or door, disconnect ribbon connector for digitizer



Step 10 -

Use knife to carefully separate digitizer from LCD

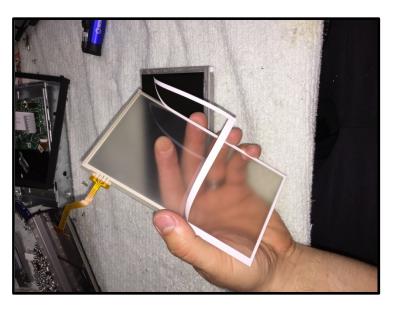


Step 11 –

Peel screen protector and white glue cover from new digitizer



Step 12 –

Align digitizer and press firmly to seal on LCD

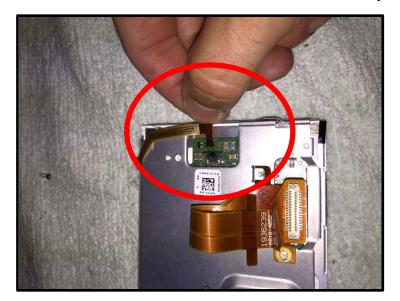

Step 13 –

Replace Ribbon connector



Step 14 –

Replace 5 TORX screws re-bend metal tabs



Step 15 –

Replace door by inserting diagonally and lining up pins to tracks. Fish ribbon connector through opening



# Step 15 -

Re- insert pins to hold door in place push door back closed.



# Step 16 –

Replace front of radio start with bottom pins then turning front of radio up



# Step 17 –


Re connect all wires and replace TORX screw in middle of board

## לבופפח לטוקפסח




# Step 18 –

Re-Install top of radio by starting with back first

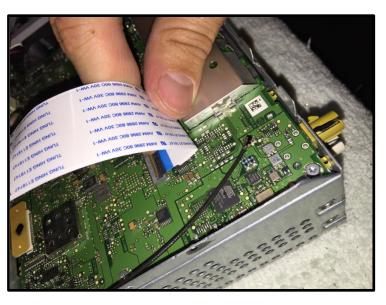

# Step 19 –

Re insert Ribbon and close clip to secure

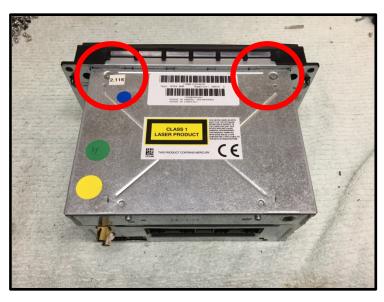

# Step 20 –

Replace screws on top of radio



Step 21 –

Please Leave Positive Feedback and spread the word about us.

# Thank You!