



Abrasive Belts

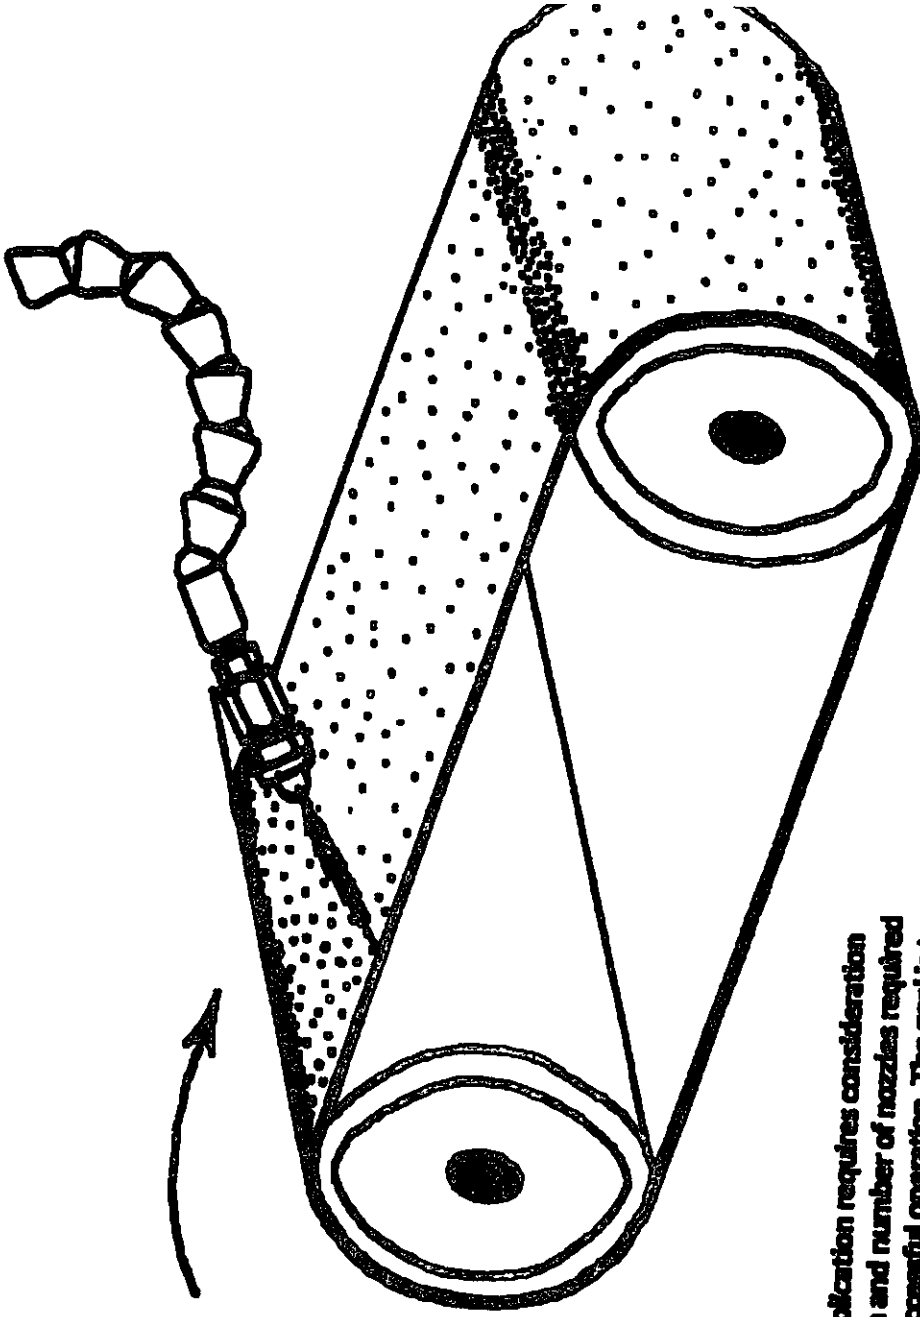

MerLicator

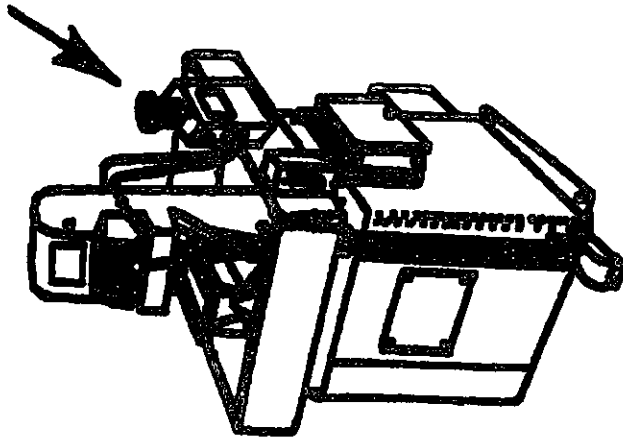

The use of MerLicators on any abrasive belt application requires consideration of the width of the belt. Both nozzle selection and number of nozzles required are the two requirements to making this a successful operation. The goal is to apply a narrow band of MerLicator across the width of the abrasive belt.

On belts under 2" width a standard one nozzle MerLicator system will be adequate.

On belts over 2" a wide angle nozzle will be required. Each nozzle will cover approximately 5" of width. In either application the nozzle(s) should be positioned about 3" above the belt. Make certain to overlap the nozzle(s) so that the spray pattern ensures MerLicator is covering the entire belt width.