




Instructions for Use

- DAE is an expanding adhesive that adds 100% holding strength to currently available anchor systems.
- DAE does not contain drywall anchors.
- Purchase and install your preferred drywall anchor per the package directions.
- If present, remove the screw for application of the DAE adhesive.

New Install:

1. Remove the sealed cap from the syringe.
2. Install and tighten the supplied applicator tip.
3. Insert the applicator tip completely into the drywall anchor.
4. With a tight seal maintained, slowly infuse half the contents of the syringe (0.5ml) into the anchor.
5. Place the supplied tape disc over the anchor and drywall.
6. Allow to set for 2 hours. (Full cure in 24 hours)
7. Re-install the screw for use.

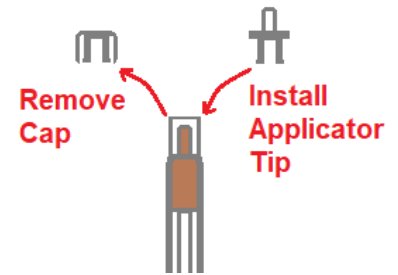

Repair Drywall Option: DAE adhesive can be applied to the outside surface of the anchor and into the cracked or damaged drywall board before installation to add strength to the site.

Patch Drywall Option: DAE adhesive can be applied into the cracked or damaged drywall board and used as a patch filler for small holes created by previous drywall anchors.


Four Easy Steps:

1. Install it

2. Glue it

3. Seal it


4. Hang it

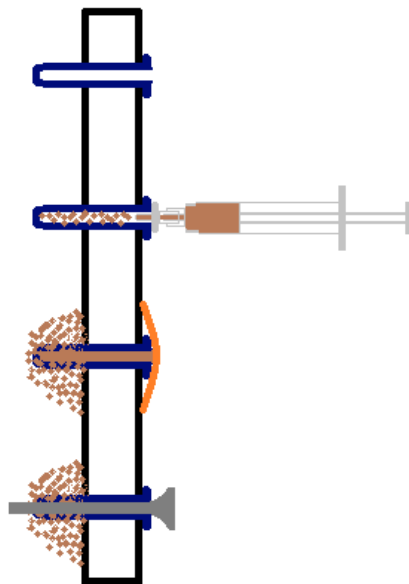

Optional Steps:

5. Repair it

6. Patch it

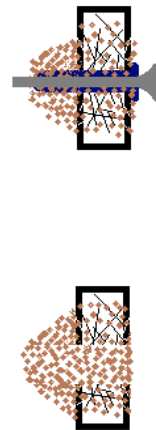

Adhesive cures with moisture; Cure time may be prolonged in dry environments.

While curing, glue will expand 3-4 times creating a strong bond.

Wear gloves to avoid skin contact.