



D3Pro Users Manual

SHENZHEN FIIDO TECHNOLOGY DEVELOPMENT CO.,LTD

NO.142 Fiido Industrial Park,Futong Rd. Yuanshan St. Longgang District, Shenzhen, China

<https://www.fiido.com> email: support@fiido.com



Made in China


Fiido Electric Bicycle Catalog

1. Important Note
2. Product components
3. Unfolding instructions
4. Folding instructions
5. Pump instructions
6. Product parameters


1. Important Note

- a) This manual include important safety performance information and service information. Please make sure you have read the following warning content before the first time you use our product..
- b) If you borrow your electric bicycle to other people, please let the user read this manual, it could help to decrease the risk of accident.
- c) Please wear a suitable and safe helmet before riding, please wear the clothes with fluorescent and reflective stripes when you ride at night. Don't exceed speed limit, it is a main reason of traffic accident, we should abide by the traffic rule, we shouldn't exceed the speed limit.
- d) Don't touch the charging hole on the bike, or use metal touch it, otherwise, the accident will be caused by the transient short circuit of the current.
- e) Zero starting, braking frequent, driving against the wind, carrying people or anything, insufficient air pressure on the tires. All of these will use much electric energy, and then reduce the endurance mileage. If you want the best endurance mileage, please do something as follows:
 1. please use assist mode.
 2. on the premise of safety, don't brake frequently or use zero starting.
 3. Don't overload.
 4. Before riding, please check the pressure of the tire, and supply enough pressure.
- f) Our Ebike should avoid prolonged exposure to the sun or rain, avoid storage in places with high temperature or corrosive gas, so as to avoid electroplating parts and paint surface by chemical corrosion and electrical parts damage, resulting in operational failure and accidents.
- g) When charging the electric bicycle, please make sure that there is no foreign matter in the charging port. Connect the charger to the bicycle first, then connect the AC power to prevent sparking.
- h) When the electric bicycle is not used for a long time, please turn off the main switch in time and charge it in time. Store the battery fully charged, don't store it in case of power loss, so as to avoid serious power loss of battery.
- i) Your current insurance business may not cover the situation you may encounter when riding a electric bike, please contact your insurance company or insurance broker for relevant consultation.
- j) According to the law in China, riding an electric bicycle or a three-wheeled Electric bike must reach the age of 16. If you use this product in other countries, please refer to the local laws and regulations.
- k) Bicycles are vehicles with certain risk factor, please be sure to abide by the traffic rules. At the same time, when emergency braking, brake the rear wheel first, then brake the front wheel, when cycling speed is too fast. There is a danger of tipping over if you brake the front wheel suddenly, please ride carefully.

2. Product components

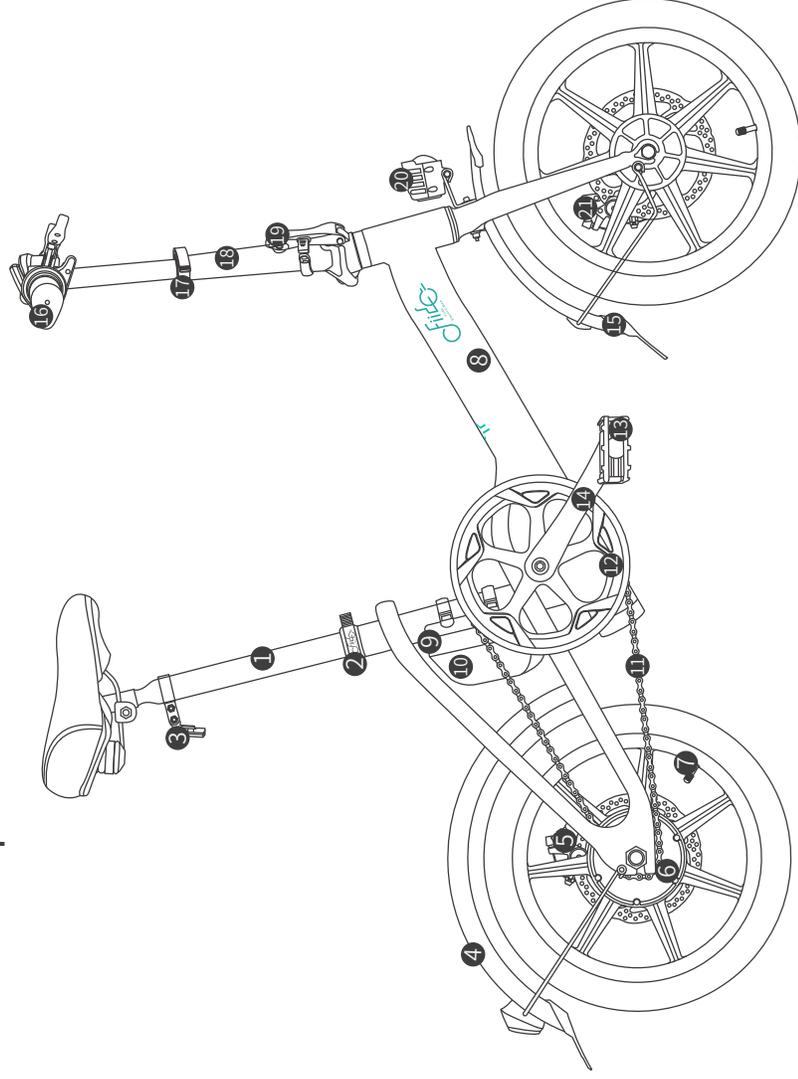



- | | | | | | |
|------------------|-----------------|--------------------|----------------|----------------------|----------------|
| 1. Seatpost Pump | 5. Brake disc | 9. Charge port | 13. Pedal | 17. Handlepost clamp | 21. Brake disc |
| 2. Seat clamp | 6. Motor | 10. Controller box | 14. Crank | 18. Stem | |
| 3. Reflector | 7. Valve | 11. Chain | 15. Mudguard | 19. Folding system | |
| 4. Mudguard | 8. Battery tube | 12. Chain wheel | 16. Handle bar | 20. Headlight | |

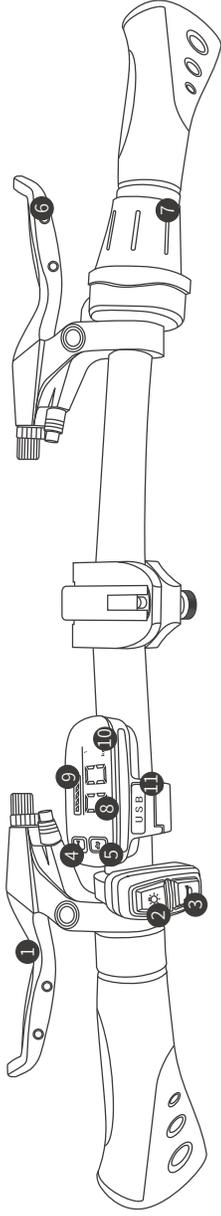

- 1. Brake power off system
(Left brake handle for rear brake)
- 2. Light button
(Click once power on/off)
- 3. Horn button
(Click the button once to signal the whistle)
- 4. Power on/off button
(Long press turn on/off electric power mode)
- 5. Power adjustment
(Click once to shift gears, a total of 3 gears)
- 6. Brake power off system
(Right brake handle for front brake)
- 7. Provide electric assistant
(Electric-assist throttle)
- 8. Speed
(Display current speed)
- 9. Battery power
(Display remaining battery)
- 10. Odometer
(Display the current mileage, long press M to display the total mileage)
- 11. USB charging port


(Noted: After the bike is stationary for 10 minutes, the display will automatically shut down and enter sleep mode)

12. Battery charging port
(located behind the middle tube of the frame)

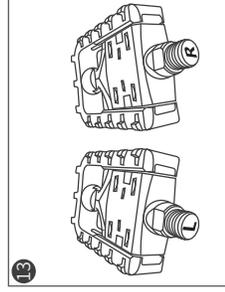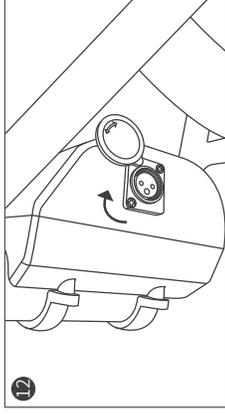


13. Pedal

Use a 15mm open spanner to clamp the pedal shaft core and tighten it in the direction of the arrow (left counterclockwise, right clockwise, as shown).
(Note: When installing the pedal, be aware of the left and right, align the installation horizontally to prevent the pedal or crank slip)

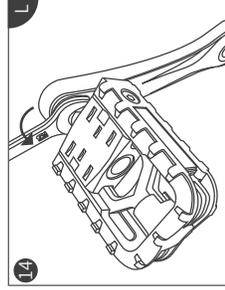





14. Left

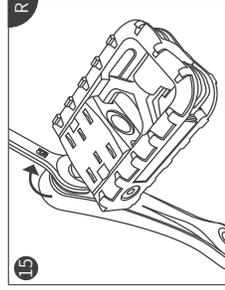


15. Right

3. Unfolding instructions


1. Fold the riser to the upper end, lock the riser folding handle, adjust the riser safety hook to the tightening state, and adjust the position of the T handle.
2. Open the clip on the seat tube clamp and insert the seat tube into the position within the marking line on the seat tube. Adjust the seat to the comfortable height according to individual needs, and fasten the seat tube clip.
3. Please confirm the following items before riding: frame lock, standpipe lock and seat tube lock are locked.
4. Brake system is normal. Tires are adequately inflated. All these are important for a safe and comfortable riding.

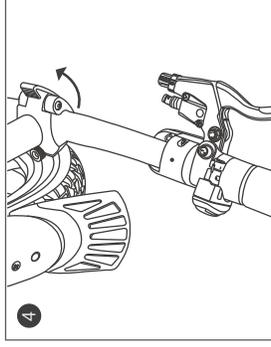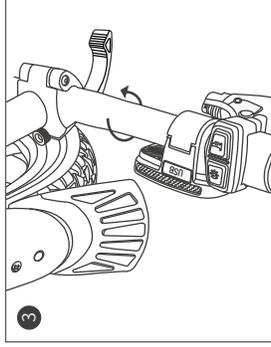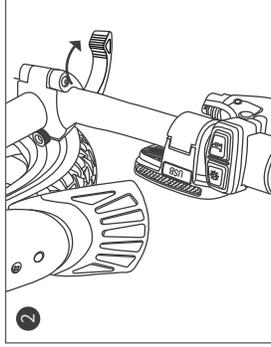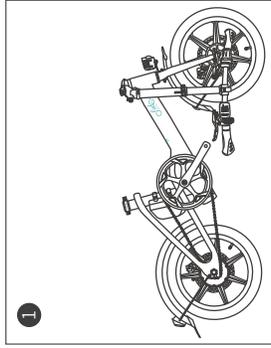


Remove status from carton

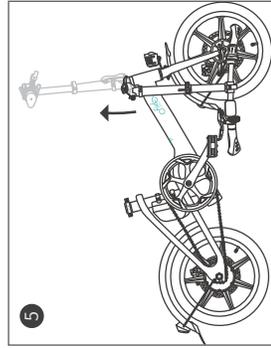


Open handlebar quick lock

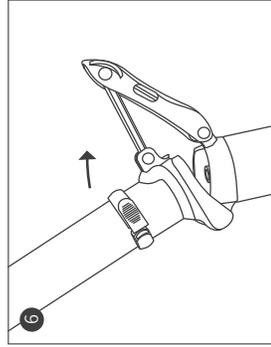

The handlebar rotates 90 degrees

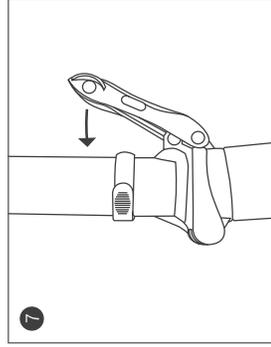

Buckle up the quick lock

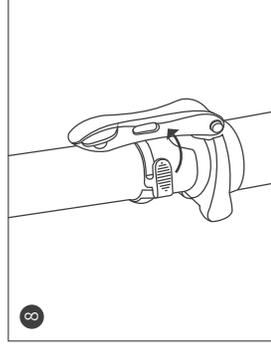


Erect the folding handlepost


opened

Pressing


locked

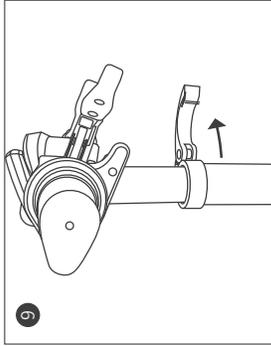


Release the clamp

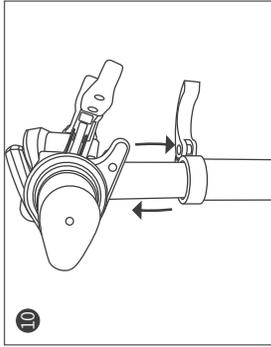


Adjust up and down to the right place, and make sure the insertion depth must be higher than the scale mark

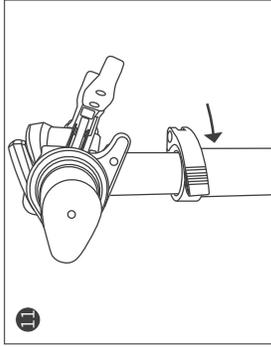


Lock the clamp

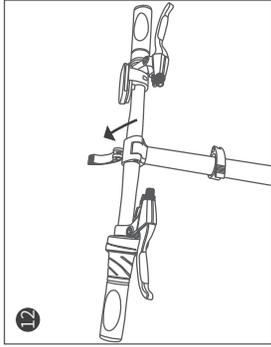


Release the clamp of the handlebar

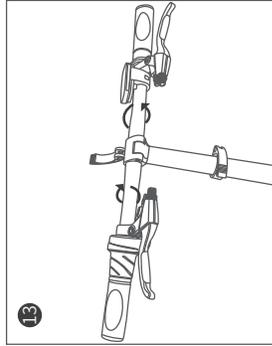


Rotate the handlebar to proper position

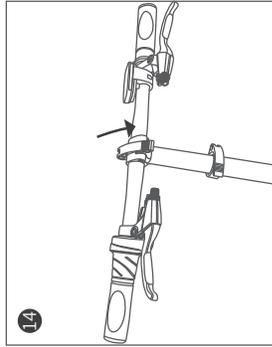

Lock the clamp

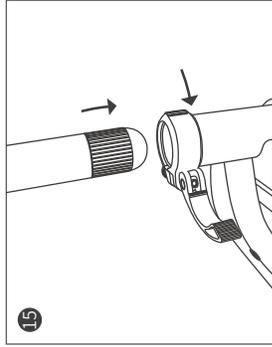

Release the clamp of the seat post, then insert the pump into the proper position.

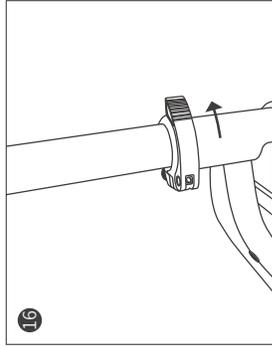

Lock the clamp



4. Folding instructions

Step 1. Open the quick lock on the head end, to let the handle be perpendicular to the care frame.

Step 2. Open the quick lock on the Stem, lower the riser, as well as locking the quick lock.




Step 3. Open the Seat Tube quick lock, decentralized seats, as well as locking the quick the quick

Note: Both the Rise and the Seat Tube are marked with a safe (MAX or MIN). For safety reasons, please use them in a safe range.

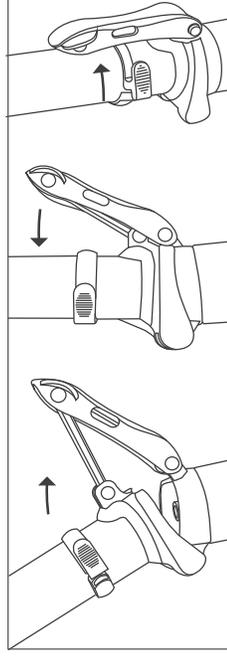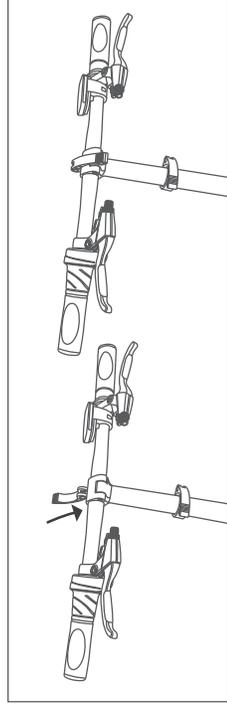


Step 4. Turn the buckle on the Standpipe clockwise and pull down the fold and fold down the front.


Step 5. Open the frame holder of the fuse buckle, pull the fold, and the frame.

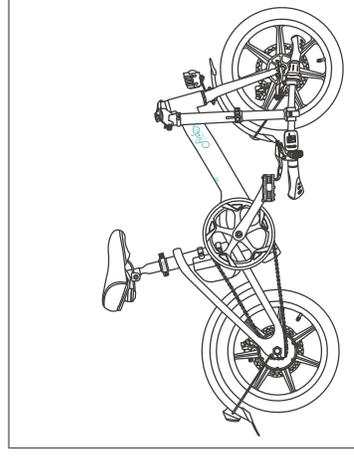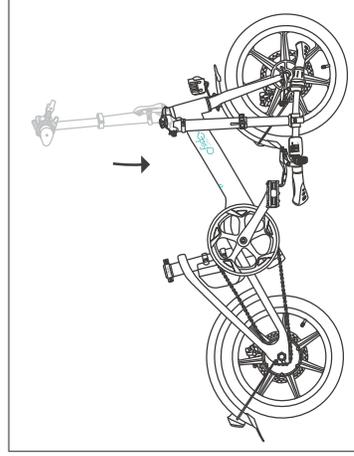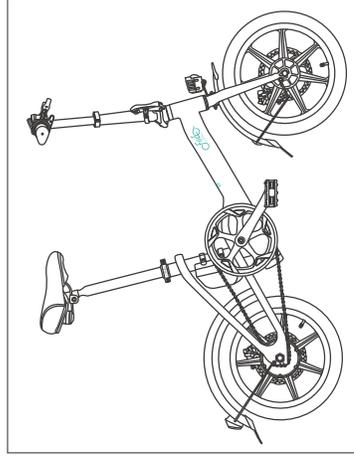


5. Pump instructions

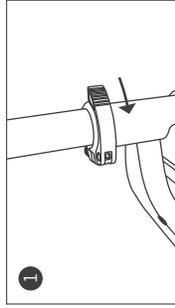

Release the quick clamp

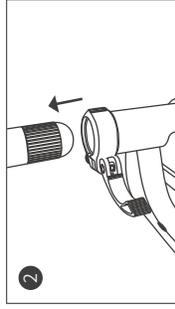


Take out the pump

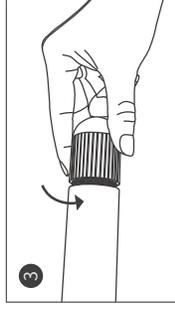


Twist the bottom of the inflator




Until fully twisted

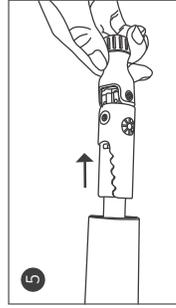


Pull out the lower side

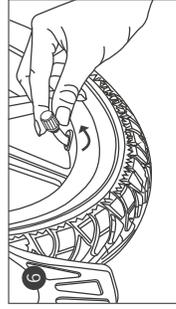


Twist the tire inflation ear caps

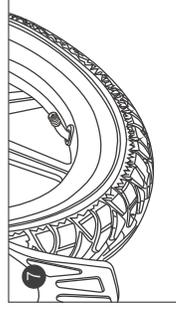


Until fully twisted

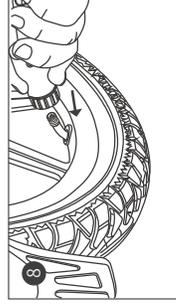


Align one side of the pump with the valve core of the tire

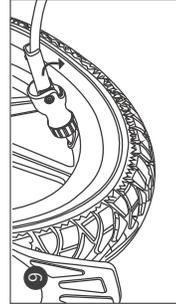


Then Squeeze it into position

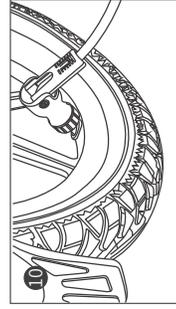

Lock the pump towards the downside

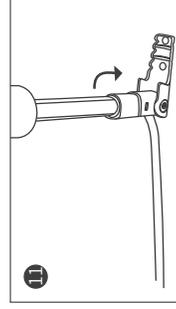

Open the place where you can step on the bottom of the pump

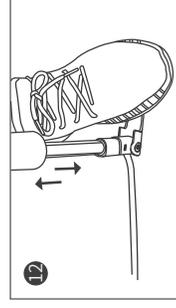

Start pumping by stamping the pump

6. Product parameters

| Name | Specification |
|----------------------|--|
| Electric Bike System | Fiido System |
| Electric Motorcycle | Support |
| Power Assist System | 3 Gears Assist |
| Max Load weight | 120kg |
| Maximum Speed | 25km/h |
| Maximum Range | Power assisted models up to 60KM |
| Battery | High quality Ion battery 36V 5.2/7.8Ah |
| Battery adaptation | DC 42V2A |
| Recharge Time | 5 hours |
| Drive Type | Rear Drive |
| Frame Material | Aluminum Alloy |
| Front Brake | Mechanical Disc Brakes |
| Brake Type | Mechanical Disc Brakes |
| Chain | KMC S1 |
| Rear Brake | Mechanical Disc Brakes |
| Rear Hub/Rated Power | XiongDa Motor/250W |
| Rims | Alloy |
| Wheel Size | 14" |
| Tyre Size | 14 X 2.125inch |
| Tyres | Cheng Shin Tire |
| Net Weight | 17.5kg |
| Folded Size | 126cm X 35cm X 60cm |
| Size | 126cm X 58cm X 105cm |

* The above data allow for 5% manufacturing tolerances.

* After receiving the goods, there may be some differences between individual accessories and display drawings, which are different due to the different batches, and do not affect the use.