



ATWOOD-HAMLIN
MANUFACTURING CO., INC.
Since 1949

HOW TO...

Attach Kneeler Brackets



①

Set up the first Atwood-Hamlin Kneeler in a position comfortable for kneeling (preferably 8" out from top rail of pew). For now, just mount the center screw into the Atwood-Hamlin Bracket at approximately a 45° angle to hold the bracket in place until the final adjustments are made.①




②

Raise the kneeler up so that the kneeler legs are just inside the top rail. This allows enough room for a person to walk between the pews without hitting their legs. Now, put the other screws in the bracket.②



③

To the left is an Atwood-Hamlin Bracket Jig with upper sticks and bracket angle that will need to be adjusted. Once these are adjusted, by following the instructions below, you will be able to use the jig as a template for each pew keeping the installation process consistent.③

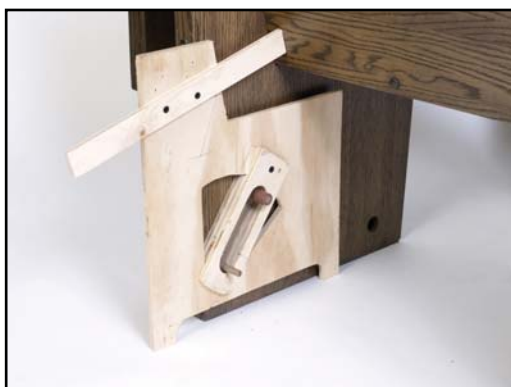

④

Set up the bracket jig over the bracket you have just attached to the pew. Place upper sticks against the jig allowing an end to butt up against the back of the pew. This shows the distance the bracket is placed from the back of the pew. Set upper sticks with screws. And last, set the angle on the bracket with screws in order to hold its position.④