

# Redundant Lock System Operation Instructions:

Most users choose to use the electronic lock for daily use and the mechanical lock as a failsafe backup; however, either can be used at any time.

## To Open using Keypad (E-Lock)


1. Clear Mechanical lock turn LEFT (counterclockwise) 5 times then set between numbers 20 - 30 on opening index line
2. Enter user ID number into keypad wait for "beep" then enter combination into keypad
3. Turn dial (Mechanical lock) clockwise until the dial stops at approximately 87
4. Turn safe handle clockwise to open door

To lock your safe, close the door, turn the handle counter-clockwise then turn the dial counter clockwise one full revolution.

E-Lock Combo User ID: 01 then \_\_\_\_\_

## To Open using Dial (Mechanical Lock)

- Using the opening index, turn dial (mechanical lock) LEFT (counterclockwise) at least 5 times to clear lock
- Using the opening index, turn the dial RIGHT (clockwise) Passing the first number in the combination 4 times then Stopping exactly on the number \_\_\_\_\_ the fifth time.
- Turn the dial LEFT (counterclockwise) passing the next number in the combination 3 times then stopping exactly on the number \_\_\_\_\_ the fourth time
- Turn the dial RIGHT (clockwise) passing the next number in the combination twice, stopping exactly on the number \_\_\_\_\_ the third time
- Turn the dial LEFT (counterclockwise) passing the last number in the combination once then stopping exactly on number \_\_\_\_\_ the second time
- Turn the dial RIGHT (clockwise) to open lock, the lock bolt is full retracted when the dial no longer turns
- Turn safe handle clockwise to open the safe door
- Turn lock Dial (Mechanical Lock) turn the dial 5 complete rotations to the LEFT.

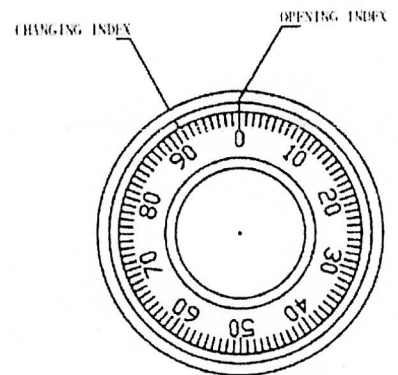

**If you have any questions or concerns give us a call at 989-879-5477  
or email us [sales@ablesafe.com](mailto:sales@ablesafe.com)**

