

Sled Table Grip Installation



**You will need a clean rag,
masking tape and rubbing
alcohol.**


Clean surface with clean rag and Alcohol



Remove the left push handle



Align the grip over the holes

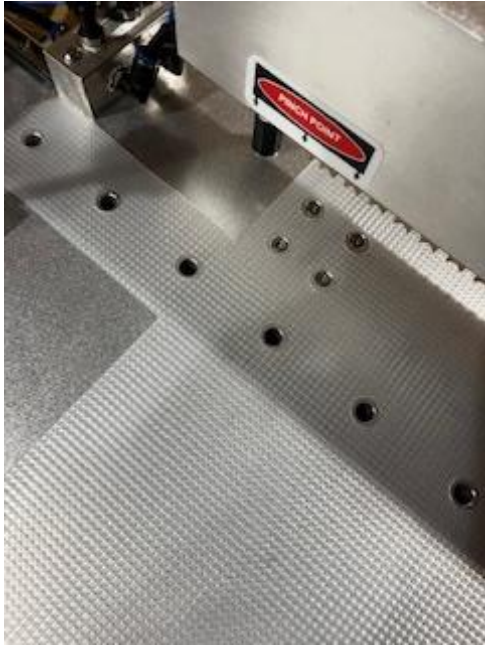

Place masking tape here



Peel the backing off this section and cut the backing off



Stick this section down firmly




Peel the backing off the front section of the Grip that will go under the clamp bar and cut off backing.




Roll this section under the clamp bar



Remove the masking tape and peel the remaining backing off the grip.

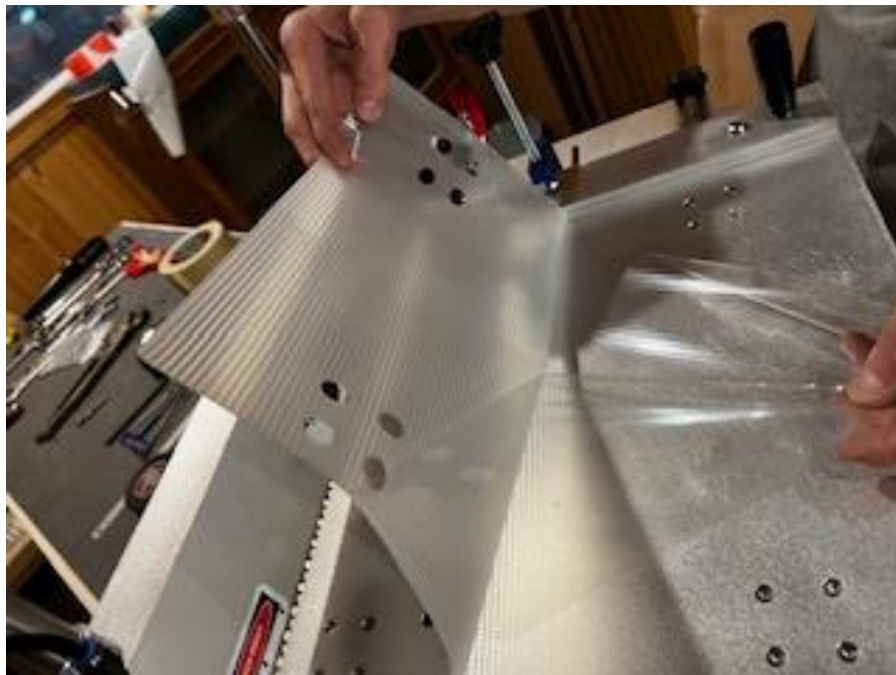

Evenly stick the grip down

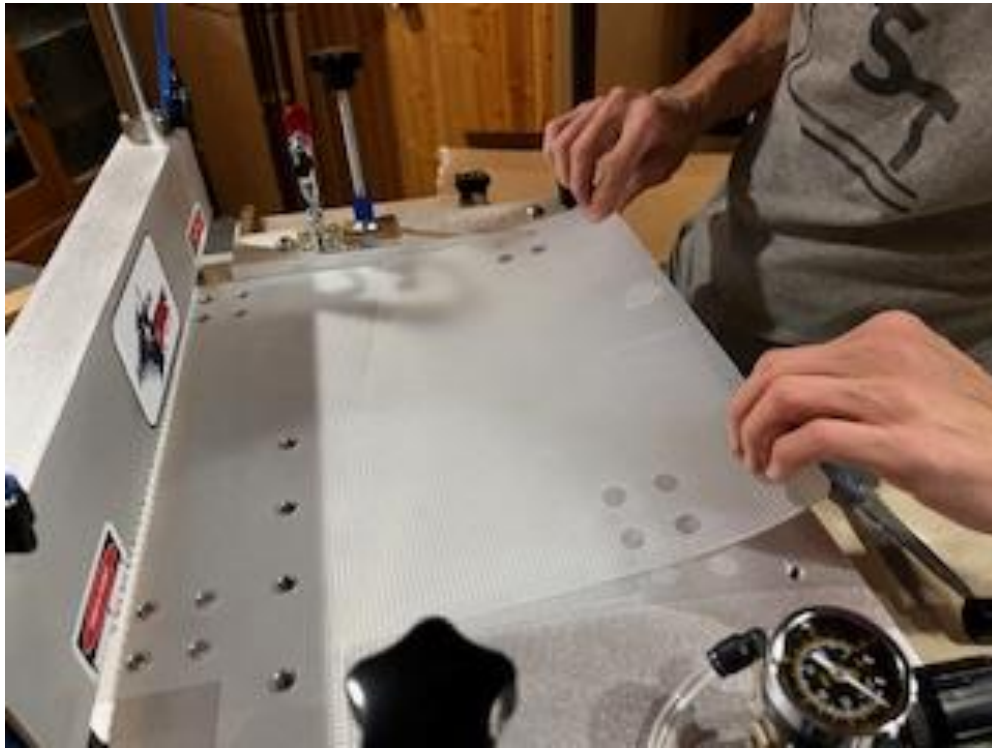

Enjoy your new gripping power and don't forget to reset the height of your cutter.

