

## Vertical Wall Bed with Table

## Pre- Instruction Guide

Before Installing the parts of the bed, make sure you have connected the cabinet to the wall, using the fixings provided.

Check diagonal cross section of the cabinet to see if the cabinet is square see picture on left.

**Install the fixed plates on either side:** these are divided into left and right, using the 20mm long screws, before screwing them to the sides, please mark according to the size using a hole opener (25mm drill bit) of a depth of 17mm. Refer to drawing (Figure 2)

**Installing the cabinet panel:** Screw the bed frame to the panel, then install the mattress straps, connect the two corners of the straps at 45-degree angle at the end of the bed and connect them to the bed surface with screws. After the mattress has been put in, pull it out and hook it to the corners of the mattress. The bottom of the bed frame is flush (Please be aware when installing the panel put the mattress on the end of the bed as the weight will help keep the mechanism down, if you don't add the weight while fixing, the bed door will lift up)

**Install the bed frame:** (Please also note if the room is small you may want to install the feet see Step 3-5) lift the bed frame inside the cabinet then tighten the big hexagon socket screw (fixed with a 45mm long screw)


**Install the bed feet mechanism:** push the mechanism into the square tubes on both sides. When the room is relatively small, please install the two feet linkage supports before the bed frame is installed in the cabinet.


After the feet are installed, use screws to connect. Install the booster air support (gas strut) please pay attention to the pressure in (Kilograms on the label) the small connector should be facing downward. Make sure both sides are installed symmetrically; the distance between the two columns is not enough, the end of the bed can be lifted, then it can be fitted in. After fixing, press down on the bed and the iron cover will come out naturally, then press the end of the bed with the mattress. Otherwise the weight of the side will be unbalanced, and the bed frame will be automatically recovered.


Then finally install the mattress stopper catch.


Important please read before	iBedz have had these specifically desinged for the UK market, these instructions have been translated, so the terminology ma differ slightly, if you have any suggestions please free to the email them in.		
iBedz space saving furniture			
ibedzspacesaving@gmail.com			
	iBedz.co.uk		

Before installing accessories, be sure to connect the cabinet to the wall

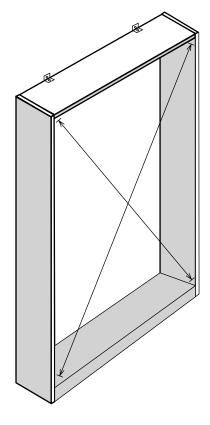

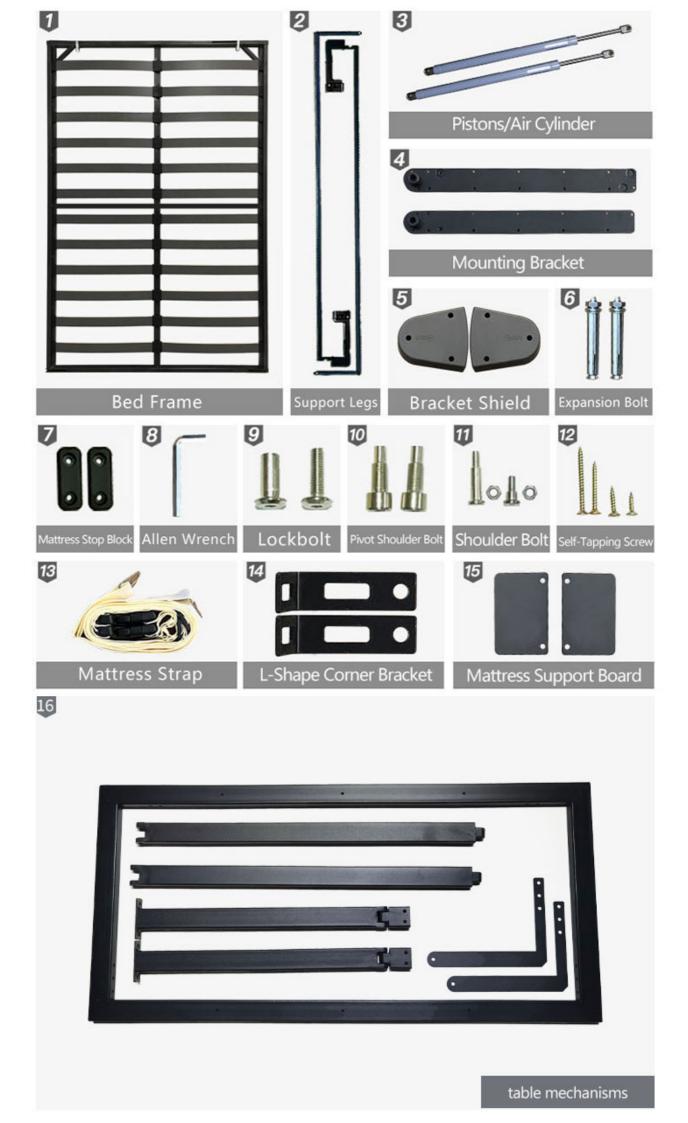

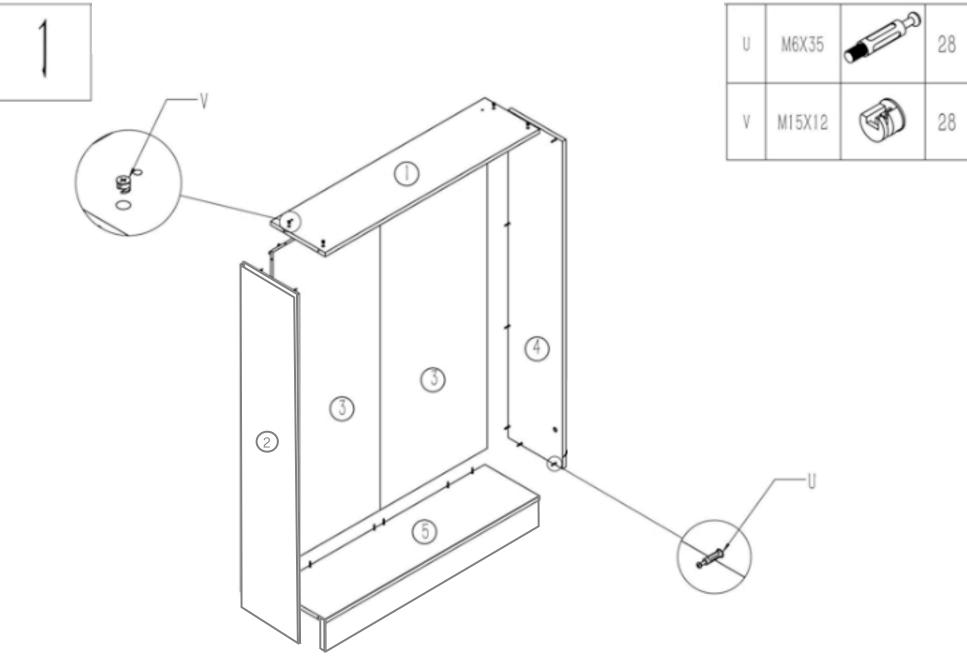

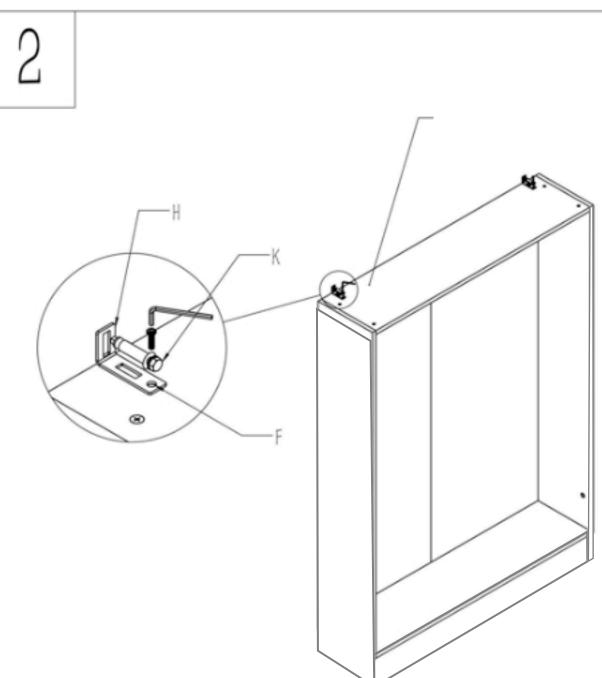

F	40x80x25		2
K	M8X100	Ĵ	2
S	M6x20	~	2
T	M6X20	¢	2

