

Using UV Reflective Materials to Maximize Disinfection

The increased performance of UVC LEDs allows for more design flexibility in disinfection applications. Design engineers can leverage highly UV reflective materials to maximize the efficiency of these reactors to meet design challenges or decrease the amount of UV intensity required throughout the system. This application note outlines how using reactor materials that offer higher reflectance of the UVC wavelengths can optimize the UV intensity and uniformity in the system.

Introduction

Ultraviolet (UV) disinfection relies on radiation emitted in the wavelength range of 250 nm – 280 nm (UVC) to inactivate pathogens. The amount of UVC radiation applied to a given volume over a specific time period needed for disinfection in a particular system is commonly referred to as the required UV Dose. UV Dose is comprised of two factors—the irradiance of the UVC light and the length of exposure to radiation. For more information about calculating UV Dose, see Crystal IS application note AN002.

Optimal UV reactor design ensures UVC light is delivered in the most efficient manner by maximizing overall UV dosage for all parts of the fluid entering the reactor (e.g., all of the fluid needs to be uniformly exposed) for disinfection. To achieve this, system designers consider reactor size and shape, flow rate and the UV power of the system.

In systems where there is less flexibility around flow rate, residence time becomes a crucial factor for system designers who must optimize the effectiveness of the UV light. Doing so ensures target microbes are exposed to enough UV light for complete DNA inactivation. This can be accomplished in one of two ways: by increasing the light output of the system or by improving the UV reflectance of the construction materials used inside the flow cell. This application note focuses on the latter method.

Improving UV Reflectance in the Reactor

System designers can optimize the field of uniformity by using materials with highly reflective properties for UVC light in reactors where the light source footprint is at a premium or there is a need to increase efficiency. This maximizes internal reflection to take full advantage of the UV energy or photons emitted from the light source. Table 1 shows the UV reflectivity of standard materials used in disinfection reactors.

TABLE 1

MATERIAL	REFLECTIVITY
e-PTFE	95%
Aluminum—sputtered on glass	80%
Aluminum foil	73%
Stainless steel (various formulas)	20 - 28%


A common material used in commercial UV disinfection systems is stainless steel. While this surface is highly resistive to microbial growth, it only has 20 - 28% reflectance of UV light. Flow cells that contain e-PTFE (expanded PolyTetraFluor Ethylen) provide more than 95% reflectance (as shown in the table above) of the UVC light—making systems constructed of these materials more than three times effective than traditional reactors. The following examples show how using highly reflective materials benefit applications in water and air disinfection.

EXAMPLE 1: WATER DISINFECTION REACTOR

UV reactors are a mainstay for water treatment facilities and residential appliances designed to disinfect water flowing through a system for safe public consumption.

To illustrate the impact of material reflectivity, Crystal IS examined two reactors with the same dimensions (Figure 1), flow rate and UVC LED arrangement. The total power in the reactor is 200 mW. However, reactor 1 was composed of stainless steel while reactor 2 used e-PTFE.


FIGURE 1

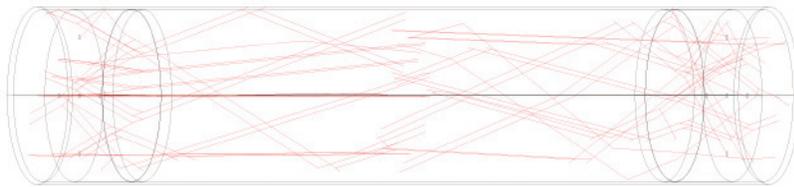

Optical model for light flow in UV reactor measuring 15 cm in length and 3.1 cm in diameter.


The light distribution was modeled for different distances from the end caps throughout the reactor to study the impact of internal reflection. At the center of the reactor 7.5 cm from the end caps, the average irradiance in reactor 1 was 4.5 mW/cm² whereas in reactor 2 the average was 17 mW/cm². The radiation patterns in the reactors at the mid-point can be seen in Figure 2.

FIGURE 2A

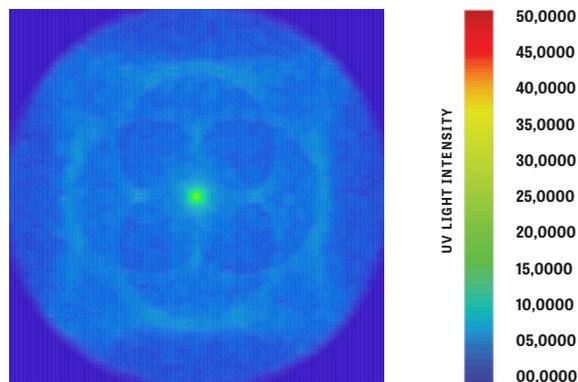

Stainless steel radiation pattern 7.5 cm from end cap.

FIGURE 2B

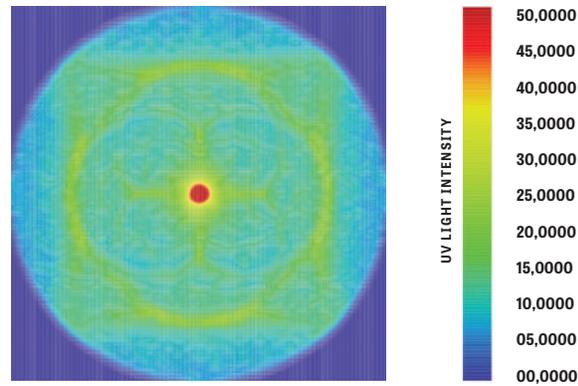


e-PTFE radiation pattern at 7.5 cm from end cap.

Table 1 indicates that the reflectivity of e-PTFE is higher than that of stainless steel. The radiation patterns show a higher level of irradiance in the second reactor (Figure 2b), thus the higher the UVC reflectance of the materials used in the reactor, the more efficient the use of UVC light in the system. This allows design engineers to achieve their target dosage requirements with less optical power.

EXAMPLE 2: AIR DISINFECTION REACTOR


HVAC systems rely on UV disinfection to inhibit mold growth and reduce energy consumption. Filtration coupled with UV light is commonly integrated into ducts for complete disinfection. These ducts come in various sizes—the models in this example are based on a duct that is 380 cm wide by 250 cm long. The 35 LEDs in the system were arranged in a grid pattern to ensure the entire duct was covered with UVC light.

FIGURE 3

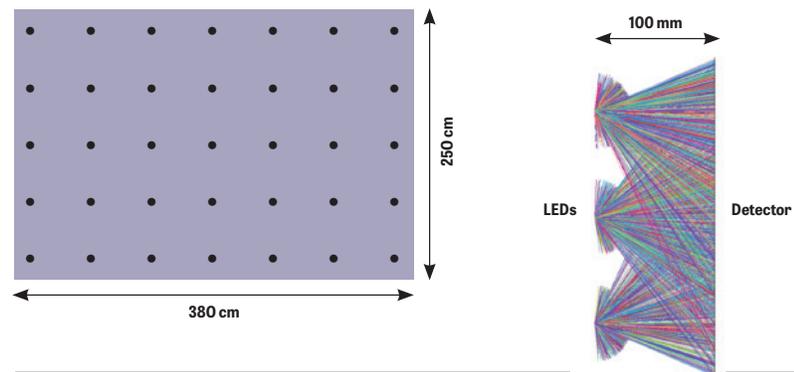

Arrangement of UVC LEDs in the duct.

The irradiance was modeled within the duct based on two different materials: duct 1 comprised of a surface having no reflective properties and duct 2 is lined with Alzak Sheet aluminum which has more than 80% reflectance. The increase in reflectance between duct 1 and 2 increased the peak irradiance from 0.2 mW/cm² to ~0.3 mW/cm². In addition, the UV dispersion was more uniform within duct 2, as can be seen in Figure 4a and 4b.

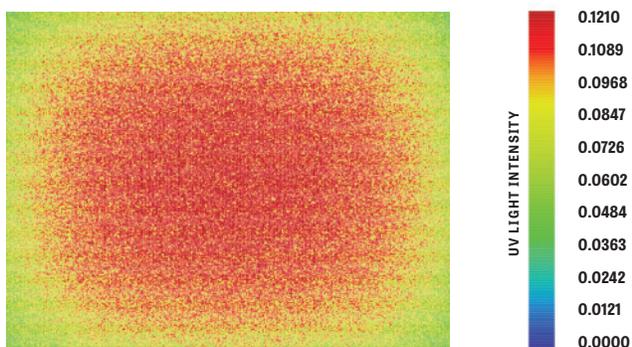FIGURE 4A

Irradiance model of duct 1 without UV reflective surfaces.

FIGURE 4B

Irradiance model of duct 2 lined with 80% UV reflective materials on all four sides.

As the performance of UVC LEDs increases, design engineers can leverage the benefits of smaller footprints and instant-on capability into disinfection applications that, until now, were heavily dominated by mercury lamp configurations. Designers can maximize the disinfection capability of UVC light by using highly reflective materials on the interior surfaces of reactors for various applications in water, air and surface disinfection.

DISCLAIMER

The information in this document has been compiled from reference materials and other sources believed to be reliable, and given in good faith. No warranty, either expressed or implied, is made, however, to the accuracy and completeness of the information, nor is any responsibility assumed or implied for any loss or damage resulting from inaccuracies or omissions. Each user bears full responsibility for making their own determination as to the suitability of Crystal IS products, recommendations or advice for its own particular use. Crystal IS makes no warranty or guarantee, express or implied, as to results obtained in end-use, nor of any design incorporating its Products, recommendation or advice.

Each user must identify and perform all tests and analyses necessary to ensure that its finished application incorporating Crystal IS' products will be safe and suitable for use under end-use conditions. Each user of devices assumes full responsibility to become educated in and to protect from harmful irradiation. Crystal IS specifically disclaims any and all liability for harm arising from buyer's use or misuse of UVC devices either in development or end-use.

WE INVITE YOU TO LEARN MORE ABOUT OUR UVC LEDs.



70 Cohoes Avenue, Green Island, NY 12183 U.S.A.
518.271.7375 | www.cisuvc.com | sales@cisuvc.com