Controls Ltd.

CVS

CVS 67CFR Pressure Reducing Instrument Supply Regulator

INTRODUCTION

The CVS Controls 67CFR Filter regulator is a pressure reducing supply regulator typically used for pneumatic and electro-pneumatic controllers, as well as other instrumentation equipment. The CVS 67CFR provides constant, clean air or gas supply to devices requiring reduced pressures for control.

These Installation Instructions provide installation and Start Up procedures for the CVS 67CFR Regulator. Should additional maintenance or part information be required, please refer to the CVS 67 CFR Instruction Manual.

SPECIFICATIONS

Temperature – Nitrile Standard -40°C to 82°C (-40°F to 180°F) Maximum Inlet Pressure: 250 psig (17.2 bar) Maximum Outlet Pressure: 50 psi (3.4 bar) over outlet pressure setting

INSTALLATION INSTRUCTIONS



CVS 67CFR, Panel Mount Vented Spring Case



CVS 67CFR Regulator with optional gauge

Outlet Pressure Ranges: 0 to 35 psig (0 to 2.4 bar) 0 to 60 psig (0 to 4.1 bar) 0 to 125 psig (0 to 8.6 bar) Approximate shipping weight: 1 lb (.45 kg)

*Also available in Stainless Steel Panel Mount

Head Office

3900 101 Street Edmonton, Alberta T6E 0A5 Canada Office: (780) 437-3055 Fax: (780) 436-5461



Calgary Sales Office 3516 114 Avenue SE Calgary, Alberta T2Z 3V6 Canada Office: (403) 250-1416 Fax: (403) 291-9487

Website: <u>www.cvs-controls.com</u>

Email: info@cvs-controls.com

INSTALLATION

It is recommended that only qualified or authorized personnel install and maintain the CVS 67CFR regulator.

Prior to installing, make sure there is no damage to the regulator, as well as foreign debris in all tubing or piping connections to the installation.

Ensure proper safety procedures are adhered to during installation and maintenance.

Warning

Do not install any pressure equipment where service conditions exceed the manufacturer's specifications. Over pressuring of regulator may result in leakage, equipment damage or injury. Excessive pressure can cause the pressure-containing parts to burst, or accumulated gas to explode. The CVS 67CFR Filter Regulator should not be used with hazardous gas unless vented to a safe area.

The CVS 67CFR regulators internal relief valve does not provide overpressure protection. The internal relief valve is designed for minor seat leakage only. Additional overpressure protection may be required should the inlet pressure exceed the maximum pressure rating of the downstream equipment, or maximum allowable outlet. Periodically inspect the regulator for damage, and after an overpressure condition. Remove from service and replace or maintain the regulator as required.

- 1. Install the regulator so that the direction of flow is from the IN to the OUT, as marked on the regulators housing.
- 2. For best drainage, install the regulator so that the drain valve (12) is at the lowest possible point.

- 3. Prevent plugging of the spring case vent and keep the spring case from collecting moisture, corrosive chemicals or other materials by orienting the vent to the lowest possible point on the spring case. For panel mounted vented installations, the 1/4" NPT spring case vent may be remotely vented by installing tubing or piping.
- To change the filter/drain orientation, rotate the filter cap with regards to the regulator body. Change the spring case/vent orientation by rotating the spring case in relation to the regulator body.

Warning

Never adjust the control spring to produce pressure beyond its highest outlet pressure range. Over pressuring the spring can cause bursting of pressure containing parts, or explosion of accumulated gas. If the range of the control spring does not reach the desired outlet pressure install a spring with the proper range according to the maintenance section.

- 5. Suitable means of venting the regulator inlet and outlet pressures for regulator shutdown may be achieved by installing upstream block and vent valves and downstream block and vent valves if required.
- 6. Apply pipe compound or suitable Teflon tape to the male pipe threads prior to making connections, take care not to get excess pipe compound inside piping or regulator.
- Install 1/4" NPT supply tubing or pipe fitting to the inlet of the regulator body marked "IN". Proceed to install 1/4" tubing or pipe fitting to the other side of the regulator body marked "OUT".
- The additional 1/4" NPT outlet may be used for an optional CVS pressure gauge. If a gauge is not being utilized, a 1/4" NPT plug must be used.
- 9. Should the CVS 67CFR regulator be installed in an existing installation, it may be necessary to install spacers on the mounting bolts to adapt to the installation. If mounting bolts are too long place a spacer on the mounting bolt and ensure at least two full threads of engagement.

START UP AND ADJUSTMENT

- Once installation is complete and downstream equipment is properly adjusted, slowly open the supply and downstream shutoff valves (if installed) while using pressure gauges to monitor supply and outlet pressure.
- Should outlet pressure adjustment be required, install and monitor outlet pressure using a gauge during the start-up procedure. The CVS 67CFR regulator outlet pressure can be raised or lowered by loosening the locknut


(10), and turning the adjustment screw (3), clockwise to increase outlet pressure, or counter clockwise to decrease outlet pressure.

- 3. Tighten the locknut (10) one the desired outlet pressure has been properly set as required.
- 4. Periodically inspect the regulator for signs or wear or damage, and repair or replace as necessary.

For more information or questions, please contact a CVS Controls representative.





CVS 67 CFR, Stainless Steel, Panel Mount Regulator

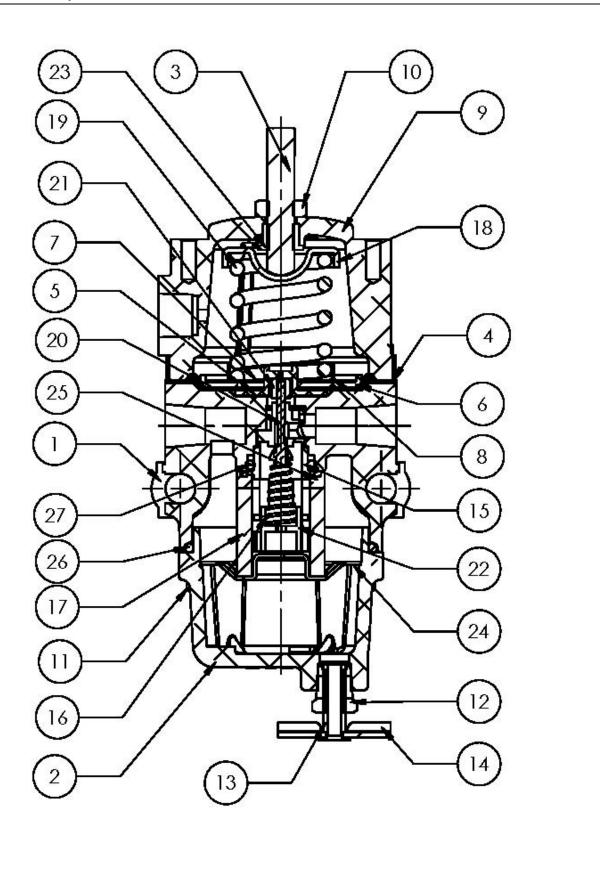

CVS 67 CFR Parts Listing

| Item | Description | Part Number | Qty |
|--|--|---------------------------------------|-----|
| 1 | Body, Aluminum | CVS T40643T0RG2 | 1 |
| 2 | Dripwell, Aluminum | CVS T21040T0012 | 1 |
| 3 | Adjusting Screw | CVS T14061T0012 | 1 |
| 4* | Diaphragm ⁽¹⁾ | CVS T14119T0012-1 | 1 |
| 5 | Push Post | CVS T14119T0012-2 | 1 |
| 6* | Diaphragm Plate ⁽¹⁾ | CVS T14119T0012-3 | 1 |
| 7* | Diaphragm Ret. Ring ⁽¹⁾ | CVS T14119T0012-4 | 1 |
| 8 | Lower Spring Seat | CVS T14119T0012-5 | 1 |
| 9 | Spring Case – 1/4" NPT Vent | CVS T14070T0042 | 1 |
| | Spring Case – Vent to atmosphere (drilled) | CVS T140707T0012 | 1 |
| 10 | Lock Nut | CVS 1A946324122 | 1 |
| 11 | Flange Screw | CVS 1B784028982 | 10 |
| 12 | Drain Valve Body | CVS 1K418918992-1 | 1 |
| 13 | Drain Valve Plug | CVS 1K418918992-2 | 1 |
| 14 | Drain Valve Handle | CVS 1D5604000A2-3 | 1 |
| 15 | Valve Cartridge Body | CVS T80434T0012 | 1 |
| 16 | Valve Spring | CVS T14105T0012 | 1 |
| 17* | Filter Element | CVS GE32761X012 | 1 |
| 18 | Upper Spring Seat | CVS T14051T0012 | 1 |
| 19 | Spring – 0 to 35 psig | CVS T14059T0012 | 1 |
| | Spring – 0 to 60 psig | CVS T14058T0012 | 1 |
| | Spring – 0 to 125 psig | CVS T14060T0012 | 1 |
| 20* | Valve Plug | CVS T14053T0042 | 1 |
| 21* | Soft Seat | CVS T14055T0012 | 1 |
| 22 | Valve Retainer | CVS T14071T0012 | 1 |
| 23 | Spring Case Insert | CVS T14070T0052 | 1 |
| 24 | Filter Retainer | CVS T14052T0012 | 1 |
| 25 | Filter Gasket | CVS T14081T0012 | 1 |
| 26 | O-Ring | CVS T14380T0012 | 1 |
| 27 | O-Ring | CVS T14063T0012 | 1 |
| ⁽¹⁾ Items 4, 6 and 7 are included in Diaphragm Assembly | | CVS T14119T0022 Nitrile (no relief) | 1 |
| | | CVS T14119T0012 Nitrile (with relief) | 1 |
| *Included in CVS 67CFR Repair Kit | | CVS67CFR-RK | 1 |

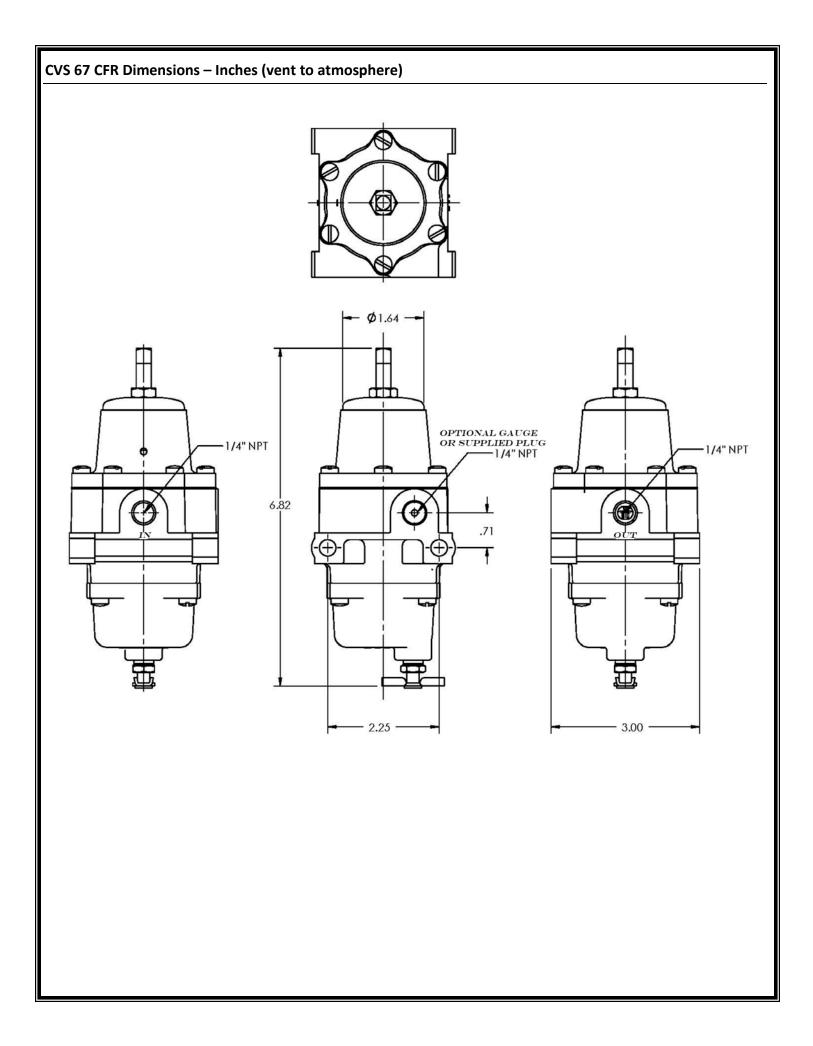

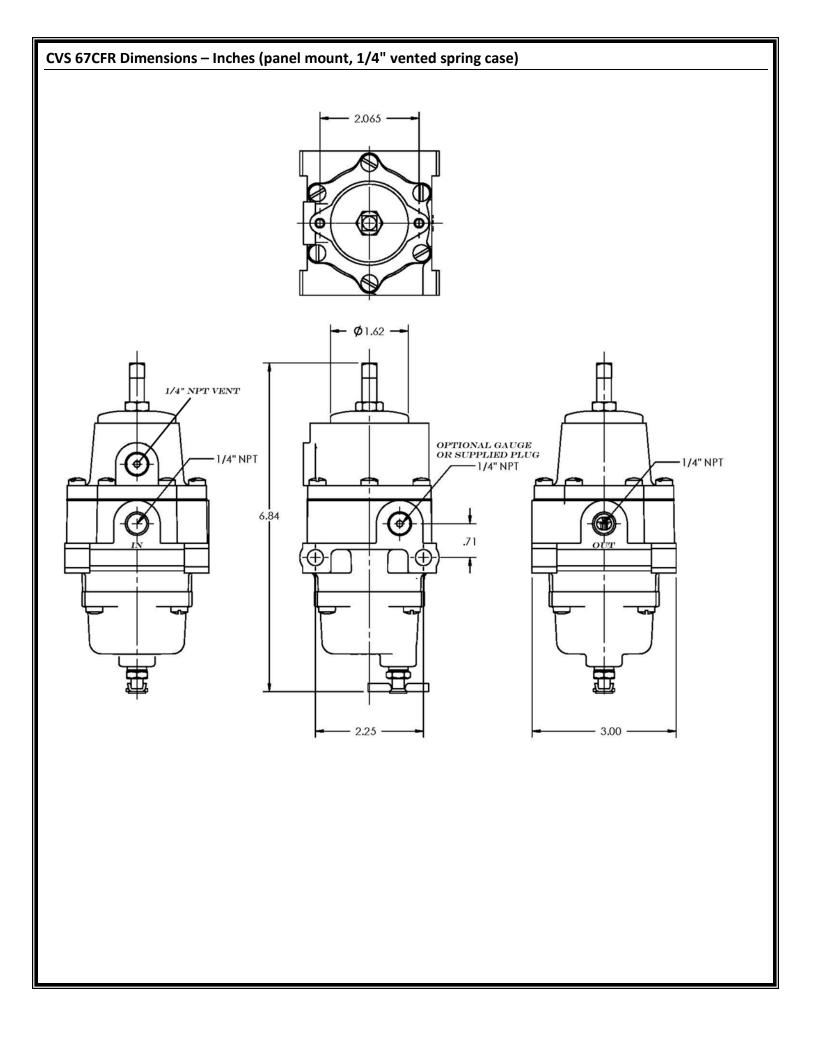



Calgary Sales Office

3516 114 Avenue SE Calgary, Alberta T2Z 3V6 Canada Office: (403) 250-1416 Fax: (403) 291-9487

Website: www.cvs-controls.com

Email: info@cvs-controls.com

Head Office 3900 101 Street

Edmonton, Alberta T6E 0A5 Canada Office: (780) 437-3055 Fax: (780) 436 5461