

SpaceTrac Parts and Installation



Call us at **1-855-854-7465**

or vist us at

www.sauder-closets.com

NOTE: THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.


PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Lot #: 545016 10 / 19 / 20


Purchased:

Part Identification

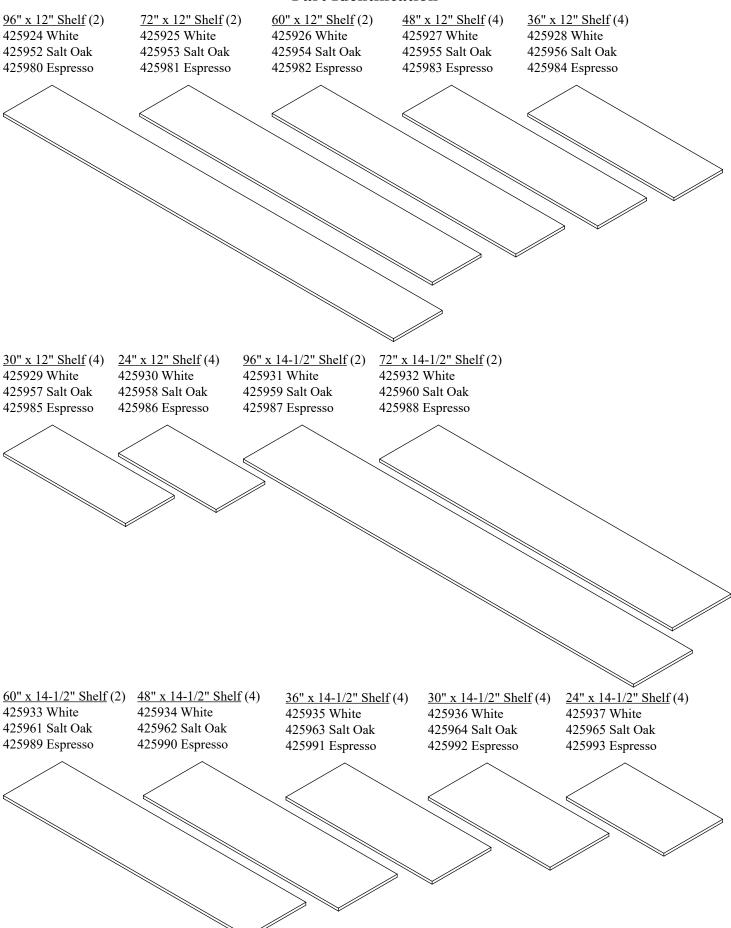


Part Identification

30"W x 14-1/2"D <u>Large Cabinet</u> (1) 425943 White 425971 Salt Oak 426005 Espresso

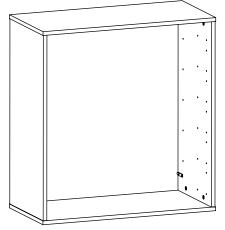


30"W x 14-1/2"D <u>Medium Cabinet</u> (1) 425944 White 425972 Salt Oak 426006 Espresso

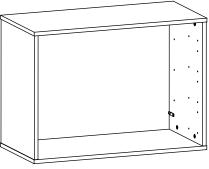


30"W x 14-1/2"D Small Cabinet (1) 425945 White 425973 Salt Oak 426007 Espresso




24"W x 14-1/2"D <u>Large Cabinet</u> (1) 425938 White 425966 Salt Oak 425999 Espresso

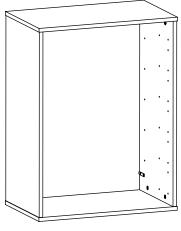

24"W x 14-1/2"D <u>Medium Cabinet</u> (1) 425939 White 425967 Salt Oak 426000 Espresso

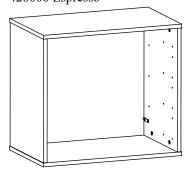

24"W x 14-1/2"D <u>Small Cabinet</u> (1) 425940 White 425968 Salt Oak 426001 Espresso



30" Shoe Shelf (4) 425923 White 425951 Salt Oak 425979 Espresso




24" Shoe Shelf (4)

425922 White

425950 Salt Oak


30" Adjustable Cabinet Shelf (3) 425949 White 425977 Salt Oak

426011 Espresso




24" Adjustable Cabinet Shelf (3) 425948 White

425976 Salt Oak 426010 Espresso





Parts and Hardware Identification

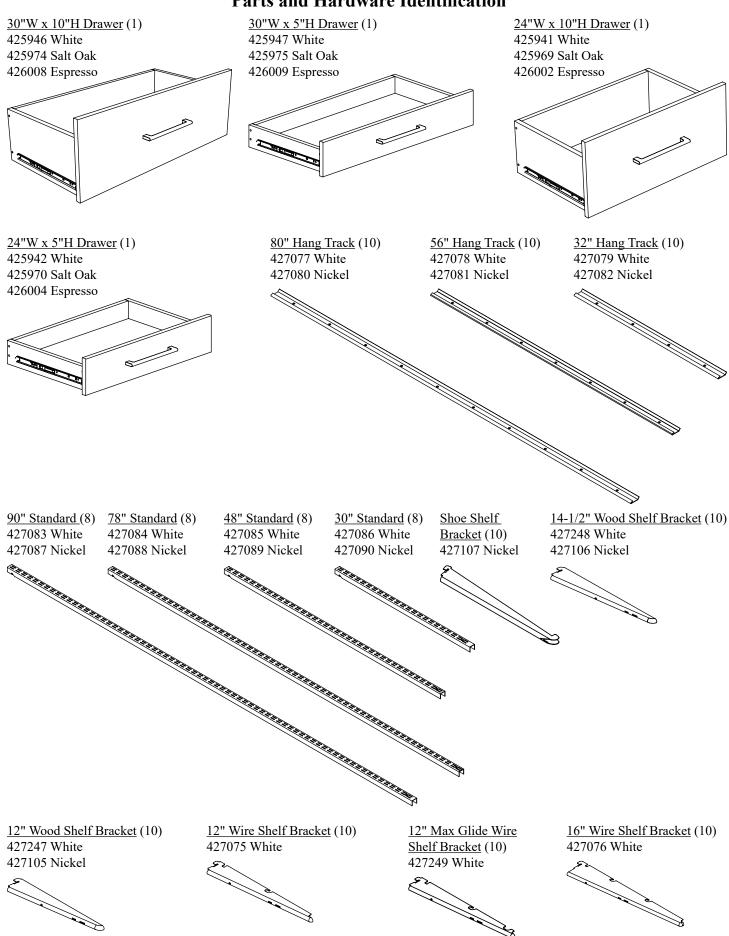


Page 4

Hardware Identification

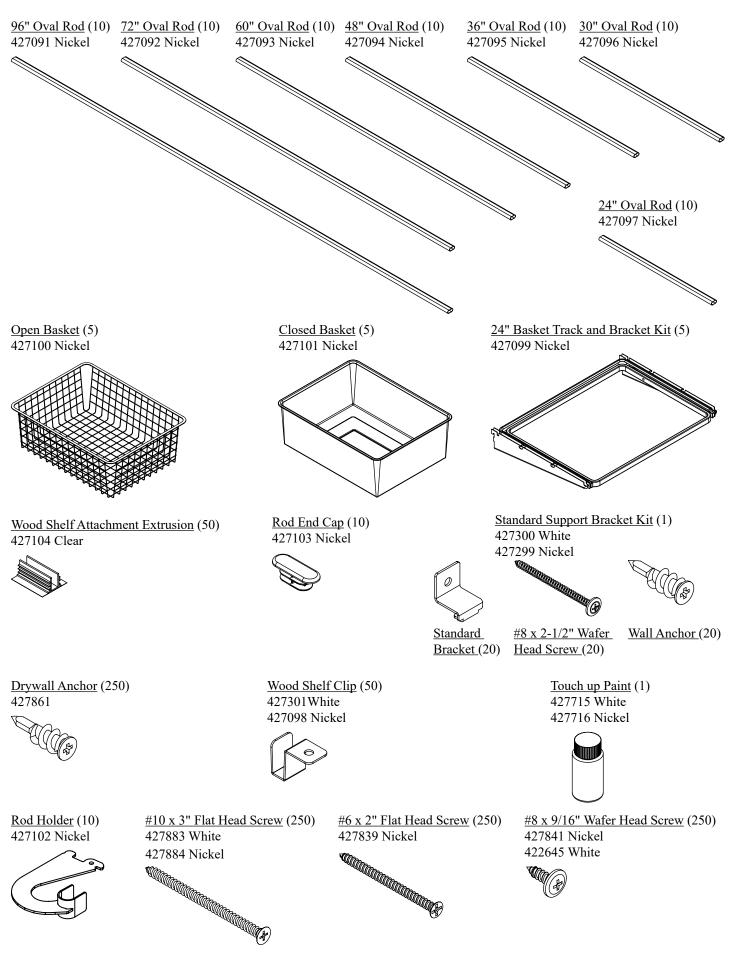

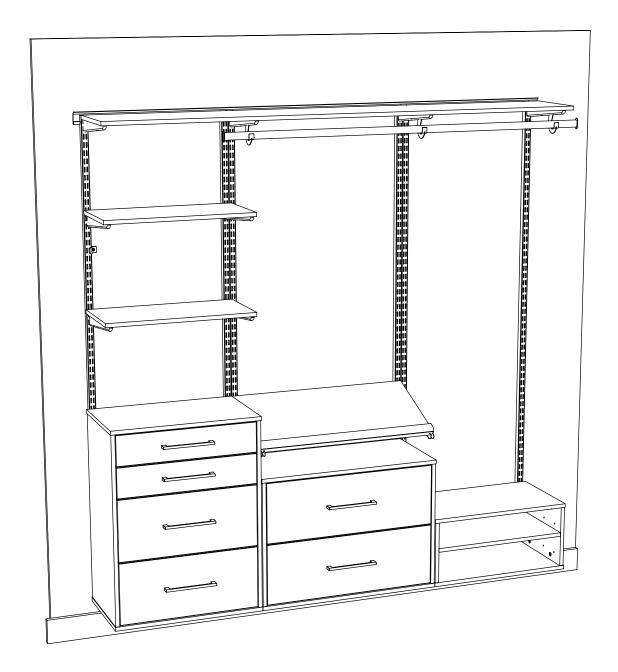


Standards and Track Installation

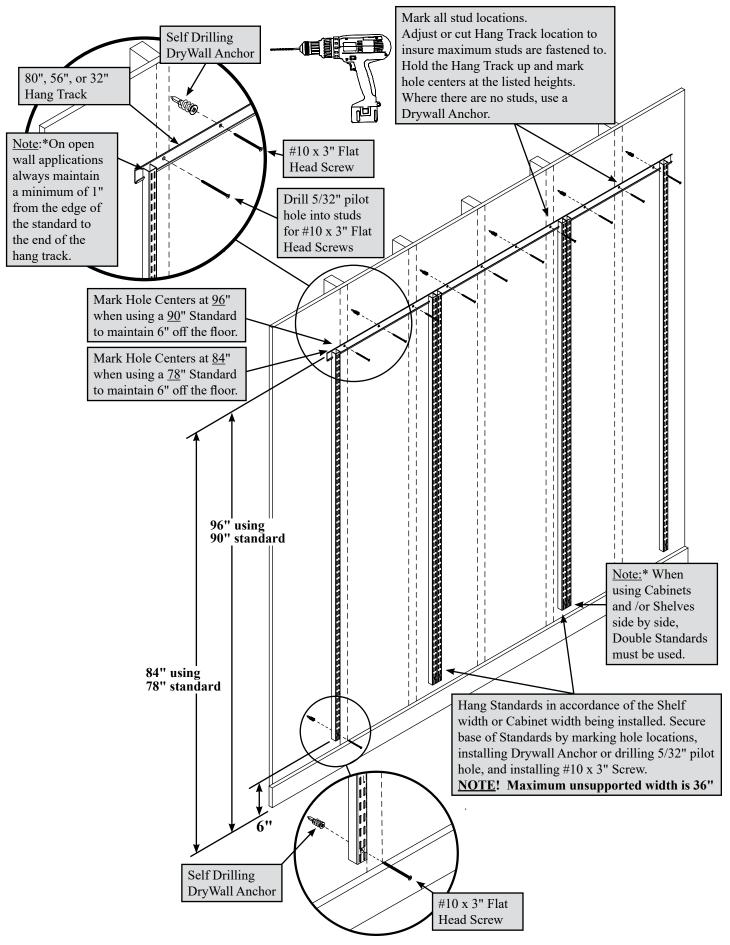


Cabinet Installation


If the design layout incorporates Cabinet(s), assemble the Cabinet(s) now using the instructions that come with the Cabinet.

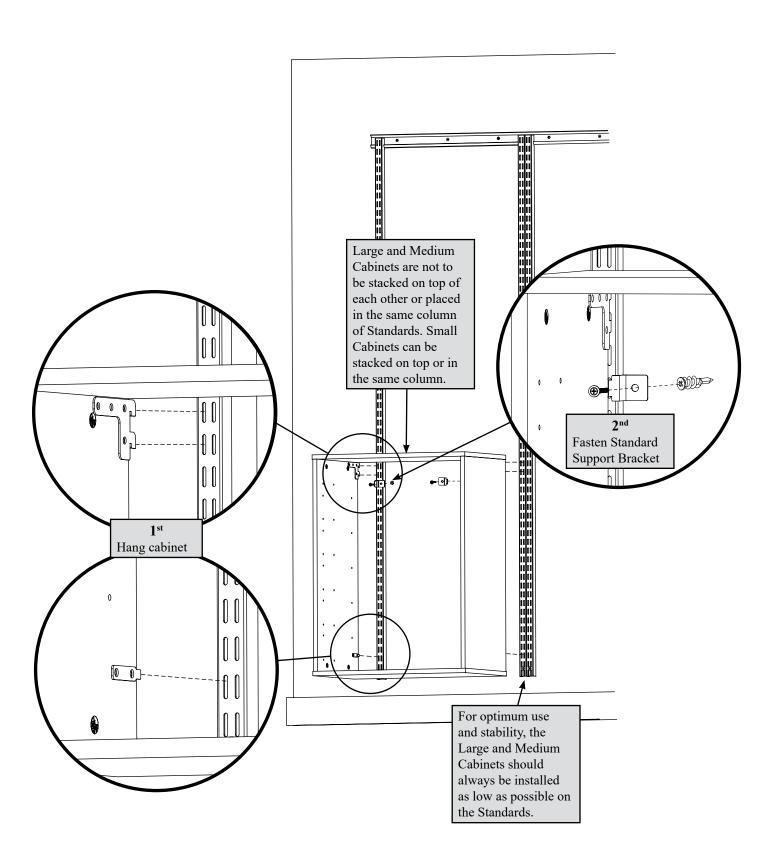


Drawer and/or Adjustable Shelf Installation

If the design layout incorporates Cabinets with drawers and/ or adjustable shelfing, assemble the drawers now with the instructions that come with the drawers and install as shown.

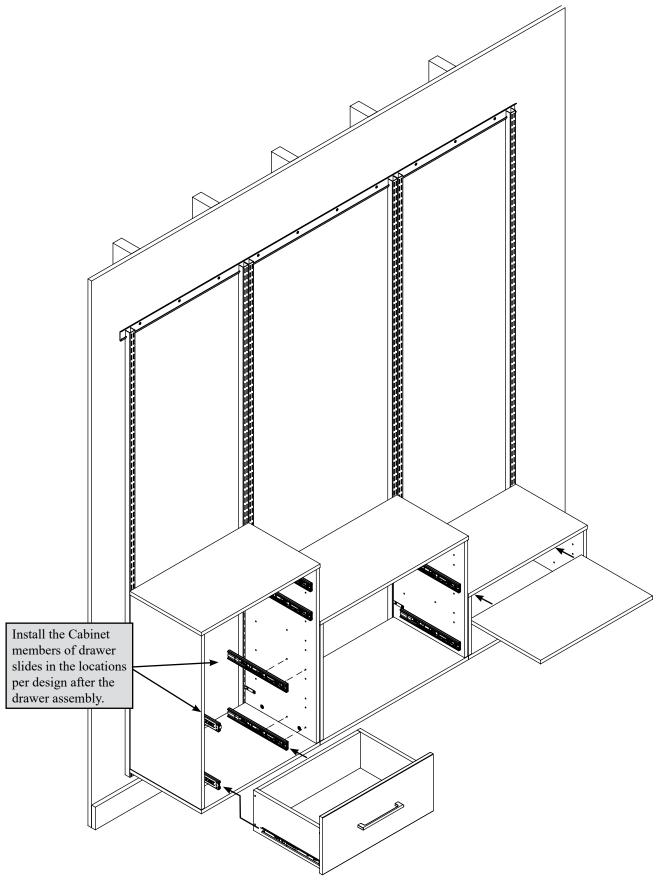

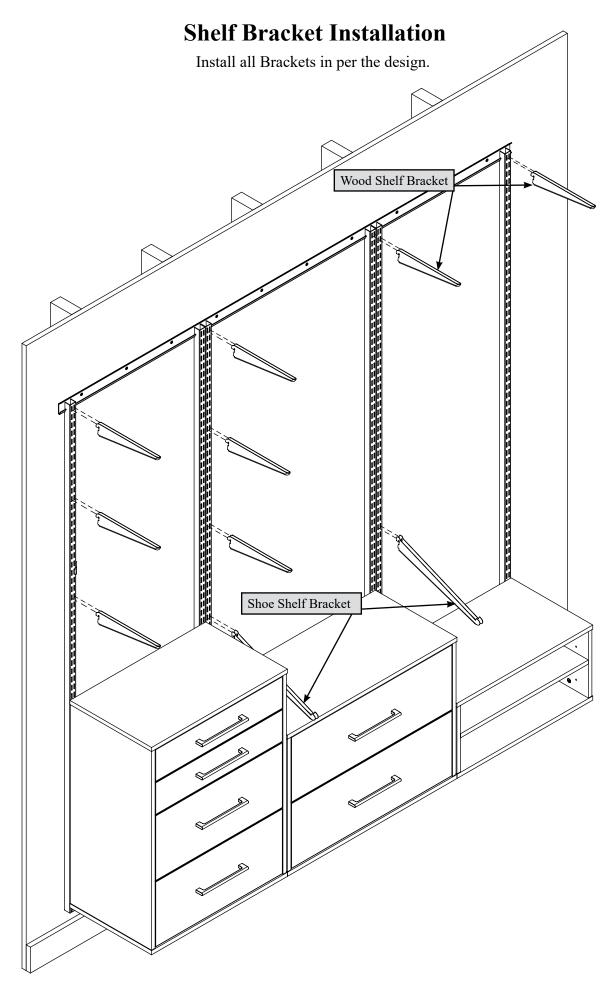


Shelf Installation

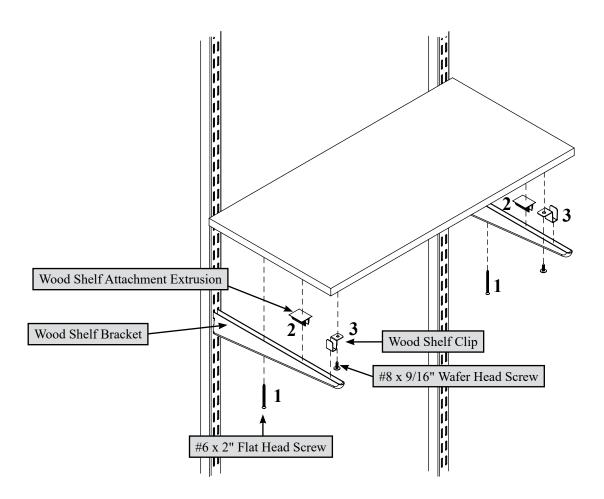


There are 3 ways to fasten a Wood Shelf to a Wood Shelf bracket. #1 is the preferred method with additional security of the Shelf by adding #2 or #3 options.


- 1. Turn a #6 x 2" Flat head screw through the center of the Wood Shelf Bracket and into the Woodshelf.
- 2. Push a Wood Shelf Attachment Extrusion into the groove of the Wood Shelf Bracket. Peel the paper backing off of the Extrusion. Stick the Wood Shelf to the Extrusion.
- 3. Place the Wood Shelf Clip into the groove of the Wood Shelf Bracket. Then fasten the Wood Shelf Clip to the Wood Shelf with a #8 x 9/16" Wafer Head Screw.

Rod, Rod Holder and End Cap Installation option per design

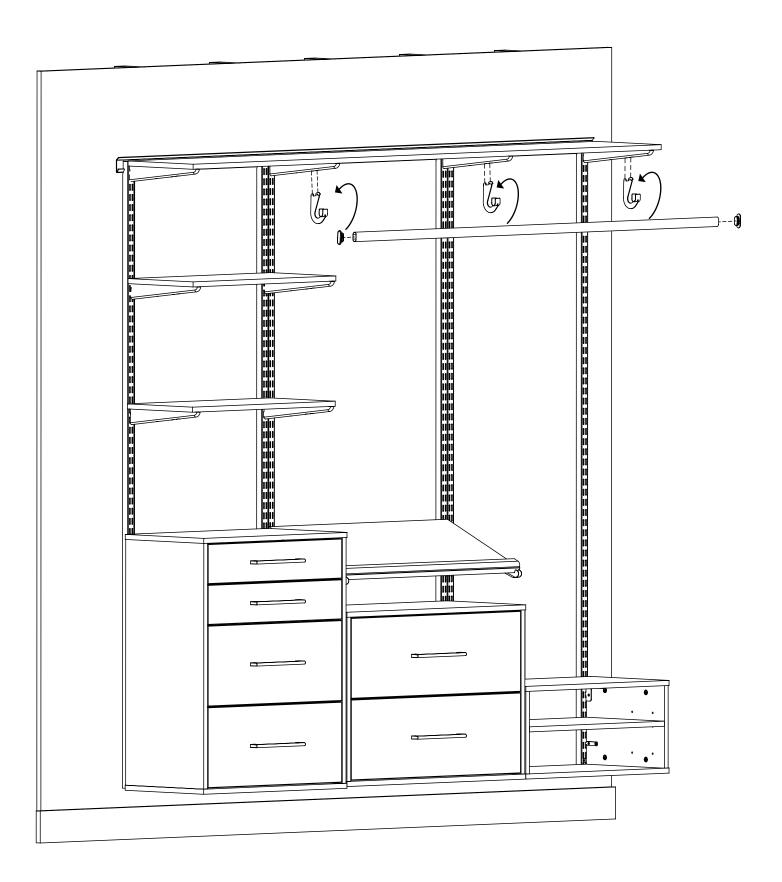


Standard Support Bracket Installation

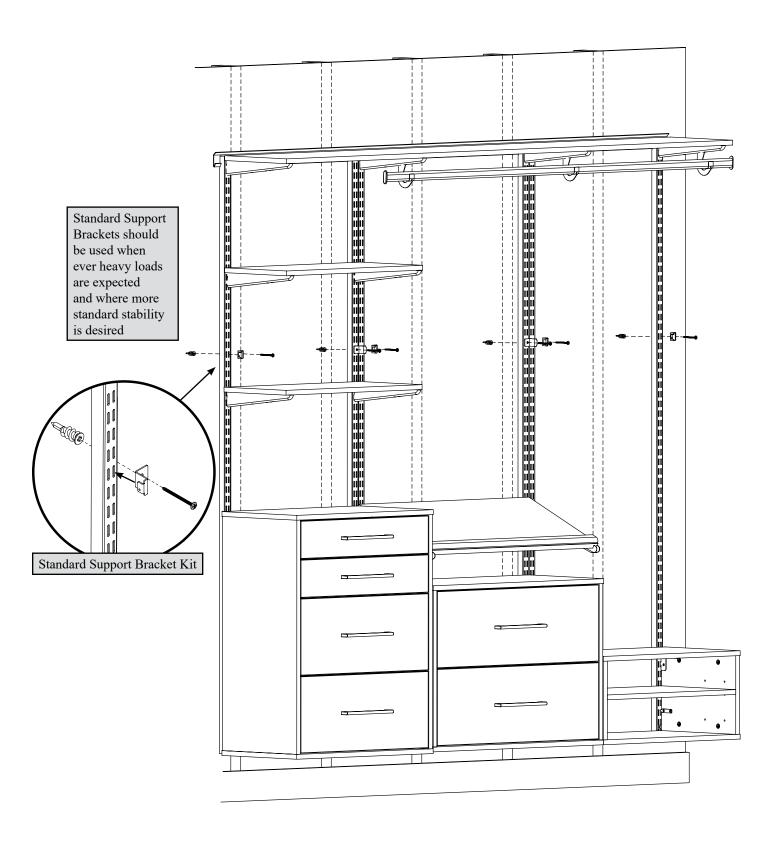


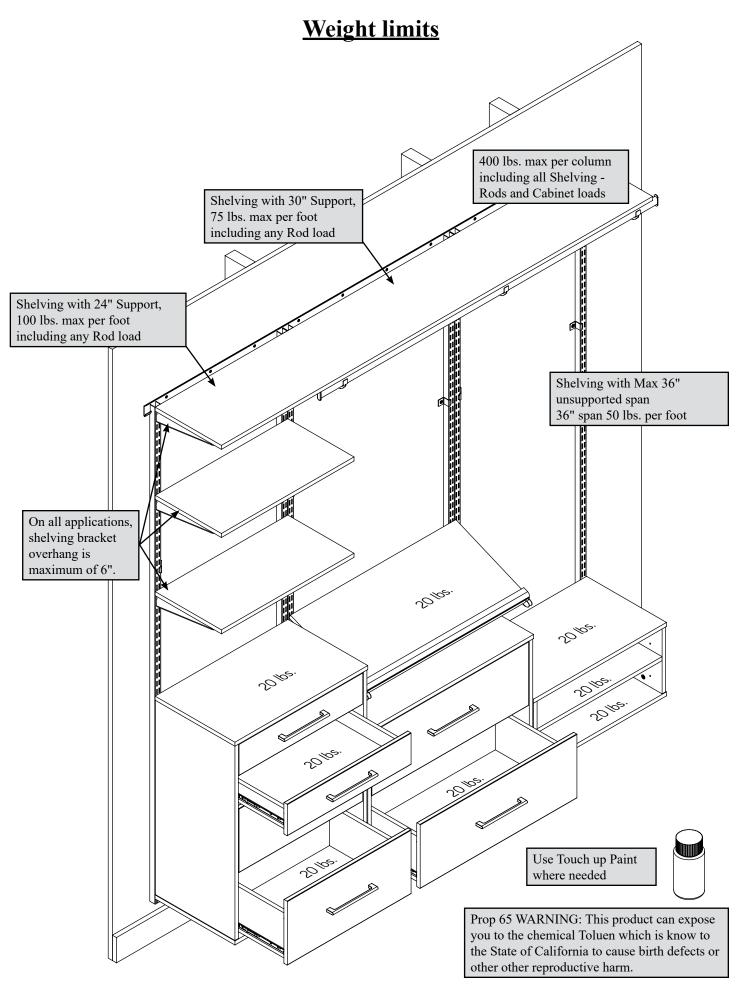


Wire Brackets and Shelves

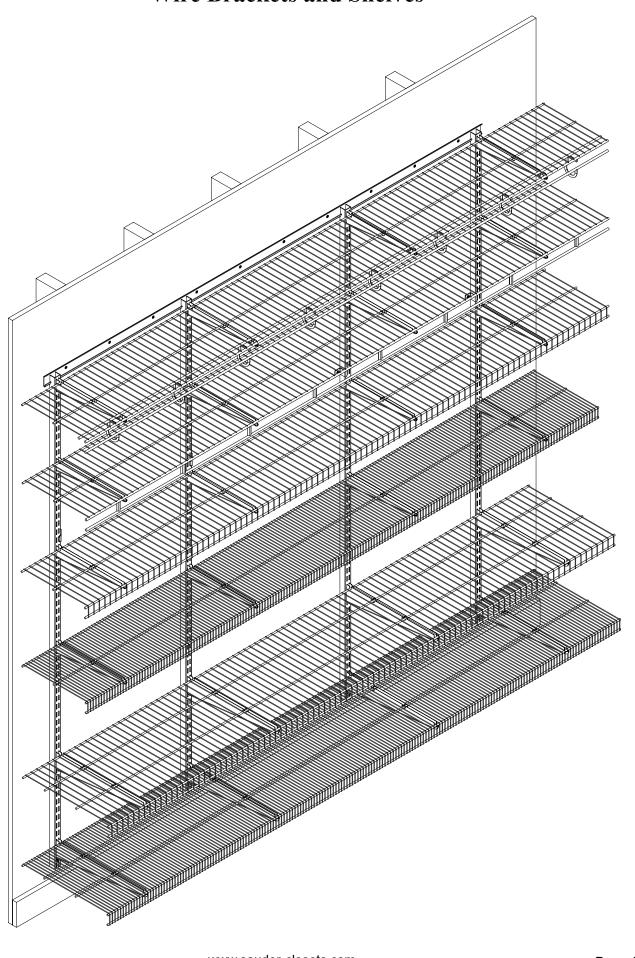


Standards and Track Installation for Wire Shelves

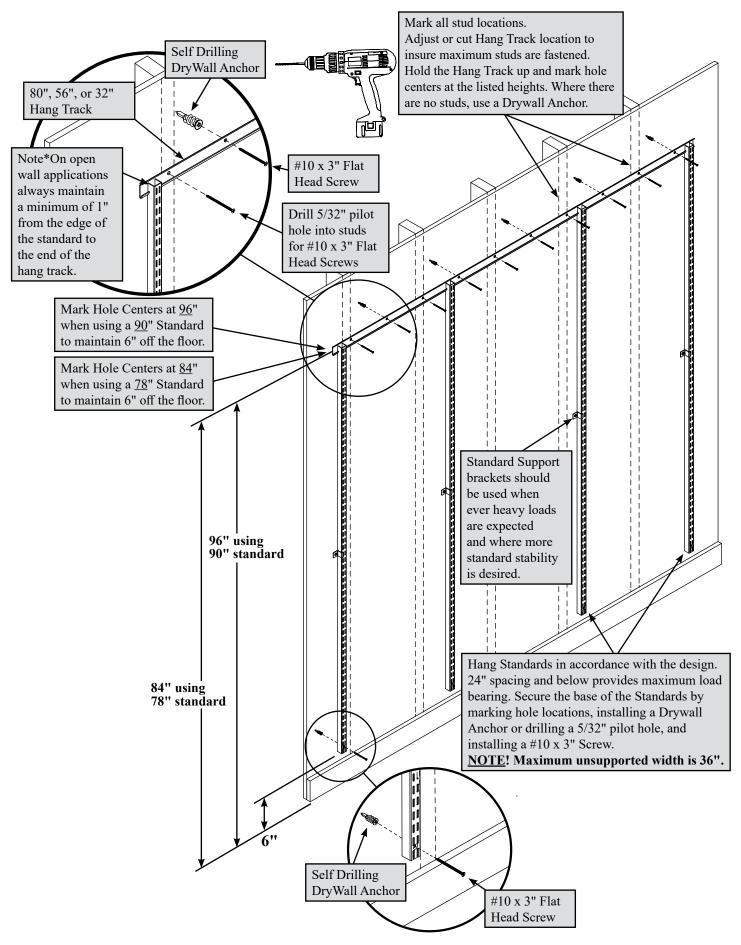

Wire Brackets and Shelves

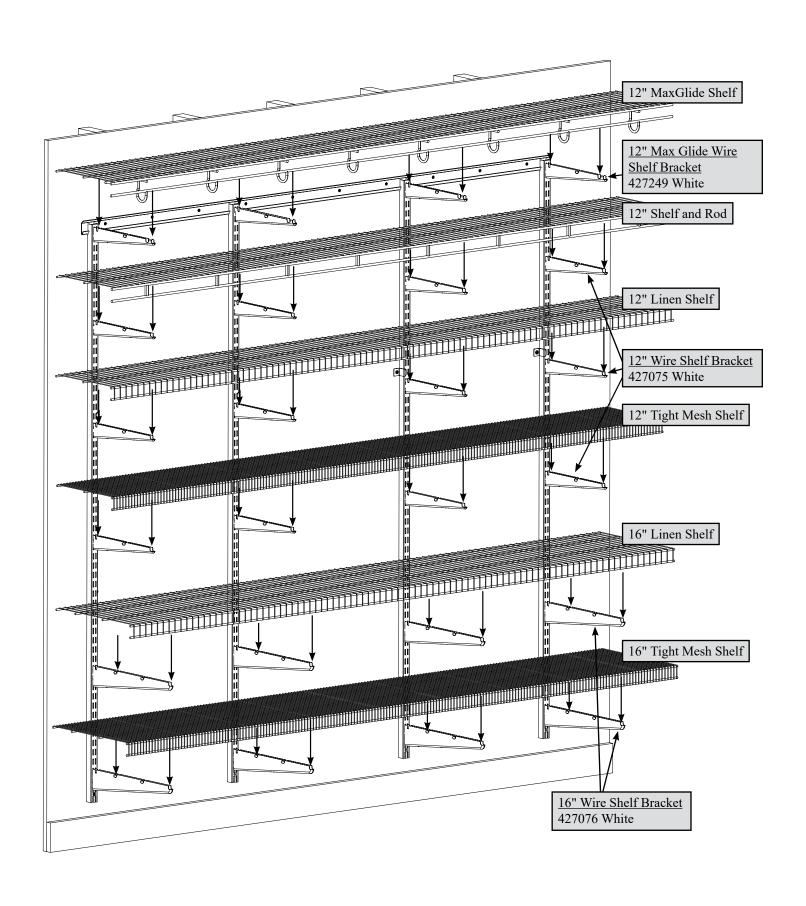

Weight limits

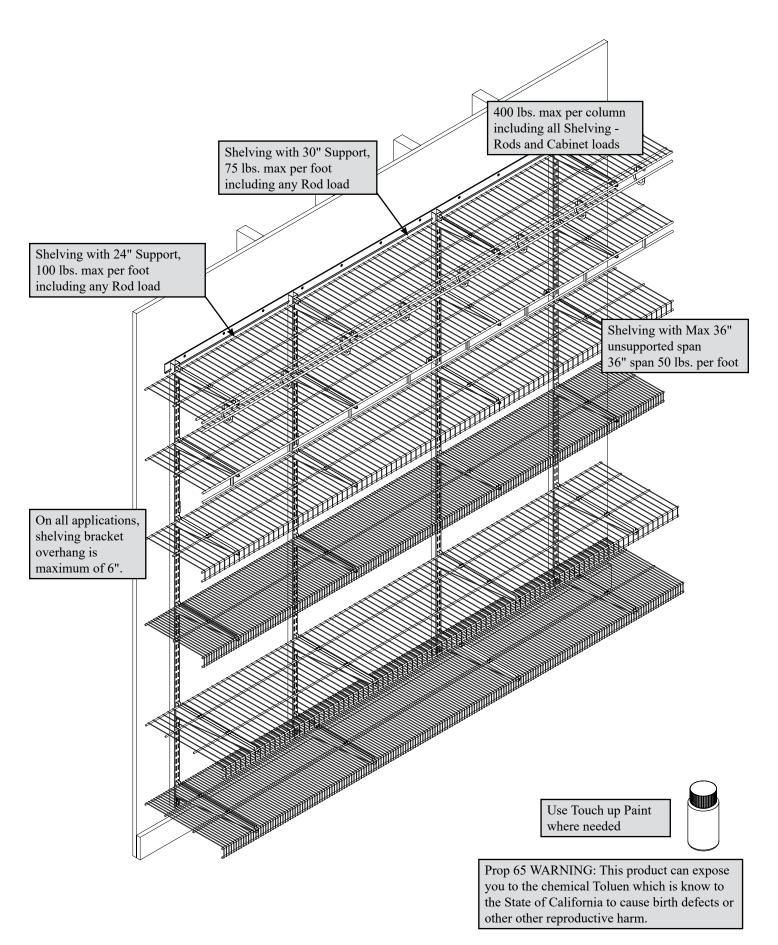

A WARNING

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. *Carefully read the following chart*.

Look out for:	What can happen:	How to avoid the problem:
 Loose or unstable closet components. Tall closet component structures. Closet component structures that are over five feet tall and placed in an open area or a walk—in closet. 	Risk of injury Closet components that are not properly connected can easily slide against each other and cause the structure to be unstable and tip over. A tall closet structure can tip unless it is properly secured.	Closet components must be securely attached to each other from side to side, and top to bottom. Secure the closet structure to a wall stud whenever possible. If you cannot use a wall stud, use the supplied wall anchors into your drywall. (If attaching the product to a wall made of concrete, plaster, or other material, purchase and use the appropriate mounting hardware. The attachment hardware must be rated to provide a minimum of 100 pounds of pull strength.)
Overloaded drawers and shelves.	 Risk of injury. Top-heavy furniture can tip over. Overloaded drawers or shelves can break. 	Never exceed the weight limits shown in the instructions. Work from bottom to top when loading shelves and drawers. Place the heavier items on the lower shelves or in lower drawers.
Improper use of furniture to support TVs. Setting TVs on furniture items not intended to support them is hazardous.	Risk of injury. TVs can be very heavy. Plus the weight and location of the picture tube tends to make TVs unbalanced and prone to tipping forward.	• This product is not designed to support a television.
Children climbing or hanging on the shelves or clothing bars.	Risk of injury or death.	Do not allow children to climb or hang on the shelves or clothing bars. Avoid placing items like toys or candy on shelves.

SAUDER™ CLOSETS PRODUCTS LIMITED WARRANTY

SauderTM Closets provides limited lifetime warranty coverage on SauderTM Closets Products (the "Products") to the original first use retail consumer ("Consumer") as set forth in this limited warranty statement. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Limited Lifetime Warranty Coverage: SauderTM Closets warrants that the Products will be free from defects in material and workmanship under conditions of normal, residential use, for the lifetime of the Products. This limited warranty extends only to the original, first-use retail Consumer, and is not transferable.

Limitations on Warranty Coverage: Sauder™ Closets Limited Lifetime Warranty (described above) is the only warranty coverage provided by Sauder™ Closets for the Products, and is in lieu of all other warranties. Under the laws of certain states, there may be no implied warranties from Sauder™ Closets, and ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED AND EXCLUDED TO THE FULLEST EXTENT ALLOWED BY LAW.

Exclusions from Coverage: This limited warranty does not cover defects arising from (1) the improper installation or use of the Products; (2) abuse or neglect; (3) any commercial, rental or non-residential use of the Products (including the installation and use of the Products in a commercial or rental structure); or (4) normal wear and tear.

Exclusive Remedy: SauderTM Closets will (at its option) repair or replace any defective Products (or components) at no charge, subject to confirmation of the defect and proof of purchase, as the sole and exclusive remedy under this limited warranty. This limited warranty does not cover costs for installation, returning any defective Products to SauderTM Closets, for removal or other labor costs in connection with the repair or replacement of the Products, all of which shall be the responsibility of the Consumer. SauderTM Closets liability under this limited warranty shall not exceed the purchase price of the Products. SauderTM Closets shall have NO LIABILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, and all such claims and damages are DISCLAIMED AND EXCLUDED FROM THIS LIMITED WARRANTY. You must notify SauderTM Closets, in writing, within 90 days after discovering any defect in order to receive limited warranty coverage.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

To Obtain Warranty Service or Information: For warranty inquiries or claims, contact SauderTM Closets at 1-855-854-7465, 502 Middle Street, Archbold, OH (USA) 43502, sauderclosets@ sauder.com. Return of any defective Product may be required by SauderTM Closets, or we may elect to examine the product at its location. If we ask you to ship any Products to us, we will issue you a return authorization number and provide return instructions. For returned Products to qualify for limited warranty coverage, they must be returned in the original or equivalent packaging, in accordance with the shipping instructions you receive from us, and must prominently display the return authorization number on the return package.

Stay Connected with SAUDER







Trust Sauder

Sauder has been making wood products since 1934. Today we offer a wide range of products, mostly made right here in Archbold, Ohio, and supported by our award-winning customer service.

Sauder™ Closets are supported by our Limited Lifetime Warranty and offers the same made-in-the-USA advantages as the rest of our product line.

Certificate of Conformity

- 1. This certificate applies to the Sauder Woodworking Product identified by this Instruction Book.
- This certificate applies to compliance of this product with the CPSC Ban on Lead-Containing Paint (16 CFR 1303).
- 3. This product is manufactured by:

Sauder Woodworking Company 502 Middle Street Archbold, Ohio 43502 (419) 446-2711

4. Date of Manufacture:



register your new product online

For immediate service, our website is available 24 hours a day, 7 days a week to order replacement parts, register your product, and view Sauder™ Closets products. www.sauder-closets.com

Consumer Services in United States and Canada Mon.-Fri. – 9am-5:30pm ET(except holidays) 1-855-854-7465

