

Endoca
Certificate of Analysis
 RAW Hemp Oil Drops 1500mg CBD+CBDA (15%)

ENDOCA LAB
 30 N Gould St, Sheridan, Wyoming 82801 USA
 Phone: +1(509)218-3083
 ionmaps@protonmail.com

ISO 22000 certified
 HACCP certified; GMP certified


Responsible Supervisor: _____
 Sample: _____
 Date of production: _____
 Date analysis began: _____
 Date sample report produced: _____
 Expiry date: _____
 Storage temperature: _____

Dr. Osvald P.
 Batch# 3107
 27-January 2025
 27-January 2025
 29-January 2025
 01-2027
 15°C to 30°C

CBD+CBDA 15.25%
Cannabinoid Profile:


Method: UPLC-MS/MS

| Component | Mass (%) | Amount (mg/g) |
|-----------------|--------------|---------------|
| CBD | 14.68 | 146.80 |
| CBDA | 0.57 | 5.70 |
| CBDV | 0.01 | 0.10 |
| CBG | ND | ND |
| CBGA | ND | ND |
| CBN | 0.02 | 0.20 |
| CBC | 0.06 | 0.60 |
| Δ9THC | 0.03 | 0.30 |
| Δ8THC | ND | ND |
| THCA | ND | ND |
| THCV | ND | ND |
| THCB | ND | ND |
| THCH | ND | ND |
| THCP | ND | ND |
| THCjd | ND | ND |
| CBD+CBDA | 15.25 | 152.50 |

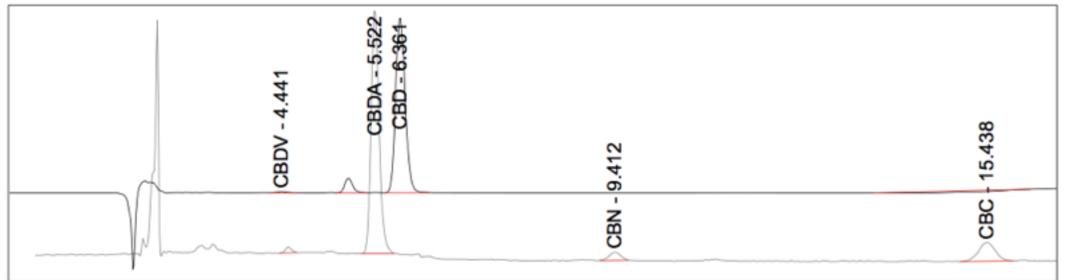

ND - Not detected, LOD-Limit of Detection (LOD=0.001mg/g), LOQ-Limit of Quantitation (LOQ=0.001mg/g)

Cannabinoids as Percent of Total Mass

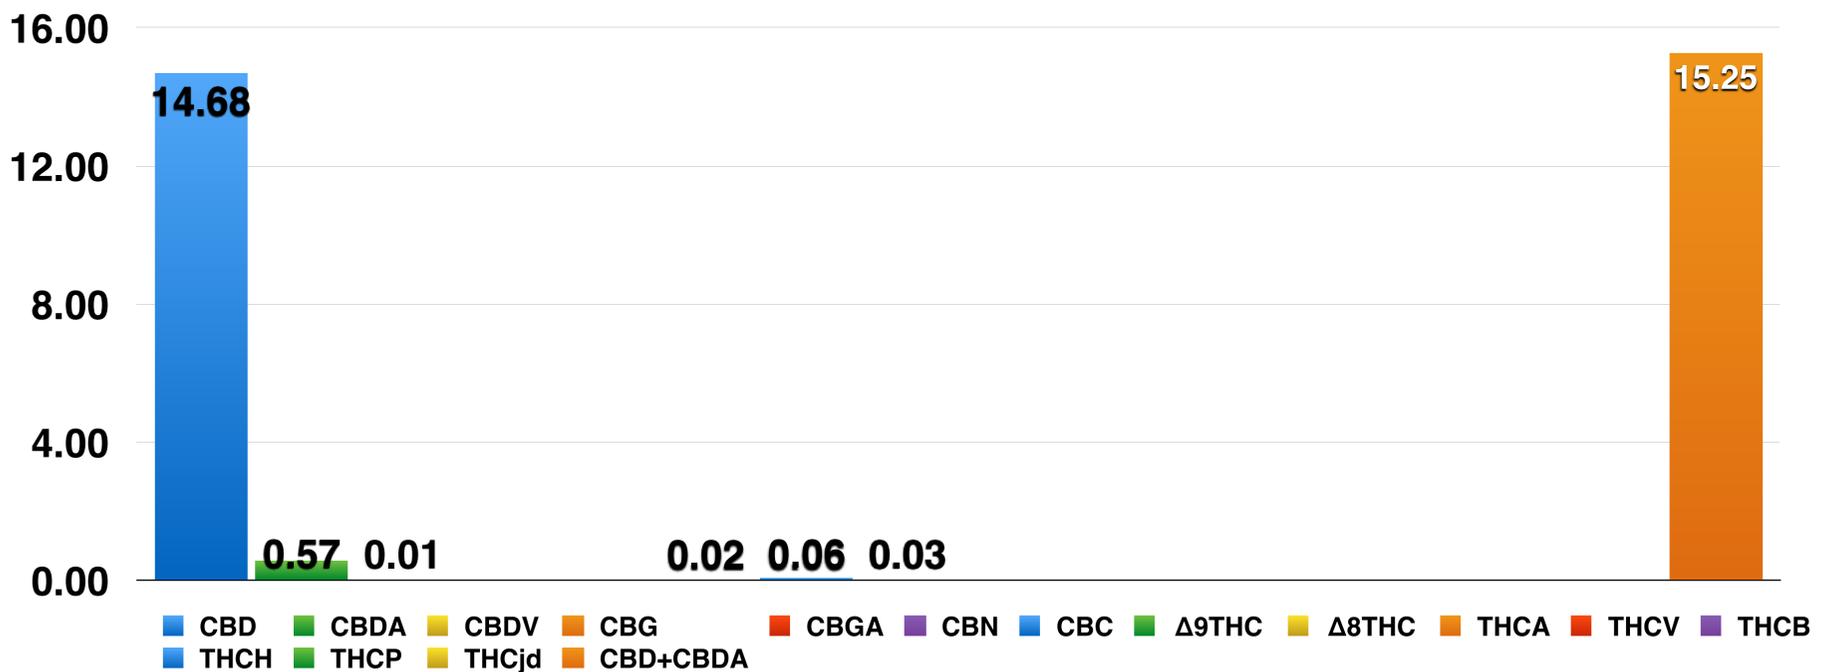

Endoca
Certificate of Analysis
 RAW Hemp Oil Drops 1500mg CBD+CBDA (15%)

ENDOCA LAB
 30 N Gould St, Sheridan, Wyoming 82801 USA
 Phone: +1(509)218-3083
 ionmaps@protonmail.com

ISO 22000 certified
 HACCP certified; GMP certified

Responsible Supervisor:

Dr. Osvald P.

Sample

Batch# 3107

Date of production:

27-January 2025

Date analysis began:

27-January 2025

Date sample report produced:

29-January 2025

Expiry date:

01-2027

Storage temperature:


15°C to 30°C

Terpenoid Profile:

| Component | Amount % |
|---------------------|----------|
| β-Caryophyllene | 0.09 |
| α-Humulene | ND |
| Caryophyllene oxide | ND |
| Myrcene | 0.24 |
| α-Pinene | 0.53 |
| Terpinolene | ND |
| Humulene epoxide II | ND |
| Limonene | 0.61 |
| β-Pinene | ND |
| E-β-Ocimene | ND |
| Sabinene | ND |
| Linalool | 0.13 |


ND - Not Detected

Method: HS-GC-FID

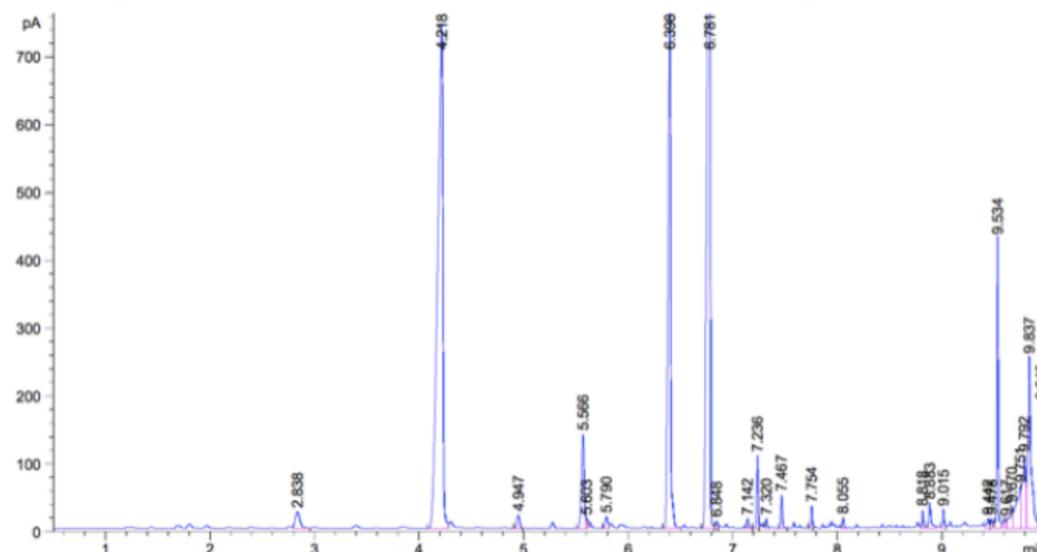

Terpenoid Distribution

- β-Caryophyllene
- α-Humulene
- Caryophyllene oxide
- Myrcene
- α-Pinene
- Terpinolene
- Humulene epoxide II
- Limonene
- β-Pinene
- E-β-Ocimene
- Sabinene
- Linalool

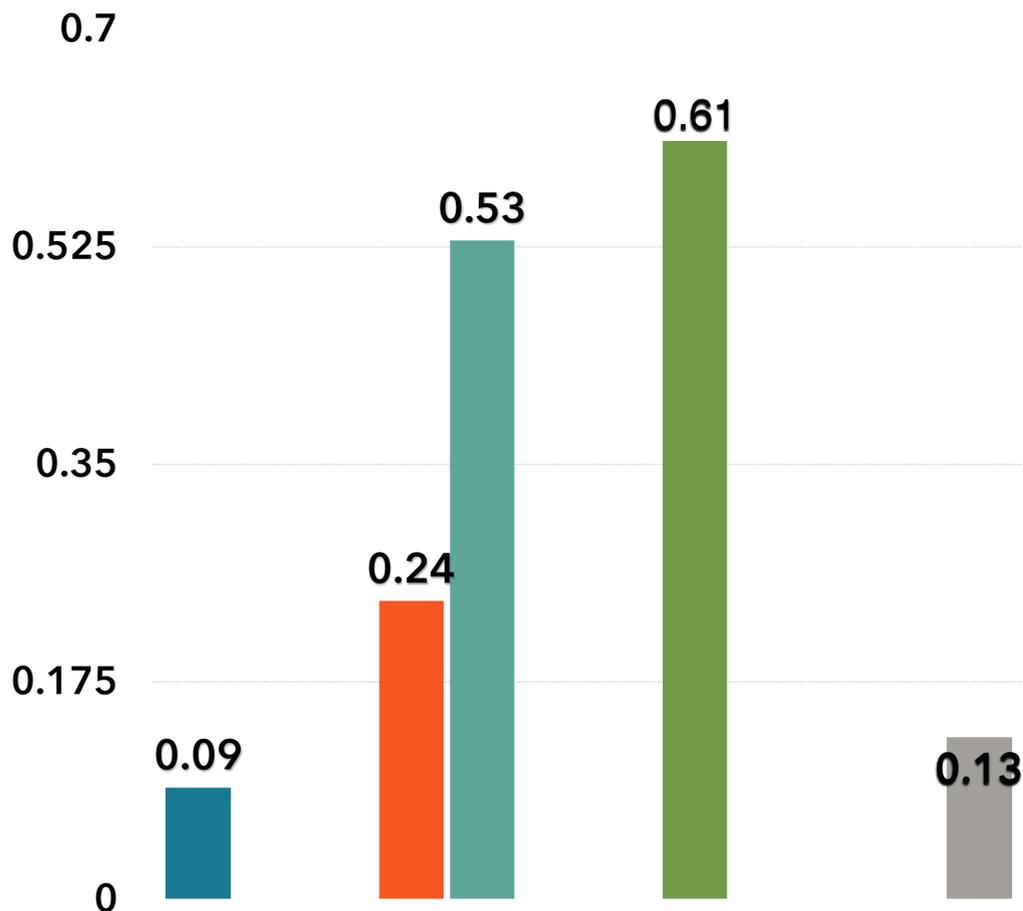

Endoca
Certificate of Analysis
 RAW Hemp Oil Drops 1500mg CBD+CBDA (15%)

ENDOCA LAB
 30 N Gould St, Sheridan, Wyoming 82801 USA
 Phone: +1(509)218-3083
 ionmaps@protonmail.com

ISO 22000 certified
 HACCP certified; GMP certified

Responsible Supervisor:
 Sample
 Date of production:
 Date analysis began:
 Date sample report produced:
 Expiry date:
 Storage temperature:


Dr. Osvald P.
 Batch# 3107
 27-January 2025
 27-January 2025
 29-January 2025
 01-2027
 15°C to 30°C

Microbial Profile:

| Component | CFU | Results |
|-------------------|------|---------|
| Total Plate Count | 1 g | <1000 |
| Listeria m. | 1 g | ND* |
| Escherichia c. | 1 g | ND* |
| Salmonella | 25 g | ND* |
| Yeast | 1 g | ND* |
| Mould | 1 g | ND* |

*ND - Not detected

**All Mycotoxins at
 Non Detectable (ND) levels**

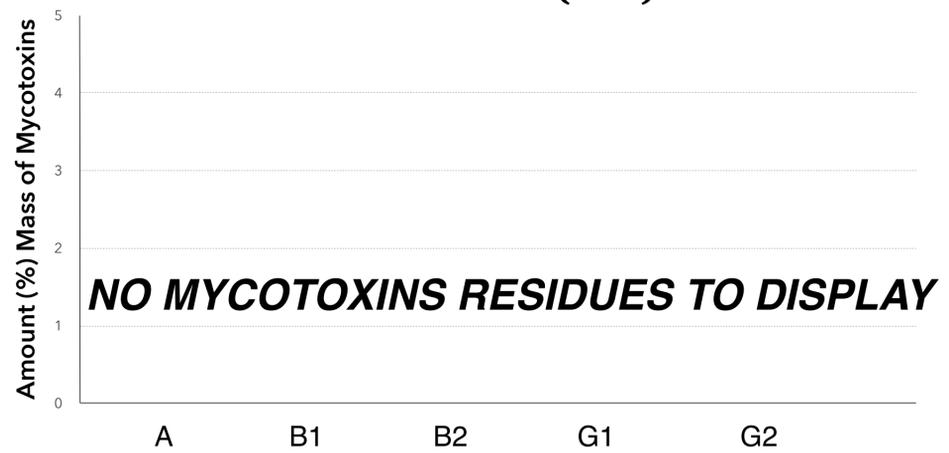

Nutrition Facts

| Component | % |
|--------------------------------------|-------|
| Moisture and volatile matter content | 1.25 |
| Protein content | 0.25 |
| Total fat content | 98.32 |
| Carbohydrates content | ND* |
| Total Fiber content | ND* |
| Total sugars content | ND* |
| Total ash content | ND* |

*ND - Not detected

Endoca
Certificate of Analysis
 RAW Hemp Oil Drops 1500mg CBD+CBDA (15%)

ENDOCA LAB
 30 N Gould St, Sheridan, Wyoming 82801 USA
 Phone: +1(509)218-3083
 ionmaps@protonmail.com

ISO 22000 certified
 HACCP certified; GMP certified


| | |
|------------------------------|-----------------|
| Responsible Supervisor: | Dr. Osvald P. |
| Sample | Batch# 3107 |
| Date of production: | 27-January 2025 |
| Date analysis began: | 27-January 2025 |
| Date sample report produced: | 29-January 2025 |
| Expiry date: | 01-2027 |
| Storage temperature: | 15°C to 30°C |

Heavy Metals Profile:

| Component | Mass (%) | Amount (ppm) | Limit** (ppm) |
|---|----------|--------------|---------------|
| Arsenic (As ₂ O ₃) | ND* | < 0.1 | < 0.1 |
| Cadmium (Cd) | ND* | < 0.1 | < 0.1 |
| Lead (Pb) | ND* | < 0.1 | < 0.1 |
| Mercury (Hg) | ND* | < 0.1 | < 0.1 |
| Chromium (Cr) | ND* | < 1 | < 1 |
| Tin (Sn) | ND* | < 10 | < 10 |

*ND - Not detected, **Codex STAN 193-1995, GB 2762, EC No. 1881/2006, FDA

All Heavy Metals at Non Detectable (ND) levels

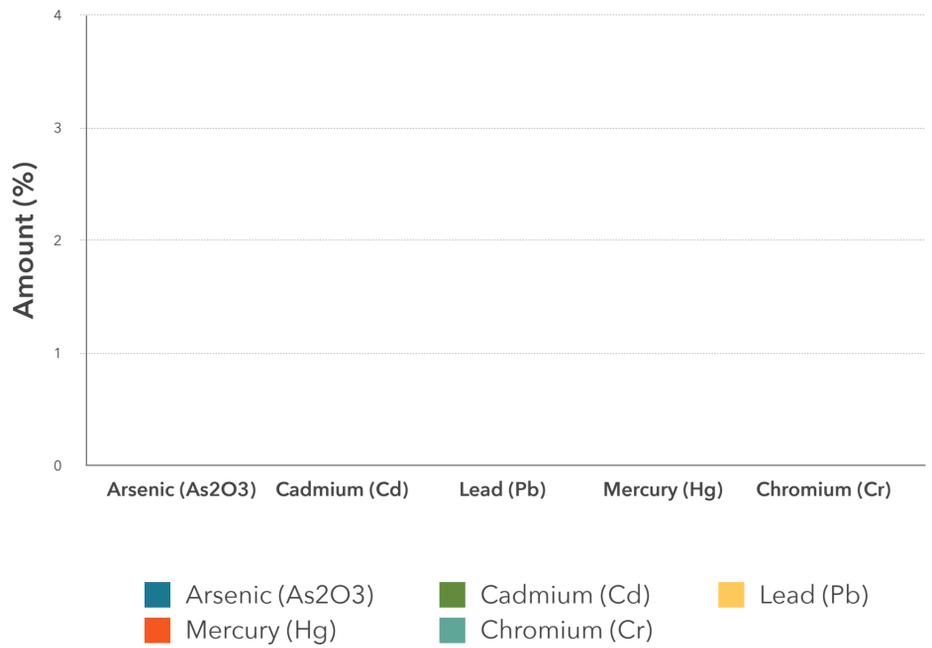

Conclusions:

No heavy metal residues detected.

No flammable residues detected.

No chemical residues detected.

Endoca
Certificate of Analysis
RAW Hemp Oil Drops 1500mg CBD+CBDA (15%)

ENDOCA LAB
30 N Gould St, Sheridan, Wyoming 82801 USA
Phone: +1(509)218-3083
ionmaps@protonmail.com

ISO 22000 certified
HACCP certified; GMP certified

Responsible Supervisor:

Sample

Date of production:

Date analysis began:

Date sample report produced:

Expiry date:

Storage temperature:

Dr. Osvald P.

Batch# 3107

27-January 2025

27-January 2025

29-January 2025

01-2027

15°C to 30°C

Pesticide Analysis: Our tests looked for residue of nearly 300 known pesticides finding no evidence of any over detectable limits.

PESTICIDES MEASURED

Acrinathrin Azoxystrobin Biphenhin Bitertanol Biphenyl Bromopropylate Bromuconazole Bupirimate Cadusafos Captafol Captan Chlorphenson Chlorfenapyr Chlorfenvinphos Chlorothalonil Chlorprophame 3,5-Dichloraniline Chlorpyrifos Chlorpyrifos-methyl Chlorthal-dimethyl Cyfluthrin Cypermethrin Cyproconazole Cyprodinil Clomazone o,p-DDE P,P-DDE o,p-DDD P,P-DDD o,p-DDT p,p-DDT Deltamethri Diazinon Diclofop-methyl Dieldrin Dichlobenil Dichlofluanid Dichlorvos Dicloran Dicofol Dicrotophos Diethofencarb Diflubenzuron Dimetachlor Diniconazole Dodemorph Diphenylamine Alpha-Endosulfan Beta-Endosulfan Endosulfan-sulphate Ethion Etofumesate Ethoprophos Ehtoxyquin Etoxazole Etridiazole Etrimphos Famoxadone Fenarimol Fenazaquin Fenchlorphos Fenhexamid Fenihothion Fenpropidin Fenpropimorph Fenvalerate Formothion Fipronil Fipronil-sulfone Fludioxonil Flusilazole Flutriafol Folpet Fuberidazole Furathiocarb Hexaconazole HCB Alpha-HCH Beta-HCH Delta-HCH Heptachlor Heptachlor-epoxidceis Heptachlor-epoxidtreans Iprodione Iprovalicarb Lambda- cyhalothrin Lindane Mecarbam Metalaxv Metazachlor Methidathion Metribuzin Mevinphos Myclobutanil Nuarimol Orthophenylphenol Oxadixyl Paclbutrazol Parathion Parathion-methyl Paraoxon-methyl Paraoxon-ethyl Penconazole Pendimethaline Permethrin Phenthoate Phorate Procymidone Profenofos Propiconazole Propyzamide Pyrazophos Pyrethrins Pyridaben Pyrimethanil Pyriproxyfen Quinoxifen Quitozone Pentachloraniline Phosphamidon Pyrifenoxy Prometryn Propanil Propoxur Proquinazid Prothiofos Simazine Spiroxamine T au-fluvalinate T ebuconazole T ebufenpyrad T ecnazene T efluthrin T erbuthylazine T etraconazole T etradifon T etramethrine T olclofos-methyl T olyfluanid Transfluthrin Triadimephon Triadimenol Trialate Trifloxystrobin Triflumizole Vinclozolin DDT isomersum Heptachlor (heptachloarnd heptachloer poxidsum) Trifluraline Chlorobenzilate 3-Chloraniline Abamectin (AvermectinBla and AvermectinBlb sum) Acetamidiprid Aldicarb Aldikarbsulphone Aldikarbsulphoxide Azinphos-ethyl Azinphos-methyl Benalaxyl Benfuracarb Boscalid Buprofezin Carbaryl Carbendazim Carbofuran 3-hydroksicarbofuran Carbosulfan Chloridazon Cymoxanil Clofentezin Clothianidin Demeton-S-methyl Demeton-S-methylsulfoxid Diafenthiuron Difenconazole Dimethoate Dimethomorph Diuron EPN Epoxiconazole Ethirimol Etofenprox Fenamidol Fenbuconazole Fenbutatinoxid Fenoxycarb Fenpyroximate Fenprothrin Fensulfothion Fenthion Fenthionsulphone Fenthionsulphoxide Fluazinam Flufenoxuron Fluquinconazole Fonofos Formetanate Fosthiazate Hexythiazox Imazalil Imidacloprid Indoxacarb Isofenphos Methacrifos Isofenphos-methyl Krezoxim-methyl Linuron Lufenuron Malaaxon Malathion Mepanipirim Mepronil Metamitron Metconazole Methamidophos Methiocarb Methiocarbsulphone Methiocarbsulfoxide Methomyl Methoxyfenozide Metobromuron Monocrotophos Monolinuron Omethoate Oxamyl Pencycuron Phenmedipham Phosalone Phosmet Phosmeot xon Phoxim Pymetrozine Piperonylbutoxide Pyraclostrobin Pyridaphenthion Pyridate Pyrifenoxy Pirimicarb Pirimicarbdesmethyl Pirimiphos-methyl Primisulfuron-methyl Prochloraz Propamocarb Propargite Prothioconazole Prothioconazole-desthio Quinalphos SpinosynA SpinosynD Sulfotep T ebufenozide T eflubenzuron Thiabendazole Thiacloprid Thiamethoxam Thiodicar Thiophanate-methyl Tralkoxydim Triazophos Trichlorfon Triflumuron Triforine Triticonazole Zoxamide Acephate Amitraz Fenamiphos Fenamiphosulphone Fenamiphosulfoxid Nitempiram Fenthionoxonsulphone Fenthionoxonsulfoxid Kumapho Piriphenox Mehibuzine DEET

Our microbiology analysis is standardized after the following protocols:

ISO 6579:2003

ISO 11290-1:2003

ISO 16649-2:2002

ISO 21527-2:2008

Note on Cannabinoid Testing:

All cannabinoids in their acid forms (ending in "-A") are convertible to their non-acid forms via a decarboxylation process (heating). The components lose mass through this process. To find the total theoretical active cannabinoids, one multiplies the acid forms by 87.7%. For example, CBD-A can be converted to active CBD using the formula: $CBD-A \times 0.877 = CBD$. In this case, the Max CBD for the sample is: $Max\ CBD\ (\%) = (\%CBD-A \times 0.877) + \%CBD$. The same calculation assay is valid for THC-A. This method has been validated according to the principles of the International Conference on Harmonisation.

Chromatographic Analysis:

Analysis of cannabinoids content was performed using Waters (Milford, MA, USA) UPLC separation module equipped with auto injector, sample cooler, vacuum degasser and column heater units. Separation of all cannabinoids was accomplished on YMC PRO C18 (150 x 4 mm I.D., S-2.5 μm) RP column coupled with C18 precolumn maintained at 30 °C.

Isocratic elution consisted of acetonitrile:water (4:1) was done in 20 min. The flow rate was maintained at 0.4 ml/min. The cannabinoids were monitored using Waters (Milford, MA, USA) MS/MS detector. The injection volume of 1 mg/ml sample was 10 μl .

Quantification of cannabinoids was obtained from linear regression equation of calibration curve of individual reference standard by plotting concentration versus the area ratio.

Analysis of terpenes was performed using GC-MS system equipped with auto injector. Separation was accomplished on Rx624Sil, 30m, 0.25 μm ID column.