

## How To Apply Vinyl




### Step 1.

Use a clean cloth with a 2:1 water and isopropyl alcohol mixture or Windex. Wipe the surface thoroughly and dry with a lint-free cloth.




### Step 2.

Align the imprint in the desired position and carefully secure it in place.

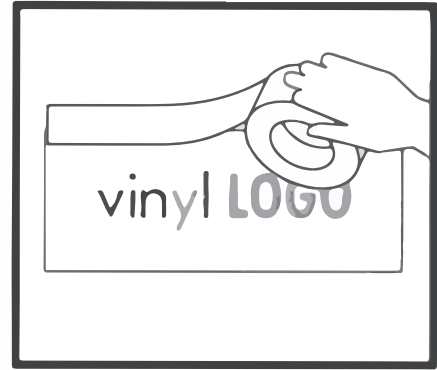


### Step 3.

Create a hinge by applying a strip of tape along the entire top edge of the imprint, ensuring it's securely fastened.

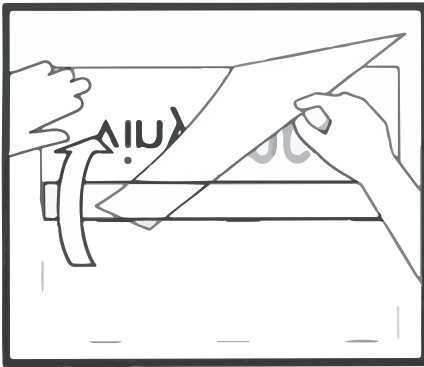


### Step 4.

Flip the imprint over and carefully peel away the liner from the back, ensuring the adhesive surface remains clean and intact.

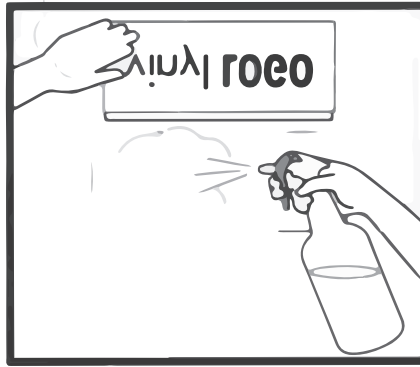


### Step 5.

Lightly spray the surface with a solution of 1 part dishwash detergent to 199 parts water. This allows for positioning adjustments before the imprint adheres permanently.

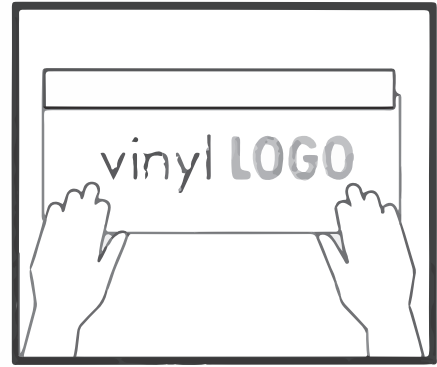


### Step 6.

Gently and precisely place the imprint back into it's original position.

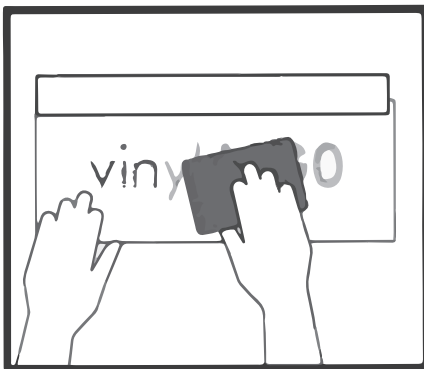

### Step 7.

Press with a squeegee from the top center out to secure the imprint, then wait 15-30 minutes before removing the paper backing.

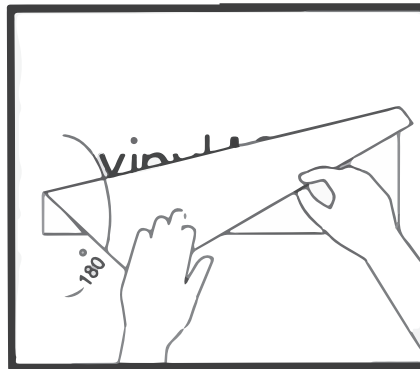

### Step 8.

Peel off the mask at a 180-degree angle, pulling it back on itself. Then, squeegee the entire imprint again.