

Serendipity Software Calibration Check

Calcheck Chart Pantone 1846 Colours

Measuring Instrument X-Rite i1iSis


Illumination Condition M1

Number of Patches 1846

Date Wed Feb 26 18:31:10 2025

Serendipity Score 92.42

	Δe value (tolerance)	ΔCh value (tolerance)	
Average	0.87 (≤ 2.5)	0.00 (≤ 2)	Δe ΔCh
Maximum	3.64 (≤ 5)	0.00 (≤ 3.5)	Δe ΔCh
95th Percentile	1.89 (≤ 5)		Δe
σ	0.53 (≤ 1.5)	0.00 (≤ 1.5)	Δe ΔCh

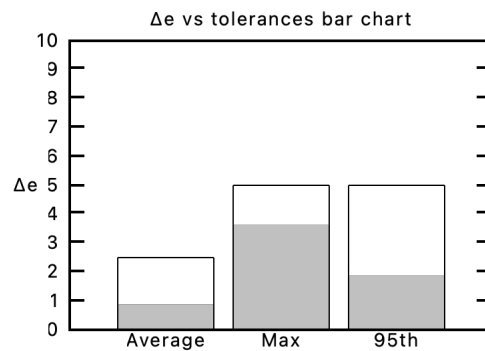

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE Yellow 012 C	87.55 2.18 109.05	84.07 4.32 105.29	2.62	5.00			
PANTONE Bright Red C	57.47 72.50 61.67	57.29 68.65 58.99	0.95	5.00			
PANTONE Pink C	51.00 72.69 -15.81	50.04 74.65 -15.83	1.07	5.00			
PANTONE Medium Purple C	20.89 50.17 -59.27	19.03 51.91 -59.18	1.49	5.00			
PANTONE Dark Blue C	20.84 29.17 -68.50	21.35 25.07 -68.22	2.44	5.00			
PANTONE 3514 C	78.97 14.42 91.77	79.35 11.97 89.03	1.31	5.00			
PANTONE 3596 C	78.42 8.77 29.47	77.83 8.56 28.41	0.62	5.00			
PANTONE 3547 C	63.97 14.86 64.47	64.22 14.14 62.72	0.56	5.00			
PANTONE 3588 C	73.11 38.26 71.91	71.47 37.42 70.73	1.27	5.00			
PANTONE 3564 C	62.05 49.49 94.11	61.84 50.99 85.86	2.98	5.00			
PANTONE 2428 C	65.53 29.12 60.96	65.88 28.80 60.93	0.34	5.00			
PANTONE 2429 C	52.82 38.70 54.92	54.02 36.95 52.91	1.35	5.00			
PANTONE 2430 C	71.16 17.38 29.70	70.92 18.00 30.13	0.41	5.00			
PANTONE 2431 C	68.32 25.00 46.54	68.14 24.52 47.52	0.64	5.00			
PANTONE 2432 C	66.83 28.83 41.77	66.99 27.99 42.88	0.91	5.00			
PANTONE 2433 C	62.74 36.09 41.04	62.71 36.07 41.68	0.31	5.00			
PANTONE 2434 C	63.43 41.43 35.32	63.48 41.75 33.80	0.90	5.00			
PANTONE 2435 C	56.67 31.71 28.58	56.56 32.09 29.47	0.42	5.00			
PANTONE 2436 C	48.81 40.39 33.90	48.79 39.42 34.37	0.65	5.00			
PANTONE 2437 C	81.75 16.15 23.66	81.13 16.29 22.75	0.72	5.00			
PANTONE 2438 C	72.83 23.26 26.24	73.04 23.39 25.95	0.27	5.00			
PANTONE 2439 C	62.30 23.95 21.65	62.16 23.80 21.56	0.14	5.00			
PANTONE 2440 C	63.92 13.58 10.07	64.49 13.26 10.11	0.54	5.00			
PANTONE 2441 C	53.05 22.46 19.52	53.38 22.25 19.52	0.35	5.00			
PANTONE 2442 C	48.12 26.88 18.99	48.10 27.05 19.26	0.15	5.00			
PANTONE 2443 C	36.85 36.38 34.09	37.66 36.65 32.98	0.97	5.00			
PANTONE 3544 C	78.05 13.12 14.50	78.34 13.24 13.29	0.92	5.00			
PANTONE 2444 C	73.40 20.53 13.44	73.30 20.57 11.97	1.03	5.00			
PANTONE 3519 C	74.36 24.61 5.74	74.72 24.44 5.64	0.29	5.00			
PANTONE 3572 C	76.43 40.02 15.84	75.48 38.51 14.07	1.21	5.00			
PANTONE 2445 C	66.49 35.43 12.68	66.62 34.89 12.62	0.24	5.00			
PANTONE 2446 C	64.19 31.22 10.40	63.71 31.75 9.25	0.92	5.00			
PANTONE 2447 C	54.73 28.15 8.34	54.89 28.06 8.01	0.26	5.00			
PANTONE 2448 C	57.87 47.68 33.92	58.13 47.19 32.73	0.57	5.00			
PANTONE 3556 C	55.36 69.72 51.60	55.45 68.11 49.92	0.52	5.00			
PANTONE 3516 C	51.23 64.53 60.03	52.10 64.28 57.83	1.20	5.00			
PANTONE 3546 C	44.62 72.62 50.96	44.20 73.32 46.40	2.16	5.00			
PANTONE 3517 C	40.42 73.69 48.54	41.97 71.75 47.21	1.47	5.00			
PANTONE 3523 C	30.22 32.18 13.75	31.74 30.88 14.84	1.61	5.00			
PANTONE 2449 C	19.60 17.83 7.05	21.19 16.20 7.22	1.60	5.00			
PANTONE 3568 C	84.73 17.24 -2.55	84.58 16.58 -3.42	0.76	5.00			
PANTONE 3595 C	82.02 23.09 -4.10	82.08 22.67 -5.51	0.93	5.00			
PANTONE 2450 C	53.60 62.85 -2.69	54.56 61.19 -2.29	1.03	5.00			
PANTONE 3527 C	53.53 65.16 -15.46	53.45 65.55 -16.40	0.38	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 3582 C	61.10 43.10 -8.92	61.60 42.40 -8.05	0.64	5.00			
PANTONE 2451 C	47.17 51.95 0.99	48.75 49.11 0.96	1.78	5.00			
PANTONE 2452 C	47.68 60.06 3.32	48.59 57.91 3.06	1.08	5.00			
PANTONE 2453 C	66.76 19.73 -17.86	66.83 19.20 -17.85	0.33	5.00			
PANTONE 3520 C	59.80 32.14 -28.67	60.80 32.66 -28.22	0.97	5.00			
PANTONE 3559 C	45.06 37.78 -35.65	45.81 36.60 -34.53	0.87	5.00			
PANTONE 3593 C	53.64 28.57 -30.70	53.90 28.20 -30.43	0.30	5.00			
PANTONE 3575 C	54.53 27.18 -37.01	55.60 26.51 -36.25	1.06	5.00			
PANTONE 3543 C	62.96 19.38 -31.53	63.92 19.73 -31.11	0.92	5.00			
PANTONE 3515 C	23.50 50.47 -43.95	22.31 53.16 -44.39	1.23	5.00			
PANTONE 3558 C	65.09 5.51 -30.20	65.38 6.03 -29.09	1.01	5.00			
PANTONE 3555 C	24.43 35.30 -40.80	24.68 34.25 -40.20	0.43	5.00			
PANTONE 3583 C	24.76 37.97 -46.77	25.64 36.28 -46.04	0.91	5.00			
PANTONE 3574 C	34.02 20.16 -29.80	34.84 19.34 -29.38	0.78	5.00			
PANTONE 3566 C	24.48 26.47 -37.27	27.02 22.16 -36.39	2.93	5.00			
PANTONE 3535 C	18.89 43.34 -57.55	16.25 46.34 -57.22	2.32	5.00			
PANTONE 3542 C	17.70 34.07 -53.78	16.97 34.20 -51.13	1.42	5.00			
PANTONE 3506 C	40.02 0.09 -48.64	40.79 -0.39 -46.90	0.76	5.00			
PANTONE 3590 C	37.74 7.61 -44.02	37.95 7.01 -43.13	0.26	5.00			
PANTONE 3584 C	27.56 10.23 -40.15	28.75 9.38 -38.15	1.07	5.00			
PANTONE 3591 C	18.54 18.98 -53.93	19.86 15.20 -53.83	2.65	5.00			
PANTONE 3597 C	23.89 7.76 -39.33	25.62 7.97 -37.72	1.57	5.00			
PANTONE 3581 C	22.37 9.87 -37.77	24.22 9.19 -35.79	1.49	5.00			
PANTONE 3524 C	18.81 11.61 -24.12	19.45 10.18 -23.42	1.02	5.00			
PANTONE 3577 C	72.84 -10.09 -23.78	73.20 -9.87 -23.45	0.34	5.00			
PANTONE 3545 C	68.66 -34.86 -32.96	69.06 -34.72 -32.94	0.32	5.00			
PANTONE 3551 C	57.68 -54.51 -36.85	56.14 -54.30 -39.27	1.71	5.00			
PANTONE 3538 C	54.66 -28.57 -48.22	55.94 -27.87 -46.70	1.29	5.00			
PANTONE 3553 C	39.88 -25.09 -52.34	37.87 -26.22 -54.86	1.89	5.00			
PANTONE 2454 C	48.46 -16.98 -27.96	48.50 -16.67 -28.07	0.19	5.00			
PANTONE 3526 C	59.09 -7.07 -8.29	59.50 -7.15 -8.17	0.39	5.00			
PANTONE 2455 C	73.09 -15.99 -1.02	72.81 -15.43 -1.92	0.84	5.00			
PANTONE 3533 C	79.80 -37.80 -3.18	79.67 -36.40 -4.47	1.05	5.00			
PANTONE 3534 C	61.21 -64.83 -10.84	62.20 -62.90 -10.37	0.99	5.00			
PANTONE 2456 C	57.44 -34.65 -1.62	57.63 -34.30 -1.99	0.34	5.00			
PANTONE 3560 C	56.82 -60.80 -10.48	58.22 -59.37 -8.93	1.52	5.00			
PANTONE 3557 C	44.01 -45.36 -16.19	45.24 -44.01 -14.37	1.50	5.00			
PANTONE 3541 C	50.00 -61.60 -24.73	48.73 -61.88 -27.46	1.74	5.00			
PANTONE 2457 C	66.74 -13.41 4.41	66.89 -12.36 4.21	0.83	5.00			
PANTONE 2458 C	58.71 -20.42 5.71	58.41 -20.05 5.46	0.37	5.00			
PANTONE 2459 C	65.13 -33.46 4.81	65.44 -32.35 4.57	0.53	5.00			
PANTONE 2460 C	66.40 -23.52 -5.93	66.50 -23.35 -5.34	0.42	5.00			
PANTONE 2461 C	55.17 -32.09 -8.68	55.66 -30.98 -8.92	0.72	5.00			
PANTONE 2462 C	54.61 -19.43 -1.84	54.91 -19.07 -1.87	0.36	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2463 C	47.15 -10.71 -0.98	47.64 -9.97 -0.73	0.82	5.00			
PANTONE 2464 C	70.44 -33.71 30.51	70.37 -32.58 31.72	0.86	5.00			
PANTONE 2465 C	40.52 -36.11 26.09	42.16 -33.72 23.61	1.90	5.00			
PANTONE 3522 C	46.88 -69.12 31.98	47.06 -66.57 33.69	1.13	5.00			
PANTONE 3536 C	39.35 -78.11 18.91	37.89 -76.94 18.39	1.30	5.00			
PANTONE 3500 C	37.55 -57.90 19.92	39.89 -53.83 15.48	2.87	5.00			
PANTONE 3537 C	24.80 -39.08 16.30	25.24 -37.33 17.48	1.10	5.00			
PANTONE 2466 C	31.20 -15.23 -3.13	31.42 -15.72 -2.93	0.44	5.00			
PANTONE 3570 C	80.34 -30.24 91.70	79.90 -27.12 92.75	1.52	5.00			
PANTONE 3507 C	78.63 -27.85 83.10	79.46 -25.86 78.27	1.24	5.00			
PANTONE 3561 C	71.43 -44.26 74.01	71.55 -40.23 75.00	1.69	5.00			
PANTONE 3501 C	62.72 -49.43 60.23	63.02 -47.25 60.63	0.87	5.00			
PANTONE 3529 C	59.68 -54.59 50.41	61.16 -50.84 47.67	1.70	5.00			
PANTONE 3539 C	56.08 -44.80 44.41	57.93 -40.59 40.08	2.36	5.00			
PANTONE 3508 C	47.35 -19.18 35.03	49.02 -17.70 33.62	1.84	5.00			
PANTONE 3599 C	79.65 3.70 32.72	79.23 4.48 30.51	1.25	5.00			
PANTONE 2467 C	63.58 11.85 25.72	63.42 11.96 26.66	0.48	5.00			
PANTONE 2468 C	49.41 17.64 24.29	49.59 17.94 26.57	1.20	5.00			
PANTONE 2469 C	43.78 21.69 27.77	43.93 21.59 29.21	0.84	5.00			
PANTONE 2470 C	55.47 8.05 20.05	56.10 8.26 21.36	0.91	5.00			
PANTONE 2471 C	59.39 10.02 13.96	59.19 9.84 13.86	0.24	5.00			
PANTONE 2472 C	30.55 13.13 19.86	31.29 13.78 20.46	0.75	5.00			
PANTONE 2473 C	75.90 5.64 -0.99	75.70 5.59 -2.50	1.28	5.00			
PANTONE 2474 C	67.45 5.18 6.59	67.38 5.17 6.56	0.06	5.00			
PANTONE 2475 C	58.60 10.41 7.70	58.98 10.91 8.90	0.95	5.00			
PANTONE 2476 C	47.65 10.12 4.29	48.15 10.40 5.43	1.02	5.00			
PANTONE 2477 C	40.07 10.24 6.62	40.73 10.47 8.57	1.58	5.00			
PANTONE 2478 C	25.27 11.49 1.25	26.28 10.86 3.41	1.94	5.00			
PANTONE 2479 C	22.75 4.40 4.99	23.01 4.62 5.95	0.81	5.00			
PANTONE 100 C	92.05 -7.57 65.76	90.78 -5.93 66.31	1.29	5.00			
PANTONE 101 C	91.76 -7.52 75.11	90.45 -6.36 75.42	1.06	5.00			
PANTONE 102 C	90.24 -4.88 106.28	88.19 -3.89 107.19	1.40	5.00			
PANTONE Yellow C	88.98 -1.32 110.86	85.54 -0.43 106.43	2.37	5.00			
PANTONE 103 C	70.15 0.45 83.72	69.59 0.76 82.98	0.50	5.00			
PANTONE 104 C	63.55 -0.30 70.66	62.99 0.72 71.00	0.78	5.00			
PANTONE 105 C	51.58 -0.75 45.49	52.53 0.99 44.07	1.63	5.00			
PANTONE 7401 C	90.20 1.55 32.20	89.79 0.54 30.96	0.98	5.00			
PANTONE 7402 C	87.03 1.42 34.31	87.00 0.81 34.90	0.54	5.00			
PANTONE 7403 C	85.90 2.77 43.04	85.77 1.70 41.66	0.88	5.00			
PANTONE 7404 C	87.53 -0.92 73.84	87.24 -0.94 73.33	0.22	5.00			
PANTONE 7405 C	83.84 2.32 89.62	84.63 1.85 86.92	0.79	5.00			
PANTONE 7406 C	81.45 6.79 88.59	82.21 5.61 84.71	1.08	5.00			
PANTONE 7407 C	68.94 11.13 46.49	68.46 11.53 47.46	0.51	5.00			
PANTONE 2001 C	91.25 -0.27 38.46	90.53 -1.61 38.84	1.09	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2002 C	90.26 -0.08 51.27	88.94 -1.35 50.52	1.22	5.00			
PANTONE 2003 C	90.25 -1.57 61.49	89.09 -1.31 62.91	0.84	5.00			
PANTONE 2004 C	89.28 2.76 51.83	87.56 1.51 52.32	1.40	5.00			
PANTONE 2005 C	88.32 6.51 47.96	87.40 5.42 48.23	0.99	5.00			
PANTONE 2006 C	79.26 9.66 60.43	78.74 9.03 61.02	0.60	5.00			
PANTONE 2007 C	72.31 15.73 68.38	72.15 15.55 69.66	0.42	5.00			
PANTONE 106 C	90.66 -4.13 74.70	89.57 -4.84 74.50	0.80	5.00			
PANTONE 107 C	89.83 -2.48 84.13	88.24 -2.50 86.11	1.09	5.00			
PANTONE 108 C	88.45 0.61 94.50	87.31 0.85 94.69	0.74	5.00			
PANTONE 109 C	86.28 5.99 98.55	86.02 3.69 97.95	1.22	5.00			
PANTONE 110 C	72.59 9.31 88.88	71.83 10.68 88.53	0.97	5.00			
PANTONE 111 C	59.30 4.68 68.12	59.04 6.70 68.86	1.25	5.00			
PANTONE 112 C	56.17 2.48 57.20	58.14 2.41 54.11	2.01	5.00			
PANTONE 113 C	89.72 -1.34 69.51	89.05 -1.98 68.29	0.66	5.00			
PANTONE 114 C	89.06 -0.10 75.68	88.59 -0.87 74.92	0.57	5.00			
PANTONE 115 C	88.18 1.57 82.45	87.53 1.76 85.04	0.69	5.00			
PANTONE 116 C	85.45 8.24 89.47	85.29 7.54 87.87	0.46	5.00			
PANTONE 117 C	66.18 11.95 78.62	65.64 11.88 78.02	0.46	5.00			
PANTONE 118 C	58.13 8.99 66.31	57.94 9.08 67.70	0.39	5.00			
PANTONE 119 C	49.67 2.40 45.84	51.63 4.34 44.09	2.51	5.00			
PANTONE 127 C	88.32 -0.85 56.69	87.98 -1.36 55.98	0.45	5.00			
PANTONE 128 C	86.15 1.92 67.54	85.89 1.44 67.12	0.35	5.00			
PANTONE 129 C	84.82 3.87 71.92	84.05 4.11 71.76	0.53	5.00			
PANTONE 130 C	75.32 22.12 82.89	76.28 19.94 77.62	1.45	5.00			
PANTONE 131 C	63.49 20.97 73.25	62.86 20.64 72.88	0.56	5.00			
PANTONE 132 C	52.56 12.81 59.35	52.43 13.71 61.29	0.64	5.00			
PANTONE 133 C	38.44 4.63 36.45	39.51 5.44 34.40	1.45	5.00			
PANTONE 1205 C	89.97 1.42 43.29	88.78 -0.54 45.13	1.71	5.00			
PANTONE 1215 C	88.03 4.52 54.25	86.87 3.60 55.59	1.07	5.00			
PANTONE 1225 C	84.38 12.11 69.89	83.13 11.74 72.37	1.11	5.00			
PANTONE 1235 C	80.67 20.69 79.10	79.60 19.05 79.34	1.22	5.00			
PANTONE 1245 C	64.75 13.91 65.77	65.28 12.93 64.08	0.75	5.00			
PANTONE 1255 C	58.30 9.86 56.35	58.98 9.98 55.37	0.69	5.00			
PANTONE 1265 C	47.49 6.85 42.31	49.11 7.37 42.61	1.65	5.00			
PANTONE 120 C	88.57 2.65 61.09	87.36 1.46 63.64	1.30	5.00			
PANTONE 121 C	87.81 4.15 66.12	86.58 3.18 67.66	1.09	5.00			
PANTONE 122 C	86.43 7.03 73.18	85.48 6.78 74.38	0.71	5.00			
PANTONE 123 C	84.11 12.65 77.81	82.95 11.92 80.07	1.10	5.00			
PANTONE 124 C	74.63 16.68 80.98	75.04 15.15 77.77	0.95	5.00			
PANTONE 125 C	59.32 13.03 65.69	59.44 12.81 66.37	0.29	5.00			
PANTONE 126 C	52.38 8.80 54.67	53.75 9.72 53.59	1.55	5.00			
PANTONE 7548 C	84.19 12.84 103.39	81.81 15.87 104.68	2.19	5.00			
PANTONE 7549 C	79.81 19.38 94.82	79.35 18.81 94.17	0.42	5.00			
PANTONE 7550 C	65.44 18.69 77.45	64.90 19.57 77.41	0.68	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7551 C	57.55 15.43 65.01	56.98 15.38 65.26	0.53	5.00			
PANTONE 7552 C	38.29 9.62 36.21	39.95 9.70 33.75	1.79	5.00			
PANTONE 7553 C	31.23 6.27 24.66	32.66 7.49 23.45	1.83	5.00			
PANTONE 7554 C	27.02 4.04 14.02	27.71 5.00 13.98	1.26	5.00			
PANTONE 7555 C	69.19 12.26 69.74	69.55 11.87 68.56	0.42	5.00			
PANTONE 7556 C	61.29 10.48 59.07	62.13 10.37 58.61	0.73	5.00			
PANTONE 7557 C	54.73 7.83 50.95	55.73 8.32 49.08	1.21	5.00			
PANTONE 7558 C	50.78 9.90 45.91	52.55 10.53 45.80	1.82	5.00			
PANTONE 7559 C	47.97 10.99 41.04	49.25 11.87 41.31	1.40	5.00			
PANTONE 7560 C	43.84 7.00 33.69	44.63 6.99 34.05	0.76	5.00			
PANTONE 7561 C	40.20 2.47 25.34	41.08 3.18 25.15	1.03	5.00			
PANTONE 134 C	86.67 8.31 54.63	85.61 6.66 54.60	1.30	5.00			
PANTONE 135 C	84.01 13.73 61.75	83.40 11.98 62.23	1.24	5.00			
PANTONE 136 C	82.39 17.31 70.65	81.86 16.91 72.92	0.83	5.00			
PANTONE 137 C	76.47 31.14 81.64	76.28 27.93 80.49	1.56	5.00			
PANTONE 138 C	62.73 35.09 76.83	62.19 36.03 77.61	0.60	5.00			
PANTONE 139 C	52.90 22.72 59.25	53.99 21.54 59.86	1.36	5.00			
PANTONE 140 C	38.34 10.44 36.60	40.06 11.77 35.26	1.99	5.00			
PANTONE 2008 C	80.82 12.81 46.98	80.65 12.87 47.21	0.14	5.00			
PANTONE 2009 C	78.47 16.66 50.79	78.33 16.68 51.17	0.16	5.00			
PANTONE 2010 C	79.03 27.33 99.92	77.18 29.95 99.71	1.88	5.00			
PANTONE 2011 C	71.74 28.51 63.62	71.23 28.98 64.25	0.44	5.00			
PANTONE 2012 C	70.78 30.43 77.96	71.95 27.20 75.17	1.69	5.00			
PANTONE 2013 C	74.80 38.20 95.40	72.98 40.31 96.43	1.60	5.00			
PANTONE 2014 C	54.94 25.49 67.42	53.77 25.92 66.75	1.19	5.00			
PANTONE 1345 C	86.45 10.40 42.93	85.89 8.92 41.26	1.09	5.00			
PANTONE 1355 C	84.01 15.15 51.74	83.29 14.86 52.05	0.54	5.00			
PANTONE 1365 C	80.27 23.11 64.72	79.17 21.81 64.40	1.05	5.00			
PANTONE 1375 C	75.28 34.27 75.94	74.79 32.12 73.72	0.94	5.00			
PANTONE 1385 C	60.79 33.29 68.93	62.82 30.81 65.11	2.06	5.00			
PANTONE 1395 C	46.60 20.52 48.44	48.88 20.03 46.42	2.34	5.00			
PANTONE 1405 C	35.60 12.07 32.75	37.07 12.46 29.74	1.99	5.00			
PANTONE 141 C	82.83 8.73 58.10	82.81 8.47 58.38	0.21	5.00			
PANTONE 142 C	80.44 12.47 64.06	80.19 12.14 66.08	0.68	5.00			
PANTONE 143 C	77.88 16.81 69.01	77.09 17.05 72.20	0.98	5.00			
PANTONE 144 C	68.11 35.37 76.02	68.77 34.03 72.51	0.97	5.00			
PANTONE 145 C	61.42 28.59 68.64	62.56 26.82 65.94	1.28	5.00			
PANTONE 146 C	51.62 20.82 54.63	54.33 19.99 53.29	2.68	5.00			
PANTONE 147 C	40.50 5.31 31.67	41.49 6.19 31.23	1.18	5.00			
PANTONE 7408 C	80.68 12.43 83.36	80.82 12.34 82.87	0.14	5.00			
PANTONE 7409 C	77.58 16.52 73.82	77.28 16.64 75.40	0.44	5.00			
PANTONE 7410 C	78.50 26.45 41.50	77.65 27.42 41.71	0.80	5.00			
PANTONE 7411 C	73.59 21.15 47.10	73.25 20.87 47.28	0.34	5.00			
PANTONE 7412 C	62.77 27.90 54.51	62.59 26.99 55.66	0.88	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7413 C	64.84 32.27 57.13	65.32 31.91 58.46	0.76	5.00			
PANTONE 7414 C	55.37 30.83 58.04	57.12 29.37 55.96	1.76	5.00			
PANTONE 7562 C	66.47 7.66 36.17	66.63 8.15 36.81	0.40	5.00			
PANTONE 7563 C	68.74 16.75 62.77	68.84 16.22 63.97	0.59	5.00			
PANTONE 7564 C	65.51 26.69 70.40	66.80 24.68 68.28	1.40	5.00			
PANTONE 7565 C	59.98 29.29 58.04	60.93 28.23 57.65	0.98	5.00			
PANTONE 7566 C	50.89 28.39 40.98	51.15 28.28 41.72	0.46	5.00			
PANTONE 7567 C	41.62 21.43 30.94	42.30 22.02 31.12	0.70	5.00			
PANTONE 7568 C	38.43 15.30 23.33	38.72 14.99 24.36	0.77	5.00			
PANTONE 7569 C	64.56 26.97 61.61	64.91 26.46 61.02	0.38	5.00			
PANTONE 7570 C	63.00 28.47 57.90	63.61 28.05 58.23	0.61	5.00			
PANTONE 7571 C	59.89 25.57 52.20	60.29 24.95 52.38	0.55	5.00			
PANTONE 7572 C	55.10 24.86 45.81	55.30 25.24 46.82	0.38	5.00			
PANTONE 7573 C	50.11 24.49 43.70	51.26 24.56 43.75	1.15	5.00			
PANTONE 7574 C	50.00 18.60 36.85	50.23 19.35 37.66	0.49	5.00			
PANTONE 7575 C	43.19 13.25 31.09	44.23 13.81 31.18	1.04	5.00			
PANTONE 712 C	84.98 14.94 30.92	84.98 14.02 30.35	0.59	5.00			
PANTONE 713 C	82.35 19.07 37.53	82.22 18.11 37.06	0.57	5.00			
PANTONE 714 C	77.37 26.91 49.82	77.18 26.76 49.02	0.31	5.00			
PANTONE 715 C	69.91 36.60 65.93	69.84 36.25 66.60	0.39	5.00			
PANTONE 716 C	63.54 42.47 73.67	65.02 39.79 68.74	1.72	5.00			
PANTONE 717 C	55.43 45.40 69.97	55.17 45.55 71.29	0.48	5.00			
PANTONE 718 C	48.75 44.85 61.69	48.37 43.84 63.05	1.01	5.00			
PANTONE 2015 C	86.26 11.39 25.25	85.65 11.02 24.70	0.51	5.00			
PANTONE 2016 C	81.64 25.40 47.52	80.83 23.62 48.06	1.35	5.00			
PANTONE 2017 C	77.54 23.82 45.24	77.06 24.34 45.98	0.44	5.00			
PANTONE 2018 C	68.40 54.35 88.71	67.93 52.89 85.20	0.83	5.00			
PANTONE 2019 C	58.53 40.01 69.69	60.82 37.80 67.61	2.18	5.00			
PANTONE 2020 C	50.04 41.09 62.62	49.94 40.20 63.38	0.69	5.00			
PANTONE 2021 C	42.17 34.29 46.28	44.09 34.23 43.65	2.11	5.00			
PANTONE 148 C	85.54 13.44 39.28	85.02 11.68 37.78	1.19	5.00			
PANTONE 149 C	83.53 17.60 45.35	82.95 16.40 45.65	0.95	5.00			
PANTONE 150 C	79.82 25.22 56.72	79.05 23.32 54.86	1.07	5.00			
PANTONE 151 C	69.68 47.28 78.51	69.49 44.05 72.64	1.36	5.00			
PANTONE 152 C	62.00 43.19 72.10	63.82 40.80 67.36	1.93	5.00			
PANTONE 153 C	54.55 31.06 58.22	56.82 29.26 55.08	2.33	5.00			
PANTONE 154 C	45.67 24.68 46.76	48.02 24.08 43.42	2.59	5.00			
PANTONE 155 C	85.71 7.16 28.99	85.72 7.07 27.57	0.64	5.00			
PANTONE 156 C	80.57 14.38 39.80	80.55 13.75 37.62	0.80	5.00			
PANTONE 157 C	73.09 26.25 51.28	72.83 26.38 49.47	0.79	5.00			
PANTONE 158 C	63.53 43.78 63.02	63.49 43.28 62.42	0.18	5.00			
PANTONE 159 C	54.43 43.54 58.62	55.85 41.93 57.19	1.46	5.00			
PANTONE 160 C	45.59 31.02 45.87	47.11 30.68 44.44	1.56	5.00			
PANTONE 161 C	29.87 14.63 24.48	30.51 15.82 23.61	1.32	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 1485 C	79.76 29.60 53.90	78.78 27.79 53.39	1.16	5.00			
PANTONE 1495 C	73.51 43.65 75.96	73.11 42.58 73.10	0.74	5.00			
PANTONE 1505 C	66.08 58.99 92.87	65.07 56.43 91.06	1.13	5.00			
PANTONE Orange 021 C	60.81 65.69 85.06	60.95 63.60 85.16	0.89	5.00			
PANTONE 1525 C	46.86 45.65 62.35	46.26 43.89 61.60	0.89	5.00			
PANTONE 1535 C	39.93 32.18 47.30	40.30 32.40 47.73	0.36	5.00			
PANTONE 1545 C	29.29 18.97 28.82	30.05 20.00 28.43	1.01	5.00			
PANTONE 1555 C	81.79 24.05 32.53	81.69 22.33 31.42	0.88	5.00			
PANTONE 1565 C	76.36 35.17 45.78	76.10 33.92 43.94	0.66	5.00			
PANTONE 1575 C	69.35 49.62 64.94	67.91 49.13 63.73	1.18	5.00			
PANTONE 1585 C	65.31 57.13 71.66	65.39 55.29 68.03	0.91	5.00			
PANTONE 1595 C	56.49 46.63 60.82	57.34 45.18 58.40	1.03	5.00			
PANTONE 1605 C	46.30 32.46 44.21	47.33 32.65 43.06	1.17	5.00			
PANTONE 1615 C	39.08 27.76 36.90	40.14 28.24 34.95	1.49	5.00			
PANTONE 2022 C	77.68 29.07 28.52	77.53 29.47 26.36	1.38	5.00			
PANTONE 2023 C	72.32 38.86 37.32	71.90 39.17 36.14	0.78	5.00			
PANTONE 2024 C	67.25 48.00 44.85	67.25 47.89 42.67	1.00	5.00			
PANTONE 2025 C	72.36 46.36 63.43	71.29 46.13 64.44	0.94	5.00			
PANTONE 2026 C	62.08 57.21 53.62	61.57 57.16 53.01	0.50	5.00			
PANTONE 2027 C	58.62 61.94 46.55	58.32 61.84 45.78	0.42	5.00			
PANTONE 2028 C	54.09 70.31 69.44	54.58 68.17 66.17	0.95	5.00			
PANTONE 162 C	83.05 22.29 25.97	83.37 20.67 23.91	1.09	5.00			
PANTONE 163 C	75.80 36.85 42.85	75.79 35.86 41.13	0.61	5.00			
PANTONE 164 C	69.51 49.95 58.30	68.73 49.05 55.76	1.01	5.00			
PANTONE 165 C	64.76 58.52 67.92	64.51 57.49 65.52	0.69	5.00			
PANTONE 166 C	56.22 56.43 66.60	57.56 55.41 62.99	1.66	5.00			
PANTONE 167 C	49.93 42.79 52.18	50.79 41.94 50.30	1.05	5.00			
PANTONE 168 C	31.77 25.22 29.51	33.13 25.63 28.66	1.26	5.00			
PANTONE 7576 C	64.92 31.54 44.48	64.99 31.38 46.70	1.04	5.00			
PANTONE 7577 C	63.78 36.93 52.40	63.63 37.27 54.11	0.60	5.00			
PANTONE 7578 C	59.31 43.86 53.70	59.45 43.96 54.26	0.23	5.00			
PANTONE 7579 C	56.01 52.46 53.37	56.19 52.24 52.46	0.37	5.00			
PANTONE 7580 C	49.96 45.40 42.36	50.35 45.04 42.08	0.41	5.00			
PANTONE 7581 C	38.87 25.56 25.49	39.45 25.90 27.51	1.17	5.00			
PANTONE 7582 C	33.81 12.79 16.61	34.11 12.83 17.94	0.89	5.00			
PANTONE 1625 C	77.43 35.38 29.92	77.26 34.11 29.05	0.53	5.00			
PANTONE 1635 C	72.56 45.00 39.82	71.94 44.15 38.23	0.77	5.00			
PANTONE 1645 C	65.69 58.38 58.65	64.39 58.38 58.33	1.07	5.00			
PANTONE 1655 C	60.05 67.06 72.14	60.35 64.25 66.22	1.59	5.00			
PANTONE 1665 C	53.00 59.54 64.36	53.94 57.81 60.20	1.53	5.00			
PANTONE 1675 C	43.48 42.10 44.37	44.44 41.71 41.60	1.50	5.00			
PANTONE 1685 C	34.84 31.94 32.01	36.17 32.42 31.43	1.21	5.00			
PANTONE 169 C	81.12 29.12 17.29	80.43 27.83 15.13	1.34	5.00			
PANTONE 170 C	71.43 48.59 34.73	69.93 47.17 32.24	1.54	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 171 C	63.25 63.56 56.62	62.48 61.64 53.89	1.03	5.00			
PANTONE 172 C	59.11 68.56 67.10	59.05 67.21 62.70	1.38	5.00			
PANTONE 173 C	50.69 55.14 52.82	51.39 54.87 50.11	1.31	5.00			
PANTONE 174 C	37.97 39.83 36.22	39.20 40.00 34.32	1.49	5.00			
PANTONE 175 C	29.72 24.00 19.86	30.90 24.02 20.27	0.95	5.00			
PANTONE 7583 C	53.90 40.00 47.69	54.08 39.36 48.08	0.49	5.00			
PANTONE 7584 C	50.32 40.73 47.46	51.06 40.89 47.83	0.75	5.00			
PANTONE 7585 C	49.46 35.04 36.98	49.16 35.20 39.20	1.09	5.00			
PANTONE 7586 C	44.82 31.99 35.27	44.84 31.68 36.25	0.62	5.00			
PANTONE 7587 C	41.21 30.38 31.78	41.64 30.14 32.47	0.60	5.00			
PANTONE 7588 C	37.92 19.85 22.39	37.55 20.40 24.90	1.36	5.00			
PANTONE 7589 C	32.35 8.53 12.70	31.75 7.69 14.70	1.97	5.00			
PANTONE 7590 C	76.14 10.19 15.81	75.98 10.15 16.15	0.27	5.00			
PANTONE 7591 C	59.53 26.39 30.93	59.29 26.62 33.45	1.26	5.00			
PANTONE 7592 C	48.22 38.85 37.90	48.09 38.62 38.98	0.63	5.00			
PANTONE 7593 C	41.37 39.83 33.57	42.20 39.78 33.58	0.75	5.00			
PANTONE 7594 C	33.85 30.19 22.58	34.67 30.21 24.68	1.42	5.00			
PANTONE 7595 C	31.64 21.12 18.44	32.32 21.83 19.38	0.76	5.00			
PANTONE 7596 C	29.31 14.09 13.23	29.74 13.88 15.05	1.39	5.00			
PANTONE 7597 C	50.67 58.06 50.98	51.75 57.97 51.94	1.17	5.00			
PANTONE 7598 C	47.86 48.63 43.82	48.33 48.56 43.58	0.47	5.00			
PANTONE 7599 C	44.33 49.23 42.05	44.92 48.48 41.50	0.61	5.00			
PANTONE 7600 C	37.73 33.90 29.45	38.46 33.34 29.63	0.72	5.00			
PANTONE 7601 C	36.50 28.25 27.15	37.35 28.41 28.11	0.87	5.00			
PANTONE 7602 C	37.16 20.45 24.42	37.50 20.95 25.33	0.53	5.00			
PANTONE 7603 C	32.26 15.89 18.39	32.73 16.32 19.94	0.95	5.00			
PANTONE 7604 C	86.51 5.73 2.54	86.36 5.91 2.54	0.22	5.00			
PANTONE 7605 C	79.20 14.87 8.87	79.50 14.48 9.30	0.54	5.00			
PANTONE 7606 C	67.83 27.51 15.78	67.42 27.15 16.86	0.87	5.00			
PANTONE 7607 C	56.47 35.73 23.34	56.34 35.35 24.60	0.86	5.00			
PANTONE 7608 C	43.85 39.77 26.98	43.91 39.58 28.25	0.77	5.00			
PANTONE 7609 C	35.10 33.10 20.19	35.81 32.79 22.16	1.41	5.00			
PANTONE 7610 C	29.19 25.10 13.26	29.71 24.84 15.65	1.71	5.00			
PANTONE 2337 C	83.14 20.49 12.47	83.08 20.38 11.69	0.52	5.00			
PANTONE 2338 C	72.96 22.82 12.93	72.91 22.24 13.04	0.38	5.00			
PANTONE 2339 C	71.67 36.48 17.69	71.51 36.98 18.52	0.46	5.00			
PANTONE 2340 C	59.08 40.18 14.74	58.63 39.73 15.54	0.69	5.00			
PANTONE 2341 C	54.72 31.07 13.81	54.92 30.80 16.54	1.82	5.00			
PANTONE 2342 C	50.80 40.11 13.10	50.45 40.14 15.02	1.19	5.00			
PANTONE 2343 C	47.73 36.87 8.05	47.60 37.30 9.03	0.59	5.00			
PANTONE 7611 C	79.17 11.52 10.81	79.50 11.11 11.48	0.76	5.00			
PANTONE 7612 C	68.33 18.01 14.24	68.32 17.42 14.98	0.79	5.00			
PANTONE 7613 C	62.54 19.58 14.45	62.83 19.16 14.95	0.58	5.00			
PANTONE 7614 C	56.70 14.26 11.86	56.96 14.56 13.19	0.91	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7615 C	46.96 12.79 8.78	47.65 12.90 10.04	1.13	5.00			
PANTONE 7616 C	36.03 13.89 6.08	36.42 13.67 8.07	1.58	5.00			
PANTONE 7617 C	29.06 12.78 4.75	29.27 12.95 6.68	1.45	5.00			
PANTONE 7520 C	81.04 15.04 13.93	80.71 15.00 14.42	0.42	5.00			
PANTONE 7521 C	67.55 13.19 18.59	67.84 12.79 18.78	0.47	5.00			
PANTONE 7522 C	53.56 30.65 25.98	53.82 30.82 27.68	0.96	5.00			
PANTONE 7523 C	49.23 33.11 18.99	49.45 32.76 19.30	0.38	5.00			
PANTONE 7524 C	45.86 34.64 23.44	46.41 34.77 25.18	1.12	5.00			
PANTONE 7525 C	49.62 19.95 23.03	49.67 19.96 24.61	0.93	5.00			
PANTONE 7526 C	35.90 34.21 36.52	37.13 34.76 34.96	1.45	5.00			
PANTONE 489 C	82.42 14.68 14.37	82.16 14.62 13.57	0.57	5.00			
PANTONE 488 C	79.95 18.52 16.21	79.80 18.41 14.73	0.98	5.00			
PANTONE 487 C	75.16 25.90 20.83	74.78 26.34 21.81	0.59	5.00			
PANTONE 486 C	69.77 34.75 26.68	69.47 35.36 27.60	0.48	5.00			
PANTONE 485 C	49.73 69.10 54.64	50.89 68.48 54.94	1.21	5.00			
PANTONE 484 C	37.99 45.29 34.53	38.36 44.73 34.74	0.46	5.00			
PANTONE 483 C	27.55 24.97 19.42	28.14 24.64 19.75	0.56	5.00			
PANTONE 2029 C	67.97 45.30 23.45	67.10 45.72 23.53	0.71	5.00			
PANTONE 2030 C	63.15 40.87 22.02	62.96 40.61 22.68	0.48	5.00			
PANTONE 2031 C	58.67 45.39 24.56	58.53 45.07 27.27	1.58	5.00			
PANTONE 2032 C	54.78 49.30 27.63	54.09 48.25 27.95	0.84	5.00			
PANTONE 2033 C	49.48 53.25 31.76	49.42 52.36 33.55	1.15	5.00			
PANTONE 2034 C	54.37 67.72 42.61	54.76 66.19 43.44	0.89	5.00			
PANTONE 2035 C	46.96 73.74 52.71	46.29 73.22 48.27	1.89	5.00			
PANTONE 2344 C	67.32 43.57 30.96	67.19 43.54 31.70	0.42	5.00			
PANTONE 2345 C	67.34 59.67 35.42	65.61 57.43 33.67	1.58	5.00			
PANTONE 2346 C	64.06 67.22 31.66	62.96 63.37 30.20	1.34	5.00			
PANTONE 2347 C	49.45 75.12 67.21	50.88 72.92 67.08	1.61	5.00			
PANTONE 2348 C	57.56 58.18 36.53	57.73 57.75 36.75	0.29	5.00			
PANTONE 2349 C	47.76 59.40 59.93	48.55 59.80 60.17	0.78	5.00			
PANTONE 2350 C	40.41 57.01 43.51	41.31 57.02 42.73	0.88	5.00			
PANTONE 176 C	80.96 31.33 8.53	80.10 29.67 7.82	0.97	5.00			
PANTONE 177 C	70.77 52.19 21.15	69.02 51.15 18.85	1.76	5.00			
PANTONE 178 C	63.13 65.52 37.66	62.45 63.35 36.54	0.81	5.00			
PANTONE Warm Red C	58.66 70.06 51.19	58.96 68.33 49.79	0.53	5.00			
PANTONE 179 C	52.91 63.92 48.22	53.58 63.51 48.38	0.68	5.00			
PANTONE 180 C	46.31 53.62 37.44	45.85 52.65 38.70	1.02	5.00			
PANTONE 181 C	33.14 35.25 21.89	34.13 35.27 23.84	1.40	5.00			
PANTONE 1765 C	77.62 37.03 7.46	76.78 35.79 5.93	1.13	5.00			
PANTONE 1775 C	72.81 46.25 11.62	71.92 45.48 10.19	1.02	5.00			
PANTONE 1785 C	59.49 68.96 31.97	59.20 65.89 31.37	0.84	5.00			
PANTONE 1788 C	53.86 74.11 47.33	54.49 70.96 47.08	1.12	5.00			
PANTONE 1795 C	48.13 66.28 43.18	48.47 65.92 43.36	0.38	5.00			
PANTONE 1805 C	40.83 55.35 33.30	41.71 55.18 35.01	1.19	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 1815 C	30.01 38.69 21.44	31.14 37.55 22.39	1.27	5.00			
PANTONE 1767 C	79.82 31.16 4.13	79.72 30.24 3.94	0.41	5.00			
PANTONE 1777 C	64.19 61.62 19.10	64.34 59.93 17.83	0.64	5.00			
PANTONE 1787 C	56.62 72.81 38.60	56.55 68.35 37.53	1.13	5.00			
PANTONE Red 032 C	55.26 72.14 43.47	55.90 69.32 44.19	1.29	5.00			
PANTONE 1797 C	47.90 61.20 35.62	49.06 59.85 38.68	2.14	5.00			
PANTONE 1807 C	40.30 47.81 25.09	41.33 46.70 28.11	2.12	5.00			
PANTONE 1817 C	28.34 23.17 10.14	29.32 23.01 12.35	1.72	5.00			
PANTONE 7618 C	56.89 35.95 34.16	56.75 35.29 35.05	0.74	5.00			
PANTONE 7619 C	49.37 49.28 38.47	49.16 48.52 40.21	1.12	5.00			
PANTONE 7620 C	43.59 56.46 37.88	44.36 55.15 39.40	1.34	5.00			
PANTONE 7621 C	39.49 56.74 35.07	39.60 57.56 34.90	0.37	5.00			
PANTONE 7622 C	35.01 47.45 26.26	35.91 47.02 27.02	0.91	5.00			
PANTONE 7623 C	33.71 43.23 24.89	35.24 42.11 25.64	1.47	5.00			
PANTONE 7624 C	32.47 37.60 21.56	33.94 36.80 23.41	1.77	5.00			
PANTONE 7625 C	56.13 58.70 43.79	56.35 59.01 44.53	0.34	5.00			
PANTONE 7626 C	47.16 57.84 46.16	47.89 57.37 45.11	0.81	5.00			
PANTONE 7627 C	39.48 51.47 34.35	40.76 50.50 34.95	1.29	5.00			
PANTONE 7628 C	37.71 48.78 30.99	38.76 47.73 31.01	1.00	5.00			
PANTONE 7629 C	29.81 26.52 14.43	30.51 25.94 15.68	1.14	5.00			
PANTONE 7630 C	27.73 22.73 12.12	28.17 22.87 14.80	1.82	5.00			
PANTONE 7631 C	24.56 19.88 9.54	24.95 19.27 11.43	1.53	5.00			
PANTONE 7415 C	79.38 16.22 15.62	78.93 16.29 16.45	0.63	5.00			
PANTONE 7416 C	60.92 50.44 37.52	60.40 50.94 38.23	0.53	5.00			
PANTONE 7417 C	55.48 59.93 45.74	54.98 59.55 48.60	1.48	5.00			
PANTONE 7418 C	53.30 50.21 23.55	52.77 48.78 24.19	0.91	5.00			
PANTONE 7419 C	46.69 42.94 14.48	47.20 41.46 14.81	0.82	5.00			
PANTONE 7420 C	36.34 51.65 15.07	36.10 51.37 16.34	0.74	5.00			
PANTONE 7421 C	24.16 35.71 6.28	24.30 35.76 7.32	0.64	5.00			
PANTONE 182 C	82.56 25.57 1.99	81.37 25.02 0.70	1.18	5.00			
PANTONE 183 C	75.41 39.57 5.04	74.46 38.64 4.25	0.88	5.00			
PANTONE 184 C	60.69 66.02 19.61	60.67 63.90 19.02	0.54	5.00			
PANTONE 185 C	49.78 77.43 49.23	49.98 75.04 46.12	1.01	5.00			
PANTONE 186 C	44.69 67.77 40.07	44.33 68.20 39.20	0.60	5.00			
PANTONE 187 C	37.72 56.55 29.85	37.72 56.37 30.63	0.43	5.00			
PANTONE 188 C	28.63 37.93 15.44	29.58 37.13 16.34	1.04	5.00			
PANTONE 196 C	83.77 15.40 2.07	83.94 14.78 1.51	0.60	5.00			
PANTONE 197 C	72.86 33.24 3.50	72.75 33.04 4.86	0.86	5.00			
PANTONE 198 C	54.46 64.00 21.79	55.32 61.84 23.90	1.64	5.00			
PANTONE 199 C	46.80 74.06 40.19	45.02 74.10 37.41	2.11	5.00			
PANTONE 200 C	41.43 65.63 34.16	40.61 66.19 33.42	0.87	5.00			
PANTONE 201 C	36.70 52.92 23.20	36.87 52.99 23.44	0.19	5.00			
PANTONE 202 C	32.34 43.65 17.84	33.02 42.42 18.18	0.80	5.00			
PANTONE 189 C	76.79 35.54 2.05	76.27 34.62 1.35	0.65	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 190 C	66.73 54.07 7.14	66.22 53.84 6.66	0.48	5.00			
PANTONE 191 C	57.40 69.48 18.57	58.51 66.47 18.01	1.25	5.00			
PANTONE 192 C	50.45 77.14 34.27	49.34 76.05 31.14	1.67	5.00			
PANTONE 193 C	42.79 66.14 27.76	41.62 67.11 26.89	1.22	5.00			
PANTONE 194 C	37.11 50.10 15.10	37.52 49.39 17.12	1.25	5.00			
PANTONE 195 C	31.37 34.31 8.00	32.29 32.25 10.27	1.99	5.00			
PANTONE 1895 C	80.91 26.69 -1.59	80.60 26.05 -1.59	0.37	5.00			
PANTONE 1905 C	74.68 38.54 -0.57	74.57 38.51 0.24	0.46	5.00			
PANTONE 1915 C	58.63 67.36 9.93	60.22 63.97 10.51	1.70	5.00			
PANTONE 1925 C	49.33 77.66 28.31	47.70 76.83 25.96	1.88	5.00			
PANTONE 1935 C	43.06 70.30 28.45	41.84 70.92 27.40	1.25	5.00			
PANTONE 1945 C	37.06 59.91 19.40	35.92 60.43 19.77	0.97	5.00			
PANTONE 1955 C	31.45 49.96 14.09	31.55 50.74 15.47	0.71	5.00			
PANTONE 705 C	89.66 10.65 1.15	88.89 9.80 0.60	0.98	5.00			
PANTONE 706 C	86.80 16.25 1.44	86.13 15.28 1.58	0.82	5.00			
PANTONE 707 C	80.90 27.38 3.33	80.28 26.40 3.02	0.65	5.00			
PANTONE 708 C	72.39 42.46 8.51	71.78 42.68 8.93	0.52	5.00			
PANTONE 709 C	61.57 58.40 18.00	61.68 57.36 19.44	0.90	5.00			
PANTONE 710 C	53.55 64.55 30.28	54.37 62.79 30.64	1.03	5.00			
PANTONE 711 C	47.10 62.95 41.47	48.16 61.98 42.96	1.42	5.00			
PANTONE 698 C	87.77 11.50 2.66	87.45 10.83 1.17	1.26	5.00			
PANTONE 699 C	83.56 19.78 2.60	83.32 19.17 2.07	0.53	5.00			
PANTONE 700 C	77.88 28.70 4.82	78.03 28.00 4.42	0.40	5.00			
PANTONE 701 C	67.51 40.21 7.57	67.64 39.91 7.59	0.15	5.00			
PANTONE 702 C	55.90 50.26 13.18	56.16 49.01 12.74	0.47	5.00			
PANTONE 703 C	45.33 53.15 21.91	46.30 51.05 22.52	1.31	5.00			
PANTONE 704 C	37.66 48.95 28.25	38.42 48.12 29.89	1.27	5.00			
PANTONE 203 C	79.17 25.20 -3.41	79.40 24.68 -3.31	0.31	5.00			
PANTONE 204 C	67.25 45.45 -1.81	67.26 45.04 -0.60	0.64	5.00			
PANTONE 205 C	55.03 65.70 7.15	56.29 62.95 7.78	1.43	5.00			
PANTONE 206 C	44.15 76.14 34.33	44.12 74.29 33.25	0.47	5.00			
PANTONE 207 C	35.97 61.81 23.56	35.48 62.04 22.65	0.63	5.00			
PANTONE 208 C	31.77 46.72 7.66	32.04 46.96 7.70	0.22	5.00			
PANTONE 209 C	27.87 35.55 4.47	28.29 34.34 5.69	0.99	5.00			
PANTONE 210 C	76.33 38.81 -5.76	76.22 38.27 -5.79	0.22	5.00			
PANTONE 211 C	68.91 51.69 -5.82	68.72 51.02 -5.09	0.42	5.00			
PANTONE 212 C	59.88 67.37 -1.57	60.25 65.52 -1.65	0.57	5.00			
PANTONE 213 C	52.18 75.29 5.56	50.66 76.37 4.30	1.62	5.00			
PANTONE 214 C	46.89 70.91 7.10	45.60 73.19 5.91	1.47	5.00			
PANTONE 215 C	39.38 60.49 4.68	38.61 62.60 3.99	0.95	5.00			
PANTONE 216 C	30.39 42.23 1.80	30.39 41.90 2.09	0.20	5.00			
PANTONE 2036 C	83.10 24.70 -3.23	82.13 23.52 -4.11	1.08	5.00			
PANTONE 2037 C	73.50 41.82 -8.67	73.83 40.81 -7.92	0.54	5.00			
PANTONE 2038 C	62.47 61.31 -4.78	63.31 58.76 -4.20	1.01	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2039 C	55.08 70.88 0.31	54.91 70.37 -0.61	0.43	5.00			
PANTONE 2040 C	49.09 74.33 18.82	47.88 75.78 15.85	1.87	5.00			
PANTONE 2041 C	37.90 53.71 9.91	38.29 53.56 9.57	0.38	5.00			
PANTONE 2042 C	28.32 34.31 5.72	29.43 33.26 7.26	1.40	5.00			
PANTONE 7422 C	86.24 15.21 2.40	85.98 14.79 2.35	0.35	5.00			
PANTONE 7423 C	59.60 53.48 6.90	59.82 52.81 6.83	0.28	5.00			
PANTONE 7424 C	55.78 64.96 3.32	56.91 62.35 4.90	1.46	5.00			
PANTONE 7425 C	42.41 59.62 11.84	42.07 59.11 11.87	0.34	5.00			
PANTONE 7426 C	37.00 58.23 18.00	36.26 58.79 17.42	0.73	5.00			
PANTONE 7427 C	34.56 52.88 24.22	34.63 53.40 24.70	0.23	5.00			
PANTONE 7428 C	28.00 31.06 3.83	29.33 29.42 4.74	1.40	5.00			
PANTONE 7632 C	82.20 5.28 0.98	82.32 5.09 0.91	0.23	5.00			
PANTONE 7633 C	70.40 13.75 2.86	70.23 14.45 2.83	0.54	5.00			
PANTONE 7634 C	55.69 40.91 1.88	55.50 40.53 1.11	0.48	5.00			
PANTONE 7635 C	47.85 61.54 10.98	48.39 60.02 11.81	0.84	5.00			
PANTONE 7636 C	43.34 63.52 19.52	43.14 63.77 18.93	0.37	5.00			
PANTONE 7637 C	36.12 45.13 10.94	37.44 43.82 10.99	1.21	5.00			
PANTONE 7638 C	32.18 38.56 8.43	33.51 36.88 10.59	1.92	5.00			
PANTONE 217 C	81.89 21.11 -8.24	82.02 20.64 -9.65	0.97	5.00			
PANTONE 218 C	63.21 55.01 -12.18	63.40 53.90 -11.30	0.49	5.00			
PANTONE 219 C	50.34 75.32 -4.72	49.03 77.22 -6.07	1.46	5.00			
PANTONE Rubine Red C	43.81 79.34 12.71	44.98 76.29 10.95	1.42	5.00			
PANTONE 220 C	35.75 65.49 5.44	35.89 65.50 4.63	0.38	5.00			
PANTONE 221 C	32.06 56.87 4.40	31.34 58.73 3.35	0.94	5.00			
PANTONE 222 C	26.14 39.31 -3.84	26.54 39.45 -2.93	0.58	5.00			
PANTONE 7639 C	50.20 17.48 3.04	50.97 17.05 3.24	0.84	5.00			
PANTONE 7640 C	39.61 39.34 6.56	40.13 38.87 7.11	0.61	5.00			
PANTONE 7641 C	35.13 45.02 7.93	36.52 44.22 8.16	1.20	5.00			
PANTONE 7642 C	30.38 34.36 -0.52	31.98 32.44 0.12	1.52	5.00			
PANTONE 7643 C	28.02 29.31 -0.87	29.83 27.57 0.23	1.73	5.00			
PANTONE 7644 C	25.13 23.09 -2.27	26.32 21.96 -0.98	1.33	5.00			
PANTONE 7645 C	23.21 20.21 -1.49	24.21 18.93 0.50	1.68	5.00			
PANTONE 223 C	73.11 41.45 -13.93	73.78 40.72 -13.86	0.56	5.00			
PANTONE 224 C	64.89 56.32 -16.04	65.40 55.63 -15.97	0.46	5.00			
PANTONE 225 C	51.87 76.49 -12.13	51.39 76.93 -12.38	0.50	5.00			
PANTONE 226 C	44.85 80.21 0.01	45.89 76.72 -1.00	1.32	5.00			
PANTONE 227 C	37.22 66.68 -3.58	37.07 67.58 -4.42	0.42	5.00			
PANTONE 228 C	31.34 53.01 -7.15	30.05 55.76 -8.36	1.36	5.00			
PANTONE 229 C	25.68 35.25 -4.84	26.07 34.93 -3.95	0.58	5.00			
PANTONE 230 C	77.63 35.30 -11.69	77.39 34.82 -12.54	0.56	5.00			
PANTONE 231 C	67.65 55.33 -16.82	67.46 54.12 -16.12	0.43	5.00			
PANTONE 232 C	57.17 72.49 -17.43	55.81 73.22 -17.05	1.28	5.00			
PANTONE Rhodamine Red C	51.55 78.77 -13.88	51.56 76.58 -13.22	0.51	5.00			
PANTONE 233 C	44.07 74.84 -9.93	44.10 73.89 -10.64	0.37	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 234 C	36.12 63.15 -8.48	35.46 65.33 -9.88	0.93	5.00			
PANTONE 235 C	30.06 51.14 -7.33	28.65 53.31 -8.11	1.29	5.00			
PANTONE 670 C	87.05 10.89 -4.17	86.98 10.54 -5.32	0.93	5.00			
PANTONE 671 C	80.88 20.08 -7.66	81.33 19.66 -7.81	0.42	5.00			
PANTONE 672 C	73.42 30.26 -10.52	73.42 30.43 -11.05	0.29	5.00			
PANTONE 673 C	66.61 39.59 -12.56	66.58 39.74 -12.53	0.06	5.00			
PANTONE 674 C	54.19 52.53 -13.04	54.99 50.41 -11.42	1.17	5.00			
PANTONE 675 C	41.87 60.25 -8.03	41.46 60.99 -8.93	0.55	5.00			
PANTONE 676 C	33.48 58.19 0.83	32.71 60.20 -0.07	0.93	5.00			
PANTONE 2043 C	83.08 15.88 -1.33	83.29 15.51 -1.41	0.30	5.00			
PANTONE 2044 C	71.14 36.86 -3.55	71.34 36.24 -1.95	0.93	5.00			
PANTONE 2045 C	63.05 46.30 -2.99	62.87 46.60 -2.60	0.27	5.00			
PANTONE 2046 C	55.26 52.55 -1.42	55.51 51.47 -0.61	0.56	5.00			
PANTONE 2047 C	44.42 43.56 -2.20	45.20 42.70 -0.70	1.12	5.00			
PANTONE 2048 C	39.49 42.68 -0.39	41.22 40.73 0.86	1.81	5.00			
PANTONE 2049 C	33.55 40.12 3.18	35.04 38.49 3.88	1.42	5.00			
PANTONE 677 C	85.09 10.99 -3.56	85.09 11.03 -4.16	0.43	5.00			
PANTONE 678 C	83.36 12.61 -4.46	83.42 12.54 -4.96	0.36	5.00			
PANTONE 679 C	80.34 15.40 -5.78	80.53 14.76 -6.04	0.54	5.00			
PANTONE 680 C	67.94 25.00 -8.49	67.96 25.55 -8.77	0.29	5.00			
PANTONE 681 C	54.59 33.87 -10.29	54.97 33.31 -10.61	0.48	5.00			
PANTONE 682 C	43.20 40.39 -10.13	43.81 39.44 -9.66	0.69	5.00			
PANTONE 683 C	31.33 41.25 -6.03	31.60 40.72 -6.01	0.28	5.00			
PANTONE 2050 C	88.41 10.88 -3.49	87.83 11.06 -3.73	0.43	5.00			
PANTONE 2051 C	81.06 12.54 -3.13	81.08 12.53 -3.21	0.06	5.00			
PANTONE 2052 C	70.20 19.52 -5.52	70.32 19.43 -4.94	0.38	5.00			
PANTONE 2053 C	59.66 25.04 -7.01	59.76 24.88 -7.02	0.12	5.00			
PANTONE 2054 C	53.06 23.73 -7.10	53.22 23.58 -6.38	0.46	5.00			
PANTONE 2055 C	46.63 25.98 -7.10	46.59 25.37 -6.64	0.38	5.00			
PANTONE 2056 C	38.63 28.44 -6.82	38.93 28.02 -6.65	0.33	5.00			
PANTONE 684 C	82.93 12.89 -2.69	83.06 12.90 -2.42	0.21	5.00			
PANTONE 685 C	78.06 16.91 -3.97	78.46 16.45 -3.59	0.47	5.00			
PANTONE 686 C	71.51 21.53 -5.24	71.67 21.40 -4.66	0.38	5.00			
PANTONE 687 C	62.22 27.01 -6.62	62.42 26.80 -6.42	0.22	5.00			
PANTONE 688 C	51.39 32.57 -7.88	51.96 32.28 -7.28	0.66	5.00			
PANTONE 689 C	37.50 37.86 -7.93	38.59 35.37 -7.94	1.34	5.00			
PANTONE 690 C	24.52 32.27 -3.07	25.69 31.07 -3.03	0.99	5.00			
PANTONE 510 C	81.70 18.22 0.80	82.02 17.35 0.28	0.69	5.00			
PANTONE 509 C	78.66 21.59 0.38	78.61 21.64 1.26	0.58	5.00			
PANTONE 508 C	75.76 24.37 0.58	76.03 24.36 1.10	0.39	5.00			
PANTONE 507 C	68.29 28.53 -0.81	68.05 28.84 -1.27	0.37	5.00			
PANTONE 506 C	34.75 36.72 4.13	36.16 35.24 4.35	1.31	5.00			
PANTONE 505 C	29.06 31.48 5.05	30.40 30.60 5.25	1.12	5.00			
PANTONE 504 C	23.64 22.49 5.00	24.88 20.76 6.06	1.59	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7429 C	80.10 17.25 -2.34	80.35 16.53 -1.44	0.78	5.00			
PANTONE 7430 C	74.84 22.90 -3.23	75.23 23.06 -2.26	0.69	5.00			
PANTONE 7431 C	62.43 33.88 -3.23	62.04 33.22 -3.01	0.44	5.00			
PANTONE 7432 C	51.61 41.96 -2.04	51.94 41.94 -2.00	0.33	5.00			
PANTONE 7433 C	42.56 50.02 2.01	44.30 47.56 3.02	1.87	5.00			
PANTONE 7434 C	38.96 47.98 3.09	40.22 45.81 4.08	1.43	5.00			
PANTONE 7435 C	33.06 45.38 -0.36	33.47 45.46 0.72	0.66	5.00			
PANTONE 691 C	85.16 10.95 2.61	85.23 10.33 3.22	0.76	5.00			
PANTONE 692 C	80.64 14.87 3.20	80.71 14.63 4.58	1.05	5.00			
PANTONE 693 C	72.36 21.62 4.03	72.53 21.49 4.16	0.17	5.00			
PANTONE 694 C	62.57 27.23 4.74	62.74 26.51 5.47	0.65	5.00			
PANTONE 695 C	54.47 31.95 5.58	54.23 31.33 6.42	0.67	5.00			
PANTONE 696 C	42.11 35.76 9.19	42.46 34.83 10.31	0.93	5.00			
PANTONE 697 C	36.96 34.75 11.62	37.47 34.84 14.49	1.83	5.00			
PANTONE 496 C	84.36 17.24 2.19	83.91 16.57 1.83	0.58	5.00			
PANTONE 495 C	81.88 20.55 2.51	81.93 19.77 2.20	0.50	5.00			
PANTONE 494 C	74.48 28.51 4.21	74.70 27.73 5.72	1.10	5.00			
PANTONE 493 C	66.32 35.02 6.28	66.33 34.78 6.78	0.34	5.00			
PANTONE 492 C	36.00 40.52 20.81	36.72 39.21 23.43	1.97	5.00			
PANTONE 491 C	32.50 35.23 16.93	33.65 34.50 18.86	1.65	5.00			
PANTONE 490 C	24.74 24.07 10.75	25.51 22.70 12.47	1.71	5.00			
PANTONE 503 C	82.81 13.50 4.11	82.91 13.01 4.51	0.52	5.00			
PANTONE 502 C	79.95 16.33 3.38	80.36 15.74 4.25	0.84	5.00			
PANTONE 501 C	73.31 20.67 4.56	73.43 20.84 4.19	0.30	5.00			
PANTONE 500 C	63.00 25.96 6.74	63.11 25.44 7.61	0.69	5.00			
PANTONE 499 C	34.59 25.43 15.97	35.12 25.59 16.82	0.69	5.00			
PANTONE 498 C	30.24 21.97 12.94	30.79 21.89 14.91	1.43	5.00			
PANTONE 497 C	24.21 15.47 8.53	24.96 15.37 10.94	1.86	5.00			
PANTONE 5035 C	81.14 11.19 3.73	81.23 10.97 3.71	0.19	5.00			
PANTONE 5025 C	78.01 13.71 3.34	78.28 13.13 3.31	0.49	5.00			
PANTONE 5015 C	70.67 16.73 4.36	70.42 17.24 4.32	0.40	5.00			
PANTONE 5005 C	57.78 21.51 5.56	58.18 21.19 6.12	0.58	5.00			
PANTONE 4995 C	48.39 25.48 6.72	48.58 26.06 8.04	0.89	5.00			
PANTONE 4985 C	39.98 26.70 8.46	40.14 26.96 9.92	0.96	5.00			
PANTONE 4975 C	16.90 15.93 7.20	17.93 15.25 8.24	1.23	5.00			
PANTONE 236 C	77.59 34.15 -14.58	77.13 33.45 -14.60	0.44	5.00			
PANTONE 237 C	69.92 47.59 -19.36	70.14 47.00 -18.72	0.35	5.00			
PANTONE 238 C	61.09 61.62 -23.05	61.66 60.60 -21.74	0.71	5.00			
PANTONE 239 C	55.04 69.04 -23.98	53.53 70.33 -23.54	1.50	5.00			
PANTONE 240 C	48.16 67.01 -21.91	46.87 69.97 -22.78	1.46	5.00			
PANTONE 241 C	41.56 63.88 -19.26	40.16 67.67 -19.92	1.57	5.00			
PANTONE 242 C	31.67 44.97 -11.79	31.76 44.98 -10.44	0.67	5.00			
PANTONE 2057 C	67.90 29.11 -9.22	67.86 29.39 -9.30	0.13	5.00			
PANTONE 2058 C	62.16 25.49 -10.90	62.46 25.44 -11.17	0.30	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2059 C	59.53 29.54 -9.35	59.73 29.26 -9.68	0.30	5.00			
PANTONE 2060 C	58.37 44.38 -14.77	58.44 43.83 -14.33	0.25	5.00			
PANTONE 2061 C	48.85 44.21 -11.35	49.45 42.82 -10.58	0.81	5.00			
PANTONE 2062 C	47.78 52.15 -15.21	49.29 48.67 -14.88	1.84	5.00			
PANTONE 2063 C	41.57 54.25 -14.38	41.87 53.42 -14.05	0.37	5.00			
PANTONE 2365 C	81.48 24.94 -11.36	80.97 24.79 -10.83	0.46	5.00			
PANTONE 2375 C	65.62 51.44 -24.20	65.85 50.30 -22.93	0.58	5.00			
PANTONE 2385 C	53.51 69.32 -28.77	51.39 68.36 -27.04	2.17	5.00			
PANTONE 2395 C	46.20 76.53 -28.33	46.40 70.62 -25.57	1.46	5.00			
PANTONE 2405 C	40.22 70.29 -26.51	41.04 69.32 -25.49	0.82	5.00			
PANTONE 2415 C	36.11 64.15 -23.61	36.10 65.91 -24.06	0.45	5.00			
PANTONE 2425 C	29.74 55.00 -18.16	28.80 57.35 -18.87	0.99	5.00			
PANTONE 243 C	80.67 24.89 -14.17	80.20 24.73 -13.57	0.47	5.00			
PANTONE 244 C	73.60 36.48 -20.42	73.27 35.95 -18.16	1.13	5.00			
PANTONE 245 C	66.50 47.05 -26.12	66.15 46.13 -24.00	0.93	5.00			
PANTONE 246 C	49.00 71.34 -33.51	48.05 67.25 -30.89	1.46	5.00			
PANTONE 247 C	45.20 69.70 -31.89	45.04 67.33 -31.33	0.59	5.00			
PANTONE 248 C	40.13 62.35 -28.28	38.76 64.91 -29.30	1.37	5.00			
PANTONE 249 C	32.96 44.66 -18.43	33.21 44.49 -19.06	0.38	5.00			
PANTONE 7646 C	53.35 27.31 -4.09	53.48 27.45 -3.55	0.36	5.00			
PANTONE 7647 C	43.57 50.40 -5.64	45.15 47.34 -5.09	1.77	5.00			
PANTONE 7648 C	36.60 55.10 -8.47	36.54 56.21 -8.13	0.38	5.00			
PANTONE 7649 C	32.88 51.14 -11.06	32.48 52.73 -10.86	0.60	5.00			
PANTONE 7650 C	28.52 40.62 -11.74	29.15 40.54 -11.54	0.49	5.00			
PANTONE 7651 C	28.62 34.67 -14.64	30.21 31.81 -14.12	1.68	5.00			
PANTONE 7652 C	25.60 30.88 -12.99	26.88 28.65 -11.89	1.40	5.00			
PANTONE 250 C	80.82 22.83 -14.58	80.40 23.31 -13.64	0.75	5.00			
PANTONE 251 C	72.78 34.32 -23.57	72.35 33.61 -20.99	1.29	5.00			
PANTONE 252 C	58.63 53.59 -36.40	58.28 49.85 -31.79	1.76	5.00			
PANTONE Purple C	47.52 68.89 -42.48	45.54 64.53 -36.48	2.73	5.00			
PANTONE 253 C	43.03 67.21 -40.90	42.34 63.81 -39.51	1.06	5.00			
PANTONE 254 C	38.44 59.60 -36.13	37.18 62.45 -37.09	1.31	5.00			
PANTONE 255 C	29.82 42.61 -23.68	29.93 42.57 -23.48	0.12	5.00			
PANTONE 2064 C	74.10 30.81 -15.55	74.84 30.81 -15.72	0.55	5.00			
PANTONE 2065 C	75.56 27.52 -18.16	76.03 27.09 -17.43	0.52	5.00			
PANTONE 2066 C	68.03 35.92 -24.06	68.17 35.77 -24.24	0.17	5.00			
PANTONE 2067 C	57.79 45.79 -30.63	58.40 45.22 -30.71	0.59	5.00			
PANTONE 2068 C	50.32 51.56 -34.54	52.43 49.75 -34.20	2.18	5.00			
PANTONE 2069 C	44.24 55.30 -36.57	44.95 55.38 -36.71	0.67	5.00			
PANTONE 2070 C	36.23 56.93 -37.77	34.00 60.47 -39.44	2.07	5.00			
PANTONE 517 C	84.04 16.70 -6.94	84.08 16.28 -8.43	1.06	5.00			
PANTONE 516 C	81.60 18.57 -9.32	82.04 18.00 -10.09	0.73	5.00			
PANTONE 515 C	76.89 25.36 -12.94	77.76 25.23 -12.98	0.62	5.00			
PANTONE 514 C	67.49 34.99 -18.69	67.57 34.99 -19.09	0.22	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 513 C	39.34 48.11 -28.68	40.05 47.42 -28.47	0.66	5.00			
PANTONE 512 C	35.41 41.68 -20.95	36.92 39.40 -19.92	1.51	5.00			
PANTONE 511 C	27.08 28.11 -10.06	28.52 25.23 -8.74	1.80	5.00			
PANTONE 2351 C	60.30 34.40 -18.15	60.41 34.59 -18.24	0.13	5.00			
PANTONE 2352 C	54.42 40.85 -20.11	54.26 40.37 -19.57	0.31	5.00			
PANTONE 2353 C	51.78 55.63 -23.23	52.89 54.48 -22.75	1.14	5.00			
PANTONE 2354 C	43.88 36.18 -20.96	44.17 34.86 -20.97	0.61	5.00			
PANTONE 2355 C	32.03 57.05 -28.75	30.78 60.47 -29.12	1.37	5.00			
PANTONE 2356 C	25.38 52.50 -23.22	25.52 54.18 -23.42	0.51	5.00			
PANTONE 2357 C	22.69 39.64 -8.44	22.66 41.06 -9.54	0.70	5.00			
PANTONE 7653 C	57.86 7.71 -5.16	58.42 7.39 -5.03	0.60	5.00			
PANTONE 7654 C	55.88 22.65 -12.24	56.50 23.25 -11.74	0.76	5.00			
PANTONE 7655 C	48.84 37.13 -18.52	49.71 36.22 -17.57	1.00	5.00			
PANTONE 7656 C	39.13 43.67 -20.92	41.08 40.38 -20.35	2.06	5.00			
PANTONE 7657 C	29.76 36.37 -17.52	31.18 34.62 -17.41	1.30	5.00			
PANTONE 7658 C	30.72 30.05 -14.34	32.65 28.20 -14.17	1.73	5.00			
PANTONE 7659 C	28.81 22.10 -9.84	29.09 21.42 -8.47	0.87	5.00			
PANTONE 5175 C	82.15 7.84 -2.37	82.45 7.22 -1.64	0.84	5.00			
PANTONE 5165 C	79.74 9.18 -3.79	79.65 8.90 -3.56	0.30	5.00			
PANTONE 5155 C	70.61 13.30 -6.22	70.27 13.87 -6.33	0.51	5.00			
PANTONE 5145 C	54.39 19.25 -9.29	54.52 19.75 -9.32	0.33	5.00			
PANTONE 5135 C	41.67 23.39 -11.00	41.99 23.66 -10.56	0.44	5.00			
PANTONE 5125 C	32.28 25.69 -11.10	32.89 24.82 -10.41	0.71	5.00			
PANTONE 5115 C	23.50 22.32 -7.54	24.46 20.70 -7.03	1.15	5.00			
PANTONE 5245 C	83.86 6.06 -1.26	83.61 5.66 -1.16	0.47	5.00			
PANTONE 5235 C	78.71 8.16 -2.19	78.68 7.96 -2.00	0.23	5.00			
PANTONE 5225 C	74.17 9.70 -3.10	74.20 9.65 -3.80	0.53	5.00			
PANTONE 5215 C	64.65 12.47 -4.57	65.00 12.39 -5.00	0.43	5.00			
PANTONE 5205 C	46.71 16.91 -6.44	46.54 16.44 -5.96	0.44	5.00			
PANTONE 5195 C	33.53 18.36 -6.44	33.87 18.40 -4.41	1.34	5.00			
PANTONE 5185 C	23.78 14.71 -5.29	24.07 14.71 -4.42	0.63	5.00			
PANTONE 524 C	80.69 10.49 -8.30	81.00 10.77 -8.53	0.33	5.00			
PANTONE 523 C	75.27 14.04 -12.37	75.32 14.00 -11.90	0.30	5.00			
PANTONE 522 C	68.35 18.14 -16.71	68.18 17.62 -16.19	0.39	5.00			
PANTONE 521 C	58.49 23.25 -21.44	58.23 23.04 -20.59	0.52	5.00			
PANTONE 520 C	29.14 32.31 -24.87	31.14 29.82 -23.72	1.86	5.00			
PANTONE 519 C	27.46 25.46 -19.31	28.60 23.25 -19.18	1.43	5.00			
PANTONE 518 C	23.96 16.87 -9.92	24.40 15.96 -9.63	0.69	5.00			
PANTONE 7436 C	89.25 9.49 -5.27	88.92 9.39 -4.79	0.41	5.00			
PANTONE 7437 C	74.65 16.77 -12.97	74.75 16.91 -13.14	0.14	5.00			
PANTONE 7438 C	72.05 29.44 -20.73	72.16 29.48 -20.59	0.12	5.00			
PANTONE 7439 C	62.33 24.06 -19.16	62.53 24.01 -18.67	0.33	5.00			
PANTONE 7440 C	56.00 24.75 -18.23	56.04 25.16 -18.06	0.27	5.00			
PANTONE 7441 C	50.79 41.47 -41.17	52.12 40.57 -40.85	1.36	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7442 C	43.69 52.94 -50.30	42.98 52.03 -47.86	1.06	5.00			
PANTONE 2562 C	75.28 25.65 -22.34	74.95 24.78 -19.73	1.38	5.00			
PANTONE 2572 C	66.79 35.38 -31.00	65.85 35.08 -27.84	1.71	5.00			
PANTONE 2582 C	50.46 52.73 -44.34	50.45 50.15 -40.46	1.32	5.00			
PANTONE 2592 C	41.32 60.87 -49.69	39.38 59.83 -47.53	1.85	5.00			
PANTONE 2602 C	35.08 57.12 -44.82	33.52 61.14 -45.98	1.69	5.00			
PANTONE 2612 C	32.00 46.19 -34.29	31.96 46.01 -33.52	0.32	5.00			
PANTONE 2622 C	29.41 30.81 -19.96	30.87 27.80 -18.50	1.74	5.00			
PANTONE 531 C	83.45 13.23 -12.08	83.65 13.12 -11.31	0.51	5.00			
PANTONE 530 C	78.92 17.91 -17.18	79.15 17.31 -16.88	0.40	5.00			
PANTONE 529 C	71.97 24.30 -24.27	71.94 24.51 -23.26	0.65	5.00			
PANTONE 528 C	61.78 32.71 -33.24	62.11 32.77 -32.39	0.54	5.00			
PANTONE 527 C	37.24 48.63 -48.13	38.09 49.18 -47.56	0.84	5.00			
PANTONE 526 C	32.86 40.94 -37.85	33.79 39.16 -36.96	0.97	5.00			
PANTONE 525 C	26.03 27.38 -21.57	27.73 24.38 -20.79	1.89	5.00			
PANTONE 256 C	80.07 13.58 -11.83	80.84 12.88 -11.58	0.74	5.00			
PANTONE 257 C	70.95 21.28 -17.85	71.37 21.27 -17.33	0.45	5.00			
PANTONE 258 C	42.25 40.11 -31.61	43.60 37.57 -30.67	1.54	5.00			
PANTONE 259 C	28.86 42.98 -31.59	29.29 42.67 -30.89	0.44	5.00			
PANTONE 260 C	27.48 35.97 -24.28	29.17 34.13 -22.74	1.53	5.00			
PANTONE 261 C	26.19 31.34 -20.99	27.65 29.07 -20.60	1.47	5.00			
PANTONE 262 C	23.52 24.82 -14.68	24.58 22.93 -14.95	1.31	5.00			
PANTONE 2563 C	72.34 22.92 -20.98	72.99 23.10 -20.71	0.54	5.00			
PANTONE 2573 C	62.74 30.74 -28.28	63.99 31.41 -27.95	1.14	5.00			
PANTONE 2583 C	50.78 39.23 -34.55	50.97 38.70 -34.57	0.30	5.00			
PANTONE 2593 C	37.41 47.24 -40.08	37.78 46.75 -39.50	0.38	5.00			
PANTONE 2603 C	30.02 45.36 -36.75	30.02 45.07 -37.10	0.24	5.00			
PANTONE 2613 C	27.43 42.03 -33.03	27.95 41.40 -32.24	0.51	5.00			
PANTONE 2623 C	25.59 36.72 -27.28	25.80 36.08 -26.84	0.30	5.00			
PANTONE 2078 C	67.87 13.82 -12.16	67.76 13.21 -12.22	0.50	5.00			
PANTONE 2079 C	56.63 17.52 -15.88	56.64 16.59 -15.94	0.64	5.00			
PANTONE 2080 C	53.94 23.61 -24.37	53.68 23.51 -24.22	0.26	5.00			
PANTONE 2081 C	46.33 26.53 -27.36	46.33 26.80 -27.60	0.13	5.00			
PANTONE 2082 C	40.49 28.25 -29.21	41.18 27.18 -29.57	0.93	5.00			
PANTONE 2083 C	50.15 38.56 -46.12	50.50 37.75 -45.03	0.51	5.00			
PANTONE 2084 C	38.44 47.94 -52.48	39.30 47.80 -52.40	0.74	5.00			
PANTONE 2071 C	75.50 14.67 -19.54	75.88 14.63 -19.67	0.29	5.00			
PANTONE 2072 C	67.13 21.87 -26.36	68.17 22.14 -26.15	0.87	5.00			
PANTONE 2073 C	66.08 19.44 -27.95	67.15 19.72 -27.57	0.94	5.00			
PANTONE 2074 C	52.16 30.32 -37.37	52.87 30.03 -37.19	0.71	5.00			
PANTONE 2075 C	49.74 27.45 -40.28	50.16 26.59 -40.09	0.60	5.00			
PANTONE 2076 C	46.23 32.83 -41.36	46.83 31.91 -41.47	0.78	5.00			
PANTONE 2077 C	36.77 35.70 -45.94	38.64 32.92 -44.93	1.96	5.00			
PANTONE 7660 C	61.37 6.51 -9.18	61.42 6.93 -9.17	0.46	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7661 C	50.78 19.61 -17.40	50.58 19.08 -16.85	0.42	5.00			
PANTONE 7662 C	37.43 33.85 -25.67	38.12 32.26 -25.24	0.87	5.00			
PANTONE 7663 C	31.14 35.46 -28.37	33.30 32.33 -27.44	2.12	5.00			
PANTONE 7664 C	30.67 32.66 -30.35	32.83 28.72 -29.27	2.41	5.00			
PANTONE 7665 C	30.07 26.89 -24.86	31.44 24.93 -24.75	1.47	5.00			
PANTONE 7666 C	35.10 10.28 -10.34	35.26 10.21 -8.70	1.15	5.00			
PANTONE 2567 C	70.60 20.79 -24.30	71.67 20.15 -23.49	0.92	5.00			
PANTONE 2577 C	58.71 29.05 -33.84	59.92 29.30 -34.09	1.08	5.00			
PANTONE 2587 C	41.65 40.50 -45.24	43.70 38.14 -44.44	2.07	5.00			
PANTONE 2597 C	24.60 48.20 -51.52	22.46 51.79 -51.58	2.09	5.00			
PANTONE 2607 C	20.98 42.80 -45.05	19.53 46.45 -45.77	1.69	5.00			
PANTONE 2617 C	18.33 38.18 -39.44	17.16 41.33 -40.41	1.42	5.00			
PANTONE 2627 C	15.48 30.23 -30.29	14.51 31.86 -30.62	0.96	5.00			
PANTONE 263 C	82.11 11.70 -13.95	82.11 11.86 -13.76	0.22	5.00			
PANTONE 264 C	72.56 19.08 -26.24	72.37 18.52 -24.27	1.06	5.00			
PANTONE 265 C	50.95 35.43 -48.32	50.55 34.50 -46.67	0.70	5.00			
PANTONE 266 C	38.69 44.81 -58.50	40.21 42.33 -56.08	1.55	5.00			
PANTONE 267 C	29.76 43.92 -55.24	30.76 42.80 -54.86	0.88	5.00			
PANTONE 268 C	28.02 34.22 -41.18	29.68 31.26 -40.38	1.81	5.00			
PANTONE 269 C	26.06 27.07 -30.51	28.49 24.28 -30.51	2.40	5.00			
PANTONE 2085 C	84.44 10.48 -10.69	84.35 10.16 -10.65	0.29	5.00			
PANTONE 2086 C	61.83 18.67 -30.28	62.82 18.48 -30.41	0.86	5.00			
PANTONE 2087 C	58.15 26.07 -40.62	58.45 26.07 -39.16	0.83	5.00			
PANTONE 2088 C	47.55 33.03 -50.09	48.26 32.39 -49.65	0.74	5.00			
PANTONE 2089 C	40.66 37.40 -55.65	42.30 35.86 -54.69	1.58	5.00			
PANTONE 2090 C	35.72 40.42 -59.15	38.21 36.99 -57.63	2.48	5.00			
PANTONE 2091 C	24.87 46.31 -64.81	23.56 47.59 -65.01	1.09	5.00			
PANTONE 2635 C	76.14 13.01 -21.16	76.33 13.23 -20.34	0.66	5.00			
PANTONE 2645 C	66.22 19.58 -32.36	66.92 19.48 -30.59	1.16	5.00			
PANTONE 2655 C	56.47 26.31 -42.50	56.90 26.05 -41.00	0.80	5.00			
PANTONE 2665 C	45.45 34.51 -52.90	46.86 33.11 -51.26	1.46	5.00			
PANTONE Violet C	18.75 54.58 -69.48	19.92 52.56 -69.17	1.12	5.00			
PANTONE 2685 C	13.53 40.99 -53.40	13.23 41.84 -53.04	0.57	5.00			
PANTONE 2695 C	14.26 17.59 -24.18	14.64 14.97 -22.53	1.52	5.00			
PANTONE 2092 C	72.53 11.31 -19.97	72.97 11.64 -20.23	0.41	5.00			
PANTONE 2093 C	65.35 11.57 -19.13	65.39 11.48 -19.08	0.08	5.00			
PANTONE 2094 C	55.95 13.70 -22.65	55.80 13.87 -22.51	0.24	5.00			
PANTONE 2095 C	47.53 21.69 -38.17	47.11 21.45 -37.51	0.50	5.00			
PANTONE 2096 C	39.20 25.03 -42.65	39.13 23.63 -41.85	0.61	5.00			
PANTONE 2097 C	37.91 34.74 -58.82	39.17 32.75 -58.29	1.43	5.00			
PANTONE 2098 C	27.81 40.86 -65.02	28.47 39.98 -64.33	0.57	5.00			
PANTONE 2099 C	69.06 11.99 -18.76	68.92 12.38 -18.21	0.60	5.00			
PANTONE 2100 C	62.65 15.45 -28.05	62.71 16.08 -28.31	0.35	5.00			
PANTONE 2101 C	54.36 24.25 -45.06	54.62 24.15 -44.37	0.40	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2102 C	42.27 22.60 -46.12	41.93 21.91 -46.47	0.67	5.00			
PANTONE 2103 C	36.80 25.30 -48.99	37.23 24.17 -48.51	0.64	5.00			
PANTONE 2104 C	29.67 28.14 -51.80	31.01 25.49 -50.59	1.58	5.00			
PANTONE 2105 C	20.91 29.50 -48.25	21.23 28.07 -46.72	0.61	5.00			
PANTONE 270 C	74.56 6.79 -21.55	75.17 6.42 -20.84	0.59	5.00			
PANTONE 271 C	63.45 10.85 -31.55	64.53 10.74 -30.79	0.99	5.00			
PANTONE 272 C	51.49 14.98 -40.69	51.65 15.01 -40.54	0.19	5.00			
PANTONE 273 C	13.13 24.85 -42.48	12.46 24.41 -40.43	1.02	5.00			
PANTONE 274 C	12.01 19.38 -34.77	12.59 18.41 -33.22	0.74	5.00			
PANTONE 275 C	11.50 15.68 -28.88	12.39 15.32 -28.48	0.60	5.00			
PANTONE 276 C	12.16 8.01 -15.19	13.52 6.51 -14.44	1.69	5.00			
PANTONE 2705 C	69.29 10.98 -30.23	69.39 11.41 -29.17	0.93	5.00			
PANTONE 2715 C	58.49 16.78 -41.71	58.66 17.03 -40.80	0.66	5.00			
PANTONE 2725 C	44.54 25.36 -55.05	45.05 24.70 -55.23	0.68	5.00			
PANTONE 2735 C	14.31 48.47 -68.42	15.54 46.80 -70.25	1.67	5.00			
PANTONE 2745 C	12.83 35.98 -54.54	11.61 38.05 -54.00	1.50	5.00			
PANTONE 2755 C	12.65 27.43 -44.76	12.04 28.30 -43.70	1.06	5.00			
PANTONE 2765 C	11.10 16.30 -29.47	11.73 15.38 -28.82	0.61	5.00			
PANTONE 7667 C	51.92 1.93 -21.64	52.10 2.00 -21.92	0.22	5.00			
PANTONE 7668 C	47.33 7.35 -27.77	47.62 7.22 -27.84	0.32	5.00			
PANTONE 7669 C	42.26 13.57 -33.51	42.36 13.21 -33.59	0.31	5.00			
PANTONE 7670 C	37.63 15.82 -36.55	37.82 15.54 -36.66	0.30	5.00			
PANTONE 7671 C	33.51 18.63 -36.50	33.96 18.43 -36.00	0.42	5.00			
PANTONE 7672 C	31.27 18.87 -36.67	31.74 18.03 -36.21	0.54	5.00			
PANTONE 7673 C	37.39 10.10 -28.68	37.31 9.59 -28.39	0.29	5.00			
PANTONE 7443 C	87.68 3.24 -6.64	87.94 3.53 -6.93	0.43	5.00			
PANTONE 7444 C	75.53 5.41 -18.61	75.99 5.08 -18.49	0.46	5.00			
PANTONE 7445 C	68.03 6.98 -16.19	68.16 7.79 -15.82	0.99	5.00			
PANTONE 7446 C	58.27 13.56 -35.20	58.53 13.66 -35.40	0.25	5.00			
PANTONE 7447 C	34.38 17.52 -23.47	34.47 16.87 -23.90	0.63	5.00			
PANTONE 7448 C	26.27 12.42 -9.19	26.60 11.40 -8.54	0.89	5.00			
PANTONE 7449 C	19.86 15.98 -6.97	20.85 15.07 -5.85	1.13	5.00			
PANTONE 7674 C	58.86 5.85 -22.01	59.36 5.57 -21.34	0.56	5.00			
PANTONE 7675 C	54.24 7.29 -24.08	54.63 7.36 -24.30	0.39	5.00			
PANTONE 7676 C	46.41 16.97 -29.54	46.60 17.51 -29.41	0.46	5.00			
PANTONE 7677 C	39.91 24.13 -30.93	40.30 23.99 -31.38	0.46	5.00			
PANTONE 7678 C	36.68 26.29 -33.69	37.38 24.98 -33.28	0.86	5.00			
PANTONE 7679 C	31.37 23.94 -35.12	32.13 22.86 -34.42	0.77	5.00			
PANTONE 7680 C	27.65 27.41 -34.98	29.61 24.54 -34.24	2.05	5.00			
PANTONE 663 C	90.02 2.43 -2.26	90.29 2.93 -2.77	0.77	5.00			
PANTONE 664 C	88.00 3.27 -3.43	88.20 3.58 -4.29	0.80	5.00			
PANTONE 665 C	77.55 6.92 -8.72	77.22 6.33 -8.28	0.68	5.00			
PANTONE 666 C	62.71 10.79 -14.52	63.09 10.44 -14.77	0.53	5.00			
PANTONE 667 C	47.44 14.42 -19.45	47.52 14.66 -19.43	0.20	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 668 C	36.03 16.99 -22.38	36.00 16.70 -22.27	0.17	5.00			
PANTONE 669 C	21.56 17.48 -22.73	22.27 15.71 -21.44	1.15	5.00			
PANTONE 5315 C	86.26 1.85 -3.95	86.66 2.05 -4.64	0.67	5.00			
PANTONE 5305 C	79.68 2.95 -7.06	79.66 2.75 -7.30	0.36	5.00			
PANTONE 5295 C	72.63 3.96 -9.78	72.62 4.00 -10.14	0.25	5.00			
PANTONE 5285 C	58.18 6.12 -14.49	58.70 6.03 -14.38	0.48	5.00			
PANTONE 5275 C	37.41 8.67 -19.99	37.33 8.32 -18.64	0.79	5.00			
PANTONE 5265 C	26.44 10.08 -21.89	26.35 9.50 -21.55	0.41	5.00			
PANTONE 5255 C	10.73 7.93 -16.85	11.87 6.07 -14.63	2.02	5.00			
PANTONE 2358 C	68.32 5.35 -4.26	68.50 5.83 -4.85	0.67	5.00			
PANTONE 2359 C	50.15 7.58 -7.57	50.38 8.17 -6.63	1.04	5.00			
PANTONE 2360 C	51.48 4.83 -11.41	51.54 5.21 -10.79	0.75	5.00			
PANTONE 2361 C	48.08 4.93 -15.89	48.05 5.06 -16.03	0.14	5.00			
PANTONE 2362 C	45.56 5.26 -12.74	46.04 5.24 -11.18	1.21	5.00			
PANTONE 2363 C	40.51 5.92 -13.17	40.75 6.03 -12.81	0.39	5.00			
PANTONE 2364 C	39.62 9.36 -9.01	39.64 9.49 -8.48	0.43	5.00			
PANTONE 2106 C	74.01 2.62 -13.52	73.84 2.44 -13.51	0.26	5.00			
PANTONE 2107 C	63.36 2.94 -18.93	63.34 3.11 -18.66	0.30	5.00			
PANTONE 2108 C	53.74 4.91 -23.23	53.85 4.59 -23.42	0.40	5.00			
PANTONE 2109 C	46.68 7.08 -25.81	47.05 7.12 -25.74	0.37	5.00			
PANTONE 2110 C	41.93 7.42 -27.09	42.08 7.28 -26.43	0.35	5.00			
PANTONE 2111 C	34.09 7.62 -29.05	34.35 7.16 -28.81	0.34	5.00			
PANTONE 2112 C	18.49 22.44 -37.09	19.75 20.56 -35.03	1.25	5.00			
PANTONE 2113 C	72.24 4.95 -27.48	72.66 4.61 -26.27	0.59	5.00			
PANTONE 2114 C	59.63 7.33 -32.16	59.47 7.22 -32.02	0.15	5.00			
PANTONE 2115 C	52.19 9.85 -37.30	52.28 9.32 -36.72	0.21	5.00			
PANTONE 2116 C	45.74 12.56 -41.26	45.93 11.66 -40.68	0.45	5.00			
PANTONE 2117 C	34.28 17.19 -46.75	34.23 16.94 -46.53	0.10	5.00			
PANTONE 2118 C	25.30 15.61 -39.88	26.23 14.78 -38.06	0.94	5.00			
PANTONE 2119 C	21.11 12.83 -33.90	22.36 11.81 -32.16	1.09	5.00			
PANTONE 2366 C	49.40 18.32 -51.07	50.20 18.25 -51.01	0.81	5.00			
PANTONE 2367 C	37.11 23.55 -54.43	37.31 22.60 -53.62	0.39	5.00			
PANTONE 2368 C	37.05 27.59 -61.95	38.54 25.77 -61.57	1.60	5.00			
PANTONE 2369 C	32.61 27.60 -64.58	34.26 26.43 -63.04	1.38	5.00			
PANTONE 2370 C	24.13 28.79 -58.79	27.19 26.41 -56.85	2.41	5.00			
PANTONE 2371 C	18.26 42.08 -63.54	15.79 46.64 -63.51	2.76	5.00			
PANTONE 2372 C	18.20 26.33 -50.38	19.01 25.20 -48.19	0.90	5.00			
PANTONE 538 C	82.62 -1.70 -6.89	82.94 -1.64 -6.72	0.26	5.00			
PANTONE 537 C	79.70 -1.57 -9.60	79.77 -1.78 -9.53	0.28	5.00			
PANTONE 536 C	71.83 -1.84 -13.88	71.78 -1.34 -13.82	0.59	5.00			
PANTONE 535 C	64.82 -0.58 -17.81	64.79 -0.74 -17.55	0.21	5.00			
PANTONE 534 C	21.91 1.51 -27.65	22.56 2.23 -25.39	1.70	5.00			
PANTONE 533 C	16.99 2.57 -18.63	18.42 2.51 -17.01	1.36	5.00			
PANTONE 532 C	11.95 1.26 -7.71	13.17 0.47 -5.58	2.07	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7541 C	88.79 -2.07 -2.07	88.70 -2.25 -3.16	0.98	5.00			
PANTONE 7542 C	74.34 -6.64 -6.78	74.59 -5.79 -6.50	0.91	5.00			
PANTONE 7543 C	66.66 -2.87 -6.78	67.00 -3.15 -7.14	0.49	5.00			
PANTONE 7544 C	54.76 -3.53 -8.98	54.62 -3.04 -8.97	0.58	5.00			
PANTONE 7545 C	34.69 -4.14 -11.59	34.68 -4.30 -10.96	0.48	5.00			
PANTONE 7546 C	22.08 -3.80 -12.10	21.23 -4.52 -10.88	1.35	5.00			
PANTONE 7547 C	10.66 -2.39 -8.98	10.96 -3.83 -8.09	1.90	5.00			
PANTONE 2162 C	67.62 -0.67 -8.54	68.01 -0.93 -8.59	0.46	5.00			
PANTONE 2163 C	62.88 -4.52 -13.03	63.04 -4.83 -12.79	0.41	5.00			
PANTONE 2164 C	59.78 -4.31 -13.92	59.39 -3.88 -14.40	0.67	5.00			
PANTONE 2165 C	52.44 -4.83 -16.05	52.74 -4.54 -16.77	0.60	5.00			
PANTONE 2166 C	46.53 -5.06 -17.58	47.12 -5.50 -17.74	0.71	5.00			
PANTONE 2167 C	44.18 -5.27 -18.16	44.00 -5.67 -17.71	0.50	5.00			
PANTONE 2168 C	29.28 -9.41 -15.62	29.75 -9.04 -15.38	0.48	5.00			
PANTONE 2373 C	53.91 -0.43 -18.26	54.18 -0.82 -17.94	0.50	5.00			
PANTONE 2374 C	39.83 0.26 -21.79	39.93 -0.29 -21.00	0.54	5.00			
PANTONE 2376 C	38.16 -0.29 -15.70	38.50 -0.41 -16.13	0.42	5.00			
PANTONE 2377 C	33.78 -5.80 -21.34	34.43 -5.81 -21.13	0.54	5.00			
PANTONE 2378 C	30.33 0.56 -20.77	30.42 0.47 -21.33	0.35	5.00			
PANTONE 2379 C	28.87 0.25 -13.91	28.60 0.66 -13.35	0.70	5.00			
PANTONE 2380 C	21.07 0.23 -15.86	21.20 0.75 -15.48	0.71	5.00			
PANTONE 552 C	82.56 -7.05 -8.28	82.70 -7.37 -7.92	0.47	5.00			
PANTONE 551 C	77.70 -9.82 -10.63	78.04 -9.12 -10.35	0.66	5.00			
PANTONE 550 C	72.05 -11.59 -14.31	72.34 -11.21 -14.15	0.37	5.00			
PANTONE 549 C	63.57 -14.67 -17.60	63.67 -14.74 -17.88	0.17	5.00			
PANTONE 548 C	21.13 -20.45 -17.74	20.52 -20.10 -18.30	0.60	5.00			
PANTONE 547 C	16.50 -16.98 -13.78	15.94 -16.50 -13.44	0.49	5.00			
PANTONE 546 C	14.98 -10.74 -8.30	14.81 -10.29 -8.10	0.40	5.00			
PANTONE 5455 C	81.65 -3.77 -6.42	81.67 -4.11 -6.46	0.39	5.00			
PANTONE 5445 C	79.61 -4.16 -7.54	79.89 -4.48 -7.24	0.49	5.00			
PANTONE 5435 C	74.49 -5.11 -9.70	74.53 -4.71 -9.34	0.46	5.00			
PANTONE 5425 C	61.14 -7.08 -14.30	61.07 -7.72 -14.09	0.64	5.00			
PANTONE 5415 C	50.79 -8.19 -17.12	51.09 -8.23 -18.26	0.69	5.00			
PANTONE 5405 C	46.86 -8.71 -17.05	47.22 -8.82 -16.60	0.45	5.00			
PANTONE 5395 C	10.53 -5.17 -11.69	10.45 -6.25 -10.71	1.39	5.00			
PANTONE 2155 C	72.35 -4.41 -14.60	72.04 -4.12 -14.70	0.40	5.00			
PANTONE 2156 C	66.54 -4.71 -17.89	66.50 -4.55 -17.94	0.17	5.00			
PANTONE 2157 C	59.53 -5.08 -21.20	59.27 -4.83 -21.18	0.32	5.00			
PANTONE 2158 C	52.35 -6.11 -24.09	52.32 -6.19 -23.46	0.27	5.00			
PANTONE 2159 C	47.69 -6.08 -25.98	47.97 -6.94 -26.10	0.73	5.00			
PANTONE 2160 C	42.45 -5.76 -27.70	42.50 -6.07 -27.09	0.28	5.00			
PANTONE 2161 C	35.03 -5.05 -29.39	35.38 -4.72 -29.04	0.44	5.00			
PANTONE 2134 C	67.37 0.84 -24.15	67.58 0.26 -23.52	0.48	5.00			
PANTONE 2135 C	57.69 1.83 -30.87	57.78 1.90 -31.02	0.09	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2136 C	60.84 0.45 -21.58	60.72 0.98 -21.41	0.60	5.00			
PANTONE 2137 C	53.11 1.64 -25.06	53.49 1.44 -24.82	0.39	5.00			
PANTONE 2138 C	48.78 -1.55 -18.10	49.34 -1.95 -18.07	0.71	5.00			
PANTONE 2139 C	43.53 -0.56 -28.26	43.66 -0.97 -27.65	0.28	5.00			
PANTONE 2140 C	34.75 1.84 -30.60	34.93 2.00 -31.05	0.19	5.00			
PANTONE 642 C	87.28 -2.38 -6.47	87.57 -2.71 -7.15	0.65	5.00			
PANTONE 643 C	84.48 -3.11 -9.17	84.57 -3.00 -9.88	0.53	5.00			
PANTONE 644 C	73.09 -5.11 -17.54	72.81 -5.02 -17.55	0.23	5.00			
PANTONE 645 C	64.46 -6.05 -22.87	64.37 -6.57 -22.42	0.48	5.00			
PANTONE 646 C	55.47 -6.59 -27.51	55.27 -7.26 -27.59	0.54	5.00			
PANTONE 647 C	38.67 -6.46 -34.10	39.28 -6.82 -33.89	0.58	5.00			
PANTONE 648 C	17.58 -0.28 -34.43	17.05 -0.45 -35.65	0.67	5.00			
PANTONE 649 C	89.42 -1.10 -4.55	89.27 -0.89 -5.06	0.53	5.00			
PANTONE 650 C	86.18 -1.72 -7.63	85.93 -2.25 -7.77	0.68	5.00			
PANTONE 651 C	75.18 -2.96 -15.91	74.95 -2.98 -15.37	0.35	5.00			
PANTONE 652 C	62.71 -3.60 -23.39	62.44 -4.11 -23.41	0.51	5.00			
PANTONE 653 C	39.75 -3.38 -33.87	40.09 -3.94 -33.43	0.45	5.00			
PANTONE 654 C	23.48 0.35 -37.21	23.21 0.98 -36.66	0.67	5.00			
PANTONE 655 C	14.44 3.65 -33.47	14.25 1.89 -34.82	1.89	5.00			
PANTONE 656 C	90.37 -1.20 -5.13	90.10 -1.58 -5.60	0.63	5.00			
PANTONE 657 C	85.39 -2.34 -11.66	85.05 -2.68 -11.50	0.48	5.00			
PANTONE 658 C	79.83 -3.12 -18.57	79.54 -2.98 -18.72	0.25	5.00			
PANTONE 659 C	65.86 -3.24 -33.52	66.50 -3.57 -33.09	0.56	5.00			
PANTONE 660 C	51.10 -1.33 -46.51	51.22 -1.98 -46.21	0.38	5.00			
PANTONE 661 C	23.49 13.88 -59.77	22.63 11.65 -60.34	1.78	5.00			
PANTONE 662 C	13.93 21.33 -52.55	14.19 19.19 -51.54	1.03	5.00			
PANTONE 2127 C	80.20 -2.41 -14.44	80.27 -2.66 -14.33	0.29	5.00			
PANTONE 2128 C	72.85 -2.27 -27.25	72.81 -2.25 -27.14	0.06	5.00			
PANTONE 2129 C	57.78 0.92 -45.45	57.70 0.56 -45.71	0.33	5.00			
PANTONE 2130 C	50.37 8.95 -51.85	50.59 8.77 -51.40	0.23	5.00			
PANTONE 2131 C	40.01 12.92 -57.30	40.23 12.23 -56.67	0.32	5.00			
PANTONE 2132 C	37.95 11.84 -63.84	39.03 11.59 -62.17	1.04	5.00			
PANTONE 2133 C	36.61 3.64 -48.80	37.18 3.65 -47.64	0.64	5.00			
PANTONE 7450 C	79.30 0.58 -12.16	79.55 0.78 -11.85	0.39	5.00			
PANTONE 7451 C	68.79 -1.03 -33.14	68.90 -0.92 -32.19	0.44	5.00			
PANTONE 7452 C	61.97 6.90 -40.28	61.83 6.97 -39.30	0.52	5.00			
PANTONE 7453 C	66.40 -3.24 -34.00	67.00 -3.33 -33.62	0.49	5.00			
PANTONE 7454 C	56.68 -7.85 -26.05	56.48 -8.01 -26.43	0.27	5.00			
PANTONE 7455 C	40.11 7.71 -47.84	40.05 7.75 -47.19	0.30	5.00			
PANTONE 7456 C	47.53 9.04 -38.80	47.33 8.06 -38.44	0.60	5.00			
PANTONE 2120 C	81.20 0.54 -17.31	80.83 -0.06 -17.07	0.72	5.00			
PANTONE 2121 C	69.22 -2.39 -26.58	69.60 -2.00 -26.35	0.49	5.00			
PANTONE 2122 C	70.99 2.42 -29.75	70.82 1.97 -29.50	0.31	5.00			
PANTONE 2123 C	61.23 5.37 -41.03	60.90 5.54 -40.59	0.42	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2124 C	53.73 13.12 -47.87	53.88 13.25 -47.76	0.20	5.00			
PANTONE 2125 C	44.35 17.99 -56.21	44.19 17.60 -56.44	0.39	5.00			
PANTONE 2126 C	30.50 27.69 -66.20	31.78 26.98 -65.03	1.04	5.00			
PANTONE 2706 C	84.34 0.96 -13.05	83.47 0.40 -12.85	0.92	5.00			
PANTONE 2716 C	71.39 4.15 -29.58	71.35 4.10 -28.48	0.55	5.00			
PANTONE 2726 C	42.03 18.21 -59.56	42.43 17.34 -59.43	0.64	5.00			
PANTONE 2736 C	23.38 35.72 -72.62	24.09 33.25 -72.22	1.37	5.00			
PANTONE 2746 C	18.90 31.17 -63.91	19.33 28.93 -64.26	1.50	5.00			
PANTONE 2756 C	15.86 19.25 -47.15	16.30 16.46 -47.54	2.06	5.00			
PANTONE 2766 C	12.06 11.24 -32.56	12.78 8.68 -32.58	1.97	5.00			
PANTONE 2708 C	81.17 -1.88 -17.59	80.66 -2.00 -17.47	0.38	5.00			
PANTONE 2718 C	56.19 3.05 -47.99	55.88 2.16 -47.67	0.58	5.00			
PANTONE 2728 C	32.49 17.83 -68.09	32.95 16.12 -68.04	1.14	5.00			
PANTONE 2738 C	14.10 39.35 -70.21	15.80 38.21 -69.70	1.20	5.00			
PANTONE 2748 C	13.46 22.40 -53.72	14.43 20.07 -53.07	1.41	5.00			
PANTONE 2758 C	13.46 13.97 -43.85	13.98 10.83 -44.20	2.37	5.00			
PANTONE 2768 C	11.35 6.40 -30.51	12.26 3.26 -31.54	3.00	5.00			
PANTONE 2707 C	84.78 -2.90 -14.25	84.22 -3.20 -13.37	0.75	5.00			
PANTONE 2717 C	78.48 -3.54 -23.66	77.72 -3.25 -22.39	0.87	5.00			
PANTONE 2727 C	51.94 3.00 -59.13	50.63 1.74 -56.61	1.36	5.00			
PANTONE Blue 072 C	17.51 42.91 -75.99	17.36 42.66 -75.04	0.31	5.00			
PANTONE 2747 C	13.69 21.79 -54.48	14.17 19.46 -53.00	1.03	5.00			
PANTONE 2757 C	13.17 12.50 -43.26	14.18 9.16 -43.91	2.72	5.00			
PANTONE 2767 C	16.03 1.68 -24.69	16.31 0.59 -22.25	1.08	5.00			
PANTONE 277 C	79.74 -5.35 -19.36	79.43 -5.58 -18.93	0.38	5.00			
PANTONE 278 C	72.77 -6.30 -29.68	72.39 -5.99 -29.00	0.48	5.00			
PANTONE 279 C	56.88 -4.57 -48.89	56.69 -4.94 -48.30	0.25	5.00			
PANTONE Reflex Blue C	14.93 31.87 -67.09	16.35 29.09 -64.30	1.29	5.00			
PANTONE 280 C	15.12 15.25 -46.45	15.35 12.70 -47.97	2.44	5.00			
PANTONE 281 C	12.83 9.00 -40.57	14.62 4.53 -41.11	3.64	5.00			
PANTONE 282 C	11.08 2.49 -26.27	11.73 -0.47 -26.27	2.62	5.00			
PANTONE 283 C	75.55 -8.39 -25.86	75.31 -8.63 -25.04	0.42	5.00			
PANTONE 284 C	67.48 -9.15 -35.99	67.40 -9.88 -35.14	0.49	5.00			
PANTONE 285 C	45.28 -4.66 -58.86	47.04 -4.70 -57.07	1.75	5.00			
PANTONE 286 C	22.97 17.93 -67.91	23.74 14.98 -67.13	1.71	5.00			
PANTONE 287 C	20.88 12.55 -56.10	20.49 10.33 -56.59	1.69	5.00			
PANTONE 288 C	18.64 8.34 -46.55	18.27 6.31 -47.77	1.90	5.00			
PANTONE 289 C	13.09 0.07 -21.59	13.33 -1.02 -20.68	1.03	5.00			
PANTONE 7681 C	68.34 -1.01 -20.52	68.40 -1.09 -20.10	0.21	5.00			
PANTONE 7682 C	55.12 -1.18 -30.02	55.01 -1.70 -29.58	0.33	5.00			
PANTONE 7683 C	44.84 -0.36 -38.08	44.83 -0.58 -38.10	0.16	5.00			
PANTONE 7684 C	39.32 2.46 -39.69	39.78 2.11 -39.39	0.43	5.00			
PANTONE 7685 C	36.03 2.72 -41.06	36.54 2.92 -40.00	0.69	5.00			
PANTONE 7686 C	32.98 2.30 -42.39	33.59 2.81 -41.65	0.79	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7687 C	28.50 7.81 -44.93	29.38 8.97 -43.25	1.68	5.00			
PANTONE 2141 C	74.30 -9.70 -27.22	74.27 -9.70 -26.41	0.33	5.00			
PANTONE 2142 C	68.70 -5.21 -33.18	68.95 -5.19 -32.69	0.26	5.00			
PANTONE 2143 C	53.64 -6.22 -44.07	53.77 -7.03 -43.81	0.49	5.00			
PANTONE 2144 C	41.46 -2.49 -53.14	42.34 -2.21 -51.84	0.94	5.00			
PANTONE 2145 C	32.13 3.96 -57.82	31.81 2.55 -57.44	0.83	5.00			
PANTONE 2146 C	23.25 12.48 -56.45	22.48 10.27 -57.17	1.82	5.00			
PANTONE 2147 C	17.78 16.21 -50.90	17.84 13.21 -51.81	2.42	5.00			
PANTONE 545 C	85.71 -4.74 -9.47	85.64 -4.45 -9.61	0.35	5.00			
PANTONE 544 C	83.90 -5.49 -11.72	83.82 -6.02 -11.21	0.69	5.00			
PANTONE 543 C	78.31 -7.56 -17.55	78.49 -7.08 -17.03	0.48	5.00			
PANTONE 542 C	68.58 -10.02 -25.38	68.30 -9.60 -25.52	0.38	5.00			
PANTONE 541 C	22.58 -6.99 -39.13	21.65 -7.82 -39.74	0.92	5.00			
PANTONE 540 C	17.52 -7.11 -30.38	16.33 -7.85 -30.72	0.97	5.00			
PANTONE 539 C	13.35 -6.52 -17.26	13.07 -6.91 -16.19	0.77	5.00			
PANTONE 290 C	84.61 -7.91 -13.11	84.61 -8.29 -12.15	0.78	5.00			
PANTONE 291 C	78.99 -10.56 -21.90	78.77 -10.70 -21.18	0.42	5.00			
PANTONE 292 C	69.37 -13.01 -34.50	69.47 -13.25 -33.41	0.42	5.00			
PANTONE 293 C	25.77 11.10 -66.52	25.55 9.15 -65.86	1.05	5.00			
PANTONE 294 C	18.85 3.71 -42.52	18.16 1.52 -43.76	2.01	5.00			
PANTONE 295 C	14.80 -1.74 -33.72	15.03 -3.25 -34.77	1.40	5.00			
PANTONE 296 C	8.97 -4.25 -13.91	8.87 -6.31 -14.63	2.05	5.00			
PANTONE 2905 C	77.15 -13.41 -23.37	77.10 -13.40 -23.20	0.09	5.00			
PANTONE 2915 C	69.52 -15.93 -33.41	69.76 -16.17 -33.01	0.29	5.00			
PANTONE 2925 C	59.54 -17.20 -45.05	59.72 -17.40 -44.91	0.19	5.00			
PANTONE 2935 C	34.02 -2.18 -64.18	32.52 -3.54 -65.93	1.65	5.00			
PANTONE 2945 C	29.18 -5.84 -52.85	27.89 -7.79 -54.61	1.74	5.00			
PANTONE 2955 C	20.92 -8.22 -34.39	20.14 -8.39 -36.01	0.77	5.00			
PANTONE 2965 C	13.18 -7.15 -20.26	12.94 -8.09 -19.55	0.92	5.00			
PANTONE 2169 C	69.09 -9.81 -23.28	68.99 -9.62 -22.62	0.33	5.00			
PANTONE 2170 C	60.88 -11.35 -29.22	60.67 -11.47 -28.84	0.25	5.00			
PANTONE 2171 C	62.02 -12.22 -41.69	62.07 -12.42 -41.27	0.16	5.00			
PANTONE 2172 C	49.31 -3.27 -53.92	50.26 -3.54 -53.28	0.96	5.00			
PANTONE 2173 C	51.77 -10.01 -52.26	52.26 -10.36 -52.00	0.52	5.00			
PANTONE 2174 C	46.45 -7.66 -57.05	47.76 -7.29 -55.55	1.38	5.00			
PANTONE 2175 C	41.23 -7.50 -61.12	41.66 -8.95 -60.81	0.85	5.00			
PANTONE 2381 C	59.47 -2.59 -43.19	59.52 -2.24 -43.05	0.27	5.00			
PANTONE 2382 C	53.88 -10.49 -50.50	54.52 -11.10 -49.97	0.69	5.00			
PANTONE 2383 C	46.10 -8.68 -38.85	46.40 -8.67 -38.36	0.32	5.00			
PANTONE 2384 C	37.71 -10.37 -44.27	38.76 -9.91 -43.88	0.96	5.00			
PANTONE 2386 C	43.96 5.32 -54.88	44.50 4.67 -54.15	0.56	5.00			
PANTONE 2387 C	41.30 7.23 -61.41	42.64 7.16 -60.41	1.25	5.00			
PANTONE 2388 C	33.51 6.98 -63.21	33.01 5.29 -62.80	1.03	5.00			
PANTONE 297 C	74.87 -19.62 -26.80	75.06 -19.57 -26.25	0.28	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 298 C	68.72 -22.48 -35.07	68.79 -22.80 -34.46	0.32	5.00			
PANTONE 299 C	60.98 -24.33 -44.17	61.66 -24.02 -43.69	0.61	5.00			
PANTONE 300 C	35.78 -9.69 -62.01	34.33 -11.23 -63.61	1.56	5.00			
PANTONE 301 C	27.77 -12.34 -45.35	26.67 -14.43 -46.12	1.46	5.00			
PANTONE 302 C	21.51 -13.48 -27.98	20.81 -14.34 -27.57	0.76	5.00			
PANTONE 303 C	14.76 -9.13 -15.20	14.17 -9.84 -13.75	1.25	5.00			
PANTONE 7688 C	59.17 -13.90 -34.78	58.99 -13.79 -34.78	0.18	5.00			
PANTONE 7689 C	54.99 -16.06 -36.37	54.95 -16.71 -35.77	0.44	5.00			
PANTONE 7690 C	45.30 -16.87 -37.13	45.55 -16.43 -36.55	0.37	5.00			
PANTONE 7691 C	37.46 -13.79 -39.70	38.52 -13.31 -38.10	1.07	5.00			
PANTONE 7692 C	33.39 -9.49 -35.71	35.00 -8.64 -34.45	1.51	5.00			
PANTONE 7693 C	28.60 -6.85 -32.56	29.37 -5.37 -30.18	1.68	5.00			
PANTONE 7694 C	25.89 -6.10 -29.51	26.32 -4.54 -27.07	1.77	5.00			
PANTONE 2148 C	57.57 -9.01 -24.59	57.31 -8.79 -24.34	0.30	5.00			
PANTONE 2149 C	51.58 -9.84 -26.99	51.62 -10.10 -27.08	0.19	5.00			
PANTONE 2150 C	45.92 -10.19 -29.48	46.33 -10.53 -29.50	0.45	5.00			
PANTONE 2151 C	42.65 -6.93 -37.40	43.22 -7.07 -36.97	0.54	5.00			
PANTONE 2152 C	39.65 -10.62 -31.15	40.45 -10.06 -30.83	0.80	5.00			
PANTONE 2153 C	33.24 -10.81 -30.89	34.03 -10.48 -29.29	0.90	5.00			
PANTONE 2154 C	27.74 -3.01 -40.86	27.31 -3.20 -40.17	0.36	5.00			
PANTONE 2183 C	55.17 -23.72 -33.73	55.21 -23.74 -33.19	0.22	5.00			
PANTONE 2184 C	50.72 -14.21 -53.81	52.57 -13.99 -51.56	1.92	5.00			
PANTONE 2185 C	43.94 -23.46 -37.67	45.36 -23.06 -36.62	1.39	5.00			
PANTONE 2186 C	27.73 -8.27 -45.13	26.75 -9.95 -45.78	1.31	5.00			
PANTONE 2187 C	26.52 -10.58 -37.12	26.47 -11.31 -37.42	0.47	5.00			
PANTONE 2188 C	24.77 -10.93 -31.62	24.70 -11.32 -30.75	0.40	5.00			
PANTONE 2189 C	19.05 -9.08 -19.00	19.10 -7.88 -17.50	1.15	5.00			
PANTONE 2975 C	81.71 -16.69 -17.39	81.66 -16.03 -17.34	0.42	5.00			
PANTONE 2985 C	72.97 -23.26 -29.54	73.26 -23.43 -29.36	0.25	5.00			
PANTONE 2995 C	62.55 -27.77 -42.03	63.23 -27.77 -41.20	0.64	5.00			
PANTONE 3005 C	43.92 -21.28 -57.94	42.54 -23.69 -58.42	1.66	5.00			
PANTONE 3015 C	35.84 -22.46 -44.59	34.48 -23.33 -45.96	1.23	5.00			
PANTONE 3025 C	28.75 -21.46 -30.11	28.45 -22.17 -30.37	0.41	5.00			
PANTONE 3035 C	22.55 -17.09 -19.03	22.38 -16.14 -18.67	0.58	5.00			
PANTONE 2190 C	69.57 -19.36 -33.95	69.62 -19.34 -33.55	0.16	5.00			
PANTONE 2191 C	61.76 -20.28 -43.36	62.15 -19.68 -43.18	0.45	5.00			
PANTONE 2192 C	53.92 -23.81 -52.14	54.97 -23.20 -50.95	1.07	5.00			
PANTONE 2193 C	54.57 -19.95 -51.18	55.54 -19.57 -50.29	0.96	5.00			
PANTONE 2194 C	50.17 -21.88 -55.58	50.92 -22.01 -54.96	0.77	5.00			
PANTONE 2195 C	45.73 -11.67 -58.88	46.20 -11.82 -58.65	0.46	5.00			
PANTONE 2196 C	39.41 -17.40 -51.91	38.63 -18.16 -51.71	0.78	5.00			
PANTONE 7695 C	65.68 -11.41 -16.30	65.66 -11.40 -16.23	0.04	5.00			
PANTONE 7696 C	59.81 -14.57 -17.69	60.28 -15.29 -17.87	0.63	5.00			
PANTONE 7697 C	52.98 -14.03 -20.25	53.17 -14.19 -20.69	0.29	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7698 C	45.69 -11.87 -19.89	46.02 -11.97 -19.70	0.34	5.00			
PANTONE 7699 C	39.94 -10.92 -20.42	40.52 -11.05 -19.26	0.81	5.00			
PANTONE 7700 C	35.76 -11.36 -26.23	36.07 -11.34 -25.11	0.55	5.00			
PANTONE 7701 C	32.77 -17.42 -26.61	33.13 -16.72 -25.89	0.53	5.00			
PANTONE 2176 C	73.48 -5.07 -6.98	73.13 -4.18 -6.80	1.03	5.00			
PANTONE 2177 C	63.39 -9.36 -11.00	63.60 -9.07 -11.25	0.39	5.00			
PANTONE 2178 C	56.81 -10.24 -12.02	56.91 -10.63 -12.02	0.35	5.00			
PANTONE 2179 C	48.61 -11.34 -13.74	48.66 -11.66 -13.68	0.28	5.00			
PANTONE 2180 C	42.75 -12.50 -15.21	42.90 -12.56 -14.49	0.47	5.00			
PANTONE 2181 C	35.60 -12.89 -15.94	35.58 -13.15 -15.48	0.37	5.00			
PANTONE 2182 C	28.52 -12.69 -16.13	28.59 -12.22 -15.24	0.55	5.00			
PANTONE 2204 C	80.24 -8.52 -9.46	80.40 -8.39 -9.34	0.17	5.00			
PANTONE 2205 C	69.85 -10.79 -14.99	69.68 -10.83 -14.56	0.30	5.00			
PANTONE 2206 C	62.93 -9.52 -16.94	62.79 -9.59 -17.08	0.14	5.00			
PANTONE 2207 C	60.14 -13.25 -19.30	60.56 -13.10 -18.98	0.41	5.00			
PANTONE 2208 C	53.91 -12.35 -20.84	53.86 -12.32 -20.86	0.06	5.00			
PANTONE 2209 C	52.16 -14.20 -21.81	52.02 -14.25 -23.32	0.74	5.00			
PANTONE 2210 C	30.71 -9.77 -26.81	31.24 -8.56 -26.01	1.00	5.00			
PANTONE 7457 C	85.58 -9.68 -9.28	85.41 -9.79 -9.31	0.15	5.00			
PANTONE 7458 C	68.47 -16.99 -19.34	68.40 -17.01 -19.25	0.08	5.00			
PANTONE 7459 C	58.13 -20.39 -24.18	57.85 -21.01 -24.32	0.40	5.00			
PANTONE 7460 C	47.06 -40.80 -48.59	45.30 -41.79 -51.12	1.84	5.00			
PANTONE 7461 C	47.34 -19.87 -44.46	48.53 -19.26 -42.80	1.29	5.00			
PANTONE 7462 C	32.94 -9.31 -39.41	33.49 -8.89 -38.29	0.65	5.00			
PANTONE 7463 C	15.65 -5.49 -24.29	15.33 -6.63 -23.12	1.04	5.00			
PANTONE 304 C	82.96 -19.01 -14.61	82.82 -18.35 -14.41	0.40	5.00			
PANTONE 305 C	75.41 -27.30 -26.25	75.13 -26.26 -26.24	0.53	5.00			
PANTONE 306 C	65.95 -35.06 -38.03	66.29 -34.98 -37.43	0.35	5.00			
PANTONE Process Blue C	47.57 -33.39 -53.38	45.78 -34.75 -55.38	1.85	5.00			
PANTONE 307 C	38.39 -29.82 -47.04	36.36 -31.39 -49.26	1.89	5.00			
PANTONE 308 C	31.32 -28.04 -33.11	29.92 -29.86 -33.81	1.32	5.00			
PANTONE 309 C	21.02 -18.67 -15.84	20.35 -17.64 -15.26	0.78	5.00			
PANTONE 635 C	83.57 -16.08 -13.32	83.43 -15.85 -13.39	0.20	5.00			
PANTONE 636 C	80.07 -20.23 -17.96	79.79 -20.41 -18.15	0.23	5.00			
PANTONE 637 C	72.48 -27.50 -26.49	72.80 -27.42 -26.13	0.29	5.00			
PANTONE 638 C	63.99 -33.79 -34.95	64.39 -33.65 -34.80	0.34	5.00			
PANTONE 639 C	53.78 -37.57 -42.62	53.72 -37.51 -43.02	0.16	5.00			
PANTONE 640 C	46.52 -35.92 -45.77	45.45 -36.39 -46.92	1.08	5.00			
PANTONE 641 C	36.73 -28.64 -46.37	34.88 -29.64 -48.84	1.71	5.00			
PANTONE 2389 C	61.22 -17.05 -30.18	61.18 -16.81 -30.19	0.14	5.00			
PANTONE 2390 C	47.96 -16.69 -34.44	48.42 -15.90 -33.82	0.64	5.00			
PANTONE 2391 C	48.86 -23.04 -29.93	49.79 -23.30 -29.84	0.94	5.00			
PANTONE 2392 C	40.12 -16.02 -24.78	40.81 -15.43 -23.68	0.81	5.00			
PANTONE 2393 C	53.38 -31.03 -44.53	54.34 -30.57 -42.88	1.06	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2394 C	50.70 -30.83 -50.75	50.64 -31.17 -50.54	0.18	5.00			
PANTONE 2396 C	55.09 -40.04 -27.60	55.62 -39.29 -26.30	0.74	5.00			
PANTONE 7702 C	63.94 -22.86 -24.71	63.65 -23.42 -24.21	0.49	5.00			
PANTONE 7703 C	57.91 -28.05 -29.65	57.81 -27.58 -29.65	0.23	5.00			
PANTONE 7704 C	48.96 -30.25 -34.13	49.73 -29.06 -33.00	0.95	5.00			
PANTONE 7705 C	41.27 -26.23 -32.91	42.33 -25.38 -32.43	1.03	5.00			
PANTONE 7706 C	39.47 -23.78 -30.72	40.57 -22.25 -29.93	1.20	5.00			
PANTONE 7707 C	36.25 -21.56 -26.58	37.46 -20.50 -25.63	1.17	5.00			
PANTONE 7708 C	31.92 -21.16 -24.36	33.15 -19.16 -23.49	1.42	5.00			
PANTONE 2197 C	78.56 -25.36 -20.53	78.10 -25.22 -20.56	0.34	5.00			
PANTONE 2198 C	74.44 -30.51 -25.29	74.20 -29.72 -25.95	0.58	5.00			
PANTONE 2199 C	67.72 -37.84 -32.01	67.95 -38.12 -31.66	0.28	5.00			
PANTONE 2200 C	62.64 -29.81 -27.77	62.15 -30.08 -27.58	0.45	5.00			
PANTONE 2201 C	62.36 -41.57 -37.09	63.13 -41.63 -35.40	0.93	5.00			
PANTONE 2202 C	59.46 -36.91 -46.36	60.43 -36.87 -45.38	0.91	5.00			
PANTONE 2203 C	49.03 -34.49 -34.76	50.23 -32.87 -33.06	1.41	5.00			
PANTONE 628 C	85.37 -12.05 -7.14	85.14 -12.21 -6.55	0.51	5.00			
PANTONE 629 C	80.54 -16.90 -12.09	80.82 -17.00 -12.25	0.22	5.00			
PANTONE 630 C	74.52 -21.97 -17.05	74.38 -21.52 -17.36	0.36	5.00			
PANTONE 631 C	66.08 -27.83 -23.17	65.79 -28.35 -23.04	0.36	5.00			
PANTONE 632 C	53.78 -33.89 -29.52	54.00 -33.53 -29.35	0.25	5.00			
PANTONE 633 C	41.39 -34.31 -32.95	41.19 -34.17 -33.22	0.23	5.00			
PANTONE 634 C	33.83 -30.32 -32.94	32.32 -30.79 -33.02	1.22	5.00			
PANTONE 310 C	77.66 -27.66 -20.35	77.32 -26.98 -20.57	0.45	5.00			
PANTONE 311 C	71.45 -35.22 -26.93	70.96 -35.31 -26.91	0.37	5.00			
PANTONE 312 C	60.14 -45.23 -36.10	60.58 -46.15 -34.41	0.95	5.00			
PANTONE 313 C	51.11 -47.45 -40.78	49.84 -48.44 -42.81	1.42	5.00			
PANTONE 314 C	44.54 -44.06 -36.16	43.05 -44.59 -38.16	1.56	5.00			
PANTONE 315 C	36.32 -36.78 -27.07	36.06 -36.54 -27.86	0.47	5.00			
PANTONE 316 C	25.98 -22.55 -13.41	26.57 -20.60 -12.41	1.17	5.00			
PANTONE 3105 C	77.83 -29.62 -17.98	77.56 -29.60 -17.81	0.21	5.00			
PANTONE 3115 C	69.70 -40.27 -24.94	69.75 -40.37 -24.50	0.23	5.00			
PANTONE 3125 C	61.41 -48.95 -30.32	62.27 -48.63 -28.56	1.04	5.00			
PANTONE 3135 C	48.70 -53.92 -34.22	46.80 -55.01 -37.60	2.23	5.00			
PANTONE 3145 C	41.39 -45.42 -27.11	40.51 -45.16 -29.44	1.34	5.00			
PANTONE 3155 C	34.27 -38.81 -22.18	33.88 -38.26 -22.54	0.47	5.00			
PANTONE 3165 C	27.67 -30.20 -16.27	27.52 -28.88 -15.16	0.72	5.00			
PANTONE 7709 C	67.26 -23.40 -14.26	67.41 -22.83 -13.54	0.46	5.00			
PANTONE 7710 C	61.09 -36.00 -20.41	60.70 -35.89 -20.78	0.41	5.00			
PANTONE 7711 C	54.01 -44.06 -24.32	55.20 -42.23 -23.27	1.31	5.00			
PANTONE 7712 C	47.60 -40.32 -26.36	48.49 -38.80 -24.73	1.15	5.00			
PANTONE 7713 C	44.43 -41.72 -21.10	45.32 -39.81 -20.48	1.08	5.00			
PANTONE 7714 C	42.37 -39.52 -18.06	43.71 -37.69 -16.52	1.52	5.00			
PANTONE 7715 C	35.40 -31.63 -14.41	36.35 -29.15 -13.71	1.33	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2218 C	67.50 -18.11 -14.70	67.55 -18.12 -14.54	0.11	5.00			
PANTONE 2219 C	62.57 -20.06 -16.64	62.88 -19.83 -16.88	0.35	5.00			
PANTONE 2220 C	57.43 -21.46 -18.44	57.31 -21.50 -18.99	0.31	5.00			
PANTONE 2221 C	53.04 -23.61 -19.74	53.51 -23.47 -19.95	0.48	5.00			
PANTONE 2222 C	49.32 -23.07 -21.04	49.80 -23.48 -20.63	0.60	5.00			
PANTONE 2223 C	45.05 -23.51 -22.31	45.79 -23.46 -21.67	0.77	5.00			
PANTONE 2224 C	39.05 -23.07 -23.65	39.41 -22.10 -23.02	0.58	5.00			
PANTONE 317 C	86.69 -17.21 -6.32	86.21 -16.78 -6.21	0.42	5.00			
PANTONE 318 C	81.89 -26.13 -11.44	80.92 -25.70 -11.46	0.70	5.00			
PANTONE 319 C	74.08 -39.12 -17.23	73.82 -38.75 -17.06	0.24	5.00			
PANTONE 320 C	53.32 -62.50 -24.76	51.81 -62.26 -27.94	2.08	5.00			
PANTONE 321 C	48.42 -56.38 -22.13	48.48 -55.77 -23.08	0.57	5.00			
PANTONE 322 C	40.17 -45.41 -16.86	40.48 -43.73 -17.26	0.77	5.00			
PANTONE 323 C	33.77 -36.31 -12.62	34.23 -33.56 -11.41	1.20	5.00			
PANTONE 2225 C	79.48 -27.02 -16.34	79.29 -26.62 -16.15	0.23	5.00			
PANTONE 2226 C	74.16 -35.03 -20.87	74.17 -34.69 -21.11	0.23	5.00			
PANTONE 2227 C	70.96 -28.44 -16.60	71.05 -27.88 -17.11	0.47	5.00			
PANTONE 2228 C	57.76 -53.04 -30.87	57.97 -52.81 -31.79	0.47	5.00			
PANTONE 2229 C	54.17 -54.25 -32.41	53.55 -53.82 -34.76	1.19	5.00			
PANTONE 2230 C	50.46 -39.20 -25.53	51.56 -38.64 -23.57	1.40	5.00			
PANTONE 2231 C	43.95 -39.41 -27.00	44.02 -39.14 -25.80	0.53	5.00			
PANTONE 7464 C	79.94 -17.40 -3.04	80.26 -16.98 -3.08	0.36	5.00			
PANTONE 7465 C	70.31 -40.43 -1.75	70.20 -39.76 -1.11	0.47	5.00			
PANTONE 7466 C	61.58 -54.47 -22.90	62.88 -53.03 -22.19	1.19	5.00			
PANTONE 7467 C	56.28 -59.48 -24.34	55.87 -59.36 -25.11	0.53	5.00			
PANTONE 7468 C	43.12 -23.83 -30.81	43.94 -23.80 -29.88	0.85	5.00			
PANTONE 7469 C	35.16 -22.50 -32.41	35.76 -21.32 -32.18	0.75	5.00			
PANTONE 7470 C	33.12 -23.18 -22.09	34.09 -22.02 -20.79	1.07	5.00			
PANTONE 7471 C	81.52 -31.20 -6.21	81.25 -30.24 -5.11	0.80	5.00			
PANTONE 7472 C	68.63 -29.88 -7.00	68.57 -30.30 -6.52	0.41	5.00			
PANTONE 7473 C	56.37 -35.52 -2.54	56.34 -34.64 -3.16	0.56	5.00			
PANTONE 7474 C	42.92 -35.45 -18.13	43.52 -35.10 -16.72	0.93	5.00			
PANTONE 7475 C	47.54 -17.80 -6.90	47.19 -17.91 -6.22	0.62	5.00			
PANTONE 7476 C	30.67 -19.67 -9.94	30.64 -18.90 -8.94	0.71	5.00			
PANTONE 7477 C	29.77 -11.47 -13.02	29.86 -11.46 -12.98	0.08	5.00			
PANTONE 2211 C	60.73 -12.84 -10.65	61.24 -13.40 -10.71	0.62	5.00			
PANTONE 2212 C	51.86 -15.05 -13.17	51.84 -15.14 -13.56	0.23	5.00			
PANTONE 2213 C	43.36 -19.09 -11.78	43.15 -19.28 -11.53	0.30	5.00			
PANTONE 2214 C	42.57 -17.34 -14.00	42.58 -17.22 -13.91	0.08	5.00			
PANTONE 2215 C	33.81 -10.93 -14.35	33.36 -11.07 -13.49	0.67	5.00			
PANTONE 2216 C	30.48 -9.37 -11.39	30.34 -9.25 -11.31	0.16	5.00			
PANTONE 2217 C	20.88 -15.04 -10.25	20.76 -13.71 -8.66	1.27	5.00			
PANTONE 5523 C	81.09 -8.19 -3.98	81.09 -8.48 -3.51	0.52	5.00			
PANTONE 5513 C	78.08 -9.49 -5.10	78.04 -9.51 -5.17	0.06	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 5503 C	71.78 -11.81 -6.86	71.79 -11.81 -7.12	0.19	5.00			
PANTONE 5493 C	65.99 -13.63 -8.28	66.19 -13.22 -8.39	0.39	5.00			
PANTONE 5483 C	52.14 -17.65 -10.82	53.00 -17.60 -11.24	0.90	5.00			
PANTONE 5473 C	35.43 -20.62 -12.80	36.12 -19.94 -12.72	0.70	5.00			
PANTONE 5463 C	13.48 -10.11 -8.23	12.72 -10.09 -8.31	0.49	5.00			
PANTONE 2232 C	67.24 -20.32 -9.93	67.61 -20.10 -9.91	0.32	5.00			
PANTONE 2233 C	63.33 -23.87 -13.38	63.38 -23.35 -13.89	0.49	5.00			
PANTONE 2234 C	60.37 -24.72 -12.35	60.37 -24.64 -12.55	0.14	5.00			
PANTONE 2235 C	55.18 -28.47 -15.47	55.04 -27.81 -14.74	0.45	5.00			
PANTONE 2236 C	54.55 -28.07 -14.28	54.78 -27.82 -14.12	0.25	5.00			
PANTONE 2237 C	50.09 -29.63 -14.80	50.67 -29.60 -14.63	0.59	5.00			
PANTONE 2238 C	38.04 -32.18 -18.23	38.99 -31.17 -16.85	1.10	5.00			
PANTONE 7716 C	54.49 -38.62 -8.68	54.70 -37.91 -9.01	0.43	5.00			
PANTONE 7717 C	47.51 -43.33 -8.58	47.75 -41.81 -8.13	0.59	5.00			
PANTONE 7718 C	41.82 -43.38 -10.96	43.08 -41.25 -10.30	1.37	5.00			
PANTONE 7719 C	39.15 -37.39 -8.50	39.93 -35.49 -8.36	1.00	5.00			
PANTONE 7720 C	35.69 -33.64 -5.81	35.97 -32.99 -4.29	1.03	5.00			
PANTONE 7721 C	34.24 -28.95 -8.87	34.62 -28.62 -7.15	1.17	5.00			
PANTONE 7722 C	29.60 -24.47 -8.16	29.61 -24.46 -6.45	1.18	5.00			
PANTONE 324 C	82.77 -21.06 -6.67	82.72 -20.23 -6.72	0.50	5.00			
PANTONE 325 C	75.51 -32.39 -9.37	75.73 -31.74 -9.19	0.31	5.00			
PANTONE 326 C	63.28 -48.78 -10.62	63.21 -48.30 -10.21	0.25	5.00			
PANTONE 327 C	45.68 -64.22 -6.97	45.10 -63.25 -6.85	0.61	5.00			
PANTONE 328 C	39.60 -53.21 -7.36	39.96 -51.53 -6.55	0.70	5.00			
PANTONE 329 C	36.07 -45.69 -6.92	37.34 -44.08 -4.08	2.03	5.00			
PANTONE 330 C	30.20 -26.52 -3.83	30.13 -26.57 -1.67	1.52	5.00			
PANTONE 3242 C	80.59 -33.89 -7.99	80.33 -32.12 -7.34	0.78	5.00			
PANTONE 3252 C	75.45 -43.93 -10.04	75.55 -42.30 -10.65	0.77	5.00			
PANTONE 3262 C	66.44 -59.33 -12.05	66.26 -58.52 -12.91	0.59	5.00			
PANTONE 3272 C	55.72 -69.95 -14.03	55.79 -69.39 -14.68	0.39	5.00			
PANTONE 3282 C	45.71 -57.53 -9.52	45.72 -56.04 -9.46	0.43	5.00			
PANTONE 3292 C	31.28 -37.40 -5.26	32.07 -35.42 -1.99	2.27	5.00			
PANTONE 3302 C	27.69 -25.58 -3.14	27.63 -25.27 -0.97	1.53	5.00			
PANTONE 2397 C	65.36 -45.45 -18.64	65.41 -44.95 -19.10	0.36	5.00			
PANTONE 2398 C	66.81 -46.18 -10.83	66.87 -45.83 -10.74	0.13	5.00			
PANTONE 2399 C	58.78 -67.73 -13.69	59.02 -66.18 -13.80	0.48	5.00			
PANTONE 2400 C	61.90 -55.51 -2.74	61.85 -54.73 -2.72	0.23	5.00			
PANTONE 2401 C	61.42 -36.06 -3.32	61.15 -34.36 -3.96	0.86	5.00			
PANTONE 2402 C	54.23 -62.12 -4.19	55.27 -59.07 -3.25	1.35	5.00			
PANTONE 2403 C	46.39 -67.74 -9.91	45.21 -66.96 -12.82	1.90	5.00			
PANTONE 3245 C	82.26 -33.47 -4.77	81.44 -31.13 -4.75	1.12	5.00			
PANTONE 3255 C	76.43 -46.22 -6.00	76.55 -44.88 -6.20	0.49	5.00			
PANTONE 3265 C	69.51 -59.46 -6.59	69.47 -58.19 -8.00	0.90	5.00			
PANTONE 3275 C	60.94 -71.13 -6.13	62.52 -68.81 -5.18	1.52	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 3285 C	52.34 -57.95 -4.89	53.13 -55.25 -3.50	1.28	5.00			
PANTONE 3295 C	41.76 -50.22 -3.27	42.92 -47.51 -0.48	2.09	5.00			
PANTONE 3305 C	28.37 -26.04 -0.75	27.82 -26.23 0.39	0.90	5.00			
PANTONE 3248 C	75.58 -33.30 -0.20	75.85 -32.19 -0.69	0.60	5.00			
PANTONE 3258 C	71.73 -39.41 -2.10	71.88 -38.02 -2.87	0.75	5.00			
PANTONE 3268 C	60.24 -55.37 0.24	60.27 -55.02 -0.19	0.26	5.00			
PANTONE 3278 C	53.47 -62.76 2.82	53.77 -60.06 4.39	1.16	5.00			
PANTONE 3288 C	45.12 -56.52 2.35	46.06 -53.70 4.84	1.86	5.00			
PANTONE 3298 C	37.32 -43.41 2.11	38.15 -42.06 4.49	1.70	5.00			
PANTONE 3308 C	25.25 -23.37 1.78	24.93 -22.94 1.59	0.35	5.00			
PANTONE 566 C	84.83 -13.94 0.11	84.95 -13.78 -0.16	0.26	5.00			
PANTONE 565 C	81.31 -19.89 -1.04	81.63 -19.71 -0.83	0.29	5.00			
PANTONE 564 C	75.73 -24.84 -2.25	75.89 -23.69 -2.81	0.75	5.00			
PANTONE 563 C	70.14 -29.18 -2.89	70.13 -28.68 -3.43	0.46	5.00			
PANTONE 562 C	40.50 -36.04 -3.21	41.26 -35.40 -1.69	1.22	5.00			
PANTONE 561 C	32.76 -27.76 -0.87	32.86 -28.27 2.06	2.03	5.00			
PANTONE 560 C	22.59 -14.57 0.91	22.33 -14.60 0.67	0.26	5.00			
PANTONE 573 C	86.46 -17.24 -0.58	86.33 -16.45 -1.70	1.02	5.00			
PANTONE 572 C	84.26 -21.57 -1.33	84.35 -20.96 -2.41	0.88	5.00			
PANTONE 571 C	82.30 -24.65 -1.88	82.25 -23.10 -2.92	1.14	5.00			
PANTONE 570 C	74.84 -33.27 -2.47	74.89 -31.94 -3.37	0.86	5.00			
PANTONE 569 C	45.90 -47.33 -2.16	46.61 -46.02 -1.88	0.81	5.00			
PANTONE 568 C	39.32 -35.47 -0.50	40.04 -35.28 1.62	1.52	5.00			
PANTONE 567 C	23.17 -17.30 1.02	23.64 -15.99 0.12	1.16	5.00			
PANTONE 559 C	78.69 -12.14 4.90	78.49 -12.45 4.97	0.28	5.00			
PANTONE 558 C	73.71 -14.96 5.18	73.75 -14.74 5.26	0.18	5.00			
PANTONE 557 C	68.13 -17.63 5.63	68.27 -17.09 5.79	0.41	5.00			
PANTONE 556 C	62.11 -21.27 7.44	61.88 -20.97 7.79	0.38	5.00			
PANTONE 555 C	42.35 -29.38 11.00	42.31 -29.77 13.58	1.47	5.00			
PANTONE 554 C	34.21 -24.85 9.19	33.73 -24.82 9.47	0.43	5.00			
PANTONE 553 C	27.17 -15.03 7.07	26.57 -15.20 6.33	0.71	5.00			
PANTONE 2404 C	72.87 -10.61 11.65	72.98 -9.99 12.82	1.05	5.00			
PANTONE 2406 C	62.35 -13.86 7.86	62.49 -13.54 8.34	0.47	5.00			
PANTONE 2407 C	55.29 -16.54 9.07	56.05 -16.81 9.91	0.89	5.00			
PANTONE 2408 C	46.83 -23.03 13.82	46.43 -23.61 15.76	1.14	5.00			
PANTONE 2409 C	40.10 -14.46 13.41	39.82 -14.47 15.52	1.30	5.00			
PANTONE 2410 C	35.80 -14.33 13.32	36.35 -13.92 14.08	0.78	5.00			
PANTONE 2411 C	24.15 -20.85 15.58	23.68 -21.38 15.26	0.52	5.00			
PANTONE 5595 C	81.19 -6.97 3.36	81.11 -6.91 2.97	0.32	5.00			
PANTONE 5585 C	74.62 -9.71 2.75	74.95 -9.14 2.52	0.59	5.00			
PANTONE 5575 C	67.95 -11.33 2.40	67.83 -11.21 2.28	0.16	5.00			
PANTONE 5565 C	61.82 -13.07 2.36	62.23 -13.47 2.87	0.59	5.00			
PANTONE 5555 C	50.04 -15.71 2.63	50.37 -15.16 2.79	0.53	5.00			
PANTONE 5545 C	41.04 -17.12 2.76	41.45 -17.33 3.48	0.64	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 5535 C	17.54 -12.05 1.20	17.62 -10.73 0.86	1.13	5.00			
PANTONE 5665 C	78.40 -5.22 4.38	78.29 -5.11 4.10	0.26	5.00			
PANTONE 5655 C	75.11 -5.96 4.55	75.01 -5.44 4.37	0.57	5.00			
PANTONE 5645 C	70.82 -6.82 4.82	70.86 -6.06 5.05	0.85	5.00			
PANTONE 5635 C	65.88 -7.72 5.29	65.94 -7.46 5.67	0.42	5.00			
PANTONE 5625 C	53.28 -9.74 6.56	53.65 -9.22 7.17	0.80	5.00			
PANTONE 5615 C	46.45 -10.68 7.45	46.68 -9.85 7.96	0.92	5.00			
PANTONE 5605 C	20.95 -10.96 4.34	20.98 -10.24 3.65	0.77	5.00			
PANTONE 5527 C	79.74 -4.69 -0.01	79.92 -4.02 -0.22	0.81	5.00			
PANTONE 5517 C	76.37 -5.56 -0.34	76.40 -4.68 -0.49	1.00	5.00			
PANTONE 5507 C	69.99 -6.84 -0.78	69.75 -6.83 -1.77	0.89	5.00			
PANTONE 5497 C	61.08 -8.25 -1.43	61.68 -8.46 -0.46	1.00	5.00			
PANTONE 5487 C	48.27 -10.21 -1.79	48.23 -9.65 -1.05	0.77	5.00			
PANTONE 5477 C	36.66 -11.95 -1.62	36.82 -12.05 -1.28	0.32	5.00			
PANTONE 5467 C	18.95 -11.20 -1.23	18.66 -10.83 -0.62	0.61	5.00			
PANTONE 621 C	87.85 -6.65 2.40	87.47 -6.40 2.59	0.40	5.00			
PANTONE 622 C	80.41 -9.46 2.31	80.62 -9.19 2.07	0.33	5.00			
PANTONE 623 C	72.45 -13.08 2.07	72.86 -12.86 0.83	1.01	5.00			
PANTONE 624 C	61.96 -16.30 2.11	62.31 -15.78 1.81	0.51	5.00			
PANTONE 625 C	49.30 -19.99 2.16	50.18 -19.41 2.22	0.95	5.00			
PANTONE 626 C	34.93 -21.86 1.97	34.83 -22.63 3.20	0.93	5.00			
PANTONE 627 C	18.00 -13.80 0.26	18.32 -12.26 -0.10	1.25	5.00			
PANTONE 331 C	86.52 -23.40 -0.53	86.54 -22.51 -0.40	0.49	5.00			
PANTONE 332 C	83.75 -30.91 -1.21	83.23 -29.75 -1.07	0.61	5.00			
PANTONE 333 C	78.24 -47.36 -1.67	77.70 -45.63 -2.30	0.79	5.00			
PANTONE Green C	57.74 -77.18 0.20	57.88 -75.36 -0.61	0.58	5.00			
PANTONE 334 C	51.60 -67.35 0.42	52.80 -64.28 1.70	1.56	5.00			
PANTONE 335 C	43.24 -51.59 1.79	44.26 -49.70 3.15	1.37	5.00			
PANTONE 336 C	36.23 -39.38 1.82	36.68 -38.61 3.60	1.22	5.00			
PANTONE 2239 C	73.10 -53.58 -3.01	73.61 -51.88 -4.11	0.92	5.00			
PANTONE 2240 C	66.47 -67.17 -1.62	66.94 -65.76 -2.68	0.76	5.00			
PANTONE 2241 C	61.01 -27.72 -0.04	61.34 -26.69 -1.43	1.13	5.00			
PANTONE 2242 C	56.65 -61.86 7.57	56.59 -60.17 7.46	0.46	5.00			
PANTONE 2243 C	53.63 -44.46 1.74	53.53 -43.33 0.82	0.67	5.00			
PANTONE 2244 C	47.42 -33.37 0.26	47.21 -32.47 0.33	0.42	5.00			
PANTONE 2245 C	45.34 -70.14 10.61	46.41 -67.21 10.35	1.25	5.00			
PANTONE 337 C	79.88 -27.06 3.80	79.42 -26.30 3.89	0.49	5.00			
PANTONE 338 C	75.92 -34.96 3.62	76.05 -33.27 2.46	0.97	5.00			
PANTONE 339 C	63.37 -53.59 7.61	63.08 -52.06 7.53	0.52	5.00			
PANTONE 340 C	51.80 -65.36 14.55	51.73 -63.95 15.05	0.50	5.00			
PANTONE 341 C	43.23 -48.36 9.96	43.53 -46.80 10.58	0.73	5.00			
PANTONE 342 C	36.86 -38.63 8.20	37.52 -38.34 8.83	0.69	5.00			
PANTONE 343 C	31.90 -26.89 6.33	32.08 -26.20 5.86	0.44	5.00			
PANTONE 7723 C	61.80 -33.56 8.26	61.83 -32.10 8.62	0.69	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7724 C	53.95 -44.57 10.37	53.97 -43.50 10.16	0.36	5.00			
PANTONE 7725 C	47.34 -55.10 13.92	47.91 -53.47 14.33	0.81	5.00			
PANTONE 7726 C	43.00 -53.72 13.93	43.65 -51.91 13.14	0.84	5.00			
PANTONE 7727 C	39.02 -46.16 12.46	39.51 -43.95 11.13	0.99	5.00			
PANTONE 7728 C	37.16 -39.37 9.79	37.73 -38.57 9.67	0.57	5.00			
PANTONE 7729 C	31.58 -32.02 2.58	31.61 -31.21 3.21	0.56	5.00			
PANTONE 3375 C	82.19 -38.07 5.25	82.49 -36.45 4.50	0.74	5.00			
PANTONE 3385 C	77.00 -48.14 7.31	76.86 -46.91 7.00	0.42	5.00			
PANTONE 3395 C	67.52 -66.87 12.32	67.64 -64.94 10.92	0.73	5.00			
PANTONE 3405 C	59.16 -78.99 18.96	59.82 -76.75 18.10	0.79	5.00			
PANTONE 3415 C	41.55 -51.63 12.82	42.15 -49.66 12.47	0.81	5.00			
PANTONE 3425 C	35.39 -39.40 9.71	36.37 -38.75 9.47	0.86	5.00			
PANTONE 3435 C	26.24 -22.21 5.92	26.57 -21.43 4.71	0.90	5.00			
PANTONE 2246 C	81.11 -18.93 7.16	81.29 -18.44 7.03	0.33	5.00			
PANTONE 2247 C	72.11 -30.78 11.08	71.95 -29.38 11.20	0.66	5.00			
PANTONE 2248 C	68.74 -30.87 11.93	68.74 -29.52 11.51	0.59	5.00			
PANTONE 2249 C	63.52 -34.26 13.48	63.41 -33.26 13.86	0.53	5.00			
PANTONE 2250 C	63.37 -55.33 19.00	63.14 -54.08 18.68	0.41	5.00			
PANTONE 2251 C	60.55 -59.13 16.84	60.61 -57.42 16.90	0.51	5.00			
PANTONE 2252 C	56.96 -77.17 30.95	58.21 -74.59 29.19	1.34	5.00			
PANTONE 2412 C	76.16 -51.06 17.59	76.43 -48.65 16.70	0.79	5.00			
PANTONE 2413 C	66.29 -44.63 8.13	66.08 -43.57 7.54	0.48	5.00			
PANTONE 2414 C	66.31 -56.08 16.75	66.45 -53.78 16.06	0.68	5.00			
PANTONE 2416 C	62.08 -59.05 15.36	61.76 -56.41 14.56	0.80	5.00			
PANTONE 2417 C	57.21 -43.28 15.36	57.12 -42.33 15.02	0.34	5.00			
PANTONE 2418 C	45.20 -75.44 22.84	46.97 -71.30 22.93	2.00	5.00			
PANTONE 2419 C	44.16 -46.73 8.09	43.98 -46.39 9.18	0.65	5.00			
PANTONE 344 C	81.84 -24.68 12.05	82.01 -23.89 11.90	0.41	5.00			
PANTONE 345 C	79.92 -29.31 12.55	80.23 -27.28 12.27	0.94	5.00			
PANTONE 346 C	74.98 -37.52 16.21	75.36 -36.47 16.26	0.51	5.00			
PANTONE 347 C	53.56 -64.22 30.50	53.96 -61.29 27.18	1.30	5.00			
PANTONE 348 C	46.55 -54.14 26.07	47.69 -51.00 22.43	1.89	5.00			
PANTONE 349 C	38.47 -37.11 19.52	39.48 -35.68 17.50	1.33	5.00			
PANTONE 350 C	31.06 -19.64 12.41	31.40 -19.52 11.28	0.73	5.00			
PANTONE 351 C	84.91 -28.46 13.38	84.71 -26.73 12.66	0.81	5.00			
PANTONE 352 C	83.27 -35.27 15.09	83.31 -32.97 14.41	0.91	5.00			
PANTONE 353 C	81.62 -39.86 17.18	81.48 -37.86 16.74	0.73	5.00			
PANTONE 354 C	60.44 -76.65 39.88	62.16 -74.31 36.62	1.80	5.00			
PANTONE 355 C	52.03 -67.04 33.95	52.90 -63.55 30.14	1.60	5.00			
PANTONE 356 C	43.17 -50.96 27.29	44.78 -46.94 21.46	2.85	5.00			
PANTONE 357 C	32.33 -26.67 15.06	32.60 -25.44 12.20	1.61	5.00			
PANTONE 7478 C	84.46 -29.60 9.25	84.49 -28.13 9.14	0.66	5.00			
PANTONE 7479 C	73.34 -58.62 27.63	73.29 -55.84 27.13	0.78	5.00			
PANTONE 7480 C	66.05 -68.86 24.21	65.84 -66.30 24.13	0.69	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7481 C	62.93 -72.66 35.90	63.79 -70.41 34.30	0.95	5.00			
PANTONE 7482 C	55.14 -64.26 27.98	55.45 -61.85 26.21	0.82	5.00			
PANTONE 7483 C	34.82 -26.52 14.80	35.07 -25.30 12.67	1.22	5.00			
PANTONE 7484 C	31.68 -30.46 6.21	31.86 -29.72 4.80	0.93	5.00			
PANTONE 2253 C	88.29 -19.41 9.66	87.86 -18.52 9.33	0.61	5.00			
PANTONE 2254 C	84.14 -22.52 15.05	83.97 -21.65 14.39	0.53	5.00			
PANTONE 2255 C	77.79 -33.81 21.40	77.76 -31.80 21.13	0.83	5.00			
PANTONE 2256 C	70.29 -45.59 29.33	70.40 -43.80 29.66	0.72	5.00			
PANTONE 2257 C	61.29 -56.45 34.38	61.43 -54.09 33.99	0.69	5.00			
PANTONE 2258 C	47.48 -52.15 39.78	46.79 -50.40 40.91	1.09	5.00			
PANTONE 2259 C	41.13 -43.35 33.08	40.70 -42.34 32.13	0.56	5.00			
PANTONE 7730 C	55.50 -33.29 19.22	55.28 -32.60 20.13	0.67	5.00			
PANTONE 7731 C	49.59 -41.18 24.26	49.93 -39.27 23.15	0.79	5.00			
PANTONE 7732 C	43.42 -45.41 21.58	44.23 -43.26 18.32	1.66	5.00			
PANTONE 7733 C	40.33 -39.12 16.21	40.83 -37.90 13.89	1.26	5.00			
PANTONE 7734 C	36.45 -26.22 12.39	36.63 -24.48 10.61	1.20	5.00			
PANTONE 7735 C	33.56 -17.26 11.46	34.30 -16.10 9.42	1.47	5.00			
PANTONE 7736 C	33.38 -14.77 7.25	33.19 -14.06 6.71	0.61	5.00			
PANTONE 7737 C	61.85 -33.46 46.77	61.99 -30.48 44.16	1.20	5.00			
PANTONE 7738 C	59.15 -43.30 40.33	59.69 -40.76 37.68	1.14	5.00			
PANTONE 7739 C	56.14 -46.13 35.59	56.87 -43.45 33.52	1.17	5.00			
PANTONE 7740 C	53.14 -40.75 33.43	54.13 -38.41 31.83	1.28	5.00			
PANTONE 7741 C	50.47 -34.55 31.08	51.37 -32.35 30.07	1.24	5.00			
PANTONE 7742 C	45.59 -25.94 26.62	46.41 -24.55 25.26	1.09	5.00			
PANTONE 7743 C	40.58 -21.66 19.99	40.96 -20.47 18.02	1.10	5.00			
PANTONE 2260 C	80.56 -14.19 13.03	80.37 -14.07 12.20	0.52	5.00			
PANTONE 2261 C	72.30 -18.37 16.96	72.23 -16.97 16.23	0.85	5.00			
PANTONE 2262 C	67.16 -17.71 13.84	67.12 -17.09 14.23	0.52	5.00			
PANTONE 2263 C	58.30 -19.33 17.50	58.54 -17.88 16.74	0.87	5.00			
PANTONE 2264 C	57.46 -24.69 22.93	57.49 -23.77 22.43	0.44	5.00			
PANTONE 2265 C	49.17 -20.76 20.04	49.41 -20.95 21.53	0.80	5.00			
PANTONE 2266 C	32.44 -22.31 23.54	33.11 -20.88 21.44	1.20	5.00			
PANTONE 358 C	82.74 -25.63 30.88	82.79 -24.06 30.96	0.80	5.00			
PANTONE 359 C	80.77 -29.42 34.60	80.65 -28.03 34.18	0.60	5.00			
PANTONE 360 C	70.75 -43.47 48.93	70.85 -41.68 48.86	0.66	5.00			
PANTONE 361 C	63.12 -50.75 52.90	65.17 -47.26 48.74	2.15	5.00			
PANTONE 362 C	58.12 -40.54 46.53	59.56 -37.07 41.54	2.12	5.00			
PANTONE 363 C	52.27 -35.21 42.21	54.02 -32.50 36.94	2.52	5.00			
PANTONE 364 C	45.15 -26.77 35.79	46.87 -24.83 31.90	2.26	5.00			
PANTONE 2267 C	83.05 -33.49 26.93	83.03 -32.49 27.71	0.66	5.00			
PANTONE 2268 C	78.78 -44.48 34.86	79.04 -42.14 34.96	0.89	5.00			
PANTONE 2269 C	74.86 -39.27 37.87	75.36 -37.42 37.03	0.75	5.00			
PANTONE 2270 C	70.47 -60.75 46.20	70.82 -57.57 46.20	0.99	5.00			
PANTONE 2271 C	65.00 -68.29 51.01	66.76 -64.81 48.05	1.73	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2272 C	54.52 -55.39 49.93	54.70 -51.89 50.54	1.25	5.00			
PANTONE 2273 C	41.79 -36.94 32.63	42.31 -36.10 30.61	0.92	5.00			
PANTONE 2420 C	69.05 -65.78 36.20	69.18 -62.23 36.28	1.02	5.00			
PANTONE 2421 C	64.82 -60.47 69.77	63.38 -57.47 70.16	1.55	5.00			
PANTONE 2422 C	58.68 -62.30 46.37	60.14 -59.59 44.79	1.48	5.00			
PANTONE 2423 C	58.48 -74.47 53.24	56.13 -71.91 56.13	2.53	5.00			
PANTONE 2424 C	56.84 -53.58 60.71	55.81 -50.71 60.98	1.38	5.00			
PANTONE 2426 C	48.18 -68.56 43.72	46.05 -65.71 43.72	2.22	5.00			
PANTONE 2427 C	34.03 -37.59 28.28	33.66 -37.92 28.05	0.36	5.00			
PANTONE 7485 C	86.65 -9.40 15.42	86.42 -9.46 16.08	0.42	5.00			
PANTONE 7486 C	85.21 -21.78 32.99	85.02 -20.35 32.61	0.73	5.00			
PANTONE 7487 C	80.73 -42.03 48.96	80.46 -40.00 50.96	1.29	5.00			
PANTONE 7488 C	77.39 -48.60 55.99	76.90 -47.05 58.73	1.29	5.00			
PANTONE 7489 C	63.99 -30.70 39.32	63.74 -29.62 40.34	0.80	5.00			
PANTONE 7490 C	58.74 -23.96 36.01	58.59 -22.70 36.76	0.85	5.00			
PANTONE 7491 C	53.50 -13.31 37.24	54.08 -13.51 36.47	0.67	5.00			
PANTONE 2274 C	85.72 -8.95 18.72	85.53 -8.97 18.63	0.14	5.00			
PANTONE 2275 C	84.39 -17.00 31.97	84.25 -16.67 31.61	0.22	5.00			
PANTONE 2276 C	64.86 -21.75 40.79	64.64 -19.93 42.74	1.50	5.00			
PANTONE 2277 C	55.31 -36.94 50.90	57.00 -34.04 47.49	1.98	5.00			
PANTONE 2278 C	48.44 -30.92 43.17	48.41 -29.48 42.43	0.58	5.00			
PANTONE 2279 C	48.68 -22.08 39.52	50.02 -19.94 36.51	1.85	5.00			
PANTONE 2280 C	40.94 -22.08 36.36	40.69 -20.64 35.88	0.75	5.00			
PANTONE 365 C	85.59 -20.79 38.64	85.57 -19.08 38.50	0.93	5.00			
PANTONE 366 C	83.53 -24.76 43.86	83.01 -23.86 45.10	0.86	5.00			
PANTONE 367 C	80.04 -30.91 51.98	79.74 -29.14 53.25	1.11	5.00			
PANTONE 368 C	69.93 -40.25 62.98	70.97 -36.82 61.22	1.42	5.00			
PANTONE 369 C	61.77 -38.81 59.94	61.96 -36.38 58.48	0.85	5.00			
PANTONE 370 C	53.80 -26.69 50.19	55.18 -23.96 47.08	1.83	5.00			
PANTONE 371 C	39.09 -12.87 32.72	40.67 -11.75 29.87	1.84	5.00			
PANTONE 2281 C	89.80 -14.27 36.21	89.16 -13.43 36.85	0.79	5.00			
PANTONE 2282 C	88.24 -21.46 36.07	87.67 -20.90 37.61	0.90	5.00			
PANTONE 2283 C	83.21 -34.13 52.67	82.63 -33.00 54.04	0.92	5.00			
PANTONE 2284 C	80.98 -22.23 38.65	80.71 -21.51 39.83	0.76	5.00			
PANTONE 2285 C	79.84 -40.57 59.63	79.74 -38.37 60.94	1.14	5.00			
PANTONE 2286 C	74.07 -46.97 75.14	74.93 -43.41 71.80	1.27	5.00			
PANTONE 2287 C	70.62 -53.93 68.54	71.37 -49.95 67.73	1.34	5.00			
PANTONE 372 C	89.75 -18.75 42.05	88.68 -17.36 42.47	1.11	5.00			
PANTONE 373 C	88.76 -21.78 47.49	87.84 -20.66 47.73	0.87	5.00			
PANTONE 374 C	87.32 -25.62 54.54	85.98 -24.13 55.35	1.25	5.00			
PANTONE 375 C	78.90 -40.51 77.33	79.21 -38.03 76.86	0.94	5.00			
PANTONE 376 C	70.20 -37.19 73.37	70.40 -34.48 74.25	1.28	5.00			
PANTONE 377 C	59.17 -25.17 60.46	59.36 -22.10 60.44	1.55	5.00			
PANTONE 378 C	39.43 -11.25 36.03	40.26 -9.59 34.57	1.30	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2288 C	86.34 -20.26 47.32	86.02 -18.71 46.39	0.80	5.00			
PANTONE 2289 C	83.41 -16.97 43.23	83.46 -15.88 44.21	0.86	5.00			
PANTONE 2290 C	81.49 -33.85 74.30	81.05 -32.82 74.75	0.59	5.00			
PANTONE 2291 C	79.35 -33.88 86.10	79.48 -31.94 85.48	0.76	5.00			
PANTONE 2292 C	74.80 -34.96 70.67	74.76 -32.73 68.50	0.82	5.00			
PANTONE 2293 C	72.75 -38.87 83.26	71.37 -35.89 83.85	1.65	5.00			
PANTONE 2294 C	63.76 -33.72 68.13	62.82 -30.74 68.87	1.63	5.00			
PANTONE 2295 C	90.69 -13.92 45.29	89.59 -12.54 44.40	1.05	5.00			
PANTONE 2296 C	88.51 -18.96 59.06	87.85 -17.25 58.55	0.97	5.00			
PANTONE 2297 C	84.19 -27.17 78.54	83.30 -26.36 79.52	0.80	5.00			
PANTONE 2298 C	82.73 -25.96 58.05	82.01 -24.25 58.45	1.03	5.00			
PANTONE 2299 C	78.54 -31.25 66.40	78.06 -29.67 66.17	0.76	5.00			
PANTONE 2300 C	74.56 -21.95 58.64	74.28 -20.81 59.40	0.76	5.00			
PANTONE 2301 C	66.43 -24.50 63.28	67.30 -23.05 59.70	1.20	5.00			
PANTONE 580 C	83.26 -11.93 22.02	83.16 -11.19 21.73	0.52	5.00			
PANTONE 579 C	81.14 -13.47 24.09	81.16 -13.04 24.62	0.47	5.00			
PANTONE 578 C	79.91 -14.57 25.45	79.97 -14.03 26.61	0.78	5.00			
PANTONE 577 C	75.70 -17.33 30.72	75.12 -16.41 31.55	0.89	5.00			
PANTONE 576 C	60.40 -22.72 37.62	59.88 -21.73 38.80	0.97	5.00			
PANTONE 575 C	50.80 -18.36 34.34	51.67 -17.17 34.91	1.20	5.00			
PANTONE 574 C	36.51 -10.53 22.00	37.40 -9.35 22.39	1.26	5.00			
PANTONE 5807 C	83.10 -4.87 18.65	83.02 -4.63 17.31	0.75	5.00			
PANTONE 5797 C	79.48 -5.83 21.87	79.25 -5.70 20.64	0.65	5.00			
PANTONE 5787 C	75.41 -6.53 24.56	75.37 -6.04 24.78	0.45	5.00			
PANTONE 5777 C	66.34 -7.79 30.61	66.80 -6.22 30.87	1.27	5.00			
PANTONE 5767 C	57.24 -8.40 34.60	57.44 -8.79 36.18	0.64	5.00			
PANTONE 5757 C	46.07 -8.51 35.43	47.24 -7.10 33.65	1.55	5.00			
PANTONE 5747 C	27.49 -7.86 21.65	28.40 -6.87 19.94	1.27	5.00			
PANTONE 5875 C	82.18 -3.50 24.08	81.86 -3.39 23.93	0.24	5.00			
PANTONE 5865 C	79.55 -3.79 26.28	79.23 -3.94 25.85	0.34	5.00			
PANTONE 5855 C	75.31 -3.55 26.95	75.10 -3.57 27.15	0.18	5.00			
PANTONE 5845 C	68.88 -3.84 31.29	69.05 -3.02 30.06	0.79	5.00			
PANTONE 5835 C	62.68 -3.79 34.82	62.66 -3.87 35.50	0.26	5.00			
PANTONE 5825 C	53.77 -3.33 37.51	53.80 -1.85 37.47	1.09	5.00			
PANTONE 5815 C	33.82 -2.35 25.94	34.71 -1.65 23.93	1.31	5.00			
PANTONE 5803 C	79.08 -4.68 14.58	79.00 -5.06 14.11	0.57	5.00			
PANTONE 5793 C	73.80 -6.12 16.99	73.83 -5.71 16.78	0.40	5.00			
PANTONE 5783 C	68.16 -6.55 18.70	68.53 -6.04 19.67	0.88	5.00			
PANTONE 5773 C	58.38 -7.58 22.02	58.99 -7.84 22.66	0.64	5.00			
PANTONE 5763 C	50.05 -8.32 24.17	50.09 -8.05 25.86	0.93	5.00			
PANTONE 5753 C	41.80 -8.76 24.60	42.22 -8.24 24.40	0.55	5.00			
PANTONE 5743 C	28.99 -8.46 18.08	29.25 -7.47 16.48	1.11	5.00			
PANTONE 7492 C	79.58 -12.35 35.78	79.24 -12.27 36.79	0.49	5.00			
PANTONE 7493 C	77.59 -9.23 23.70	77.42 -8.98 24.31	0.44	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7494 C	68.93 -12.02 16.83	69.12 -11.32 17.32	0.72	5.00			
PANTONE 7495 C	61.00 -12.90 45.05	61.33 -11.35 46.14	1.19	5.00			
PANTONE 7496 C	53.59 -17.38 50.05	54.94 -15.62 47.13	1.69	5.00			
PANTONE 7497 C	48.15 0.08 16.33	48.49 -0.13 17.28	0.68	5.00			
PANTONE 7498 C	40.07 -7.92 23.68	40.89 -7.16 23.64	0.96	5.00			
PANTONE 2302 C	72.62 -12.75 41.51	72.47 -11.85 42.57	0.81	5.00			
PANTONE 2303 C	69.71 -16.94 43.29	69.78 -15.94 44.83	0.97	5.00			
PANTONE 2304 C	67.68 -13.73 45.36	67.45 -13.85 47.35	0.70	5.00			
PANTONE 2305 C	65.98 -15.04 67.19	67.24 -14.02 62.72	1.53	5.00			
PANTONE 2306 C	55.68 -14.67 49.62	57.32 -12.80 46.63	1.94	5.00			
PANTONE 2307 C	44.90 -11.79 45.38	44.81 -9.60 46.39	1.55	5.00			
PANTONE 2308 C	36.13 -4.02 33.21	37.10 -2.47 32.06	1.48	5.00			
PANTONE 7744 C	74.27 -12.69 71.18	74.37 -12.98 69.05	0.62	5.00			
PANTONE 7745 C	68.74 -11.52 63.06	69.05 -11.44 61.13	0.58	5.00			
PANTONE 7746 C	62.24 -10.15 52.31	62.59 -8.81 50.65	0.91	5.00			
PANTONE 7747 C	56.74 -10.25 46.35	57.26 -8.37 45.15	1.26	5.00			
PANTONE 7748 C	52.07 -9.23 39.48	53.14 -8.39 39.02	1.18	5.00			
PANTONE 7749 C	47.42 -6.93 32.57	48.52 -5.70 31.63	1.42	5.00			
PANTONE 7750 C	42.24 -6.00 27.03	43.07 -5.52 27.04	0.86	5.00			
PANTONE 379 C	89.58 -13.55 59.86	88.29 -13.38 58.94	0.85	5.00			
PANTONE 380 C	87.71 -16.52 72.44	87.17 -16.26 70.73	0.54	5.00			
PANTONE 381 C	84.44 -20.22 85.14	84.61 -19.72 83.33	0.40	5.00			
PANTONE 382 C	82.04 -21.53 85.01	82.16 -20.32 81.12	0.85	5.00			
PANTONE 383 C	68.59 -14.23 74.65	68.27 -13.39 72.20	0.67	5.00			
PANTONE 384 C	59.43 -9.82 64.93	58.82 -9.23 65.54	0.68	5.00			
PANTONE 385 C	47.04 -4.14 42.93	48.16 -2.87 40.41	1.61	5.00			
PANTONE 386 C	91.19 -12.44 60.42	89.67 -11.05 60.01	1.23	5.00			
PANTONE 387 C	89.59 -15.98 78.23	88.01 -15.13 78.96	1.14	5.00			
PANTONE 388 C	88.96 -17.10 82.10	87.98 -16.91 83.09	0.68	5.00			
PANTONE 389 C	85.23 -21.56 94.26	85.16 -20.87 90.71	0.69	5.00			
PANTONE 390 C	74.04 -17.28 85.84	72.41 -16.03 86.49	1.40	5.00			
PANTONE 391 C	60.45 -8.60 67.67	60.07 -7.23 67.78	0.88	5.00			
PANTONE 392 C	50.62 -5.02 54.48	50.87 -4.29 56.20	0.78	5.00			
PANTONE 587 C	89.14 -8.96 42.06	89.04 -8.69 42.30	0.23	5.00			
PANTONE 586 C	88.11 -10.27 48.87	87.79 -9.67 46.67	0.75	5.00			
PANTONE 585 C	86.66 -11.34 52.59	86.50 -11.46 52.50	0.14	5.00			
PANTONE 584 C	83.83 -13.24 61.16	83.62 -12.15 60.80	0.62	5.00			
PANTONE 583 C	74.80 -15.37 72.37	74.95 -15.45 70.32	0.55	5.00			
PANTONE 582 C	57.07 -8.36 56.81	58.66 -7.20 53.34	1.82	5.00			
PANTONE 581 C	39.03 -3.33 34.39	40.27 -1.88 32.10	1.75	5.00			
PANTONE 393 C	91.97 -9.55 57.54	90.92 -8.48 55.99	0.95	5.00			
PANTONE 394 C	90.68 -11.92 78.41	89.35 -10.71 79.02	1.10	5.00			
PANTONE 395 C	90.14 -12.70 84.83	89.01 -11.81 83.73	0.85	5.00			
PANTONE 396 C	86.90 -15.13 98.87	86.21 -16.06 97.81	0.71	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 397 C	73.56 -10.39 85.44	73.20 -9.61 85.96	0.53	5.00			
PANTONE 398 C	66.46 -7.72 74.95	65.83 -7.28 74.56	0.57	5.00			
PANTONE 399 C	60.22 -4.32 68.71	59.46 -3.24 68.92	0.93	5.00			
PANTONE 3935 C	91.54 -8.50 67.10	90.86 -7.85 66.20	0.58	5.00			
PANTONE 3945 C	90.03 -8.99 92.23	88.78 -8.98 89.44	0.97	5.00			
PANTONE 3955 C	88.10 -8.34 103.98	88.03 -7.90 105.54	0.39	5.00			
PANTONE 3965 C	87.10 -7.53 103.31	86.46 -5.32 105.31	1.27	5.00			
PANTONE 3975 C	68.45 -2.35 79.54	67.72 -1.01 79.48	0.96	5.00			
PANTONE 3985 C	56.67 -0.71 60.95	56.82 -0.09 61.49	0.44	5.00			
PANTONE 3995 C	39.51 -0.23 35.29	40.73 1.04 32.85	1.77	5.00			
PANTONE 600 C	92.10 -5.51 38.70	91.22 -5.58 38.42	0.56	5.00			
PANTONE 601 C	91.50 -6.00 43.55	90.63 -6.27 43.60	0.57	5.00			
PANTONE 602 C	90.92 -6.71 53.01	89.97 -6.10 51.75	0.77	5.00			
PANTONE 603 C	88.47 -6.97 70.57	88.63 -6.27 69.61	0.45	5.00			
PANTONE 604 C	86.57 -6.38 80.38	86.79 -6.69 81.57	0.32	5.00			
PANTONE 605 C	82.14 -4.64 88.20	82.92 -6.22 83.21	1.53	5.00			
PANTONE 606 C	74.31 -1.11 88.41	74.01 0.34 88.81	0.83	5.00			
PANTONE 607 C	90.01 -5.01 36.95	89.81 -5.50 36.46	0.45	5.00			
PANTONE 608 C	88.73 -5.82 44.93	88.54 -5.74 44.23	0.26	5.00			
PANTONE 609 C	87.52 -6.20 50.78	87.56 -6.04 50.18	0.20	5.00			
PANTONE 610 C	84.47 -6.28 62.37	84.42 -5.61 61.29	0.46	5.00			
PANTONE 611 C	79.92 -5.55 73.76	79.69 -4.50 73.36	0.63	5.00			
PANTONE 612 C	71.97 -3.01 79.93	72.42 -3.86 76.28	1.04	5.00			
PANTONE 613 C	64.66 -0.43 75.35	64.29 0.63 75.23	0.70	5.00			
PANTONE 461 C	88.48 -3.50 36.39	88.29 -4.38 36.74	0.66	5.00			
PANTONE 460 C	85.70 -3.29 45.10	85.62 -3.13 42.96	0.72	5.00			
PANTONE 459 C	82.29 -2.73 54.00	82.35 -2.23 53.68	0.34	5.00			
PANTONE 458 C	80.10 -2.37 56.97	79.72 -1.18 55.17	0.94	5.00			
PANTONE 457 C	65.95 1.98 64.54	65.70 2.13 61.19	0.91	5.00			
PANTONE 456 C	59.59 0.81 52.95	60.27 0.90 50.84	0.87	5.00			
PANTONE 455 C	39.23 1.53 33.04	40.28 3.09 30.33	2.00	5.00			
PANTONE 614 C	84.90 -3.71 29.92	85.13 -3.68 30.66	0.35	5.00			
PANTONE 615 C	82.44 -3.92 33.30	82.50 -3.72 33.27	0.16	5.00			
PANTONE 616 C	80.08 -3.94 35.60	79.57 -3.71 35.95	0.43	5.00			
PANTONE 617 C	73.44 -3.93 43.66	73.18 -3.37 41.38	0.86	5.00			
PANTONE 618 C	65.11 -3.21 51.01	65.41 -2.29 51.09	0.66	5.00			
PANTONE 619 C	60.05 -2.53 53.16	61.32 -2.22 51.58	1.22	5.00			
PANTONE 620 C	51.76 -1.11 50.74	53.90 0.95 47.43	2.73	5.00			
PANTONE 7751 C	74.31 -0.76 55.06	73.55 -0.08 54.63	0.73	5.00			
PANTONE 7752 C	73.05 2.69 68.62	73.09 2.34 67.22	0.40	5.00			
PANTONE 7753 C	67.65 4.20 64.83	67.97 3.87 62.34	0.70	5.00			
PANTONE 7754 C	57.20 3.63 50.88	57.77 3.75 48.98	0.80	5.00			
PANTONE 7755 C	50.55 1.72 40.30	51.37 3.15 38.33	1.57	5.00			
PANTONE 7756 C	43.73 0.43 29.41	44.42 0.36 27.99	0.90	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7757 C	39.94 -0.17 25.69	40.80 1.31 23.98	1.80	5.00			
PANTONE 7758 C	78.44 -4.74 77.74	78.43 -3.93 75.58	0.63	5.00			
PANTONE 7759 C	72.44 -3.64 75.08	72.93 -4.19 69.84	1.36	5.00			
PANTONE 7760 C	55.32 -2.13 46.94	56.82 -1.11 45.65	1.61	5.00			
PANTONE 7761 C	47.07 -4.69 32.54	47.98 -3.59 30.75	1.37	5.00			
PANTONE 7762 C	40.76 -7.76 22.93	41.42 -7.09 22.09	0.85	5.00			
PANTONE 7763 C	37.92 -5.39 18.22	38.36 -4.26 18.29	1.23	5.00			
PANTONE 7764 C	35.08 -4.13 17.70	35.58 -2.71 16.48	1.64	5.00			
PANTONE 7765 C	71.85 -7.52 66.54	71.76 -7.17 65.10	0.39	5.00			
PANTONE 7766 C	68.62 -5.72 64.60	68.92 -5.56 61.80	0.77	5.00			
PANTONE 7767 C	64.39 -3.79 55.65	64.45 -2.49 54.92	0.85	5.00			
PANTONE 7768 C	53.44 -0.66 41.34	53.81 1.17 40.36	1.43	5.00			
PANTONE 7769 C	41.96 1.90 27.87	42.73 2.19 26.94	0.87	5.00			
PANTONE 7770 C	38.26 0.44 20.65	39.37 1.30 20.95	1.33	5.00			
PANTONE 7771 C	31.21 -1.18 13.97	31.02 -0.17 12.68	1.49	5.00			
PANTONE 4545 C	81.60 -0.57 22.94	81.37 -0.13 22.36	0.55	5.00			
PANTONE 4535 C	79.11 -0.68 26.01	78.89 -0.47 24.76	0.63	5.00			
PANTONE 4525 C	74.81 -0.03 28.50	74.67 -0.10 28.60	0.12	5.00			
PANTONE 4515 C	67.51 0.73 32.42	67.31 0.45 31.70	0.40	5.00			
PANTONE 4505 C	56.48 2.32 38.29	56.20 3.34 38.65	0.81	5.00			
PANTONE 4495 C	50.97 3.16 39.79	51.91 4.27 38.91	1.31	5.00			
PANTONE 4485 C	35.00 4.50 27.46	36.09 6.00 26.66	1.70	5.00			
PANTONE 2323 C	72.54 -0.31 13.81	73.32 0.52 13.68	1.21	5.00			
PANTONE 2324 C	67.69 2.02 18.10	67.88 2.12 17.39	0.46	5.00			
PANTONE 2325 C	60.84 2.63 17.70	61.23 3.18 17.30	0.79	5.00			
PANTONE 2326 C	52.96 2.56 18.70	53.28 2.34 18.16	0.48	5.00			
PANTONE 2327 C	51.24 0.12 19.49	51.47 -0.16 19.98	0.46	5.00			
PANTONE 2328 C	44.75 3.25 20.52	44.72 4.07 21.10	0.84	5.00			
PANTONE 2329 C	38.83 3.05 19.18	39.33 4.18 19.19	1.31	5.00			
PANTONE 454 C	79.77 -1.48 16.09	79.82 -1.76 14.92	0.80	5.00			
PANTONE 453 C	75.52 -1.42 18.06	75.55 -1.07 17.59	0.46	5.00			
PANTONE 452 C	69.15 -1.49 23.12	69.55 -0.99 21.97	0.80	5.00			
PANTONE 451 C	60.94 -1.42 28.55	61.60 -0.76 27.91	0.84	5.00			
PANTONE 450 C	32.45 4.26 23.86	33.35 5.64 21.87	2.01	5.00			
PANTONE 449 C	30.52 2.88 20.60	31.05 3.38 18.60	1.37	5.00			
PANTONE 448 C	28.21 2.09 15.71	28.65 3.54 14.13	2.21	5.00			
PANTONE 7499 C	91.13 -1.09 26.48	90.80 -1.05 25.80	0.38	5.00			
PANTONE 7500 C	84.26 0.98 22.80	84.15 1.28 22.91	0.31	5.00			
PANTONE 7501 C	81.22 2.27 23.41	80.98 2.27 23.18	0.20	5.00			
PANTONE 7502 C	75.93 3.81 27.64	75.58 3.98 26.93	0.46	5.00			
PANTONE 7503 C	63.71 1.80 27.78	64.06 1.99 26.97	0.51	5.00			
PANTONE 7504 C	52.89 8.95 19.36	53.78 9.17 20.61	1.10	5.00			
PANTONE 7505 C	43.94 11.34 24.31	44.15 10.65 24.82	0.75	5.00			
PANTONE 468 C	82.48 3.20 21.79	82.10 3.41 21.47	0.39	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 467 C	77.45 5.23 26.78	76.98 5.86 26.16	0.77	5.00			
PANTONE 466 C	71.22 7.22 30.48	70.87 6.80 30.18	0.42	5.00			
PANTONE 465 C	64.79 9.72 36.34	64.61 10.06 36.04	0.35	5.00			
PANTONE 464 C	43.68 18.93 36.61	44.98 19.40 34.58	1.68	5.00			
PANTONE 463 C	37.27 14.68 29.24	37.82 15.54 28.18	1.12	5.00			
PANTONE 462 C	31.84 8.17 20.16	33.02 8.09 19.32	1.04	5.00			
PANTONE 7506 C	88.50 3.73 22.82	88.29 3.39 22.35	0.39	5.00			
PANTONE 7507 C	87.17 10.29 34.32	86.13 9.39 32.99	0.98	5.00			
PANTONE 7508 C	77.65 10.43 35.16	77.64 10.87 34.96	0.37	5.00			
PANTONE 7509 C	71.33 14.14 42.40	71.16 13.63 41.58	0.38	5.00			
PANTONE 7510 C	62.74 19.33 48.97	62.02 19.65 49.16	0.64	5.00			
PANTONE 7511 C	56.55 21.65 51.77	57.46 21.20 50.98	0.88	5.00			
PANTONE 7512 C	49.43 24.36 50.26	51.19 24.17 47.94	1.95	5.00			
PANTONE 719 C	83.27 9.98 23.99	83.22 9.58 23.25	0.41	5.00			
PANTONE 720 C	78.27 13.83 30.18	77.92 14.00 30.45	0.28	5.00			
PANTONE 721 C	72.34 17.78 36.72	71.92 17.34 35.29	0.64	5.00			
PANTONE 722 C	61.41 23.50 46.30	60.77 23.31 46.59	0.60	5.00			
PANTONE 723 C	52.71 26.48 50.73	53.98 25.93 49.25	1.32	5.00			
PANTONE 724 C	41.41 27.47 46.49	41.66 27.41 45.84	0.34	5.00			
PANTONE 725 C	34.91 25.17 37.34	35.94 25.64 35.66	1.33	5.00			
PANTONE 475 C	85.98 10.33 19.24	85.86 9.50 18.40	0.72	5.00			
PANTONE 474 C	83.51 13.06 22.44	83.03 13.38 21.97	0.56	5.00			
PANTONE 473 C	81.38 15.53 25.67	80.70 15.40 24.60	0.72	5.00			
PANTONE 472 C	71.86 24.41 37.23	71.61 24.92 36.15	0.78	5.00			
PANTONE 471 C	51.71 34.13 49.40	52.62 32.88 48.12	1.03	5.00			
PANTONE 470 C	47.20 28.68 41.43	47.58 29.16 40.32	0.82	5.00			
PANTONE 469 C	31.61 17.44 25.24	31.86 18.25 24.71	0.79	5.00			
PANTONE 726 C	80.23 8.44 21.80	79.35 9.02 22.57	0.81	5.00			
PANTONE 727 C	76.10 10.56 24.61	76.02 10.33 24.14	0.25	5.00			
PANTONE 728 C	69.80 13.20 29.04	69.63 13.87 29.32	0.47	5.00			
PANTONE 729 C	58.87 17.05 35.31	59.43 17.23 34.85	0.58	5.00			
PANTONE 730 C	48.94 19.97 41.22	50.01 20.44 39.79	1.35	5.00			
PANTONE 731 C	34.46 21.05 38.00	34.88 21.80 37.18	0.84	5.00			
PANTONE 732 C	27.88 19.38 30.73	28.47 19.73 30.17	0.64	5.00			
PANTONE 2316 C	66.38 10.41 22.59	66.24 10.92 21.99	0.67	5.00			
PANTONE 2317 C	60.27 14.16 29.86	60.69 14.29 29.86	0.38	5.00			
PANTONE 2318 C	53.49 15.71 32.44	53.59 15.76 32.64	0.13	5.00			
PANTONE 2319 C	44.14 17.02 33.92	45.07 17.56 32.86	1.17	5.00			
PANTONE 2320 C	34.81 16.52 29.49	35.82 17.79 26.89	2.16	5.00			
PANTONE 2321 C	37.48 10.65 20.75	38.18 10.98 20.98	0.65	5.00			
PANTONE 2322 C	25.04 9.73 15.75	25.49 10.63 14.59	1.43	5.00			
PANTONE 2309 C	84.46 6.63 15.76	84.38 6.36 15.12	0.42	5.00			
PANTONE 2310 C	79.55 6.54 15.12	79.23 6.80 13.99	0.92	5.00			
PANTONE 2311 C	71.62 10.81 23.25	71.17 11.15 21.95	0.96	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2312 C	66.06 8.21 17.83	66.03 8.36 16.74	0.76	5.00			
PANTONE 2313 C	65.11 14.75 31.29	65.25 14.90 32.49	0.54	5.00			
PANTONE 2314 C	55.02 17.85 36.91	54.33 18.47 37.92	0.78	5.00			
PANTONE 2315 C	40.28 29.04 45.75	40.19 28.76 45.31	0.17	5.00			
PANTONE 4685 C	81.65 7.08 15.97	80.70 7.52 15.79	0.83	5.00			
PANTONE 4675 C	79.63 8.18 16.82	78.57 8.09 16.43	0.77	5.00			
PANTONE 4665 C	71.67 11.37 22.07	71.78 11.43 22.34	0.16	5.00			
PANTONE 4655 C	65.02 14.16 23.79	65.69 14.21 23.60	0.56	5.00			
PANTONE 4645 C	56.84 16.76 27.96	56.26 16.82 27.90	0.54	5.00			
PANTONE 4635 C	46.33 19.54 32.73	46.58 19.96 32.40	0.47	5.00			
PANTONE 4625 C	22.61 15.55 17.29	23.23 15.43 16.09	0.88	5.00			
PANTONE 7513 C	78.20 14.04 14.62	78.04 14.02 13.75	0.62	5.00			
PANTONE 7514 C	71.24 17.11 22.84	71.08 17.55 22.23	0.60	5.00			
PANTONE 7515 C	63.52 20.36 28.51	63.65 19.80 28.85	0.51	5.00			
PANTONE 7516 C	44.24 26.97 37.43	44.97 26.68 36.18	0.87	5.00			
PANTONE 7517 C	37.09 27.74 35.60	38.03 27.68 33.45	1.34	5.00			
PANTONE 7518 C	36.89 12.67 10.02	37.15 13.11 11.35	0.93	5.00			
PANTONE 7519 C	33.72 6.87 12.11	33.72 6.42 13.84	1.46	5.00			
PANTONE 4755 C	80.49 6.60 8.80	80.39 6.63 8.61	0.18	5.00			
PANTONE 4745 C	75.63 8.49 10.42	75.52 8.74 9.91	0.54	5.00			
PANTONE 4735 C	69.30 10.41 13.06	69.13 11.03 11.73	1.31	5.00			
PANTONE 4725 C	60.79 13.64 14.62	61.18 13.41 14.19	0.43	5.00			
PANTONE 4715 C	49.76 16.60 18.20	50.30 16.82 18.89	0.67	5.00			
PANTONE 4705 C	38.35 20.58 20.10	38.25 20.91 21.16	0.59	5.00			
PANTONE 4695 C	26.73 18.26 16.35	27.35 17.91 16.39	0.53	5.00			
PANTONE 482 C	81.81 6.08 11.21	81.78 5.84 10.18	0.71	5.00			
PANTONE 481 C	77.54 8.11 12.78	77.30 8.43 12.31	0.58	5.00			
PANTONE 480 C	71.56 10.28 16.19	71.31 10.58 15.95	0.43	5.00			
PANTONE 479 C	57.54 16.33 21.04	57.35 16.39 21.71	0.42	5.00			
PANTONE 478 C	32.83 23.17 22.58	33.28 23.67 22.36	0.54	5.00			
PANTONE 477 C	29.65 17.91 18.35	30.18 18.11 18.29	0.44	5.00			
PANTONE 476 C	25.46 11.00 12.98	25.92 11.87 13.23	0.81	5.00			
PANTONE 7527 C	84.31 -0.03 7.43	84.28 -0.17 7.71	0.29	5.00			
PANTONE 7528 C	76.06 2.79 8.40	76.03 3.17 7.80	0.75	5.00			
PANTONE 7529 C	70.26 3.40 9.64	70.39 3.05 9.88	0.53	5.00			
PANTONE 7530 C	62.24 4.15 11.25	62.28 4.51 10.94	0.55	5.00			
PANTONE 7531 C	45.43 5.50 13.49	45.84 6.13 14.52	0.89	5.00			
PANTONE 7532 C	35.94 6.12 14.54	36.28 6.36 17.52	1.82	5.00			
PANTONE 7533 C	24.72 5.73 12.11	25.26 6.43 11.45	1.13	5.00			
PANTONE 7534 C	82.22 0.01 8.11	82.63 -0.10 7.65	0.46	5.00			
PANTONE 7535 C	72.03 0.13 11.30	72.17 0.33 11.00	0.34	5.00			
PANTONE 7536 C	65.69 0.21 13.10	66.33 0.10 12.87	0.56	5.00			
PANTONE 7537 C	69.84 -3.16 4.54	70.11 -2.19 3.85	1.32	5.00			
PANTONE 7538 C	62.87 -3.75 4.32	63.15 -4.17 3.46	0.96	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7539 C	59.36 -1.27 3.18	59.64 -0.87 1.93	1.25	5.00			
PANTONE 7540 C	33.36 -0.62 -3.68	33.58 -0.33 -4.58	0.90	5.00			
PANTONE 427 C	84.42 -0.92 -1.14	84.35 -0.64 -1.30	0.44	5.00			
PANTONE 428 C	79.49 -1.29 -2.09	79.86 -0.96 -2.45	0.62	5.00			
PANTONE 429 C	68.96 -1.75 -3.14	69.44 -1.74 -3.98	0.82	5.00			
PANTONE 430 C	55.41 -2.55 -5.45	55.90 -2.37 -4.78	0.73	5.00			
PANTONE 431 C	42.63 -2.85 -6.98	42.52 -1.83 -7.50	1.37	5.00			
PANTONE 432 C	25.68 -2.79 -7.73	25.32 -2.98 -7.24	0.53	5.00			
PANTONE 433 C	14.26 -1.86 -6.39	15.15 -1.91 -4.19	1.88	5.00			
PANTONE 420 C	80.69 -0.41 0.43	81.46 -0.65 0.52	0.64	5.00			
PANTONE 421 C	73.13 -0.72 0.34	73.07 -0.30 -0.38	0.94	5.00			
PANTONE 422 C	66.17 -0.81 -0.68	66.31 -0.78 -1.14	0.46	5.00			
PANTONE 423 C	58.22 -0.94 -1.11	57.54 -0.87 -0.98	0.64	5.00			
PANTONE 424 C	48.03 -0.57 -0.33	48.74 -0.42 -0.56	0.77	5.00			
PANTONE 425 C	36.89 -0.94 -1.91	37.13 -1.08 -3.04	1.04	5.00			
PANTONE 426 C	15.76 -0.79 -2.30	15.99 -1.17 -1.93	0.66	5.00			
PANTONE 441 C	79.15 -3.63 -0.28	78.86 -3.38 -0.66	0.52	5.00			
PANTONE 442 C	69.55 -4.57 -1.18	69.97 -3.63 -1.72	1.29	5.00			
PANTONE 443 C	63.64 -5.22 -1.87	64.09 -4.87 -1.59	0.59	5.00			
PANTONE 444 C	51.09 -5.29 -2.37	51.06 -5.28 -3.01	0.56	5.00			
PANTONE 445 C	36.53 -4.18 -2.09	36.69 -3.58 -3.22	1.31	5.00			
PANTONE 446 C	28.51 -3.74 -0.33	28.79 -3.80 0.39	0.70	5.00			
PANTONE 447 C	23.86 -2.34 1.63	23.98 -2.37 1.94	0.30	5.00			
PANTONE 413 C	75.46 -1.33 4.70	75.26 -1.20 3.86	0.73	5.00			
PANTONE 414 C	68.96 -1.46 5.27	68.96 -1.34 5.15	0.18	5.00			
PANTONE 415 C	60.48 -2.12 5.19	60.20 -1.40 4.29	1.18	5.00			
PANTONE 416 C	52.76 -1.81 5.53	53.23 -1.72 5.82	0.54	5.00			
PANTONE 417 C	42.96 -2.09 5.43	43.19 -1.63 5.22	0.65	5.00			
PANTONE 418 C	34.86 -2.15 4.90	35.45 -1.68 5.35	0.90	5.00			
PANTONE 419 C	13.35 -1.03 0.45	13.78 -0.74 1.32	0.98	5.00			
PANTONE 2330 C	82.59 0.49 2.07	82.68 0.40 1.92	0.20	5.00			
PANTONE 2331 C	69.38 1.91 2.33	69.91 2.16 2.47	0.53	5.00			
PANTONE 2332 C	57.37 0.92 2.40	57.22 1.02 1.51	0.86	5.00			
PANTONE 2333 C	46.49 1.07 2.54	46.79 1.19 2.54	0.34	5.00			
PANTONE 2334 C	43.24 3.04 2.32	43.58 3.74 1.50	1.23	5.00			
PANTONE 2335 C	35.20 5.06 7.60	35.25 5.66 7.55	0.72	5.00			
PANTONE 2336 C	32.02 1.11 2.27	31.93 1.66 2.27	0.77	5.00			
PANTONE 400 C	77.51 1.05 4.98	77.05 1.35 5.04	0.53	5.00			
PANTONE 401 C	69.67 1.33 5.69	69.52 1.68 5.52	0.53	5.00			
PANTONE 402 C	62.55 1.62 5.86	62.27 2.58 5.65	1.36	5.00			
PANTONE 403 C	55.86 1.85 6.13	55.90 2.25 5.82	0.63	5.00			
PANTONE 404 C	47.20 2.29 6.80	47.08 2.84 6.44	0.85	5.00			
PANTONE 405 C	41.69 2.34 6.33	41.58 2.70 6.24	0.50	5.00			
PANTONE Black C	17.06 1.29 2.54	17.14 1.14 3.29	0.72	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 406 C	76.85 2.55 3.68	76.39 3.04 2.38	1.44	5.00			
PANTONE 407 C	69.48 3.49 4.18	70.14 4.04 3.91	0.91	5.00			
PANTONE 408 C	59.14 4.39 3.91	59.28 4.46 3.24	0.62	5.00			
PANTONE 409 C	51.73 4.79 4.47	51.96 4.98 5.13	0.61	5.00			
PANTONE 410 C	44.55 5.47 4.85	45.27 6.29 4.47	1.23	5.00			
PANTONE 411 C	35.80 5.76 4.36	35.94 6.19 3.85	0.70	5.00			
PANTONE 412 C	20.30 4.25 2.67	20.80 3.45 2.20	1.06	5.00			
PANTONE 434 C	80.25 4.12 1.02	80.35 4.23 -0.13	1.04	5.00			
PANTONE 435 C	74.06 5.30 0.41	74.00 5.41 -1.10	1.31	5.00			
PANTONE 436 C	64.83 6.76 0.39	65.08 7.54 -0.29	0.99	5.00			
PANTONE 437 C	44.95 8.54 1.26	45.30 9.13 0.85	0.73	5.00			
PANTONE 438 C	31.26 7.80 2.63	31.43 9.05 2.72	1.20	5.00			
PANTONE 439 C	24.29 6.26 3.09	24.88 5.60 2.82	0.84	5.00			
PANTONE 440 C	20.00 4.19 2.91	20.67 3.74 1.93	1.08	5.00			
PANTONE Warm Gray 1 C	84.49 1.21 4.00	84.33 1.72 4.10	0.71	5.00			
PANTONE Warm Gray 2 C	79.65 1.67 4.70	79.20 1.71 4.66	0.32	5.00			
PANTONE Warm Gray 3 C	75.10 2.02 5.08	74.84 2.21 4.43	0.68	5.00			
PANTONE Warm Gray 4 C	71.44 2.30 5.36	71.75 2.67 5.13	0.60	5.00			
PANTONE Warm Gray 5 C	67.60 2.58 5.51	67.43 2.32 5.63	0.40	5.00			
PANTONE Warm Gray 6 C	65.14 2.74 5.40	64.83 3.53 4.74	1.29	5.00			
PANTONE Warm Gray 7 C	58.95 3.14 5.84	59.10 3.50 5.13	0.83	5.00			
PANTONE Warm Gray 8 C	55.14 3.39 6.06	55.31 2.73 5.80	0.85	5.00			
PANTONE Warm Gray 9 C	51.26 3.65 6.22	51.59 3.80 6.40	0.39	5.00			
PANTONE Warm Gray 10 C	47.29 3.90 6.42	47.42 4.59 6.52	0.84	5.00			
PANTONE Warm Gray 11 C	42.55 4.14 6.66	42.58 4.20 6.63	0.09	5.00			
PANTONE Cool Gray 1 C	86.66 -0.05 1.05	86.34 0.26 1.75	0.83	5.00			
PANTONE Cool Gray 2 C	83.40 -0.10 0.84	82.83 -0.30 0.86	0.48	5.00			
PANTONE Cool Gray 3 C	80.83 -0.10 0.35	80.55 0.01 -0.16	0.57	5.00			
PANTONE Cool Gray 4 C	76.21 -0.14 -0.15	75.72 -0.04 -0.49	0.51	5.00			
PANTONE Cool Gray 5 C	72.63 -0.15 -0.47	72.49 -0.11 -1.13	0.65	5.00			
PANTONE Cool Gray 6 C	68.87 -0.15 -1.06	69.04 -0.04 -0.84	0.30	5.00			
PANTONE Cool Gray 7 C	63.09 -0.17 -1.44	62.86 -0.09 -1.77	0.39	5.00			
PANTONE Cool Gray 8 C	57.62 -0.15 -1.85	57.48 0.07 -1.67	0.38	5.00			
PANTONE Cool Gray 9 C	50.20 -0.18 -2.36	50.66 -0.61 -2.63	0.80	5.00			
PANTONE Cool Gray 10 C	42.91 -0.23 -2.79	43.06 0.42 -3.07	0.99	5.00			
PANTONE Cool Gray 11 C	36.38 -0.24 -3.08	36.21 -0.14 -4.25	1.02	5.00			
PANTONE Black 2 C	19.37 0.31 9.78	19.73 0.74 8.78	0.97	5.00			
PANTONE Black 3 C	14.90 -4.06 2.72	14.96 -3.22 3.32	1.19	5.00			
PANTONE Black 4 C	16.24 4.12 8.09	16.42 3.62 6.82	1.04	5.00			
PANTONE Black 5 C	19.91 10.12 1.42	20.82 9.66 1.84	0.83	5.00			
PANTONE Black 6 C	7.87 -1.87 -7.04	8.95 -4.38 -7.79	3.05	5.00			
PANTONE Black 7 C	24.22 1.28 2.89	24.43 1.41 2.33	0.58	5.00			

Reference vs Measured Patches

