

Serendipity Software Calibration Check

Calcheck Chart Pantone 1846 Colours

Measuring Instrument X-Rite i1iSis


Illumination Condition M1

Number of Patches 1846

Date Tue Feb 11 18:45:20 2025

Serendipity Score 84.44

	Δe value (tolerance)	ΔCh value (tolerance)	
Average	1.52 (≤ 2.5)	0.00 (≤ 2)	Δe ΔCh
Maximum	7.37 (≤ 5)	0.00 (≤ 3.5)	Δe ΔCh
95th Percentile	3.93 (≤ 5)		Δe
σ	1.20 (≤ 1.5)	0.00 (≤ 1.5)	Δe ΔCh

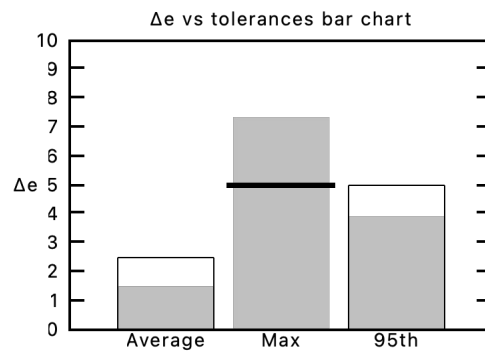

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE Yellow 012 C	87.55 2.18 109.05	86.99 1.30 106.58	0.70	5.00			
PANTONE Bright Red C	57.47 72.50 61.67	56.83 68.84 60.90	1.25	5.00			
PANTONE Pink C	51.00 72.69 -15.81	50.62 72.90 -16.14	0.40	5.00			
PANTONE Medium Purple C	20.89 50.17 -59.27	21.70 51.03 -61.78	0.99	5.00			
PANTONE Dark Blue C	20.84 29.17 -68.50	21.60 29.62 -72.74	1.67	5.00			
PANTONE 3514 C	78.97 14.42 91.77	79.11 14.03 93.28	0.44	5.00			
PANTONE 3596 C	78.42 8.77 29.47	78.61 8.44 28.34	0.52	5.00			
PANTONE 3547 C	63.97 14.86 64.47	63.99 14.42 68.69	1.30	5.00			
PANTONE 3588 C	73.11 38.26 71.91	72.79 38.14 71.59	0.25	5.00			
PANTONE 3564 C	62.05 49.49 94.11	63.85 50.12 90.50	1.98	5.00			
PANTONE 2428 C	65.53 29.12 60.96	65.26 29.03 62.35	0.56	5.00			
PANTONE 2429 C	52.82 38.70 54.92	54.07 39.16 59.60	2.08	5.00			
PANTONE 2430 C	71.16 17.38 29.70	70.91 17.37 28.24	0.78	5.00			
PANTONE 2431 C	68.32 25.00 46.54	67.97 24.94 45.51	0.49	5.00			
PANTONE 2432 C	66.83 28.83 41.77	66.57 28.57 40.87	0.40	5.00			
PANTONE 2433 C	62.74 36.09 41.04	62.46 36.45 39.99	0.69	5.00			
PANTONE 2434 C	63.43 41.43 35.32	63.27 42.06 34.48	0.68	5.00			
PANTONE 2435 C	56.67 31.71 28.58	56.63 32.56 27.39	1.01	5.00			
PANTONE 2436 C	48.81 40.39 33.90	49.73 42.53 34.50	1.24	5.00			
PANTONE 2437 C	81.75 16.15 23.66	81.70 15.64 22.91	0.40	5.00			
PANTONE 2438 C	72.83 23.26 26.24	72.97 23.03 25.25	0.52	5.00			
PANTONE 2439 C	62.30 23.95 21.65	62.20 24.83 20.22	1.25	5.00			
PANTONE 2440 C	63.92 13.58 10.07	63.99 12.95 9.81	0.48	5.00			
PANTONE 2441 C	53.05 22.46 19.52	52.92 23.11 18.54	0.91	5.00			
PANTONE 2442 C	48.12 26.88 18.99	48.11 28.29 17.71	1.35	5.00			
PANTONE 2443 C	36.85 36.38 34.09	38.95 38.98 38.70	2.54	5.00			
PANTONE 3544 C	78.05 13.12 14.50	78.19 12.47 14.04	0.51	5.00			
PANTONE 2444 C	73.40 20.53 13.44	73.46 20.33 13.34	0.12	5.00			
PANTONE 3519 C	74.36 24.61 5.74	74.50 24.37 5.51	0.20	5.00			
PANTONE 3572 C	76.43 40.02 15.84	75.26 37.51 14.84	1.27	5.00			
PANTONE 2445 C	66.49 35.43 12.68	66.46 35.58 12.37	0.22	5.00			
PANTONE 2446 C	64.19 31.22 10.40	64.01 31.54 10.31	0.23	5.00			
PANTONE 2447 C	54.73 28.15 8.34	54.32 28.74 7.31	0.88	5.00			
PANTONE 2448 C	57.87 47.68 33.92	57.93 48.37 33.22	0.59	5.00			
PANTONE 3556 C	55.36 69.72 51.60	55.17 69.01 52.42	0.58	5.00			
PANTONE 3516 C	51.23 64.53 60.03	51.77 64.81 60.91	0.61	5.00			
PANTONE 3546 C	44.62 72.62 50.96	45.70 70.05 51.18	1.39	5.00			
PANTONE 3517 C	40.42 73.69 48.54	42.77 67.33 49.69	3.28	5.00			
PANTONE 3523 C	30.22 32.18 13.75	31.19 37.42 12.94	2.56	5.00			
PANTONE 2449 C	19.60 17.83 7.05	19.37 22.32 7.84	2.65	5.00			
PANTONE 3568 C	84.73 17.24 -2.55	84.69 15.95 -2.49	0.88	5.00			
PANTONE 3595 C	82.02 23.09 -4.10	81.80 22.14 -4.04	0.54	5.00			
PANTONE 2450 C	53.60 62.85 -2.69	53.23 63.94 -4.06	0.74	5.00			
PANTONE 3527 C	53.53 65.16 -15.46	53.17 65.88 -16.61	0.57	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 3582 C	61.10 43.10 -8.92	60.85 42.92 -9.81	0.51	5.00			
PANTONE 2451 C	47.17 51.95 0.99	46.75 54.55 -0.51	1.14	5.00			
PANTONE 2452 C	47.68 60.06 3.32	47.40 62.07 1.72	0.97	5.00			
PANTONE 2453 C	66.76 19.73 -17.86	67.18 18.99 -17.05	0.62	5.00			
PANTONE 3520 C	59.80 32.14 -28.67	59.93 31.79 -28.07	0.29	5.00			
PANTONE 3559 C	45.06 37.78 -35.65	44.61 37.92 -36.42	0.55	5.00			
PANTONE 3593 C	53.64 28.57 -30.70	53.03 28.49 -31.07	0.64	5.00			
PANTONE 3575 C	54.53 27.18 -37.01	54.17 26.22 -37.26	0.73	5.00			
PANTONE 3543 C	62.96 19.38 -31.53	63.19 18.55 -31.20	0.47	5.00			
PANTONE 3515 C	23.50 50.47 -43.95	24.39 54.09 -46.72	1.28	5.00			
PANTONE 3558 C	65.09 5.51 -30.20	65.33 4.51 -29.95	0.72	5.00			
PANTONE 3555 C	24.43 35.30 -40.80	24.88 38.84 -46.88	2.20	5.00			
PANTONE 3583 C	24.76 37.97 -46.77	24.96 40.52 -51.69	1.67	5.00			
PANTONE 3574 C	34.02 20.16 -29.80	34.16 18.75 -32.96	2.58	5.00			
PANTONE 3566 C	24.48 26.47 -37.27	24.11 28.34 -44.19	3.03	5.00			
PANTONE 3535 C	18.89 43.34 -57.55	19.59 45.99 -62.83	1.65	5.00			
PANTONE 3542 C	17.70 34.07 -53.78	17.77 37.27 -62.71	2.98	5.00			
PANTONE 3506 C	40.02 0.09 -48.64	39.48 -3.27 -50.88	2.75	5.00			
PANTONE 3590 C	37.74 7.61 -44.02	37.50 5.29 -46.51	2.61	5.00			
PANTONE 3584 C	27.56 10.23 -40.15	27.39 7.96 -46.71	4.56	5.00			
PANTONE 3591 C	18.54 18.98 -53.93	19.38 19.97 -61.48	2.94	5.00			
PANTONE 3597 C	23.89 7.76 -39.33	22.94 6.42 -47.76	4.63	5.00			
PANTONE 3581 C	22.37 9.87 -37.77	21.50 8.70 -46.65	5.06	5.00			
PANTONE 3524 C	18.81 11.61 -24.12	18.43 12.63 -31.96	4.45	5.00			
PANTONE 3577 C	72.84 -10.09 -23.78	72.89 -10.61 -23.72	0.37	5.00			
PANTONE 3545 C	68.66 -34.86 -32.96	68.45 -35.43 -33.19	0.27	5.00			
PANTONE 3551 C	57.68 -54.51 -36.85	56.74 -54.26 -36.11	0.89	5.00			
PANTONE 3538 C	54.66 -28.57 -48.22	54.13 -31.05 -48.53	1.11	5.00			
PANTONE 3553 C	39.88 -25.09 -52.34	39.97 -26.83 -52.15	0.77	5.00			
PANTONE 2454 C	48.46 -16.98 -27.96	48.14 -20.43 -27.49	1.96	5.00			
PANTONE 3526 C	59.09 -7.07 -8.29	59.24 -8.28 -7.61	1.41	5.00			
PANTONE 2455 C	73.09 -15.99 -1.02	73.51 -17.18 0.32	1.34	5.00			
PANTONE 3533 C	79.80 -37.80 -3.18	79.36 -36.79 -3.31	0.50	5.00			
PANTONE 3534 C	61.21 -64.83 -10.84	60.88 -65.44 -10.56	0.37	5.00			
PANTONE 2456 C	57.44 -34.65 -1.62	57.29 -36.08 -0.96	0.73	5.00			
PANTONE 3560 C	56.82 -60.80 -10.48	56.92 -63.41 -9.43	1.00	5.00			
PANTONE 3557 C	44.01 -45.36 -16.19	44.68 -53.39 -16.86	2.65	5.00			
PANTONE 3541 C	50.00 -61.60 -24.73	49.55 -64.30 -24.81	0.89	5.00			
PANTONE 2457 C	66.74 -13.41 4.41	67.17 -13.87 6.60	1.59	5.00			
PANTONE 2458 C	58.71 -20.42 5.71	58.50 -21.10 6.63	0.70	5.00			
PANTONE 2459 C	65.13 -33.46 4.81	65.14 -33.77 5.92	0.69	5.00			
PANTONE 2460 C	66.40 -23.52 -5.93	66.41 -24.57 -4.06	1.52	5.00			
PANTONE 2461 C	55.17 -32.09 -8.68	54.75 -34.59 -7.47	1.51	5.00			
PANTONE 2462 C	54.61 -19.43 -1.84	54.58 -20.91 -0.81	1.18	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2463 C	47.15 -10.71 -0.98	47.39 -12.46 -1.77	1.57	5.00			
PANTONE 2464 C	70.44 -33.71 30.51	70.64 -34.11 30.35	0.26	5.00			
PANTONE 2465 C	40.52 -36.11 26.09	42.30 -43.93 28.64	3.17	5.00			
PANTONE 3522 C	46.88 -69.12 31.98	47.66 -74.88 33.41	1.55	5.00			
PANTONE 3536 C	39.35 -78.11 18.91	40.10 -83.96 19.34	1.44	5.00			
PANTONE 3500 C	37.55 -57.90 19.92	38.99 -66.55 20.09	2.69	5.00			
PANTONE 3537 C	24.80 -39.08 16.30	26.48 -48.48 18.05	3.40	5.00			
PANTONE 2466 C	31.20 -15.23 -3.13	31.62 -18.91 -6.90	3.40	5.00			
PANTONE 3570 C	80.34 -30.24 91.70	80.68 -29.31 92.63	0.59	5.00			
PANTONE 3507 C	78.63 -27.85 83.10	79.06 -27.53 82.99	0.33	5.00			
PANTONE 3561 C	71.43 -44.26 74.01	71.65 -44.96 73.84	0.33	5.00			
PANTONE 3501 C	62.72 -49.43 60.23	63.35 -50.19 62.92	0.89	5.00			
PANTONE 3529 C	59.68 -54.59 50.41	60.36 -55.33 54.42	1.34	5.00			
PANTONE 3539 C	56.08 -44.80 44.41	56.35 -46.71 48.50	1.29	5.00			
PANTONE 3508 C	47.35 -19.18 35.03	47.54 -22.97 38.96	1.99	5.00			
PANTONE 3599 C	79.65 3.70 32.72	79.17 3.54 30.31	1.05	5.00			
PANTONE 2467 C	63.58 11.85 25.72	63.65 11.94 25.40	0.22	5.00			
PANTONE 2468 C	49.41 17.64 24.29	49.87 18.71 24.43	0.84	5.00			
PANTONE 2469 C	43.78 21.69 27.77	44.65 23.77 31.14	1.71	5.00			
PANTONE 2470 C	55.47 8.05 20.05	55.60 8.41 20.85	0.47	5.00			
PANTONE 2471 C	59.39 10.02 13.96	59.30 9.78 14.54	0.55	5.00			
PANTONE 2472 C	30.55 13.13 19.86	32.81 13.53 23.33	2.62	5.00			
PANTONE 2473 C	75.90 5.64 -0.99	75.85 5.78 -0.79	0.23	5.00			
PANTONE 2474 C	67.45 5.18 6.59	67.53 4.51 7.92	1.50	5.00			
PANTONE 2475 C	58.60 10.41 7.70	58.58 10.71 8.13	0.36	5.00			
PANTONE 2476 C	47.65 10.12 4.29	47.86 9.85 4.06	0.35	5.00			
PANTONE 2477 C	40.07 10.24 6.62	40.98 11.05 6.23	1.17	5.00			
PANTONE 2478 C	25.27 11.49 1.25	25.02 11.79 -1.49	2.07	5.00			
PANTONE 2479 C	22.75 4.40 4.99	21.41 1.89 3.08	3.47	5.00			
PANTONE 100 C	92.05 -7.57 65.76	91.19 -7.68 64.83	0.59	5.00			
PANTONE 101 C	91.76 -7.52 75.11	90.59 -8.01 75.24	0.77	5.00			
PANTONE 102 C	90.24 -4.88 106.28	89.11 -4.48 108.15	0.81	5.00			
PANTONE Yellow C	88.98 -1.32 110.86	87.92 -2.65 107.26	1.14	5.00			
PANTONE 103 C	70.15 0.45 83.72	70.84 -0.07 85.94	0.77	5.00			
PANTONE 104 C	63.55 -0.30 70.66	64.25 -0.96 73.93	1.04	5.00			
PANTONE 105 C	51.58 -0.75 45.49	51.94 -1.44 51.37	1.92	5.00			
PANTONE 7401 C	90.20 1.55 32.20	89.61 0.87 31.14	0.78	5.00			
PANTONE 7402 C	87.03 1.42 34.31	87.11 1.50 33.18	0.46	5.00			
PANTONE 7403 C	85.90 2.77 43.04	86.12 2.74 41.31	0.61	5.00			
PANTONE 7404 C	87.53 -0.92 73.84	87.30 -1.30 72.93	0.35	5.00			
PANTONE 7405 C	83.84 2.32 89.62	84.11 1.91 87.87	0.44	5.00			
PANTONE 7406 C	81.45 6.79 88.59	81.72 6.47 87.78	0.28	5.00			
PANTONE 7407 C	68.94 11.13 46.49	68.64 10.59 46.67	0.47	5.00			
PANTONE 2001 C	91.25 -0.27 38.46	90.53 -1.32 37.58	0.96	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2002 C	90.26 -0.08 51.27	89.42 -1.25 50.60	0.98	5.00			
PANTONE 2003 C	90.25 -1.57 61.49	89.26 -2.70 60.88	0.97	5.00			
PANTONE 2004 C	89.28 2.76 51.83	88.56 1.43 51.04	1.03	5.00			
PANTONE 2005 C	88.32 6.51 47.96	87.66 4.57 46.35	1.43	5.00			
PANTONE 2006 C	79.26 9.66 60.43	79.41 9.12 59.76	0.36	5.00			
PANTONE 2007 C	72.31 15.73 68.38	72.47 15.05 69.47	0.61	5.00			
PANTONE 106 C	90.66 -4.13 74.70	89.40 -5.10 74.52	0.97	5.00			
PANTONE 107 C	89.83 -2.48 84.13	88.47 -3.37 83.97	0.99	5.00			
PANTONE 108 C	88.45 0.61 94.50	87.39 -0.51 94.74	0.90	5.00			
PANTONE 109 C	86.28 5.99 98.55	85.43 4.68 101.47	1.08	5.00			
PANTONE 110 C	72.59 9.31 88.88	72.77 9.20 90.13	0.31	5.00			
PANTONE 111 C	59.30 4.68 68.12	60.52 4.50 73.35	1.67	5.00			
PANTONE 112 C	56.17 2.48 57.20	57.30 2.23 64.12	2.15	5.00			
PANTONE 113 C	89.72 -1.34 69.51	88.77 -2.34 68.28	0.92	5.00			
PANTONE 114 C	89.06 -0.10 75.68	88.34 -0.96 74.95	0.70	5.00			
PANTONE 115 C	88.18 1.57 82.45	87.22 0.62 81.86	0.83	5.00			
PANTONE 116 C	85.45 8.24 89.47	84.80 6.68 88.41	0.95	5.00			
PANTONE 117 C	66.18 11.95 78.62	66.73 11.88 81.77	0.86	5.00			
PANTONE 118 C	58.13 8.99 66.31	59.54 8.64 70.66	1.73	5.00			
PANTONE 119 C	49.67 2.40 45.84	50.27 1.86 52.15	2.13	5.00			
PANTONE 127 C	88.32 -0.85 56.69	88.08 -1.08 55.90	0.31	5.00			
PANTONE 128 C	86.15 1.92 67.54	85.94 1.76 65.40	0.56	5.00			
PANTONE 129 C	84.82 3.87 71.92	84.35 3.57 69.85	0.60	5.00			
PANTONE 130 C	75.32 22.12 82.89	74.86 21.89 82.55	0.35	5.00			
PANTONE 131 C	63.49 20.97 73.25	64.50 21.14 77.52	1.38	5.00			
PANTONE 132 C	52.56 12.81 59.35	54.84 13.50 66.60	2.93	5.00			
PANTONE 133 C	38.44 4.63 36.45	40.49 3.94 43.42	3.21	5.00			
PANTONE 1205 C	89.97 1.42 43.29	89.44 0.29 42.63	0.90	5.00			
PANTONE 1215 C	88.03 4.52 54.25	87.32 3.13 54.26	1.04	5.00			
PANTONE 1225 C	84.38 12.11 69.89	83.74 11.10 68.82	0.72	5.00			
PANTONE 1235 C	80.67 20.69 79.10	80.10 19.85 80.36	0.79	5.00			
PANTONE 1245 C	64.75 13.91 65.77	65.00 13.61 70.83	1.45	5.00			
PANTONE 1255 C	58.30 9.86 56.35	58.85 10.40 62.62	1.79	5.00			
PANTONE 1265 C	47.49 6.85 42.31	48.82 6.26 49.84	2.96	5.00			
PANTONE 120 C	88.57 2.65 61.09	87.76 1.48 61.07	0.91	5.00			
PANTONE 121 C	87.81 4.15 66.12	86.99 2.90 65.31	0.95	5.00			
PANTONE 122 C	86.43 7.03 73.18	85.70 5.85 73.00	0.85	5.00			
PANTONE 123 C	84.11 12.65 77.81	83.27 11.63 78.76	0.90	5.00			
PANTONE 124 C	74.63 16.68 80.98	74.88 15.97 82.48	0.66	5.00			
PANTONE 125 C	59.32 13.03 65.69	60.75 13.07 71.41	1.96	5.00			
PANTONE 126 C	52.38 8.80 54.67	54.17 9.35 62.23	2.73	5.00			
PANTONE 7548 C	84.19 12.84 103.39	83.33 11.61 103.43	0.86	5.00			
PANTONE 7549 C	79.81 19.38 94.82	79.73 18.36 97.82	0.99	5.00			
PANTONE 7550 C	65.44 18.69 77.45	66.51 18.28 80.56	1.25	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7551 C	57.55 15.43 65.01	59.34 16.07 71.12	2.23	5.00			
PANTONE 7552 C	38.29 9.62 36.21	40.42 8.70 44.16	3.79	5.00			
PANTONE 7553 C	31.23 6.27 24.66	34.06 4.80 30.33	3.92	5.00			
PANTONE 7554 C	27.02 4.04 14.02	27.58 2.40 15.47	2.40	5.00			
PANTONE 7555 C	69.19 12.26 69.74	69.41 11.52 72.72	1.02	5.00			
PANTONE 7556 C	61.29 10.48 59.07	61.45 10.50 64.72	1.58	5.00			
PANTONE 7557 C	54.73 7.83 50.95	55.36 8.23 57.40	1.99	5.00			
PANTONE 7558 C	50.78 9.90 45.91	51.94 9.85 53.03	2.63	5.00			
PANTONE 7559 C	47.97 10.99 41.04	49.23 11.11 47.62	2.66	5.00			
PANTONE 7560 C	43.84 7.00 33.69	44.54 6.64 39.58	2.49	5.00			
PANTONE 7561 C	40.20 2.47 25.34	40.59 1.43 28.71	1.89	5.00			
PANTONE 134 C	86.67 8.31 54.63	86.23 7.08 54.36	0.86	5.00			
PANTONE 135 C	84.01 13.73 61.75	83.51 12.56 61.46	0.79	5.00			
PANTONE 136 C	82.39 17.31 70.65	82.01 16.07 69.45	0.72	5.00			
PANTONE 137 C	76.47 31.14 81.64	76.10 30.47 83.09	0.73	5.00			
PANTONE 138 C	62.73 35.09 76.83	63.88 34.77 81.64	1.81	5.00			
PANTONE 139 C	52.90 22.72 59.25	55.04 23.51 66.81	3.00	5.00			
PANTONE 140 C	38.34 10.44 36.60	40.21 9.56 44.05	3.53	5.00			
PANTONE 2008 C	80.82 12.81 46.98	80.92 12.46 45.09	0.62	5.00			
PANTONE 2009 C	78.47 16.66 50.79	78.73 16.11 48.64	0.69	5.00			
PANTONE 2010 C	79.03 27.33 99.92	78.05 25.98 101.17	1.11	5.00			
PANTONE 2011 C	71.74 28.51 63.62	71.95 28.21 64.35	0.41	5.00			
PANTONE 2012 C	70.78 30.43 77.96	71.12 30.00 79.94	0.77	5.00			
PANTONE 2013 C	74.80 38.20 95.40	74.05 37.89 98.31	1.00	5.00			
PANTONE 2014 C	54.94 25.49 67.42	57.27 26.03 73.23	2.68	5.00			
PANTONE 1345 C	86.45 10.40 42.93	86.04 9.26 41.79	0.82	5.00			
PANTONE 1355 C	84.01 15.15 51.74	83.72 13.99 49.33	0.86	5.00			
PANTONE 1365 C	80.27 23.11 64.72	79.93 22.22 63.86	0.50	5.00			
PANTONE 1375 C	75.28 34.27 75.94	74.84 33.52 75.08	0.44	5.00			
PANTONE 1385 C	60.79 33.29 68.93	61.73 33.38 74.39	1.89	5.00			
PANTONE 1395 C	46.60 20.52 48.44	48.57 21.01 56.55	3.37	5.00			
PANTONE 1405 C	35.60 12.07 32.75	37.90 11.21 39.42	3.68	5.00			
PANTONE 141 C	82.83 8.73 58.10	83.34 8.21 57.43	0.48	5.00			
PANTONE 142 C	80.44 12.47 64.06	80.89 12.19 63.35	0.38	5.00			
PANTONE 143 C	77.88 16.81 69.01	78.32 16.03 67.87	0.54	5.00			
PANTONE 144 C	68.11 35.37 76.02	68.52 35.19 78.15	0.78	5.00			
PANTONE 145 C	61.42 28.59 68.64	62.31 28.91 73.63	1.61	5.00			
PANTONE 146 C	51.62 20.82 54.63	53.79 22.02 62.90	3.21	5.00			
PANTONE 147 C	40.50 5.31 31.67	41.17 3.87 37.23	2.74	5.00			
PANTONE 7408 C	80.68 12.43 83.36	81.02 12.13 84.47	0.41	5.00			
PANTONE 7409 C	77.58 16.52 73.82	77.93 15.99 74.04	0.42	5.00			
PANTONE 7410 C	78.50 26.45 41.50	78.58 26.01 40.56	0.34	5.00			
PANTONE 7411 C	73.59 21.15 47.10	74.08 20.44 46.23	0.53	5.00			
PANTONE 7412 C	62.77 27.90 54.51	62.89 27.77 57.42	1.13	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7413 C	64.84 32.27 57.13	64.93 32.05 59.42	0.94	5.00			
PANTONE 7414 C	55.37 30.83 58.04	56.99 31.25 64.56	2.63	5.00			
PANTONE 7562 C	66.47 7.66 36.17	66.60 7.76 36.98	0.32	5.00			
PANTONE 7563 C	68.74 16.75 62.77	68.92 16.00 64.71	0.89	5.00			
PANTONE 7564 C	65.51 26.69 70.40	66.12 26.20 74.06	1.35	5.00			
PANTONE 7565 C	59.98 29.29 58.04	60.73 29.19 62.61	1.77	5.00			
PANTONE 7566 C	50.89 28.39 40.98	51.80 29.66 45.18	1.78	5.00			
PANTONE 7567 C	41.62 21.43 30.94	42.82 23.28 36.06	2.37	5.00			
PANTONE 7568 C	38.43 15.30 23.33	39.14 16.20 26.13	1.49	5.00			
PANTONE 7569 C	64.56 26.97 61.61	64.77 26.84 64.35	0.97	5.00			
PANTONE 7570 C	63.00 28.47 57.90	63.33 28.08 60.70	1.18	5.00			
PANTONE 7571 C	59.89 25.57 52.20	60.40 25.30 56.46	1.73	5.00			
PANTONE 7572 C	55.10 24.86 45.81	55.86 25.61 50.38	1.76	5.00			
PANTONE 7573 C	50.11 24.49 43.70	51.21 25.68 49.69	2.37	5.00			
PANTONE 7574 C	50.00 18.60 36.85	50.23 19.47 40.52	1.41	5.00			
PANTONE 7575 C	43.19 13.25 31.09	43.94 13.76 35.73	2.09	5.00			
PANTONE 712 C	84.98 14.94 30.92	84.89 13.80 30.41	0.75	5.00			
PANTONE 713 C	82.35 19.07 37.53	82.63 17.91 36.49	0.68	5.00			
PANTONE 714 C	77.37 26.91 49.82	77.66 26.80 49.31	0.27	5.00			
PANTONE 715 C	69.91 36.60 65.93	70.44 36.38 66.84	0.58	5.00			
PANTONE 716 C	63.54 42.47 73.67	64.42 41.86 76.25	1.31	5.00			
PANTONE 717 C	55.43 45.40 69.97	57.54 44.53 75.06	2.84	5.00			
PANTONE 718 C	48.75 44.85 61.69	50.69 45.80 69.05	3.10	5.00			
PANTONE 2015 C	86.26 11.39 25.25	86.27 10.41 25.04	0.76	5.00			
PANTONE 2016 C	81.64 25.40 47.52	80.77 23.63 46.47	1.08	5.00			
PANTONE 2017 C	77.54 23.82 45.24	77.98 23.46 44.36	0.43	5.00			
PANTONE 2018 C	68.40 54.35 88.71	68.17 51.97 89.61	1.29	5.00			
PANTONE 2019 C	58.53 40.01 69.69	60.01 39.96 75.09	2.24	5.00			
PANTONE 2020 C	50.04 41.09 62.62	52.47 41.43 70.98	3.75	5.00			
PANTONE 2021 C	42.17 34.29 46.28	44.46 35.31 55.16	3.98	5.00			
PANTONE 148 C	85.54 13.44 39.28	85.21 12.40 38.34	0.70	5.00			
PANTONE 149 C	83.53 17.60 45.35	83.42 16.29 44.11	0.76	5.00			
PANTONE 150 C	79.82 25.22 56.72	79.76 24.12 54.76	0.62	5.00			
PANTONE 151 C	69.68 47.28 78.51	69.60 46.22 78.96	0.62	5.00			
PANTONE 152 C	62.00 43.19 72.10	62.90 42.70 75.00	1.38	5.00			
PANTONE 153 C	54.55 31.06 58.22	56.24 31.25 64.33	2.64	5.00			
PANTONE 154 C	45.67 24.68 46.76	47.55 25.31 55.48	3.63	5.00			
PANTONE 155 C	85.71 7.16 28.99	86.23 6.66 28.68	0.52	5.00			
PANTONE 156 C	80.57 14.38 39.80	80.82 13.89 37.92	0.71	5.00			
PANTONE 157 C	73.09 26.25 51.28	73.23 26.25 49.01	0.91	5.00			
PANTONE 158 C	63.53 43.78 63.02	64.30 43.75 64.76	0.92	5.00			
PANTONE 159 C	54.43 43.54 58.62	55.84 44.03 63.57	2.20	5.00			
PANTONE 160 C	45.59 31.02 45.87	47.41 32.29 53.26	3.20	5.00			
PANTONE 161 C	29.87 14.63 24.48	33.50 14.78 30.90	4.36	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 1485 C	79.76 29.60 53.90	78.68 27.97 53.17	1.10	5.00			
PANTONE 1495 C	73.51 43.65 75.96	72.52 42.12 76.03	1.07	5.00			
PANTONE 1505 C	66.08 58.99 92.87	65.44 58.12 94.07	0.86	5.00			
PANTONE Orange 021 C	60.81 65.69 85.06	60.75 63.58 87.25	1.48	5.00			
PANTONE 1525 C	46.86 45.65 62.35	49.29 47.37 68.11	2.92	5.00			
PANTONE 1535 C	39.93 32.18 47.30	42.82 33.77 55.66	3.91	5.00			
PANTONE 1545 C	29.29 18.97 28.82	33.83 19.58 35.85	4.86	5.00			
PANTONE 1555 C	81.79 24.05 32.53	81.59 22.70 31.84	0.71	5.00			
PANTONE 1565 C	76.36 35.17 45.78	76.12 33.95 44.86	0.52	5.00			
PANTONE 1575 C	69.35 49.62 64.94	69.04 48.49 65.13	0.63	5.00			
PANTONE 1585 C	65.31 57.13 71.66	65.14 55.41 73.13	1.21	5.00			
PANTONE 1595 C	56.49 46.63 60.82	57.59 46.78 64.93	1.83	5.00			
PANTONE 1605 C	46.30 32.46 44.21	47.87 33.77 50.58	2.81	5.00			
PANTONE 1615 C	39.08 27.76 36.90	40.91 28.96 43.45	3.13	5.00			
PANTONE 2022 C	77.68 29.07 28.52	78.01 28.56 28.12	0.33	5.00			
PANTONE 2023 C	72.32 38.86 37.32	72.58 38.67 36.92	0.25	5.00			
PANTONE 2024 C	67.25 48.00 44.85	67.50 47.70 45.17	0.33	5.00			
PANTONE 2025 C	72.36 46.36 63.43	71.80 44.52 62.67	0.83	5.00			
PANTONE 2026 C	62.08 57.21 53.62	62.45 56.96 53.50	0.33	5.00			
PANTONE 2027 C	58.62 61.94 46.55	59.10 61.90 47.02	0.48	5.00			
PANTONE 2028 C	54.09 70.31 69.44	54.30 69.04 71.25	1.11	5.00			
PANTONE 162 C	83.05 22.29 25.97	83.10 20.69 25.61	0.93	5.00			
PANTONE 163 C	75.80 36.85 42.85	75.54 35.45 41.85	0.58	5.00			
PANTONE 164 C	69.51 49.95 58.30	69.08 48.60 57.69	0.58	5.00			
PANTONE 165 C	64.76 58.52 67.92	64.53 56.65 68.98	1.14	5.00			
PANTONE 166 C	56.22 56.43 66.60	57.48 56.16 69.67	1.70	5.00			
PANTONE 167 C	49.93 42.79 52.18	51.59 43.77 57.92	2.64	5.00			
PANTONE 168 C	31.77 25.22 29.51	35.31 27.23 36.51	4.18	5.00			
PANTONE 7576 C	64.92 31.54 44.48	65.04 31.29 45.17	0.43	5.00			
PANTONE 7577 C	63.78 36.93 52.40	64.31 36.43 53.54	0.81	5.00			
PANTONE 7578 C	59.31 43.86 53.70	59.78 44.15 56.13	1.01	5.00			
PANTONE 7579 C	56.01 52.46 53.37	56.84 53.02 56.20	1.30	5.00			
PANTONE 7580 C	49.96 45.40 42.36	51.10 47.14 45.12	1.49	5.00			
PANTONE 7581 C	38.87 25.56 25.49	40.12 28.30 29.49	2.15	5.00			
PANTONE 7582 C	33.81 12.79 16.61	34.38 13.29 17.39	0.68	5.00			
PANTONE 1625 C	77.43 35.38 29.92	76.99 33.93 29.91	0.79	5.00			
PANTONE 1635 C	72.56 45.00 39.82	72.13 43.83 39.75	0.61	5.00			
PANTONE 1645 C	65.69 58.38 58.65	65.22 56.58 59.70	1.18	5.00			
PANTONE 1655 C	60.05 67.06 72.14	59.93 64.76 74.24	1.58	5.00			
PANTONE 1665 C	53.00 59.54 64.36	54.32 59.87 68.46	1.95	5.00			
PANTONE 1675 C	43.48 42.10 44.37	45.62 44.40 49.90	2.78	5.00			
PANTONE 1685 C	34.84 31.94 32.01	37.32 34.38 37.10	2.93	5.00			
PANTONE 169 C	81.12 29.12 17.29	80.62 26.55 16.54	1.23	5.00			
PANTONE 170 C	71.43 48.59 34.73	70.78 46.98 34.88	0.88	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 171 C	63.25 63.56 56.62	62.76 61.35 57.49	1.22	5.00			
PANTONE 172 C	59.11 68.56 67.10	58.99 66.32 67.82	1.09	5.00			
PANTONE 173 C	50.69 55.14 52.82	51.96 55.87 54.93	1.45	5.00			
PANTONE 174 C	37.97 39.83 36.22	39.88 42.88 39.51	2.10	5.00			
PANTONE 175 C	29.72 24.00 19.86	32.42 26.52 22.96	2.70	5.00			
PANTONE 7583 C	53.90 40.00 47.69	55.05 41.25 51.18	1.62	5.00			
PANTONE 7584 C	50.32 40.73 47.46	51.85 41.90 51.88	2.20	5.00			
PANTONE 7585 C	49.46 35.04 36.98	50.65 37.16 39.32	1.52	5.00			
PANTONE 7586 C	44.82 31.99 35.27	45.95 34.31 39.54	1.96	5.00			
PANTONE 7587 C	41.21 30.38 31.78	42.52 32.94 36.63	2.30	5.00			
PANTONE 7588 C	37.92 19.85 22.39	38.81 22.00 25.13	1.64	5.00			
PANTONE 7589 C	32.35 8.53 12.70	32.88 8.36 12.81	0.48	5.00			
PANTONE 7590 C	76.14 10.19 15.81	76.56 9.30 16.20	1.04	5.00			
PANTONE 7591 C	59.53 26.39 30.93	59.55 27.01 31.42	0.29	5.00			
PANTONE 7592 C	48.22 38.85 37.90	49.67 41.30 40.64	1.79	5.00			
PANTONE 7593 C	41.37 39.83 33.57	43.18 42.67 36.73	2.08	5.00			
PANTONE 7594 C	33.85 30.19 22.58	35.12 33.95 24.56	1.88	5.00			
PANTONE 7595 C	31.64 21.12 18.44	33.20 22.85 21.17	1.94	5.00			
PANTONE 7596 C	29.31 14.09 13.23	30.57 14.22 13.78	1.04	5.00			
PANTONE 7597 C	50.67 58.06 50.98	51.78 59.30 53.38	1.35	5.00			
PANTONE 7598 C	47.86 48.63 43.82	49.35 50.31 47.09	1.87	5.00			
PANTONE 7599 C	44.33 49.23 42.05	46.02 52.21 46.09	2.12	5.00			
PANTONE 7600 C	37.73 33.90 29.45	39.56 37.02 32.91	2.20	5.00			
PANTONE 7601 C	36.50 28.25 27.15	38.20 30.96 31.28	2.33	5.00			
PANTONE 7602 C	37.16 20.45 24.42	38.27 22.31 28.03	1.94	5.00			
PANTONE 7603 C	32.26 15.89 18.39	33.71 16.80 20.99	1.84	5.00			
PANTONE 7604 C	86.51 5.73 2.54	86.69 5.46 2.48	0.32	5.00			
PANTONE 7605 C	79.20 14.87 8.87	79.61 13.92 9.02	0.83	5.00			
PANTONE 7606 C	67.83 27.51 15.78	68.25 26.79 16.72	0.92	5.00			
PANTONE 7607 C	56.47 35.73 23.34	56.68 36.68 23.18	0.53	5.00			
PANTONE 7608 C	43.85 39.77 26.98	44.92 42.51 27.91	1.41	5.00			
PANTONE 7609 C	35.10 33.10 20.19	36.46 38.35 21.88	2.34	5.00			
PANTONE 7610 C	29.19 25.10 13.26	30.25 29.00 12.88	2.24	5.00			
PANTONE 2337 C	83.14 20.49 12.47	83.28 19.42 12.26	0.64	5.00			
PANTONE 2338 C	72.96 22.82 12.93	73.39 22.74 13.82	0.71	5.00			
PANTONE 2339 C	71.67 36.48 17.69	72.43 35.78 17.64	0.65	5.00			
PANTONE 2340 C	59.08 40.18 14.74	59.07 40.43 15.26	0.28	5.00			
PANTONE 2341 C	54.72 31.07 13.81	54.62 31.92 13.67	0.44	5.00			
PANTONE 2342 C	50.80 40.11 13.10	51.01 41.23 12.63	0.61	5.00			
PANTONE 2343 C	47.73 36.87 8.05	47.97 37.90 7.24	0.72	5.00			
PANTONE 7611 C	79.17 11.52 10.81	79.49 10.78 10.84	0.71	5.00			
PANTONE 7612 C	68.33 18.01 14.24	68.72 17.86 15.49	0.96	5.00			
PANTONE 7613 C	62.54 19.58 14.45	62.70 19.89 15.44	0.62	5.00			
PANTONE 7614 C	56.70 14.26 11.86	56.64 14.69 12.04	0.31	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7615 C	46.96 12.79 8.78	47.29 12.92 8.73	0.35	5.00			
PANTONE 7616 C	36.03 13.89 6.08	37.15 14.84 6.34	1.17	5.00			
PANTONE 7617 C	29.06 12.78 4.75	29.26 12.89 2.67	1.59	5.00			
PANTONE 7520 C	81.04 15.04 13.93	81.54 14.53 13.97	0.54	5.00			
PANTONE 7521 C	67.55 13.19 18.59	67.98 13.36 19.04	0.42	5.00			
PANTONE 7522 C	53.56 30.65 25.98	53.85 31.47 25.47	0.71	5.00			
PANTONE 7523 C	49.23 33.11 18.99	49.52 34.46 18.08	1.06	5.00			
PANTONE 7524 C	45.86 34.64 23.44	46.47 36.73 23.53	1.12	5.00			
PANTONE 7525 C	49.62 19.95 23.03	50.00 20.83 23.03	0.69	5.00			
PANTONE 7526 C	35.90 34.21 36.52	38.49 36.34 42.66	3.26	5.00			
PANTONE 489 C	82.42 14.68 14.37	82.66 14.29 13.80	0.42	5.00			
PANTONE 488 C	79.95 18.52 16.21	80.02 18.56 15.50	0.49	5.00			
PANTONE 487 C	75.16 25.90 20.83	75.80 25.56 20.16	0.59	5.00			
PANTONE 486 C	69.77 34.75 26.68	70.51 34.41 26.57	0.59	5.00			
PANTONE 485 C	49.73 69.10 54.64	50.20 69.79 55.03	0.50	5.00			
PANTONE 484 C	37.99 45.29 34.53	40.37 50.21 38.67	2.70	5.00			
PANTONE 483 C	27.55 24.97 19.42	30.46 28.37 22.82	2.95	5.00			
PANTONE 2029 C	67.97 45.30 23.45	68.14 45.36 23.86	0.26	5.00			
PANTONE 2030 C	63.15 40.87 22.02	63.19 40.93 22.26	0.13	5.00			
PANTONE 2031 C	58.67 45.39 24.56	58.83 45.84 25.01	0.26	5.00			
PANTONE 2032 C	54.78 49.30 27.63	55.09 50.07 27.66	0.40	5.00			
PANTONE 2033 C	49.48 53.25 31.76	50.05 55.58 32.37	0.91	5.00			
PANTONE 2034 C	54.37 67.72 42.61	54.60 68.24 42.73	0.26	5.00			
PANTONE 2035 C	46.96 73.74 52.71	47.76 71.95 52.92	1.03	5.00			
PANTONE 2344 C	67.32 43.57 30.96	67.60 43.59 31.33	0.29	5.00			
PANTONE 2345 C	67.34 59.67 35.42	65.50 56.95 35.60	1.81	5.00			
PANTONE 2346 C	64.06 67.22 31.66	62.17 62.92 30.91	1.97	5.00			
PANTONE 2347 C	49.45 75.12 67.21	50.12 73.37 69.52	1.56	5.00			
PANTONE 2348 C	57.56 58.18 36.53	58.15 58.77 37.22	0.59	5.00			
PANTONE 2349 C	47.76 59.40 59.93	49.27 61.05 64.08	1.95	5.00			
PANTONE 2350 C	40.41 57.01 43.51	41.73 60.25 46.21	1.54	5.00			
PANTONE 176 C	80.96 31.33 8.53	79.97 28.73 8.41	1.33	5.00			
PANTONE 177 C	70.77 52.19 21.15	69.30 49.86 20.92	1.36	5.00			
PANTONE 178 C	63.13 65.52 37.66	61.98 62.71 37.52	1.33	5.00			
PANTONE Warm Red C	58.66 70.06 51.19	58.37 67.23 51.30	1.06	5.00			
PANTONE 179 C	52.91 63.92 48.22	53.53 64.93 49.07	0.67	5.00			
PANTONE 180 C	46.31 53.62 37.44	47.31 56.44 38.89	1.27	5.00			
PANTONE 181 C	33.14 35.25 21.89	34.92 40.68 23.60	2.51	5.00			
PANTONE 1765 C	77.62 37.03 7.46	76.73 34.67 7.25	1.11	5.00			
PANTONE 1775 C	72.81 46.25 11.62	72.32 44.07 11.22	0.81	5.00			
PANTONE 1785 C	59.49 68.96 31.97	58.99 67.07 32.20	0.77	5.00			
PANTONE 1788 C	53.86 74.11 47.33	53.80 71.89 47.56	0.78	5.00			
PANTONE 1795 C	48.13 66.28 43.18	48.70 67.99 44.81	0.79	5.00			
PANTONE 1805 C	40.83 55.35 33.30	42.02 59.41 36.31	1.66	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 1815 C	30.01 38.69 21.44	31.81 45.23 24.42	2.69	5.00			
PANTONE 1767 C	79.82 31.16 4.13	79.33 29.62 4.04	0.74	5.00			
PANTONE 1777 C	64.19 61.62 19.10	63.53 59.78 19.04	0.76	5.00			
PANTONE 1787 C	56.62 72.81 38.60	55.93 70.35 38.50	0.96	5.00			
PANTONE Red 032 C	55.26 72.14 43.47	55.04 70.44 43.06	0.49	5.00			
PANTONE 1797 C	47.90 61.20 35.62	48.79 63.60 36.73	1.09	5.00			
PANTONE 1807 C	40.30 47.81 25.09	41.68 52.26 26.53	1.85	5.00			
PANTONE 1817 C	28.34 23.17 10.14	29.19 26.32 9.22	2.03	5.00			
PANTONE 7618 C	56.89 35.95 34.16	57.20 36.67 34.95	0.44	5.00			
PANTONE 7619 C	49.37 49.28 38.47	50.74 50.82 41.30	1.74	5.00			
PANTONE 7620 C	43.59 56.46 37.88	45.15 59.60 40.25	1.75	5.00			
PANTONE 7621 C	39.49 56.74 35.07	40.65 60.19 38.98	1.78	5.00			
PANTONE 7622 C	35.01 47.45 26.26	36.67 52.91 29.27	2.22	5.00			
PANTONE 7623 C	33.71 43.23 24.89	35.60 49.19 27.69	2.50	5.00			
PANTONE 7624 C	32.47 37.60 21.56	34.48 43.40 22.87	2.68	5.00			
PANTONE 7625 C	56.13 58.70 43.79	57.04 59.25 44.82	0.92	5.00			
PANTONE 7626 C	47.16 57.84 46.16	48.39 60.15 48.64	1.45	5.00			
PANTONE 7627 C	39.48 51.47 34.35	41.30 56.00 38.21	2.24	5.00			
PANTONE 7628 C	37.71 48.78 30.99	39.52 53.70 33.45	2.17	5.00			
PANTONE 7629 C	29.81 26.52 14.43	30.46 30.45 13.26	2.40	5.00			
PANTONE 7630 C	27.73 22.73 12.12	29.38 26.14 12.29	2.19	5.00			
PANTONE 7631 C	24.56 19.88 9.54	25.66 22.75 9.57	1.86	5.00			
PANTONE 7415 C	79.38 16.22 15.62	79.58 15.57 15.49	0.48	5.00			
PANTONE 7416 C	60.92 50.44 37.52	61.55 50.75 37.73	0.55	5.00			
PANTONE 7417 C	55.48 59.93 45.74	56.33 60.24 46.69	0.87	5.00			
PANTONE 7418 C	53.30 50.21 23.55	53.85 50.92 24.07	0.60	5.00			
PANTONE 7419 C	46.69 42.94 14.48	46.77 45.33 13.09	1.35	5.00			
PANTONE 7420 C	36.34 51.65 15.07	37.23 56.12 16.02	1.51	5.00			
PANTONE 7421 C	24.16 35.71 6.28	25.24 41.28 5.38	2.35	5.00			
PANTONE 182 C	82.56 25.57 1.99	82.02 23.43 1.89	1.15	5.00			
PANTONE 183 C	75.41 39.57 5.04	75.26 37.53 5.07	0.77	5.00			
PANTONE 184 C	60.69 66.02 19.61	60.59 64.08 19.39	0.51	5.00			
PANTONE 185 C	49.78 77.43 49.23	49.80 74.69 49.64	0.98	5.00			
PANTONE 186 C	44.69 67.77 40.07	45.29 68.64 42.02	0.93	5.00			
PANTONE 187 C	37.72 56.55 29.85	39.05 59.74 32.97	1.71	5.00			
PANTONE 188 C	28.63 37.93 15.44	29.81 44.20 16.39	2.42	5.00			
PANTONE 196 C	83.77 15.40 2.07	84.04 14.73 2.00	0.51	5.00			
PANTONE 197 C	72.86 33.24 3.50	73.65 32.13 3.88	0.79	5.00			
PANTONE 198 C	54.46 64.00 21.79	54.58 65.28 21.63	0.42	5.00			
PANTONE 199 C	46.80 74.06 40.19	47.66 72.65 41.04	1.11	5.00			
PANTONE 200 C	41.43 65.63 34.16	42.47 65.95 36.44	1.38	5.00			
PANTONE 201 C	36.70 52.92 23.20	38.10 57.44 26.43	1.98	5.00			
PANTONE 202 C	32.34 43.65 17.84	33.42 49.36 19.23	2.05	5.00			
PANTONE 189 C	76.79 35.54 2.05	76.73 33.75 2.08	0.71	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 190 C	66.73 54.07 7.14	66.69 53.21 6.86	0.28	5.00			
PANTONE 191 C	57.40 69.48 18.57	57.06 69.34 18.29	0.34	5.00			
PANTONE 192 C	50.45 77.14 34.27	50.06 75.37 34.23	0.61	5.00			
PANTONE 193 C	42.79 66.14 27.76	43.46 67.10 29.74	1.03	5.00			
PANTONE 194 C	37.11 50.10 15.10	37.80 54.78 15.08	1.59	5.00			
PANTONE 195 C	31.37 34.31 8.00	32.17 39.48 5.54	2.75	5.00			
PANTONE 1895 C	80.91 26.69 -1.59	80.62 25.56 -1.62	0.58	5.00			
PANTONE 1905 C	74.68 38.54 -0.57	75.23 37.45 -0.65	0.57	5.00			
PANTONE 1915 C	58.63 67.36 9.93	58.44 67.18 8.61	0.61	5.00			
PANTONE 1925 C	49.33 77.66 28.31	49.48 75.94 28.50	0.51	5.00			
PANTONE 1935 C	43.06 70.30 28.45	43.98 69.27 30.39	1.38	5.00			
PANTONE 1945 C	37.06 59.91 19.40	37.96 61.38 22.51	1.61	5.00			
PANTONE 1955 C	31.45 49.96 14.09	32.94 53.84 16.87	1.96	5.00			
PANTONE 705 C	89.66 10.65 1.15	89.28 8.86 1.14	1.63	5.00			
PANTONE 706 C	86.80 16.25 1.44	86.58 14.46 1.38	1.29	5.00			
PANTONE 707 C	80.90 27.38 3.33	80.58 25.77 3.21	0.80	5.00			
PANTONE 708 C	72.39 42.46 8.51	72.56 41.41 8.40	0.39	5.00			
PANTONE 709 C	61.57 58.40 18.00	61.77 57.95 18.12	0.24	5.00			
PANTONE 710 C	53.55 64.55 30.28	54.00 65.94 30.18	0.62	5.00			
PANTONE 711 C	47.10 62.95 41.47	47.78 64.97 43.06	0.89	5.00			
PANTONE 698 C	87.77 11.50 2.66	87.85 10.09 2.61	1.22	5.00			
PANTONE 699 C	83.56 19.78 2.60	83.77 18.07 2.40	1.07	5.00			
PANTONE 700 C	77.88 28.70 4.82	78.02 27.98 4.36	0.43	5.00			
PANTONE 701 C	67.51 40.21 7.57	67.79 39.86 7.54	0.25	5.00			
PANTONE 702 C	55.90 50.26 13.18	56.34 50.43 12.84	0.46	5.00			
PANTONE 703 C	45.33 53.15 21.91	46.05 56.46 21.78	1.31	5.00			
PANTONE 704 C	37.66 48.95 28.25	38.98 53.60 29.90	1.82	5.00			
PANTONE 203 C	79.17 25.20 -3.41	79.07 24.90 -3.97	0.40	5.00			
PANTONE 204 C	67.25 45.45 -1.81	67.70 45.18 -2.56	0.54	5.00			
PANTONE 205 C	55.03 65.70 7.15	55.19 66.92 5.81	0.72	5.00			
PANTONE 206 C	44.15 76.14 34.33	45.84 71.79 34.72	2.09	5.00			
PANTONE 207 C	35.97 61.81 23.56	37.63 61.67 26.11	1.89	5.00			
PANTONE 208 C	31.77 46.72 7.66	32.39 51.38 7.32	1.60	5.00			
PANTONE 209 C	27.87 35.55 4.47	28.00 41.73 1.64	2.90	5.00			
PANTONE 210 C	76.33 38.81 -5.76	75.95 36.83 -6.25	0.86	5.00			
PANTONE 211 C	68.91 51.69 -5.82	69.04 50.65 -5.95	0.35	5.00			
PANTONE 212 C	59.88 67.37 -1.57	59.68 67.05 -2.64	0.49	5.00			
PANTONE 213 C	52.18 75.29 5.56	51.82 76.55 4.10	0.77	5.00			
PANTONE 214 C	46.89 70.91 7.10	46.85 72.20 6.34	0.48	5.00			
PANTONE 215 C	39.38 60.49 4.68	39.84 63.19 3.97	0.91	5.00			
PANTONE 216 C	30.39 42.23 1.80	30.85 47.78 0.13	2.09	5.00			
PANTONE 2036 C	83.10 24.70 -3.23	82.79 22.88 -3.35	0.98	5.00			
PANTONE 2037 C	73.50 41.82 -8.67	73.48 40.70 -9.06	0.48	5.00			
PANTONE 2038 C	62.47 61.31 -4.78	63.13 60.65 -5.27	0.63	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2039 C	55.08 70.88 0.31	55.03 71.27 -1.08	0.58	5.00			
PANTONE 2040 C	49.09 74.33 18.82	49.03 75.17 18.89	0.20	5.00			
PANTONE 2041 C	37.90 53.71 9.91	38.46 57.73 9.96	1.26	5.00			
PANTONE 2042 C	28.32 34.31 5.72	28.62 40.58 3.06	2.99	5.00			
PANTONE 7422 C	86.24 15.21 2.40	86.46 14.09 2.35	0.84	5.00			
PANTONE 7423 C	59.60 53.48 6.90	59.93 53.46 6.55	0.34	5.00			
PANTONE 7424 C	55.78 64.96 3.32	55.82 65.91 2.31	0.52	5.00			
PANTONE 7425 C	42.41 59.62 11.84	42.62 62.83 11.37	0.98	5.00			
PANTONE 7426 C	37.00 58.23 18.00	38.05 60.63 20.46	1.46	5.00			
PANTONE 7427 C	34.56 52.88 24.22	35.92 56.72 27.82	1.97	5.00			
PANTONE 7428 C	28.00 31.06 3.83	28.54 36.21 0.57	2.97	5.00			
PANTONE 7632 C	82.20 5.28 0.98	82.57 4.62 0.93	0.79	5.00			
PANTONE 7633 C	70.40 13.75 2.86	70.92 13.47 4.42	1.27	5.00			
PANTONE 7634 C	55.69 40.91 1.88	55.88 41.79 2.29	0.42	5.00			
PANTONE 7635 C	47.85 61.54 10.98	47.92 64.21 9.85	0.98	5.00			
PANTONE 7636 C	43.34 63.52 19.52	43.65 66.03 20.25	0.70	5.00			
PANTONE 7637 C	36.12 45.13 10.94	36.71 50.11 10.10	1.87	5.00			
PANTONE 7638 C	32.18 38.56 8.43	32.97 44.41 6.87	2.50	5.00			
PANTONE 217 C	81.89 21.11 -8.24	81.89 20.25 -8.18	0.49	5.00			
PANTONE 218 C	63.21 55.01 -12.18	63.44 54.57 -12.81	0.38	5.00			
PANTONE 219 C	50.34 75.32 -4.72	50.09 76.56 -5.41	0.45	5.00			
PANTONE Rubine Red C	43.81 79.34 12.71	45.88 73.89 13.22	2.36	5.00			
PANTONE 220 C	35.75 65.49 5.44	37.35 63.47 6.98	1.63	5.00			
PANTONE 221 C	32.06 56.87 4.40	33.39 57.65 6.83	1.58	5.00			
PANTONE 222 C	26.14 39.31 -3.84	26.28 45.51 -5.42	2.23	5.00			
PANTONE 7639 C	50.20 17.48 3.04	50.64 17.73 3.67	0.63	5.00			
PANTONE 7640 C	39.61 39.34 6.56	40.06 43.30 4.55	1.97	5.00			
PANTONE 7641 C	35.13 45.02 7.93	35.60 50.12 7.01	1.84	5.00			
PANTONE 7642 C	30.38 34.36 -0.52	30.81 39.69 -4.77	3.05	5.00			
PANTONE 7643 C	28.02 29.31 -0.87	28.75 34.37 -4.99	3.16	5.00			
PANTONE 7644 C	25.13 23.09 -2.27	25.48 25.81 -6.95	3.07	5.00			
PANTONE 7645 C	23.21 20.21 -1.49	23.32 22.35 -5.86	2.92	5.00			
PANTONE 223 C	73.11 41.45 -13.93	73.39 40.16 -13.75	0.50	5.00			
PANTONE 224 C	64.89 56.32 -16.04	65.12 55.23 -16.30	0.41	5.00			
PANTONE 225 C	51.87 76.49 -12.13	51.61 76.52 -12.08	0.26	5.00			
PANTONE 226 C	44.85 80.21 0.01	46.28 75.74 0.49	1.70	5.00			
PANTONE 227 C	37.22 66.68 -3.58	38.29 65.64 -4.27	1.00	5.00			
PANTONE 228 C	31.34 53.01 -7.15	32.02 55.89 -7.86	1.01	5.00			
PANTONE 229 C	25.68 35.25 -4.84	25.56 41.50 -8.98	2.98	5.00			
PANTONE 230 C	77.63 35.30 -11.69	77.55 33.13 -11.52	0.87	5.00			
PANTONE 231 C	67.65 55.33 -16.82	67.41 53.82 -16.88	0.50	5.00			
PANTONE 232 C	57.17 72.49 -17.43	57.17 71.49 -17.39	0.24	5.00			
PANTONE Rhodamine Red C	51.55 78.77 -13.88	50.81 77.19 -12.63	0.91	5.00			
PANTONE 233 C	44.07 74.84 -9.93	44.60 74.06 -10.24	0.55	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 234 C	36.12 63.15 -8.48	36.80 63.58 -9.06	0.63	5.00			
PANTONE 235 C	30.06 51.14 -7.33	30.73 54.30 -7.80	1.08	5.00			
PANTONE 670 C	87.05 10.89 -4.17	87.15 9.86 -4.00	0.90	5.00			
PANTONE 671 C	80.88 20.08 -7.66	81.29 19.67 -7.52	0.37	5.00			
PANTONE 672 C	73.42 30.26 -10.52	74.08 28.91 -10.74	0.81	5.00			
PANTONE 673 C	66.61 39.59 -12.56	66.93 39.26 -12.96	0.37	5.00			
PANTONE 674 C	54.19 52.53 -13.04	54.63 52.28 -14.23	0.70	5.00			
PANTONE 675 C	41.87 60.25 -8.03	41.70 63.32 -10.15	1.14	5.00			
PANTONE 676 C	33.48 58.19 0.83	34.56 59.30 1.78	1.02	5.00			
PANTONE 2043 C	83.08 15.88 -1.33	83.67 15.15 -1.43	0.66	5.00			
PANTONE 2044 C	71.14 36.86 -3.55	71.57 36.26 -3.77	0.42	5.00			
PANTONE 2045 C	63.05 46.30 -2.99	63.30 46.04 -3.07	0.23	5.00			
PANTONE 2046 C	55.26 52.55 -1.42	55.61 52.51 -2.33	0.55	5.00			
PANTONE 2047 C	44.42 43.56 -2.20	44.26 46.31 -3.86	1.22	5.00			
PANTONE 2048 C	39.49 42.68 -0.39	39.69 46.24 -2.89	1.75	5.00			
PANTONE 2049 C	33.55 40.12 3.18	34.20 45.09 0.50	2.36	5.00			
PANTONE 677 C	85.09 10.99 -3.56	85.41 10.42 -3.62	0.54	5.00			
PANTONE 678 C	83.36 12.61 -4.46	83.85 11.76 -4.33	0.76	5.00			
PANTONE 679 C	80.34 15.40 -5.78	80.68 14.77 -5.75	0.51	5.00			
PANTONE 680 C	67.94 25.00 -8.49	68.49 24.21 -7.98	0.63	5.00			
PANTONE 681 C	54.59 33.87 -10.29	54.54 34.21 -10.60	0.20	5.00			
PANTONE 682 C	43.20 40.39 -10.13	43.01 43.03 -11.88	1.16	5.00			
PANTONE 683 C	31.33 41.25 -6.03	31.18 46.34 -10.10	2.48	5.00			
PANTONE 2050 C	88.41 10.88 -3.49	88.50 9.52 -2.93	1.24	5.00			
PANTONE 2051 C	81.06 12.54 -3.13	81.39 11.82 -3.06	0.63	5.00			
PANTONE 2052 C	70.20 19.52 -5.52	70.89 18.90 -4.96	0.72	5.00			
PANTONE 2053 C	59.66 25.04 -7.01	59.61 25.04 -6.41	0.37	5.00			
PANTONE 2054 C	53.06 23.73 -7.10	53.11 23.74 -6.53	0.35	5.00			
PANTONE 2055 C	46.63 25.98 -7.10	46.95 26.58 -7.50	0.46	5.00			
PANTONE 2056 C	38.63 28.44 -6.82	38.78 30.12 -8.90	1.32	5.00			
PANTONE 684 C	82.93 12.89 -2.69	83.49 12.15 -2.73	0.70	5.00			
PANTONE 685 C	78.06 16.91 -3.97	78.50 16.47 -3.57	0.49	5.00			
PANTONE 686 C	71.51 21.53 -5.24	72.17 20.84 -4.66	0.71	5.00			
PANTONE 687 C	62.22 27.01 -6.62	62.63 27.38 -6.00	0.56	5.00			
PANTONE 688 C	51.39 32.57 -7.88	51.52 32.89 -7.89	0.18	5.00			
PANTONE 689 C	37.50 37.86 -7.93	37.37 40.96 -10.94	1.77	5.00			
PANTONE 690 C	24.52 32.27 -3.07	24.67 38.19 -6.64	2.90	5.00			
PANTONE 510 C	81.70 18.22 0.80	82.29 17.23 0.82	0.76	5.00			
PANTONE 509 C	78.66 21.59 0.38	79.12 21.00 0.27	0.47	5.00			
PANTONE 508 C	75.76 24.37 0.58	76.39 23.74 0.88	0.59	5.00			
PANTONE 507 C	68.29 28.53 -0.81	68.93 27.96 -0.82	0.57	5.00			
PANTONE 506 C	34.75 36.72 4.13	35.34 41.19 1.06	2.52	5.00			
PANTONE 505 C	29.06 31.48 5.05	30.09 36.60 1.80	3.08	5.00			
PANTONE 504 C	23.64 22.49 5.00	24.54 25.95 2.46	2.67	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7429 C	80.10 17.25 -2.34	80.51 16.93 -2.66	0.42	5.00			
PANTONE 7430 C	74.84 22.90 -3.23	75.20 22.54 -3.09	0.33	5.00			
PANTONE 7431 C	62.43 33.88 -3.23	62.50 34.20 -3.33	0.15	5.00			
PANTONE 7432 C	51.61 41.96 -2.04	52.03 42.51 -2.65	0.55	5.00			
PANTONE 7433 C	42.56 50.02 2.01	42.56 53.03 -0.42	1.52	5.00			
PANTONE 7434 C	38.96 47.98 3.09	39.20 51.86 0.39	1.86	5.00			
PANTONE 7435 C	33.06 45.38 -0.36	33.18 50.00 -3.43	2.10	5.00			
PANTONE 691 C	85.16 10.95 2.61	85.56 10.40 2.70	0.56	5.00			
PANTONE 692 C	80.64 14.87 3.20	80.93 13.95 3.31	0.72	5.00			
PANTONE 693 C	72.36 21.62 4.03	72.65 21.24 4.68	0.56	5.00			
PANTONE 694 C	62.57 27.23 4.74	62.71 27.74 5.73	0.66	5.00			
PANTONE 695 C	54.47 31.95 5.58	54.38 32.68 5.40	0.35	5.00			
PANTONE 696 C	42.11 35.76 9.19	42.46 38.79 8.00	1.54	5.00			
PANTONE 697 C	36.96 34.75 11.62	37.65 39.26 10.96	2.03	5.00			
PANTONE 496 C	84.36 17.24 2.19	84.31 16.00 1.82	0.87	5.00			
PANTONE 495 C	81.88 20.55 2.51	82.16 19.28 2.36	0.78	5.00			
PANTONE 494 C	74.48 28.51 4.21	74.83 27.95 4.40	0.40	5.00			
PANTONE 493 C	66.32 35.02 6.28	66.45 35.22 6.42	0.15	5.00			
PANTONE 492 C	36.00 40.52 20.81	37.40 45.81 22.24	2.17	5.00			
PANTONE 491 C	32.50 35.23 16.93	34.22 41.13 18.08	2.62	5.00			
PANTONE 490 C	24.74 24.07 10.75	26.64 28.36 11.41	2.49	5.00			
PANTONE 503 C	82.81 13.50 4.11	83.20 12.79 4.20	0.63	5.00			
PANTONE 502 C	79.95 16.33 3.38	80.34 15.45 3.46	0.68	5.00			
PANTONE 501 C	73.31 20.67 4.56	73.63 20.20 5.26	0.64	5.00			
PANTONE 500 C	63.00 25.96 6.74	63.14 26.41 7.82	0.72	5.00			
PANTONE 499 C	34.59 25.43 15.97	35.63 28.55 16.44	1.74	5.00			
PANTONE 498 C	30.24 21.97 12.94	31.34 24.61 13.14	1.68	5.00			
PANTONE 497 C	24.21 15.47 8.53	24.89 16.69 8.99	0.97	5.00			
PANTONE 5035 C	81.14 11.19 3.73	81.40 10.47 3.65	0.65	5.00			
PANTONE 5025 C	78.01 13.71 3.34	78.29 13.07 3.73	0.63	5.00			
PANTONE 5015 C	70.67 16.73 4.36	71.23 16.53 6.12	1.36	5.00			
PANTONE 5005 C	57.78 21.51 5.56	57.79 21.60 6.06	0.34	5.00			
PANTONE 4995 C	48.39 25.48 6.72	48.70 26.68 6.99	0.66	5.00			
PANTONE 4985 C	39.98 26.70 8.46	40.76 28.29 7.50	1.29	5.00			
PANTONE 4975 C	16.90 15.93 7.20	17.32 21.40 9.63	3.47	5.00			
PANTONE 236 C	77.59 34.15 -14.58	77.53 31.60 -13.50	1.07	5.00			
PANTONE 237 C	69.92 47.59 -19.36	69.73 45.92 -18.12	0.68	5.00			
PANTONE 238 C	61.09 61.62 -23.05	61.32 59.41 -22.35	0.63	5.00			
PANTONE 239 C	55.04 69.04 -23.98	54.56 67.90 -23.31	0.56	5.00			
PANTONE 240 C	48.16 67.01 -21.91	48.15 67.70 -23.04	0.42	5.00			
PANTONE 241 C	41.56 63.88 -19.26	41.39 66.20 -20.84	0.75	5.00			
PANTONE 242 C	31.67 44.97 -11.79	31.39 49.47 -15.35	1.97	5.00			
PANTONE 2057 C	67.90 29.11 -9.22	68.39 28.26 -8.99	0.55	5.00			
PANTONE 2058 C	62.16 25.49 -10.90	62.47 25.54 -10.56	0.34	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2059 C	59.53 29.54 -9.35	59.58 29.59 -9.08	0.17	5.00			
PANTONE 2060 C	58.37 44.38 -14.77	58.54 44.12 -15.12	0.26	5.00			
PANTONE 2061 C	48.85 44.21 -11.35	48.95 44.70 -12.78	0.69	5.00			
PANTONE 2062 C	47.78 52.15 -15.21	47.54 54.03 -16.55	0.75	5.00			
PANTONE 2063 C	41.57 54.25 -14.38	41.35 56.66 -17.23	1.28	5.00			
PANTONE 2365 C	81.48 24.94 -11.36	81.33 23.57 -10.35	0.82	5.00			
PANTONE 2375 C	65.62 51.44 -24.20	65.70 49.44 -22.90	0.70	5.00			
PANTONE 2385 C	53.51 69.32 -28.77	52.91 66.37 -26.62	1.07	5.00			
PANTONE 2395 C	46.20 76.53 -28.33	46.01 71.05 -25.99	1.33	5.00			
PANTONE 2405 C	40.22 70.29 -26.51	40.37 69.20 -26.83	0.36	5.00			
PANTONE 2415 C	36.11 64.15 -23.61	36.37 65.16 -24.38	0.40	5.00			
PANTONE 2425 C	29.74 55.00 -18.16	30.30 56.76 -18.86	0.68	5.00			
PANTONE 243 C	80.67 24.89 -14.17	79.95 23.97 -13.11	0.83	5.00			
PANTONE 244 C	73.60 36.48 -20.42	73.36 34.44 -19.09	0.89	5.00			
PANTONE 245 C	66.50 47.05 -26.12	66.16 45.41 -24.89	0.68	5.00			
PANTONE 246 C	49.00 71.34 -33.51	48.33 67.14 -30.89	1.32	5.00			
PANTONE 247 C	45.20 69.70 -31.89	45.00 67.68 -31.54	0.53	5.00			
PANTONE 248 C	40.13 62.35 -28.28	40.02 64.13 -29.73	0.60	5.00			
PANTONE 249 C	32.96 44.66 -18.43	32.65 48.87 -23.06	2.14	5.00			
PANTONE 7646 C	53.35 27.31 -4.09	53.27 27.68 -4.01	0.20	5.00			
PANTONE 7647 C	43.57 50.40 -5.64	43.17 53.22 -7.84	1.31	5.00			
PANTONE 7648 C	36.60 55.10 -8.47	36.37 58.29 -11.03	1.35	5.00			
PANTONE 7649 C	32.88 51.14 -11.06	32.93 54.81 -13.34	1.35	5.00			
PANTONE 7650 C	28.52 40.62 -11.74	28.20 46.07 -15.73	2.38	5.00			
PANTONE 7651 C	28.62 34.67 -14.64	28.26 39.60 -20.26	2.92	5.00			
PANTONE 7652 C	25.60 30.88 -12.99	24.71 36.13 -18.75	3.25	5.00			
PANTONE 250 C	80.82 22.83 -14.58	80.31 21.83 -13.39	0.83	5.00			
PANTONE 251 C	72.78 34.32 -23.57	72.89 31.71 -21.49	1.20	5.00			
PANTONE 252 C	58.63 53.59 -36.40	57.95 50.61 -33.67	1.25	5.00			
PANTONE Purple C	47.52 68.89 -42.48	46.68 62.82 -38.00	1.89	5.00			
PANTONE 253 C	43.03 67.21 -40.90	42.76 63.73 -38.89	0.94	5.00			
PANTONE 254 C	38.44 59.60 -36.13	38.81 60.95 -37.37	0.56	5.00			
PANTONE 255 C	29.82 42.61 -23.68	29.54 47.25 -28.35	2.11	5.00			
PANTONE 2064 C	74.10 30.81 -15.55	74.83 29.40 -15.49	0.83	5.00			
PANTONE 2065 C	75.56 27.52 -18.16	75.70 26.35 -17.45	0.57	5.00			
PANTONE 2066 C	68.03 35.92 -24.06	68.59 34.55 -23.65	0.69	5.00			
PANTONE 2067 C	57.79 45.79 -30.63	58.15 44.84 -30.62	0.48	5.00			
PANTONE 2068 C	50.32 51.56 -34.54	50.44 50.98 -35.11	0.40	5.00			
PANTONE 2069 C	44.24 55.30 -36.57	44.86 55.56 -37.26	0.63	5.00			
PANTONE 2070 C	36.23 56.93 -37.77	36.61 58.86 -39.91	0.81	5.00			
PANTONE 517 C	84.04 16.70 -6.94	84.24 15.26 -6.61	1.00	5.00			
PANTONE 516 C	81.60 18.57 -9.32	82.04 17.88 -8.93	0.54	5.00			
PANTONE 515 C	76.89 25.36 -12.94	77.11 24.69 -12.73	0.36	5.00			
PANTONE 514 C	67.49 34.99 -18.69	67.78 33.87 -18.53	0.50	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 513 C	39.34 48.11 -28.68	39.16 50.69 -31.09	1.04	5.00			
PANTONE 512 C	35.41 41.68 -20.95	35.33 45.13 -24.96	1.83	5.00			
PANTONE 511 C	27.08 28.11 -10.06	27.17 32.15 -15.81	3.25	5.00			
PANTONE 2351 C	60.30 34.40 -18.15	60.51 34.59 -17.98	0.23	5.00			
PANTONE 2352 C	54.42 40.85 -20.11	54.50 41.08 -20.36	0.14	5.00			
PANTONE 2353 C	51.78 55.63 -23.23	52.04 55.70 -24.42	0.56	5.00			
PANTONE 2354 C	43.88 36.18 -20.96	44.23 36.59 -22.10	0.63	5.00			
PANTONE 2355 C	32.03 57.05 -28.75	32.17 59.59 -30.52	0.81	5.00			
PANTONE 2356 C	25.38 52.50 -23.22	26.54 54.18 -23.42	0.99	5.00			
PANTONE 2357 C	22.69 39.64 -8.44	23.63 45.08 -8.90	1.99	5.00			
PANTONE 7653 C	57.86 7.71 -5.16	58.22 7.50 -4.59	0.56	5.00			
PANTONE 7654 C	55.88 22.65 -12.24	55.94 22.52 -11.46	0.46	5.00			
PANTONE 7655 C	48.84 37.13 -18.52	48.93 37.55 -19.24	0.36	5.00			
PANTONE 7656 C	39.13 43.67 -20.92	39.04 46.76 -23.34	1.25	5.00			
PANTONE 7657 C	29.76 36.37 -17.52	29.63 40.82 -23.61	2.89	5.00			
PANTONE 7658 C	30.72 30.05 -14.34	30.49 33.29 -19.46	2.67	5.00			
PANTONE 7659 C	28.81 22.10 -9.84	29.18 24.40 -14.25	2.61	5.00			
PANTONE 5175 C	82.15 7.84 -2.37	82.67 7.24 -2.47	0.70	5.00			
PANTONE 5165 C	79.74 9.18 -3.79	80.14 8.46 -3.77	0.73	5.00			
PANTONE 5155 C	70.61 13.30 -6.22	71.08 13.03 -5.31	0.73	5.00			
PANTONE 5145 C	54.39 19.25 -9.29	54.62 19.37 -8.34	0.65	5.00			
PANTONE 5135 C	41.67 23.39 -11.00	42.11 22.93 -11.44	0.57	5.00			
PANTONE 5125 C	32.28 25.69 -11.10	32.31 28.19 -14.30	1.92	5.00			
PANTONE 5115 C	23.50 22.32 -7.54	24.00 25.03 -12.61	3.08	5.00			
PANTONE 5245 C	83.86 6.06 -1.26	84.14 5.60 -1.44	0.55	5.00			
PANTONE 5235 C	78.71 8.16 -2.19	79.00 7.81 -2.13	0.40	5.00			
PANTONE 5225 C	74.17 9.70 -3.10	74.54 9.72 -2.02	0.86	5.00			
PANTONE 5215 C	64.65 12.47 -4.57	65.14 11.60 -3.40	1.11	5.00			
PANTONE 5205 C	46.71 16.91 -6.44	46.92 16.66 -6.13	0.32	5.00			
PANTONE 5195 C	33.53 18.36 -6.44	34.06 18.79 -7.99	1.07	5.00			
PANTONE 5185 C	23.78 14.71 -5.29	23.83 15.72 -9.79	2.92	5.00			
PANTONE 524 C	80.69 10.49 -8.30	81.20 9.51 -7.93	0.93	5.00			
PANTONE 523 C	75.27 14.04 -12.37	75.43 13.40 -11.88	0.51	5.00			
PANTONE 522 C	68.35 18.14 -16.71	69.07 17.50 -15.41	0.94	5.00			
PANTONE 521 C	58.49 23.25 -21.44	58.50 23.00 -20.72	0.38	5.00			
PANTONE 520 C	29.14 32.31 -24.87	29.09 35.73 -30.40	2.46	5.00			
PANTONE 519 C	27.46 25.46 -19.31	27.56 27.81 -24.40	2.57	5.00			
PANTONE 518 C	23.96 16.87 -9.92	24.23 17.91 -14.42	2.73	5.00			
PANTONE 7436 C	89.25 9.49 -5.27	88.85 8.38 -4.23	1.23	5.00			
PANTONE 7437 C	74.65 16.77 -12.97	74.87 16.08 -12.51	0.50	5.00			
PANTONE 7438 C	72.05 29.44 -20.73	72.56 27.77 -19.90	0.84	5.00			
PANTONE 7439 C	62.33 24.06 -19.16	62.84 23.34 -18.20	0.69	5.00			
PANTONE 7440 C	56.00 24.75 -18.23	55.91 24.77 -18.04	0.15	5.00			
PANTONE 7441 C	50.79 41.47 -41.17	51.21 40.58 -40.93	0.53	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7442 C	43.69 52.94 -50.30	43.78 51.24 -49.77	0.54	5.00			
PANTONE 2562 C	75.28 25.65 -22.34	75.00 24.17 -20.18	1.15	5.00			
PANTONE 2572 C	66.79 35.38 -31.00	67.18 33.07 -28.62	1.15	5.00			
PANTONE 2582 C	50.46 52.73 -44.34	50.67 50.26 -42.55	0.79	5.00			
PANTONE 2592 C	41.32 60.87 -49.69	41.45 57.83 -47.94	0.82	5.00			
PANTONE 2602 C	35.08 57.12 -44.82	35.64 57.80 -45.68	0.54	5.00			
PANTONE 2612 C	32.00 46.19 -34.29	32.42 49.15 -37.86	1.39	5.00			
PANTONE 2622 C	29.41 30.81 -19.96	29.22 33.98 -25.04	2.45	5.00			
PANTONE 531 C	83.45 13.23 -12.08	83.60 12.17 -10.83	1.00	5.00			
PANTONE 530 C	78.92 17.91 -17.18	79.14 16.86 -16.29	0.71	5.00			
PANTONE 529 C	71.97 24.30 -24.27	72.21 23.27 -23.67	0.53	5.00			
PANTONE 528 C	61.78 32.71 -33.24	62.85 31.13 -31.77	1.15	5.00			
PANTONE 527 C	37.24 48.63 -48.13	37.95 48.68 -49.39	0.80	5.00			
PANTONE 526 C	32.86 40.94 -37.85	33.13 43.26 -40.78	1.12	5.00			
PANTONE 525 C	26.03 27.38 -21.57	26.20 30.70 -27.88	3.02	5.00			
PANTONE 256 C	80.07 13.58 -11.83	80.71 12.66 -11.31	0.83	5.00			
PANTONE 257 C	70.95 21.28 -17.85	71.59 20.26 -17.50	0.73	5.00			
PANTONE 258 C	42.25 40.11 -31.61	43.23 40.24 -32.96	1.09	5.00			
PANTONE 259 C	28.86 42.98 -31.59	29.45 47.13 -36.04	1.85	5.00			
PANTONE 260 C	27.48 35.97 -24.28	27.55 40.47 -29.86	2.49	5.00			
PANTONE 261 C	26.19 31.34 -20.99	26.00 35.80 -27.36	3.00	5.00			
PANTONE 262 C	23.52 24.82 -14.68	23.40 28.19 -19.79	2.79	5.00			
PANTONE 2563 C	72.34 22.92 -20.98	72.68 21.76 -20.22	0.66	5.00			
PANTONE 2573 C	62.74 30.74 -28.28	63.35 29.20 -27.84	0.84	5.00			
PANTONE 2583 C	50.78 39.23 -34.55	51.22 38.38 -35.23	0.76	5.00			
PANTONE 2593 C	37.41 47.24 -40.08	38.27 48.49 -41.59	0.91	5.00			
PANTONE 2603 C	30.02 45.36 -36.75	30.67 48.58 -40.97	1.62	5.00			
PANTONE 2613 C	27.43 42.03 -33.03	28.00 46.60 -37.87	1.98	5.00			
PANTONE 2623 C	25.59 36.72 -27.28	25.39 42.01 -32.57	2.38	5.00			
PANTONE 2078 C	67.87 13.82 -12.16	68.36 12.87 -10.81	1.05	5.00			
PANTONE 2079 C	56.63 17.52 -15.88	56.80 17.44 -14.40	0.93	5.00			
PANTONE 2080 C	53.94 23.61 -24.37	53.91 23.77 -23.98	0.29	5.00			
PANTONE 2081 C	46.33 26.53 -27.36	46.08 26.48 -28.04	0.46	5.00			
PANTONE 2082 C	40.49 28.25 -29.21	40.54 28.05 -30.83	0.95	5.00			
PANTONE 2083 C	50.15 38.56 -46.12	50.52 37.11 -45.55	0.66	5.00			
PANTONE 2084 C	38.44 47.94 -52.48	38.99 47.18 -53.20	0.75	5.00			
PANTONE 2071 C	75.50 14.67 -19.54	75.64 13.20 -18.69	0.98	5.00			
PANTONE 2072 C	67.13 21.87 -26.36	67.49 21.00 -25.48	0.57	5.00			
PANTONE 2073 C	66.08 19.44 -27.95	66.56 18.47 -27.05	0.65	5.00			
PANTONE 2074 C	52.16 30.32 -37.37	52.27 29.83 -37.35	0.28	5.00			
PANTONE 2075 C	49.74 27.45 -40.28	49.73 27.41 -40.38	0.07	5.00			
PANTONE 2076 C	46.23 32.83 -41.36	46.45 32.50 -42.02	0.52	5.00			
PANTONE 2077 C	36.77 35.70 -45.94	37.21 35.04 -47.59	1.13	5.00			
PANTONE 7660 C	61.37 6.51 -9.18	62.20 5.94 -7.21	1.64	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7661 C	50.78 19.61 -17.40	51.04 18.84 -16.22	0.74	5.00			
PANTONE 7662 C	37.43 33.85 -25.67	37.47 35.51 -28.00	1.05	5.00			
PANTONE 7663 C	31.14 35.46 -28.37	31.24 38.47 -32.66	1.82	5.00			
PANTONE 7664 C	30.67 32.66 -30.35	30.58 35.26 -34.66	1.81	5.00			
PANTONE 7665 C	30.07 26.89 -24.86	29.94 28.68 -29.13	2.03	5.00			
PANTONE 7666 C	35.10 10.28 -10.34	35.99 7.55 -10.38	2.73	5.00			
PANTONE 2567 C	70.60 20.79 -24.30	70.83 19.76 -23.77	0.56	5.00			
PANTONE 2577 C	58.71 29.05 -33.84	59.93 27.36 -32.48	1.31	5.00			
PANTONE 2587 C	41.65 40.50 -45.24	42.57 39.84 -45.56	0.94	5.00			
PANTONE 2597 C	24.60 48.20 -51.52	25.64 50.70 -54.57	1.22	5.00			
PANTONE 2607 C	20.98 42.80 -45.05	21.57 48.14 -49.73	1.84	5.00			
PANTONE 2617 C	18.33 38.18 -39.44	18.05 44.05 -45.44	2.30	5.00			
PANTONE 2627 C	15.48 30.23 -30.29	15.14 32.02 -33.61	1.44	5.00			
PANTONE 263 C	82.11 11.70 -13.95	82.25 10.56 -12.64	1.07	5.00			
PANTONE 264 C	72.56 19.08 -26.24	72.49 17.58 -24.88	0.84	5.00			
PANTONE 265 C	50.95 35.43 -48.32	51.38 33.91 -47.03	0.70	5.00			
PANTONE 266 C	38.69 44.81 -58.50	39.11 43.49 -58.29	0.66	5.00			
PANTONE 267 C	29.76 43.92 -55.24	30.55 43.99 -57.37	1.10	5.00			
PANTONE 268 C	28.02 34.22 -41.18	28.31 35.91 -45.34	1.61	5.00			
PANTONE 269 C	26.06 27.07 -30.51	25.88 29.37 -36.38	2.60	5.00			
PANTONE 2085 C	84.44 10.48 -10.69	84.80 9.55 -9.59	1.00	5.00			
PANTONE 2086 C	61.83 18.67 -30.28	62.56 17.74 -29.19	0.82	5.00			
PANTONE 2087 C	58.15 26.07 -40.62	58.62 25.12 -39.31	0.66	5.00			
PANTONE 2088 C	47.55 33.03 -50.09	48.28 31.55 -49.16	0.91	5.00			
PANTONE 2089 C	40.66 37.40 -55.65	40.89 36.18 -55.72	0.70	5.00			
PANTONE 2090 C	35.72 40.42 -59.15	36.32 38.94 -59.47	1.00	5.00			
PANTONE 2091 C	24.87 46.31 -64.81	25.79 45.46 -66.39	1.22	5.00			
PANTONE 2635 C	76.14 13.01 -21.16	76.56 11.50 -19.55	1.15	5.00			
PANTONE 2645 C	66.22 19.58 -32.36	67.00 18.40 -30.86	0.92	5.00			
PANTONE 2655 C	56.47 26.31 -42.50	56.92 25.04 -40.90	0.73	5.00			
PANTONE 2665 C	45.45 34.51 -52.90	46.08 32.91 -52.20	0.89	5.00			
PANTONE Violet C	18.75 54.58 -69.48	19.86 50.12 -69.92	2.22	5.00			
PANTONE 2685 C	13.53 40.99 -53.40	13.77 44.63 -59.83	1.96	5.00			
PANTONE 2695 C	14.26 17.59 -24.18	13.19 20.92 -32.51	4.14	5.00			
PANTONE 2092 C	72.53 11.31 -19.97	72.98 10.35 -19.19	0.79	5.00			
PANTONE 2093 C	65.35 11.57 -19.13	65.93 10.72 -18.30	0.81	5.00			
PANTONE 2094 C	55.95 13.70 -22.65	56.12 13.55 -21.48	0.72	5.00			
PANTONE 2095 C	47.53 21.69 -38.17	47.42 20.81 -38.32	0.63	5.00			
PANTONE 2096 C	39.20 25.03 -42.65	39.17 24.30 -44.30	1.25	5.00			
PANTONE 2097 C	37.91 34.74 -58.82	37.98 33.34 -59.61	1.10	5.00			
PANTONE 2098 C	27.81 40.86 -65.02	28.42 39.55 -66.68	1.41	5.00			
PANTONE 2099 C	69.06 11.99 -18.76	69.44 10.98 -17.80	0.84	5.00			
PANTONE 2100 C	62.65 15.45 -28.05	62.88 14.60 -27.23	0.51	5.00			
PANTONE 2101 C	54.36 24.25 -45.06	54.60 23.55 -44.12	0.40	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2102 C	42.27 22.60 -46.12	42.25 21.63 -46.94	1.00	5.00			
PANTONE 2103 C	36.80 25.30 -48.99	36.83 24.00 -51.27	1.87	5.00			
PANTONE 2104 C	29.67 28.14 -51.80	30.15 26.68 -55.43	2.57	5.00			
PANTONE 2105 C	20.91 29.50 -48.25	20.58 30.86 -57.08	3.75	5.00			
PANTONE 270 C	74.56 6.79 -21.55	74.81 5.77 -20.93	0.83	5.00			
PANTONE 271 C	63.45 10.85 -31.55	63.84 9.83 -31.00	0.63	5.00			
PANTONE 272 C	51.49 14.98 -40.69	51.67 13.40 -40.20	0.91	5.00			
PANTONE 273 C	13.13 24.85 -42.48	13.03 28.95 -50.21	2.66	5.00			
PANTONE 274 C	12.01 19.38 -34.77	11.53 23.97 -42.78	3.06	5.00			
PANTONE 275 C	11.50 15.68 -28.88	10.12 20.65 -37.24	3.62	5.00			
PANTONE 276 C	12.16 8.01 -15.19	10.16 10.71 -23.90	5.16	5.00			
PANTONE 2705 C	69.29 10.98 -30.23	69.29 9.68 -29.25	0.64	5.00			
PANTONE 2715 C	58.49 16.78 -41.71	58.88 15.61 -40.31	0.58	5.00			
PANTONE 2725 C	44.54 25.36 -55.05	44.61 23.88 -55.36	1.06	5.00			
PANTONE 2735 C	14.31 48.47 -68.42	15.45 46.69 -71.48	2.13	5.00			
PANTONE 2745 C	12.83 35.98 -54.54	13.09 42.33 -63.33	2.53	5.00			
PANTONE 2755 C	12.65 27.43 -44.76	12.26 32.75 -52.33	2.50	5.00			
PANTONE 2765 C	11.10 16.30 -29.47	9.87 21.11 -36.95	3.24	5.00			
PANTONE 7667 C	51.92 1.93 -21.64	52.16 0.46 -19.81	1.42	5.00			
PANTONE 7668 C	47.33 7.35 -27.77	47.36 6.23 -26.78	0.60	5.00			
PANTONE 7669 C	42.26 13.57 -33.51	42.15 12.24 -34.04	1.22	5.00			
PANTONE 7670 C	37.63 15.82 -36.55	37.45 14.49 -38.56	1.97	5.00			
PANTONE 7671 C	33.51 18.63 -36.50	33.58 17.06 -39.35	2.53	5.00			
PANTONE 7672 C	31.27 18.87 -36.67	31.76 16.86 -39.85	3.00	5.00			
PANTONE 7673 C	37.39 10.10 -28.68	37.33 8.39 -30.29	2.17	5.00			
PANTONE 7443 C	87.68 3.24 -6.64	87.79 2.88 -6.30	0.49	5.00			
PANTONE 7444 C	75.53 5.41 -18.61	75.98 4.60 -17.88	0.84	5.00			
PANTONE 7445 C	68.03 6.98 -16.19	68.46 6.21 -15.32	0.85	5.00			
PANTONE 7446 C	58.27 13.56 -35.20	59.06 12.95 -33.97	0.84	5.00			
PANTONE 7447 C	34.38 17.52 -23.47	34.95 15.83 -25.52	2.22	5.00			
PANTONE 7448 C	26.27 12.42 -9.19	26.54 12.84 -12.56	2.21	5.00			
PANTONE 7449 C	19.86 15.98 -6.97	19.24 18.06 -12.22	3.34	5.00			
PANTONE 7674 C	58.86 5.85 -22.01	59.39 4.79 -20.73	0.98	5.00			
PANTONE 7675 C	54.24 7.29 -24.08	54.36 6.39 -23.20	0.60	5.00			
PANTONE 7676 C	46.41 16.97 -29.54	46.42 16.01 -29.68	0.71	5.00			
PANTONE 7677 C	39.91 24.13 -30.93	40.08 24.10 -32.25	0.77	5.00			
PANTONE 7678 C	36.68 26.29 -33.69	37.08 25.82 -35.94	1.47	5.00			
PANTONE 7679 C	31.37 23.94 -35.12	31.50 23.86 -38.59	1.97	5.00			
PANTONE 7680 C	27.65 27.41 -34.98	27.29 29.48 -40.42	2.32	5.00			
PANTONE 663 C	90.02 2.43 -2.26	89.86 2.45 -2.59	0.31	5.00			
PANTONE 664 C	88.00 3.27 -3.43	88.27 3.07 -3.48	0.31	5.00			
PANTONE 665 C	77.55 6.92 -8.72	78.04 6.43 -8.49	0.61	5.00			
PANTONE 666 C	62.71 10.79 -14.52	63.27 9.85 -13.41	1.02	5.00			
PANTONE 667 C	47.44 14.42 -19.45	47.76 13.57 -19.28	0.67	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 668 C	36.03 16.99 -22.38	36.41 15.36 -24.28	2.08	5.00			
PANTONE 669 C	21.56 17.48 -22.73	21.07 18.43 -29.84	4.06	5.00			
PANTONE 5315 C	86.26 1.85 -3.95	86.28 1.69 -4.07	0.27	5.00			
PANTONE 5305 C	79.68 2.95 -7.06	80.15 2.31 -6.77	0.91	5.00			
PANTONE 5295 C	72.63 3.96 -9.78	72.68 3.38 -9.50	0.72	5.00			
PANTONE 5285 C	58.18 6.12 -14.49	58.45 5.23 -12.98	1.18	5.00			
PANTONE 5275 C	37.41 8.67 -19.99	37.71 6.37 -20.94	2.61	5.00			
PANTONE 5265 C	26.44 10.08 -21.89	26.27 6.74 -26.57	5.36	5.00			
PANTONE 5255 C	10.73 7.93 -16.85	8.85 11.55 -25.45	4.85	5.00			
PANTONE 2358 C	68.32 5.35 -4.26	68.59 4.18 -2.90	1.66	5.00			
PANTONE 2359 C	50.15 7.58 -7.57	50.41 6.50 -6.53	1.25	5.00			
PANTONE 2360 C	51.48 4.83 -11.41	51.63 3.84 -10.39	1.22	5.00			
PANTONE 2361 C	48.08 4.93 -15.89	48.18 3.92 -15.04	1.09	5.00			
PANTONE 2362 C	45.56 5.26 -12.74	45.88 3.97 -11.99	1.51	5.00			
PANTONE 2363 C	40.51 5.92 -13.17	40.75 4.14 -13.00	2.08	5.00			
PANTONE 2364 C	39.62 9.36 -9.01	40.09 7.95 -8.51	1.38	5.00			
PANTONE 2106 C	74.01 2.62 -13.52	74.34 1.30 -12.73	1.69	5.00			
PANTONE 2107 C	63.36 2.94 -18.93	64.03 2.55 -17.19	1.11	5.00			
PANTONE 2108 C	53.74 4.91 -23.23	53.78 3.47 -21.82	1.08	5.00			
PANTONE 2109 C	46.68 7.08 -25.81	46.65 5.83 -24.99	0.79	5.00			
PANTONE 2110 C	41.93 7.42 -27.09	41.69 5.49 -27.60	1.85	5.00			
PANTONE 2111 C	34.09 7.62 -29.05	34.15 4.68 -31.64	3.59	5.00			
PANTONE 2112 C	18.49 22.44 -37.09	18.01 23.74 -45.98	4.28	5.00			
PANTONE 2113 C	72.24 4.95 -27.48	72.25 3.39 -26.05	0.90	5.00			
PANTONE 2114 C	59.63 7.33 -32.16	59.88 6.59 -31.21	0.38	5.00			
PANTONE 2115 C	52.19 9.85 -37.30	52.38 8.16 -36.25	0.83	5.00			
PANTONE 2116 C	45.74 12.56 -41.26	45.69 11.14 -41.41	1.07	5.00			
PANTONE 2117 C	34.28 17.19 -46.75	34.14 16.06 -49.93	2.28	5.00			
PANTONE 2118 C	25.30 15.61 -39.88	25.30 13.10 -47.07	5.29	5.00			
PANTONE 2119 C	21.11 12.83 -33.90	20.51 11.59 -42.18	5.32	5.00			
PANTONE 2366 C	49.40 18.32 -51.07	49.20 17.08 -50.88	0.78	5.00			
PANTONE 2367 C	37.11 23.55 -54.43	37.18 21.67 -56.25	2.00	5.00			
PANTONE 2368 C	37.05 27.59 -61.95	37.16 25.59 -63.02	1.67	5.00			
PANTONE 2369 C	32.61 27.60 -64.58	32.85 25.41 -66.15	1.99	5.00			
PANTONE 2370 C	24.13 28.79 -58.79	24.69 26.62 -64.95	4.03	5.00			
PANTONE 2371 C	18.26 42.08 -63.54	18.65 43.25 -69.26	2.05	5.00			
PANTONE 2372 C	18.20 26.33 -50.38	18.21 27.97 -60.58	4.16	5.00			
PANTONE 538 C	82.62 -1.70 -6.89	83.03 -1.99 -6.67	0.50	5.00			
PANTONE 537 C	79.70 -1.57 -9.60	80.33 -2.14 -8.91	0.99	5.00			
PANTONE 536 C	71.83 -1.84 -13.88	72.47 -3.02 -12.99	1.57	5.00			
PANTONE 535 C	64.82 -0.58 -17.81	65.39 -0.92 -16.72	0.81	5.00			
PANTONE 534 C	21.91 1.51 -27.65	22.06 -1.04 -34.60	4.66	5.00			
PANTONE 533 C	16.99 2.57 -18.63	16.68 0.56 -26.21	5.44	5.00			
PANTONE 532 C	11.95 1.26 -7.71	10.34 -1.59 -11.25	4.73	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7541 C	88.79 -2.07 -2.07	89.12 -2.18 -2.04	0.26	5.00			
PANTONE 7542 C	74.34 -6.64 -6.78	74.89 -7.80 -6.00	1.49	5.00			
PANTONE 7543 C	66.66 -2.87 -6.78	67.07 -2.78 -6.66	0.36	5.00			
PANTONE 7544 C	54.76 -3.53 -8.98	54.47 -3.96 -10.08	0.89	5.00			
PANTONE 7545 C	34.69 -4.14 -11.59	35.98 -8.95 -12.97	4.77	5.00			
PANTONE 7546 C	22.08 -3.80 -12.10	22.51 -7.59 -17.08	4.37	5.00			
PANTONE 7547 C	10.66 -2.39 -8.98	9.96 -7.74 -10.79	5.67	5.00			
PANTONE 2162 C	67.62 -0.67 -8.54	67.89 -0.99 -7.56	0.88	5.00			
PANTONE 2163 C	62.88 -4.52 -13.03	63.05 -5.41 -11.51	1.47	5.00			
PANTONE 2164 C	59.78 -4.31 -13.92	60.01 -5.98 -11.64	2.44	5.00			
PANTONE 2165 C	52.44 -4.83 -16.05	52.52 -6.48 -14.35	2.03	5.00			
PANTONE 2166 C	46.53 -5.06 -17.58	46.46 -7.33 -17.34	2.12	5.00			
PANTONE 2167 C	44.18 -5.27 -18.16	44.21 -8.16 -18.33	2.56	5.00			
PANTONE 2168 C	29.28 -9.41 -15.62	30.08 -15.59 -18.97	4.46	5.00			
PANTONE 2373 C	53.91 -0.43 -18.26	53.89 -1.99 -16.63	1.84	5.00			
PANTONE 2374 C	39.83 0.26 -21.79	40.16 -2.98 -22.38	3.27	5.00			
PANTONE 2376 C	38.16 -0.29 -15.70	38.66 -3.90 -15.84	4.08	5.00			
PANTONE 2377 C	33.78 -5.80 -21.34	34.47 -13.20 -23.95	5.50	5.00			
PANTONE 2378 C	30.33 0.56 -20.77	30.62 -5.70 -23.75	6.46	5.00			
PANTONE 2379 C	28.87 0.25 -13.91	29.31 -4.62 -16.09	5.69	5.00			
PANTONE 2380 C	21.07 0.23 -15.86	20.90 -1.82 -21.42	4.11	5.00			
PANTONE 552 C	82.56 -7.05 -8.28	82.89 -7.16 -7.93	0.37	5.00			
PANTONE 551 C	77.70 -9.82 -10.63	77.91 -10.87 -10.07	1.11	5.00			
PANTONE 550 C	72.05 -11.59 -14.31	72.47 -12.70 -13.00	1.40	5.00			
PANTONE 549 C	63.57 -14.67 -17.60	63.62 -16.18 -15.44	1.84	5.00			
PANTONE 548 C	21.13 -20.45 -17.74	22.93 -29.20 -19.33	4.42	5.00			
PANTONE 547 C	16.50 -16.98 -13.78	18.43 -26.07 -14.60	5.20	5.00			
PANTONE 546 C	14.98 -10.74 -8.30	15.19 -20.08 -10.22	6.55	5.00			
PANTONE 5455 C	81.65 -3.77 -6.42	81.92 -3.94 -6.16	0.36	5.00			
PANTONE 5445 C	79.61 -4.16 -7.54	79.99 -4.72 -7.25	0.76	5.00			
PANTONE 5435 C	74.49 -5.11 -9.70	74.88 -6.32 -8.81	1.55	5.00			
PANTONE 5425 C	61.14 -7.08 -14.30	61.28 -8.22 -12.19	1.88	5.00			
PANTONE 5415 C	50.79 -8.19 -17.12	50.78 -10.41 -15.62	2.22	5.00			
PANTONE 5405 C	46.86 -8.71 -17.05	46.85 -11.45 -16.48	2.31	5.00			
PANTONE 5395 C	10.53 -5.17 -11.69	10.61 -11.19 -13.02	5.45	5.00			
PANTONE 2155 C	72.35 -4.41 -14.60	72.91 -5.63 -13.77	1.48	5.00			
PANTONE 2156 C	66.54 -4.71 -17.89	67.03 -5.43 -16.72	1.07	5.00			
PANTONE 2157 C	59.53 -5.08 -21.20	59.61 -6.19 -19.59	1.29	5.00			
PANTONE 2158 C	52.35 -6.11 -24.09	52.38 -8.61 -22.08	2.21	5.00			
PANTONE 2159 C	47.69 -6.08 -25.98	47.37 -8.87 -25.47	2.13	5.00			
PANTONE 2160 C	42.45 -5.76 -27.70	42.47 -9.09 -28.22	2.47	5.00			
PANTONE 2161 C	35.03 -5.05 -29.39	35.05 -10.32 -32.59	4.11	5.00			
PANTONE 2134 C	67.37 0.84 -24.15	68.16 -0.65 -22.98	1.35	5.00			
PANTONE 2135 C	57.69 1.83 -30.87	57.71 0.74 -29.57	0.55	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2136 C	60.84 0.45 -21.58	61.31 -0.51 -20.14	1.06	5.00			
PANTONE 2137 C	53.11 1.64 -25.06	53.24 0.15 -23.65	1.11	5.00			
PANTONE 2138 C	48.78 -1.55 -18.10	48.89 -2.73 -17.58	1.28	5.00			
PANTONE 2139 C	43.53 -0.56 -28.26	43.40 -3.08 -28.26	2.05	5.00			
PANTONE 2140 C	34.75 1.84 -30.60	34.55 -1.46 -33.70	3.64	5.00			
PANTONE 642 C	87.28 -2.38 -6.47	87.43 -2.58 -6.46	0.27	5.00			
PANTONE 643 C	84.48 -3.11 -9.17	84.71 -3.35 -9.26	0.32	5.00			
PANTONE 644 C	73.09 -5.11 -17.54	73.50 -6.19 -16.79	1.19	5.00			
PANTONE 645 C	64.46 -6.05 -22.87	64.94 -7.29 -21.86	1.20	5.00			
PANTONE 646 C	55.47 -6.59 -27.51	55.66 -7.76 -26.05	0.99	5.00			
PANTONE 647 C	38.67 -6.46 -34.10	38.39 -9.89 -36.44	2.61	5.00			
PANTONE 648 C	17.58 -0.28 -34.43	20.07 -2.60 -40.15	3.86	5.00			
PANTONE 649 C	89.42 -1.10 -4.55	89.58 -1.45 -4.25	0.56	5.00			
PANTONE 650 C	86.18 -1.72 -7.63	86.47 -1.95 -7.66	0.35	5.00			
PANTONE 651 C	75.18 -2.96 -15.91	75.30 -4.16 -15.53	1.31	5.00			
PANTONE 652 C	62.71 -3.60 -23.39	63.04 -4.58 -22.64	0.91	5.00			
PANTONE 653 C	39.75 -3.38 -33.87	39.29 -7.25 -35.28	3.01	5.00			
PANTONE 654 C	23.48 0.35 -37.21	23.31 -2.65 -44.14	4.20	5.00			
PANTONE 655 C	14.44 3.65 -33.47	17.28 3.20 -40.74	3.93	5.00			
PANTONE 656 C	90.37 -1.20 -5.13	90.23 -1.62 -4.34	0.89	5.00			
PANTONE 657 C	85.39 -2.34 -11.66	85.34 -2.86 -10.64	0.96	5.00			
PANTONE 658 C	79.83 -3.12 -18.57	79.80 -3.91 -17.65	0.94	5.00			
PANTONE 659 C	65.86 -3.24 -33.52	65.92 -4.41 -33.02	0.76	5.00			
PANTONE 660 C	51.10 -1.33 -46.51	50.97 -3.26 -46.87	1.35	5.00			
PANTONE 661 C	23.49 13.88 -59.77	24.98 12.48 -64.94	3.04	5.00			
PANTONE 662 C	13.93 21.33 -52.55	16.20 24.21 -58.90	2.31	5.00			
PANTONE 2127 C	80.20 -2.41 -14.44	80.22 -2.95 -14.27	0.62	5.00			
PANTONE 2128 C	72.85 -2.27 -27.25	72.72 -3.68 -26.11	1.04	5.00			
PANTONE 2129 C	57.78 0.92 -45.45	57.95 -0.86 -44.78	1.04	5.00			
PANTONE 2130 C	50.37 8.95 -51.85	50.25 7.21 -51.61	1.10	5.00			
PANTONE 2131 C	40.01 12.92 -57.30	40.01 10.20 -58.46	2.23	5.00			
PANTONE 2132 C	37.95 11.84 -63.84	37.77 8.54 -65.27	2.57	5.00			
PANTONE 2133 C	36.61 3.64 -48.80	36.07 0.03 -51.70	3.27	5.00			
PANTONE 7450 C	79.30 0.58 -12.16	79.60 0.05 -11.50	0.81	5.00			
PANTONE 7451 C	68.79 -1.03 -33.14	68.91 -2.19 -32.28	0.68	5.00			
PANTONE 7452 C	61.97 6.90 -40.28	62.43 5.45 -39.21	0.77	5.00			
PANTONE 7453 C	66.40 -3.24 -34.00	66.35 -4.30 -33.36	0.66	5.00			
PANTONE 7454 C	56.68 -7.85 -26.05	56.58 -9.14 -24.11	1.28	5.00			
PANTONE 7455 C	40.11 7.71 -47.84	39.88 5.50 -49.41	2.11	5.00			
PANTONE 7456 C	47.53 9.04 -38.80	47.22 8.03 -38.68	0.75	5.00			
PANTONE 2120 C	81.20 0.54 -17.31	81.21 0.08 -16.24	0.72	5.00			
PANTONE 2121 C	69.22 -2.39 -26.58	69.63 -3.47 -25.93	0.88	5.00			
PANTONE 2122 C	70.99 2.42 -29.75	70.98 0.99 -28.53	0.81	5.00			
PANTONE 2123 C	61.23 5.37 -41.03	61.58 3.88 -39.94	0.76	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2124 C	53.73 13.12 -47.87	53.55 12.11 -47.74	0.67	5.00			
PANTONE 2125 C	44.35 17.99 -56.21	44.41 16.21 -56.42	1.27	5.00			
PANTONE 2126 C	30.50 27.69 -66.20	30.52 25.03 -68.44	2.54	5.00			
PANTONE 2706 C	84.34 0.96 -13.05	84.04 0.35 -11.83	1.07	5.00			
PANTONE 2716 C	71.39 4.15 -29.58	71.07 2.87 -28.40	0.72	5.00			
PANTONE 2726 C	42.03 18.21 -59.56	42.24 15.61 -59.63	1.75	5.00			
PANTONE 2736 C	23.38 35.72 -72.62	24.21 33.60 -75.34	2.36	5.00			
PANTONE 2746 C	18.90 31.17 -63.91	19.28 32.20 -69.88	2.18	5.00			
PANTONE 2756 C	15.86 19.25 -47.15	16.41 21.17 -55.55	3.19	5.00			
PANTONE 2766 C	12.06 11.24 -32.56	13.33 15.81 -42.27	3.44	5.00			
PANTONE 2708 C	81.17 -1.88 -17.59	81.36 -2.32 -16.45	0.78	5.00			
PANTONE 2718 C	56.19 3.05 -47.99	56.62 1.32 -46.95	0.96	5.00			
PANTONE 2728 C	32.49 17.83 -68.09	32.77 14.52 -69.77	2.70	5.00			
PANTONE 2738 C	14.10 39.35 -70.21	16.27 39.34 -70.87	1.46	5.00			
PANTONE 2748 C	13.46 22.40 -53.72	15.80 26.29 -59.76	2.18	5.00			
PANTONE 2758 C	13.46 13.97 -43.85	17.01 14.45 -51.48	4.15	5.00			
PANTONE 2768 C	11.35 6.40 -30.51	13.73 9.72 -38.91	3.07	5.00			
PANTONE 2707 C	84.78 -2.90 -14.25	84.73 -3.43 -12.47	1.31	5.00			
PANTONE 2717 C	78.48 -3.54 -23.66	78.09 -4.41 -21.91	1.02	5.00			
PANTONE 2727 C	51.94 3.00 -59.13	50.81 0.63 -56.40	1.43	5.00			
PANTONE Blue 072 C	17.51 42.91 -75.99	18.56 42.42 -76.86	0.92	5.00			
PANTONE 2747 C	13.69 21.79 -54.48	15.99 26.07 -60.48	2.14	5.00			
PANTONE 2757 C	13.17 12.50 -43.26	17.30 12.96 -50.93	4.34	5.00			
PANTONE 2767 C	16.03 1.68 -24.69	16.89 -0.98 -31.80	5.06	5.00			
PANTONE 277 C	79.74 -5.35 -19.36	79.38 -6.28 -18.37	1.06	5.00			
PANTONE 278 C	72.77 -6.30 -29.68	72.58 -7.63 -28.45	0.97	5.00			
PANTONE 279 C	56.88 -4.57 -48.89	56.82 -6.34 -47.93	0.95	5.00			
PANTONE Reflex Blue C	14.93 31.87 -67.09	17.11 34.34 -69.24	1.66	5.00			
PANTONE 280 C	15.12 15.25 -46.45	16.41 17.67 -53.92	2.49	5.00			
PANTONE 281 C	12.83 9.00 -40.57	17.49 9.69 -48.57	4.48	5.00			
PANTONE 282 C	11.08 2.49 -26.27	14.81 2.09 -32.79	4.15	5.00			
PANTONE 283 C	75.55 -8.39 -25.86	75.26 -9.40 -24.92	0.87	5.00			
PANTONE 284 C	67.48 -9.15 -35.99	67.26 -10.70 -35.04	0.99	5.00			
PANTONE 285 C	45.28 -4.66 -58.86	45.13 -8.85 -59.31	2.44	5.00			
PANTONE 286 C	22.97 17.93 -67.91	24.71 18.60 -70.30	1.38	5.00			
PANTONE 287 C	20.88 12.55 -56.10	22.78 12.05 -61.80	2.88	5.00			
PANTONE 288 C	18.64 8.34 -46.55	20.29 7.93 -53.62	3.32	5.00			
PANTONE 289 C	13.09 0.07 -21.59	14.43 -1.88 -28.20	4.32	5.00			
PANTONE 7681 C	68.34 -1.01 -20.52	68.68 -2.48 -19.30	1.53	5.00			
PANTONE 7682 C	55.12 -1.18 -30.02	54.98 -2.61 -28.60	0.89	5.00			
PANTONE 7683 C	44.84 -0.36 -38.08	44.28 -2.95 -38.49	2.01	5.00			
PANTONE 7684 C	39.32 2.46 -39.69	38.86 -0.16 -41.69	2.55	5.00			
PANTONE 7685 C	36.03 2.72 -41.06	35.52 -0.83 -44.11	3.47	5.00			
PANTONE 7686 C	32.98 2.30 -42.39	32.81 -1.82 -46.36	4.00	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7687 C	28.50 7.81 -44.93	28.07 5.43 -50.98	3.99	5.00			
PANTONE 2141 C	74.30 -9.70 -27.22	74.13 -10.70 -26.07	0.87	5.00			
PANTONE 2142 C	68.70 -5.21 -33.18	68.75 -6.48 -32.51	0.82	5.00			
PANTONE 2143 C	53.64 -6.22 -44.07	53.54 -8.26 -44.03	1.27	5.00			
PANTONE 2144 C	41.46 -2.49 -53.14	41.06 -6.48 -54.71	2.72	5.00			
PANTONE 2145 C	32.13 3.96 -57.82	32.24 0.37 -61.27	3.15	5.00			
PANTONE 2146 C	23.25 12.48 -56.45	24.62 10.92 -62.81	3.55	5.00			
PANTONE 2147 C	17.78 16.21 -50.90	18.77 17.86 -59.10	2.90	5.00			
PANTONE 545 C	85.71 -4.74 -9.47	85.71 -5.04 -9.55	0.32	5.00			
PANTONE 544 C	83.90 -5.49 -11.72	83.99 -5.72 -11.21	0.45	5.00			
PANTONE 543 C	78.31 -7.56 -17.55	78.22 -8.40 -17.51	0.73	5.00			
PANTONE 542 C	68.58 -10.02 -25.38	68.53 -11.04 -25.01	0.74	5.00			
PANTONE 541 C	22.58 -6.99 -39.13	23.54 -9.89 -42.96	2.55	5.00			
PANTONE 540 C	17.52 -7.11 -30.38	20.47 -11.30 -33.66	3.76	5.00			
PANTONE 539 C	13.35 -6.52 -17.26	15.05 -12.57 -20.00	4.84	5.00			
PANTONE 290 C	84.61 -7.91 -13.11	84.65 -8.19 -11.81	0.93	5.00			
PANTONE 291 C	78.99 -10.56 -21.90	78.99 -11.63 -20.52	1.14	5.00			
PANTONE 292 C	69.37 -13.01 -34.50	69.29 -14.26 -33.55	0.83	5.00			
PANTONE 293 C	25.77 11.10 -66.52	27.40 11.36 -68.32	1.30	5.00			
PANTONE 294 C	18.85 3.71 -42.52	20.32 3.04 -48.68	2.89	5.00			
PANTONE 295 C	14.80 -1.74 -33.72	18.76 -3.63 -38.10	3.74	5.00			
PANTONE 296 C	8.97 -4.25 -13.91	9.67 -8.28 -15.13	3.84	5.00			
PANTONE 2905 C	77.15 -13.41 -23.37	77.28 -14.34 -22.89	0.70	5.00			
PANTONE 2915 C	69.52 -15.93 -33.41	69.41 -16.94 -33.12	0.60	5.00			
PANTONE 2925 C	59.54 -17.20 -45.05	59.83 -18.84 -44.34	0.92	5.00			
PANTONE 2935 C	34.02 -2.18 -64.18	34.49 -4.08 -64.44	1.19	5.00			
PANTONE 2945 C	29.18 -5.84 -52.85	30.30 -8.09 -55.78	2.02	5.00			
PANTONE 2955 C	20.92 -8.22 -34.39	22.72 -12.22 -37.62	3.14	5.00			
PANTONE 2965 C	13.18 -7.15 -20.26	16.04 -13.02 -22.59	4.68	5.00			
PANTONE 2169 C	69.09 -9.81 -23.28	69.54 -10.59 -22.87	0.71	5.00			
PANTONE 2170 C	60.88 -11.35 -29.22	61.21 -13.08 -28.10	1.26	5.00			
PANTONE 2171 C	62.02 -12.22 -41.69	62.26 -13.41 -40.74	0.74	5.00			
PANTONE 2172 C	49.31 -3.27 -53.92	49.45 -6.08 -53.97	1.70	5.00			
PANTONE 2173 C	51.77 -10.01 -52.26	51.78 -12.70 -52.13	1.48	5.00			
PANTONE 2174 C	46.45 -7.66 -57.05	46.12 -11.34 -57.55	2.11	5.00			
PANTONE 2175 C	41.23 -7.50 -61.12	41.13 -11.54 -61.92	2.26	5.00			
PANTONE 2381 C	59.47 -2.59 -43.19	59.51 -4.07 -42.38	0.82	5.00			
PANTONE 2382 C	53.88 -10.49 -50.50	53.77 -12.93 -50.22	1.34	5.00			
PANTONE 2383 C	46.10 -8.68 -38.85	45.87 -12.45 -38.84	2.31	5.00			
PANTONE 2384 C	37.71 -10.37 -44.27	37.64 -15.59 -46.57	3.08	5.00			
PANTONE 2386 C	43.96 5.32 -54.88	43.56 3.30 -56.07	1.71	5.00			
PANTONE 2387 C	41.30 7.23 -61.41	41.05 4.80 -62.83	1.96	5.00			
PANTONE 2388 C	33.51 6.98 -63.21	33.58 3.46 -65.62	2.84	5.00			
PANTONE 297 C	74.87 -19.62 -26.80	74.67 -20.48 -26.34	0.58	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 298 C	68.72 -22.48 -35.07	68.59 -23.67 -34.58	0.66	5.00			
PANTONE 299 C	60.98 -24.33 -44.17	60.95 -26.28 -43.68	0.93	5.00			
PANTONE 300 C	35.78 -9.69 -62.01	36.16 -10.62 -62.15	0.60	5.00			
PANTONE 301 C	27.77 -12.34 -45.35	29.19 -16.75 -47.15	2.70	5.00			
PANTONE 302 C	21.51 -13.48 -27.98	23.71 -19.54 -30.87	3.70	5.00			
PANTONE 303 C	14.76 -9.13 -15.20	15.78 -15.98 -18.02	4.94	5.00			
PANTONE 7688 C	59.17 -13.90 -34.78	59.42 -15.96 -33.59	1.32	5.00			
PANTONE 7689 C	54.99 -16.06 -36.37	54.83 -18.99 -35.29	1.69	5.00			
PANTONE 7690 C	45.30 -16.87 -37.13	44.67 -21.74 -37.52	2.54	5.00			
PANTONE 7691 C	37.46 -13.79 -39.70	37.33 -19.25 -41.73	2.94	5.00			
PANTONE 7692 C	33.39 -9.49 -35.71	33.26 -15.05 -39.42	3.59	5.00			
PANTONE 7693 C	28.60 -6.85 -32.56	28.51 -12.58 -37.80	4.33	5.00			
PANTONE 7694 C	25.89 -6.10 -29.51	25.75 -11.12 -35.16	4.23	5.00			
PANTONE 2148 C	57.57 -9.01 -24.59	57.51 -10.25 -22.60	1.36	5.00			
PANTONE 2149 C	51.58 -9.84 -26.99	51.42 -12.88 -25.41	2.21	5.00			
PANTONE 2150 C	45.92 -10.19 -29.48	45.95 -14.32 -28.88	2.64	5.00			
PANTONE 2151 C	42.65 -6.93 -37.40	42.11 -10.51 -38.53	2.46	5.00			
PANTONE 2152 C	39.65 -10.62 -31.15	39.11 -15.27 -33.06	2.90	5.00			
PANTONE 2153 C	33.24 -10.81 -30.89	33.28 -17.03 -34.62	3.78	5.00			
PANTONE 2154 C	27.74 -3.01 -40.86	27.42 -6.58 -46.81	3.68	5.00			
PANTONE 2183 C	55.17 -23.72 -33.73	55.04 -27.00 -32.72	1.71	5.00			
PANTONE 2184 C	50.72 -14.21 -53.81	50.60 -16.82 -54.41	1.36	5.00			
PANTONE 2185 C	43.94 -23.46 -37.67	43.58 -28.87 -38.14	2.41	5.00			
PANTONE 2186 C	27.73 -8.27 -45.13	28.74 -12.19 -48.85	2.87	5.00			
PANTONE 2187 C	26.52 -10.58 -37.12	27.30 -16.21 -41.20	3.57	5.00			
PANTONE 2188 C	24.77 -10.93 -31.62	25.09 -16.13 -35.88	3.34	5.00			
PANTONE 2189 C	19.05 -9.08 -19.00	19.71 -14.80 -23.12	4.07	5.00			
PANTONE 2975 C	81.71 -16.69 -17.39	81.50 -16.64 -16.88	0.32	5.00			
PANTONE 2985 C	72.97 -23.26 -29.54	72.82 -23.70 -29.26	0.30	5.00			
PANTONE 2995 C	62.55 -27.77 -42.03	62.67 -29.00 -41.52	0.62	5.00			
PANTONE 3005 C	43.92 -21.28 -57.94	43.62 -23.38 -57.92	0.98	5.00			
PANTONE 3015 C	35.84 -22.46 -44.59	36.25 -27.08 -45.83	2.04	5.00			
PANTONE 3025 C	28.75 -21.46 -30.11	29.36 -29.14 -33.14	3.42	5.00			
PANTONE 3035 C	22.55 -17.09 -19.03	23.90 -24.68 -21.57	4.05	5.00			
PANTONE 2190 C	69.57 -19.36 -33.95	69.46 -20.08 -33.50	0.46	5.00			
PANTONE 2191 C	61.76 -20.28 -43.36	61.31 -20.93 -43.10	0.52	5.00			
PANTONE 2192 C	53.92 -23.81 -52.14	53.88 -27.16 -51.87	1.48	5.00			
PANTONE 2193 C	54.57 -19.95 -51.18	54.51 -23.01 -50.82	1.45	5.00			
PANTONE 2194 C	50.17 -21.88 -55.58	50.00 -25.40 -55.61	1.57	5.00			
PANTONE 2195 C	45.73 -11.67 -58.88	45.59 -15.42 -59.37	1.96	5.00			
PANTONE 2196 C	39.41 -17.40 -51.91	39.08 -21.05 -53.29	1.80	5.00			
PANTONE 7695 C	65.68 -11.41 -16.30	65.89 -12.54 -15.08	1.28	5.00			
PANTONE 7696 C	59.81 -14.57 -17.69	59.64 -15.95 -15.17	1.96	5.00			
PANTONE 7697 C	52.98 -14.03 -20.25	52.70 -16.76 -18.43	2.27	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7698 C	45.69 -11.87 -19.89	45.59 -15.74 -19.40	2.69	5.00			
PANTONE 7699 C	39.94 -10.92 -20.42	40.20 -16.27 -21.36	3.47	5.00			
PANTONE 7700 C	35.76 -11.36 -26.23	35.85 -18.12 -29.08	3.97	5.00			
PANTONE 7701 C	32.77 -17.42 -26.61	33.35 -26.52 -30.06	4.39	5.00			
PANTONE 2176 C	73.48 -5.07 -6.98	73.64 -6.23 -5.87	1.66	5.00			
PANTONE 2177 C	63.39 -9.36 -11.00	63.34 -10.27 -8.84	1.88	5.00			
PANTONE 2178 C	56.81 -10.24 -12.02	56.80 -12.11 -9.42	2.66	5.00			
PANTONE 2179 C	48.61 -11.34 -13.74	48.44 -14.22 -13.16	2.37	5.00			
PANTONE 2180 C	42.75 -12.50 -15.21	42.95 -16.57 -15.62	2.83	5.00			
PANTONE 2181 C	35.60 -12.89 -15.94	36.51 -21.27 -17.94	5.14	5.00			
PANTONE 2182 C	28.52 -12.69 -16.13	29.44 -18.46 -19.69	3.77	5.00			
PANTONE 2204 C	80.24 -8.52 -9.46	80.33 -9.08 -9.30	0.57	5.00			
PANTONE 2205 C	69.85 -10.79 -14.99	70.30 -11.81 -13.45	1.46	5.00			
PANTONE 2206 C	62.93 -9.52 -16.94	62.88 -10.43 -15.02	1.49	5.00			
PANTONE 2207 C	60.14 -13.25 -19.30	59.98 -14.50 -17.12	1.67	5.00			
PANTONE 2208 C	53.91 -12.35 -20.84	53.60 -14.45 -18.62	2.10	5.00			
PANTONE 2209 C	52.16 -14.20 -21.81	51.70 -16.92 -19.99	2.21	5.00			
PANTONE 2210 C	30.71 -9.77 -26.81	31.28 -17.60 -30.98	4.83	5.00			
PANTONE 7457 C	85.58 -9.68 -9.28	85.61 -9.61 -9.07	0.15	5.00			
PANTONE 7458 C	68.47 -16.99 -19.34	68.62 -18.11 -18.46	0.96	5.00			
PANTONE 7459 C	58.13 -20.39 -24.18	57.96 -22.42 -22.09	1.72	5.00			
PANTONE 7460 C	47.06 -40.80 -48.59	47.00 -42.13 -48.23	0.53	5.00			
PANTONE 7461 C	47.34 -19.87 -44.46	46.66 -24.64 -45.05	2.31	5.00			
PANTONE 7462 C	32.94 -9.31 -39.41	32.75 -14.21 -43.49	3.29	5.00			
PANTONE 7463 C	15.65 -5.49 -24.29	17.99 -9.90 -28.18	4.06	5.00			
PANTONE 304 C	82.96 -19.01 -14.61	82.38 -18.68 -13.93	0.56	5.00			
PANTONE 305 C	75.41 -27.30 -26.25	74.71 -27.44 -25.83	0.56	5.00			
PANTONE 306 C	65.95 -35.06 -38.03	65.72 -36.10 -37.99	0.46	5.00			
PANTONE Process Blue C	47.57 -33.39 -53.38	47.21 -35.22 -53.67	0.75	5.00			
PANTONE 307 C	38.39 -29.82 -47.04	38.98 -32.37 -47.14	1.14	5.00			
PANTONE 308 C	31.32 -28.04 -33.11	32.10 -33.98 -35.22	2.43	5.00			
PANTONE 309 C	21.02 -18.67 -15.84	22.20 -27.61 -17.80	4.60	5.00			
PANTONE 635 C	83.57 -16.08 -13.32	83.32 -15.82 -12.57	0.48	5.00			
PANTONE 636 C	80.07 -20.23 -17.96	80.05 -20.39 -17.69	0.20	5.00			
PANTONE 637 C	72.48 -27.50 -26.49	72.60 -28.22 -26.25	0.40	5.00			
PANTONE 638 C	63.99 -33.79 -34.95	64.13 -34.96 -34.72	0.53	5.00			
PANTONE 639 C	53.78 -37.57 -42.62	53.64 -40.71 -42.86	1.14	5.00			
PANTONE 640 C	46.52 -35.92 -45.77	46.08 -39.18 -45.90	1.28	5.00			
PANTONE 641 C	36.73 -28.64 -46.37	37.72 -31.85 -46.17	1.58	5.00			
PANTONE 2389 C	61.22 -17.05 -30.18	61.51 -18.57 -28.85	1.14	5.00			
PANTONE 2390 C	47.96 -16.69 -34.44	47.72 -20.46 -33.93	2.05	5.00			
PANTONE 2391 C	48.86 -23.04 -29.93	48.46 -27.07 -29.07	2.11	5.00			
PANTONE 2392 C	40.12 -16.02 -24.78	39.98 -20.76 -26.69	2.51	5.00			
PANTONE 2393 C	53.38 -31.03 -44.53	52.79 -33.44 -45.32	1.07	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2394 C	50.70 -30.83 -50.75	50.67 -34.36 -51.06	1.35	5.00			
PANTONE 2396 C	55.09 -40.04 -27.60	54.87 -43.96 -27.08	1.62	5.00			
PANTONE 7702 C	63.94 -22.86 -24.71	64.03 -24.00 -23.60	0.92	5.00			
PANTONE 7703 C	57.91 -28.05 -29.65	57.69 -30.75 -28.72	1.43	5.00			
PANTONE 7704 C	48.96 -30.25 -34.13	48.19 -35.56 -34.32	2.31	5.00			
PANTONE 7705 C	41.27 -26.23 -32.91	41.13 -33.09 -33.49	2.92	5.00			
PANTONE 7706 C	39.47 -23.78 -30.72	39.47 -30.88 -31.89	3.09	5.00			
PANTONE 7707 C	36.25 -21.56 -26.58	36.83 -30.22 -28.64	3.91	5.00			
PANTONE 7708 C	31.92 -21.16 -24.36	32.73 -31.58 -27.68	4.67	5.00			
PANTONE 2197 C	78.56 -25.36 -20.53	78.10 -25.03 -19.56	0.58	5.00			
PANTONE 2198 C	74.44 -30.51 -25.29	74.07 -30.68 -25.38	0.28	5.00			
PANTONE 2199 C	67.72 -37.84 -32.01	67.68 -38.25 -32.30	0.16	5.00			
PANTONE 2200 C	62.64 -29.81 -27.77	62.49 -31.36 -26.97	0.90	5.00			
PANTONE 2201 C	62.36 -41.57 -37.09	62.37 -43.15 -37.01	0.60	5.00			
PANTONE 2202 C	59.46 -36.91 -46.36	58.99 -39.24 -46.39	0.96	5.00			
PANTONE 2203 C	49.03 -34.49 -34.76	48.41 -40.12 -34.42	2.36	5.00			
PANTONE 628 C	85.37 -12.05 -7.14	85.31 -12.09 -6.96	0.15	5.00			
PANTONE 629 C	80.54 -16.90 -12.09	80.63 -17.70 -12.01	0.55	5.00			
PANTONE 630 C	74.52 -21.97 -17.05	74.78 -22.72 -16.42	0.66	5.00			
PANTONE 631 C	66.08 -27.83 -23.17	66.25 -28.97 -22.13	0.89	5.00			
PANTONE 632 C	53.78 -33.89 -29.52	53.31 -38.29 -28.37	2.11	5.00			
PANTONE 633 C	41.39 -34.31 -32.95	41.40 -41.87 -32.96	2.96	5.00			
PANTONE 634 C	33.83 -30.32 -32.94	34.42 -37.65 -34.37	2.87	5.00			
PANTONE 310 C	77.66 -27.66 -20.35	77.38 -27.29 -19.69	0.39	5.00			
PANTONE 311 C	71.45 -35.22 -26.93	71.24 -35.26 -26.76	0.18	5.00			
PANTONE 312 C	60.14 -45.23 -36.10	59.97 -47.21 -36.39	0.67	5.00			
PANTONE 313 C	51.11 -47.45 -40.78	50.56 -50.19 -40.87	1.06	5.00			
PANTONE 314 C	44.54 -44.06 -36.16	44.19 -48.15 -36.01	1.51	5.00			
PANTONE 315 C	36.32 -36.78 -27.07	36.80 -45.28 -28.66	3.05	5.00			
PANTONE 316 C	25.98 -22.55 -13.41	27.29 -31.03 -16.15	4.05	5.00			
PANTONE 3105 C	77.83 -29.62 -17.98	77.79 -29.33 -17.55	0.23	5.00			
PANTONE 3115 C	69.70 -40.27 -24.94	69.94 -40.32 -24.58	0.26	5.00			
PANTONE 3125 C	61.41 -48.95 -30.32	61.52 -49.69 -30.45	0.25	5.00			
PANTONE 3135 C	48.70 -53.92 -34.22	48.18 -56.10 -34.25	0.87	5.00			
PANTONE 3145 C	41.39 -45.42 -27.11	41.24 -52.39 -27.36	2.38	5.00			
PANTONE 3155 C	34.27 -38.81 -22.18	35.13 -47.26 -25.25	2.95	5.00			
PANTONE 3165 C	27.67 -30.20 -16.27	29.35 -38.84 -18.81	3.63	5.00			
PANTONE 7709 C	67.26 -23.40 -14.26	67.30 -24.43 -12.90	1.15	5.00			
PANTONE 7710 C	61.09 -36.00 -20.41	60.86 -37.63 -19.01	1.20	5.00			
PANTONE 7711 C	54.01 -44.06 -24.32	53.53 -48.28 -23.44	1.81	5.00			
PANTONE 7712 C	47.60 -40.32 -26.36	47.42 -46.90 -25.48	2.66	5.00			
PANTONE 7713 C	44.43 -41.72 -21.10	44.79 -49.75 -20.89	2.95	5.00			
PANTONE 7714 C	42.37 -39.52 -18.06	43.23 -48.19 -18.61	3.17	5.00			
PANTONE 7715 C	35.40 -31.63 -14.41	36.94 -43.26 -16.66	4.55	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2218 C	67.50 -18.11 -14.70	67.75 -19.28 -13.37	1.28	5.00			
PANTONE 2219 C	62.57 -20.06 -16.64	62.73 -21.53 -14.63	1.68	5.00			
PANTONE 2220 C	57.43 -21.46 -18.44	57.16 -23.19 -16.53	1.68	5.00			
PANTONE 2221 C	53.04 -23.61 -19.74	52.53 -26.40 -18.27	1.93	5.00			
PANTONE 2222 C	49.32 -23.07 -21.04	49.19 -26.84 -19.97	2.17	5.00			
PANTONE 2223 C	45.05 -23.51 -22.31	44.98 -28.67 -22.41	2.50	5.00			
PANTONE 2224 C	39.05 -23.07 -23.65	39.22 -29.86 -25.62	3.03	5.00			
PANTONE 317 C	86.69 -17.21 -6.32	85.95 -16.40 -5.77	0.77	5.00			
PANTONE 318 C	81.89 -26.13 -11.44	81.51 -25.02 -10.64	0.69	5.00			
PANTONE 319 C	74.08 -39.12 -17.23	74.12 -38.73 -17.22	0.15	5.00			
PANTONE 320 C	53.32 -62.50 -24.76	52.99 -64.55 -24.79	0.67	5.00			
PANTONE 321 C	48.42 -56.38 -22.13	48.31 -61.65 -21.89	1.65	5.00			
PANTONE 322 C	40.17 -45.41 -16.86	40.92 -55.25 -18.56	3.11	5.00			
PANTONE 323 C	33.77 -36.31 -12.62	35.05 -47.21 -15.02	3.94	5.00			
PANTONE 2225 C	79.48 -27.02 -16.34	79.00 -26.52 -15.89	0.44	5.00			
PANTONE 2226 C	74.16 -35.03 -20.87	73.90 -34.97 -20.63	0.22	5.00			
PANTONE 2227 C	70.96 -28.44 -16.60	71.09 -29.25 -15.96	0.63	5.00			
PANTONE 2228 C	57.76 -53.04 -30.87	57.24 -54.88 -31.39	0.71	5.00			
PANTONE 2229 C	54.17 -54.25 -32.41	53.94 -56.49 -32.63	0.71	5.00			
PANTONE 2230 C	50.46 -39.20 -25.53	49.91 -45.08 -24.76	2.48	5.00			
PANTONE 2231 C	43.95 -39.41 -27.00	44.05 -47.32 -26.65	3.03	5.00			
PANTONE 7464 C	79.94 -17.40 -3.04	80.29 -17.83 -2.39	0.63	5.00			
PANTONE 7465 C	70.31 -40.43 -1.75	70.69 -41.36 -0.44	0.94	5.00			
PANTONE 7466 C	61.58 -54.47 -22.90	61.59 -55.37 -22.76	0.32	5.00			
PANTONE 7467 C	56.28 -59.48 -24.34	55.56 -61.26 -24.86	0.83	5.00			
PANTONE 7468 C	43.12 -23.83 -30.81	42.55 -30.20 -31.47	2.88	5.00			
PANTONE 7469 C	35.16 -22.50 -32.41	35.13 -29.85 -34.78	3.18	5.00			
PANTONE 7470 C	33.12 -23.18 -22.09	34.23 -33.92 -25.20	4.72	5.00			
PANTONE 7471 C	81.52 -31.20 -6.21	81.05 -29.83 -5.66	0.72	5.00			
PANTONE 7472 C	68.63 -29.88 -7.00	68.93 -30.88 -5.05	1.49	5.00			
PANTONE 7473 C	56.37 -35.52 -2.54	56.43 -37.69 -1.08	1.29	5.00			
PANTONE 7474 C	42.92 -35.45 -18.13	43.19 -43.49 -18.87	3.03	5.00			
PANTONE 7475 C	47.54 -17.80 -6.90	47.85 -21.68 -6.25	2.54	5.00			
PANTONE 7476 C	30.67 -19.67 -9.94	31.95 -26.70 -12.69	3.83	5.00			
PANTONE 7477 C	29.77 -11.47 -13.02	30.54 -17.53 -16.33	4.25	5.00			
PANTONE 2211 C	60.73 -12.84 -10.65	60.60 -14.01 -8.12	2.21	5.00			
PANTONE 2212 C	51.86 -15.05 -13.17	51.91 -18.13 -11.58	2.62	5.00			
PANTONE 2213 C	43.36 -19.09 -11.78	44.23 -24.47 -11.73	3.19	5.00			
PANTONE 2214 C	42.57 -17.34 -14.00	43.26 -22.68 -14.25	3.21	5.00			
PANTONE 2215 C	33.81 -10.93 -14.35	34.92 -19.47 -16.41	5.73	5.00			
PANTONE 2216 C	30.48 -9.37 -11.39	31.15 -14.75 -14.13	4.22	5.00			
PANTONE 2217 C	20.88 -15.04 -10.25	21.18 -23.59 -13.35	5.06	5.00			
PANTONE 5523 C	81.09 -8.19 -3.98	81.27 -8.52 -3.38	0.64	5.00			
PANTONE 5513 C	78.08 -9.49 -5.10	78.12 -10.36 -4.38	1.06	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 5503 C	71.78 -11.81 -6.86	72.22 -13.13 -5.44	1.71	5.00			
PANTONE 5493 C	65.99 -13.63 -8.28	66.17 -14.53 -6.14	1.86	5.00			
PANTONE 5483 C	52.14 -17.65 -10.82	52.16 -20.43 -9.43	2.23	5.00			
PANTONE 5473 C	35.43 -20.62 -12.80	36.77 -30.36 -14.94	4.83	5.00			
PANTONE 5463 C	13.48 -10.11 -8.23	12.90 -18.38 -8.90	6.21	5.00			
PANTONE 2232 C	67.24 -20.32 -9.93	67.67 -21.45 -7.78	1.81	5.00			
PANTONE 2233 C	63.33 -23.87 -13.38	63.57 -25.28 -10.92	1.95	5.00			
PANTONE 2234 C	60.37 -24.72 -12.35	60.72 -26.40 -9.17	2.50	5.00			
PANTONE 2235 C	55.18 -28.47 -15.47	54.96 -30.89 -13.60	1.86	5.00			
PANTONE 2236 C	54.55 -28.07 -14.28	54.30 -30.27 -13.23	1.41	5.00			
PANTONE 2237 C	50.09 -29.63 -14.80	50.12 -33.33 -13.99	1.88	5.00			
PANTONE 2238 C	38.04 -32.18 -18.23	39.19 -42.10 -20.00	3.90	5.00			
PANTONE 7716 C	54.49 -38.62 -8.68	54.69 -41.31 -7.47	1.39	5.00			
PANTONE 7717 C	47.51 -43.33 -8.58	48.02 -49.41 -8.98	2.05	5.00			
PANTONE 7718 C	41.82 -43.38 -10.96	43.37 -52.65 -12.39	3.26	5.00			
PANTONE 7719 C	39.15 -37.39 -8.50	40.86 -47.35 -10.53	3.76	5.00			
PANTONE 7720 C	35.69 -33.64 -5.81	37.78 -44.54 -7.55	4.35	5.00			
PANTONE 7721 C	34.24 -28.95 -8.87	36.27 -39.79 -10.54	4.61	5.00			
PANTONE 7722 C	29.60 -24.47 -8.16	31.19 -31.71 -10.90	3.61	5.00			
PANTONE 324 C	82.77 -21.06 -6.67	83.01 -20.63 -6.29	0.36	5.00			
PANTONE 325 C	75.51 -32.39 -9.37	75.65 -32.55 -9.03	0.27	5.00			
PANTONE 326 C	63.28 -48.78 -10.62	63.53 -49.92 -9.01	1.10	5.00			
PANTONE 327 C	45.68 -64.22 -6.97	45.84 -70.11 -7.97	1.49	5.00			
PANTONE 328 C	39.60 -53.21 -7.36	40.63 -63.10 -10.06	3.01	5.00			
PANTONE 329 C	36.07 -45.69 -6.92	37.42 -56.80 -8.68	3.56	5.00			
PANTONE 330 C	30.20 -26.52 -3.83	31.85 -34.02 -5.97	3.61	5.00			
PANTONE 3242 C	80.59 -33.89 -7.99	79.85 -32.41 -7.55	0.80	5.00			
PANTONE 3252 C	75.45 -43.93 -10.04	75.38 -43.23 -9.67	0.29	5.00			
PANTONE 3262 C	66.44 -59.33 -12.05	66.32 -59.29 -11.46	0.32	5.00			
PANTONE 3272 C	55.72 -69.95 -14.03	55.19 -70.85 -14.72	0.61	5.00			
PANTONE 3282 C	45.71 -57.53 -9.52	46.03 -64.79 -10.30	1.96	5.00			
PANTONE 3292 C	31.28 -37.40 -5.26	33.13 -46.93 -6.65	3.62	5.00			
PANTONE 3302 C	27.69 -25.58 -3.14	28.65 -33.32 -4.81	3.56	5.00			
PANTONE 2397 C	65.36 -45.45 -18.64	65.58 -46.58 -17.58	0.83	5.00			
PANTONE 2398 C	66.81 -46.18 -10.83	67.13 -47.23 -9.26	1.10	5.00			
PANTONE 2399 C	58.78 -67.73 -13.69	58.66 -68.53 -13.60	0.25	5.00			
PANTONE 2400 C	61.90 -55.51 -2.74	62.14 -56.28 -1.38	0.82	5.00			
PANTONE 2401 C	61.42 -36.06 -3.32	61.53 -36.94 -0.92	1.62	5.00			
PANTONE 2402 C	54.23 -62.12 -4.19	54.26 -65.47 -3.56	0.96	5.00			
PANTONE 2403 C	46.39 -67.74 -9.91	46.37 -71.99 -10.72	1.04	5.00			
PANTONE 3245 C	82.26 -33.47 -4.77	81.46 -31.17 -3.97	1.17	5.00			
PANTONE 3255 C	76.43 -46.22 -6.00	76.06 -44.96 -6.10	0.51	5.00			
PANTONE 3265 C	69.51 -59.46 -6.59	69.18 -59.52 -6.25	0.32	5.00			
PANTONE 3275 C	60.94 -71.13 -6.13	60.92 -70.93 -6.00	0.08	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 3285 C	52.34 -57.95 -4.89	52.33 -61.97 -4.68	1.11	5.00			
PANTONE 3295 C	41.76 -50.22 -3.27	43.37 -61.13 -4.52	3.47	5.00			
PANTONE 3305 C	28.37 -26.04 -0.75	29.48 -33.63 -1.91	3.49	5.00			
PANTONE 3248 C	75.58 -33.30 -0.20	76.04 -33.65 0.33	0.51	5.00			
PANTONE 3258 C	71.73 -39.41 -2.10	72.24 -40.15 -0.93	0.89	5.00			
PANTONE 3268 C	60.24 -55.37 0.24	60.51 -56.22 1.27	0.66	5.00			
PANTONE 3278 C	53.47 -62.76 2.82	53.58 -66.30 3.48	0.95	5.00			
PANTONE 3288 C	45.12 -56.52 2.35	45.85 -64.91 1.54	2.41	5.00			
PANTONE 3298 C	37.32 -43.41 2.11	39.35 -54.03 0.66	3.88	5.00			
PANTONE 3308 C	25.25 -23.37 1.78	25.70 -32.96 1.58	4.40	5.00			
PANTONE 566 C	84.83 -13.94 0.11	85.21 -14.51 0.43	0.55	5.00			
PANTONE 565 C	81.31 -19.89 -1.04	81.83 -20.10 -0.43	0.58	5.00			
PANTONE 564 C	75.73 -24.84 -2.25	76.18 -25.46 -1.34	0.80	5.00			
PANTONE 563 C	70.14 -29.18 -2.89	70.81 -29.92 -0.74	1.62	5.00			
PANTONE 562 C	40.50 -36.04 -3.21	42.20 -46.88 -4.39	4.10	5.00			
PANTONE 561 C	32.76 -27.76 -0.87	34.22 -35.44 -2.84	3.62	5.00			
PANTONE 560 C	22.59 -14.57 0.91	22.31 -22.88 -0.74	5.36	5.00			
PANTONE 573 C	86.46 -17.24 -0.58	86.59 -16.81 -0.40	0.33	5.00			
PANTONE 572 C	84.26 -21.57 -1.33	84.36 -21.08 -1.39	0.29	5.00			
PANTONE 571 C	82.30 -24.65 -1.88	82.50 -24.20 -1.82	0.27	5.00			
PANTONE 570 C	74.84 -33.27 -2.47	75.34 -33.42 -1.81	0.58	5.00			
PANTONE 569 C	45.90 -47.33 -2.16	46.83 -55.07 -2.95	2.53	5.00			
PANTONE 568 C	39.32 -35.47 -0.50	41.45 -46.19 -2.55	4.37	5.00			
PANTONE 567 C	23.17 -17.30 1.02	23.04 -26.00 -0.45	5.01	5.00			
PANTONE 559 C	78.69 -12.14 4.90	79.41 -12.19 5.79	0.82	5.00			
PANTONE 558 C	73.71 -14.96 5.18	74.32 -15.90 6.78	1.28	5.00			
PANTONE 557 C	68.13 -17.63 5.63	68.72 -18.43 7.80	1.53	5.00			
PANTONE 556 C	62.11 -21.27 7.44	62.21 -21.74 9.06	1.03	5.00			
PANTONE 555 C	42.35 -29.38 11.00	44.23 -37.80 12.08	3.81	5.00			
PANTONE 554 C	34.21 -24.85 9.19	35.24 -31.45 8.87	3.24	5.00			
PANTONE 553 C	27.17 -15.03 7.07	26.76 -20.69 5.01	4.21	5.00			
PANTONE 2404 C	72.87 -10.61 11.65	73.39 -11.52 13.35	1.21	5.00			
PANTONE 2406 C	62.35 -13.86 7.86	62.29 -14.14 10.31	1.60	5.00			
PANTONE 2407 C	55.29 -16.54 9.07	55.60 -18.15 10.78	1.36	5.00			
PANTONE 2408 C	46.83 -23.03 13.82	47.73 -27.75 15.20	2.42	5.00			
PANTONE 2409 C	40.10 -14.46 13.41	41.34 -19.36 14.93	3.26	5.00			
PANTONE 2410 C	35.80 -14.33 13.32	36.49 -17.89 13.85	2.42	5.00			
PANTONE 2411 C	24.15 -20.85 15.58	25.69 -31.34 18.25	5.00	5.00			
PANTONE 5595 C	81.19 -6.97 3.36	81.24 -7.39 3.93	0.59	5.00			
PANTONE 5585 C	74.62 -9.71 2.75	74.86 -11.16 4.34	1.67	5.00			
PANTONE 5575 C	67.95 -11.33 2.40	68.22 -12.11 5.09	2.07	5.00			
PANTONE 5565 C	61.82 -13.07 2.36	61.72 -13.77 4.92	1.92	5.00			
PANTONE 5555 C	50.04 -15.71 2.63	50.44 -18.32 3.56	1.86	5.00			
PANTONE 5545 C	41.04 -17.12 2.76	42.69 -22.93 2.16	3.84	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 5535 C	17.54 -12.05 1.20	18.13 -23.22 1.56	7.31	5.00			
PANTONE 5665 C	78.40 -5.22 4.38	78.75 -5.70 5.59	1.06	5.00			
PANTONE 5655 C	75.11 -5.96 4.55	75.35 -7.17 5.56	1.39	5.00			
PANTONE 5645 C	70.82 -6.82 4.82	70.95 -7.76 6.73	1.61	5.00			
PANTONE 5635 C	65.88 -7.72 5.29	65.95 -7.92 7.71	1.79	5.00			
PANTONE 5625 C	53.28 -9.74 6.56	53.60 -11.10 7.51	1.29	5.00			
PANTONE 5615 C	46.45 -10.68 7.45	47.18 -12.77 7.17	1.94	5.00			
PANTONE 5605 C	20.95 -10.96 4.34	21.14 -20.85 5.47	6.89	5.00			
PANTONE 5527 C	79.74 -4.69 -0.01	80.06 -4.92 0.72	0.73	5.00			
PANTONE 5517 C	76.37 -5.56 -0.34	76.58 -6.65 0.84	1.55	5.00			
PANTONE 5507 C	69.99 -6.84 -0.78	70.22 -7.65 1.48	2.10	5.00			
PANTONE 5497 C	61.08 -8.25 -1.43	61.44 -9.53 0.88	2.31	5.00			
PANTONE 5487 C	48.27 -10.21 -1.79	48.57 -12.09 -1.49	1.66	5.00			
PANTONE 5477 C	36.66 -11.95 -1.62	38.24 -16.70 -2.51	3.80	5.00			
PANTONE 5467 C	18.95 -11.20 -1.23	18.50 -22.02 -2.16	7.37	5.00			
PANTONE 621 C	87.85 -6.65 2.40	88.09 -7.11 2.62	0.51	5.00			
PANTONE 622 C	80.41 -9.46 2.31	80.68 -9.72 2.93	0.56	5.00			
PANTONE 623 C	72.45 -13.08 2.07	72.96 -14.53 3.90	1.71	5.00			
PANTONE 624 C	61.96 -16.30 2.11	61.76 -16.55 4.16	1.49	5.00			
PANTONE 625 C	49.30 -19.99 2.16	49.78 -23.37 2.56	1.96	5.00			
PANTONE 626 C	34.93 -21.86 1.97	35.88 -27.68 0.74	3.20	5.00			
PANTONE 627 C	18.00 -13.80 0.26	18.07 -25.77 0.85	7.21	5.00			
PANTONE 331 C	86.52 -23.40 -0.53	86.37 -22.00 0.23	0.94	5.00			
PANTONE 332 C	83.75 -30.91 -1.21	83.44 -29.01 -0.94	0.87	5.00			
PANTONE 333 C	78.24 -47.36 -1.67	77.56 -45.03 -2.54	1.06	5.00			
PANTONE Green C	57.74 -77.18 0.20	57.83 -76.51 0.75	0.31	5.00			
PANTONE 334 C	51.60 -67.35 0.42	51.47 -70.35 -0.43	0.86	5.00			
PANTONE 335 C	43.24 -51.59 1.79	44.62 -61.08 0.41	3.09	5.00			
PANTONE 336 C	36.23 -39.38 1.82	37.90 -49.28 0.51	3.71	5.00			
PANTONE 2239 C	73.10 -53.58 -3.01	73.24 -53.07 -2.91	0.19	5.00			
PANTONE 2240 C	66.47 -67.17 -1.62	66.47 -66.01 -1.60	0.29	5.00			
PANTONE 2241 C	61.01 -27.72 -0.04	60.70 -28.38 0.21	0.43	5.00			
PANTONE 2242 C	56.65 -61.86 7.57	57.09 -63.53 7.95	0.61	5.00			
PANTONE 2243 C	53.63 -44.46 1.74	53.98 -47.96 2.46	1.24	5.00			
PANTONE 2244 C	47.42 -33.37 0.26	48.09 -38.59 0.34	2.11	5.00			
PANTONE 2245 C	45.34 -70.14 10.61	45.93 -76.00 9.60	1.65	5.00			
PANTONE 337 C	79.88 -27.06 3.80	80.27 -26.83 4.03	0.34	5.00			
PANTONE 338 C	75.92 -34.96 3.62	76.13 -35.45 4.01	0.33	5.00			
PANTONE 339 C	63.37 -53.59 7.61	63.86 -54.02 9.35	0.98	5.00			
PANTONE 340 C	51.80 -65.36 14.55	52.38 -68.73 15.04	1.02	5.00			
PANTONE 341 C	43.23 -48.36 9.96	44.73 -59.06 9.86	3.51	5.00			
PANTONE 342 C	36.86 -38.63 8.20	38.35 -48.67 7.98	3.71	5.00			
PANTONE 343 C	31.90 -26.89 6.33	32.92 -33.76 5.39	3.27	5.00			
PANTONE 7723 C	61.80 -33.56 8.26	61.92 -34.18 9.66	0.83	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7724 C	53.95 -44.57 10.37	54.24 -47.97 11.33	1.16	5.00			
PANTONE 7725 C	47.34 -55.10 13.92	48.24 -61.97 14.22	2.13	5.00			
PANTONE 7726 C	43.00 -53.72 13.93	44.37 -63.84 13.61	3.19	5.00			
PANTONE 7727 C	39.02 -46.16 12.46	40.77 -57.01 12.43	3.72	5.00			
PANTONE 7728 C	37.16 -39.37 9.79	38.53 -49.32 9.71	3.62	5.00			
PANTONE 7729 C	31.58 -32.02 2.58	33.22 -40.38 2.20	3.49	5.00			
PANTONE 3375 C	82.19 -38.07 5.25	81.59 -36.81 4.59	0.71	5.00			
PANTONE 3385 C	77.00 -48.14 7.31	76.97 -48.21 6.43	0.49	5.00			
PANTONE 3395 C	67.52 -66.87 12.32	67.81 -66.38 13.18	0.50	5.00			
PANTONE 3405 C	59.16 -78.99 18.96	59.32 -77.93 20.45	0.73	5.00			
PANTONE 3415 C	41.55 -51.63 12.82	43.32 -62.18 12.41	3.51	5.00			
PANTONE 3425 C	35.39 -39.40 9.71	37.12 -48.33 9.52	3.43	5.00			
PANTONE 3435 C	26.24 -22.21 5.92	26.61 -30.72 5.28	4.21	5.00			
PANTONE 2246 C	81.11 -18.93 7.16	81.37 -18.99 7.68	0.39	5.00			
PANTONE 2247 C	72.11 -30.78 11.08	72.49 -30.82 11.76	0.49	5.00			
PANTONE 2248 C	68.74 -30.87 11.93	69.17 -30.68 13.06	0.76	5.00			
PANTONE 2249 C	63.52 -34.26 13.48	63.51 -34.71 14.74	0.66	5.00			
PANTONE 2250 C	63.37 -55.33 19.00	63.51 -56.40 20.40	0.62	5.00			
PANTONE 2251 C	60.55 -59.13 16.84	60.96 -60.28 18.96	0.98	5.00			
PANTONE 2252 C	56.96 -77.17 30.95	57.29 -77.82 33.22	0.83	5.00			
PANTONE 2412 C	76.16 -51.06 17.59	76.18 -51.39 17.13	0.27	5.00			
PANTONE 2413 C	66.29 -44.63 8.13	66.62 -45.18 9.44	0.76	5.00			
PANTONE 2414 C	66.31 -56.08 16.75	66.55 -57.32 18.00	0.61	5.00			
PANTONE 2416 C	62.08 -59.05 15.36	62.22 -60.10 16.78	0.65	5.00			
PANTONE 2417 C	57.21 -43.28 15.36	57.35 -44.53 15.89	0.46	5.00			
PANTONE 2418 C	45.20 -75.44 22.84	45.95 -80.98 22.61	1.52	5.00			
PANTONE 2419 C	44.16 -46.73 8.09	45.43 -56.18 7.19	3.25	5.00			
PANTONE 344 C	81.84 -24.68 12.05	82.19 -24.39 12.41	0.38	5.00			
PANTONE 345 C	79.92 -29.31 12.55	80.50 -28.72 12.77	0.52	5.00			
PANTONE 346 C	74.98 -37.52 16.21	75.66 -37.77 16.60	0.53	5.00			
PANTONE 347 C	53.56 -64.22 30.50	54.18 -66.33 32.73	1.00	5.00			
PANTONE 348 C	46.55 -54.14 26.07	48.03 -60.61 27.48	2.31	5.00			
PANTONE 349 C	38.47 -37.11 19.52	40.21 -45.09 20.39	3.23	5.00			
PANTONE 350 C	31.06 -19.64 12.41	31.29 -23.93 11.60	2.59	5.00			
PANTONE 351 C	84.91 -28.46 13.38	85.14 -26.78 13.40	0.82	5.00			
PANTONE 352 C	83.27 -35.27 15.09	83.20 -34.21 15.06	0.43	5.00			
PANTONE 353 C	81.62 -39.86 17.18	81.60 -38.38 16.79	0.53	5.00			
PANTONE 354 C	60.44 -76.65 39.88	61.10 -75.51 42.62	1.22	5.00			
PANTONE 355 C	52.03 -67.04 33.95	52.81 -69.20 35.00	0.94	5.00			
PANTONE 356 C	43.17 -50.96 27.29	44.88 -58.51 28.29	2.73	5.00			
PANTONE 357 C	32.33 -26.67 15.06	33.83 -33.30 15.73	3.13	5.00			
PANTONE 7478 C	84.46 -29.60 9.25	84.72 -28.23 9.49	0.70	5.00			
PANTONE 7479 C	73.34 -58.62 27.63	73.75 -58.09 27.61	0.34	5.00			
PANTONE 7480 C	66.05 -68.86 24.21	66.62 -67.96 25.47	0.78	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7481 C	62.93 -72.66 35.90	63.24 -71.50 37.86	0.90	5.00			
PANTONE 7482 C	55.14 -64.26 27.98	55.55 -66.51 30.40	0.98	5.00			
PANTONE 7483 C	34.82 -26.52 14.80	36.09 -33.41 15.08	3.24	5.00			
PANTONE 7484 C	31.68 -30.46 6.21	33.03 -38.48 5.74	3.45	5.00			
PANTONE 2253 C	88.29 -19.41 9.66	88.06 -18.51 10.06	0.69	5.00			
PANTONE 2254 C	84.14 -22.52 15.05	84.49 -22.15 15.35	0.38	5.00			
PANTONE 2255 C	77.79 -33.81 21.40	78.08 -33.65 21.37	0.21	5.00			
PANTONE 2256 C	70.29 -45.59 29.33	70.97 -45.61 30.53	0.72	5.00			
PANTONE 2257 C	61.29 -56.45 34.38	61.41 -57.73 37.20	0.96	5.00			
PANTONE 2258 C	47.48 -52.15 39.78	49.28 -56.82 43.08	2.27	5.00			
PANTONE 2259 C	41.13 -43.35 33.08	43.28 -49.55 35.92	2.77	5.00			
PANTONE 7730 C	55.50 -33.29 19.22	55.84 -35.35 20.74	0.98	5.00			
PANTONE 7731 C	49.59 -41.18 24.26	50.47 -46.91 27.02	2.13	5.00			
PANTONE 7732 C	43.42 -45.41 21.58	45.61 -55.59 22.92	3.76	5.00			
PANTONE 7733 C	40.33 -39.12 16.21	41.95 -49.25 17.03	3.75	5.00			
PANTONE 7734 C	36.45 -26.22 12.39	37.65 -33.76 12.92	3.46	5.00			
PANTONE 7735 C	33.56 -17.26 11.46	34.31 -21.11 11.31	2.47	5.00			
PANTONE 7736 C	33.38 -14.77 7.25	33.97 -17.99 6.16	2.53	5.00			
PANTONE 7737 C	61.85 -33.46 46.77	62.38 -34.06 50.74	1.38	5.00			
PANTONE 7738 C	59.15 -43.30 40.33	59.55 -44.60 43.98	1.26	5.00			
PANTONE 7739 C	56.14 -46.13 35.59	56.66 -48.04 38.90	1.24	5.00			
PANTONE 7740 C	53.14 -40.75 33.43	54.04 -43.44 37.17	1.64	5.00			
PANTONE 7741 C	50.47 -34.55 31.08	51.50 -38.91 34.51	2.01	5.00			
PANTONE 7742 C	45.59 -25.94 26.62	46.76 -32.24 29.65	2.88	5.00			
PANTONE 7743 C	40.58 -21.66 19.99	41.96 -28.94 21.81	3.62	5.00			
PANTONE 2260 C	80.56 -14.19 13.03	80.98 -14.45 13.42	0.39	5.00			
PANTONE 2261 C	72.30 -18.37 16.96	72.90 -18.56 17.89	0.68	5.00			
PANTONE 2262 C	67.16 -17.71 13.84	67.79 -18.23 15.56	1.09	5.00			
PANTONE 2263 C	58.30 -19.33 17.50	58.03 -20.01 18.53	0.63	5.00			
PANTONE 2264 C	57.46 -24.69 22.93	57.38 -25.91 24.10	0.67	5.00			
PANTONE 2265 C	49.17 -20.76 20.04	49.54 -24.15 22.97	1.93	5.00			
PANTONE 2266 C	32.44 -22.31 23.54	34.33 -27.71 27.04	2.99	5.00			
PANTONE 358 C	82.74 -25.63 30.88	83.05 -24.65 29.97	0.53	5.00			
PANTONE 359 C	80.77 -29.42 34.60	81.25 -28.26 33.81	0.59	5.00			
PANTONE 360 C	70.75 -43.47 48.93	71.31 -43.66 51.21	0.87	5.00			
PANTONE 361 C	63.12 -50.75 52.90	63.52 -50.99 56.72	1.24	5.00			
PANTONE 362 C	58.12 -40.54 46.53	59.01 -41.87 52.09	1.92	5.00			
PANTONE 363 C	52.27 -35.21 42.21	53.39 -37.93 48.03	2.17	5.00			
PANTONE 364 C	45.15 -26.77 35.79	46.75 -31.70 41.24	2.79	5.00			
PANTONE 2267 C	83.05 -33.49 26.93	83.48 -32.32 26.67	0.55	5.00			
PANTONE 2268 C	78.78 -44.48 34.86	79.07 -42.75 34.00	0.61	5.00			
PANTONE 2269 C	74.86 -39.27 37.87	75.66 -39.02 37.38	0.60	5.00			
PANTONE 2270 C	70.47 -60.75 46.20	70.69 -60.42 47.34	0.47	5.00			
PANTONE 2271 C	65.00 -68.29 51.01	65.39 -67.52 53.38	0.92	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2272 C	54.52 -55.39 49.93	55.84 -56.73 53.48	1.61	5.00			
PANTONE 2273 C	41.79 -36.94 32.63	43.63 -43.45 36.62	2.85	5.00			
PANTONE 2420 C	69.05 -65.78 36.20	69.22 -64.64 36.74	0.46	5.00			
PANTONE 2421 C	64.82 -60.47 69.77	65.74 -59.77 70.68	0.85	5.00			
PANTONE 2422 C	58.68 -62.30 46.37	59.70 -63.16 49.75	1.36	5.00			
PANTONE 2423 C	58.48 -74.47 53.24	60.18 -75.20 54.57	1.55	5.00			
PANTONE 2424 C	56.84 -53.58 60.71	57.66 -52.33 62.35	1.09	5.00			
PANTONE 2426 C	48.18 -68.56 43.72	50.92 -73.83 45.16	3.01	5.00			
PANTONE 2427 C	34.03 -37.59 28.28	36.70 -43.10 31.07	2.94	5.00			
PANTONE 7485 C	86.65 -9.40 15.42	87.02 -9.59 15.47	0.29	5.00			
PANTONE 7486 C	85.21 -21.78 32.99	85.56 -21.12 32.59	0.40	5.00			
PANTONE 7487 C	80.73 -42.03 48.96	80.83 -40.71 49.07	0.53	5.00			
PANTONE 7488 C	77.39 -48.60 55.99	77.42 -47.77 57.03	0.54	5.00			
PANTONE 7489 C	63.99 -30.70 39.32	64.13 -31.64 42.62	1.16	5.00			
PANTONE 7490 C	58.74 -23.96 36.01	58.85 -25.83 40.09	1.51	5.00			
PANTONE 7491 C	53.50 -13.31 37.24	53.57 -14.77 41.45	1.55	5.00			
PANTONE 2274 C	85.72 -8.95 18.72	86.10 -9.25 18.54	0.39	5.00			
PANTONE 2275 C	84.39 -17.00 31.97	84.76 -16.58 31.51	0.35	5.00			
PANTONE 2276 C	64.86 -21.75 40.79	64.92 -22.37 43.93	1.10	5.00			
PANTONE 2277 C	55.31 -36.94 50.90	56.72 -37.76 56.18	2.10	5.00			
PANTONE 2278 C	48.44 -30.92 43.17	49.92 -33.81 48.45	2.28	5.00			
PANTONE 2279 C	48.68 -22.08 39.52	49.90 -24.96 45.82	2.50	5.00			
PANTONE 2280 C	40.94 -22.08 36.36	42.70 -26.28 41.27	2.68	5.00			
PANTONE 365 C	85.59 -20.79 38.64	85.96 -20.26 37.91	0.39	5.00			
PANTONE 366 C	83.53 -24.76 43.86	83.90 -23.85 42.43	0.58	5.00			
PANTONE 367 C	80.04 -30.91 51.98	80.44 -29.79 52.02	0.59	5.00			
PANTONE 368 C	69.93 -40.25 62.98	70.43 -40.40 65.65	0.86	5.00			
PANTONE 369 C	61.77 -38.81 59.94	62.80 -39.39 63.48	1.32	5.00			
PANTONE 370 C	53.80 -26.69 50.19	55.12 -27.90 55.89	2.13	5.00			
PANTONE 371 C	39.09 -12.87 32.72	40.20 -16.17 37.56	2.46	5.00			
PANTONE 2281 C	89.80 -14.27 36.21	89.60 -13.66 35.60	0.39	5.00			
PANTONE 2282 C	88.24 -21.46 36.07	87.94 -20.26 35.70	0.63	5.00			
PANTONE 2283 C	83.21 -34.13 52.67	83.22 -32.80 52.60	0.57	5.00			
PANTONE 2284 C	80.98 -22.23 38.65	81.44 -21.93 37.73	0.46	5.00			
PANTONE 2285 C	79.84 -40.57 59.63	80.24 -39.81 60.64	0.60	5.00			
PANTONE 2286 C	74.07 -46.97 75.14	74.50 -47.28 76.51	0.45	5.00			
PANTONE 2287 C	70.62 -53.93 68.54	70.87 -53.40 69.95	0.55	5.00			
PANTONE 372 C	89.75 -18.75 42.05	89.01 -17.53 41.52	0.79	5.00			
PANTONE 373 C	88.76 -21.78 47.49	88.01 -20.29 46.93	0.88	5.00			
PANTONE 374 C	87.32 -25.62 54.54	86.56 -24.25 55.19	0.94	5.00			
PANTONE 375 C	78.90 -40.51 77.33	78.99 -39.64 78.29	0.53	5.00			
PANTONE 376 C	70.20 -37.19 73.37	71.02 -37.51 74.65	0.70	5.00			
PANTONE 377 C	59.17 -25.17 60.46	60.53 -25.70 64.53	1.64	5.00			
PANTONE 378 C	39.43 -11.25 36.03	40.76 -14.09 41.29	2.49	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2288 C	86.34 -20.26 47.32	86.84 -19.68 46.34	0.48	5.00			
PANTONE 2289 C	83.41 -16.97 43.23	84.01 -16.42 41.37	0.76	5.00			
PANTONE 2290 C	81.49 -33.85 74.30	81.77 -32.67 75.20	0.69	5.00			
PANTONE 2291 C	79.35 -33.88 86.10	79.83 -33.38 88.77	0.84	5.00			
PANTONE 2292 C	74.80 -34.96 70.67	75.04 -34.43 72.06	0.57	5.00			
PANTONE 2293 C	72.75 -38.87 83.26	73.46 -38.37 83.86	0.61	5.00			
PANTONE 2294 C	63.76 -33.72 68.13	64.93 -34.12 70.72	1.18	5.00			
PANTONE 2295 C	90.69 -13.92 45.29	90.06 -13.01 43.73	0.74	5.00			
PANTONE 2296 C	88.51 -18.96 59.06	88.31 -18.20 59.16	0.45	5.00			
PANTONE 2297 C	84.19 -27.17 78.54	84.30 -26.25 79.39	0.57	5.00			
PANTONE 2298 C	82.73 -25.96 58.05	82.89 -24.91 56.99	0.47	5.00			
PANTONE 2299 C	78.54 -31.25 66.40	78.51 -30.42 65.65	0.32	5.00			
PANTONE 2300 C	74.56 -21.95 58.64	75.19 -21.72 58.50	0.47	5.00			
PANTONE 2301 C	66.43 -24.50 63.28	67.36 -24.90 67.19	1.29	5.00			
PANTONE 580 C	83.26 -11.93 22.02	83.69 -11.82 21.58	0.36	5.00			
PANTONE 579 C	81.14 -13.47 24.09	81.55 -13.21 23.56	0.38	5.00			
PANTONE 578 C	79.91 -14.57 25.45	80.24 -14.37 24.79	0.39	5.00			
PANTONE 577 C	75.70 -17.33 30.72	76.15 -17.22 30.42	0.35	5.00			
PANTONE 576 C	60.40 -22.72 37.62	60.58 -24.21 41.90	1.54	5.00			
PANTONE 575 C	50.80 -18.36 34.34	51.23 -21.14 38.86	1.90	5.00			
PANTONE 574 C	36.51 -10.53 22.00	37.15 -14.70 24.12	2.80	5.00			
PANTONE 5807 C	83.10 -4.87 18.65	83.38 -5.21 18.48	0.42	5.00			
PANTONE 5797 C	79.48 -5.83 21.87	79.72 -6.07 21.30	0.45	5.00			
PANTONE 5787 C	75.41 -6.53 24.56	75.80 -6.56 24.15	0.35	5.00			
PANTONE 5777 C	66.34 -7.79 30.61	66.49 -8.17 31.33	0.38	5.00			
PANTONE 5767 C	57.24 -8.40 34.60	57.09 -8.94 38.94	1.65	5.00			
PANTONE 5757 C	46.07 -8.51 35.43	46.86 -10.99 41.26	2.47	5.00			
PANTONE 5747 C	27.49 -7.86 21.65	29.90 -12.26 26.16	3.84	5.00			
PANTONE 5875 C	82.18 -3.50 24.08	82.30 -3.76 23.45	0.43	5.00			
PANTONE 5865 C	79.55 -3.79 26.28	79.89 -4.06 25.69	0.45	5.00			
PANTONE 5855 C	75.31 -3.55 26.95	75.57 -3.83 26.59	0.36	5.00			
PANTONE 5845 C	68.88 -3.84 31.29	69.41 -4.22 32.02	0.57	5.00			
PANTONE 5835 C	62.68 -3.79 34.82	62.45 -4.20 37.08	0.90	5.00			
PANTONE 5825 C	53.77 -3.33 37.51	54.01 -3.92 42.39	1.77	5.00			
PANTONE 5815 C	33.82 -2.35 25.94	36.15 -4.39 30.94	3.21	5.00			
PANTONE 5803 C	79.08 -4.68 14.58	79.30 -5.10 14.73	0.47	5.00			
PANTONE 5793 C	73.80 -6.12 16.99	74.28 -6.45 17.56	0.53	5.00			
PANTONE 5783 C	68.16 -6.55 18.70	68.34 -6.68 19.59	0.50	5.00			
PANTONE 5773 C	58.38 -7.58 22.02	58.41 -7.70 23.13	0.56	5.00			
PANTONE 5763 C	50.05 -8.32 24.17	50.36 -10.33 27.19	1.78	5.00			
PANTONE 5753 C	41.80 -8.76 24.60	43.02 -12.60 28.18	2.94	5.00			
PANTONE 5743 C	28.99 -8.46 18.08	29.89 -12.28 20.95	3.04	5.00			
PANTONE 7492 C	79.58 -12.35 35.78	80.28 -12.28 35.17	0.54	5.00			
PANTONE 7493 C	77.59 -9.23 23.70	78.20 -9.36 23.51	0.46	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7494 C	68.93 -12.02 16.83	69.28 -12.52 17.45	0.52	5.00			
PANTONE 7495 C	61.00 -12.90 45.05	61.13 -13.93 48.82	1.23	5.00			
PANTONE 7496 C	53.59 -17.38 50.05	55.31 -18.47 57.33	2.72	5.00			
PANTONE 7497 C	48.15 0.08 16.33	48.21 -0.54 16.49	0.76	5.00			
PANTONE 7498 C	40.07 -7.92 23.68	40.88 -11.84 26.39	2.90	5.00			
PANTONE 2302 C	72.62 -12.75 41.51	73.01 -12.94 41.92	0.33	5.00			
PANTONE 2303 C	69.71 -16.94 43.29	70.00 -17.12 44.91	0.61	5.00			
PANTONE 2304 C	67.68 -13.73 45.36	67.96 -14.17 48.11	0.92	5.00			
PANTONE 2305 C	65.98 -15.04 67.19	66.71 -16.00 70.85	1.08	5.00			
PANTONE 2306 C	55.68 -14.67 49.62	56.92 -16.00 57.03	2.48	5.00			
PANTONE 2307 C	44.90 -11.79 45.38	47.35 -13.32 53.01	3.35	5.00			
PANTONE 2308 C	36.13 -4.02 33.21	38.88 -5.70 40.12	3.58	5.00			
PANTONE 7744 C	74.27 -12.69 71.18	74.73 -13.06 72.76	0.51	5.00			
PANTONE 7745 C	68.74 -11.52 63.06	69.02 -11.88 65.82	0.74	5.00			
PANTONE 7746 C	62.24 -10.15 52.31	62.46 -11.02 56.36	1.20	5.00			
PANTONE 7747 C	56.74 -10.25 46.35	56.95 -11.54 51.78	1.72	5.00			
PANTONE 7748 C	52.07 -9.23 39.48	52.64 -10.71 45.57	2.19	5.00			
PANTONE 7749 C	47.42 -6.93 32.57	48.06 -9.72 37.05	2.36	5.00			
PANTONE 7750 C	42.24 -6.00 27.03	42.78 -9.18 30.01	2.47	5.00			
PANTONE 379 C	89.58 -13.55 59.86	89.22 -13.34 58.78	0.37	5.00			
PANTONE 380 C	87.71 -16.52 72.44	87.89 -16.13 72.70	0.27	5.00			
PANTONE 381 C	84.44 -20.22 85.14	84.95 -20.02 85.51	0.37	5.00			
PANTONE 382 C	82.04 -21.53 85.01	82.49 -21.49 85.03	0.31	5.00			
PANTONE 383 C	68.59 -14.23 74.65	69.14 -14.93 77.57	0.80	5.00			
PANTONE 384 C	59.43 -9.82 64.93	61.06 -9.80 69.73	1.89	5.00			
PANTONE 385 C	47.04 -4.14 42.93	48.47 -4.33 50.51	2.83	5.00			
PANTONE 386 C	91.19 -12.44 60.42	90.16 -11.71 60.83	0.80	5.00			
PANTONE 387 C	89.59 -15.98 78.23	88.83 -15.26 79.20	0.70	5.00			
PANTONE 388 C	88.96 -17.10 82.10	88.30 -16.41 82.73	0.60	5.00			
PANTONE 389 C	85.23 -21.56 94.26	85.05 -20.61 96.23	0.72	5.00			
PANTONE 390 C	74.04 -17.28 85.84	74.63 -16.84 87.26	0.62	5.00			
PANTONE 391 C	60.45 -8.60 67.67	61.85 -8.61 72.36	1.68	5.00			
PANTONE 392 C	50.62 -5.02 54.48	53.18 -5.29 61.32	3.16	5.00			
PANTONE 587 C	89.14 -8.96 42.06	89.27 -8.86 41.22	0.31	5.00			
PANTONE 586 C	88.11 -10.27 48.87	88.19 -10.29 48.41	0.16	5.00			
PANTONE 585 C	86.66 -11.34 52.59	86.71 -11.35 52.84	0.08	5.00			
PANTONE 584 C	83.83 -13.24 61.16	83.84 -13.06 60.57	0.16	5.00			
PANTONE 583 C	74.80 -15.37 72.37	75.17 -15.74 74.71	0.61	5.00			
PANTONE 582 C	57.07 -8.36 56.81	58.37 -9.13 62.92	2.03	5.00			
PANTONE 581 C	39.03 -3.33 34.39	40.23 -5.23 40.38	2.67	5.00			
PANTONE 393 C	91.97 -9.55 57.54	90.94 -9.34 57.86	0.66	5.00			
PANTONE 394 C	90.68 -11.92 78.41	89.62 -11.15 78.35	0.78	5.00			
PANTONE 395 C	90.14 -12.70 84.83	89.12 -11.89 84.00	0.76	5.00			
PANTONE 396 C	86.90 -15.13 98.87	86.74 -14.68 100.54	0.45	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 397 C	73.56 -10.39 85.44	73.99 -10.11 87.28	0.55	5.00			
PANTONE 398 C	66.46 -7.72 74.95	67.11 -8.54 78.47	0.99	5.00			
PANTONE 399 C	60.22 -4.32 68.71	61.39 -4.23 73.19	1.49	5.00			
PANTONE 3935 C	91.54 -8.50 67.10	90.83 -8.36 66.38	0.48	5.00			
PANTONE 3945 C	90.03 -8.99 92.23	89.32 -8.77 90.54	0.56	5.00			
PANTONE 3955 C	88.10 -8.34 103.98	88.79 -8.07 105.89	0.59	5.00			
PANTONE 3965 C	87.10 -7.53 103.31	87.96 -7.50 105.35	0.66	5.00			
PANTONE 3975 C	68.45 -2.35 79.54	69.33 -2.81 83.31	1.08	5.00			
PANTONE 3985 C	56.67 -0.71 60.95	58.22 -0.84 66.51	2.02	5.00			
PANTONE 3995 C	39.51 -0.23 35.29	40.46 -1.72 41.58	2.65	5.00			
PANTONE 600 C	92.10 -5.51 38.70	91.44 -5.71 38.24	0.47	5.00			
PANTONE 601 C	91.50 -6.00 43.55	91.01 -6.13 42.65	0.46	5.00			
PANTONE 602 C	90.92 -6.71 53.01	90.50 -7.00 53.15	0.32	5.00			
PANTONE 603 C	88.47 -6.97 70.57	88.45 -6.82 70.12	0.13	5.00			
PANTONE 604 C	86.57 -6.38 80.38	86.57 -6.25 79.93	0.11	5.00			
PANTONE 605 C	82.14 -4.64 88.20	82.41 -4.96 87.68	0.28	5.00			
PANTONE 606 C	74.31 -1.11 88.41	74.62 -1.47 90.72	0.54	5.00			
PANTONE 607 C	90.01 -5.01 36.95	90.20 -4.89 36.26	0.29	5.00			
PANTONE 608 C	88.73 -5.82 44.93	89.10 -5.42 43.18	0.65	5.00			
PANTONE 609 C	87.52 -6.20 50.78	87.75 -5.99 50.01	0.29	5.00			
PANTONE 610 C	84.47 -6.28 62.37	84.51 -6.45 60.44	0.55	5.00			
PANTONE 611 C	79.92 -5.55 73.76	80.31 -6.06 73.84	0.40	5.00			
PANTONE 612 C	71.97 -3.01 79.93	72.51 -3.65 81.37	0.61	5.00			
PANTONE 613 C	64.66 -0.43 75.35	65.20 -0.54 78.54	0.84	5.00			
PANTONE 461 C	88.48 -3.50 36.39	88.84 -3.21 35.54	0.43	5.00			
PANTONE 460 C	85.70 -3.29 45.10	85.96 -3.32 42.99	0.74	5.00			
PANTONE 459 C	82.29 -2.73 54.00	82.41 -3.04 52.36	0.55	5.00			
PANTONE 458 C	80.10 -2.37 56.97	79.82 -2.51 54.63	0.71	5.00			
PANTONE 457 C	65.95 1.98 64.54	66.35 1.15 68.74	1.24	5.00			
PANTONE 456 C	59.59 0.81 52.95	60.02 0.32 58.55	1.68	5.00			
PANTONE 455 C	39.23 1.53 33.04	40.54 0.01 39.38	2.94	5.00			
PANTONE 614 C	84.90 -3.71 29.92	85.25 -3.98 29.32	0.43	5.00			
PANTONE 615 C	82.44 -3.92 33.30	82.55 -4.05 32.33	0.43	5.00			
PANTONE 616 C	80.08 -3.94 35.60	80.34 -4.29 34.73	0.49	5.00			
PANTONE 617 C	73.44 -3.93 43.66	73.48 -4.39 44.46	0.39	5.00			
PANTONE 618 C	65.11 -3.21 51.01	65.34 -3.90 54.60	1.13	5.00			
PANTONE 619 C	60.05 -2.53 53.16	60.24 -3.27 58.63	1.60	5.00			
PANTONE 620 C	51.76 -1.11 50.74	53.32 -1.07 58.05	2.62	5.00			
PANTONE 7751 C	74.31 -0.76 55.06	74.35 -1.41 56.20	0.53	5.00			
PANTONE 7752 C	73.05 2.69 68.62	73.08 2.31 70.98	0.63	5.00			
PANTONE 7753 C	67.65 4.20 64.83	67.72 3.39 68.84	1.18	5.00			
PANTONE 7754 C	57.20 3.63 50.88	57.40 3.81 57.28	1.88	5.00			
PANTONE 7755 C	50.55 1.72 40.30	51.12 1.48 46.73	2.27	5.00			
PANTONE 7756 C	43.73 0.43 29.41	44.15 -0.77 33.91	2.12	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7757 C	39.94 -0.17 25.69	40.47 -1.79 30.12	2.40	5.00			
PANTONE 7758 C	78.44 -4.74 77.74	78.78 -5.36 79.55	0.55	5.00			
PANTONE 7759 C	72.44 -3.64 75.08	72.74 -4.29 77.38	0.65	5.00			
PANTONE 7760 C	55.32 -2.13 46.94	55.61 -3.03 53.20	1.99	5.00			
PANTONE 7761 C	47.07 -4.69 32.54	47.69 -7.16 37.55	2.45	5.00			
PANTONE 7762 C	40.76 -7.76 22.93	41.67 -11.26 25.73	2.73	5.00			
PANTONE 7763 C	37.92 -5.39 18.22	38.53 -8.02 19.77	2.43	5.00			
PANTONE 7764 C	35.08 -4.13 17.70	35.66 -6.24 18.45	2.13	5.00			
PANTONE 7765 C	71.85 -7.52 66.54	71.92 -8.16 68.83	0.62	5.00			
PANTONE 7766 C	68.62 -5.72 64.60	68.73 -6.17 68.32	0.94	5.00			
PANTONE 7767 C	64.39 -3.79 55.65	64.62 -4.24 60.47	1.35	5.00			
PANTONE 7768 C	53.44 -0.66 41.34	53.92 -1.31 46.91	1.96	5.00			
PANTONE 7769 C	41.96 1.90 27.87	42.57 0.92 32.28	2.17	5.00			
PANTONE 7770 C	38.26 0.44 20.65	38.90 -0.80 23.45	1.96	5.00			
PANTONE 7771 C	31.21 -1.18 13.97	31.41 -2.56 13.55	1.76	5.00			
PANTONE 4545 C	81.60 -0.57 22.94	81.98 -0.89 22.61	0.45	5.00			
PANTONE 4535 C	79.11 -0.68 26.01	79.31 -1.10 25.17	0.57	5.00			
PANTONE 4525 C	74.81 -0.03 28.50	75.08 -0.44 28.01	0.46	5.00			
PANTONE 4515 C	67.51 0.73 32.42	67.66 0.66 33.63	0.50	5.00			
PANTONE 4505 C	56.48 2.32 38.29	56.17 1.59 43.07	1.84	5.00			
PANTONE 4495 C	50.97 3.16 39.79	51.62 3.03 45.38	2.05	5.00			
PANTONE 4485 C	35.00 4.50 27.46	36.82 3.23 33.28	3.25	5.00			
PANTONE 2323 C	72.54 -0.31 13.81	72.85 -0.64 14.67	0.70	5.00			
PANTONE 2324 C	67.69 2.02 18.10	67.63 2.10 18.95	0.47	5.00			
PANTONE 2325 C	60.84 2.63 17.70	61.23 2.09 19.12	1.12	5.00			
PANTONE 2326 C	52.96 2.56 18.70	53.19 2.68 18.91	0.27	5.00			
PANTONE 2327 C	51.24 0.12 19.49	51.40 -0.16 19.78	0.38	5.00			
PANTONE 2328 C	44.75 3.25 20.52	45.32 2.90 22.72	1.36	5.00			
PANTONE 2329 C	38.83 3.05 19.18	39.78 2.28 21.66	1.86	5.00			
PANTONE 454 C	79.77 -1.48 16.09	79.94 -2.00 15.78	0.68	5.00			
PANTONE 453 C	75.52 -1.42 18.06	75.97 -1.87 17.87	0.62	5.00			
PANTONE 452 C	69.15 -1.49 23.12	69.39 -1.53 23.35	0.22	5.00			
PANTONE 451 C	60.94 -1.42 28.55	60.97 -1.50 28.93	0.18	5.00			
PANTONE 450 C	32.45 4.26 23.86	34.74 2.92 29.83	3.68	5.00			
PANTONE 449 C	30.52 2.88 20.60	32.45 1.13 24.27	3.10	5.00			
PANTONE 448 C	28.21 2.09 15.71	28.87 0.24 17.06	2.48	5.00			
PANTONE 7499 C	91.13 -1.09 26.48	90.98 -1.41 25.89	0.42	5.00			
PANTONE 7500 C	84.26 0.98 22.80	84.74 0.94 22.30	0.40	5.00			
PANTONE 7501 C	81.22 2.27 23.41	81.40 1.93 22.63	0.50	5.00			
PANTONE 7502 C	75.93 3.81 27.64	76.11 3.19 26.97	0.59	5.00			
PANTONE 7503 C	63.71 1.80 27.78	63.42 1.86 28.35	0.35	5.00			
PANTONE 7504 C	52.89 8.95 19.36	52.97 9.71 20.35	0.70	5.00			
PANTONE 7505 C	43.94 11.34 24.31	44.35 12.03 27.35	1.48	5.00			
PANTONE 468 C	82.48 3.20 21.79	82.61 2.86 21.35	0.39	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 467 C	77.45 5.23 26.78	77.64 4.65 25.95	0.58	5.00			
PANTONE 466 C	71.22 7.22 30.48	71.32 6.92 30.58	0.27	5.00			
PANTONE 465 C	64.79 9.72 36.34	64.72 10.14 37.31	0.41	5.00			
PANTONE 464 C	43.68 18.93 36.61	44.67 20.52 42.87	2.50	5.00			
PANTONE 463 C	37.27 14.68 29.24	38.38 15.28 34.12	2.36	5.00			
PANTONE 462 C	31.84 8.17 20.16	33.61 7.65 23.42	2.48	5.00			
PANTONE 7506 C	88.50 3.73 22.82	88.30 3.28 22.51	0.46	5.00			
PANTONE 7507 C	87.17 10.29 34.32	86.41 8.98 33.57	1.05	5.00			
PANTONE 7508 C	77.65 10.43 35.16	77.75 10.01 34.49	0.34	5.00			
PANTONE 7509 C	71.33 14.14 42.40	71.27 13.64 42.35	0.34	5.00			
PANTONE 7510 C	62.74 19.33 48.97	62.40 19.17 52.76	1.46	5.00			
PANTONE 7511 C	56.55 21.65 51.77	57.35 21.88 57.39	2.05	5.00			
PANTONE 7512 C	49.43 24.36 50.26	51.61 25.23 58.64	3.53	5.00			
PANTONE 719 C	83.27 9.98 23.99	83.47 9.50 23.52	0.41	5.00			
PANTONE 720 C	78.27 13.83 30.18	78.47 13.47 29.21	0.45	5.00			
PANTONE 721 C	72.34 17.78 36.72	72.33 17.26 36.30	0.30	5.00			
PANTONE 722 C	61.41 23.50 46.30	61.33 23.04 49.10	1.31	5.00			
PANTONE 723 C	52.71 26.48 50.73	54.09 27.61 57.82	2.66	5.00			
PANTONE 724 C	41.41 27.47 46.49	44.06 28.30 55.31	4.03	5.00			
PANTONE 725 C	34.91 25.17 37.34	38.80 26.47 45.50	4.62	5.00			
PANTONE 475 C	85.98 10.33 19.24	86.02 9.38 19.05	0.83	5.00			
PANTONE 474 C	83.51 13.06 22.44	83.53 12.36 22.12	0.50	5.00			
PANTONE 473 C	81.38 15.53 25.67	81.62 15.04 25.48	0.36	5.00			
PANTONE 472 C	71.86 24.41 37.23	72.14 24.04 36.76	0.29	5.00			
PANTONE 471 C	51.71 34.13 49.40	52.93 35.45 55.38	2.37	5.00			
PANTONE 470 C	47.20 28.68 41.43	48.43 30.34 47.70	2.58	5.00			
PANTONE 469 C	31.61 17.44 25.24	34.57 18.15 31.42	3.86	5.00			
PANTONE 726 C	80.23 8.44 21.80	80.35 7.96 21.68	0.43	5.00			
PANTONE 727 C	76.10 10.56 24.61	76.37 9.80 24.12	0.61	5.00			
PANTONE 728 C	69.80 13.20 29.04	69.72 13.25 29.12	0.07	5.00			
PANTONE 729 C	58.87 17.05 35.31	58.68 17.07 36.24	0.45	5.00			
PANTONE 730 C	48.94 19.97 41.22	49.85 21.05 47.41	2.39	5.00			
PANTONE 731 C	34.46 21.05 38.00	39.00 21.64 48.33	5.63	5.00			
PANTONE 732 C	27.88 19.38 30.73	32.74 21.99 41.76	5.82	5.00			
PANTONE 2316 C	66.38 10.41 22.59	66.70 10.83 22.84	0.41	5.00			
PANTONE 2317 C	60.27 14.16 29.86	60.33 14.22 30.40	0.26	5.00			
PANTONE 2318 C	53.49 15.71 32.44	53.56 16.00 34.02	0.66	5.00			
PANTONE 2319 C	44.14 17.02 33.92	45.13 18.27 39.44	2.35	5.00			
PANTONE 2320 C	34.81 16.52 29.49	37.16 16.96 34.76	3.11	5.00			
PANTONE 2321 C	37.48 10.65 20.75	38.06 11.37 23.23	1.36	5.00			
PANTONE 2322 C	25.04 9.73 15.75	26.81 8.98 20.24	3.44	5.00			
PANTONE 2309 C	84.46 6.63 15.76	84.72 6.35 15.59	0.33	5.00			
PANTONE 2310 C	79.55 6.54 15.12	79.61 6.16 14.37	0.52	5.00			
PANTONE 2311 C	71.62 10.81 23.25	71.19 10.83 21.42	1.09	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 2312 C	66.06 8.21 17.83	66.39 8.28 17.66	0.31	5.00			
PANTONE 2313 C	65.11 14.75 31.29	65.25 15.14 31.96	0.33	5.00			
PANTONE 2314 C	55.02 17.85 36.91	54.84 18.34 39.65	1.08	5.00			
PANTONE 2315 C	40.28 29.04 45.75	42.85 30.47 54.38	3.83	5.00			
PANTONE 4685 C	81.65 7.08 15.97	81.58 6.76 15.63	0.33	5.00			
PANTONE 4675 C	79.63 8.18 16.82	79.74 7.67 16.81	0.53	5.00			
PANTONE 4665 C	71.67 11.37 22.07	71.59 11.24 22.20	0.17	5.00			
PANTONE 4655 C	65.02 14.16 23.79	65.19 14.39 24.95	0.60	5.00			
PANTONE 4645 C	56.84 16.76 27.96	56.49 17.27 28.41	0.44	5.00			
PANTONE 4635 C	46.33 19.54 32.73	47.05 21.03 37.32	1.96	5.00			
PANTONE 4625 C	22.61 15.55 17.29	25.21 17.21 23.28	3.79	5.00			
PANTONE 7513 C	78.20 14.04 14.62	78.35 13.39 14.75	0.58	5.00			
PANTONE 7514 C	71.24 17.11 22.84	71.07 17.07 23.17	0.24	5.00			
PANTONE 7515 C	63.52 20.36 28.51	63.59 20.27 29.49	0.56	5.00			
PANTONE 7516 C	44.24 26.97 37.43	45.34 28.62 43.27	2.47	5.00			
PANTONE 7517 C	37.09 27.74 35.60	39.48 29.31 42.60	3.51	5.00			
PANTONE 7518 C	36.89 12.67 10.02	37.89 13.92 11.32	1.40	5.00			
PANTONE 7519 C	33.72 6.87 12.11	34.03 6.58 12.52	0.56	5.00			
PANTONE 4755 C	80.49 6.60 8.80	80.33 6.13 9.05	0.62	5.00			
PANTONE 4745 C	75.63 8.49 10.42	75.74 7.99 11.09	0.85	5.00			
PANTONE 4735 C	69.30 10.41 13.06	69.34 10.45 14.47	0.98	5.00			
PANTONE 4725 C	60.79 13.64 14.62	60.67 13.61 15.36	0.53	5.00			
PANTONE 4715 C	49.76 16.60 18.20	50.14 17.59 18.48	0.74	5.00			
PANTONE 4705 C	38.35 20.58 20.10	39.40 23.02 22.50	1.72	5.00			
PANTONE 4695 C	26.73 18.26 16.35	29.25 19.93 19.55	2.63	5.00			
PANTONE 482 C	81.81 6.08 11.21	81.80 5.70 11.05	0.41	5.00			
PANTONE 481 C	77.54 8.11 12.78	77.69 7.47 13.04	0.78	5.00			
PANTONE 480 C	71.56 10.28 16.19	71.69 10.06 17.04	0.68	5.00			
PANTONE 479 C	57.54 16.33 21.04	57.14 16.72 21.57	0.48	5.00			
PANTONE 478 C	32.83 23.17 22.58	34.34 25.25 25.85	2.02	5.00			
PANTONE 477 C	29.65 17.91 18.35	31.95 19.55 22.42	2.84	5.00			
PANTONE 476 C	25.46 11.00 12.98	26.64 11.01 15.71	2.08	5.00			
PANTONE 7527 C	84.31 -0.03 7.43	84.26 -0.19 7.09	0.35	5.00			
PANTONE 7528 C	76.06 2.79 8.40	76.41 2.48 8.89	0.65	5.00			
PANTONE 7529 C	70.26 3.40 9.64	70.18 3.08 10.93	1.09	5.00			
PANTONE 7530 C	62.24 4.15 11.25	62.37 3.28 13.12	1.87	5.00			
PANTONE 7531 C	45.43 5.50 13.49	46.02 5.32 13.24	0.61	5.00			
PANTONE 7532 C	35.94 6.12 14.54	36.46 6.28 15.72	0.84	5.00			
PANTONE 7533 C	24.72 5.73 12.11	25.53 4.20 14.00	2.58	5.00			
PANTONE 7534 C	82.22 0.01 8.11	82.38 -0.11 8.26	0.23	5.00			
PANTONE 7535 C	72.03 0.13 11.30	72.37 -0.24 12.28	0.85	5.00			
PANTONE 7536 C	65.69 0.21 13.10	65.85 -0.04 14.64	1.01	5.00			
PANTONE 7537 C	69.84 -3.16 4.54	69.89 -3.64 5.45	0.88	5.00			
PANTONE 7538 C	62.87 -3.75 4.32	63.55 -4.53 5.87	1.55	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 7539 C	59.36 -1.27 3.18	59.70 -1.76 3.30	0.73	5.00			
PANTONE 7540 C	33.36 -0.62 -3.68	33.78 -2.29 -2.78	2.44	5.00			
PANTONE 427 C	84.42 -0.92 -1.14	84.56 -1.08 -1.72	0.59	5.00			
PANTONE 428 C	79.49 -1.29 -2.09	79.97 -1.61 -1.96	0.57	5.00			
PANTONE 429 C	68.96 -1.75 -3.14	69.16 -2.00 -2.97	0.41	5.00			
PANTONE 430 C	55.41 -2.55 -5.45	55.71 -3.02 -5.79	0.67	5.00			
PANTONE 431 C	42.63 -2.85 -6.98	43.09 -4.67 -7.49	2.14	5.00			
PANTONE 432 C	25.68 -2.79 -7.73	25.88 -5.41 -10.94	3.43	5.00			
PANTONE 433 C	14.26 -1.86 -6.39	14.12 -8.10 -9.54	6.87	5.00			
PANTONE 420 C	80.69 -0.41 0.43	81.20 -0.58 0.34	0.44	5.00			
PANTONE 421 C	73.13 -0.72 0.34	72.93 -0.91 0.33	0.31	5.00			
PANTONE 422 C	66.17 -0.81 -0.68	66.65 -1.32 -0.40	0.86	5.00			
PANTONE 423 C	58.22 -0.94 -1.11	58.23 -1.26 -1.28	0.46	5.00			
PANTONE 424 C	48.03 -0.57 -0.33	48.45 -1.58 1.23	2.09	5.00			
PANTONE 425 C	36.89 -0.94 -1.91	37.12 -2.65 -0.53	2.70	5.00			
PANTONE 426 C	15.76 -0.79 -2.30	16.04 -3.83 -3.28	3.96	5.00			
PANTONE 441 C	79.15 -3.63 -0.28	79.50 -3.94 0.15	0.60	5.00			
PANTONE 442 C	69.55 -4.57 -1.18	69.62 -4.90 0.04	1.18	5.00			
PANTONE 443 C	63.64 -5.22 -1.87	64.15 -6.14 -0.11	1.95	5.00			
PANTONE 444 C	51.09 -5.29 -2.37	51.52 -6.08 -1.77	1.13	5.00			
PANTONE 445 C	36.53 -4.18 -2.09	37.22 -6.78 -1.44	3.02	5.00			
PANTONE 446 C	28.51 -3.74 -0.33	28.85 -5.86 -0.81	2.44	5.00			
PANTONE 447 C	23.86 -2.34 1.63	23.68 -5.72 0.54	4.16	5.00			
PANTONE 413 C	75.46 -1.33 4.70	75.69 -2.00 5.61	1.12	5.00			
PANTONE 414 C	68.96 -1.46 5.27	68.83 -1.88 6.58	1.14	5.00			
PANTONE 415 C	60.48 -2.12 5.19	60.95 -3.10 7.14	1.89	5.00			
PANTONE 416 C	52.76 -1.81 5.53	52.99 -2.64 6.65	1.32	5.00			
PANTONE 417 C	42.96 -2.09 5.43	43.98 -3.89 5.80	2.42	5.00			
PANTONE 418 C	34.86 -2.15 4.90	35.52 -3.42 5.27	1.68	5.00			
PANTONE 419 C	13.35 -1.03 0.45	13.82 -3.45 1.21	3.23	5.00			
PANTONE 2330 C	82.59 0.49 2.07	82.69 0.21 1.94	0.43	5.00			
PANTONE 2331 C	69.38 1.91 2.33	69.38 1.37 3.14	1.11	5.00			
PANTONE 2332 C	57.37 0.92 2.40	57.68 0.60 2.55	0.57	5.00			
PANTONE 2333 C	46.49 1.07 2.54	47.16 0.26 3.78	1.78	5.00			
PANTONE 2334 C	43.24 3.04 2.32	43.69 2.50 2.80	0.97	5.00			
PANTONE 2335 C	35.20 5.06 7.60	35.86 4.92 7.86	0.62	5.00			
PANTONE 2336 C	32.02 1.11 2.27	32.66 0.42 2.60	1.18	5.00			
PANTONE 400 C	77.51 1.05 4.98	78.04 0.79 5.71	0.81	5.00			
PANTONE 401 C	69.67 1.33 5.69	69.90 0.88 7.13	1.36	5.00			
PANTONE 402 C	62.55 1.62 5.86	63.44 0.95 7.64	1.90	5.00			
PANTONE 403 C	55.86 1.85 6.13	56.12 1.53 6.86	0.81	5.00			
PANTONE 404 C	47.20 2.29 6.80	47.98 1.57 6.90	1.26	5.00			
PANTONE 405 C	41.69 2.34 6.33	42.69 1.54 7.03	1.58	5.00			
PANTONE Black C	17.06 1.29 2.54	18.17 -0.87 5.41	4.07	5.00			

Name	Lab (ref)	Lab (meas)	CIE2000	Δe max	ΔCh	ΔCh max	Patch Type
PANTONE 406 C	76.85 2.55 3.68	77.29 2.64 3.90	0.37	5.00			
PANTONE 407 C	69.48 3.49 4.18	69.69 3.15 5.15	1.03	5.00			
PANTONE 408 C	59.14 4.39 3.91	59.79 4.56 4.40	0.72	5.00			
PANTONE 409 C	51.73 4.79 4.47	52.14 4.37 4.84	0.76	5.00			
PANTONE 410 C	44.55 5.47 4.85	45.62 5.36 5.38	1.13	5.00			
PANTONE 411 C	35.80 5.76 4.36	36.89 5.51 5.29	1.28	5.00			
PANTONE 412 C	20.30 4.25 2.67	20.29 2.91 2.69	1.65	5.00			
PANTONE 434 C	80.25 4.12 1.02	81.01 3.74 1.07	0.70	5.00			
PANTONE 435 C	74.06 5.30 0.41	74.35 5.43 0.44	0.26	5.00			
PANTONE 436 C	64.83 6.76 0.39	65.57 6.14 0.70	0.93	5.00			
PANTONE 437 C	44.95 8.54 1.26	45.72 8.55 0.83	0.81	5.00			
PANTONE 438 C	31.26 7.80 2.63	32.26 6.58 1.67	1.61	5.00			
PANTONE 439 C	24.29 6.26 3.09	23.97 5.33 1.19	1.86	5.00			
PANTONE 440 C	20.00 4.19 2.91	19.83 2.98 3.70	1.76	5.00			
PANTONE Warm Gray 1 C	84.49 1.21 4.00	84.92 1.08 3.25	0.72	5.00			
PANTONE Warm Gray 2 C	79.65 1.67 4.70	79.91 1.58 3.80	0.79	5.00			
PANTONE Warm Gray 3 C	75.10 2.02 5.08	75.59 2.06 4.92	0.39	5.00			
PANTONE Warm Gray 4 C	71.44 2.30 5.36	71.61 2.24 5.66	0.30	5.00			
PANTONE Warm Gray 5 C	67.60 2.58 5.51	67.77 2.03 6.36	1.10	5.00			
PANTONE Warm Gray 6 C	65.14 2.74 5.40	65.64 2.05 6.14	1.26	5.00			
PANTONE Warm Gray 7 C	58.95 3.14 5.84	59.38 3.12 6.44	0.63	5.00			
PANTONE Warm Gray 8 C	55.14 3.39 6.06	55.55 2.99 7.20	1.21	5.00			
PANTONE Warm Gray 9 C	51.26 3.65 6.22	51.76 3.13 6.41	0.87	5.00			
PANTONE Warm Gray 10 C	47.29 3.90 6.42	48.20 3.02 6.82	1.52	5.00			
PANTONE Warm Gray 11 C	42.55 4.14 6.66	43.59 4.12 6.14	1.05	5.00			
PANTONE Cool Gray 1 C	86.66 -0.05 1.05	86.73 -0.24 1.14	0.30	5.00			
PANTONE Cool Gray 2 C	83.40 -0.10 0.84	83.52 -0.35 0.66	0.41	5.00			
PANTONE Cool Gray 3 C	80.83 -0.10 0.35	81.14 -0.33 0.30	0.41	5.00			
PANTONE Cool Gray 4 C	76.21 -0.14 -0.15	76.21 -0.37 -0.14	0.34	5.00			
PANTONE Cool Gray 5 C	72.63 -0.15 -0.47	72.49 -0.49 -0.21	0.58	5.00			
PANTONE Cool Gray 6 C	68.87 -0.15 -1.06	68.93 -0.73 -0.74	0.90	5.00			
PANTONE Cool Gray 7 C	63.09 -0.17 -1.44	63.45 -0.74 -1.49	0.87	5.00			
PANTONE Cool Gray 8 C	57.62 -0.15 -1.85	57.78 -0.45 -2.12	0.51	5.00			
PANTONE Cool Gray 9 C	50.20 -0.18 -2.36	50.55 -0.86 -1.46	1.33	5.00			
PANTONE Cool Gray 10 C	42.91 -0.23 -2.79	42.88 -1.54 -1.59	2.16	5.00			
PANTONE Cool Gray 11 C	36.38 -0.24 -3.08	36.68 -1.79 -1.92	2.43	5.00			
PANTONE Black 2 C	19.37 0.31 9.78	21.20 -2.37 15.20	4.89	5.00			
PANTONE Black 3 C	14.90 -4.06 2.72	16.39 -9.00 4.65	5.29	5.00			
PANTONE Black 4 C	16.24 4.12 8.09	17.48 4.56 11.86	2.79	5.00			
PANTONE Black 5 C	19.91 10.12 1.42	19.14 11.24 -0.54	1.87	5.00			
PANTONE Black 6 C	7.87 -1.87 -7.04	7.34 -4.47 -6.96	3.14	5.00			
PANTONE Black 7 C	24.22 1.28 2.89	23.20 -0.80 1.23	3.45	5.00			

Reference vs Measured Patches

