

Squeeze-Jet™ Dispensers are an accordion-shaped container with a variety of snap-in dispensing tips accommodating blunt needles. The LDPE Squeeze-Jet™ features a contoured base fitting the thumb comfortably for full control while dispensing. Squeeze-Jet™ Dispensers are molded to include a dripless feature for technical placement making these a great choice for precision work without dripping. Squeeze-Jet™ Dispensers are available in 30 ML, 40 ML and 60 ML. Tip and cap options include cannula, oral / enema, luer slip and luer lock.



SQUEEZE-JET™ DISPENSERS & ACCESSORIES

Genesis manufactures Tapered Micro or Cannula Dispensing Tips for glues, adhesives and solder pastes. Our dispensing tips are manufactured with precision for accurate dispensing needs. Tapered Micro Tips are designed to fit on luer lock and luer slip fittings and have a unique feather-tip edge eliminating droplet formation.

The 550 ML Syringe is a durable, large volume syringe designed for filling and dispensing with ease. The 550 ML Syringe measures 15.5" in length and includes a polypropylene graduated or non-graduated barrel. Users can choose from a variety of nozzles based on application whether oral rinsing in equine dentistry or delivering liquid nutritionals and medicants by means of oral drenching.



DISPENSING TIPS

Genesis offers Piston Fillers made with stainless steel construction. These Piston Fillers are powered by air and highly accurate. The SVS includes a 12 gallon stainless steel hopper and a built-in scale. Fill from fractional ounces up to 157 ounces using auto cycle mode or single foot pedal control. SVS is ideal for large production runs. The SVS-J includes a 5 gallon stainless steel hopper and a built-in scale. Fill from fractional ounces up to 8.5 ounces using auto cycle mode or single foot pedal control. The SVS-J is ideal for small production runs.



SVS SINGLE CYLINDER PISTON FILLER



SVS-J MINIATURE SINGLE CYLINDER PISTON FILLER



550 ML SYRINGE

Genesis Industries, Inc. is committed to ensuring our products are manufactured to high quality standards. We strive to ensure customer satisfaction by providing quality products in a timely manner with responsive communication.




### SQUEEZE-JET™ DISPENSERS

**Available Sizes and Colors:**

30 ML (Natural) (02011),  
30 ML (Blue) (02016),  
30 ML (Green) (02021),  
30 ML (Red) (02026),  
40 ML (Natural) (02070),  
60 ML (Natural) (02072)

**Standard Material:**

Low Density Polyethylene (LDPE)

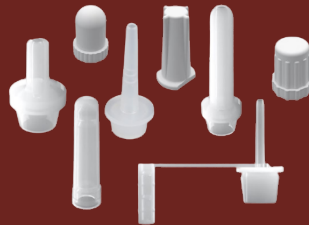

### SQUEEZE-JET™ TIPS & CAPS

**Available Tips:**

Cannula (02031),  
Luer Slip (02051),  
Luer Lock (02061),  
Oral / Enema Tip (02038),  
Nukote Tip & Cap (02075)

**Available Caps:**

Squeeze-Jet™ Cannula Cap (02041),  
Squeeze-Jet™ Luer Slip Cap (C13),  
Squeeze-Jet™ Luer Lock Cap (C14),  
Squeeze-Jet™ Oral / Enema Cap (C20)



### TAPERED MICRO TIPS

**Available Sizes and Colors:**

14 ga (Amber) (T14-210MB2),  
16 ga (Grey) (T16-210GY1),  
18 ga (Green) (T18-210GN2),  
20 ga (Pink) (T20-210PK1),  
22 ga (Blue) (T22-210BL4),  
24 ga (Red) (T24-210RD5)

**Standard Material:**


High Density Polyethylene (HDPE)



### DISPENSING TIPS

**Available Sizes and Colors:**

14 ga Cannula (White) (LCAN60),  
14 ga Double Step Cannula (LCAN61),  
14 ga Cannula - Scott Nozzle (White) (02118),  
18 ga Needle Scabbard (Green) (S18GN2),  
20 ga Needle Scabbard (Pink) (S20PK1)

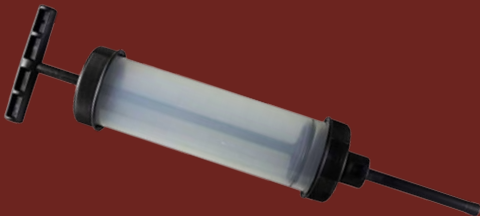

### 550 ML SYRINGE

**Available Size:**

550 ML

**Length:**

15.5"

**Standard Material:**

High Density Polyethylene (HDPE)  
Polypropylene Barrel



### SVS SINGLE CYLINDER PISTON FILLER

**Hopper Size:**

12 Gallon

**Filling Size:**

Fractional Ounces - 157 Ounces

**Standard Material:**

Stainless Steel



### SVS-J MINIATURE PISTON FILLER

**Hopper Size:**

5 Gallon

**Filling Size:**

Fractional Ounces - 8.5 Ounces

**Standard Material:**

Stainless Steel