


The Universal Vacuum Adapter and Vacuum Adapter Holder are a very flexible and user-welcoming solution to the common problem of matching various diameter vacuum hoses and drainpipes together, while providing an excellent seal which is imperative for thoroughly cleaning of the condensate drainpipe systems.




The Zoogout Universal vacuum hose adapter is made from high-grade 60 Shore A silicone and with the simple patented cone design can adapt to any size vacuum hose or pipe from 3/4" to 2.5" inside diameters, and of course metric tubing/pipes.

3/4" diameter piping is the most common condensate drain line size. The pliable silicone construction creates a high integrity seal which is ESSENTIAL for creating maximum suction to break free Zoogloea bacteria blockages.

The pliable soft Silicone construction provides an excellent seal to both pipes and hoses. Due to the unique cone shape of the Vacuum Adapter, the Vacuum Adapter can accommodate multiple size vacuum hose diameters and multiple diameter drainpipe diameters including metric diameters.

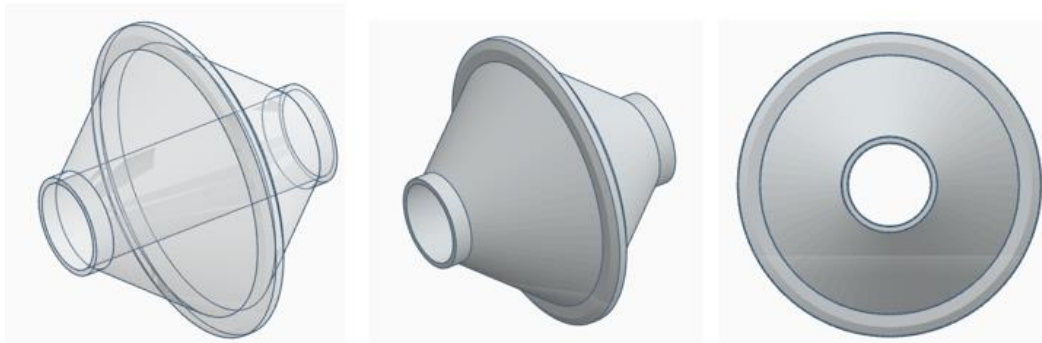



As a bonus, a Vacuum Adapter Holder is included which is both functional and is also used for storing the Vacuum Adapter. The Vacuum Adapter Holder provides right angle functionality for difficult access piping and can connect to either 3/4" PVC pipe or a 3/4" connectors/right-angle fittings.

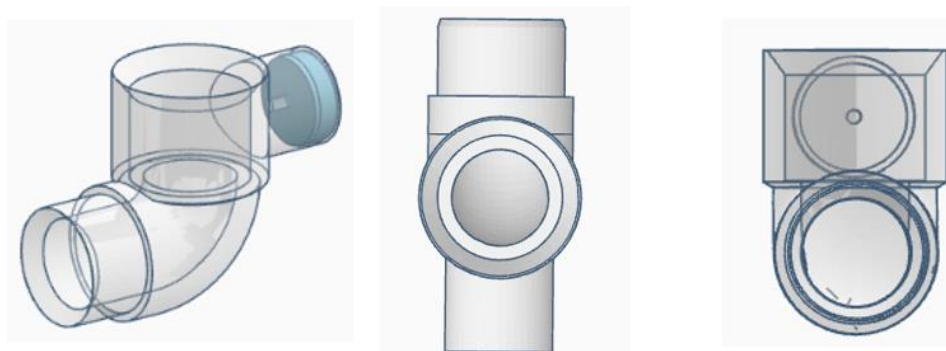



The Vacuum Adapter holder is made from high-quality transparent Polycarbonate allowing the fluid transfer to be observed. Polycarbonate plastic is both strong and impervious to most chemicals.

The Vacuum Adapter Holder has a magnet (aqua) for securing the Vacuum Adapter Holder on an air conditioner cabinet (or other metal surface) for storage, so you can't lose them!



The Vacuum Adapter nests in the Vacuum Adapter Holder:

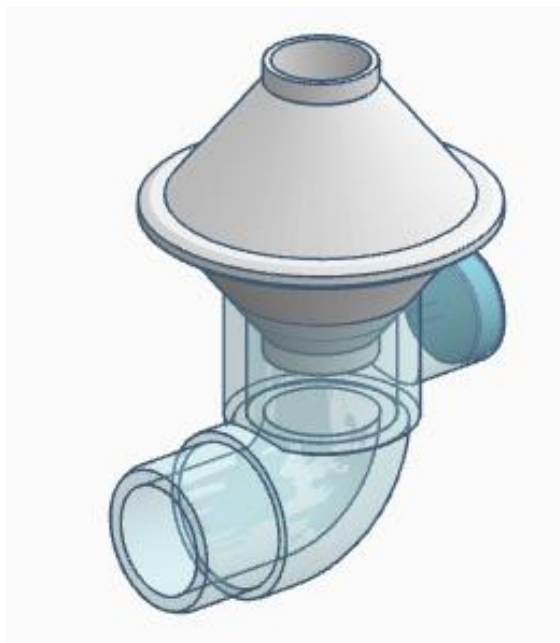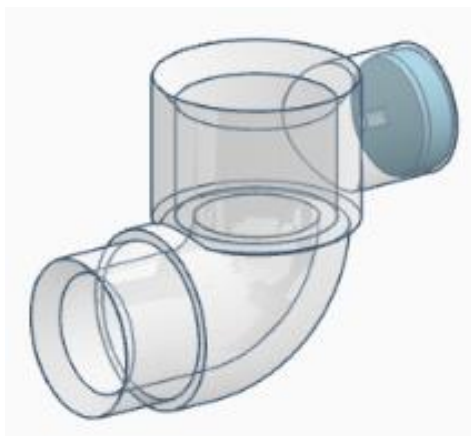


The Vacuum Adapter Holder provides right-angle functionality for ease of use. The Vacuum Adapter Holder can connect to either a typical $\frac{3}{4}$ " PVC drainpipe (left) or, the Vacuum Adapter Holder can be rotated to connect to a $\frac{3}{4}$ " PVC pipe coupling (right):

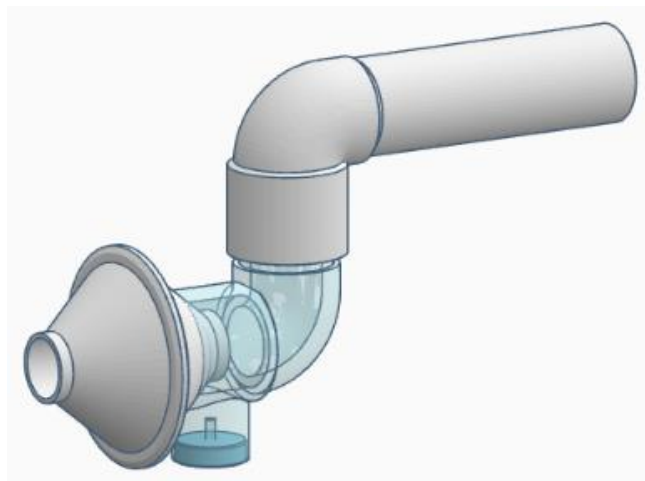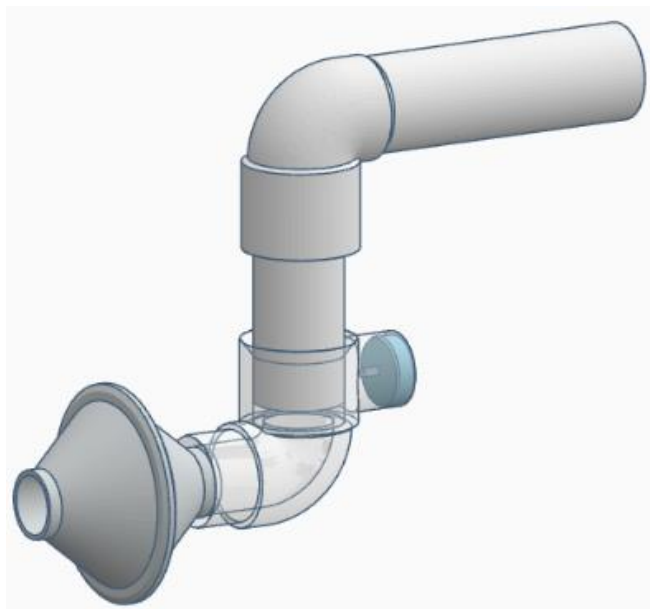



The Vacuum Adapter can connect directly to any size drainpipe from $\frac{3}{4}$ " to 2.5":

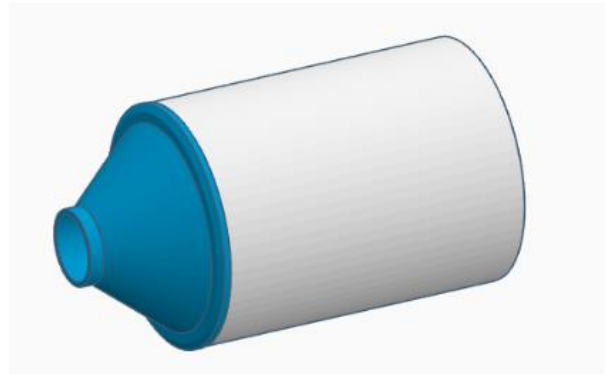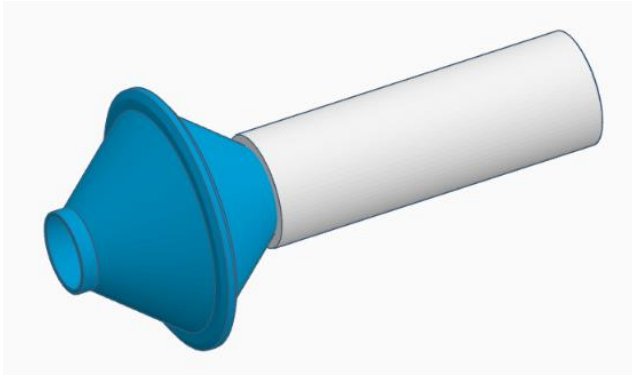


The Universal Vacuum Adapter with the dual-cone design can connect vacuum hoses or pipes of different diameters:

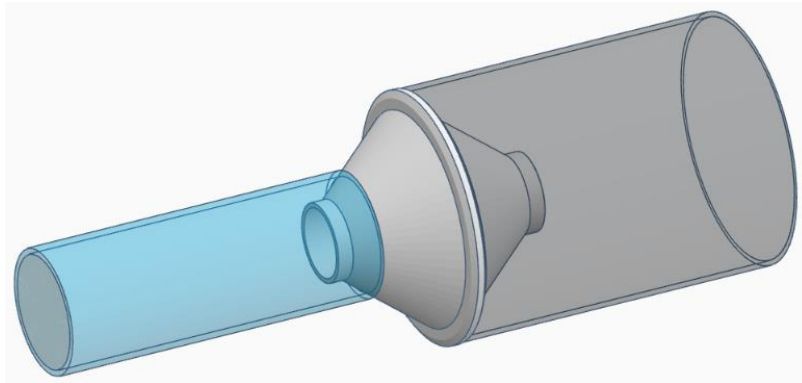

The Vacuum Adapter Holder's tapered opening matches the Vacuum Adapter's cone tapers, thereby providing a high contact surface area for a superior seal, and for nesting the vacuum adapter in the holder during storage:

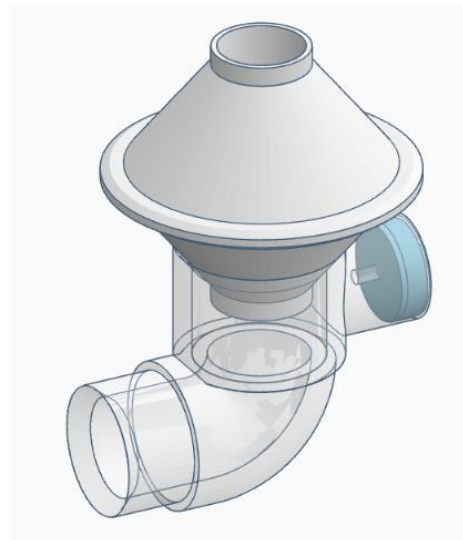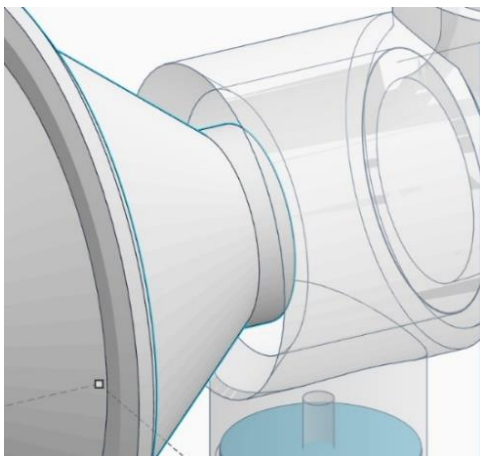

The smaller tapered opening on the Vacuum Adapter Holder is also matched to the Vacuum Adapters's cone shape to always provide an optimum seal.

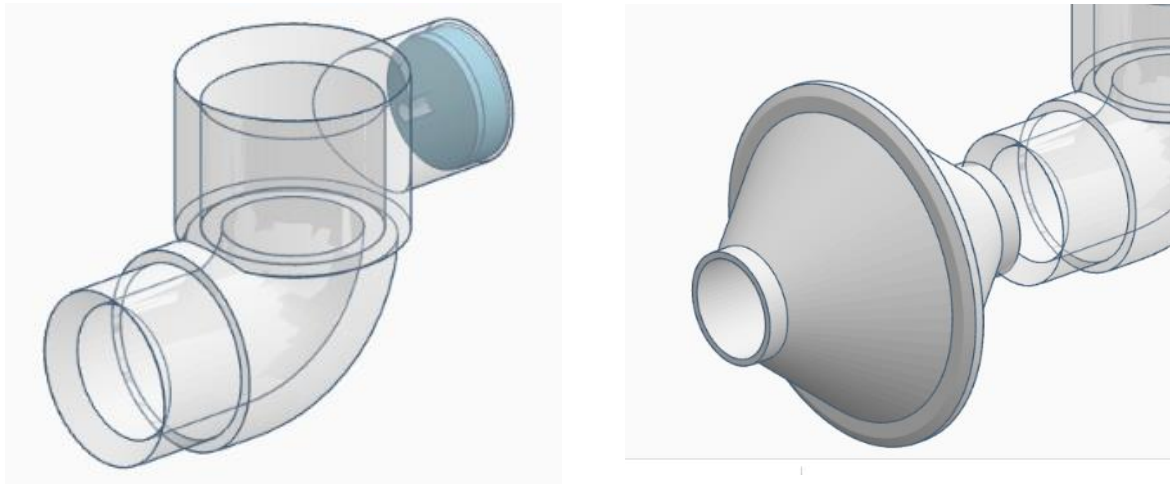


Designed and fabricated to last for years and very simple to use:

- Place the Vacuum Adapter on the vacuum hose.
- Turn on the vacuum.
- Place the Vacuum Adapter onto the drainpipe or insert into the Vacuum Adapter Holder if used.
- Hold in place until the drainpipe is cleared which is typically one minute or less.

The suction time will depend on the volume of liquid in the drainpipe which is directly related to the diameter, length, and slope of the drainpipe. If the Vacuum Adapter Holder is required, attach the Holder to the drainpipe first.

If you have a Zoogloea problem, you need the patented “Zoog Zapper” which is a fully automatic sanitizing system which keeps your AC unit and condensate drain lines clear. www.ZoogZapper.com

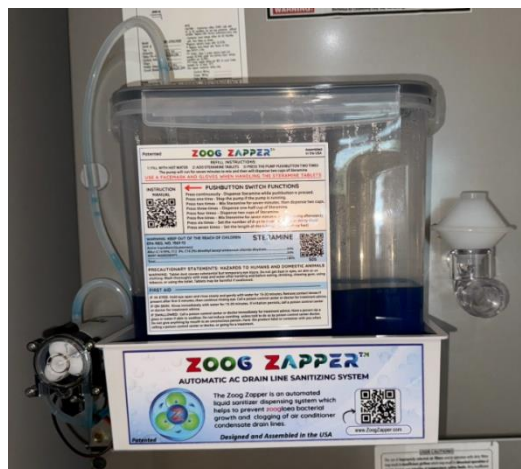

Get the ZoogOUT!



AC Drain Line Cleaners LLC

www.ZoogZapper.com