


WI 054- Upgrading MK4 software (including deva drivers)	Date 06/03/17	Issue- 1	Author- Chris Walkley
---	---------------	----------	-----------------------

If upgrading software, it is most likely deva drivers will need updating too.


Deva drivers must be updated via device manager, this example has a scanning card, there is no separate driver, it is automatically updated with the deva004 driver. The following procedure applies to all deva devices. If updating USB devices from deva, make sure the device is actually connected to the machine. A camera or light ring, will not show in USB devices unless the camera is attached to the quill.

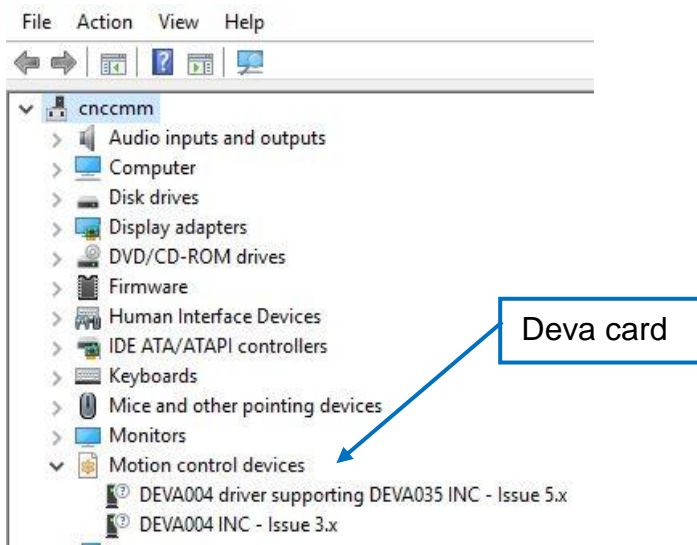

Right click on the Deva 004 INC device, and choose Update Driver Software...






Do not choose Search automatically, but select Browse my computer for driver software

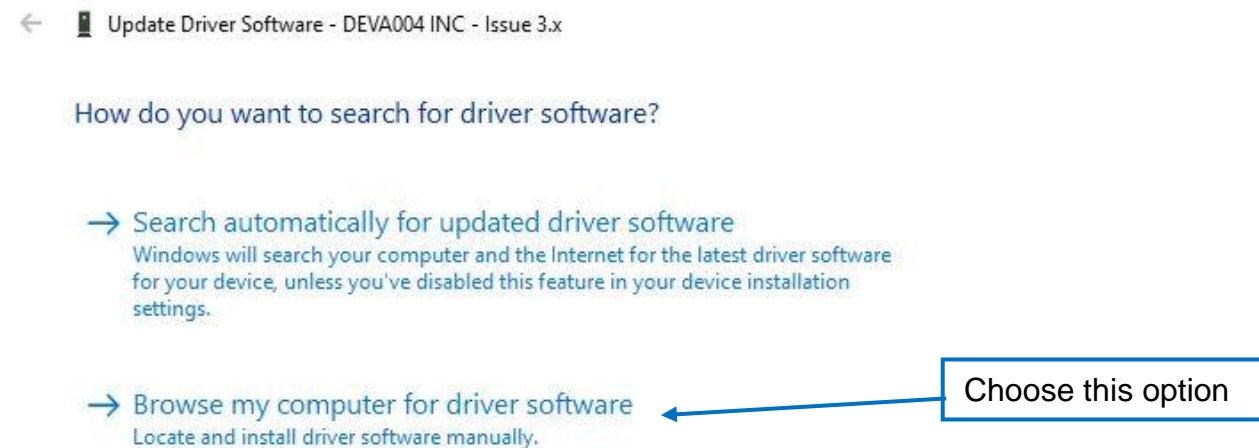

WI 054- Upgrading MK4 software (including deva drivers)	Date 06/03/17	Issue- 1	Author- Chris Walkley
---	---------------	----------	-----------------------

Click on Have Disk...

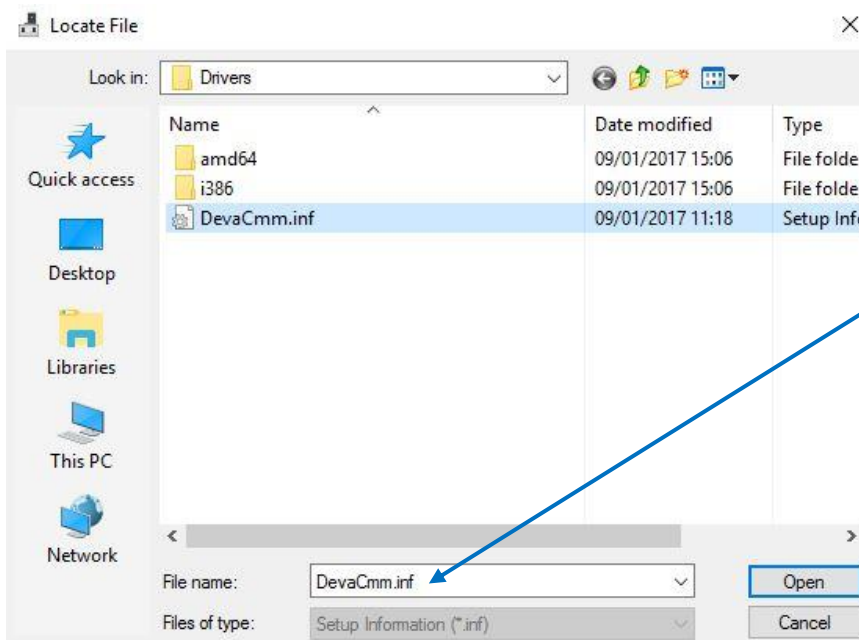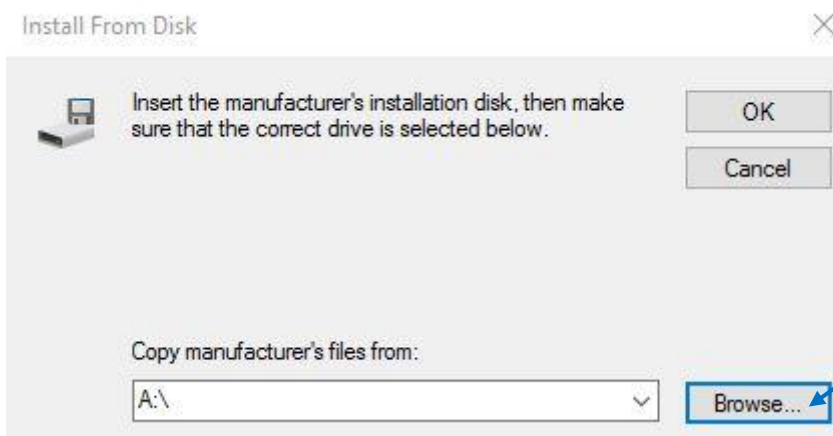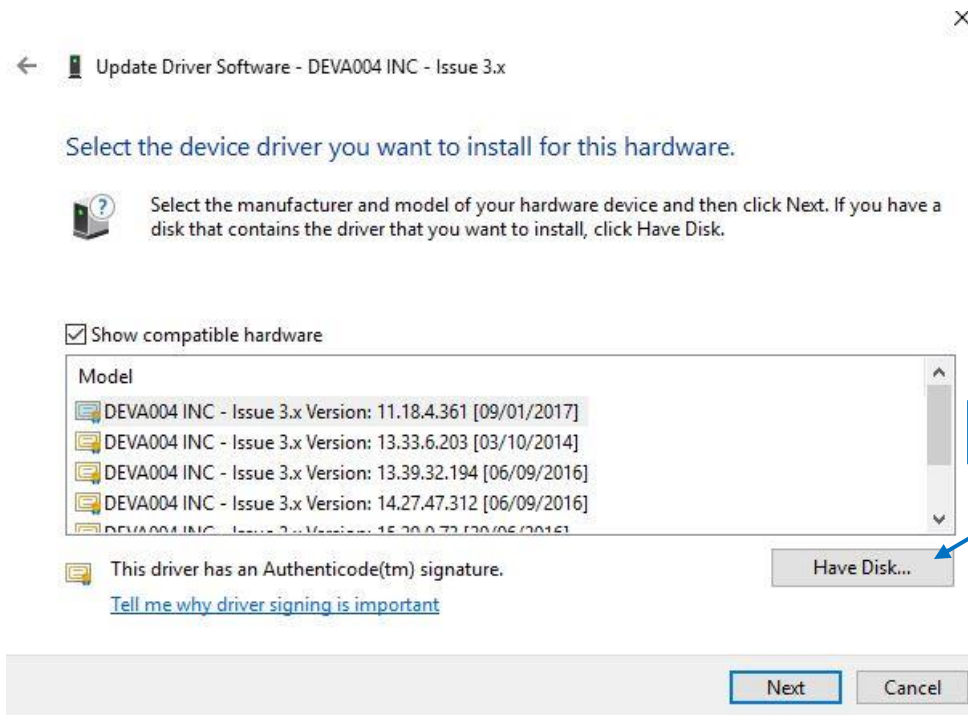


Choose this option

Choose this option

Navigate through until the DevaCmm.inf is shown, then click Open.

WI 054- Upgrading MK4 software (including deva drivers)	Date 06/03/17	Issue- 1	Author- Chris Walkley
---	------------------	----------	-----------------------

Once you run the driver update, the below message should appear. Once finished, shut down the computer, so upon switch on, the new driver is loaded.

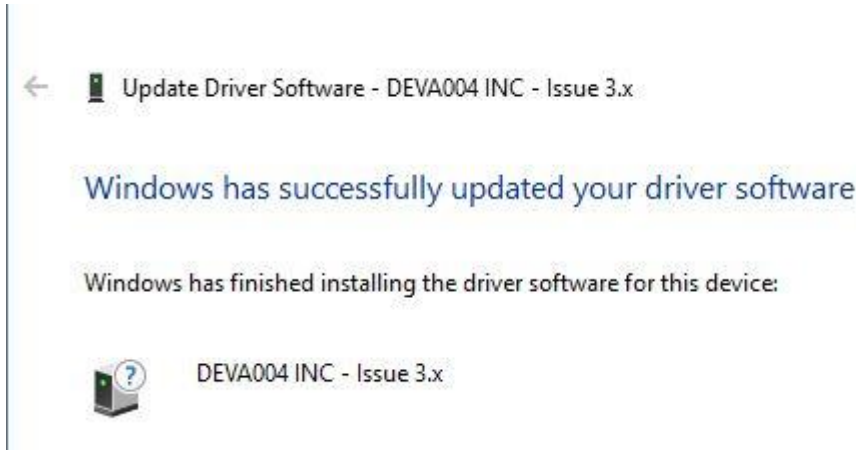


Updating Aberlink Metrology Software.


It is best practice to uninstall Aberlink prior to loading new software to avoid any unknown legacy problems.

Uninstalling will not lose any settings. Settings are located in Program Data/Aberlink folder. It is a good idea to copy this folder for backup purposes.

Left click on the windows start button and choose Control Panel, then locate Programs and Features icon.

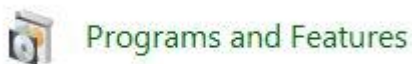

Highlight Aberlink3D (Deva) v4 and choose Uninstall

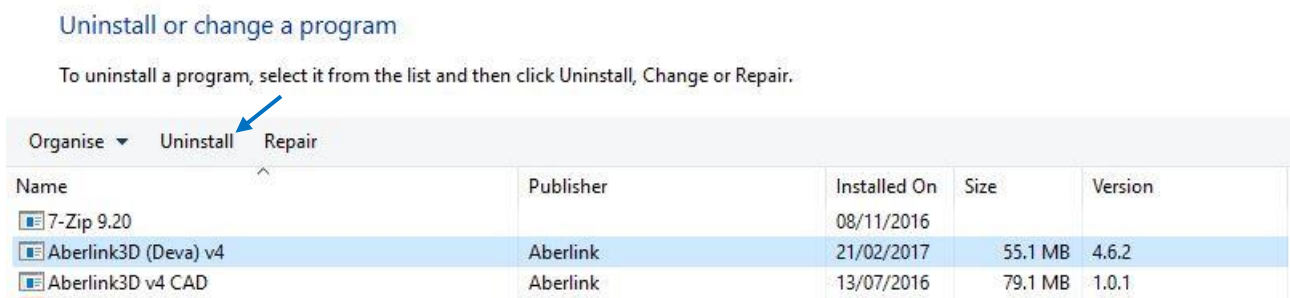

WI 054- Upgrading MK4 software (including deva drivers)	Date 06/03/17	Issue- 1	Author- Chris Walkley
---	------------------	----------	-----------------------


Once removed, run the Aberlink installer by double clicking on the icon. Make sure you have the right installer, the Xtreme will have a GC installer, other machines will have a deva installer.



The process is very easy to follow. Click Next




No need to edit the destination Folder. Click Next

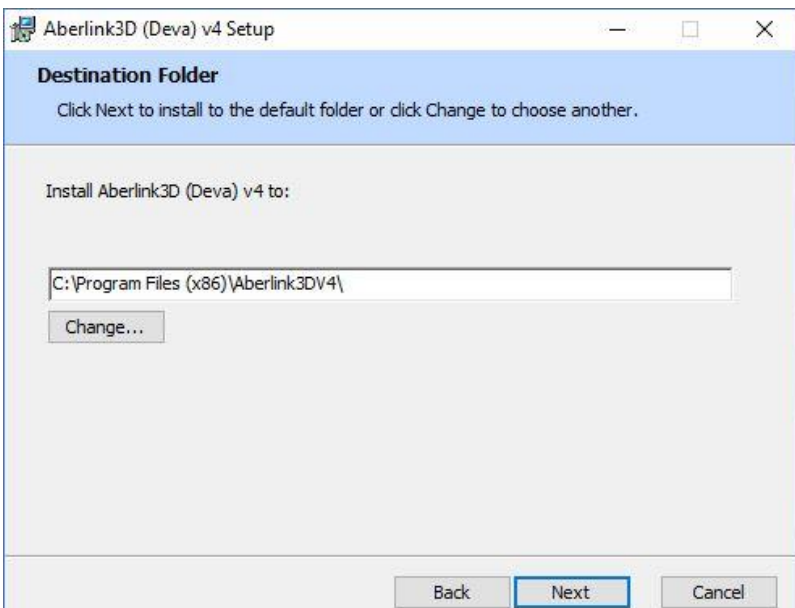


WI 054- Upgrading MK4 software (including deva drivers)	Date 06/03/17	Issue- 1	Author- Chris Walkley
---	------------------	----------	-----------------------

Click on Install, if the it seems like it is not responding please wait, there may be a windows firewall question, check the bottom task bar.

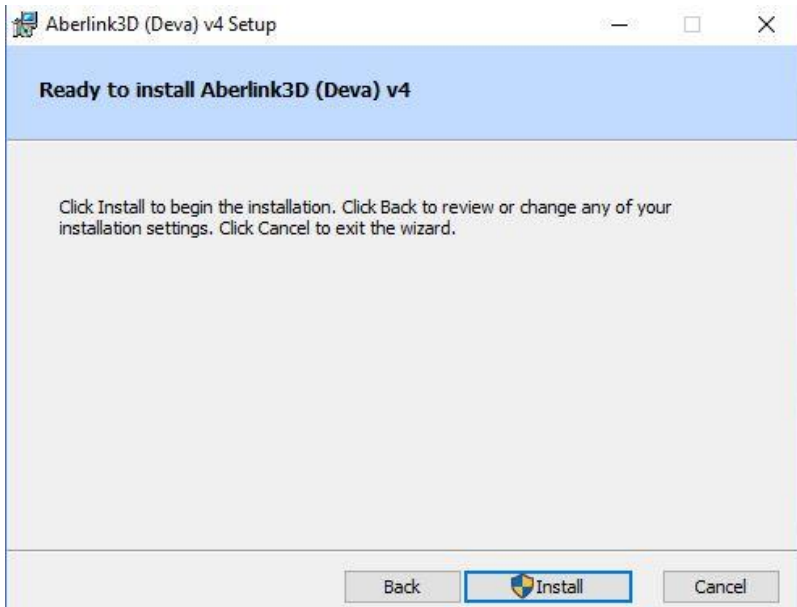


Installation progress bar should show the status.

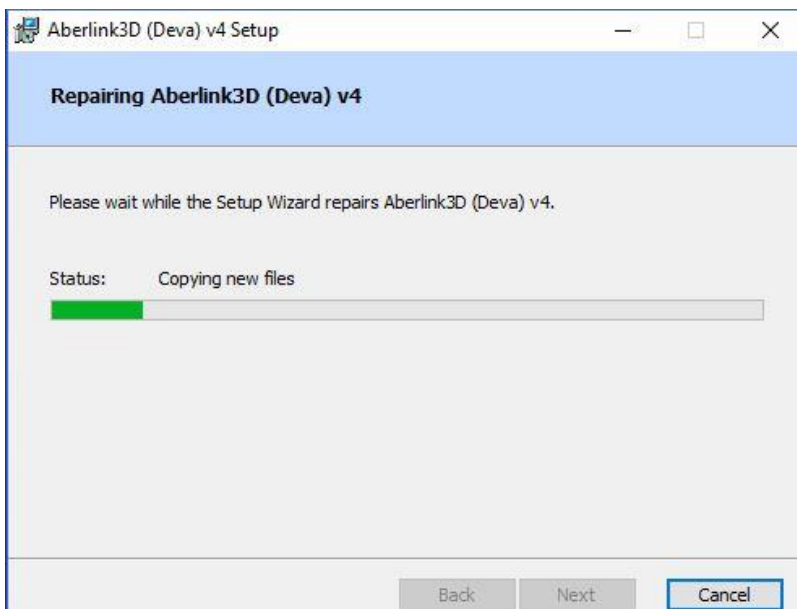

WI 054- Upgrading MK4 software (including deva drivers)	Date 06/03/17	Issue- 1	Author- Chris Walkley
---	------------------	----------	-----------------------

Click on finish to complete. A shut down is not necessary.

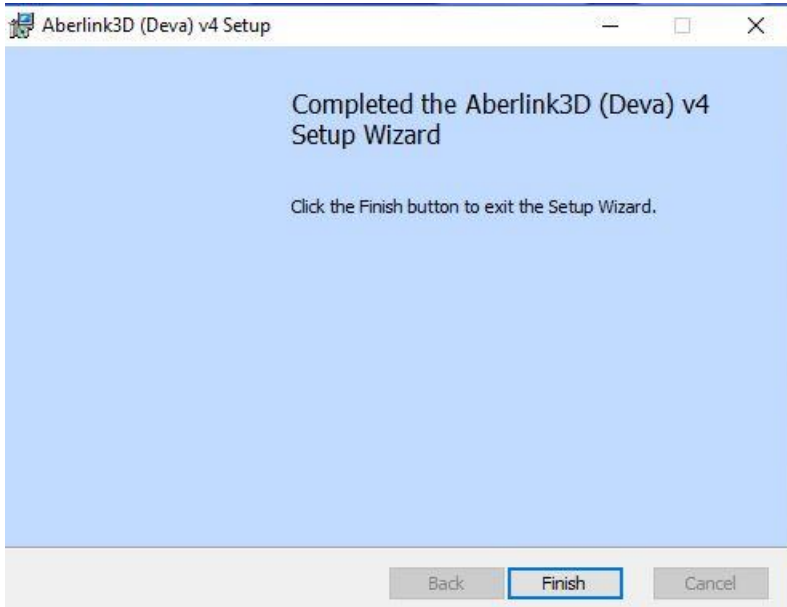

If you wish to roll back software, follow the same procedure.