


V570 VFD'S

CUREZONE INC WWW.CURE-ZONE.NET CUREZONEINC@GMAIL.COM

VFD'S SETTINGS

V570 CONTROL DISPLAY

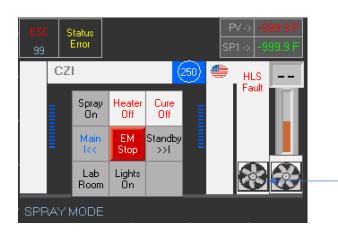

Hold the Left Blower for 4 seconds to get the VFD display

To improve and adjust the airflow in the spray booth, it is recommended to keep the VFD-I according to the factory settings .

If the spray booth has negative pressure it is recommended to reduce the VFD-E by one HZ at a time

If the spray booth has positive pressure is recommended to increase the VFD-E by one HZ at a time

VFD'S SETTINGS for adjust the airflow

VFD -II

VFD -E

Spray Cycle Settings

VFD-I Press the green numbers to change HZ

(SPRAY CYCLE MIN 45 MAX 58 HZ)

VFD-E Press the green numbers to change HZ (SPRAY CYCLE MIN 35 MAX 55 HZ)

Cure Cycle Settings

VFD-I Press the green numbers to change HZ

(CURE CYCLE MIN 45 MAX 50 HZ)

VFD-E Press the green numbers to change HZ

(CURE CYCLE MIN 25 MAX 40 HZ)

Press to Return to the last display

SET POINT

SPRAY CYCLE

CURE

CYCLE