

INTERMOUNTAIN HEALTH

LAYTON HOSPITAL SLEEP LAB REMODEL

Layton, Utah

04.30.2026



VERO ARCHITECTURE

1480 SOUTH ORCHARD DRIVE SUITE 105

BOUNTIFUL, UTAH



Bid Set

INDEX TO SPECIFICATIONS

DIVISION 1-GENERAL REQUIREMENTS

000001	INTERMOUNTAIN CONSTRUCTION STANDARDS
006276	TAX EXEMPTION CERTIFICATE
011000	SUMMARY
012900	PAYMENT PROCEDURES
013300	SUBMITTAL PROCEDURES
017700	CLOSEOUT PROCEDURES

DIVISION 6-WOOD, PLASTICS AND COMPOSITES

064116	PLASTIC LAMINATE-CLAD ARCHITECTURAL CABINETS

DIVISION 7-THERMAL AND MOISTURE PROTECTION

070553	FIRE AND SMOKE ASSEMBLY IDENTIFICATION
078443	JOINT FIRESTOPPING
079200	JOINT SEALANTS

DIVISION 8-OPENINGS

087100	DOOR HARDWARE

DIVISION 9-FINISHES

090561	COMMON WORK RESULTS FOR FLOORING PREPARATION
092216	NON-STRUCTURAL METAL FRAMING
092900	GYPSUM BOARD
093000	TILING
095100	ACOUSTICAL CEILINGS
096500	RESILIENT FLOORING
096513	RESILIENT BASE AND ACCESSORIES
096813	TILE CARPETING
099000	PAINTING AND COATINGS

DIVISION 10-SPECIALTIES

102600	WALL AND DOOR PROTECTION
102800	TOILET, BATH AND LAUNDRY ACCESSORIES

DIVISION 12-FURNISHINGS

123661.16	SOLID SURFACE COUNTERTOPS

DIVISION 21-FIRE SUPPRESSION

211000	WATER BASED FIRE SUPPRESSION SYSTEMS

DIVISION 22-PLUMBING

220500	COMMON WORK RESULTS FOR PLUMBING
220517	SLEEVES AND SLEEVE SEALS FOR PLUMBING PIPING
220518	ESCUTCHEONS FOR PLUMBING PIPING
220523	GENERAL DUTY VALVES FOR PLUMBING PIPING
220548	VIBRATION AND SEISMIC CONTROL FOR PLUMBING PIPING AND EQUIPMENT
220553	IDENTIFICATION FOR PLUMBING PIPING AND EQUIPMENT
220719	PLUMBING PIPING INSULATION
221116	DOMESTIC WATER PIPING
221119	DOMESTIC WATER PIPING SPECIALTIES
221316	SANITARY WASTE AND VENT PIPING
221319	SANITARY WASTE PIPING SPECIALTIES
224000	PLUMBING FIXTURES
226314	MEDICAL GAS PIPING

DIVISION 23-HVAC

230100	MECHANICAL REQUIREMENTS
230150	TEMPORARY USE OF EQUIPMENT AND SYSTEMS
230500	COMMON WORK RESULT FOR HVAC
230513	COMMON MOTOR REQUIREMENTS FOR HVAC EQUIPMENT
230517	SLEEVES AND SLEEVE SEALS FOR HVAC PIPING
230518	ESCUTCHEONS FOR HVAC PIPING
230519	METERS AND GAGES FOR HVAC
230523	GENERAL-DUTY VALVES FOR HVAC PIPING
230529	HANGERS AND SUPPORTS FOR HVAC PIPING AND EQUIPMENT
230548	VIBRATION ISOLATION AND SEISMIC RESTRAINT
230550	OPERATION AND MAINTENANCE OF HVAC SYSTEMS
230553	IDENTIFICATION FOR HVAC PIPING AND EQUIPMENT
230593	TESTING ADJUSTING AND BALANCING FOR HVAC
230713	DUCT INSULATION
230719	HVAC PIPING INSULATION
230900	INSTRUMENTATION AND CONTROL FOR HVAC
232113	HYDRONIC PIPING
232116	HYDRONIC PIPING SPECIALTIES
233001	COMMON DUCT REQUIREMENTS
233113	METAL DUCTS
233300	AIR DUCT ACCESSORIES
233600	AIR TERMINAL UNITS
233713	DIFFUSERS, REGISTERS, AND GRILLES

DIVISION 26 – ELECTRICAL

260519	LOW-VOLTAGE ELECTRICAL POWER CONDUCTORS AND CABLES
260523	CONTROL-VOLTAGE ELECTRICAL POWER CABLES
260526	GROUNDING AND BONDING FOR ELECTRICAL SYSTEMS
260529	HANGERS AND SUPPORTS FOR ELECTRICAL SYSTEMS
260533	RACEWAYS AND BOXES FOR ELECTRICAL SYSTEMS
260543	UNDERGROUND DUCTS AND RACEWAYS FOR ELECTRICAL SYSTEMS
260544	SLEEVES AND SLEEVE SEALS FOR ELECTRICAL SYSTEMS
260548	SEISMIC CONTROLS FOR ELECTRICAL SYSTEMS
260553	IDENTIFICATION FOR ELECTRICAL SYSTEMS
260923	LIGHTING CONTROL DEVICES
260936	STANDALONE MULTIPRESET MODULAR DIMMING CONTROLS
260943	RELAY-BASED LIGHTING CONTROLS
262726	WIRING DEVICES
262813	FUSES
262816	ENCLOSED SWITCHES AND CIRCUIT BREAKERS
262913	ENCLOSED CONTROLLERS
265119	LED INTERIOR LIGHTING

DIVISION 27 – COMMUNICATIONS

270000	COMMON GENERAL CONDITIONS FOR COMMUNICATIONS SECTIONS
270100	OPERATION AND MAINTENANCE OF COMMUNICATION SYSTEMS
270113	WARRANTY PRODUCT AND SYSTEM
270119	FIELD TESTING AND REPORTING
270133	SHOP DRAWINGS PRODUCT DATA SAMPLES DESIGN RECORDS AND EXISTING CONDITIONS
270143	QUALIFICATIONS AND REQUIRED TRAINING FOR CONTRACTOR AND INSTALLER
270171	RESPONSIBILITY AND WORKMANSHIP OF CONTRACTOR
270500	COMMON WORK RESULTS FOR COMMUNICATIONS
270526	GROUNDING AND BONDING FOR COMMUNICATIONS SYSTEMS
270528	PATHWAYS FOR COMMUNICATIONS SYSTEMS
270529	HANGERS AND SUPPORTS FOR COMMUNICATIONS SYSTEMS
270533	CONDUITS AND BACK BOXES FOR COMMUNICATIONS SYSTEMS
270536	CABLE TRAY FOR COMMUNICATIONS SYSTEMS
270553	IDENTIFICATION FOR LOW-VOLTAGE CABLES AND LABELING
271100	EQUIPMENT ROOM FITTING
271116	CABINETS, RACKS, FRAMES, AND ENCLOSURES
271119	TERMINATION BLOCKS AND PATCH PANELS
271300	BACKBONE CABLING
271500	HORIZONTAL CABLING
271513	COPPER CABLE
271543	FACEPLATES AND CONNECTORS
271619	PATCH CABLES
275113	OVERHEAD PAGING
275117	NETWORKED PUBLIC ADDRESS AND PAGING SYSTEM
275119	SOUND MASKING SYSTEMS
275223	NURSE CALL CODE BLUE SYSTEMS
276001	APPENDIX 01 DEVIATION REQUEST PROCESS
276002	APPENDIX 02 DOCUMENT REFRESH PROCESS
276003	APPENDIX 03 DATA CENTER, TEC, TDR PART NUMBERS
276004	APPENDIX 04 REFERENCE STANDARDS
276005	APPENDIX 05 DEFINITIONS AND ABBREVIATIONS
276006	APPENDIX 06 MATERIAL SUPPLIERS
276007	APPENDIX 07 SIEMON - CERTIFIED INSTALLATION FIRMS
276008	APPENDIX 08 LEAD WALL PENETRATIONS

DIVISION 28 - ELECTRONIC SAFETY AND SECURITY

281300	ACCESS CONTROL
282300	VIDEO SURVEILLANCE
282400	DIGITAL, ADDRESSABLE FIRE ALARM SYSTEM
284400	OWNER CONTACTS

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 011000 - SUMMARY

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and other Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Project information.
 - 2. Work covered by Contract Documents.
 - 3. Phased construction.
 - 4. Work by Owner.
 - 5. Work under separate contracts.
 - 6. Future work.
 - 7. Purchase contracts.
 - 8. Owner-furnished products.
 - 9. Contractor-furnished, Owner-installed products.
 - 10. Access to site.
 - 11. Coordination with occupants.
 - 12. Work restrictions.
 - 13. Specification and drawing conventions.
 - 14. Miscellaneous provisions.
- B. Related Requirements:
 - 1. Division 01 Section "Temporary Facilities and Controls" for limitations and procedures governing temporary use of Owner's facilities.

1.3 PROJECT INFORMATION

- A. Project Identification: **Intermountain Health – Layton Hospital Sleep Lab**
 - 1. Project Location:
 - a. **Layton Hospital**
201 West Layton Parkway, Layton, Utah 84041
- B. Owner: Work Completed for **Intermountain Health**
 - 1. Owner's Representative: Curt Hawkes [Cell: (435) 279-4862]
Curt.Hawkes@imail.org
- C. Architect: Vero Architecture, 1480 South Orchard Drive Suite 105, Bountiful UT 84010.
Principal Architect: Brent Murray, AIA. Telephone: 801-209-0892. brent@vero-arch.com

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- D. Architect's Consultants: The Architect has retained the following design professionals who have prepared designated portions of the Contract Documents:

1. Mechanical/Plumbing: **Resolut, 181 East 5600 South, Suite 200; Murray, Utah 84123**
2. Electrical Engineering: **Spectrum Engineering, 324 South State, Suite 400; Salt Lake City, Utah 84111**

1.4 WORK COVERED BY CONTRACT DOCUMENTS

- A. The Work of Project is defined by the Contract Documents and consists of the following:

This project is demolishing the non-used retail pharmacy space and building out a sleep study lab space. This occurs on the first floor of the Medical Office Building at Layton Hospital.

The sleep lab consists of 4 sleep rooms and all support space required. Complete demolition of the pharmacy space and part of the common corridor is required. Construction of new space includes walls, doors, finishes, ceilings, mechanical and electrical revisions. All work is tying into existing systems and no expected upgrades to major building equipment is necessary.

There are no expected structural revisions.

- B. Type of Contract:

1. Project will be constructed under a single prime contract.

1.5 PHASED CONSTRUCTION

The Work shall be conducted in **One Phase**

1.6 WORK UNDER SEPARATE CONTRACTS

- A. General: Cooperate fully with separate contractors so work on those contracts may be carried out smoothly, without interfering with or delaying work under this Contract or other contracts. Coordinate the Work of this Contract with work performed under separate contracts.
- B. Concurrent Work: Owner will award separate contract(s) for the following construction operations at Project site. Those operations will be conducted simultaneously with work under this Contract.
1. Telephone and data cabling and termination. Refer to drawings for delineation of work limits. Contractor is responsible for conduit and junction box installation; conduits runs from junction box to above ceiling, unless otherwise noted on electrical drawings, (as applicable).
 2. Nurse Call: Contractor is responsible for conduits and junction box installation; conduits runs from junction box to above ceiling unless otherwise noted on electrical drawings, (as applicable).

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

3. Relocation of existing Owner equipment; **Any existing equipment or material stored in the space, will be removed by Owner.**

1.7 FUTURE WORK

- A. The Contract Documents include requirements that will allow Owner to carry out future work following completion of this Project; provide for the following future work:
 1. Future Contract: **None**

1.8 OWNER-FURNISHED PRODUCTS

- A. Owner will furnish products indicated on drawings listed as "BY OWNER", "OWNER PROVIDED" AND/OR "N.I.C.", or otherwise noted in the drawings. The Work includes receiving, unloading, handling, storing, protecting, and installing Owner-furnished products and making building services connections. **AS NOTED ON DRAWINGS, some Owner provided items will require the CONTRACTOR to coordinate and install.**

1.9 ACCESS TO SITE

- A. General: Contractor shall have limited use of Project site for construction operations as indicated on Drawings by the Contract limits and as indicated by requirements of this Section.
- B. Use of Site: Limit use of Project site to **work in areas** indicated on drawings. Do not disturb portions of Project site beyond areas in which the Work is indicated. Coordinate all work with Owner's personnel.
 1. Material Deliveries: Material deliveries into/through the Owner occupied areas of the building must be coordinated with project manager and facility director. Material storage inside the building shall only occur in 'contractor only' areas inside construction spaces. Deliveries shall be coordinated with Owner.
 2. Driveways, Walkways and Entrances: Keep driveways, **loading areas**, and entrances serving premises clear and available to Owner, Owner's employees, Patients and emergency vehicles at all times. Do not use these areas for parking or storage of materials.
 - a. Schedule deliveries to minimize use of driveways and entrances by construction operations.
 - b. A staging area will be provided to the Contractor in the existing parking lot. All exterior on site storage shall occur in that space, unless other arrangements are made with Facilities Project Management. Coordination on exact location to be determined at future date.
- C. Condition of Existing Building: Maintain portions of existing building (interior and exterior) affected by construction operations in a weather-tight & dust control conditions throughout construction period. Repair damage caused by construction operations.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

1.10 COORDINATION WITH OCCUPANTS

- A. Partial Owner Occupancy: Owner will occupy the premises during entire construction period, with the exception of areas under construction. Cooperate with Owner during construction operations to minimize conflicts and facilitate Owner usage. Perform the Work so as not to interfere with Owner's operations. Maintain existing exits unless otherwise indicated.
1. Maintain access to existing walkways, corridors, and other adjacent occupied or used facilities. Do not close or obstruct walkways, corridors, or other occupied or used facilities without written permission from Owner and authorities having jurisdiction.
 2. Provide not less than **72 hours'** notice to Owner of activities that will affect Owner's operations, including utility disruptions.
- B. Owner Limited Occupancy of Completed Areas of Construction: Owner reserves the right to occupy and to place and install equipment in completed portions of the Work, prior to Substantial Completion of the Work, provided such occupancy does not interfere with completion of the Work. Such placement of equipment and limited occupancy shall not constitute acceptance of the total Work.
1. Architect will prepare a Certificate of Substantial Completion for each specific portion of the Work to be occupied prior to Owner acceptance of the completed Work.
 2. Obtain a Certificate of Occupancy from authorities having jurisdiction before limited Owner occupancy.
 3. Before limited Owner occupancy, mechanical and electrical systems shall be fully operational, and required tests and inspections shall be successfully completed. On occupancy, Owner will operate and maintain mechanical and electrical systems serving occupied portions of Work.
 4. On occupancy, Owner will assume responsibility for maintenance and custodial service for occupied portions of Work.

1.11 WORK RESTRICTIONS

- A. SPECIAL CONSIDERATIONS
1. As construction activities for this project will be adjacent to an operating medical (clinic) facility, Intermountain Health will require air quality to meet their ICRA Standards for infection control. Contractor shall familiarize themselves with all of these requirements. At a minimum active HEPA filter systems will be required to control dust and mitigate its migration to the operating portion of this building.
- B. Work Restrictions, General: Comply with restrictions on construction operations.
1. Comply with limitations on use of public streets and with other requirements of authorities having jurisdiction.
 2. Construction Site Restrictions
Restrict all construction activities to remodel area and exterior staging area(s).
 3. Construction Work Hours:
 - a. Weekday Hours: Contractor is allowed to work 24 hours a day, 7 days a week, given coordination with item (b) (below) and adherence to items (c) & (d), (below).
 - b. Early Morning Hours/Late Night Hours: Coordinate with AHJ for noise restrictions.
 - c. Hours for Utility Shutdowns: 6:00 p.m. to 7:00 a.m., with Owner coordination and approval.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- d. Hours for high level noise, vibration or odorous activities to occur from 6:00 p.m. to 7:00 a.m. Coordinate with AHJ for noise restrictions.
- 4. All construction areas shall be cleaned prior to leaving the premise every day/every shift (as applicable).
- C. Existing Utility Interruptions: Do not interrupt utilities serving facilities occupied by Owner or others unless permitted under the following conditions and then only after providing temporary utility services according to requirements indicated: **NO UTILITY INTERRUPTION WILL BE ALLOWED AFFECTING THE EXISTING CLINIC UNLESS COORDINATED AHEAD OF TIME.**
 - 1. Notify **Architect and Owner** not less than (7) days in advance of proposed utility interruptions.
 - 2. Obtain **Owner's** written permission before proceeding with utility interruptions.
- D. Noise, Vibration, and Odors: Coordinate operations that may result in high levels of noise and vibration, odors, or other disruption to Owner occupancy with Owner. **NO HIGH LEVEL NOISE, VIBRATION OR ODOROUS ACTIVITIES MAY OCCUR DURING BUSINESS HOURS, UNLESS FIRST COORDINATED OWNER'S MANAGEMENT..**
 - 1. Notify **Architect and Owner** not less than (3) days in advance of proposed disruptive operations.
 - 2. Obtain **Owner's** written permission before proceeding with disruptive operations.
- E. Nonsmoking Building: Smoking is not permitted anywhere on the property/MOB campus..
- F. Controlled Substances: Use of tobacco products and other controlled substances **within the existing building** is not permitted. Refer to Utah State Law for use of controlled substances.
- G. Employee Identification: **Owner will provide** identification tags (access card) for Contractor personnel working on Project site. Construction personnel to use identification tags at ALL times. Tag (access card) will be available at the main/front desk and, unless other arrangements are made with building operations and management, shall be returned to the main/front desk daily. Contractor shall be responsible for any costs related to the loss or damage of access cards.
- H. Employee Screening: Comply with Owner's requirements for **drug and background** screening of Contractor personnel working on Project site.
 - 1. Maintain list of approved screened personnel with Owner's representative.

1.12 SPECIFICATION AND DRAWING CONVENTIONS

- A. Specification Content: The Specifications use certain conventions for the style of language and the intended meaning of certain terms, words, and phrases when used in particular situations. These conventions are as follows:
 - 1. Imperative mood and streamlined language are generally used in the Specifications. The words "shall," "shall be," or "shall comply with," depending on the context, are implied where a colon (:) is used within a sentence or phrase.
 - 2. Specification requirements are to be performed by Contractor unless specifically stated otherwise.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- B. Division 01 General Requirements: Requirements of Sections in Division 01 apply to the Work of all Sections in the Specifications.
- C. Drawing Coordination: Requirements for materials and products identified on Drawings are described in detail in the Specifications. One or more of the following are used on Drawings to identify materials and products:
 - 1. Terminology: Materials and products are identified by the typical generic terms used in the individual Specifications Sections.
 - 2. Abbreviations: Materials and products are identified by abbreviations and scheduled on Drawings.
 - 3. Keynoting: Materials and products are identified by reference keynotes referencing Specification Division numbers found in this Project Manual. It is the contractor's responsibility to identify the Specification Section that applies to each product referenced.

PART 2 - PRODUCTS (Not Used)

PART 3 - EXECUTION (Not Used)

END OF SECTION 011000

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 012900 - PAYMENT PROCEDURES

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and other Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section includes administrative and procedural requirements necessary to prepare and process Applications for Payment.
- B. Related Requirements:
 - 1. Division 01 Section "Contract Modification Procedures" for administrative procedures for handling changes to the Contract.
 - 2. Division 01 Section "Construction Progress Documentation" for administrative requirements governing the preparation and submittal of the Contractor's construction schedule.

1.3 DEFINITIONS

- A. Schedule of Values: A statement furnished by Contractor allocating portions of the Contract Sum to various portions of the Work and used as the basis for reviewing Contractor's Applications for Payment.

1.4 SCHEDULE OF VALUES

- A. Coordination: Coordinate preparation of the schedule of values with preparation of Contractor's construction schedule.
 - 1. Coordinate line items in the schedule of values with other required administrative forms and schedules, including the following:
 - a. Application for Payment forms with continuation sheets.
 - b. Submittal schedule.
 - c. Items required to be indicated as separate activities in Contractor's construction schedule.
 - 2. Submit the schedule of values to Architect at earliest possible date, but no later than ten days before the date scheduled for submittal of initial Applications for Payment.
 - 3. Sub-schedules for Phased Work: Where the Work is separated into phases requiring separately phased payments, provide sub-schedules showing values coordinated with each phase of payment.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

4. Sub-schedules for Separate Elements of Work: Where the Contractor's construction schedule defines separate elements of the Work, provide sub-schedules showing values coordinated with each element.
 5. Sub-schedules for Separate Design Contracts: Where the Owner has retained design professionals under separate contracts who will each provide certification of payment requests, provide sub-schedules showing values coordinated with the scope of each design services contract as described in Division 01 Section "Summary."
- B. Format and Content: Use Project Manual table of contents as a guide to establish line items for the schedule of values. Provide at least one line item for each Specification Section.
1. Identification: Include the following Project identification on the schedule of values:
 - a. Project name and location.
 - b. Name of Architect.
 - c. Architect's project number.
 - d. Contractor's name and address.
 - e. Date of submittal.
 2. Arrange schedule of values consistent with format of AIA Document G703.
 3. Arrange the schedule of values in tabular form with separate columns to indicate the following for each item listed:
 - a. Description of the Work.
 - b. Name of subcontractor.
 - c. Change Orders (numbers) that affect value.
 - d. Dollar value of the following, as a percentage of the Contract Sum to nearest one-hundredth percent, adjusted to total 100 percent.
 - 1) Labor.
 - 2) Materials.
 - 3) Equipment.
 4. Provide a breakdown of the Contract Sum in enough detail to facilitate continued evaluation of Applications for Payment and progress reports. Coordinate with Project Manual table of contents. Provide multiple line items for principal subcontract amounts in excess of five percent of the contract Sum.
 5. Round amounts to nearest whole dollar; total shall equal the Contract Sum.
 6. Provide a separate line item in the schedule of values for each part of the Work where Applications for Payment may include materials or equipment purchased or fabricated and stored, but not yet installed.
 - a. Differentiate between items stored on-site and items stored off-site. If required, include evidence of insurance.
 7. Provide separate line items in the schedule of values for initial cost of materials, for each subsequent stage of completion, and for total installed value of that part of the Work.
 8. Allowances: Provide a separate line item in the schedule of values for each allowance. Show line-item value of unit-cost allowances, as a product of the unit cost, multiplied by measured quantity. Use information indicated in the Contract Documents to determine quantities.
 9. Purchase Contracts: Provide a separate line item in the schedule of values for each purchase contract. Show line-item value of purchase contract. Indicate owner payments or deposits, if any, and balance to be paid by Contractor.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

10. Each item in the schedule of values and Applications for Payment shall be complete. Include total cost and proportionate share of general overhead and profit for each item.
 - a. Temporary facilities and other major cost items that are not direct cost of actual work-in-place may be shown either as separate line items in the schedule of values or distributed as general overhead expense, at Contractor's option.
11. Schedule Updating: Update and resubmit the schedule of values before the next Applications for Payment when Change Orders or Construction Change Directives result in a change in the Contract Sum.

1.5 APPLICATIONS FOR PAYMENT

- A. Each Application for Payment following the initial Application for Payment shall be consistent with previous applications and payments as certified by Architect and paid for by Owner.
 1. Initial Application for Payment, Application for Payment at time of Substantial Completion, and final Application for Payment involve additional requirements.
- B. Payment Application Times: The date for each progress payment is indicated in the Agreement between Owner and Contractor. The period of construction work covered by each Application for Payment is the period indicated in the Agreement.
- C. Application for Payment Forms: Use AIA Document G702 and AIA Document G703 as form for Applications for Payment.
- D. Application for Payment Forms: Use forms acceptable to Architect and Owner for Applications for Payment. Submit forms for approval with initial submittal of schedule of values.
- E. Application Preparation: Complete every entry on form. Notarize and execute by a person authorized to sign legal documents on behalf of Contractor. Architect will return incomplete applications without action.
 1. Entries shall match data on the schedule of values and Contractor's construction schedule. Use updated schedules if revisions were made.
 2. Include amounts for work completed following previous Application for Payment, whether or not payment has been received. Include only amounts for work completed at time of Application for Payment.
 3. Include amounts of Change Orders and Construction Change Directives issued before last day of construction period covered by application.
 4. Indicate separate amounts for work being carried out under Owner-requested project acceleration.
- F. Stored Materials: Include in Application for Payment amounts applied for materials or equipment purchased or fabricated and stored, but not yet installed. Differentiate between items stored on-site and items stored off-site.
 1. Provide certificate of insurance, evidence of transfer of title to Owner, and consent of surety to payment, for stored materials.
 2. Provide supporting documentation that verifies amount requested, such as paid invoices. Match amount requested with amounts indicated on documentation; do not include overhead and profit on stored materials.
 3. Provide summary documentation for stored materials indicating the following:

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- a. Value of materials previously stored and remaining stored as of date of previous Applications for Payment.
 - b. Value of previously stored materials put in place after date of previous Application for Payment and on or before date of current Application for Payment.
 - c. Value of materials stored since date of previous Application for Payment and remaining stored as of date of current Application for Payment.
- G. Transmittal: Submit three signed and notarized original copies of each Application for Payment to Architect by a method ensuring receipt within 24 hours. One copy shall include waivers of lien and similar attachments if required.
 1. Transmit each copy with a transmittal form listing attachments and recording appropriate information about application.
- H. Waivers of Mechanic's Lien: With each Application for Payment, submit waivers of mechanic's lien from entities lawfully entitled to file a mechanic's lien arising out of the Contract and related to the Work covered by the payment.
 1. Submit partial waivers on each item for amount requested in previous application, after deduction for retainage, on each item.
 2. When an application shows completion of an item, submit conditional final or full waivers.
 3. Owner reserves the right to designate which entities involved in the Work must submit waivers.
 4. Waiver Forms: Submit executed waivers of lien on forms acceptable to Owner.
- I. Initial Application for Payment: Administrative actions and submittals that must precede or coincide with submittal of first Application for Payment include the following:
 1. List of subcontractors.
 2. Schedule of values.
 3. Contractor's construction schedule (preliminary if not final).
 4. Products list (preliminary if not final).
 5. Schedule of unit prices.
 6. Submittal schedule (preliminary if not final).
 7. List of Contractor's staff assignments.
 8. List of Contractor's principal consultants.
 9. Copies of building permits.
 10. Copies of authorizations and licenses from authorities having jurisdiction for performance of the Work.
 11. Initial progress report.
 12. Report of preconstruction conference.
 13. Certificates of insurance and insurance policies.
 14. Performance and payment bonds.
 15. Data needed to acquire Owner's insurance.
- J. Application for Payment at Substantial Completion: After Architect issues the Certificate of Substantial Completion, submit an Application for Payment showing 100 percent completion for portion of the Work claimed as substantially complete.
 1. Include documentation supporting claim that the Work is substantially complete and a statement showing an accounting of changes to the Contract Sum.
 2. This application shall reflect Certificate(s) of Substantial Completion issued previously for Owner occupancy of designated portions of the Work.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- K. Final Payment Application: After completing Project closeout requirements, submit final Application for Payment with releases and supporting documentation not previously submitted and accepted, including, but not limited, to the following:
1. Evidence of completion of Project closeout requirements.
 2. Insurance certificates for products and completed operations where required and proof that taxes, fees, and similar obligations were paid.
 3. Updated final statement, accounting for final changes to the Contract Sum.
 4. AIA Document G706, "Contractor's Affidavit of Payment of Debts and Claims."
 5. AIA Document G706A, "Contractor's Affidavit of Release of Liens."
 6. AIA Document G707, "Consent of Surety to Final Payment."
 7. Evidence that claims have been settled.
 8. Final meter readings for utilities, a measured record of stored fuel, and similar data as of date of Substantial Completion or when Owner took possession of and assumed responsibility for corresponding elements of the Work.
 9. Final liquidated damages settlement statement.

PART 2 - PRODUCTS (Not Used)

PART 3 - EXECUTION (Not Used)

END OF SECTION 012900

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 013300 - SUBMITTAL PROCEDURES

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and other Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section includes requirements for the submittal schedule and administrative and procedural requirements for submitting Shop Drawings, Product Data, Samples, and other submittals.
- B. Related Requirements:
 - 1. Division 01 Section "Payment Procedures" for submitting Applications for Payment and the schedule of values.
 - 2. Division 01 Section "Construction Progress Documentation" for submitting schedules and reports, including Contractor's construction schedule.
 - 3. Division 01 Section "Operation and Maintenance Data" for submitting operation and maintenance manuals.
 - 4. Division 01 Section "Project Record Documents" for submitting record Drawings, record Specifications, and record Product Data.
 - 5. Division 01 Section "Demonstration and Training" for submitting video recordings of demonstration of equipment and training of Owner's personnel.

1.3 DEFINITIONS

- A. Action Submittals: Written and graphic information and physical samples that require Architect's responsive action. Action submittals are those submittals indicated in individual Specification Sections as "action submittals."
- B. Informational Submittals: Written and graphic information and physical samples that do not require Architect's responsive action. Submittals may be rejected for not complying with requirements. Informational submittals are those submittals indicated in individual Specification Sections as "informational submittals."
- C. File Transfer Protocol (FTP): Communications protocol that enables transfer of files to and from another computer over a network and that serves as the basis for standard Internet protocols. An FTP site is a portion of a network located outside of network firewalls within which internal and external users are able to access files.
- D. Portable Document Format (PDF): An open standard file format licensed by Adobe Systems used for representing documents in a device-independent and display resolution-independent fixed-layout document format.

1.4 ACTION SUBMITTALS

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- A. Submittal Schedule: Submit a schedule of submittals, arranged in chronological order by dates required by construction schedule. Include time required for review, ordering, manufacturing, fabrication, and delivery when establishing dates. Include additional time required for making corrections or revisions to submittals noted by Architect and additional time for handling and reviewing submittals required by those corrections.
1. Coordinate submittal schedule with list of subcontracts, the schedule of values, and Contractor's construction schedule.
 2. Initial Submittal: Submit concurrently with startup construction schedule. Include submittals required during the first 60 days of construction. List those submittals required to maintain orderly progress of the Work and those required early because of long lead time for manufacture or fabrication.
 3. Final Submittal: Submit concurrently with the first complete submittal of Contractor's construction schedule.
 - a. Submit revised submittal schedule to reflect changes in current status and timing for submittals.
 4. Format: Arrange the following information in a tabular format:
 - a. Scheduled date for first submittal.
 - b. Specification Section number and title.
 - c. Submittal category: Action; informational.
 - d. Name of subcontractor.
 - e. Description of the Work covered.
 - f. Scheduled date for Architect's final release or approval.
 - g. Scheduled date of fabrication.
 - h. Scheduled dates for purchasing.
 - i. Scheduled dates for installation.
 - j. Activity or event number.

1.5 SUBMITTAL ADMINISTRATIVE REQUIREMENTS

- A. Architect's Digital Data Files: Electronic digital data files of the Contract Drawings will be provided by Architect for Contractor's use in preparing submittals.
1. Architect will post digital data drawing files of the Contract Drawings for use in preparing Shop Drawings and Project record drawings.
 - a. Architect makes no representations as to the accuracy or completeness of digital data drawing files as they relate to the Contract Drawings.
 - b. Digital Drawing Software Program: The Contract Drawings are available in AutoCad.
- B. Coordination: Coordinate preparation and processing of submittals with performance of construction activities.
1. Coordinate each submittal with fabrication, purchasing, testing, delivery, other submittals, and related activities that require sequential activity.
 2. Submit all submittal items required for each Specification Section concurrently unless partial submittals for portions of the Work are indicated on approved submittal schedule.
 3. Submit action submittals and informational submittals required by the same Specification Section as separate packages under separate transmittals.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

4. Coordinate transmittal of different types of submittals for related parts of the Work so processing will not be delayed because of need to review submittals concurrently for coordination.
 - a. Architect reserves the right to withhold action on a submittal requiring coordination with other submittals until related submittals are received.
- C. Processing Time: Allow time for submittal review, including time for re-submittals, as follows. Time for review shall commence on Architect's receipt of submittal. No extension of the Contract Time will be authorized because of failure to transmit submittals enough in advance of the Work to permit processing, including re-submittals.
 1. Initial Review: Allow 15 days for initial review of each submittal. Allow additional time if coordination with subsequent submittals is required. Architect will advise Contractor when a submittal being processed must be delayed for coordination.
 2. Intermediate Review: If intermediate submittal is necessary, process it in same manner as initial submittal.
 3. Re-submittal Review: Allow 15 days for review of each re-submittal.
 4. Sequential Review: Where sequential review of submittals by Architect's consultants, Owner, or other parties is indicated, allow 21 days for initial review of each submittal.
- D. Paper Submittals: Place a permanent label or title block on each submittal item for identification.
 1. Indicate name of firm or entity that prepared each submittal on label or title block.
 2. Provide a space approximately **6 by 6 inches (150 by 200 mm)** on label or beside title block to record Contractor's review and approval markings and action taken by Architect.
 3. Include the following information for processing and recording action taken:
 - a. Project name.
 - b. Date.
 - c. Name of Contractor.
 - d. Name of subcontractor.
 - e. Name of supplier.
 - f. Name of manufacturer.
 - g. Drawing number and detail references, as appropriate.
 - h. Location(s) where product is to be installed, as appropriate.
 4. Additional Paper Copies: Unless additional copies are required for final submittal, and unless Architect observes noncompliance with provisions in the Contract Documents, initial submittal may serve as final submittal.
 - a. Submit one copy of submittal to concurrent reviewer in addition to specified number of copies to Architect.
 5. Transmittal for Paper Submittals: Assemble each submittal individually and appropriately for transmittal and handling. Transmit each submittal using a transmittal form. Architect will discard submittals received from sources other than Contractor.
- E. Electronic Submittals: Identify and incorporate information in each electronic submittal file as follows:
 1. Assemble complete submittal package into a single indexed file incorporating submittal requirements of a single Specification Section and transmittal form with links enabling navigation to each item.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

2. Name file with submittal number or other unique identifier, including revision identifier.
 - a. File name shall use project identifier and Specification Section number followed by a decimal point and then a sequential number (e.g., LNHS-061000.01). Re-submittals shall include an alphabetic suffix after another decimal point (e.g., LNHS-061000.01.A).
3. Provide means for insertion to permanently record Contractor's review and approval markings and action taken by Architect.
4. Transmittal Form for Electronic Submittals: Use software-generated form from electronic project management software containing the following information:
 - a. Project name.
 - b. Date.
 - c. Name and address of Architect.
 - d. Name of Contractor.
 - e. Name of firm or entity that prepared submittal.
 - f. Names of subcontractor, manufacturer, and supplier.
 - g. Category and type of submittal.
 - h. Submittal purpose and description.
 - i. Specification Section number and title.
 - j. Specification paragraph number or drawing designation and generic name for each of multiple items.
 - k. Drawing number and detail references, as appropriate.
 - l. Location(s) where product is to be installed, as appropriate.
 - m. Related physical samples submitted directly.
 - n. Indication of full or partial submittal.
 - o. Transmittal number, numbered consecutively.
 - p. Submittal and transmittal distribution record.
 - q. Other necessary identification.
 - r. Remarks.
- F. Options: Identify options requiring selection by Architect.
- G. Deviations and Additional Information: On an attached separate sheet, prepared on Contractor's letterhead, record relevant information, requests for data, revisions other than those requested by Architect on previous submittals, and deviations from requirements in the Contract Documents, including minor variations and limitations. Include same identification information as related submittal.
- H. Re-submittals: Make re-submittals in same form and number of copies as initial submittal.
 1. Note date and content of previous submittal.
 2. Note date and content of revision in label or title block and clearly indicate extent of revision.
 3. Resubmit submittals until they are marked with approval notation from Architect's action stamp.
- I. Distribution: Furnish copies of final submittals to manufacturers, subcontractors, suppliers, fabricators, installers, authorities having jurisdiction, and others as necessary for performance of construction activities. Show distribution on transmittal forms.
- J. Use for Construction: Retain complete copies of submittals on Project site. Use only final action submittals that are marked with approval notation from Architect's action stamp.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

PART 2 - PRODUCTS

2.1 SUBMITTAL PROCEDURES

- A. General Submittal Procedure Requirements: Prepare and submit submittals required by individual Specification Sections. Types of submittals are indicated in individual Specification Sections.
1. Action Submittals: Submit three paper copies of each submittal unless otherwise indicated. Architect will return two copies.
 2. Informational Submittals: Submit two paper copies of each submittal unless otherwise indicated. Architect will not return copies.
 3. Certificates and Certifications Submittals: Provide a statement that includes signature of entity responsible for preparing certification. Certificates and certifications shall be signed by an officer or other individual authorized to sign documents on behalf of that entity.
 - a. Provide a digital signature with digital certificate on electronically submitted certificates and certifications where indicated.
- B. Product Data: Collect information into a single submittal for each element of construction and type of product or equipment.
1. If information must be specially prepared for submittal because standard published data are not suitable for use, submit as Shop Drawings, not as Product Data.
 2. Mark each copy of each submittal to show which products and options are applicable.
 3. Include the following information, as applicable:
 - a. Manufacturer's catalog cuts.
 - b. Manufacturer's product specifications.
 - c. Standard color charts.
 - d. Statement of compliance with specified referenced standards.
 - e. Testing by recognized testing agency.
 - f. Application of testing agency labels and seals.
 - g. Notation of coordination requirements.
 - h. Availability and delivery time information.
 4. For equipment, include the following in addition to the above, as applicable:
 - a. Wiring diagrams showing factory-installed wiring.
 - b. Printed performance curves.
 - c. Operational range diagrams.
 - d. Clearances required to other construction, if not indicated on accompanying Shop Drawings.
 5. Submit Product Data before or concurrent with Samples.
 6. Submit Product Data in the following format:
 - a. **PDF electronic file, (preferred submission method).**
 - b. Three paper copies of Product Data unless otherwise indicated, (alternate submission method). Architect will return two copies.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- C. Shop Drawings: Prepare Project-specific information, drawn accurately to scale. Do not base Shop Drawings on reproductions of the Contract Documents or standard printed data, unless submittal based on Architect's digital data drawing files is otherwise permitted.
1. Preparation: Fully illustrate requirements in the Contract Documents. Include the following information, as applicable:
 - a. Identification of products.
 - b. Schedules.
 - c. Compliance with specified standards.
 - d. Notation of coordination requirements.
 - e. Notation of dimensions established by field measurement.
 - f. Relationship and attachment to adjoining construction clearly indicated.
 - g. Seal and signature of professional engineer if specified.
 2. Sheet Size: Except for templates, patterns, and similar full-size drawings, submit Shop Drawings on sheets at least **8-1/2 by 11 inches (215 by 280 mm)**, but no larger than **36 by 48 inches (750 by 1067 mm)**.
 3. Submit Shop Drawings in the following format:
 - a. Three opaque copies of each submittal. Architect will retain two copies; remainder will be returned.
 - b. Retain first subparagraph below when Project utilizes BIM through the Construction Stage and Contractor is required to prepare Shop Drawings for incorporation into the BIM. Edit as required to reflect Project scope agreements.
 - c. Prepare Shop Drawings in the following format: Same digital data software program, version, and operating system as the original Drawings.
 - d. Refer to Division 01 Section "Project Management and Coordination" for requirements for coordination drawings.
- D. Samples: Submit Samples for review of kind, color, pattern, and texture for a check of these characteristics with other elements and for a comparison of these characteristics between submittal and actual component as delivered and installed.
1. Transmit Samples that contain multiple, related components such as accessories together in one submittal package.
 2. Identification: Attach label on unexposed side of Samples that includes the following:
 - a. Generic description of Sample.
 - b. Product name and name of manufacturer.
 - c. Sample source.
 - d. Number and title of applicable Specification Section.
 - e. Specification paragraph number and generic name of each item.
 3. For projects where electronic submittals are required, provide corresponding electronic submittal of Sample transmittal, digital image file illustrating Sample characteristics, and identification information for record.
 4. Disposition: Maintain sets of approved Samples at Project site, available for quality-control comparisons throughout the course of construction activity. Sample sets may be used to determine final acceptance of construction associated with each set.
 - a. Samples not incorporated into the Work, or otherwise designated as Owner's property, are the property of Contractor.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

5. Samples for Initial Selection: Submit manufacturer's color charts consisting of units or sections of units showing the full range of colors, textures, and patterns available.
 - a. Number of Samples: Submit two full set(s) of available choices where color, pattern, texture, or similar characteristics are required to be selected from manufacturer's product line. Architect will return submittal with options selected.
6. Samples for Verification: Submit full-size units or Samples of size indicated, prepared from same material to be used for the Work, cured and finished in manner specified, and physically identical with material or product proposed for use, and that show full range of color and texture variations expected. Samples include, but are not limited to, the following: partial sections of manufactured or fabricated components; small cuts or containers of materials; complete units of repetitively used materials; swatches showing color, texture, and pattern; color range sets; and components used for independent testing and inspection.
 - a. Number of Samples: Submit three sets of Samples. Architect will retain one sample set; remainder will be returned.
 - 1) Submit a single Sample where assembly details, workmanship, fabrication techniques, connections, operation, and other similar characteristics are to be demonstrated.
 - 2) If variation in color, pattern, texture, or other characteristic is inherent in material or product represented by a Sample, submit at least three sets of paired units that show approximate limits of variations.
- E. Product Schedule: As required in individual Specification Sections, prepare a written summary indicating types of products required for the Work and their intended location. Include the following information in tabular form:
 1. Type of product. Include unique identifier for each product indicated in the Contract Documents or assigned by Contractor if none is indicated.
 2. Manufacturer and product name, and model number if applicable.
 3. Number and name of room or space.
 4. Location within room or space.
 5. Submit product schedule in the following format:
 - a. PDF electronic file.
 - b. Three paper copies of product schedule or list unless otherwise indicated. Architect will return two copies.
- F. Coordination Drawing Submittals: Comply with requirements specified in Division 01 Section "Project Management and Coordination."
- G. Contractor's Construction Schedule: Comply with requirements specified in Division 01 Section "Construction Progress Documentation."
- H. Application for Payment and Schedule of Values: Comply with requirements specified in Division 01 Section "Payment Procedures."
- I. Test and Inspection Reports and Schedule of Tests and Inspections Submittals: Comply with requirements specified in Division 01 Section "Quality Requirements."

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- J. Closeout Submittals and Maintenance Material Submittals: Comply with requirements specified in Division 01 Section "Closeout Procedures."
- K. Maintenance Data: Comply with requirements specified in Division 01 Section "Operation and Maintenance Data."
- L. Qualification Data: Prepare written information that demonstrates capabilities and experience of firm or person. Include lists of completed projects with project names and addresses, contact information of architects and owners, and other information specified.
- M. Welding Certificates: Prepare written certification that welding procedures and personnel comply with requirements in the Contract Documents. Submit record of Welding Procedure Specification and Procedure Qualification Record on AWS forms. Include names of firms and personnel certified.
- N. Installer Certificates: Submit written statements on manufacturer's letterhead certifying that Installer complies with requirements in the Contract Documents and, where required, is authorized by manufacturer for this specific Project.
- O. Manufacturer Certificates: Submit written statements on manufacturer's letterhead certifying that manufacturer complies with requirements in the Contract Documents. Include evidence of manufacturing experience where required.
- P. Product Certificates: Submit written statements on manufacturer's letterhead certifying that product complies with requirements in the Contract Documents.
- Q. Material Certificates: Submit written statements on manufacturer's letterhead certifying that material complies with requirements in the Contract Documents.
- R. Material Test Reports: Submit reports written by a qualified testing agency, on testing agency's standard form, indicating and interpreting test results of material for compliance with requirements in the Contract Documents.
- S. Product Test Reports: Submit written reports indicating that current product produced by manufacturer complies with requirements in the Contract Documents. Base reports on evaluation of tests performed by manufacturer and witnessed by a qualified testing agency, or on comprehensive tests performed by a qualified testing agency.
- T. Preconstruction Test Reports: Submit reports written by a qualified testing agency, on testing agency's standard form, indicating and interpreting results of tests performed before installation of product, for compliance with performance requirements in the Contract Documents.
- U. Compatibility Test Reports: Submit reports written by a qualified testing agency, on testing agency's standard form, indicating and interpreting results of compatibility tests performed before installation of product. Include written recommendations for primers and substrate preparation needed for adhesion.
- V. Field Test Reports: Submit written reports indicating and interpreting results of field tests performed either during installation of product or after product is installed in its final location, for compliance with requirements in the Contract Documents.
- W. Design Data: Prepare and submit written and graphic information, including, but not limited to, performance and design criteria, list of applicable codes and regulations, and calculations. Include list of assumptions and other performance and design criteria and a summary of loads.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

Include load diagrams if applicable. Provide name and version of software, if any, used for calculations. Include page numbers.

2.2 DELEGATED-DESIGN SERVICES

- A. Performance and Design Criteria: Where professional design services or certifications by a design professional are specifically required of Contractor by the Contract Documents, provide products and systems complying with specific performance and design criteria indicated.
 - 1. If criteria indicated are not sufficient to perform services or certification required, submit a written request for additional information to Architect.
- B. Delegated-Design Services Certification: In addition to Shop Drawings, Product Data, and other required submittals, submit three paper copies of certificate, signed and sealed by the responsible design professional, for each product and system specifically assigned to Contractor to be designed or certified by a design professional.
 - 1. Indicate that products and systems comply with performance and design criteria in the Contract Documents. Include list of codes, loads, and other factors used in performing these services.
- C. BIM File Incorporation: Incorporate delegated-design drawing and data files into Building Information Model established for Project. Verify with Architect prior to starting and BIM incorporation.
 - 1. Prepare delegated-design drawings in the following format: Same digital data software program, version, and operating system as the original Drawings.

PART 3 - EXECUTION

3.1 CONTRACTOR'S REVIEW

- A. Action and Informational Submittals: Review each submittal and check for coordination with other Work of the Contract and for compliance with the Contract Documents. Note corrections and field dimensions. Mark with approval stamp before submitting to Architect.
- B. Project Closeout and Maintenance Material Submittals: See requirements in Division 01 Section "Closeout Procedures."
- C. Approval Stamp: Stamp each submittal with a uniform, approval stamp. Include Project name and location, submittal number, Specification Section title and number, name of reviewer, date of Contractor's approval, and statement certifying that submittal has been reviewed, checked, and approved for compliance with the Contract Documents.

3.2 ARCHITECT'S ACTION

- A. Action Submittals: Architect will review each submittal, make marks to indicate corrections or revisions required, and return it. Architect will stamp each submittal with an action stamp and will mark stamp appropriately to indicate action.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- 1. Architect reviews submittals for general compliance with the drawings and specifications. Approval of the submittal by the architect does not release the contractor from full compliance with the construction documents. Any changes not in full compliance, or that involve cost increases or decreases, or that affect the project schedule require a change order. Unless specifically noted for architect verification, the contractor is responsible for dimensions, omissions and details.**
- B. Informational Submittals: Architect will review each submittal and will not return it, or will return it if it does not comply with requirements. Architect will forward each submittal to appropriate party.
- C. Partial submittals prepared for a portion of the Work will be reviewed when use of partial submittals has received prior approval from Architect.
- D. Incomplete submittals are unacceptable, will be considered nonresponsive, and will be returned for re-submittal without review.
- E. Submittals not required by the Contract Documents may be returned by the Architect without action.

END OF SECTION 013300

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 017700 - CLOSEOUT PROCEDURES

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and other Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section includes administrative and procedural requirements for contract closeout, including, but not limited to, the following:
 - 1. Substantial Completion procedures.
 - 2. Final completion procedures.
 - 3. Warranties.
 - 4. Final cleaning.
 - 5. Repair of the Work.
- B. Related Requirements:
 - 1. Division 01 Section "Photographic Documentation" for submitting final completion construction photographic documentation.
 - 2. Division 01 Section "Execution" for progress cleaning of Project site.
 - 3. Division 01 Section "Operation and Maintenance Data" for operation and maintenance manual requirements.
 - 4. Division 01 Section "Project Record Documents" for submitting record Drawings, record Specifications, and record Product Data.
 - 5. Division 01 Section "Demonstration and Training" for requirements for instructing Owner's personnel.
 - 6. Divisions 02 through 33 Sections for specific closeout and special cleaning requirements for the Work in those Sections.

1.3 ACTION SUBMITTALS

- A. Product Data: For cleaning agents.
- B. Contractor's List of Incomplete Items: Initial submittal at Substantial Completion.
- C. Certified List of Incomplete Items: Final submittal at Final Completion.

1.4 CLOSEOUT SUBMITTALS

- A. Certificates of Release: From authorities having jurisdiction.
- B. Certificate of Insurance: For continuing coverage.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- C. Field Report: For pest control inspection.

1.5 MAINTENANCE MATERIAL SUBMITTALS

- A. Schedule of Maintenance Material Items: For maintenance material submittal items specified in other Sections.

1.6 SUBSTANTIAL COMPLETION PROCEDURES

- A. Contractor's List of Incomplete Items: Prepare and submit a list of items to be completed and corrected (Contractor's punch list), indicating the value of each item on the list and reasons why the Work is incomplete.
- B. Submittals Prior to Substantial Completion: Complete the following a minimum of 10 days prior to requesting inspection for determining date of Substantial Completion. List items below that are incomplete at time of request.
1. Certificates of Release: Obtain and submit releases from authorities having jurisdiction permitting Owner unrestricted use of the Work and access to services and utilities. Include occupancy permits, operating certificates, and similar releases.
 2. Submit closeout submittals specified in other Division 01 Sections, including project record documents, operation and maintenance manuals, final completion construction photographic documentation, damage or settlement surveys, property surveys, and similar final record information.
 3. Submit closeout submittals specified in individual Divisions 02 through 33 Sections, including specific warranties, workmanship bonds, maintenance service agreements, final certifications, and similar documents.
 4. Submit maintenance material submittals specified in individual Divisions 02 through 33 Sections, including tools, spare parts, extra materials, and similar items, and deliver to location designated by Owner. Label with manufacturer's name and model number where applicable.
 - a. Schedule of Maintenance Material Items: Prepare and submit schedule of maintenance material submittal items, including name and quantity of each item and name and number of related Specification Section. Obtain Owner's signature for receipt of submittals.
 5. Submit test/adjust/balance records.
 6. Submit sustainable design submittals required in Division 01 sustainable design requirements Section and in individual Division 02 through 33 Sections.
 7. Submit changeover information related to Owner's occupancy, use, operation, and maintenance.
- C. Procedures Prior to Substantial Completion: Complete the following a minimum of 10 days prior to requesting inspection for determining date of Substantial Completion. List items below that are incomplete at time of request.
1. Advise Owner of pending insurance changeover requirements.
 2. Make final changeover of permanent locks and deliver keys to Owner. Advise Owner's personnel of changeover in security provisions.
 3. Complete startup and testing of systems and equipment.
 4. Perform preventive maintenance on equipment used prior to Substantial Completion.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

5. Instruct Owner's personnel in operation, adjustment, and maintenance of products, equipment, and systems. Submit demonstration and training video recordings specified in Division 01 Section "Demonstration and Training."
6. Advise Owner of changeover in heat and other utilities.
7. Participate with Owner in conducting inspection and walkthrough with local emergency responders.
8. Terminate and remove temporary facilities from Project site, along with mockups, construction tools, and similar elements.
9. Complete final cleaning requirements, including touchup painting.
10. Touch up and otherwise repair and restore marred exposed finishes to eliminate visual defects.

1.7 FINAL COMPLETION PROCEDURES

- A. Submittals Prior to Final Completion: Before requesting final inspection for determining final completion, complete the following:
 1. Submit a final Application for Payment according to Division 01 Section "Payment Procedures."
 2. Certified List of Incomplete Items: Submit certified copy of Architect's Substantial Completion inspection list of items to be completed or corrected (punch list), endorsed and dated by Architect. Certified copy of the list shall state that each item has been completed or otherwise resolved for acceptance.
 3. Certificate of Insurance: Submit evidence of final, continuing insurance coverage complying with insurance requirements.
 4. Submit pest-control final inspection report.
- B. Inspection: Submit a written request for final inspection to determine acceptance a minimum of 10 days prior to date the work will be completed and ready for final inspection and tests. Notify State Health Department and Fire Department two weeks in advance for their inspections. On receipt of request, Architect will either proceed with inspection or notify Contractor of unfulfilled requirements. Architect will prepare a final Certificate for Payment after inspection or will notify Contractor of construction that must be completed or corrected before certificate will be issued.
 1. Re-inspection: Request re-inspection when the Work identified in previous inspections as incomplete is completed or corrected.

1.8 LIST OF INCOMPLETE ITEMS (PUNCH LIST)

- A. Organization of List: Include name and identification of each space and area affected by construction operations for incomplete items and items needing correction including, if necessary, areas disturbed by Contractor that are outside the limits of construction.
 1. Organize list of spaces in sequential order, starting with exterior areas first and proceeding from lowest floor to highest floor.
 2. Organize items applying to each space by major element, including categories for ceiling, individual walls, floors, equipment, and building systems.
 3. Include the following information at the top of each page:
 - a. Project name.
 - b. Date.
 - c. Name of Architect.
 - d. Name of Contractor.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

e. Page number.

1.9 SUBMITTAL OF PROJECT WARRANTIES

- A. Time of Submittal: Submit written warranties on request of Architect for designated portions of the Work where commencement of warranties other than date of Substantial Completion is indicated, or when delay in submittal of warranties might limit Owner's rights under warranty.
- B. Partial Occupancy: Submit properly executed warranties within 15 days of completion of designated portions of the Work that are completed and occupied or used by Owner during construction period by separate agreement with Contractor.
- C. Organize warranty documents into an orderly sequence based on the table of contents of Project Manual.
 - 1. Bind warranties and bonds in heavy-duty, three-ring, vinyl-covered, loose-leaf binders, thickness as necessary to accommodate contents, and sized to receive **8-1/2-by-11-inch (215-by-280-mm)** paper.
 - 2. Provide heavy paper dividers with plastic-covered tabs for each separate warranty. Mark tab to identify the product or installation. Provide a typed description of the product or installation, including the name of the product and the name, address, and telephone number of Installer.
 - 3. Identify each binder on the front and spine with the typed or printed title "WARRANTIES," Project name, and name of Contractor.
 - 4. Warranty Electronic File: Scan warranties and bonds and assemble complete warranty and bond submittal package into a single indexed electronic PDF file with links enabling navigation to each item. Provide bookmarked table of contents at beginning of document.
- D. Provide additional copies of each warranty to include in operation and maintenance manuals.

PART 2 - PRODUCTS

2.1 MATERIALS

- A. Cleaning Agents: Use cleaning materials and agents recommended by manufacturer or fabricator of the surface to be cleaned. Do not use cleaning agents that are potentially hazardous to health or property or that might damage finished surfaces.
 - 1. Use cleaning products that comply with Green Seal's GS-37, or if GS-37 is not applicable, use products that comply with the California Code of Regulations maximum allowable VOC levels.

PART 3 - EXECUTION

3.1 FINAL CLEANING

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- A. General: Perform final cleaning. Conduct cleaning and waste-removal operations to comply with local laws and ordinances and Federal and local environmental and antipollution regulations.
- B. Cleaning: Employ experienced workers or professional cleaners for final cleaning. Clean each surface or unit to condition expected in an average commercial building cleaning and maintenance program. Comply with manufacturer's written instructions.
 - 1. Complete the following cleaning operations (as applicable) before requesting inspection for certification of Substantial Completion for entire Project or for a designated portion of Project:
 - a. Clean Project site, yard, and grounds, in areas disturbed by construction activities, including landscape development areas, of rubbish, waste material, litter, and other foreign substances.
 - b. Sweep paved areas broom clean. Remove petrochemical spills, stains, and other foreign deposits.
 - c. Remove tools, construction equipment, machinery, and surplus material from Project site.
 - d. Remove snow and ice to provide safe access to building.
 - e. Clean exposed exterior and interior hard-surfaced finishes to a dirt-free condition, free of stains, films, and similar foreign substances. Avoid disturbing natural weathering of exterior surfaces. Restore reflective surfaces to their original condition.
 - f. Remove debris and surface dust from limited access spaces, including roofs, plenums, shafts, trenches, equipment vaults, manholes, attics, and similar spaces.
 - g. Sweep concrete floors broom clean in unoccupied spaces.
 - h. Vacuum carpet and similar soft surfaces, removing debris and excess nap; clean according to manufacturer's recommendations if visible soil or stains remain.
 - i. Clean transparent materials, including mirrors and glass in doors and windows. Remove glazing compounds and other noticeable, vision-obscuring materials. Polish mirrors and glass, taking care not to scratch surfaces.
 - j. Remove labels that are not permanent.
 - k. Wipe surfaces of mechanical and electrical equipment, elevator equipment, and similar equipment. Remove excess lubrication, paint and mortar droppings, and other foreign substances.
 - l. Clean plumbing fixtures to a sanitary condition, free of stains, including stains resulting from water exposure.
 - m. Replace disposable air filters and clean permanent air filters. Clean exposed surfaces of diffusers, registers, and grills.
 - n. Clean ducts, blowers, and coils if units were operated without filters during construction or that display contamination with particulate matter on inspection.
 - 1) Clean HVAC system in compliance with NADCA Standard 1992-01. Provide written report on completion of cleaning.
 - o. Clean light fixtures, lamps, globes, and reflectors to function with full efficiency.
 - p. Leave Project clean and ready for occupancy.
- C. Pest Control: Comply with pest control requirements in Division 01 Section "Temporary Facilities and Controls." Prepare written report.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

3.2 REPAIR OF THE WORK

- A. Complete repair and restoration operations before requesting inspection for determination of Substantial Completion.
- B. Repair or remove and replace defective construction. Repairing includes replacing defective parts, refinishing damaged surfaces, touching up with matching materials, and properly adjusting operating equipment. Where damaged or worn items cannot be repaired or restored, provide replacements. Remove and replace operating components that cannot be repaired. Restore damaged construction and permanent facilities used during construction to specified condition.
 - 1. Remove and replace chipped, scratched, and broken glass, reflective surfaces, and other damaged transparent materials.
 - 2. Touch up and otherwise repair and restore marred or exposed finishes and surfaces. Replace finishes and surfaces that already show evidence of repair or restoration.
 - a. Do not paint over "UL" and other required labels and identification, including mechanical and electrical nameplates. Remove paint applied to required labels and identification.
 - 3. Replace parts subject to operating conditions during construction that may impede operation or reduce longevity.
 - 4. Replace burned-out bulbs, bulbs noticeably dimmed by hours of use, and defective and noisy starters in fluorescent and mercury vapor fixtures to comply with requirements for new fixtures.

END OF SECTION 017700

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 064116 - PLASTIC-LAMINATE-CLAD ARCHITECTURAL CABINETS

PART 1 GENERAL

1.1 SUMMARY

- A. Section Includes:
 - 1. Plastic-laminate-clad architectural cabinets.
 - 2. Cabinet hardware and accessories.
 - 3. Miscellaneous materials.
- B. Related Requirements:
 - 1. Section 061000 "Rough Carpentry" for wood furring, blocking, shims, and hanging strips required for installing cabinets that are concealed within other construction before cabinet installation.

1.2 COORDINATION

- C. Coordinate sizes and locations of framing, blocking, furring, reinforcements, and other related units of Work specified in other Sections to support loads imposed by installed and fully loaded cabinets.
- D. Hardware Coordination: Distribute copies of approved hardware schedule specified in Section 087100 "Door Hardware" to manufacturer of architectural cabinets; coordinate Shop Drawings and fabrication with hardware requirements.

1.3 PREINSTALLATION MEETINGS

- E. Preinstallation Conference: Conduct conference at Project site

1.4 ACTION SUBMITTALS

- F. Product Data:
 - 1. Plastic-laminate-clad architectural cabinets.
 - 2. Cabinet hardware and accessories.
 - 3. Miscellaneous materials.
- G. Product Data Submittals: For each product.
 - 1. Include data for fire-retardant treatment from chemical-treatment manufacturer and certification by treating plant that treated materials comply with requirements.
- H. Shop Drawings:
 - 1. Include plans, elevations, sections, and attachment details.
 - 2. Show large-scale details.
 - 3. Show locations and sizes of furring, blocking, and hanging strips, including concealed blocking and reinforcement specified in other Sections.
 - 4. Show locations and sizes of cutouts and holes for items installed in plastic-laminate architectural cabinets.
 - 5. Apply AWI Quality Certification Program label to Shop Drawings.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- I. Samples: For each exposed product and for each color and texture specified, in manufacturer's or manufacturer's standard size.
- J. Samples for Initial Selection: For each type of exposed finish.
- K. Samples for Verification: For the following:
 - 1. Plastic Laminates: 8 by 10 inches (200 by 250 mm) for each type, color, pattern, and surface finish required.
 - a. Provide one sample applied to core material with specified edge material applied to one edge.
 - b. Provide edge banding on one edge.
 - 2. Corner Pieces:
 - a. Cabinet-front frame joints between stiles and rails and at exposed end pieces, 18 inches (450 mm) high by 18 inches (450 mm) wide by 6 inches (150 mm) deep.
 - b. Miter joints for standing trim.
 - 3. Exposed Cabinet Hardware and Accessories: One full-size unit for each type and finish.

1.5 INFORMATIONAL SUBMITTALS

- L. Qualification Data: For manufacturer and Installer.
- M. Product Certificates: For each type of product.
 - 1. Composite wood products.
 - 2. Thermally fused laminate panels.
 - 3. High-pressure decorative laminate.
 - 4. Glass.
 - 5. Adhesives.
- N. Evaluation Reports: For fire-retardant-treated materials, from ICC-ES.
- O. Field quality-control reports.

1.6 CLOSEOUT SUBMITTALS

- P. Quality Standard Compliance Certificates: AWI Quality Certification Program certificates.

1.7 QUALITY ASSURANCE

- Q. Manufacturer's Qualifications: Employs skilled workers who custom fabricate products similar to those required for this Project and whose products have a record of successful in-service performance.
- R. Mockups: Build mockups to verify selections made under Sample submittals, to demonstrate aesthetic effects, and to set quality standards for materials and execution.
 - 1. Build mockups of typical architectural cabinets as shown on Drawings
 - 2. Subject to compliance with requirements, approved mockups may become part of the completed Work if undisturbed at time of Substantial Completion.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

1.8 DELIVERY, STORAGE, AND HANDLING

- S. Do not deliver cabinets until painting and similar finish operations that might damage architectural cabinets have been completed in installation areas. Store cabinets in installation areas or in areas where environmental conditions comply with requirements specified in "Field Conditions" Article.

1.9 FIELD CONDITIONS

- T. Environmental Limitations without Humidity Control: Do not deliver or install cabinets until building is enclosed, wet-work is complete, and HVAC system is operating and maintaining temperature and relative humidity at levels planned for building occupants during the remainder of the construction period.
- U. Environmental Limitations with Humidity Control: Do not deliver or install cabinets until building is enclosed, wet-work is complete, and HVAC system is operating and maintaining temperature between 60 and 90 deg F (16 and 32 deg C) and relative humidity between 43 and 70 percent during the remainder of the construction period.
- V. Field Measurements: Where cabinets are indicated to fit to other construction, verify dimensions of other construction by field measurements before fabrication, and indicate measurements on Shop Drawings. Coordinate fabrication schedule with construction progress to avoid delaying the Work.
1. Locate concealed framing, blocking, and reinforcements that support cabinets by field measurements before being enclosed/concealed by construction, and indicate measurements on Shop Drawings.
- W. Established Dimensions: Where cabinets are indicated to fit to other construction, establish dimensions for areas where cabinets are to fit. Provide allowance for trimming at site, and coordinate construction to ensure that actual dimensions correspond to established dimensions.

PART 2 PRODUCTS

2.1 REFER TO INTERIOR FINISH MATERIAL SCHEDULE FOR MATERIAL FINISH

2.2 PLASTIC-LAMINATE-CLAD ARCHITECTURAL CABINETS

- A. Quality Standard: Unless otherwise indicated, comply with the Architectural Woodwork Standards for grades of cabinets indicated for construction, finishes, installation, and other requirements.
1. Provide labels from AWI certification program indicating that woodwork and installation complies with requirements of grades specified.
2. The Contract Documents contain requirements that are more stringent than the referenced quality standard. Comply with requirements of Contract Documents in addition to those of the referenced quality standard.
- B. Architectural Woodwork Standards Grade: Custom
- C. Type of Construction: Frameless
- D. Door and Drawer-Front Style: Flush overlay.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- E. High-Pressure Decorative Laminate: ISO 4586-3, grades as indicated or if not indicated, as required by quality standard.
- F. Exposed Surfaces:
 - 1. Plastic-Laminate Grade: HGS
 - 2. Edges: As noted in drawing set
 - 3. Pattern Direction: Vertically for doors and fixed panels, horizontally for drawer fronts
- G. Semiexposed Surfaces:
 - 1. Surfaces Other Than Drawer Bodies: High-pressure decorative laminate, ISO 4586-3
 - a. Edges of Plastic-Laminate Shelves: PVC tape, 0.018-inch (0.460-mm) minimum thickness, matching laminate in color, pattern, and finish
 - b. Edges of Thermally Fused Laminate Panel Shelves: PVC or polyester edge banding.
 - c. For semiexposed backs of panels with exposed plastic-laminate surfaces, provide surface of high-pressure decorative laminate, ISO 4586-3, grade to match exposed surface.
 - 2. Drawer Sides and Backs: Thermally fused laminate panels with PVC or polyester edge banding.
 - 3. Drawer Bottoms: Thermally fused laminate panels
- H. Dust Panels: 1/4-inch (6.4-mm) plywood or tempered hardboard above compartments and drawers unless located directly under tops.
- I. Concealed Backs of Panels with Exposed Plastic-Laminate Surfaces: High-pressure decorative laminate, ISO 4583-3, grade to match exposed surface.
- J. Drawer Construction: Fabricate with exposed fronts fastened to subfront with mounting screws from interior of body.
 - 1. Join subfronts, backs, and sides with glued rabbeted joints supplemented by mechanical fasteners or glued dovetail joints.
- K. Colors, Patterns, and Finishes: Provide materials and products that result in colors and textures of exposed laminate surfaces complying with the following requirements:
 - 1. As indicated by laminate manufacturer's designations.
 - 2. Match Architect's sample.
 - 3. As selected by Architect from laminate manufacturer's full range in the following categories:
 - a. Solid colors, matte finish.
 - b. Solid colors with core same color as surface, matte finish.
 - c. Wood grains, matte finish.
 - d. Patterns, matte finish.

2.3 WOOD VENEER HIGH PRESSURE LAMINATE

- L. REFER TO ARCHITECTURAL DRAWINGS
- M. Manufacturer: REFER TO ARCHITECTURAL DRAWINGS
- N. No substitutions allowed.

2.4 WOOD MATERIALS

- O. Wood Products: Provide materials that comply with requirements of referenced quality standard for each type of architectural cabinet and quality grade specified unless otherwise indicated.
 - 1. Wood Moisture Content: 8 to 13 percent.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

P. Composite Wood Products: Provide materials that comply with requirements of referenced quality standard for each type of architectural cabinet and quality grade specified unless otherwise indicated.

1. Medium-Density Fiberboard (MDF): ANSI A208.2, Grade 130
2. Thermally Fused Laminate (TFL) Panels: Particleboard or MDF finished with thermally fused, melamine-impregnated decorative paper and complying with requirements of ISO 4586.

2.5 PANEL CORE MATERIALS

Q. Medium Density Fiberboard (MDF): Composite panel composed of cellulosic fibers, additives, and bonding system; cured under heat and pressure; comply with ANSI A208.2.

1. Grade: 115; moisture resistance: MR10.

2.6 FIRE-RETARDANT-TREATED MATERIALS

R. Fire-Retardant-Treated Materials, General: Where fire-retardant-treated materials are indicated, use materials that are acceptable to authorities having jurisdiction and with fire-test-response characteristics specified as determined by testing identical products in accordance with test method indicated by a qualified testing agency.

1. Use treated materials that comply with requirements of referenced quality standard. Do not use materials that are warped, discolored, or otherwise defective.
2. Use fire-retardant-treatment formulations that do not bleed through or otherwise adversely affect finishes. Do not use colorants to distinguish treated materials from untreated materials.
3. Identify fire-retardant-treated materials with appropriate classification marking of qualified testing agency in the form of removable paper label or imprint on surfaces that will be concealed from view after installation.

S. Fire-Retardant-Treated Lumber and Plywood: Products with a flame-spread index of 25 or less when tested in accordance with ASTM E84, with no evidence of significant progressive combustion when the test is extended an additional 20 minutes, and with the flame front not extending more than 10.5 feet (3.2 m) beyond the centerline of the burners at any time during the test.

1. Kiln-dry lumber and plywood after treatment to a maximum moisture content of 19 and 15 percent, respectively.
2. Mill lumber after treatment within limits set for wood removal that do not affect listed fire-test-response characteristics, using a woodworking shop certified by testing and inspecting agency.
3. Mill lumber before treatment and implement procedures during treatment and drying processes that prevent lumber from warping and developing discolorations from drying sticks or other causes, marring, and other defects affecting appearance of architectural cabinets.

T. Fire-Retardant Particleboard: Made from softwood particles and fire-retardant chemicals mixed together at time of panel manufacture to achieve flame-spread index of 25 or less and smoke-developed index of 25 or less in accordance with ASTM E84.

1. For panels 3/4 inch (19 mm) thick and less, comply with ANSI A208.1 for Grade M-2 except for the following minimum properties: modulus of rupture, 1600 psi (11 MPa); modulus of elasticity, 300,000 psi (2070 MPa); internal bond, 80 psi (550 kPa); and screw-holding capacity on face and edge, 250 and 225 lbf (1100 and 1000 N), respectively.
2. For panels 13/16 to 1-1/4 inches (20 to 32 mm) thick, comply with ANSI A208.1 for Grade M-1 except for the following minimum properties: modulus of rupture, 1300 psi (9 MPa); modulus of elasticity, 250,000 psi (1720 MPa); linear expansion, 0.50 percent; and screw-holding capacity on face and edge, 250 and 175 lbf (1100 and 780 N), respectively.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- U. Fire-Retardant Fiberboard: MDF panels complying with ANSI A208.2, made from softwood fibers, synthetic resins, and fire-retardant chemicals mixed together at time of panel manufacture to achieve flame-spread index of 25 or less and smoke-developed index of 200 or less in accordance with ASTM E84.

2.7 CABINET HARDWARE AND ACCESSORIES

- V. Cabinet Hardware: Provide cabinet hardware and accessory materials associated with architectural cabinets except for items specified in Section 087100 "Door Hardware."
- W. Butt Hinges: 2-3/4-inch (70-mm), five-knuckle steel hinges made from 0.095-inch- (2.4-mm-) thick metal, and as follows:
1. Semiconcealed Hinges for Flush Doors: ANSI/BHMA A156.9, B01361.
 2. Semiconcealed Hinges for Overlay Doors: ANSI/BHMA A156.9, B01521.
- X. Frameless Concealed Hinges (European Type): ANSI/BHMA A156.9, B01602, 170 degrees of opening, self-closing.
- Y. Back-Mounted Pulls: ANSI/BHMA A156.9, B02011.
- Z. Wire Pulls: Back mounted, solid metal, 5 inches (127 mm) long, 2-1/2 inches (63.5 mm) deep, and 5/16 inch (8 mm) in diameter.
- AA. Catches: Push-in magnetic catches, ANSI/BHMA A156.9, B03131
- BB. Shelf Rests: ANSI/BHMA A156.9, B04013; metal
- CC. Drawer Slides: ANSI/BHMA A156.9.
1. Heavy-Duty (Grade 1HD-100 and Grade 1HD-200): Side mount
 - a. Type: Full overtravel extension.
 - b. Material: Zinc-plated ball bearing slides.
 - c. Motion Feature: Push to open and Soft close dampener
 2. General-purpose drawers more than 3 inches (75 mm) high, but not more than 6 inches (150 mm) high and not more than 24 inches (600 mm) wide, provide 75 lb (34 kg) load capacity.
 3. File drawers more than 6 inches (150 mm) high or more than 24 inches (600 mm) wide, provide 100 lb (45 kg) load capacity.
 4. Lateral file drawers more than 6 inches (150 mm) high and more than 24 inches (600 mm) but not more than 30 inches (762 mm) wide, provide 150 lb (68 kg) load capacity.
 5. Lateral file drawers more than 6 inches (150 mm) high and more than 30 inches (762 mm) wide, provide 200 lb (90.7 kg) load capacity.
- DD. Door Locks: ANSI/BHMA A156.11, E07121.
- EE. Drawer Locks: ANSI/BHMA A156.11, E07041.
- FF. Door and Drawer Silencers: ANSI/BHMA A156.16, L03011.
1. Unframed Glass Doors: Seam exposed edges seamed before tempering.
- GG. Grommets for Cable Passage: 2-inch (51-mm) OD, molded-plastic grommets and matching plastic caps with slot for wire passage.
1. Color: Black
- HH. Exposed Hardware Finishes: For exposed hardware, provide a finish that complies with ANSI/BHMA A156.18 for ANSI/BHMA finish number indicated.
1. Dark, Oxidized, Satin Bronze, Oil Rubbed: ANSI/BHMA 613 for bronze base; ANSI/BHMA 640 for steel base; match Architect's sample.
 2. Bright Brass, Clear Coated: ANSI/BHMA 605 for brass base; ANSI/BHMA 632 for steel base.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

3. Bright Brass, Vacuum Coated: ANSI/BHMA 723 for brass base; ANSI/BHMA 729 for zinc-coated-steel base.
 4. Satin Brass, Blackened, Bright Relieved, Clear Coated: ANSI/BHMA 610 for brass base; ANSI/BHMA 636 for steel base.
 5. Satin Chromium Plated: ANSI/BHMA 626 for brass or bronze base; ANSI/BHMA 652 for steel base.
 6. Bright Chromium Plated: ANSI/BHMA 625 for brass or bronze base; ANSI/BHMA 651 for steel base.
 7. Satin Stainless Steel: ANSI/BHMA 630.
- II. For concealed hardware, provide manufacturer's standard finish that complies with product class requirements in ANSI/BHMA A156.9.

2.8 MISCELLANEOUS MATERIALS

- JJ. Furring, Blocking, Shims, and Hanging Strips: Fire-retardant-treated softwood lumber, kiln-dried to less than 15 percent moisture content.
- KK. Anchors: Select material, type, size, and finish required for each substrate for secure anchorage. Provide metal expansion sleeves or expansion bolts for post-installed anchors. Use non-ferrous-metal or hot-dip galvanized anchors and inserts at inside face of exterior walls and at floors.
- LL. Adhesive for Bonding Plastic Laminate: Type II water-resistant type as selected by fabricator to comply with requirements.
1. Adhesive for Bonding Edges: Hot-melt adhesive or adhesive specified above for faces.

2.9 FABRICATION

- MM. Fabricate architectural cabinets to dimensions, profiles, and details indicated.
- NN. Complete fabrication, including assembly and hardware application, to maximum extent possible before shipment to Project site. Disassemble components only as necessary for shipment and installation. Where necessary for fitting at site, provide ample allowance for scribing, trimming, and fitting.
1. Notify Architect seven days in advance of the dates and times architectural cabinet fabrication will be complete.
 2. Trial fit assemblies at manufacturer's shop that cannot be shipped completely assembled. Install dowels, screws, bolted connectors, and other fastening devices that can be removed after trial fitting. Verify that various parts fit as intended and check measurements of assemblies against field measurements before disassembling for shipment.
- OO. Shop-cut openings to maximum extent possible to receive hardware, appliances, electrical work, and similar items. Locate openings accurately and use templates or roughing-in diagrams to produce accurately sized and shaped openings. Sand edges of cutouts to remove splinters and burrs.
- PP. Install glass to comply with applicable requirements in Section 088000 "Glazing" and in GANA's "Glazing Manual."
1. For glass in frames, secure glass with removable stops.
 2. For exposed glass edges, polish and grind smooth.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

PART 3 EXECUTION

3.1 PREPARATION

- A. Before installation, condition cabinets to humidity conditions in installation areas for not less than 72 hours.

3.2 INSTALLATION

- B. Architectural Woodwork Standards Grade: Install cabinets to comply with quality standard grade of item to be installed.
- C. Assemble cabinets and complete fabrication at Project site to extent that it was not completed in the shop.
- D. Anchor cabinets to anchors or blocking built in or directly attached to substrates. Secure with wafer-head cabinet installation screws.
- E. Install cabinets level, plumb, and true in line to a tolerance of 1/8 inch in 96 inches (3 mm in 2400 mm) using concealed shims.
1. Scribe and cut cabinets to fit adjoining work, refinish cut surfaces, and repair damaged finish at cuts.
 2. Install cabinets without distortion so doors and drawers fit openings and are accurately aligned. Adjust hardware to center doors and drawers in openings and to provide unencumbered operation. Complete installation of hardware and accessory items as indicated.
 3. Fasten wall cabinets through back, near top and bottom, and at ends not more than 16 inches (400 mm) o.c. with No. 10 wafer-head sheet metal screws through metal backing or metal framing behind wall finish.

3.3 FIELD QUALITY CONTROL

- F. Inspections: Upon delivery to the site, the fabricated laminate cabinets and its components shall be verified that they meet AWI's Quality Standards for the specified grade by contractor.

3.4 ADJUSTING AND CLEANING

- G. Repair damaged and defective cabinets, where possible, to eliminate functional and visual defects. Where not possible to repair, replace architectural cabinets. Adjust joinery for uniform appearance.
- H. Clean, lubricate, and adjust hardware.
- I. Clean cabinets on exposed and semi-exposed surfaces.

END OF SECTION 064116

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 064116 - PLASTIC-LAMINATE-CLAD ARCHITECTURAL CABINETS

PART 1 GENERAL

1.1 SUMMARY

- A. Section Includes:
 - 1. Plastic-laminate-clad architectural cabinets.
 - 2. Cabinet hardware and accessories.
 - 3. Miscellaneous materials.
- B. Related Requirements:
 - 1. Section 061000 "Rough Carpentry" for wood furring, blocking, shims, and hanging strips required for installing cabinets that are concealed within other construction before cabinet installation.

1.2 COORDINATION

- C. Coordinate sizes and locations of framing, blocking, furring, reinforcements, and other related units of Work specified in other Sections to support loads imposed by installed and fully loaded cabinets.
- D. Hardware Coordination: Distribute copies of approved hardware schedule specified in Section 087100 "Door Hardware" to manufacturer of architectural cabinets; coordinate Shop Drawings and fabrication with hardware requirements.

1.3 PREINSTALLATION MEETINGS

- E. Preinstallation Conference: Conduct conference at Project site

1.4 ACTION SUBMITTALS

- F. Product Data:
 - 1. Plastic-laminate-clad architectural cabinets.
 - 2. Cabinet hardware and accessories.
 - 3. Miscellaneous materials.
- G. Product Data Submittals: For each product.
 - 1. Include data for fire-retardant treatment from chemical-treatment manufacturer and certification by treating plant that treated materials comply with requirements.
- H. Shop Drawings:
 - 1. Include plans, elevations, sections, and attachment details.
 - 2. Show large-scale details.
 - 3. Show locations and sizes of furring, blocking, and hanging strips, including concealed blocking and reinforcement specified in other Sections.
 - 4. Show locations and sizes of cutouts and holes for items installed in plastic-laminate architectural cabinets.
 - 5. Apply AWI Quality Certification Program label to Shop Drawings.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- I. Samples: For each exposed product and for each color and texture specified, in manufacturer's or manufacturer's standard size.
- J. Samples for Initial Selection: For each type of exposed finish.
- K. Samples for Verification: For the following:
 - 1. Plastic Laminates: 8 by 10 inches (200 by 250 mm) for each type, color, pattern, and surface finish required.
 - a. Provide one sample applied to core material with specified edge material applied to one edge.
 - b. Provide edge banding on one edge.
 - 2. Corner Pieces:
 - a. Cabinet-front frame joints between stiles and rails and at exposed end pieces, 18 inches (450 mm) high by 18 inches (450 mm) wide by 6 inches (150 mm) deep.
 - b. Miter joints for standing trim.
 - 3. Exposed Cabinet Hardware and Accessories: One full-size unit for each type and finish.

1.5 INFORMATIONAL SUBMITTALS

- L. Qualification Data: For manufacturer and Installer.
- M. Product Certificates: For each type of product.
 - 1. Composite wood products.
 - 2. Thermally fused laminate panels.
 - 3. High-pressure decorative laminate.
 - 4. Glass.
 - 5. Adhesives.
- N. Evaluation Reports: For fire-retardant-treated materials, from ICC-ES.
- O. Field quality-control reports.

1.6 CLOSEOUT SUBMITTALS

- P. Quality Standard Compliance Certificates: AWI Quality Certification Program certificates.

1.7 QUALITY ASSURANCE

- Q. Manufacturer's Qualifications: Employs skilled workers who custom fabricate products similar to those required for this Project and whose products have a record of successful in-service performance.
- R. Mockups: Build mockups to verify selections made under Sample submittals, to demonstrate aesthetic effects, and to set quality standards for materials and execution.
 - 1. Build mockups of typical architectural cabinets as shown on Drawings
 - 2. Subject to compliance with requirements, approved mockups may become part of the completed Work if undisturbed at time of Substantial Completion.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 078443 - JOINT FIRESTOPPING

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Joints in or between fire-resistance-rated constructions.
 - 2. Joints at exterior curtain-wall/floor intersections.
 - 3. Joints in smoke barriers.
- B. Related Requirements:
 - 1. Section 078413 "Penetration Firestopping" for penetrations in fire-resistance-rated walls, horizontal assemblies, and smoke barriers.
 - 2. Section 079500 "Expansion Control" for fire-resistive architectural joint systems.
 - 3. Section 092216 "Non-Structural Metal Framing" for firestop tracks for metal-framed partition heads.

1.3 ACTION SUBMITTALS

- A. Product Data: For each type of product.
- B. Sustainable Design Submittals:
 - 1. **Product Data:** For sealants, indicating VOC content.
 - 2. Laboratory Test Reports: For sealants, indicating compliance with requirements for low-emitting materials.
- C. Product Schedule: For each joint firestopping system. Include location, illustration of firestopping system, and design designation of qualified testing agency.
 - 1. Engineering Judgments: Where Project conditions require modification to a qualified testing agency's illustration for a particular joint firestopping system condition, submit illustration, with modifications marked, approved by joint firestopping system manufacturer's fire-protection engineer as an engineering judgment or equivalent fire-resistance-rated assembly.

1.4 INFORMATIONAL SUBMITTALS

- A. Qualification Data: For Installer.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- B. Product Test Reports: For each joint firestopping system, for tests performed by a qualified testing agency.

1.5 CLOSEOUT SUBMITTALS

- A. Installer Certificates: From Installer indicating that joint firestopping systems have been installed in compliance with requirements and manufacturer's written instructions.

1.6 QUALITY ASSURANCE

- A. Installer Qualifications: A firm that has been approved by FM Global according to FM Global 4991, "Approval of Firestop Contractors," or been evaluated by UL and found to comply with UL's "Qualified Firestop Contractor Program Requirements."

1.7 PROJECT CONDITIONS

- A. Environmental Limitations: Do not install joint firestopping systems when ambient or substrate temperatures are outside limits permitted by joint firestopping system manufacturers or when substrates are wet due to rain, frost, condensation, or other causes.
- B. Install and cure joint firestopping systems per manufacturer's written instructions using natural means of ventilation or, where this is inadequate, forced-air circulation.

1.8 COORDINATION

- A. Coordinate construction of joints to ensure that joint firestopping systems can be installed according to specified firestopping system design.
- B. Coordinate sizing of joints to accommodate joint firestopping systems.

PART 2 - PRODUCTS

2.1 PERFORMANCE REQUIREMENTS

- A. Fire-Test-Response Characteristics:
 - 1. Perform joint firestopping system tests by a qualified testing agency acceptable to authorities having jurisdiction.
 - 2. Test per testing standards referenced in "Joint Firestopping Systems" Article. Provide rated systems complying with the following requirements:
 - a. Joint firestopping systems shall bear classification marking of a qualified testing agency.
 - 1) UL in its "Fire Resistance Directory."

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

2.2 JOINT FIRESTOPPING SYSTEMS

- A. Joint Firestopping Systems: Systems that resist spread of fire, passage of smoke and other gases, and maintain original fire-resistance rating of assemblies in or between which joint firestopping systems are installed. Joint firestopping systems shall accommodate building movements without impairing their ability to resist the passage of fire and hot gases.
- B. Joints in or between Fire-Resistance-Rated Construction: Provide joint firestopping systems with ratings determined per ASTM E 1966 or UL 2079.
 - 1. Fire-Resistance Rating: Equal to or exceeding the fire-resistance rating of the wall, floor, or roof in or between which it is installed.
- C. Joints at Exterior Curtain-Wall/Floor Intersections: Provide joint firestopping systems with rating determined per ASTM E 2307.
 - 1. F-Rating: Equal to or exceeding the fire-resistance rating of the floor assembly.
- D. Joints in Smoke Barriers: Provide fire-resistive joint systems with ratings determined per UL 2079 based on testing at a positive pressure differential of 0.30-inch wg (74.7 Pa).
 - 1. L-Rating: Not exceeding 5.0 cfm/ft. (0.00775 cu. m/s x m) of joint at both ambient and elevated temperatures.
- E. Exposed Joint Firestopping Systems: Flame-spread and smoke-developed indexes of less than 25 and 450, respectively, as determined per ASTM E 84.
 - 1. Sealant shall have a VOC content of 250 g/L or less.
 - 2. Sealant shall comply with the testing and product requirements of the California Department of Public Health's "Standard Method for the Testing and Evaluation of Volatile Organic Chemical Emissions from Indoor Sources Using Environmental Chambers."
- F. Accessories: Provide components of fire-resistive joint systems, including primers and forming materials, that are needed to install elastomeric fill materials and to maintain ratings required. Use only components specified by joint firestopping system manufacturer and approved by the qualified testing agency for conditions indicated.

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine substrates and conditions, with Installer present, for compliance with requirements for joint configurations, substrates, and other conditions affecting performance of the Work.
- B. Proceed with installation only after unsatisfactory conditions have been corrected.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

3.2 PREPARATION

- A. Surface Cleaning: Before installing fire-resistive joint systems, clean joints immediately to comply with fire-resistive joint system manufacturer's written instructions and the following requirements:
 - 1. Remove from surfaces of joint substrates foreign materials that could interfere with adhesion of elastomeric fill materials or compromise fire-resistive rating.
 - 2. Clean joint substrates to produce clean, sound surfaces capable of developing optimum bond with elastomeric fill materials. Remove loose particles remaining from cleaning operation.
 - 3. Remove laitance and form-release agents from concrete.
- B. Prime substrates where recommended in writing by joint firestopping system manufacturer using that manufacturer's recommended products and methods. Confine primers to areas of bond; do not allow spillage and migration onto exposed surfaces.

3.3 INSTALLATION

- A. General: Install fire-resistive joint systems to comply with manufacturer's written installation instructions and published drawings for products and applications indicated.
- B. Install forming materials and other accessories of types required to support elastomeric fill materials during their application and in position needed to produce cross-sectional shapes and depths required to achieve fire ratings indicated.
 - 1. After installing elastomeric fill materials and allowing them to fully cure, remove combustible forming materials and other accessories not indicated as permanent components of fire-resistive joint system.
- C. Install elastomeric fill materials for fire-resistive joint systems by proven techniques to produce the following results:
 - 1. Elastomeric fill voids and cavities formed by joints and forming materials as required to achieve fire-resistance ratings indicated.
 - 2. Apply elastomeric fill materials so they contact and adhere to substrates formed by joints.
 - 3. For elastomeric fill materials that will remain exposed after completing the Work, finish to produce smooth, uniform surfaces that are flush with adjoining finishes.

3.4 IDENTIFICATION

- A. Joint Identification: Identify joint firestopping systems with legible metal or plastic labels. Attach labels permanently to surfaces adjacent to and within 6 inches (150 mm) of joint edge so labels are visible to anyone seeking to remove or joint firestopping system. Use mechanical fasteners or self-adhering-type labels with adhesives capable of permanently bonding labels to surfaces on which labels are placed. Include the following information on labels:
 - 1. The words "Warning - Joint Firestopping - Do Not Disturb. Notify Building Management of Any Damage."
 - 2. Contractor's name, address, and phone number.
 - 3. Designation of applicable testing agency.
 - 4. Date of installation.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- 5. Manufacturer's name.
- 6. Installer's name.

3.5 FIELD QUALITY CONTROL

- A. Inspecting Agency: Owner will engage a qualified testing agency to perform tests and inspections according to ASTM E 2393.
- B. Where deficiencies are found or joint firestopping systems are damaged or removed due to testing, repair or replace joint firestopping systems so they comply with requirements.
- C. Proceed with enclosing joint firestopping systems with other construction only after inspection reports are issued and installations comply with requirements.

3.6 CLEANING AND PROTECTION

- A. Clean off excess elastomeric fill materials adjacent to joints as the Work progresses by methods and with cleaning materials that are approved in writing by joint firestopping system manufacturers and that do not damage materials in which joints occur.
- B. Provide final protection and maintain conditions during and after installation that ensure joint firestopping systems are without damage or deterioration at time of Substantial Completion. If damage or deterioration occurs despite such protection, cut out and remove damaged or deteriorated fire-resistive joint systems immediately and install new materials to produce fire-resistive joint systems complying with specified requirements.

END OF SECTION 078443

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 079200 - JOINT SEALANTS

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Nonstaining silicone joint sealants.
 - 2. Urethane joint sealants.
 - 3. Mildew-resistant joint sealants.
 - 4. Latex joint sealants.

1.3 ACTION SUBMITTALS

- A. Product Data: For each joint-sealant product.
- B. Sustainable Design Submittals:
 - 1. **Product Data:** For sealants, indicating VOC content.
 - 2. Laboratory Test Reports: For sealants, indicating compliance with requirements for low-emitting materials.
- C. Samples for Initial Selection: Manufacturer's color charts consisting of strips of cured sealants showing the full range of colors available for each product exposed to view.
- D. Samples for Verification: For each kind and color of joint sealant required, provide Samples with joint sealants in **1/2-inch- (13-mm-)** wide joints formed between two **6-inch- (150-mm-)** long strips of material matching the appearance of exposed surfaces adjacent to joint sealants.
- E. Joint-Sealant Schedule: Include the following information:
 - 1. Joint-sealant application, joint location, and designation.
 - 2. Joint-sealant manufacturer and product name.
 - 3. Joint-sealant formulation.
 - 4. Joint-sealant color.

1.4 INFORMATIONAL SUBMITTALS

- A. Qualification Data: For qualified testing agency.
- B. Product Test Reports: For each kind of joint sealant, for tests performed by manufacturer and witnessed by a qualified testing agency.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- C. Preconstruction Laboratory Test Schedule: Include the following information for each joint sealant and substrate material to be tested:
 - 1. Joint-sealant location and designation.
 - 2. Manufacturer and product name.
 - 3. Type of substrate material.
 - 4. Proposed test.
 - 5. Number of samples required.
- D. Preconstruction Laboratory Test Reports: From sealant manufacturer, indicating the following:
 - 1. Materials forming joint substrates and joint-sealant backings have been tested for compatibility and adhesion with joint sealants.
 - 2. Interpretation of test results and written recommendations for primers and substrate preparation are needed for adhesion.
- E. Preconstruction Field-Adhesion-Test Reports: Indicate which sealants and joint preparation methods resulted in optimum adhesion to joint substrates based on testing specified in "Preconstruction Testing" Article.
- F. Field-Adhesion-Test Reports: For each sealant application tested.
- G. Sample Warranties: For special warranties.

1.5 QUALITY ASSURANCE

- A. Installer Qualifications: An authorized representative who is trained and approved by manufacturer.
- B. Product Testing: Test joint sealants using a qualified testing agency.
 - 1. Testing Agency Qualifications: Qualified according to ASTM C 1021 to conduct the testing indicated.
- C. Mockups: Install sealant in mockups of assemblies specified in other Sections that are indicated to receive joint sealants specified in this Section. Use materials and installation methods specified in this Section.

1.6 PRECONSTRUCTION TESTING

- A. Preconstruction Laboratory Testing: Submit to joint-sealant manufacturers, for testing indicated below, samples of materials that will contact or affect joint sealants.
 - 1. Adhesion Testing: Use ASTM C 794 to determine whether priming and other specific joint preparation techniques are required to obtain rapid, optimum adhesion of joint sealants to joint substrates.
 - 2. Compatibility Testing: Use ASTM C 1087 to determine sealant compatibility when in contact with glazing and gasket materials.
 - 3. Stain Testing: Use ASTM C 1248 to determine stain potential of sealant when in contact with stone or masonry substrates.
 - 4. Submit manufacturer's recommended number of pieces of each type of material, including joint substrates, joint-sealant backings, and miscellaneous materials.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

5. Schedule sufficient time for testing and analyzing results to prevent delaying the Work.
 6. For materials failing tests, obtain joint-sealant manufacturer's written instructions for corrective measures, including use of specially formulated primers.
 7. Testing will not be required if joint-sealant manufacturers submit data that are based on previous testing, not older than 24 months, of sealant products for adhesion to, staining of, and compatibility with joint substrates and other materials matching those submitted.
- B. Preconstruction Field-Adhesion Testing: Before installing sealants, field test their adhesion to Project joint substrates as follows:
1. Locate test joints where indicated on Project or, if not indicated, as directed by Architect.
 2. Conduct field tests for each kind of sealant and joint substrate.
 3. Notify Architect seven days in advance of dates and times when test joints will be erected.
 4. Arrange for tests to take place with joint-sealant manufacturer's technical representative present.
 - a. Test Method: Test joint sealants according to Method A, Field-Applied Sealant Joint Hand Pull Tab, in Appendix X1.1 in ASTM C 1193 or Method A, Tail Procedure, in ASTM C 1521.
 - 1) For joints with dissimilar substrates, verify adhesion to each substrate separately; extend cut along one side, verifying adhesion to opposite side. Repeat procedure for opposite side.
 5. Report whether sealant failed to adhere to joint substrates or tore cohesively. Include data on pull distance used to test each kind of product and joint substrate. For sealants that fail adhesively, retest until satisfactory adhesion is obtained.
 6. Evaluation of Preconstruction Field-Adhesion-Test Results: Sealants not evidencing adhesive failure from testing, in absence of other indications of noncompliance with requirements, will be considered satisfactory. Do not use sealants that fail to adhere to joint substrates during testing.

1.7 FIELD CONDITIONS

- A. Do not proceed with installation of joint sealants under the following conditions:
1. When ambient and substrate temperature conditions are outside limits permitted by joint-sealant manufacturer.
 2. When joint substrates are wet.
 3. Where joint widths are less than those allowed by joint-sealant manufacturer for applications indicated.
 4. Where contaminants capable of interfering with adhesion have not yet been removed from joint substrates.

1.8 WARRANTY

- A. Special Installer's Warranty: Installer agrees to repair or replace joint sealants that do not comply with performance and other requirements specified in this Section within specified warranty period.
1. Warranty Period: Two years from date of Substantial Completion.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- B. Special Manufacturer's Warranty: Manufacturer agrees to furnish joint sealants to repair or replace those joint sealants that do not comply with performance and other requirements specified in this Section within specified warranty period.
 - 1. Warranty Period: Five years from date of Substantial Completion.
- C. Special warranties specified in this article exclude deterioration or failure of joint sealants from the following:
 - 1. Movement of the structure caused by stresses on the sealant exceeding sealant manufacturer's written specifications for sealant elongation and compression.
 - 2. Disintegration of joint substrates from causes exceeding design specifications.
 - 3. Mechanical damage caused by individuals, tools, or other outside agents.
 - 4. Changes in sealant appearance caused by accumulation of dirt or other atmospheric contaminants.

PART 2 - PRODUCTS

2.1 JOINT SEALANTS, GENERAL

- A. Compatibility: Provide joint sealants, backings, and other related materials that are compatible with one another and with joint substrates under conditions of service and application, as demonstrated by joint-sealant manufacturer, based on testing and field experience.
- B. **VOC Content:** Sealants and sealant primers shall comply with the following:
 - 1. Architectural sealants shall have a VOC content of 250 g/L or less.
 - 2. Sealants and sealant primers for nonporous substrates shall have a VOC content of 250 g/L or less.
 - 3. Sealants and sealant primers for nonporous substrates shall have a VOC content of 775 g/L or less.
 - 4. **Sealant shall comply with the** testing and product requirements of the California Department of Public Health's "Standard Method for the Testing and Evaluation of Volatile Organic Chemical Emissions from Indoor Sources Using Environmental Chambers."
- C. Colors of Exposed Joint Sealants: As selected by Architect from manufacturer's full range.

2.2 NONSTAINING SILICONE JOINT SEALANTS

- A. Nonstaining Joint Sealants: No staining of substrates when tested according to ASTM C 1248.
- B. Silicone, Nonstaining, S, NS, 50, NT: Nonstaining, single-component, nonsag, plus 50 percent and minus 50 percent movement capability, nontraffic-use, neutral-curing silicone joint sealant; ASTM C 920, Type S, Grade NS, Class 50, Use NT.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

2.3 URETHANE JOINT SEALANTS

- A. Urethane, S, NS, 25, NT: Single-component, nonsag, nontraffic-use, plus 25 percent and minus 25 percent movement capability, urethane joint sealant; ASTM C 920, Type S, Grade NS, Class 25, Use NT.

2.4 MILDEW-RESISTANT JOINT SEALANTS

- A. Mildew-Resistant Joint Sealants: Formulated for prolonged exposure to humidity with fungicide to prevent mold and mildew growth.
- B. Silicone, Mildew Resistant, Acid Curing, S, NS, 25, NT: Mildew-resistant, single-component, nonsag, plus 25 percent and minus 25 percent movement capability, nontraffic-use, acid-curing silicone joint sealant; ASTM C 920, Type S, Grade NS, Class 25, Use NT.

2.5 LATEX JOINT SEALANTS

- A. Acrylic Latex: Acrylic latex or siliconized acrylic latex, ASTM C 834, Type OP, Grade NF.

2.6 JOINT-SEALANT BACKING

- A. Sealant Backing Material, General: Nonstaining; compatible with joint substrates, sealants, primers, and other joint fillers; and approved for applications indicated by sealant manufacturer based on field experience and laboratory testing.
- B. Cylindrical Sealant Backings: ASTM C 1330, Type C (closed-cell material with a surface skin), Type O (open-cell material), Type B (bicellular material with a surface skin) or any of the preceding types, as approved in writing by joint-sealant manufacturer for joint application indicated, and of size and density to control sealant depth and otherwise contribute to producing optimum sealant performance.
- C. Bond-Breaker Tape: Polyethylene tape or other plastic tape recommended by sealant manufacturer for preventing sealant from adhering to rigid, inflexible joint-filler materials or joint surfaces at back of joint. Provide self-adhesive tape where applicable.

2.7 MISCELLANEOUS MATERIALS

- A. Primer: Material recommended by joint-sealant manufacturer where required for adhesion of sealant to joint substrates indicated, as determined from preconstruction joint-sealant-substrate tests and field tests.
- B. Cleaners for Nonporous Surfaces: Chemical cleaners acceptable to manufacturers of sealants and sealant backing materials, free of oily residues or other substances capable of staining or harming joint substrates and adjacent nonporous surfaces in any way, and formulated to promote optimum adhesion of sealants to joint substrates.
- C. Masking Tape: Nonstaining, nonabsorbent material compatible with joint sealants and surfaces adjacent to joints.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine joints indicated to receive joint sealants, with Installer present, for compliance with requirements for joint configuration, installation tolerances, and other conditions affecting performance of the Work.
- B. Proceed with installation only after unsatisfactory conditions have been corrected.

3.2 PREPARATION

- A. Surface Cleaning of Joints: Clean out joints immediately before installing joint sealants to comply with joint-sealant manufacturer's written instructions and the following requirements:
 - 1. Remove all foreign material from joint substrates that could interfere with adhesion of joint sealant, including dust, paints (except for permanent, protective coatings tested and approved for sealant adhesion and compatibility by sealant manufacturer), old joint sealants, oil, grease, waterproofing, water repellents, water, surface dirt, and frost.
 - 2. Clean porous joint substrate surfaces by brushing, grinding, mechanical abrading, or a combination of these methods to produce a clean, sound substrate capable of developing optimum bond with joint sealants. Remove loose particles remaining after cleaning operations above by vacuuming or blowing out joints with oil-free compressed air. Porous joint substrates include the following:
 - a. Concrete.
 - b. Masonry.
 - c. Unglazed surfaces of ceramic tile.
 - d. Exterior insulation and finish systems.
 - 3. Remove laitance and form-release agents from concrete.
 - 4. Clean nonporous joint substrate surfaces with chemical cleaners or other means that do not stain, harm substrates, or leave residues capable of interfering with adhesion of joint sealants. Nonporous joint substrates include the following:
 - a. Metal.
 - b. Glass.
 - c. Porcelain enamel.
 - d. Glazed surfaces of ceramic tile.
- B. Joint Priming: Prime joint substrates where recommended by joint-sealant manufacturer or as indicated by preconstruction joint-sealant-substrate tests or prior experience. Apply primer to comply with joint-sealant manufacturer's written instructions. Confine primers to areas of joint-sealant bond; do not allow spillage or migration onto adjoining surfaces.
- C. Masking Tape: Use masking tape where required to prevent contact of sealant or primer with adjoining surfaces that otherwise would be permanently stained or damaged by such contact or by cleaning methods required to remove sealant smears. Remove tape immediately after tooling without disturbing joint seal.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

3.3 INSTALLATION OF JOINT SEALANTS

- A. General: Comply with joint-sealant manufacturer's written installation instructions for products and applications indicated, unless more stringent requirements apply.
- B. Sealant Installation Standard: Comply with recommendations in ASTM C 1193 for use of joint sealants as applicable to materials, applications, and conditions indicated.
- C. Install sealant backings of kind indicated to support sealants during application and at position required to produce cross-sectional shapes and depths of installed sealants relative to joint widths that allow optimum sealant movement capability.
 - 1. Do not leave gaps between ends of sealant backings.
 - 2. Do not stretch, twist, puncture, or tear sealant backings.
 - 3. Remove absorbent sealant backings that have become wet before sealant application, and replace them with dry materials.
- D. Install bond-breaker tape behind sealants where sealant backings are not used between sealants and backs of joints.
- E. Install sealants using proven techniques that comply with the following and at the same time backings are installed:
 - 1. Place sealants so they directly contact and fully wet joint substrates.
 - 2. Completely fill recesses in each joint configuration.
 - 3. Produce uniform, cross-sectional shapes and depths relative to joint widths that allow optimum sealant movement capability.
- F. Tooling of Nonsag Sealants: Immediately after sealant application and before skinning or curing begins, tool sealants according to requirements specified in subparagraphs below to form smooth, uniform beads of configuration indicated; to eliminate air pockets; and to ensure contact and adhesion of sealant with sides of joint.
 - 1. Remove excess sealant from surfaces adjacent to joints.
 - 2. Use tooling agents that are approved in writing by sealant manufacturer and that do not discolor sealants or adjacent surfaces.
 - 3. Provide concave joint profile per Figure 8A in ASTM C 1193 unless otherwise indicated.
 - 4. Provide flush joint profile at locations indicated on Drawings according to Figure 8B in ASTM C 1193.
 - 5. Provide recessed joint configuration of recess depth and at locations indicated on Drawings according to Figure 8C in ASTM C 1193.
 - a. Use masking tape to protect surfaces adjacent to recessed tooled joints.

3.4 FIELD QUALITY CONTROL

- A. Field-Adhesion Testing: Field test joint-sealant adhesion to joint substrates as follows:
 - 1. Extent of Testing: Test completed and cured sealant joints as follows:
 - a. Perform 10 tests for the first 1000 feet (300 m) of joint length for each kind of sealant and joint substrate.

**Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL**

Copyright 2026, Vero Architecture

- b. Perform one test for each **1000 feet (300 m)** of joint length thereafter or one test per each floor per elevation.
 2. Test Method: Test joint sealants according to Method A, Field-Applied Sealant Joint Hand Pull Tab, in Appendix X1 in ASTM C 1193 or Method A, Tail Procedure, in ASTM C 1521.
 - a. For joints with dissimilar substrates, verify adhesion to each substrate separately; extend cut along one side, verifying adhesion to opposite side. Repeat procedure for opposite side.
 3. Inspect tested joints and report on the following:
 - a. Whether sealants filled joint cavities and are free of voids.
 - b. Whether sealant dimensions and configurations comply with specified requirements.
 - c. Whether sealants in joints connected to pulled-out portion failed to adhere to joint substrates or tore cohesively. Include data on pull distance used to test each kind of product and joint substrate. Compare these results to determine if adhesion complies with sealant manufacturer's field-adhesion hand-pull test criteria.
 4. Record test results in a field-adhesion-test log. Include dates when sealants were installed, names of persons who installed sealants, test dates, test locations, whether joints were primed, adhesion results and percent elongations, sealant material, sealant configuration, and sealant dimensions.
 5. Repair sealants pulled from test area by applying new sealants following same procedures used originally to seal joints. Ensure that original sealant surfaces are clean and that new sealant contacts original sealant.
- B. Evaluation of Field-Adhesion-Test Results: Sealants not evidencing adhesive failure from testing or noncompliance with other indicated requirements will be considered satisfactory. Remove sealants that fail to adhere to joint substrates during testing or to comply with other requirements. Retest failed applications until test results prove sealants comply with indicated requirements.

3.5 CLEANING

- A. Clean off excess sealant or sealant smears adjacent to joints as the Work progresses by methods and with cleaning materials approved in writing by manufacturers of joint sealants and of products in which joints occur.

3.6 PROTECTION

- A. Protect joint sealants during and after curing period from contact with contaminating substances and from damage resulting from construction operations or other causes so sealants are without deterioration or damage at time of Substantial Completion. If, despite such protection, damage or deterioration occurs, cut out, remove, and repair damaged or deteriorated joint sealants immediately so installations with repaired areas are indistinguishable from original work.

3.7 JOINT-SEALANT SCHEDULE

- A. Joint-Sealant Application: Exterior joints in horizontal traffic surfaces <JS-1>.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

1. Joint Locations:
 - a. Control and expansion joints in brick pavers.
 - b. Isolation and contraction joints in cast-in-place concrete slabs.
 - c. Joints between plant-precast architectural concrete paving units.
 - d. Joints in stone paving units, including steps.
 - e. Tile control and expansion joints.
 - f. Joints between different materials listed above.
 - g. Other joints as indicated on Drawings.
 2. Joint Sealant: Urethane, M, P, 50, T, NT.
 3. Joint-Sealant Color: As selected by Architect from manufacturer's full range of colors.
- B. Joint-Sealant Application: Exterior joints in vertical surfaces and horizontal nontraffic surfaces <JS-2>.
1. Joint Locations:
 - a. Construction joints in cast-in-place concrete.
 - b. Joints between plant-precast architectural concrete units.
 - c. Control and expansion joints in unit masonry.
 - d. Joints in dimension stone cladding.
 - e. Joints in glass unit masonry assemblies.
 - f. Joints in exterior insulation and finish systems.
 - g. Joints between metal panels.
 - h. Joints between different materials listed above.
 - i. Perimeter joints between materials listed above and frames of doors, windows and louvers.
 - j. Other joints as indicated on Drawings.
 2. Joint Sealant: Silicone, nonstaining, S, NS, 50, NT.
 3. Joint-Sealant Color: As selected by Architect from manufacturer's full range of colors.
- C. Joint-Sealant Application: Interior joints in horizontal traffic surfaces <JS-3>.
1. Joint Locations:
 - a. Isolation joints in cast-in-place concrete slabs.
 - b. Control and expansion joints in stone flooring.
 - c. Control and expansion joints in brick flooring.
 - d. Control and expansion joints in tile flooring.
 - e. Other joints as indicated on Drawings.
 2. Joint Sealant: Urethane, S, P, 25, T, NT.
 3. Joint-Sealant Color: As selected by Architect from manufacturer's full range of colors.
- D. Joint-Sealant Application: Interior joints in vertical surfaces and horizontal nontraffic surfaces <JS-4>.
1. Joint Locations:
 - a. Control and expansion joints on exposed interior surfaces of exterior walls.
 - b. Tile control and expansion joints.
 - c. Vertical joints on exposed surfaces of unit masonry, concrete and walls.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- d. Other joints as indicated on Drawings.
 - 2. Joint Sealant: Urethane, S, NS, 25, NT.
 - 3. Joint-Sealant Color: As selected by Architect from manufacturer's full range of colors.
- E. Joint-Sealant Application: Interior joints in vertical surfaces and horizontal nontraffic surfaces not subject to significant movement <JS-5>.
- 1. Joint Locations:
 - a. Control joints on exposed interior surfaces of exterior walls.
 - b. Perimeter joints between interior wall surfaces and frames of interior doors, windows and elevator entrances.
 - c. Other joints as indicated on Drawings.
 - 2. Joint Sealant: Acrylic latex.
 - 3. Joint-Sealant Color: As selected by Architect from manufacturer's full range of colors.
- F. Joint-Sealant Application: Mildew-resistant interior joints in vertical surfaces and horizontal nontraffic surfaces <JS-6>.
- 1. Joint Locations:
 - a. Joints between plumbing fixtures and adjoining walls, floors, and counters.
 - b. Tile control and expansion joints where indicated.
 - c. Other joints as indicated on Drawings.
 - 2. Joint Sealant: Silicone, mildew resistant, acid curing, S, NS, 25, NT.
 - 3. Joint-Sealant Color: As selected by Architect from manufacturer's full range of colors.

END OF SECTION 079200

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 087100 - DOOR HARDWARE

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 1 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. This Section includes commercial door hardware for the following:
 - 1. Swinging doors.
 - 2. Sliding doors.
 - 3. Other doors to the extent indicated.
- B. Door hardware includes, but is not necessarily limited to, the following:
 - 1. Mechanical door hardware.
 - 2. Electromechanical door hardware.
 - 3. Cylinders specified for doors in other sections.
- C. Related Sections:
 - 1. Division 01 Section "General Conditions".
 - 2. Division 06 Section "Rough Carpentry".
 - 3. Division 06 Section "Finish Carpentry".
 - 4. Division 08 Section "Operations and Maintenance".
 - 5. Division 08 Section "Hollow Metal Doors and Frames".
 - 6. Division 08 Section "Flush Wood Doors".
 - 7. Division 08 Section "Aluminum-Framed Entrances and Storefronts".
 - 8. Division 26 Section "Electrical"
 - 9. Division 28 Section "Integrated Access Control Hardware Devices".
- D. Codes and References: Comply with the version adopted by the Authority Having Jurisdiction.
 - 1. ANSI A117.1 - Accessible and Usable Buildings and Facilities.
 - 2. ICC/IBC - International Building Code.
 - 3. NFPA 70 - National Electrical Code.
 - 4. NFPA 80 - Fire Doors and Windows.
 - 5. NFPA 101 - Life Safety Code.
 - 6. NFPA 105 - Installation of Smoke Door Assemblies.
 - 7. State Building Codes, Local Amendments.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- E. Standards: All hardware specified herein shall comply with the following industry standards as applicable. Any undated reference to a standard shall be interpreted as referring to the latest edition of that standard:

1. ANSI/BHMA Certified Product Standards - A156 Series.
2. UL10C - Positive Pressure Fire Tests of Door Assemblies.
3. ANSI/UL 294 - Access Control System Units.
4. UL 305 - Panic Hardware.
5. ANSI/UL 437- Key Locks.

1.3 SUBMITTALS

- A. Product Data: Manufacturer's product data sheets including installation details, material descriptions, dimensions of individual components and profiles, operational descriptions and finishes.
- B. Door Hardware Schedule: Prepared by or under the supervision of supplier, detailing, fabrication and assembly of door hardware, as well as procedures and diagrams. Coordinate the final Door Hardware Schedule with doors, frames, and related work to ensure proper size, thickness, hand, function, and finish of door hardware.
1. Format: Comply with scheduling sequence and vertical format in DHI's "Sequence and Format for the Hardware Schedule."
 2. Organization: Organize the Door Hardware Schedule into door hardware sets indicating complete designations of every item required for each door or opening. Organize door hardware sets in same order as in the Door Hardware Sets at the end of Part 3. Submittals that do not follow the same format and order as the Door Hardware Sets will be rejected and subject to resubmission.
 3. Content: Include the following information:
 - a. Type, style, function, size, label, hand, and finish of each door hardware item.
 - b. Manufacturer of each item.
 - c. Fastenings and other pertinent information.
 - d. Location of door hardware set, cross-referenced to Drawings, both on floor plans and in door and frame schedule.
 - e. Explanation of abbreviations, symbols, and codes contained in schedule.
 - f. Mounting locations for door hardware.
 - g. Door and frame sizes and materials.
 - h. Warranty information for each product.
 4. Submittal Sequence: Submit the final Door Hardware Schedule at earliest possible date, particularly where approval of the Door Hardware Schedule must precede fabrication of other work that is critical in the Project construction schedule. Include Product Data, Samples, Shop Drawings of other work affected by door hardware, and other information essential to the coordinated review of the Door Hardware Schedule.
- C. Shop Drawings: Details of electrified access control hardware indicating the following:

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL

Copyright 2026, Vero Architecture

1. Wiring Diagrams: Upon receipt of approved schedules, submit detailed system wiring diagrams for power, signaling, monitoring, communication, and control of the access control system electrified hardware. Differentiate between manufacturer-installed and field-installed wiring. Include the following:
 - a. Elevation diagram of each unique access controlled opening showing location and interconnection of major system components with respect to their placement in the respective door openings.
 - b. Complete (risers, point-to-point) access control system block wiring diagrams.
 - c. Wiring instructions for each electronic component scheduled herein.
 2. Electrical Coordination: Coordinate with related sections the voltages and wiring details required at electrically controlled and operated hardware openings.
- D. Proof of Certification: Provide copy of manufacturer(s) official certification or accreditation document indicating proof of status as a qualified and authorized provider of the primary Integrated Wiegand Access Control Products.
- E. Keying Schedule: After a keying meeting with the owner has taken place prepare a separate keying schedule detailing final instructions. Submit the keying schedule in electronic format. Include keying system explanation, door numbers, key set symbols, hardware set numbers and special instructions. Owner must approve submitted keying schedule prior to the ordering of permanent cylinders/cores.
- F. Informational Submittals:
1. Product Test Reports: Indicating compliance with cycle testing requirements, based on evaluation of comprehensive tests performed by manufacturer and witnessed by a qualified independent testing agency.

1.4 CLOSEOUT SUBMITTALS

- A. Operating and Maintenance Manuals: Provide manufacturers operating and maintenance manuals for each item comprising the complete door hardware installation in quantity as required in Division 01, Closeout Procedures.
- B. Project Record Documents: Provide record documentation of as-built door hardware sets in digital format (.pdf, .docx, .xlsx, .csv) and as required in Division 01, Project Record Documents.

1.5 QUALITY ASSURANCE

- A. Manufacturers Qualifications: Engage qualified manufacturers with a minimum 5 years of documented experience in producing hardware and equipment similar to that indicated for this Project and that have a proven record of successful in-service performance.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- B. Certified Products: Where specified, products must maintain a current listing in the Builders Hardware Manufacturers Association (BHMA) Certified Products Directory (CPD).
- C. Installer Qualifications: A minimum 3 years documented experience installing both standard and electrified door hardware similar in material, design, and extent to that indicated for this Project and whose work has resulted in construction with a record of successful in-service performance.
- D. Door Hardware Supplier Qualifications: Experienced commercial door hardware distributors with a minimum 5 years documented experience supplying both mechanical and electromechanical hardware installations comparable in material, design, and extent to that indicated for this Project. Supplier recognized as a factory direct distributor by the manufacturers of the primary materials with a warehousing facility in Project's vicinity. Supplier to have on staff a certified Architectural Hardware Consultant (AHC) available during the course of the Work to consult with Contractor, Architect, and Owner concerning both standard and electromechanical door hardware and keying.
- E. Integrated Wireless, and IP-Enabled Access Control Products Supplier Qualifications: Integrated access control products and accessories are required to be supplied and installed through current members of the ASSA ABLOY "Authorized Channel Partner" (ACP) and "Certified Integrator" (CI) programs. Suppliers are to be factory trained, certified prior to project bid, and a direct purchaser of the specified product. Installers are to be factory trained, certified prior to project bid, and are responsible for commissioning, servicing, and warranting the installed equipment specified for the project.
- F. Source Limitations: Obtain each type and variety of door hardware specified in this section from a single source unless otherwise indicated.
 - 1. Electrified modifications or enhancements made to a source manufacturer's product line by a secondary or third party source will not be accepted.
 - 2. Provide electromechanical door hardware from the same manufacturer as mechanical door hardware, unless otherwise indicated.
- G. Each unit to bear third party permanent label indicating compliance with the referenced testing standards.
- H. Keying Conference: Conduct conference to comply with requirements in Division 01 Section "Project Meetings." Keying conference to incorporate the following criteria into the final keying schedule document:
 - 1. Function of building, purpose of each area and degree of security required.
 - 2. Plans for existing and future key system expansion.
 - 3. Requirements for key control storage and software.
 - 4. Installation of permanent keys, cylinder cores and software.
 - 5. Address and requirements for delivery of keys.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- I. Pre-Submittal Conference: Conduct coordination conference in compliance with requirements in Division 01 Section "Project Meetings" with attendance by representatives of Supplier(s), Installer(s), and Contractor(s) to review proper methods and the procedures for receiving, handling, and installing door hardware.
 - 1. Prior to installation of door hardware, conduct a project specific training meeting to instruct the installing contractors' personnel on the proper installation and adjustment of their respective products. Product training to be attended by installers of door hardware (including electromechanical hardware) for aluminum, hollow metal and wood doors. Training will include the use of installation manuals, hardware schedules, templates and physical product samples as required.
 - 2. Inspect and discuss electrical roughing-in, power supply connections, and other preparatory work performed by other trades.
 - 3. Review sequence of operation narratives for each unique access controlled opening.
 - 4. Review and finalize construction schedule and verify availability of materials.
 - 5. Review the required inspecting, testing, commissioning, and demonstration procedures
- J. At completion of installation, provide written documentation that components were applied according to manufacturer's instructions and recommendations and according to approved schedule.

1.6 DELIVERY, STORAGE AND HANDLING

- A. Inventory door hardware on receipt and provide secure lock-up and shelving for door hardware delivered to Project site. Do not store electronic access control hardware, software or accessories at Project site without prior authorization.
- B. Tag each item or package separately with identification related to the final Door Hardware Schedule, and include basic installation instructions with each item or package.
- C. Deliver, as applicable, permanent keys, cylinders, cores, access control credentials, software and related accessories directly to Owner via registered mail or overnight package service. Instructions for delivery to the Owner shall be established at the "Keying Conference".

1.7 COORDINATION

- A. Templates: Obtain and distribute to the parties involved templates for doors, frames, and other work specified to be factory prepared for installing standard and electrified hardware. Check Shop Drawings of other work to confirm that adequate provisions are made for locating and installing hardware to comply with indicated requirements.
- B. Door Hardware and Electrical Connections: Coordinate the layout and installation of scheduled electrified door hardware and related access control equipment with

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

required connections to source power junction boxes, low voltage power supplies, detection and monitoring hardware, and fire and detection alarm systems.

- C. Door and Frame Preparation: Doors and corresponding frames are to be prepared, reinforced and pre-wired (if applicable) to receive the installation of the specified electrified, monitoring, signaling and access control system hardware without additional in-field modifications.

1.8 WARRANTY

- A. General Warranty: Reference Division 01, General Requirements. Special warranties specified in this Article shall not deprive Owner of other rights Owner may have under other provisions of the Contract Documents and shall be in addition to, and run concurrent with, other warranties made by Contractor under requirements of the Contract Documents.
- B. Warranty Period: Written warranty, executed by manufacturer(s), agreeing to repair or replace components of standard and electrified door hardware that fails in materials or workmanship within specified warranty period after final acceptance by the Owner. Failures include, but are not limited to, the following:
 - 1. Structural failures including excessive deflection, cracking, or breakage.
 - 2. Faulty operation of the hardware.
 - 3. Deterioration of metals, metal finishes, and other materials beyond normal weathering.
 - 4. Electrical component defects and failures within the systems operation.
- C. Warranty Period: Unless otherwise indicated, warranty shall be one year from date of Substantial Completion.

PART 2 - PRODUCTS

2.1 MATERIALS

2.2 BUTT HINGES

- A. Hinges: ANSI/BHMA A156.1 butt hinges with number of hinge knuckles and other options as specified in the Door Hardware Sets.
 - 1. Quantity: Provide the following hinge quantity:
 - a. Two Hinges: For doors with heights up to 60 inches.
 - b. Three Hinges: For doors with heights 61 to 90 inches.
 - c. Four Hinges: For doors with heights 91 to 120 inches.
 - d. For doors with heights more than 120 inches, provide 4 hinges, plus 1 hinge for every 30 inches of door height greater than 120 inches.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

2. Hinge Size: Provide the following, unless otherwise indicated, with hinge widths sized for door thickness and clearances required:
 - a. Widths up to 3'0": 4-1/2" standard or heavy weight as specified.
 - b. Sizes from 3'1" to 4'0": 5" standard or heavy weight as specified.
3. Hinge Weight and Base Material: Unless otherwise indicated, provide the following:
 - a. Exterior Doors: Heavy weight, non-ferrous, ball bearing or oil impregnated bearing hinges unless Hardware Sets indicate standard weight.
 - b. Interior Doors: Standard weight, steel, ball bearing or oil impregnated bearing hinges unless Hardware Sets indicate heavy weight.
4. Hinge Options: Comply with the following:
 - a. Non-removable Pins: With the exception of electric through wire hinges, provide set screw in hinge barrel that, when tightened into a groove in hinge pin, prevents removal of pin while door is closed; for all out-swinging lockable doors.
5. Manufacturers:
 - a. McKinney (MK) - TA/T4A Series, 5-knuckle.

2.3 POWER TRANSFER DEVICES

- A. Concealed Quick Connect Electric Power Transfers: Provide concealed wiring pathway housing mortised into the door and frame for low voltage electrified door hardware. Furnish with Molex™ standardized plug connectors and sufficient number of concealed wires (up to 12) to accommodate the electrified functions specified in the Door Hardware Sets. Connectors plug directly to through-door wiring harnesses for connection to electric locking devices and power supplies. Wire nut connections are not acceptable.
 1. Manufacturers:
 - a. Pemko (PE) - EL-CEPT Series.
 - b. Securitron (SU) - EL-CEPT Series.
- B. Electric Door Wire Harnesses: Provide electric/data transfer wiring harnesses with standardized plug connectors to accommodate up to twelve (12) wires. Connectors plug directly to through-door wiring harnesses for connection to electric locking devices and power supplies. Provide sufficient number and type of concealed wires to accommodate electric function of specified hardware. Provide a connector for through-door electronic locking devices and from hinge to junction box above the opening. Wire nut connections are not acceptable. Determine the length required for each electrified hardware component for the door type, size and construction, minimum of two per electrified opening.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

1. Provide one each of the following tools as part of the base bid contract:
 - a. McKinney (MK) - Electrical Connecting Kit: QC-R001.
 - b. McKinney (MK) - Connector Hand Tool: QC-R003.
2. Manufacturers:
 - a. McKinney (MK) - QC-C Series.

2.4 CYLINDERS AND KEYING

- A. General: Cylinder manufacturer to have minimum (10) years experience designing secured master key systems and have on record a published security keying system policy.
 1. Manufacturers:
 - a. Match Existing, Field Verify.
- B. Cylinder Types: Original manufacturer cylinders able to supply the following cylinder formats and types:
 1. Threaded mortise cylinders with rings and cams to suit hardware application.
 2. Rim cylinders with back plate, flat-type vertical or horizontal tailpiece, and raised trim ring.
 3. Bored or cylindrical lock cylinders with tailpieces as required to suit locks.
 4. Tubular deadlocks and other auxiliary locks.
 5. Mortise and rim cylinder collars to be solid and recessed to allow the cylinder face to be flush and be free spinning with matching finishes.
 6. Keyway: Match Facility Standard.
- C. Keying System: Each type of lock and cylinders to be factory keyed.
 1. Supplier shall conduct a "Keying Conference" to define and document keying system instructions and requirements.
 2. Furnish factory cut, nickel-silver large bow permanently inscribed with a visual key control number as directed by Owner.
 3. Existing System: Field verify and key cylinders to match Owner's existing system.
- D. Key Quantity: Provide the following minimum number of keys:
 1. Change Keys per Cylinder: Two (2)
 2. Master Keys (per Master Key Level/Group): Five (5).
 3. Construction Keys (where required): Ten (10).
- E. Construction Keying: Provide construction master keyed cylinders.
- F. Key Registration List (Bitting List):

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

1. Provide keying transcript list to Owner's representative in the proper format for importing into key control software.
2. Provide transcript list in writing or electronic file as directed by the Owner.

2.5 MORTISE LOCKS AND LATCHING DEVICES

- A. Mortise Locksets, Grade 1 (Heavy Duty): Provide ANSI/BHMA A156.13, Series 1000, Operational Grade 1 Certified Products Directory (CPD) listed mortise locksets. Listed manufacturers shall meet all functions and features as specified herein.

1. Manufacturers:
 - a. Corbin Russwin Hardware (RU) - ML2000 Series.
 - b. dormakaba BEST (BE) - 45H Series.
 - c. Sargent Manufacturing (SA) - 8200 Series.

2.6 LOCK AND LATCH STRIKES

- A. Strikes: Provide manufacturer's standard strike with strike box for each latch or lock bolt, with curved lip extended to protect frame, finished to match door hardware set, unless otherwise indicated, and as follows:

1. Flat-Lip Strikes: For locks with three-piece antifriction latchbolts, as recommended by manufacturer.
2. Extra-Long-Lip Strikes: For locks used on frames with applied wood casing trim.
3. Aluminum-Frame Strike Box: Provide manufacturer's special strike box fabricated for aluminum framing.
4. Double-lipped strikes: For locks at double acting doors. Furnish with retractable stop for rescue hardware applications.

- B. Standards: Comply with the following:

1. Strikes for Mortise Locks and Latches: BHMA A156.13.
2. Strikes for Bored Locks and Latches: BHMA A156.2.
3. Strikes for Auxiliary Deadlocks: BHMA A156.36.
4. Dustproof Strikes: BHMA A156.16.

2.7 SURFACE DOOR CLOSERS

- A. All door closers specified herein shall meet or exceed the following criteria:

1. General: Door closers to be from one manufacturer, matching in design and style, with the same type door preparations and templates regardless of application or spring size. Closers to be non-handed with full sized covers.
2. Standards: Closers to comply with UL-10C for Positive Pressure Fire Test and be U.L. listed for use of fire rated doors.
3. Size of Units: Comply with manufacturer's written recommendations for sizing of door closers depending on size of door, exposure to weather, and anticipated

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

frequency of use. Where closers are indicated for doors required to be accessible to the Americans with Disabilities Act, provide units complying with ANSI ICC/A117.1.

4. Closer Arms: Provide heavy duty, forged steel closer arms unless otherwise indicated in Hardware Sets.
5. Closers shall not be installed on exterior or corridor side of doors; where possible install closers on door for optimum aesthetics.
6. Closer Accessories: Provide door closer accessories including custom templates, special mounting brackets, spacers and drop plates as required for proper installation. Provide through-bolt and security type fasteners as specified in the hardware sets.

- B. Door Closers, Surface Mounted (Heavy Duty): ANSI/BHMA A156.4, Grade 1 Certified Products Directory (CPD) listed surface mounted, heavy duty door closers with complete spring power adjustment, sizes 1 thru 6; and fully operational adjustable according to door size, frequency of use, and opening force. Closers to be rack and pinion type, one piece cast iron or aluminum alloy body construction, with adjustable backcheck and separate non-critical valves for closing sweep and latch speed control. Provide non-handed units standard.

1. Heavy duty surface mounted door closers shall have a 30-year warranty.
2. Manufacturers:
 - a. Corbin Russwin Hardware (RU) - DC6000 Series.
 - b. Norton Rixson (NO) - 7500 Series.
 - c. Sargent Manufacturing (SA) - 351 Series.

2.8 ARCHITECTURAL TRIM AND ACCESSORIES

- A. Door, Frame and Wall Protective Trim: ANSI/BHMA A156.6, protective products as specified in the hardware sets. Door protection plates shall be not more than 2" less than door width on stop side and 1" less door width on the pull side or on stop side of pairs of doors. Listed manufacturers shall meet all functions and features as specified herein.

1. Provide protective trim with functions and features as follows:
 - a. Meets ADA requirements for smooth bottom door surfaces.
 - b. UL Classified options for use on fire-rated doors up to 3 hours.
 - c. Fabricated from stainless steel, brass, bronze, aluminum, or high-impact plastic.
 - d. Available in a variety of sizes, finishes, and profiles to suit aesthetic and functional requirements.
 - e. Designed to protect doors, frames, and adjacent walls from damage due to impact, abrasion, or traffic.
 - f. Fasteners included; adhesive-backed options available for select models.
 - g. Ten-year limited warranty.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

2. Manufacturers:

- a. Rockwood (RO).

2.9 DOOR STOPS AND HOLDERS

- A. Door Stops and Bumpers: ANSI/BHMA A156.16, Grade 1 door stops and wall bumpers. Provide wall bumpers, either convex or concave types with anchorage as indicated, unless floor or other types of door stops are specified in Hardware Sets. Do not mount floor stops where they will impede traffic. Where floor or wall bumpers are not appropriate, provide overhead type stops and holders.

1. Manufacturers:

- a. Rockwood (RO).

2.10 ARCHITECTURAL SEALS

- A. General: Thresholds, weatherstripping, and gasket seals to be of type and design as specified below or in the Hardware Sets. Provide continuous weatherstrip gasketing on exterior doors and provide smoke, light, or sound gasketing on interior doors where indicated. At exterior applications provide non-corrosive fasteners and elsewhere where indicated.

- B. Smoke Labeled Gasketing: Assemblies complying with NFPA 105 that are listed and labeled by a testing and inspecting agency acceptable to authorities having jurisdiction, for smoke control ratings indicated, based on testing according to UL 1784.

- 1. Provide smoke labeled perimeter gasketing at all smoke labeled openings.

- C. Fire Labeled Gasketing: Assemblies complying with NFPA 80 that are listed and labeled by a testing and inspecting agency acceptable to authorities having jurisdiction, for fire ratings indicated, based on testing according to UL-10C.

- 1. Provide intumescent seals as indicated to meet UL10C Standard for Positive Pressure Fire Tests of Door Assemblies, and NFPA 252, Standard Methods of Fire Tests of Door Assemblies.

- D. Sound-Rated Gasketing: Assemblies that are listed and labeled by a testing and inspecting agency, for sound ratings indicated.

- E. Replaceable Seal Strips: Provide only those units where resilient or flexible seal strips are easily replaceable and readily available from stocks maintained by manufacturer.

- F. Manufacturers:

- 1. Pemko (PE).

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

2.11 FABRICATION

- A. Fasteners: Provide door hardware manufactured to comply with published templates generally prepared for machine, wood, and sheet metal screws. Provide screws according to manufacturers recognized installation standards for application intended.

2.12 FINISHES

- A. Standard: Designations used in the Hardware Sets and elsewhere indicate hardware finishes complying with ANSI/BHMA A156.18, including coordination with traditional U.S. finishes indicated by certain manufacturers for their products.
- B. Provide quality of finish, including thickness of plating or coating (if any), composition, hardness, and other qualities complying with manufacturer's standards, but in no case less than specified by referenced standards for the applicable units of hardware
- C. Protect mechanical finishes on exposed surfaces from damage by applying a strippable, temporary protective covering before shipping.

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine scheduled openings, with Installer present, for compliance with requirements for installation tolerances, labeled fire door assembly construction, wall and floor construction, and other conditions affecting performance.
- B. Notify architect of any discrepancies or conflicts between the door schedule, door types, drawings and scheduled hardware. Proceed only after such discrepancies or conflicts have been resolved in writing.

3.2 PREPARATION

- A. Hollow Metal Doors and Frames: Comply with ANSI/DHI A115 series.
- B. Wood Doors: Comply with ANSI/DHI A115-W series.

3.3 INSTALLATION

- A. Install each item of mechanical and electromechanical hardware and access control equipment to comply with manufacturer's written instructions and according to specifications.
 - 1. Installers are to be trained and certified by the manufacturer on the proper installation and adjustment of fire, life safety, and security products including: hanging devices; locking devices; closing devices; and seals.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- B. Mounting Heights: Mount door hardware units at heights indicated in following applicable publications, unless specifically indicated or required to comply with governing regulations:
 - 1. Standard Steel Doors and Frames: DHI's "Recommended Locations for Architectural Hardware for Standard Steel Doors and Frames."
 - 2. DHI TDH-007-20: Installation Guide for Doors and Hardware.
 - 3. Where indicated to comply with accessibility requirements, comply with ANSI A117.1 "Accessibility Guidelines for Buildings and Facilities."
 - 4. Provide blocking in drywall partitions where wall stops or other wall mounted hardware is located.
- C. Integrated Wiegand access control products are required to be installed through current members of the ASSA ABLOY "Certified Integrator" (CI) program.
- D. Retrofitting: Install door hardware to comply with manufacturer's published templates and written instructions. Where cutting and fitting are required to install door hardware onto or into surfaces that are later to be painted or finished in another way, coordinate removal, storage, and reinstallation of surface protective trim units with finishing work specified in Division 9 Sections. Do not install surface-mounted items until finishes have been completed on substrates involved.
- E. Push Plates and Door Pulls: When through-bolt fasteners are in the same location as a push plate, countersink the fasteners flush with the door face allowing the push plate to sit flat against the door.
- F. Thresholds: Set thresholds for exterior and acoustical doors in full bed of sealant complying with requirements specified in Division 7 Section "Joint Sealants."
- G. Storage: Provide a secure lock up for hardware delivered to the project but not yet installed. Control the handling and installation of hardware items so that the completion of the work will not be delayed by hardware losses before and after installation.

3.4 FIELD QUALITY CONTROL

- A. Field Inspection (Punch Report): Reference Division 01 Sections "Closeout Procedures". Produce project punch report for each installed door opening indicating compliance with approved submittals and verification hardware is properly installed, operating and adjusted. Include list of items to be completed and corrected, indicating the reasons or deficiencies causing the Work to be incomplete or rejected.
 - 1. Organization of List: Include separate Door Opening and Deficiencies and Corrective Action Lists organized by Mark, Opening Remarks and Comments, and related Opening Images and Video Recordings.
- B. Fire Door Assembly Inspection: Reference Division 01 Sections "Closeout Procedures". Conduct an initial fire door assembly inspection, including documentation reporting, upon completion of door hardware installation according to NFPA 80

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

Standard for Fire Doors and Other Opening Protectives, paragraph 5.2.4, requirements.

3.5 ADJUSTING

- A. Initial Adjustment: Adjust and check each operating item of door hardware and each door to ensure proper operation or function of every unit. Replace units that cannot be adjusted to operate as intended. Adjust door control devices to compensate for final operation of heating and ventilating equipment and to comply with referenced accessibility requirements.

3.6 CLEANING AND PROTECTION

- A. Protect all hardware stored on construction site in a covered and dry place. Protect exposed hardware installed on doors during the construction phase. Install any and all hardware at the latest possible time frame.
- B. Clean adjacent surfaces soiled by door hardware installation.
- C. Clean operating items as necessary to restore proper finish. Provide final protection and maintain conditions that ensure door hardware is without damage or deterioration at time of owner occupancy.

3.7 DEMONSTRATION

- A. Instruct Owner's maintenance personnel to adjust, operate, and maintain mechanical and electromechanical door hardware.

3.8 DOOR HARDWARE SETS

- A. The hardware sets represent the design intent and direction of the owner and architect. They are a guideline only and should not be considered a detailed hardware schedule. Discrepancies, conflicting hardware and missing items should be brought to the attention of the architect with corrections made prior to the bidding process. Omitted items not included in a hardware set should be scheduled with the appropriate additional hardware required for proper application and functionality.
 - 1. Quantities listed are for each pair of doors, or for each single door.
 - 2. The supplier is responsible for handing and sizing all products.
 - 3. Where multiple options for a piece of hardware are given in a single line item, the supplier shall provide the appropriate application for the opening.
 - 4. At existing openings with new hardware the supplier shall field inspect existing conditions prior to the submittal stage to verify the specified hardware will work as required. Provide alternate solutions and proposals as needed.
- B. Manufacturer's Abbreviations:

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

1. MK - McKinney
2. SU - Securitron
3. SA - SARGENT
4. RO - Rockwood
5. PE - Pemko
6. OT - Other

Hardware Sets

Set: 1.0

Doors: 001, 004, 007

3 Hinge	T4A3786 (NRP as required)	US26D	MK
1 Electric Power Transfer	EL-CEPT	630	SU ✂
1 Access Control Mort Lock	SN210-82271 BIPS-0E LNMW LC (provided by division 28)		US26D
SA	✂		
1 Keyed Cylinder	Match/expand existing-type as req'd.		
1 Surface Closer	351 O/P9 (type as required)	EN	SA
1 Kick Plate	K1050 10" CSK BEV	US32D	RO
1 Stop	400/403/441H (as required)	US26D	RO
1 Gasketing	S44BL		PE
1 Frame Harness	QC-C1500P (as required)		MK ✂
1 Door Harness	QC-C__P (as required)		MK ✂
1 Power Supply	AQL Series (as required) provided by division 28.		SU
✂			
1 Door Position Switch	provided by division 28		OT

Notes: Door normally closed and locked.

Entrance by presenting a valid credential to card reader.

Egress allowed at all times.

Loss of power maintains security from lock side, entrance by mechanical key only.

Door monitored for door ajar and forced open.

The card reader lock/exit device is provided by the division 28 security contractor.

Set: 2.0

Doors: 013, 014

3 Hinge	T4A3786	US26D	MK
1 Privacy Lock	LB V21 8266 LNMW	US32D	SA
1 Surface Closer	351 O/P9 (type as required)	EN	SA
1 Kick Plate	K1050 10" CSK BEV	US32D	RO
1 Mop Plate	K1050 4" CSK BEV	US32D	RO
1 Stop	400/403/441H (as required)	US26D	RO
1 Gasketing	S44BL		PE

Set: 3.0

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

Doors: 011, 012, 015, 016

3 Hinge	T4A3786	US26D	MK
1 Passage Latch	8215 LNMW	US32D	SA
1 Surface Closer	351 O/P9 (type as required)	EN	SA
1 Kick Plate	K1050 10" CSK BEV	US32D	RO
1 Stop	400/403/441H (as required)	US26D	RO
1 Gasketing, Seals, Threshold	by door manufacturer, per acoustical design PE		

Set: 4.0

Doors: 005, 006, 010, 165

1 Hardware	by door manufacturer

END OF SECTION 087100

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 090561 - COMMON WORK RESULTS FOR FLOORING PREPARATION

PART 1 GENERAL

1.1 SECTION INCLUDES

- A. This section applies to floors identified in Contract Documents that are receiving the following types of floor coverings:
 - 1. Resilient tile and sheet.
 - 2. Carpet tile.
 - 3. Thin-set ceramic tile and stone tile.
- B. Removal of existing floor coverings: where applicable. See drawings set.
- C. Preparation of new and existing concrete floor slabs for installation of floor coverings.
- D. Testing of concrete floor slabs for moisture and alkalinity (pH).
- E. Remediation of concrete floor slabs due to unsatisfactory moisture or alkalinity (pH) conditions.
 - 1. Contractor shall perform all specified remediation of concrete floor slabs. If such remediation is indicated by testing agency's report and is due to a condition not under Contractor's control or could not have been predicted by examination prior to entering into the contract, a contract modification will be issued.
- F. Patching compound.
- G. Remedial floor coatings.
- H. Remedial floor treatment.
- I. Preparation of new and existing wood-based floors and subfloors for installation of new floor coverings.

1.2 RELATED REQUIREMENTS

- J. None

1.3 REFERENCE STANDARDS

- K. ASTM C109/C109M - Standard Test Method for Compressive Strength of Hydraulic Cement Mortars (Using 2-in. or [50 mm] Cube Specimens) 2021.
- L. ASTM C472 - Standard Test Methods for Physical Testing of Gypsum, Gypsum Plasters, and Gypsum Concrete 2020.
- M. ASTM F710 - Standard Practice for Preparing Concrete Floors to Receive Resilient Flooring 2022.
- N. ASTM F1869 - Standard Test Method for Measuring Moisture Vapor Emission Rate of Concrete Subfloor Using Anhydrous Calcium Chloride 2023.
- O. ASTM F2170 - Standard Test Method for Determining Relative Humidity in Concrete Floor Slabs Using in situ Probes 2019a.
- P. RFCI (RWP) - Recommended Work Practices for Removal of Resilient Floor Coverings 2018.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

1.4 ADMINISTRATIVE REQUIREMENTS

- Q. Coordinate scheduling of cleaning and testing, so that preliminary cleaning has been completed for at least 24 hours prior to testing.

1.5 SUBMITTALS

- R. See Section 013300 - Administrative Requirements for submittal procedures.
- S. Visual Observation Report: For existing floor coverings to be removed.
- T. Floor Covering and Adhesive Manufacturers' Product Literature: For each specific combination of substrate, floor covering, and adhesive to be used; showing:
1. Moisture and alkalinity (pH) limits and test methods.
 2. Manufacturer's required bond/compatibility test procedure.
- U. Remedial Materials Product Data: Manufacturer's published data on each product to be used for remediation.
1. Manufacturer's qualification statement.
 2. Manufacturer's installation instructions.
 3. Specimen Warranty: Copy of warranty to be issued by coating manufacturer and certificate of underwriter's coverage of warranty.
- V. Testing Agency's Report:
1. Description of areas tested; include floor plans and photographs if helpful.
 2. Summary of conditions encountered.
 3. Moisture and alkalinity (pH) test reports.
 4. Copies of specified test methods.
 5. Recommendations for remediation of unsatisfactory surfaces.
 6. Product data for recommended remedial coating.
 7. Submit report to Architect.
 8. Submit report not more than two business days after conclusion of testing.
- W. Adhesive Bond and Compatibility Test Report.
- X. Copy of RFCI (RWP).

1.6 QUALITY ASSURANCE

- Y. Moisture and alkalinity (pH) testing will be performed by an independent testing agency employed and paid by Owner.
- Z. Testing Agency Qualifications: Independent testing agency experienced in the types of testing specified.
1. Submit evidence of experience consisting of at least 3 test reports of the type required, with project Owner's project contact information.
- AA. Contractor's Responsibility Relating to Independent Agency Testing:
1. Provide access for and cooperate with testing agency.
 2. Confirm date of start of testing at least 10 days prior to actual start.
 3. Allow at least 4 business days on site for testing agency activities.
 4. Achieve and maintain specified ambient conditions.
 5. Notify Owner when specified ambient conditions have been achieved and when testing will start.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- BB. Remedial Coating Installer Qualifications: Company specializing in performing work of the type specified in this section, trained by or employed by coating manufacturer, and able to provide at least 3 project references showing at least 3 years' experience installing moisture emission coatings.

1.7 DELIVERY, STORAGE, AND HANDLING

- CC. Deliver, store, handle, and protect products in accordance with manufacturer's instructions and recommendations.
- DD. Deliver materials in manufacturer's packaging; include installation instructions.
- EE. Keep materials from freezing.

1.8 FIELD CONDITIONS

- FF. Maintain ambient temperature in spaces where concrete testing is being performed, and for at least 48 hours prior to testing, at not less than 65 degrees F (18 degrees C) or more than 85 degrees F (30 degrees C).
- GG. Maintain relative humidity in spaces where concrete testing is being performed, and for at least 48 hours prior to testing, at not less than 40 percent and not more than 60 percent.

PART 2 PRODUCTS

2.1 MATERIALS

- A. Patching Compound: Floor covering manufacturer's recommended product, suitable for conditions, and compatible with adhesive and floor covering. In the absence of any recommendation from flooring manufacturer, provide a product with the following characteristics:
1. Cementitious moisture-, mildew-, and alkali-resistant compound, compatible with floor, floor covering, and floor covering adhesive, and capable of being feathered to nothing at edges.
 2. Latex or polyvinyl acetate additions are permitted; gypsum content is prohibited.
 3. Compressive Strength: 3000 psi, minimum, after 28 days, when tested in accordance with ASTM C109/C109M or ASTM C472, whichever is appropriate.
 4. Products:
 - a. H.B. Fuller Construction Products, Inc; TEC Feather Edge Skim Coat: www.tecspecialty.com/#sle.
 - b. LATICRETE International, Inc; SKIM LITE: www.laticrete.com/#sle.
 - c. USG Corporation; Durock Brand Advanced Skim Coat Floor Patch: www.usg.com/#sle.
 - d. Substitutions: See Section 016000 - Product Requirements.
- B. Remedial Floor Coating: Single- or multi-layer coating or coating/overlay combination intended by its manufacturer to resist water vapor transmission to degree sufficient to meet flooring manufacturer's emission limits, resistant to the level of alkalinity (pH) found, and suitable for adhesion of flooring without further treatment.
1. Thickness: As required for application and in accordance with manufacturer's installation instructions.
 2. Use product recommended by testing agency.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

PART 3 EXECUTION

3.1 CONCRETE SLAB PREPARATION

- A. Follow recommendations of testing agency.
- B. Perform following operations in the order indicated:
 - 1. Existing concrete slabs (on-grade and elevated) with existing floor coverings:
 - a. Visual observation of existing floor covering, for adhesion, water damage, alkaline deposits, and other defects.
 - b. Removal of existing floor covering.
 - 2. Preliminary cleaning.
 - 3. Moisture vapor emission tests; 3 tests in the first 1000 square feet (100 square meters) and one test in each additional 1000 square feet (100 square meters), unless otherwise indicated or required by flooring manufacturer.
 - 4. Internal relative humidity tests; in same locations as moisture vapor emission tests, unless otherwise indicated.
 - 5. Alkalinity (pH) tests; in same locations as moisture vapor emission tests, unless otherwise indicated.
 - 6. Specified remediation, if required.
 - 7. Patching, smoothing, and leveling, as required.
 - 8. Other preparation specified.
 - 9. Adhesive bond and compatibility test.
 - 10. Protection.
- C. Remediations:
 - 1. Active Water Leaks or Continuing Moisture Migration to Surface of Slab: Correct this condition before doing any other remediation; re-test after correction.
 - 2. Excessive Moisture Emission or Relative Humidity: If an adhesive that is resistant to the level of moisture present is available and acceptable to flooring manufacturer, use that adhesive for installation of the flooring; if not, apply remedial floor coating or remedial sheet membrane over entire suspect floor area.
 - 3. Excessive Alkalinity (pH): If remedial floor coating is necessary to address excessive moisture, no additional remediation is required; if not, if an adhesive that is resistant to the level present is available and acceptable to the flooring manufacturer, use that adhesive for installation of the flooring; otherwise, apply a skim coat of specified patching compound over entire suspect floor area.

3.2 REMOVAL OF EXISTING FLOOR COVERINGS

- D. Comply with local, State, and federal regulations and recommendations of RFCI (RWP), as applicable to floor covering being removed.
- E. Dispose of removed materials in accordance with local, State, and federal regulations and as specified.

3.3 PRELIMINARY CLEANING

- F. Clean floors of dust, solvents, paint, wax, oil, grease, asphalt, residual adhesive, adhesive removers, film-forming curing compounds, sealing compounds, alkaline salts, excessive laitance, mold, mildew, and other materials that might prevent adhesive bond.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- G. Do not use solvents or other chemicals for cleaning.

3.4 MOISTURE VAPOR EMISSION TESTING

- H. Where the floor covering manufacturer's requirements conflict with either the referenced test method or this specification, comply with the manufacturer's requirements.
- I. Where this specification conflicts with the referenced test method, comply with the requirements of this section.
- J. Test in accordance with ASTM F1869 and as follows.
- K. Plastic sheet test and mat bond test may not be substituted for the specified ASTM test method, as those methods do not quantify the moisture content sufficiently.
- L. In the event that test values exceed floor covering manufacturer's limits, perform remediation as indicated. In the absence of manufacturer limits, perform remediation if test values exceed 3 pounds per 1000 square feet (1.4 kg per 93 square meters) per 24 hours.
- M. Report: Report the information required by the test method.

3.5 INTERNAL RELATIVE HUMIDITY TESTING

- N. Where the floor covering manufacturer's requirements conflict with either the referenced test method or this specification, comply with the manufacturer's requirements.
- O. Where this specification conflicts with the referenced test method, comply with the requirements of this section.
- P. Test in accordance with ASTM F2170 Procedure A and as follows.
- Q. Testing with electrical impedance or resistance apparatus may not be substituted for the specified ASTM test method, as the values determined are not comparable to the ASTM test values and do not quantify the moisture content sufficiently.
- R. In the event that test values exceed floor covering manufacturer's limits, perform remediation as indicated. In the absence of manufacturer limits, perform remediation if any test value exceeds 75 percent relative humidity.
- S. Report: Report the information required by the test method.

3.6 ALKALINITY TESTING

- T. Where the floor covering manufacturer's requirements conflict with either the referenced test method or this specification, comply with the manufacturer's requirements.
- U. The following procedure is the equivalent of that described in ASTM F710, repeated here for the Contractor's convenience.
- V. In the event that test values exceed floor covering manufacturer's limits, perform remediation as indicated. In the absence of manufacturer limits, perform remediation if alkalinity (pH) test value is over 10.

3.7 PREPARATION

- W. See individual floor covering section(s) for additional requirements.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- X. Comply with recommendations of testing agency.
- Y. Comply with requirements and recommendations of floor covering manufacturer.
- Z. Fill and smooth surface cracks, grooves, depressions, control joints and other non-moving joints, and other irregularities with patching compound.
- AA. Do not fill expansion joints, isolation joints, or other moving joints.

3.8 ADHESIVE BOND AND COMPATIBILITY TESTING

- BB. Comply with requirements and recommendations of floor covering manufacturer.

3.9 APPLICATION OF REMEDIAL FLOOR COATING

- CC. Comply with requirements and recommendations of coating manufacturer.

3.10 PROTECTION

- A. Cover prepared floors with building paper or other durable covering.

END OF SECTION 090561

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 092216 – NON-STRUCTURAL METAL FRAMING

PART 1 - GENERAL

SECTION INCLUDES

- 1.1 Metal partition, ceiling, and soffit framing.
- 1.2 Framing accessories.

RELATED REQUIREMENTS

Section 072100 - Thermal Insulation: Acoustic insulation.

Section 079200 - Joint Sealants: Sealing acoustical gaps in construction other than gypsum board or plaster work.

Section 092116 - Gypsum Board Assemblies: Metal studs for gypsum board partition framing.

Section 092116 - Gypsum Board Assemblies: Execution requirements for anchors for attaching work of this section.

REFERENCE STANDARDS

- 1.3 AISI S201 - North American Standard for Cold-Formed Steel Framing - Product Data 2017.
- 1.4 AISI S220 - North American Standard for Cold-Formed Steel Nonstructural Framing 2020.
- 1.5 ASTM A36/A36M - Standard Specification for Carbon Structural Steel 2019.
- 1.6 ASTM A1003/A1003M - Standard Specification for Steel Sheet, Carbon, Metallic- and Nonmetallic-Coated for Cold-Formed Framing Members 2015.
- 1.7 ASTM C1007 - Standard Specification for Installation of Load Bearing (Transverse and Axial) Steel Studs and Related Accessories 2020.
- 1.8 ASTM C754 - Standard Specification for Installation of Steel Framing Members to Receive Screw-Attached Gypsum Panel Products 2020.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SUBMITTALS

- 1.9 See Section 013000 - Administrative Requirements for submittal procedures.
- 1.10 Product Data: Provide data describing framing member materials and finish, product criteria, load charts, and limitations.
- 1.11 Manufacturer's Installation Instructions: Indicate special procedures and perimeter conditions requiring special attention.

QUALITY ASSURANCE

- 1.12 Installer Qualifications: Company specializing in performing the work of this section with minimum five years documented experience and approved by manufacturer.
- 1.13 Manufacturer Qualifications: Member of Supreme Steel Framing System Association (SSFSA): www.ssfsa.com/#sle.

SCHEDULE 1 - PART 2 PRODUCTS

MANUFACTURERS

- 1.1 Metal Framing, Connectors, and Accessories:
 - A. ClarkDietrich: www.clarkdietrich.com/#sle.
 - B. MarinoWARE: www.marinoware.com/#sle.
 - C. SCAFCO Corporation: www.scafco.com/#sle.
 - D. The Steel Network, Inc: www.SteelNetwork.com/#sle.
 - E. Substitutions: See Section 016000 - Product Requirements.

FRAMING MATERIALS

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- 1.2 Material and Product Requirements Criteria: AISI S201.
- 1.3 Non-Loadbearing Framing System Components: AISI S220; sheet steel, of size and properties necessary for the spacing indicated, with maximum deflection of wall framing of L/240 at 5 psf (L/240 at 240 Pa).
 - A. Studs: C-shaped with flat faces.
 - 1. Products:
 - a. ClarkDietrich; ProSTUD: www.clarkdietrich.com/#sle.
 - b. MarinoWARE; ViperStud Drywall Framing: www.marinoware.com/#sle.
 - B. Runners: U-shaped, sized to match studs.
 - C. Ceiling Channels: C-shaped.
 - D. Furring: Hat-shaped sections, minimum depth of 7/8 inch (22 mm).
 - E. Resilient Furring Channels: Single or double leg configuration; 1/2 inch (12 mm) channel depth.
- 1.4 Steel Framing Stud and Track Wall System: Self-locking steel studs and telescoping stud extensions and tracks.
 - A. Minimum Base-Steel Thickness: 0.0238 inch (0.60 mm).
 - B. Depth: 3-5/8 inches (92 mm).
- 1.5 Non-Loadbearing Framing Accessories:
 - A. Ceiling Hangers: Type and size as specified in ASTM C754 for spacing required.
 - B. Partial Height Wall Framing Support: Provides stud reinforcement and anchored connection to floor.
 - 1. Materials: ASTM A36/A36M formed sheet steel support member with factory-welded ASTM A1003/A1003M steel plate base.

FABRICATION

- 1.6 Fabricate assemblies of framed sections to sizes and profiles required.
- 1.7 Fit, reinforce, and brace framing members to suit design requirements.

SCHEDULE 2 - PART 3 EXECUTION

EXAMINATION

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

1.1 Verify existing conditions before starting work.

1.2 Verify that rough-in utilities are in proper location.

INSTALLATION OF STUD FRAMING

1.3 Comply with requirements of ASTM C1007.

1.4 Install structural members and connections complying with ASTM C1007.

1.5 Extend partition framing to structure where indicated and to ceiling in other locations.

1.6 Partitions Terminating at Ceiling: Attach ceiling runner securely to ceiling track in accordance with manufacturer's instructions.

1.7 Align and secure top and bottom runners at 24 inches (600 mm) on center.

1.8 Fit runners under and above openings; secure intermediate studs to same spacing as wall studs.

1.9 Align stud web openings horizontally.

1.10 Secure studs to tracks using crimping method. Do not weld.

1.11 Fabricate corners using a minimum of three studs.

1.12 Install double studs at wall openings, door and window jambs, not more than 2 inches (50 mm) from each side of openings.

1.13 Coordinate installation of bucks, anchors, and blocking with electrical, mechanical, and other work to be placed within or behind stud framing.

1.14 Furring: Install at spacing and locations shown on drawings. Lap splices a minimum of 6 inches (150 mm).

CEILING AND SOFFIT FRAMING

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- 1.15 Comply with requirements of ASTM C754.
- 1.16 Install furring after work above ceiling or soffit is complete. Coordinate the location of hangers with other work.
- 1.17 Install furring independent of walls, columns, and above-ceiling work.
- 1.18 Securely anchor hangers to structural members or embed them in structural slab. Space hangers as required to limit deflection to criteria indicated. Use rigid hangers at exterior soffits.
- 1.19 Space main carrying channels at maximum 72 inches (1 800 mm) on center, and not more than 6 inches (150 mm) from wall surfaces. Lap splice securely.
- 1.20 Securely fix carrying channels to hangers to prevent turning or twisting and to transmit full load to hangers.
- 1.21 Place furring channels perpendicular to carrying channels, not more than 2 inches (50 mm) from perimeter walls, and rigidly secure. Lap splices securely.

TOLERANCES

- 1.22 Maximum Variation From True Position: 1/8 inch in 10 feet (3 mm in 3 m).
- 1.23 Maximum Variation From Plumb: 1/8 inch in 10 feet (3 mm in 3 m).

END OF SECTION 092216

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 092900 - GYPSUM BOARD

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- B. Section Includes:
 - 1. Interior gypsum board.

1.3 ACTION SUBMITTALS

- C. Product Data: For each type of product.

1.4 DELIVERY, STORAGE AND HANDLING

- D. Store materials inside under cover and keep them dry and protected against weather, condensation, direct sunlight, construction traffic, and other potential causes of damage. Stack panels flat and supported on risers on a flat platform to prevent sagging.

1.5 FIELD CONDITIONS

- E. Do not install paper-faced gypsum panels until installation areas are enclosed and conditioned.
- F. Do not install panels that are wet, those that are moisture damaged, and those that are mold damaged.
 - 1. Indications that panels are wet or moisture damaged include, but are not limited to, discoloration, sagging, or irregular shape.
 - 2. Indications that panels are mold damaged include, but are not limited to, fuzzy or splotchy surface contamination and discoloration.

PART 2 - PRODUCTS

2.1 PERFORMANCE REQUIREMENTS

- A. Fire-Resistance-Rated Assemblies: For fire-resistance-rated assemblies, provide materials and construction identical to those tested in assembly indicated according to ASTM E 119 by an independent testing agency.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- B. STC-Rated Assemblies: For STC-rated assemblies, provide materials and construction identical to those tested in assembly indicated according to ASTM E 90 and classified according to ASTM E 413 by an independent testing agency.

2.2 GYPSUM BOARD, GENERAL

- C. Regional Materials: Gypsum panel products shall be manufactured within 500 miles (800 km) of Project site from materials that have been extracted, harvested, or recovered, as well as manufactured, within 500 miles (800 km) of Project site.
- D. Size: Provide maximum lengths and widths available that will minimize joints in each area and that correspond with support system indicated.

2.3 INTERIOR GYPSUM BOARD

- E. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
1. American Gypsum.
 2. CertainTeed Corp.
 3. Georgia-Pacific Gypsum LLC.
 4. Lafarge North America Inc.
 5. National Gypsum Company.
 6. PABCO Gypsum.
 7. Temple-Inland.
 8. USG Corporation.
- F. Gypsum Board, Type X: ASTM C 1396/C 1396M.
1. Thickness: 5/8 inch (15.9 mm).
 2. Long Edges: Tapered.
- G. Moisture- and Mold-Resistant Gypsum Board: ASTM C 1396/C 1396M. With moisture- and mold-resistant core and paper surfaces.
1. Core: 5/8 inch (15.9 mm), Type X.
 2. Long Edges: Tapered.
 3. Mold Resistance: ASTM D 3273, score of 10.

2.4 TRIM ACCESSORIES

- H. Interior Trim: ASTM C 1047.
1. Material: Galvanized or aluminum-coated steel sheet or rolled zinc.
 2. Shapes:
 - a. Cornerbead.
 - b. LC-Bead: J-shaped; exposed long flange receives joint compound.
 - c. Expansion (control) joint.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

2.5 JOINT TREATMENT MATERIALS

- I. General: Comply with ASTM C 475/C 475M.
- J. Joint Tape:
 - 1. Interior Gypsum Board: Paper.
 - 2. Tile Backing Panels: As recommended by panel manufacturer.
- K. Joint Compound for Interior Gypsum Board: For each coat use formulation that is compatible with other compounds applied on previous or for successive coats.
 - 1. Prefilling: At open joints, beveled panel edges, and damaged surface areas, use setting-type taping compound.
 - 2. Embedding and First Coat: For embedding tape and first coat on joints, fasteners, and trim flanges, use drying-type, all-purpose compound.
 - 3. Fill Coat: For second coat, use drying-type, all-purpose compound.
 - 4. Finish Coat: For third coat, use drying-type, all-purpose compound.
 - 5. Skim Coat: For final coat of Level 5 finish, use drying-type, all-purpose compound.

2.6 AUXILIARY MATERIALS

- L. General: Provide auxiliary materials that comply with referenced installation standards and manufacturer's written recommendations.
- M. Steel Drill Screws: ASTM C 1002, unless otherwise indicated.
 - 1. Use screws complying with ASTM C 954 for fastening panels to steel members from 0.033 to 0.112 inch (0.84 to 2.84 mm) thick.
 - 2. For fastening cementitious backer units, use screws of type and size recommended by panel manufacturer.
- N. Sound Attenuation Blankets: ASTM C 665, Type I (blankets without membrane facing) produced by combining thermosetting resins with mineral fibers manufactured from glass, slag wool, or rock wool.
 - 1. Fire-Resistance-Rated Assemblies: Comply with mineral-fiber requirements of assembly.
 - 2. Recycled Content of Blankets: Postconsumer recycled content plus one-half of pre-consumer recycled content not less than 10 percent.
- O. Acoustical Joint Sealant: Manufacturer's standard non-sag, paintable, non-staining latex sealant complying with ASTM C 834. Product effectively reduces airborne sound transmission through perimeter joints and openings in building construction as demonstrated by testing representative assemblies according to ASTM E 90.
 - 1. Products: Subject to compliance with requirements:
 - a. Accumetric LLC; BOSS 824 Acoustical Sound Sealant.
 - b. Grabber Construction Products; Acoustical Sealant GSC.
 - c. Specified Technologies, Inc.; Smoke N Sound Acoustical Sealant.
 - d. USG Corporation; SHEETROCK Acoustical Sealant.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine areas and substrates including welded hollow-metal frames and framing, with Installer present, for compliance with requirements and other conditions affecting performance.
- B. Examine panels before installation. Reject panels that are wet, moisture damaged, and mold damaged.
- C. Proceed with installation only after unsatisfactory conditions have been corrected.

3.2 APPLYING AND FINISHING PANELS, GENERAL

- D. Comply with ASTM C 840.
- E. Install ceiling panels across framing to minimize the number of abutting end joints and to avoid abutting end joints in central area of each ceiling. Stagger abutting end joints of adjacent panels, not less than one framing member.
- F. Install panels with face side out. Butt panels together for a light contact at edges and ends with not more than 1/16 inch (1.5 mm) of open space between panels. Do not force into place.
- G. Locate edge and end joints over supports, except in ceiling applications where intermediate supports or gypsum board back-blocking is provided behind end joints. Do not place tapered edges against cut edges or ends. Stagger vertical joints on opposite sides of partitions. Do not make joints other than control joints at corners of framed openings.
- H. Form control and expansion joints with space between edges of adjoining gypsum panels.
- I. Cover both faces of support framing with gypsum panels in concealed spaces (above ceilings, etc.), except in chases braced internally.
 - 1. Unless concealed application is indicated or required for sound, fire, air, or smoke ratings, coverage may be accomplished with scraps of not less than 8 sq. ft. (0.7 sq. m) in area.
 - 2. Fit gypsum panels around ducts, pipes, and conduits.
 - 3. Where partitions intersect structural members projecting below underside of floor/roof slabs and decks, cut gypsum panels to fit profile formed by structural members; allow 1/4- to 3/8-inch- (6.4- to 9.5-mm-) wide joints to install sealant.
- J. Isolate perimeter of gypsum board applied to non-load-bearing partitions at structural abutments, except floors. Provide 1/4- to 1/2-inch- (6.4- to 12.7-mm-) wide spaces at these locations and trim edges with edge trim where edges of panels are exposed. Seal joints between edges and abutting structural surfaces with acoustical sealant.
- K. Wood Framing: Install gypsum panels over wood framing, with floating internal corner construction. Do not attach gypsum panels across the flat grain of wide-dimension lumber, including floor joists and headers. Float gypsum panels over these members or provide control joints to counteract wood shrinkage.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- L. Install sound attenuation blankets before installing gypsum panels unless blankets are readily installed after panels have been installed on one side.

3.3 APPLYING INTERIOR GYPSUM BOARD

- M. Install interior gypsum board in the following locations:

- 1. Wallboard Type: As indicated on Drawings.
- 2. Type X: Vertical surfaces unless otherwise indicated.
- 3. Moisture- and Mold-Resistant Type: As indicated on Drawings.

- N. Single-Layer Application:

- 1. On ceilings, apply gypsum panels before wall/partition board application to greatest extent possible and at right angles to framing unless otherwise indicated.
- 2. On partitions/walls, apply gypsum panels vertically (parallel to framing) unless otherwise indicated or required by fire-resistance-rated assembly, and minimize end joints.
 - a. Stagger abutting end joints not less than one framing member in alternate courses of panels.
 - b. At stairwells and other high walls, install panels horizontally unless otherwise indicated or required by fire-resistance-rated assembly.
- 3. On Z-furring members, apply gypsum panels vertically (parallel to framing) with no end joints. Locate edge joints over furring members.
- 4. Fastening Methods: Apply gypsum panels to supports with steel drill screws.

- O. Multilayer Application:

- 1. On ceilings, apply gypsum board indicated for base layers before applying base layers on walls/partitions; apply face layers in same sequence. Apply base layers at right angles to framing members and offset face-layer joints one framing member, 16 inches (400 mm) minimum, from parallel base-layer joints, unless otherwise indicated or required by fire-resistance-rated assembly.
- 2. On partitions/walls, apply gypsum board indicated for base layers and face layers vertically (parallel to framing) with joints of base layers located over stud or furring member and face-layer joints offset at least one stud or furring member with base-layer joints, unless otherwise indicated or required by fire-resistance-rated assembly. Stagger joints on opposite sides of partitions.
- 3. On Z-furring members, apply base layer vertically (parallel to framing) and face layer either vertically (parallel to framing) or horizontally (perpendicular to framing) with vertical joints offset at least one furring member. Locate edge joints of base layer over furring members.
- 4. Fastening Methods: Fasten base layers and face layers separately to supports with screws.

3.4 INSTALLING TRIM ACCESSORIES

- P. General: For trim with back flanges intended for fasteners, attach to framing with same fasteners used for panels. Otherwise, attach trim according to manufacturer's written instructions.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

Q. Interior Trim: Install in the following locations:

1. Cornerbead: Use at outside corners.
2. LC-Bead: Use at exposed panel edges.
3. Curved-Edge Cornerbead: Use at curved openings.

3.5 FINISHING GYPSUM BOARD

- R. General: Treat gypsum board joints, interior angles, edge trim, control joints, penetrations, fastener heads, surface defects, and elsewhere as required to prepare gypsum board surfaces for decoration. Promptly remove residual joint compound from adjacent surfaces.
- S. Prefill open joints, beveled edges, and damaged surface areas.
- T. Apply joint tape over gypsum board joints, except for trim products specifically indicated as not intended to receive tape.
- U. Gypsum Board Finish Levels: Finish panels to levels indicated below and according to ASTM C 840:
1. Level 4: At panel surfaces that will be exposed to view unless otherwise indicated.
 - a. Primer and its application to surfaces are specified in other Division 09 Sections.

3.6 PROTECTION

- V. Protect adjacent surfaces from drywall compound and promptly remove from floors and other non-drywall surfaces. Repair surfaces stained, marred, or otherwise damaged during drywall application.
- W. Protect installed products from damage from weather, condensation, direct sunlight, construction, and other causes during remainder of the construction period.
- X. Remove and replace panels that are wet, moisture damaged, and mold damaged.
1. Indications that panels are wet or moisture damaged include, but are not limited to, discoloration, sagging, or irregular shape.
 2. Indications that panels are mold damaged include, but are not limited to, fuzzy or splotchy surface contamination and discoloration.

END OF SECTION 092900

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 093000 - TILING

PART 1 GENERAL

1.1 SECTION INCLUDES

- A. Tile for floor applications.
- B. Tile for wall applications.
- C. Cementitious backer board as tile substrate.
- D. Coated glass mat backer board as tile substrate.
- E. Ceramic accessories.
- F. Trim accessories.

1.2 RELATED REQUIREMENTS

- G. Section 079200 - Joint Sealants: Sealing joints between tile work and adjacent construction and fixtures.
- H. Section 092116 - Gypsum Board Assemblies: Tile backer board.

1.3 REFERENCE STANDARDS

- I. ANSI A108/A118/A136 - American National Standard Specifications for the Installation of Ceramic Tile (Compendium) 2019.
- J. ANSI A108.1a - American National Standard Specifications for Installation of Ceramic Tile in the Wet-Set Method, with Portland Cement Mortar 2017 (Reaffirmed 2022).
- K. ANSI A108.1b - American National Standard Specifications for Installation of Ceramic Tile on a Cured Portland Cement Mortar Setting Bed with Dry-Set or Latex-Portland Cement Mortar 2017.
- L. ANSI A108.1c - Contractor's Option: Installation of Ceramic Tile in the Wet-Set Method with Portland Cement Mortar or Installation of Ceramic Tile on a Cured Portland Cement Mortar Setting Bed with Dry-Set or Latex-Portland Cement Mortar 1999 (Reaffirmed 2021).
- M. ANSI A108.2 - American National Standard General Requirements: Materials, Environmental and Workmanship 2019.
- N. ANSI A108.4 - American National Standard Specifications for Installation of Ceramic Tile with Organic Adhesive or Water Cleanable Tile-Setting Epoxy Adhesive 2019.
- O. ANSI A108.5 - American National Standard Specifications for Installation of Ceramic Tile with Dry-Set Portland Cement Mortar or Latex-Portland Cement Mortar 2021.
- P. ANSI A108.6 - American National Standard Specifications for Installation of Ceramic Tile with Chemical Resistant, Water Cleanable Tile-Setting and -Grout Epoxy 1999 (Reaffirmed 2019).
- Q. ANSI A108.8 - American National Standard Specifications for Installation of Ceramic Tile with Chemical Resistant Furan Resin Mortar and Grout 1999 (Reaffirmed 2019).

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- R. ANSI A108.9 - American National Standard Specifications for Installation of Ceramic Tile with Modified Epoxy Emulsion Mortar/Grout 1999 (Reaffirmed 2019).
- S. ANSI A108.10 - American National Standard Specifications for Installation of Grout in Tilework 2017 (Reaffirmed 2022).
- T. ANSI A108.11 - American National Standard Specifications for Interior Installation of Cementitious Backer Units 2018.
- U. ANSI A108.12 - American National Standard for Installation of Ceramic Tile with EGP (Exterior Glue Plywood) Latex-Portland Cement Mortar 1999 (Reaffirmed 2019).
- V. ANSI A108.13 - American National Standard for Installation of Load Bearing, Bonded, Waterproof Membranes for Thin-Set Ceramic Tile and Dimension Stone 2005 (Reaffirmed 2021).
- W. ANSI A108.19 - American National Standard Specifications for Interior Installation of Gauged Porcelain Tiles and Gauged Porcelain Tile Panels/Slabs by the Thin-Bed Method Bonded with Modified Dry-Set Cement Mortar or Improved Modified Dry-Set Cement Mortar 2020.
- X. ANSI A108.20 - American National Standard Specifications for Exterior Installation of Gauged Porcelain Tiles and Gauged Porcelain Tile Panels/Slabs 2020.
- Y. ANSI A118.1 - American National Standard Specifications for Dry-Set Cement Mortar 2019.
- Z. ANSI A118.3 - American National Standard Specifications for Chemical Resistant, Water Cleanable Tile-Setting and -Grouting Epoxy and Water Cleanable Tile-Setting Epoxy Adhesive 2021.
- AA. ANSI A118.4 - American National Standard Specifications for Modified Dry-Set Cement Mortar 2019.
- BB. ANSI A118.7 - American National Standard Specifications for High Performance Cement Grouts for Tile Installation 2019.
- CC. ANSI A118.9 - American National Standard Specifications for Test Methods and Specifications for Cementitious Backer Units 2019.
- DD. ANSI A118.10 - American National Standard Specifications for Load Bearing, Bonded, Waterproof Membranes for Thin-Set Ceramic Tile and Dimension Stone 2014 (Reaffirmed 2019).
- EE. ANSI A118.12 - American National Standard Specifications for Crack Isolation Membranes for Thin-Set Ceramic Tile and Dimension Stone Installation 2014 (Reaffirmed 2019).
- FF. ANSI A137.1 - American National Standard Specifications for Ceramic Tile 2022.
- GG. ASTM C373 - Standard Test Methods for Determination of Water Absorption and Associated Properties by Vacuum Method for Pressed Ceramic Tiles and Glass Tiles and Boil Method for Extruded Ceramic Tiles and Non-tile Fired Ceramic Whiteware Products 2018 (Reapproved 2023).
- HH. ASTM C1178/C1178M - Standard Specification for Coated Glass Mat Water-Resistant Gypsum Backing Panel 2018.
- II. ASTM F710 - Standard Practice for Preparing Concrete Floors to Receive Resilient Flooring 2022.
- JJ. ASTM F2170 - Standard Test Method for Determining Relative Humidity in Concrete Floor Slabs Using in situ Probes 2019a.
- KK. TCNA (HB) - Handbook for Ceramic, Glass, and Stone Tile Installation 2023.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

1.4 ADMINISTRATIVE REQUIREMENTS

LL. Preinstallation Meeting: Convene a preinstallation meeting one week before starting work of this section; require attendance by affected installers.

1.5 SUBMITTALS

MM. See Section 013300 - Administrative Requirements for submittal procedures.

NN. Product Data: Provide manufacturers' data sheets on tile, mortar, grout, and trim accessories. Include instructions for using grouts and adhesives.

OO. Samples for Verification:

1. Full-size units of each type and composition of tile and for each color and finish required.
 - a. Where products involve normal color and texture variations, include Sample sets showing the full range of variations expected.
 - b. For ceramic mosaic tile in color blend patterns, provide full sheets of each color blend.
2. Grout: Cured units, in 6-inch (150-mm) lengths for each color required
3. Trim: Each type of trim and accessory for each color and profile required in 6-inch (150-mm) lengths.

PP. Samples shall be clearly labeled with manufacturer's name, type, variety, color, etc. Non-labeled Samples will be rejected

QQ. Manufacturer's Certificate: Certify that products meet or exceed specified requirements.

RR. Installer's Qualification Statement:

1. Submit documentation of National Tile Contractors Association (NTCA) or Tile Contractors' Association of America (TCAA) accreditation.

SS. Maintenance Data: Include recommended cleaning methods, cleaning materials, and stain removal methods.

TT. Maintenance Materials: Furnish the following for Owner's use in maintenance of project.

1. See Section 016000 - Product Requirements, for additional provisions.

1.6 QUALITY ASSURANCE

UU. Maintain one copy of ANSI A108/A118/A136 and TCNA (HB) on site.

VV. Manufacturer Qualifications: Company specializing in manufacturing the types of products specified in this section, with minimum five years of documented experience.

WW. Installer Qualifications: Natural Stone Institute (NSI) Accredited Commercial B Contractor (light commercial): www.naturalstoneinstitute.org/#sle.

XX. Installer Qualifications:

1. Company specializing in performing tile installation, with minimum of five years of documented experience.
 - a. Accredited Five-Star member of the National Tile Contractors Association (NTCA) or Trowel of Excellence member of the Tile Contractors' Association of America (TCAA).

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

1.7 MOCK-UPS

- YY. See Section 014000 - Quality Requirements for general requirements for mock-up.
- ZZ. Construct tile mock-up where indicated on drawings, incorporating all components specified for the location.
1. Minimum size of mock-up is indicated on drawings.

1.8 DELIVERY, STORAGE, AND HANDLING

- AAA. Protect adhesives from freezing or overheating in accordance with manufacturer's instructions.

1.9 FIELD CONDITIONS

- BBB. Do not install solvent-based products in an unventilated environment.
- CCC. Maintain ambient and substrate temperature above 50 degrees F (10 degrees C) and below 100 degrees F (38 degrees C) during installation and curing of setting materials.

PART 2 PRODUCTS

2.1 TILE

- A. Manufacturers: All products by the same manufacturer.
1. Tile Products:
 - a. Reference ID1.00 Finish Legend.
 - b. **No substitutions allowed**
 2. Tile-Setting and -Grouting Materials:
 - a. Laticrete
 - b. **No substitutions allowed**
 3. Tile Setting Accessories:
 - a. Schluter Systems.
 4. Edging material/product: Refer to Section ID1.00 INTERIOR FINISH MATERIALS LEGEND for product requirements.
 - 1.
- B. Porcelain Tile: ANSI A137.1 standard grade.
1. Moisture Absorption: 0 to 0.5 percent as tested in accordance with ASTM C373.
 2. Size: Refer to drawings , nominal.
 3. Thickness: 3/8 inch (9.5 mm).
 4. Surface Finish: Unglazed.
 5. Color(s): As indicated in drawing set.
 6. Trim Units: Matching bullnose, cove base, and cove shapes in sizes coordinated with field tile.
 7. Products:
 - a. As indicated in drawing set.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

2.2 TRIM AND ACCESSORIES

- C. Tile Accessories:
 - 1. Schluter Systems. https://www.schluter.com/schluter-us/en_US/
 - a. As indicated in drawing set.

2.3 SETTING MATERIALS

- D. Provide setting and grout materials from same manufacturer.
- E. Manufacturers:
 - 1. LATICRETE International, Inc: www.laticrete.com/#sle.
 - 2. **No Exceptions**
- F. Water Based Adhesive: Multi-purpose type mastic.
- G. Dry-Set Portland Cement Mortar Bond Coat: ANSI A118.1.

2.4 GROUTS

- H. Provide setting and grout materials from same manufacturer.
- I. Manufacturers:
 - 1. LATICRETE International, Inc: www.laticrete.com/#sle.
 - 2. **No Exceptions**
- J. High Performance Polymer Modified Grout: ANSI A118.7 polymer modified cement grout.
 - 1. Applications: Use this type of grout where indicated and where no other type of grout is indicated - Refer to drawing set
 - 2. Use sanded grout for joints 1/8 inch (3.2 mm) wide and larger; use unsanded grout for joints less than 1/8 inch (3.2 mm) wide.
 - 3. Color(s): As selected by Architect from manufacturer's full line.
 - 4. Products:
 - a. LATICRETE International, Inc; LATICRETE PERMACOLOR Grout: www.laticrete.com/#sle.
- K. Epoxy Grout: ANSI A118.3 chemical resistant and water-cleanable epoxy grout.
 - 1. Applications: Refer to drawing set.
 - 2. Color(s): As selected by Architect from manufacturer's full line.
 - 3. Products:
 - a. LATICRETE International, Inc; LATICRETE SPECTRALOCK PRO Premium Grout: www.laticrete.com/#sle.

2.5 MAINTENANCE MATERIALS

- L. Tile Sealant: Gunnable, silicone, siliconized acrylic, or urethane sealant; moisture and mildew resistant type.
 - 1. Applications: Between tile and plumbing fixtures.
 - 2. Color(s): As selected by Architect from manufacturer's full line.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

2.6 ACCESSORY MATERIALS

- M. Concrete Floor Slab Crack Isolation Membrane: Material complying with ANSI A118.12; not intended as waterproofing.
 - 1. Crack Resistance: No failure at 1/8 inch (3.2 mm) gap, minimum.
- N. Waterproofing Membrane at Floors: Specifically designed for bonding to cementitious substrate under thick mortar bed or thin-set tile; complying with ANSI A118.10.
 - 1. Crack Resistance: No failure at 1/16 inch (1.6 mm) gap, minimum; comply with ANSI A118.12.
 - 2. Fluid or Trowel Applied Type:
 - a. Material: Synthetic rubber or Acrylic.
 - b. Thickness: 25 mils (0.6 mm), minimum, dry film thickness.
- O. Cleavage Membrane Under Thick Mortar Bed:
 - 1. Material: 4 mil (0.1 mm) thick polyethylene film.
- P. Backer Board: Cementitious type complying with ANSI A118.9; high density, glass fiber reinforced, 7/16 inch (11 mm) thick; 2 inch (51 mm) wide coated glass fiber tape for joints and corners.
- Q. Backer Board: Coated glass mat type complying with ASTM C1178/C1178M; inorganic fiberglass mat on both surfaces and integral acrylic coating vapor retarder.
 - 1. Standard Type: Thickness 1/2 inch (12.7 mm).
- R. Mesh Tape: 2 inch (50 mm) wide self-adhesive fiberglass mesh tape.

PART 3 EXECUTION

3.1 EXAMINATION

- A. Verify that subfloor surfaces are smooth and flat within the tolerances specified for that type of work and are ready to receive tile.
- B. Verify that wall surfaces are smooth and flat within the tolerances specified for that type of work, are dust-free, and are ready to receive tile.
- C. Cementitious Subfloor Surfaces: Verify that substrates are ready for tiling installation by testing for moisture and alkalinity (pH).
 - 1. Test as Follows:
 - a. Alkalinity (pH): ASTM F710.
 - b. Internal Relative Humidity: ASTM F2170.
 - 2. Obtain instructions if test results are not within limits recommended by tiling material manufacturer and setting material manufacturer.

3.2 PREPARATION

- D. Protect surrounding work from damage.
- E. Vacuum clean surfaces and damp clean.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- F. Seal substrate surface cracks with filler. Level existing substrate surfaces to acceptable flatness tolerances.
- G. Install backer board in accordance with ANSI A108.11 and board manufacturer's instructions. Tape joints and corners, cover with skim coat of setting material to a feather edge.

3.3 INSTALLATION – GENERAL

- H. Install tile, thresholds, and stair treads and grout in accordance with applicable requirements of ANSI A108.1a through ANSI A108.20, manufacturer's instructions, and TCNA (HB) recommendations.
- I. Lay tile to pattern indicated. Do not interrupt tile pattern through openings.
- J. Cut and fit tile to penetrations through tile, leaving sealant joint space. Form corners and bases neatly. Align floor joints.
- K. Place tile joints uniform in width, subject to variance in tolerance allowed in tile size. Make grout joints without voids, cracks, excess mortar or excess grout, or too little grout.
- L. Form internal angles square and external angles bullnosed.
- M. Install ceramic accessories rigidly in prepared openings.
- N. Sound tile after setting. Replace hollow sounding units.
- O. Keep control and expansion joints free of mortar, grout, and adhesive.
- P. Prior to grouting, allow installation to completely cure; minimum of 48 hours.
- Q. Grout tile joints unless otherwise indicated. Use standard grout unless otherwise indicated.
- R. At changes in plane and tile-to-tile control joints, use tile sealant instead of grout, with either bond breaker tape or backer rod as appropriate to prevent three-sided bonding.

3.4 INSTALLATION - FLOORS - THIN-SET METHODS

- S. Over interior concrete substrates, install in accordance with TCNA (HB) Method F113, dry-set or latex-Portland cement bond coat, with standard grout, unless otherwise indicated.
 - 1. Where waterproofing membrane is indicated, install in accordance with TCNA (HB) Method F122, with latex-Portland cement grout.

3.5 INSTALLATION - FLOORS - MORTAR BED METHODS

- T. Over interior concrete substrates, install in accordance with TCNA (HB) Method F111, with cleavage membrane, unless otherwise indicated.
- U. Cleavage Membrane: Lap edges and ends.
- V. Mortar Bed Thickness: 5/8 inch (15.9 mm), unless otherwise indicated.

3.6 INSTALLATION - SHOWERS AND BATHTUB WALLS

- W. At bathtub walls install in accordance with TCNA (HB) Method B412, over cementitious backer units with waterproofing membrane.
- X. Grout with standard grout as specified above.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

3.7 INSTALLATION - WALL TILE

- Y. Over cementitious backer units on studs, install in accordance with TCNA (HB) Method W244, using membrane at toilet rooms.
- Z. Over metal studs without backer install in accordance with TCNA (HB) Method W241, mortar bed, with membrane where indicated.

3.8 CLEANING

- AA. Clean tile and grout surfaces.
 - a. Remove grout residue from tile as soon as possible.
 - b. Remove temporary protective coating by method recommended by coating manufacturer that is acceptable to brick and grout manufacturer. Trap and remove coating to prevent it from clogging drains.
- 2. Finished Tile Work: Leave finished installation clean and free of cracked, chipped, broken, unbonded, and otherwise defective tile work.
- 3. Provide final protection and maintain conditions, in a manner acceptable to manufacturer and Installer, that ensure tile is without damage or deterioration at the time of Substantial Completion.
 - a. When recommended by tile manufacturer, apply a protective coat of neutral protective cleaner to completed tile walls and floors. Protect installed tile work with kraft paper or other heavy covering during construction period to prevent staining, damage, and wear.
- 4. Before final inspection, remove protective coverings and rinse neutral cleaner from tile surfaces.

3.9 PROTECTION

- BB. Do not permit traffic over finished floor surface for 4 days after installation.

CC. FLOOR TILE INSTALLATION SCHEDULE

- 1. Tile Floor Installation: For interior floor installations of this designation, comply with the following:
 - a. Installation Method: TCNA F122 (thin-set mortar bonded to waterproof membrane over concrete slab).
 - b. Setting Bed and Grout: ANSI A108.5 with the following mortar and grout:
 - 1) Latex-portland cement mortar, ANSI A118.4.
 - 2) Epoxy grout, ANSI A118.3, color as indicated.

DD. WALL TILE INSTALLATION SCHEDULE

- 1. Tile Wall Installations CTWI-243: For interior wall installations of this designation, comply with the following:
 - a. Tile Type/Products: Refer to Finish Legend on Drawings.
 - b. Installation Method: TCNA W243 (thin-set bonded to gypsum board on metal studs).
 - c. Setting Bed and Grout: ANSI A118.4 with the following mortar and grout:
 - 1) Latex-portland cement mortar.
 - 2) Sanded, clear-sealed Grout, ANSI A118.3, color as indicated.

END OF SECTION 093000

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 095100 - ACOUSTICAL CEILINGS

PART 1 GENERAL

1.1 SECTION INCLUDES

- A. Suspended metal grid ceiling system.
- B. Acoustical units.

1.2 RELATED REQUIREMENTS

- C. Section 072100 - Thermal Insulation: Acoustical insulation.

1.3 REFERENCE STANDARDS

- D. ASCE 7 - Minimum Design Loads and Associated Criteria for Buildings and Other Structures Most Recent Edition Cited by Referring Code or Reference Standard.
- E. ASTM C635/C635M - Standard Specification for Manufacture, Performance, and Testing of Metal Suspension Systems for Acoustical Tile and Lay-in Panel Ceilings 2022.
- F. ASTM C636/C636M - Standard Practice for Installation of Metal Ceiling Suspension Systems for Acoustical Tile and Lay-In Panels 2019.
- G. ASTM E119 - Standard Test Methods for Fire Tests of Building Construction and Materials 2022.
- H. ASTM E580/E580M - Standard Practice for Installation of Ceiling Suspension Systems for Acoustical Tile and Lay-in Panels in Areas Subject to Earthquake Ground Motions 2022.
- I. ASTM E1264 - Standard Classification for Acoustical Ceiling Products 2023.
- J. CHPS (HPPD) - High Performance Products Database Current Edition.
- K. ITS (DIR) - Directory of Listed Products Current Edition.
- L. UL (FRD) - Fire Resistance Directory Current Edition.
- M. UL (GGG) - GREENGUARD Gold Certified Products Current Edition.

1.4 ADMINISTRATIVE REQUIREMENTS

- N. Sequence work to ensure acoustical ceilings are not installed until building is enclosed, sufficient heat is provided, dust generating activities have terminated, and overhead work is completed, tested, and approved.
- O. Do not install acoustical units until after interior wet work is dry.

1.5 SUBMITTALS

- P. See Section 013300 - Administrative Requirements for submittal procedures.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- Q. Shop Drawings: Indicate grid layout and related dimensioning.
- R. Product Data: Provide data on suspension system components and acoustical units.
- S. Samples for Verification: Full-size units of each type of ceiling assembly indicated; in sets for each color, texture, and pattern specified, showing the full range of variations expected in these characteristics.
 - 1. 6-inch-(150-mm-) square samples of each acoustical panel type, pattern, and color.
 - 2. Set of 12-inch-(300-mm-) long samples of exposed suspension system members, including moldings, for each color and system type required
- T. Evaluation Service Reports: Show compliance with specified requirements.
- U. Designer's qualification statement.
- V. Manufacturer's qualification statement.
- W. Maintenance Materials: Furnish the following for Owner's use in maintenance of project.
 - 1. See Section 016000 - Product Requirements, for additional provisions.
 - 2. Extra Acoustical Units: Quantity equal to 5 percent of total installed.

1.6 QUALITY ASSURANCE

- X. Designer Qualifications for Seismic Design: Perform under direct supervision of a Professional Structural Engineer experienced in design of this work and licensed at the State in which the Project is located.
- Y. Suspension System Manufacturer Qualifications: Company specializing in manufacturing the products specified in this section with minimum three years documented experience.
- Z. Acoustical Unit Manufacturer Qualifications: Company specializing in manufacturing the products specified in this section with minimum three years documented experience.

1.7 FIELD CONDITIONS

- AA. Maintain uniform temperature of minimum 60 degrees F (16 degrees C), and maximum humidity of 40 percent prior to, during, and after acoustical unit installation.

PART 2 PRODUCTS

2.1 MANUFACTURERS

- A. Acoustic Tiles/Panels:
 - 1. REFER TO INTERIOR FINISH MATERIAL LEGEND ID1.01
 - a. No substitutions
- B. Suspension Systems:
 - 1. Armstrong World Industries, Inc: www.armstrongceilings.com/#sle.
 - 2. Substitution to be approved by Architect.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

2.2 PERFORMANCE REQUIREMENTS

- C. Fire-Resistance Rating: Determined in accordance with test procedures in ASTM E119 and complying with the following:
- D. Seismic Performance: Ceiling systems designed to withstand the effects of earthquake motions determined according to ASCE 7 for Seismic Design Category D, E, or F.

2.3 ACOUSTICAL UNITS

- E. Acoustical Units - General: ASTM E1264, Class A.
 - 1. VOC Content: Certified as Low Emission by one of the following:
 - a. Product listing in UL (GGG).
 - b. Product listing in CHPS (HPPD).
- F. Acoustical Panels: Painted mineral fiber, with the following characteristics:
 - 1. Classification: ASTM E1264 Type III.
 - a. Form: 2, water felted.
 - 2. Size: 24 by 24 inches (610 by 610 mm).
 - 3. Thickness: 1 inch
 - 4. Panel Edge: Square.
 - 5. Suspension System: Exposed grid.
 - 6. Products:
 - REFER TO ARCHITECTURAL DRAWINGS
- G. Metal Suspension Systems - General: Complying with ASTM C635/C635M; die cut and interlocking components, with perimeter moldings, hold down clips, stabilizer bars, clips, and splices as required.
- H. Metal Suspension Systems - General: Complying with ASTM C635/C635M; die cut and interlocking components, with perimeter moldings, hold down clips, stabilizer bars, clips, and splices as required.
- I. GASKET METAL SUSPENSION SYSTEM
 - 1. Wide Face as defined by ASTM C635; G30 Hot dipped galvanized double-web design; Exposed flange with pre-painted roll-formed steel cap; cross tee holes and hanger wire holes at 6 in oc; integral reversible splices; with closed-cell foam gaskets. Cross tee: Hot dipped galvanized roll-formed into double-web design with rectangular bulb; flange with pre-painted roll formed steel cap; Stainless Steel clips clenched to the web Main tees and cross tees shall be positively locked yet shall be removable without the use of tools.
 - 2. Suspension System Attachment devices.
 - a. Hanger Wire: Galvanized carbon steel; soft temper; pre-stretched; yield stress load at least three times the design load but not less than 12-gauge
 - 3. Accessories
 - a. Wall molding: Inside Corner: Field-mitered joints at wall molding. Prefabricated corner cap; formed to 90° angle; hemmed edge; size and finish to match wall molding.
Outside Corner: Prefabricated corner cap; formed to 90° angle; hemmed edge; size and finish to match wall molding.
 - b. Channel Molding: U-shape; aluminum; pre-finished exposed surface to match suspension system components; hemmed edges.
 - 4. U mold with closed cell foam gasket.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

2.4 ACCESSORIES

- J. Support Channels and Hangers: Galvanized steel; size and type to suit application, seismic requirements, and ceiling system flatness requirement specified.
- K. Hanger Wire: 12 gauge, 0.08 inch (2 mm) galvanized steel wire.
- L. Hold-Down Clips: Manufacturer's standard clips to suit application.
 - 1. Provide hold-down clips on acoustical panels within 20 feet of an exterior door.
- M. Seismic Clips: Manufacturer's standard clips for seismic conditions and to suit application.
- N. Perimeter Moldings: Same metal and finish as grid.
- O. Gypsum Board: Fire rated type; 5/8 inch (16 mm) thick, ends and edges square, paper faced.
- P. Touch-up Paint: Type and color to match acoustical and grid units.

PART 3 EXECUTION

3.1 EXAMINATION

- A. Verify existing conditions before starting work.
- B. Verify that layout of hangers will not interfere with other work.

3.2 PREPARATION

- C. Install after major above-ceiling work is complete.
- D. Coordinate the location of hangers with other work.

3.3 INSTALLATION - SUSPENSION SYSTEM

- E. Install suspension system in accordance with ASTM C636/C636M, ASTM E580/E580M, and manufacturer's instructions and as supplemented in this section.
- F. Rigidly secure system, including integral mechanical and electrical components, for maximum deflection of 1:360.
- G. Lay out system to a balanced grid design with edge units no less than 50 percent of acoustical unit size.
- H. Perimeter Molding: Install at intersection of ceiling and vertical surfaces and at junctions with other interruptions.
 - 1. Use longest practical lengths.
- I. Suspension System, Non-Seismic: Hang suspension system independent of walls, columns, ducts, pipes and conduit. Where carrying members are spliced, avoid visible displacement of face plane of adjacent members.
- J. Seismic Suspension System, Seismic Design Categories D, E, F: Hang suspension system with grid ends attached to the perimeter molding on two adjacent walls; on opposite walls, maintain a 3/4 inch (19 mm) clearance between grid ends and wall.
- K. Where ducts or other equipment prevent the regular spacing of hangers, reinforce the nearest affected hangers and related carrying channels to span the extra distance.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- L. Do not support components on main runners or cross runners if weight causes total dead load to exceed deflection capability.
- M. Support fixture loads using supplementary hangers located within 6 inches (152 mm) of each corner, or support components independently.
- N. Do not eccentrically load system or induce rotation of runners.
- O. Install light fixture boxes constructed of gypsum board above light fixtures in accordance with fire rated assembly requirements and light fixture ventilation requirements.

3.4 INSTALLATION - ACOUSTICAL UNITS

- P. Install acoustical units in accordance with manufacturer's instructions.
- Q. Fit acoustical units in place, free from damaged edges or other defects detrimental to appearance and function.
- R. Fit border trim neatly against abutting surfaces.
- S. Install acoustical units level, in uniform plane, and free from twist, warp, and dents.
- T. Cutting Acoustical Units:
 - 1. Make field cut edges of same profile as factory edges.
 - 2. Double cut and field paint exposed reveal edges.
- U. Where round obstructions occur, provide preformed closures to match perimeter molding.
- V. Lay acoustical insulation for a distance of 48 inches (1219 mm) either side of acoustical partitions as indicated.
- W. Install hold-down clips on each panel to retain panels tight to grid system; comply with fire rating requirements.
- X. Install hold-down clips on panels within 20 ft (6 m) of an exterior door.

3.5 TOLERANCES

- Y. Maximum Variation from Flat and Level Surface: 1/8 inch in 10 feet (3 mm in 3 m).
- Z. Maximum Variation from Plumb of Grid Members Caused by Eccentric Loads: 2 degrees.

3.6 CLEANING

- AA. See Section 017700 - Execution and Closeout Requirements for additional requirements.
- BB. Clean surfaces.
- CC. Replace damaged or abraded components.

END OF SECTION 095100

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 096500

RESILIENT FLOORING

PART 1 GENERAL

1.1 SECTION INCLUDES

- A. Resilient sheet flooring.
- B. Resilient tile flooring.
- C. Installation accessories.

1.2 RELATED REQUIREMENTS

- D. Section 090561 - Common Work Results for Flooring Preparation: Concrete slab moisture and alkalinity testing and remediation procedures.

1.3 REFERENCE STANDARDS

- E. ASTM F710 - Standard Practice for Preparing Concrete Floors to Receive Resilient Flooring 2022.
- F. ASTM F1066 - Standard Specification for Vinyl Composition Floor Tile 2004 (Reapproved 2018).
- G. ASTM F1303 - Standard Specification for Sheet Vinyl Floor Covering with Backing 2004 (Reapproved 2021).
- H. ASTM F1700 - Standard Specification for Solid Vinyl Floor Tile 2020.
- I. ASTM F1861 - Standard Specification for Resilient Wall Base 2021.
- J. ASTM F1869 - Standard Test Method for Measuring Moisture Vapor Emission Rate of Concrete Subfloor Using Anhydrous Calcium Chloride 2023.
- K. ASTM F1913 - Standard Specification for Vinyl Sheet Floor Covering Without Backing 2019.
- L. ASTM F2034 - Standard Specification for Sheet Linoleum Floor Covering 2018.
- M. ASTM F2170 - Standard Test Method for Determining Relative Humidity in Concrete Floor Slabs Using in situ Probes 2019a.
- N. RFCI (RWP) - Recommended Work Practices for Removal of Resilient Floor Coverings 2018.

1.4 SUBMITTALS

- O. See Section 013300 - Administrative Requirements for Submittal Procedures.
- P. Product Data: Provide data on specified products, describing physical and performance characteristics; including sizes, patterns and colors available; and installation instructions.
 - 1. Include scheduled manufacturer flooring adhesive as noted on the drawings.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- Q. Shop Drawings: Indicate seaming plans and floor patterns.
 - a. Identify each flooring type, colors and patterns, indicate layout of tile units and direction of tile patterns.
- R. Where more than one adhesive type is specified or otherwise required by flooring manufacturer, identify on shop drawings areas for each adhesive type
- S. Verification Samples: Submit two samples, 12 inch by 12 inch in size illustrating color and pattern for each resilient flooring product and rubber accessory specified.
 - 1. Identify each flooring type, colors and patterns, indicate layout of tile units and direction of tile patterns.
 - 2. Where more than one adhesive type is specified or otherwise required by flooring manufacturer, identify on shop drawings areas for each adhesive type.
- T. Where more than one adhesive type is specified or otherwise required by flooring manufacturer, identify on shop drawings areas for each adhesive type
Concrete Subfloor Test Report: Submit a copy of the moisture and alkalinity (pH) test reports.
- U. Certification: Prior to installation of flooring, submit written certification by flooring manufacturer and adhesive manufacturer that condition of subfloor is acceptable.
- V. Manufacturer's Qualification Statement.
- W. Installer's Qualification Statement.
- X. Maintenance Data: Include maintenance procedures, recommended maintenance materials, and suggested schedule for cleaning, stripping, and re-waxing.
- Y. Maintenance Materials: Furnish the following for Owner's use in maintenance of project.
 - 1. See Section 016000 - Product Requirements, for additional provisions.

1.5 QUALITY ASSURANCE

- Z. Manufacturer Qualifications: Company specializing in manufacturing specified flooring with minimum three years documented experience.
- AA. Installer Qualifications: Company specializing in installing specified flooring with minimum three years documented experience.
- BB. Testing Agency Qualifications: Independent firm specializing in performing concrete slab moisture testing and inspections of the type specified in this section.

1.6 DELIVERY, STORAGE, AND HANDLING

- CC. Upon receipt, immediately remove any shrink-wrap and check materials for damage and the correct style, color, quantity and run numbers.
- DD. Store all materials off of the floor in an acclimatized, weather-tight space.
- EE. Maintain temperature in storage area between 55 degrees F (13 degrees C) and 90 degrees F (72 degrees C).
- FF. Do not double stack pallets.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

1.7 FIELD CONDITIONS

GG. Store materials for not less than 48 hours prior to installation in area of installation at a temperature of 70 degrees F (21 degrees C) to achieve temperature stability. Thereafter, maintain conditions above 55 degrees F (13 degrees C).

PART 2 PRODUCTS

2.1 SHEET FLOORING

- A. Vinyl Sheet Flooring: Homogeneous without backing, with color and pattern throughout full thickness.
 - 1. Manufacturers:
 - a. REFER TO INTERIOR FINISH MATERIAL LEGEND A131
 - 1) No exceptions.
 - 2. Minimum Requirements: Comply with ASTM F1913.
 - 3. Thickness: 0.080 inch (2.0 mm) nominal.
 - 4. Seams: Heat welded.
 - a. Color: REFER TO INTERIOR FINISH MATERIAL LEGEND ID1.01
- B. Welding Rod: Solid bead in material compatible with flooring, produced by flooring manufacturer for heat welding seams, and in color matching field color.
- C. Installation Accessories
 - 1. Trowelable Leveling and Patching Compounds: Latex-modified, portland-cement-based formulation provided or approved by floor covering manufacturer for applications indicated.
 - 2. Adhesives:
 - a. Water-resistant type recommended by manufacturer to suit sheet vinyl floor covering and substrate conditions indicated.
 - b. Epoxy type recommended by floor covering manufacturer for use under convex, urethane, or high profile bed casters.
 - 3. Heat-Welding Bead: Solid-strand product of floor covering manufacturer for heat-welding seams.
 - a. Color: Refer to Finish Legend in drawings.
 - 4. Cove Strip: 1-inch-(25.4-mm-) radius support for integral flash cove base provided or approved by floor covering manufacturer.
 - 5. Metal Edge Cap Strips: Extruded aluminum with mill finish of width shown, of height required to protect exposed edge of sheet vinyl floor coverings, and in maximum available lengths to minimize running joints.
 - a. Locations: Square metal U.N.O:
 - 6. Adhesives and primers: Latex based, non-flammable in wet state, with NFPA, Class A rated, VOC compliant, as recommended by the resilient flooring manufacturer for the substrate and application intended
 - 7. Filler for patching, smoothing and leveling subfloors and underlayments: Portland cement-based latex underlayment acceptable to flooring manufacturer, equal to the following:
 - a. Ardex, Inc., products "Feather Flash" and "Ardex SD-P".
 - b. Quikrete Companies, product "Fast-Set Underlayment 1248".
 - c. Silpro Masonry Systems Inc., product "Profinish".
- D. Cleaning material: Domestic floor detergent, as recommended by the flooring manufacturer.
- E. Resilient Sheet Vinyl Cutting Method: Factory cut curved patterns by water-cut method. No other cutting method is acceptable.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

2.2 VINYL TILE FLOORING

- F. Vinyl Tile: Solid vinyl with color and pattern throughout thickness.
 - 1. Manufacturers:
 - a. REFER TO INTERIOR FINISH MATERIAL LEGEND on A131
 - 1) No exceptions.
 - 2. Minimum Requirements: Comply with ASTM F1700, of Class corresponding to type specified.
 - 3. Plank Tile Size: per drawing.
 - 4. Total Thickness: 0.125 inch (3 mm).
 - a. Color: REFER TO INTERIOR FINISH MATERIAL LEGEND on A131
- G. Installation Accessories
 - 1. Trowelable Leveling and Patching Compounds: Latex-modified, portland-cement-based formulation provided or approved by flooring manufacturer for applications indicated.
 - 2. Adhesives:
 - a. Water-resistant type recommended by manufacturer to suit resilient products and substrate conditions indicated.
 - 1) Volatile Organic Compound: Products shall comply with VOC limits indicated in Section 01 81 13.
 - 3. FABRICATION
 - a. Resilient Tile Cutting Method: Factory cut curved patterns by water jet method. No other cutting method is acceptable.

2.02 RESILIENT ACCESSORIES

- A. Description: Provide resilient accessories at the following locations: Ref Drawings (If applicable)
 - 1. Carpet edge for glue-down applications.
 - 2. Nosing for carpet.
 - 3. Nosing for resilient floor covering.
 - 4. Reducer strip for resilient floor covering.
 - 5. Reducer strip for resilient flooring to sealed concrete
 - 6. Ref to Interior Detail Sheet ID1.00a
- B. Acceptable Manufacturers: Subject to compliance with requirements provide products by one of the following:
 - a. Tarkett/Johnsonite
 - 2. Material: Rubber unless otherwise indicated.
 - 3. Adhesive: 946 Wall Base Adhesive.
- C. Profile and Dimensions: Unless otherwise indicated, products listed below are those of Johnsonite, or similar, and are listed as a minimum standard of quality

2.4 ACCESSORIES

- D. Subfloor Filler: White premix latex; type recommended by adhesive material manufacturer.
- E. Primers, Adhesives, and Seam Sealer: Waterproof; types recommended by flooring manufacturer.
 - 1. Ref. Interior Finish Material Legend on A131

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- F. Adhesive for Vinyl Flooring:
 - 1. Manufacturers:
 - a. H.B. Fuller Construction Products, Inc; TEC Flexera HT - High Tack Premium Universal PSA Adhesive: www.tecspecialty.com/#sle.
 - b. Loba-Wakol, LLC; WAKOL D 3120 PVC Adhesive: www.loba-wakol.com/#sle.
 - c. Others as recommended by flooring manufacturer.
- G. Filler for patching, smoothing and leveling subfloors and underlayments: Portland cement-based latex underlayment acceptable to flooring manufacturer, equal to the following
 - 1. Ardex, Inc., products "Feather Flash" and "Ardex SD-P".
 - 2. Quikrete Companies, product "Fast-Set Underlayment 1248".
 - 3. Silpro Masonry Systems Inc., product "Profinish".
- H. Transition and edge strips:
 - 1. To be determined by Architect or as indicated on the Drawings.
 - 2. General: Homogeneous vinyl, of profiles required for thickness of abutting materials.
 - 3. Edge strips: Tapered or bull nose edge.
 - 4. Colors: Match or contrast with the flooring, as selected by the Architect from standard colors available, of width shown on the drawings.

PART 3 EXECUTION

3.1 EXAMINATION

- A. Verify that surfaces are flat to tolerances acceptable to flooring manufacturer, free of cracks that might telegraph through flooring, clean, dry, and free of curing compounds, surface hardeners, and other chemicals that might interfere with bonding of flooring to substrate.
- B. Verify that wall surfaces are smooth and flat within the tolerances specified for that type of work, are dust-free, and are ready to receive resilient base.
- C. Cementitious Subfloor Surfaces: Verify that substrates are ready for resilient flooring installation by testing for moisture and alkalinity (pH).
 - 1. Test as Follows:
 - a. Alkalinity (pH): ASTM F710.
 - b. Internal Relative Humidity: ASTM F2170.
 - c. Moisture Vapor Emission: ASTM F1869.
 - 2. Obtain instructions if test results are not within limits recommended by resilient flooring manufacturer and adhesive materials manufacturer.
- D. Verify that required floor-mounted utilities are in correct location.

3.2 PREPARATION

- E. Remove existing resilient flooring and flooring adhesives; follow the recommendations of RFCI (RWP).
- F. Prepare floor substrates as recommended by flooring and adhesive manufacturers.
- G. Remove subfloor ridges and bumps. Fill minor low spots, cracks, joints, holes, and other defects with subfloor filler to achieve smooth, flat, hard surface.
- H. Prohibit traffic until filler is fully cured.
- I. Clean substrate.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- J. Apply primer as required to prevent "bleed-through" or interference with adhesion by substances that cannot be removed.

3.3 INSTALLATION – GENERAL

- K. Starting installation constitutes acceptance of subfloor conditions.
- L. Install in accordance with manufacturer's written instructions.
- M. Adhesive-Applied Installation:
 - 1. Spread only enough adhesive to permit installation of materials before initial set.
 - 2. Fit joints and butt seams tightly.
 - 3. Set flooring in place, press with heavy roller to attain full adhesion.
- N. Scribe flooring to walls, columns, cabinets, floor outlets, and other appurtenances to produce tight joints.

3.4 INSTALLATION - SHEET FLOORING

- O. Lay flooring with joints and seams parallel to longer room dimensions, to produce minimum number of seams. Lay out seams to avoid widths less than 1/3 of roll width; match patterns at seams.
 - 1. At sterile applications lay flooring with joints and seams to produce minimum number of seams possible.
- P. All sheet vinyl is to be procured from the same manufacturer dye lot. No exceptions will be taken.
- Q. Seal seams by heat welding where indicated.
- R. Install sheet vinyl using conventional full-spread method and heat welded seams. Application shall be performed by factory trained mechanics franchised by the manufacturer in accordance with the manufacturer's instructions, and using tools and techniques recommended by the flooring manufacturer.
- S. Unroll sheet vinyl floor coverings and allow them to stabilize before cutting and fitting, if recommended in writing by manufacturer.
- T. Lay out sheet vinyl floor coverings to comply with the following requirements:
 - 1. Maintain uniformity of sheet vinyl floor covering direction.
 - 2. Match edges of sheet vinyl floor coverings for color shading and pattern at seams according to manufacturer's written recommendations.
 - 3. Avoid cross seams.
- U. Scribe, cut, and fit sheet vinyl floor coverings to butt neatly and tightly to vertical surfaces and permanent fixtures, including built-in furniture, cabinets, pipes, outlets, edgings, door frames, thresholds, and nosings.
- V. Integral Flash Cove Base: Where indicated, cut sheet vinyl floor coverings to form integral base of height indicated in Interior Finish Legend.
- W. Extend sheet vinyl floor coverings into toe spaces, door reveals, closets, and similar openings.
- X. Install sheet vinyl floor coverings on covers for telephone and electrical ducts, and similar items in finished floor areas. Maintain overall continuity of color and pattern with pieces of flooring installed on covers. Tightly adhere edges to perimeter of floor around covers and to covers.
- Y. Adhere sheet vinyl floor coverings to flooring substrates to comply with floor covering manufacturer's written instructions, including those for trowel notching, adhesive mixing, and adhesive open and working times.
 - 1. Produce completed installation without open cracks, voids, raising and puckering at joints, telegraphing of adhesive spreader marks, and other surface imperfections.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

2. Form integral flash cove base by flashing floor covering up vertical surfaces. Support floor covering at horizontal and vertical junction with cove strip. Butt floor covering at top of base against cap strip.
3. Use a full spread epoxy adhesive in rooms scheduled to receive convex, urethane, or high-profile casters on beds. If approved by floor covering manufacturer, epoxy adhesive may be used only in an approximately 4 foot by 7 foot area where the bed is to be located.
- Z. Heat-Welded Seams: Rout joints and heat weld with welding bead, permanently fusing sections into a seamless floor covering. Prepare, weld, and finish seams according to manufacturer's written instructions and ASTM F 1516 to produce surfaces flush with adjoining floor covering surfaces.
- AA. Hand roll sheet vinyl floor coverings in both directions from center out to embed floor coverings in adhesive and eliminate trapped air. At walls, door casings, and other locations where access by roller is impractical, press floor coverings firmly in place with flat-bladed instrument.
- BB. Provide integral base where scheduled on Drawings or Finish Legend.
 1. Flash sheet vinyl flooring up the walls forming an integral coved base at wall surfaces. The height of the base at walls shall be 6 inches unless otherwise indicated on the drawings.
 2. Install continuous coved fillet strip behind sheet vinyl at the intersection of vertical surfaces and floor surfaces for walls and casework; cut, fit, and miter-weld at internal and external corners.
 3. Install continuous vinyl cap strip at top edge of sheet vinyl base at walls; securely fastened in place, with top edge of trim level, and with all trim joints mitered. Cap strip will not be required at underside of toe space.
 4. Install integral base at sides and at toe space of cabinets. The height of the integral base at casework shall match that of the toe space.
 5. All interior and exterior corners of the integral base shall be formed without hardware.
 6. Installation at outside corners fabricated to receive butterfly cut as shown on drawings. Heat welds at outside corners will not be accepted.

3.5 INSTALLATION – VINYL TILE FLOORING

- CC. Mix tile from container to ensure shade variations are consistent when tile is placed, unless otherwise indicated in manufacturer's installation instructions.
- DD. Lay flooring with joints and seams parallel to building lines to produce symmetrical pattern.
- EE. Install loose-laid tile using interlocking pins to secure tiles to each other.
- FF. Install plank tile pattern as noted in drawings.
- GG. General: Comply with vinyl tile manufacturer's written installation instructions.
- HH. Lay out tiles from center marks established with principal walls, discounting minor offsets, so tiles at opposite edges of room are of equal width. Adjust as necessary to avoid using cut widths that equal less than one-half of a tile at perimeter.
 1. Lay tiles square with room axis, unless otherwise indicated.
- II. Match tiles for color and pattern by selecting tiles from cartons in the same sequence as manufactured and packaged, if so numbered. Cut tiles neatly around all fixtures. Discard broken, cracked, chipped, or deformed tiles.
 1. Lay tiles in pattern of colors and sizes indicated on Drawings.
- JJ. Scribe, cut, and fit tiles to butt neatly and tightly to vertical surfaces and permanent fixtures, including built-in furniture, cabinets, pipes, outlets, edgings, door frames, thresholds, and nosings.
- KK. Extend tiles into toe spaces, door reveals, closets, and similar openings.
- LL. Maintain reference markers, holes, and openings that are in place or marked for future cutting by repeating on finish flooring as marked on sub-floor. Use chalk or other nonpermanent, non-staining marking device.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- MM. Install tiles on covers for telephone and electrical ducts, and similar items in finished floor areas. Maintain overall continuity of color and pattern with pieces of flooring installed on covers. Tightly adhere edges to perimeter of floor around covers and to covers.
- NN. Adhere tiles to flooring substrates using a full spread of adhesive applied to substrate to comply with tile manufacturer's written instructions, including those for trowel notching, adhesive mixing, and adhesive open and working times.
 - 1. Provide completed installation without open cracks, voids, raising and puckering at joints, telegraphing of adhesive spreader marks, and other surface imperfections.
- OO. Handroll tiles according to tile manufacturer's written instructions.

- PP. INSTALLATION OF ACCESSORIES
 - 1. Resilient edge and transition strips:
 - a. Install edge strips at all edges of flooring which would otherwise be exposed.
- QQ. Place resilient edge strips tightly butted to flooring and secure with adhesive recommended by the edge strip manufacturer

3.6 CLEANING

- RR. Remove excess adhesive from floor, base, and wall surfaces without damage.
- SS. Clean in accordance with manufacturer's written instructions.
 - 1. Protect resilient products against mars, marks, indentations, and other damage from construction operations and placement of equipment and fixtures during the remainder of construction period. Use protection methods indicated or recommended in writing by resilient product manufacturer.
 - a. Cover resilient products installed on floors and stairs with undyed, untreated building paper until inspection for Substantial Completion.

3.8 PROTECTION

- TT. Prohibit traffic on resilient flooring for 48 hours after installation.

END OF SECTION 096500

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 096513 – RESILIENT BASE AND ACCESSORIES

PART 1 - GENERAL

1.1 SUMMARY

- A. This Section includes the following:
 - 1. Resilient wall base.
 - 2. Resilient flooring accessories.
 - 3. Resilient carpet accessories.

1.2 RELATED REQUIREMENTS

- A. Drawings and general provisions of the Contract and Division 01 Specification Sections apply to this Section.
- B. Section 016000 - PRODUCT REQUIREMENTS: Listing of VOC requirements for adhesives, cleaning/maintenance materials, paints, coatings, and sealants.
- C. Section 017419 - CONSTRUCTION WASTE MANAGEMENT AND DISPOSAL: Procedural and administrative requirements for construction and demolition recycling.
- D. Section 015000 - TEMPORARY FACILITIES AND CONTROLS: Application of protection paper to finished resilient flooring.
- E. Section 090506 - COMMON WORK RESULTS FOR FLOORING: General requirements for flooring preparation, installation and temporary protection.
- F. Section 096516 - RESILIENT SHEET FLOORING: Sheet vinyl flooring and integral base.
- G. Section 096519 - RESILIENT TILE FLOORING: Vinyl composite tile flooring and accessories.
- H. Section 096813 – TILE CARPETING: Tile carpeting and transition strips.

1.3 REFERENCES

- A. Comply with applicable requirements of the following standards and those others referenced in this Section, under the provisions of Section 014200 - REFERENCES. Where these standards conflict with other specified requirements, the most restrictive requirements shall govern.
 - 1. ASTM E 84 - Surface Burning Characteristics of Building Materials
 - 2. ASTM F 1861 - Standard Specification for Resilient Wall Base.
 - 3. All applicable federal, state and municipal codes, laws and regulations regarding flammability and smoke generation of interior finishes.

1.4 ADMINISTRATIVE REQUIREMENTS

- A. Coordination
 - 1. General: Coordinate the work of this Section with the respective trades responsible for installing interfacing and adjoining work for proper sequence of installation and ensure that the work performed hereunder is acceptable to such trades for the installation of their work.
- B. Sequencing

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

1. Sequence work to ensure resilient flooring is not installed until building is enclosed, sufficient heat is provided, dust generating activities have terminated, wet work is dry and cured, and work overhead is completed.
2. Ensure that installation of flooring and accessories occurs after other finishing operations, including painting.

1.5 ACTION SUBMITTALS

- A. Information and Review Submittals: Submit the following under provisions of Section 013000 – ADMINISTRATIVE REQUIREMENTS:
 1. Product Data: Manufacturer's product data sheets, adhesive specifications, performance data, physical properties and installation instructions.
 2. Include certification of data indicating Volatile Organic Compound (VOC) content of all adhesives. Submit MSDS highlighting VOC limits.
 3. Samples for Verification: For each type of product & rubber transition indicated, in manufacturer's standard-size Samples but not less than 4 inches long, of each resilient product color, profile, texture, and pattern required.
 - a. Samples shall be clearly labeled with the manufacturer's name, type, variety, color, etc. Non-labeled Samples will be rejected.

1.6 QUALITY ASSURANCE

- A. Installer Qualifications: Engage an experienced installer to perform work of this Section who has specialized in installing resilient products similar to those required for this Project and with a record of successful in-service performance.
- B. Source Limitations: Obtain each type and color of product specified from one source with resources to provide products of consistent quality in appearance and physical properties without delaying the Work.
- C. Fire-Test-Response Characteristics: Provide products with the following fire-test-response characteristics as determined by testing identical products per test method indicated below by a testing and inspecting agency acceptable to authorities having jurisdiction.
 1. Critical Radiant Flux: 0.45 W/sq. cm or greater when tested per ASTM E 648.
 2. Smoke Density: Maximum specific optical density of 450 or less when tested per ASTM E 662.

1.7 DELIVERY, STORAGE, AND HANDLING

- A. Deliver products to Project site in manufacturer's original, unopened cartons and containers, each bearing names of product and manufacturer, Project identification, and shipping and handling instructions.
- B. Store products in dry spaces protected from the weather, with ambient temperatures maintained between 50 and 90 deg F (10 and 32 deg C).
- C. Move products into spaces where they will be installed at least 48 hours before installation, unless longer conditioning period is recommended in writing by manufacturer.

1.8 PROJECT CONDITIONS

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- A. Maintain a temperature of not less than 70 deg F (21 deg C) or more than 95 deg F (35 deg C) in spaces to receive resilient products for at least 48 hours before installation, during installation, and for at least 48 hours after installation, unless manufacturer's written recommendations specify longer time periods. After post-installation period, maintain a temperature of not less than 55 deg F (13 deg C) or more than 95 deg F (35 deg C).
- B. Do not install products until they are at the same temperature as the space where they are to be installed.
- C. For resilient products installed on traffic surfaces, close spaces to traffic during installation and for time period after installation recommended in writing by manufacturer.
- D. Coordinate resilient product installation with other construction to minimize possibility of damage and soiling during remainder of construction period. Install resilient products after other finishing operations, including painting, have been completed.

1.9 WARRANTY

- A. General: Submit warranties under provisions of Section 017800 - CLOSEOUT SUBMITTALS.
- B. Manufacturer Warranty:
 - 1. Resilient Base: Provide manufacturer's standard one year limited product warranty for resilient base materials.
 - 2. Adhesives: Provide manufacturer's limited product warranty for adhesion reliability.

1.10 EXTRA MATERIALS

- A. Furnish extra materials described below that match products installed, are packaged with protective covering for storage, and are identified with labels describing contents.
 - 1. Furnish not less than 10 linear feet (3 linear m) for each 500 linear feet (150 linear m) or fraction thereof, of each different type, color, pattern, and size of resilient product installed.
 - 2. Deliver extra materials to Owner.

PART 2 - PRODUCTS

2.1 MANUFACTURERS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. Refer to ID1.00 Finish Legend
 - a. No Exceptions

2.2 RESILIENT WALL BASE

- A. Rubber Wall Base: Products complying with FS SS-W-40, Type I; and ASTM F 1861, Type TS.
- B. Minimum Thickness: 0.125 inch (3.2 mm).
- C. Height: Refer to Finish Legend.
- D. Lengths: Coils in manufacturer's standard length.
- E. Outside Corners: Job formed – Style B
- F. Inside Corners: Job formed – Style B

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- G. Finish: Refer to Finish Legend.
- H. Colors and Patterns: Refer to ID1.00 Finish Legend.

2.3 RESILIENT ACCESSORIES

- A. Description: Provide resilient accessories at the following locations:
 - 1. Reducer strip for carpet to resilient floor covering.
 - 2. Reducer strip for carpet to concrete.
- B. Acceptable Manufacturers: Subject to compliance with requirements provide products by one of the following:
 - 1. Johnsonite.
- C. Material: Rubber unless otherwise indicated.
- D. Transition Profile and Dimensions: Unless otherwise indicated, products listed below are those of Johnsonite, or similar, and are listed as a minimum standard of quality.
 - 1. Carpet-to-Resilient Flooring: Refer to Drawings – Interior Details.
 - 2. Resilient-to-Sealed Concrete: Refer to Drawings – Interior Details.

2.4 INSTALLATION ACCESSORIES

- A. Trowelable Leveling and Patching Compounds: Latex-modified, portland-cement-based formulation provided or approved by resilient product manufacturer for applications indicated.
- B. Adhesives: Water-resistant type recommended by manufacturer to suit resilient products and substrate conditions indicated.

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine substrates, with Installer present, for compliance with requirements for maximum moisture content and other conditions affecting performance of the Work.
- B. Verify that finishes of substrates comply with tolerances and other requirements specified in other Sections and that substrates are free of cracks, ridges, depressions, scale, and foreign deposits that might interfere with adhesion of resilient products.
- C. Proceed with installation only after unsatisfactory conditions have been corrected.

3.2 PREPARATION

- A. Prepare substrates according to manufacturer's written instructions to ensure adhesion of resilient products.
- B. Concrete Substrates for Resilient Stair Treads and Accessories: Prepare according to ASTM F 710.
 - 1. Verify that substrates are dry and free of curing compounds, sealers, and hardeners.
 - 2. Remove substrate coatings and other substances that are incompatible with adhesives and that contain soap, wax, oil, or silicone, using mechanical methods recommended by manufacturer. Do not use solvents.
 - 3. Alkalinity and Adhesion Testing: Perform tests recommended by manufacturer.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

4. Moisture Testing: Perform tests recommended by manufacturer. Proceed with installation only after substrates pass testing.
- C. Fill cracks, holes, and depressions in substrates with trowelable leveling and patching compound and remove bumps and ridges to produce a uniform and smooth substrate.
- D. Do not install resilient products until they are same temperature as the space where they are to be installed.
 1. Move resilient products and installation materials into spaces where they will be installed at least 48 hours in advance of installation.
- E. Remove coatings, including curing compounds, and other substances that are incompatible with adhesives and that contain soap, wax, oil, or silicone, using mechanical methods recommended by manufacturer. Do not use solvents.
- F. Broom and vacuum clean substrates to be covered immediately before installing resilient products. After cleaning, examine substrates for moisture, alkaline salts, carbonation, or dust. Do not proceed with installation until unsatisfactory conditions have been corrected.

3.3 RESILIENT BASE INSTALLATION

- A. Comply with manufacturer's written instructions for installing resilient base.
- B. Apply resilient base to walls, columns, pilasters, casework and cabinets in toe spaces, and other permanent fixtures in rooms and areas where base is required.
- C. Install resilient base in lengths as long as practicable without gaps at seams and with tops of adjacent pieces aligned.
- D. Tightly adhere resilient base to substrate throughout length of each piece, with base in continuous contact with horizontal and vertical substrates.
- E. Do not stretch resilient base during installation.
- F. On masonry surfaces or other similar irregular substrates, fill voids along top edge of resilient base with manufacturer's recommended adhesive filler material.
- G. Job-Formed Corners:
 1. Outside Corners: Use straight pieces of maximum lengths possible. Form without producing discoloration (whitening) at bends.
 2. Inside Corners: Use straight pieces of maximum lengths possible.

3.4 RESILIENT ACCESSORY INSTALLATION

- A. Comply with manufacturer's written instructions for installing resilient accessories.
- B. Resilient Stair Accessories:
 1. Use stair-tread-nose filler to fill nosing substrates that do not conform to tread contours.
 2. Tightly adhere to substrates throughout length of each piece.
 3. For treads installed as separate, equal-length units, install to produce a flush joint between units.
- C. Resilient Molding Accessories: Butt to adjacent materials and tightly adhere to substrates throughout length of each piece. Install reducer strips at edges of carpet and resilient floor covering that would otherwise be exposed.

3.5 CLEANING AND PROTECTING

- A. Comply with manufacturer's written instructions for cleaning and protection of resilient products.
- B. Perform the following operations immediately after installing resilient products:
 1. Remove adhesive and other surface blemishes using cleaner recommended by resilient product manufacturers.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

2. Sweep or vacuum horizontal surfaces thoroughly.
 3. Do not wash resilient products until after time period recommended by resilient product manufacturer.
 4. Damp-mop or sponge resilient products to remove marks and soil.
- C. Protect resilient products against mars, marks, indentations, and other damage from construction operations and placement of equipment and fixtures during the remainder of construction period. Use protection methods indicated or recommended in writing by resilient product manufacturer.
1. Cover resilient products installed on floors and stairs with undyed, untreated building paper until inspection for Substantial Completion.
- D. Clean resilient products not more than 4 days before dates scheduled for inspections intended to establish date of Substantial Completion in each area of Project. Clean products according to manufacturer's written recommendations.

END OF SECTION 096513

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 096813 - TILE CARPETING

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. This Section includes modular, tufted carpet tile.

1.3 SUBMITTALS

- A. Product Data: For each type of product indicated & manufacturer adhesive. Include manufacturer's written data on physical characteristics, durability, and fade resistance. Include installation recommendations for each type of substrate.
- B. Samples: For each of the following products and for each color and texture required. Label each Sample with manufacturer's name, material description, color, pattern, and designation indicated on Drawings and in schedules.
 - 1. Carpet Tile: Full-size Sample.
 - a. Samples shall be clearly labeled with manufacturer's name, type, variety, color, etc. Non-labeled Samples will be rejected
 - 2. Exposed Edge, Transition, and other Accessory Stripping: 12-inch- (300-mm-) long Samples.
- C. Product Schedule: For carpet tile. Use same designations indicated on Drawings.
- D. Qualification Data: For Installer.
- E. Product Test Reports: Based on evaluation of comprehensive tests performed by a qualified testing agency.
- F. Maintenance Data: For carpet tiles to include in maintenance manuals. Include the following:
 - 1. Methods for maintaining carpet tile, including cleaning and stain-removal products and procedures and manufacturer's recommended maintenance schedule.
 - 2. Precautions for cleaning materials and methods that could be detrimental to carpet tile.
- G. Warranty: Special warranty specified in this Section.

1.4 QUALITY ASSURANCE

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- A. Installer Qualifications: An experienced installer who is certified by the Floor Covering Installation Board or who can demonstrate compliance with its certification program requirements.
- B. Fire-Test-Response Characteristics: Provide products with the critical radiant flux classification indicated in Part 2, as determined by testing identical products per ASTM E 648 by an independent testing and inspecting agency acceptable to authorities having jurisdiction.
- C. Mockups: Before installing carpet tile, build mockups to verify selections made under sample submittals and to demonstrate aesthetic effects and set quality standards for materials and execution.
 - 1. Approved mockups may become part of the completed Work if undamaged at time of Substantial Completion.
- D. Preinstallation Conference: Conduct conference at Project site to comply with requirements in Division 01 Section "Project Management and Coordination." Review methods and procedures related to carpet tile installation including, but not limited to, the following:
 - 1. Review delivery, storage, and handling procedures.
 - 2. Review ambient conditions and ventilation procedures.

1.5 DELIVERY, STORAGE, AND HANDLING

- A. Comply with CRI 104, Section 5, "Storage and Handling."

1.6 PROJECT CONDITIONS

- A. Comply with CRI 104, Section 7.2, "Site Conditions; Temperature and Humidity" and Section 7.12, "Ventilation."
- B. Environmental Limitations: Do not install carpet tiles until wet work in spaces is complete and dry, and ambient temperature and humidity conditions are maintained at the levels indicated for Project when occupied for its intended use.
- C. Do not install carpet tiles over concrete slabs until slabs have cured and are sufficiently dry to bond with adhesive and concrete slabs have pH range recommended by carpet tile manufacturer.
- D. Where demountable partitions or other items are indicated for installation on top of carpet tiles, install carpet tiles before installing these items.

1.7 WARRANTY

- A. Special Warranty for Carpet Tiles: Manufacturer's standard form in which manufacturer agrees to repair or replace components of carpet tile installation that fail in materials or workmanship within specified warranty period.
 - 1. Warranty does not include deterioration or failure of carpet tile due to unusual traffic, failure of substrate, vandalism, or abuse.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

2. Failures include, but are not limited to, more than 10 percent loss of face fiber, edge raveling, snags, runs, loss of tuft bind strength, dimensional stability, and delamination.
3. Warranty Period: 10 years from date of Substantial Completion.

1.8 EXTRA MATERIALS

- A. Furnish extra materials described below, before installation begins, that match products installed and that are packaged with protective covering for storage and identified with labels describing contents.
 1. Carpet Tile: Full-size units equal to 5 percent of amount installed for each type indicated, but not less than 10 sq. yd. (8.3 sq. m).

PART 2 - PRODUCTS

2.1 CARPET TILE

- A. Available Products: Subject to compliance with requirements, products that may be incorporated into the Work include, but are not limited to, the following:
 1. Manufacturers as specified in the Construction Documents. Reference ID1.00 Finish Legend
 - a. Color and Pattern: As selected by Architect from manufacturer's full range.
- B. Performance Characteristics: As follows:
 1. Critical Radiant Flux Classification: Not less than 0.22 W/sq. cm.
 2. Dry Breaking Strength: Not less than 100 lbf (445 N) per ASTM D 2646.
 3. Tuft Bind: Not less than 8 lbf (36 N) per ASTM D 1335.
 4. Delamination: Not less than 4 lbf/in. (18 N/mm) per ASTM D 3936.
 5. Dimensional Tolerance: Within 1/32 inch (0.8 mm) of specified size dimensions, as determined by physical measurement.
 6. Dimensional Stability: 0.2 percent or less per ISO 2551 (Aachen Test).
 7. Resistance to Insects: Comply with AATCC 24.
 8. Colorfastness to Crocking: Not less than 4, wet and dry, per AATCC 165.
 9. Colorfastness to Light: Not less than 4 after 60 AFU (AATCC fading units) per AATCC 16E.
 10. Antimicrobial Activity: Not less than 2-mm halo of inhibition for gram-positive bacteria; not less than 1-mm halo of inhibition for gram-negative bacteria; no fungal growth; per AATCC 174.
 11. Electrostatic Propensity: Less than 2.5 kV per AATCC 134.
 12. Environmental Requirements: Provide carpet tile that complies with testing and product requirements of Carpet and Rug Institute's "Green Label Plus" program.

2.2 INSTALLATION ACCESSORIES

- A. Trowelable Leveling and Patching Compounds: Latex-modified, hydraulic-cement-based formulation provided or recommended by carpet tile manufacturer.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- B. Adhesives: Water-resistant, mildew-resistant, nonstaining, pressure-sensitive type to suit products and subfloor conditions indicated, that complies with flammability requirements for installed carpet tile and is recommended by carpet tile manufacturer for releasable installation.
 - 1. VOC Limits: Provide adhesives with VOC content not more than 50 g/L when calculated according to 40 CFR 59, Subpart D (EPA method 24).

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine substrates, areas, and conditions, with Installer present, for compliance with requirements for maximum moisture content, alkalinity range, installation tolerances, and other conditions affecting carpet tile performance. Examine carpet tile for type, color, pattern, and potential defects.
- B. Concrete Subfloors: Verify that concrete slabs comply with ASTM F 710 and the following:
 - 1. Slab substrates are dry and free of curing compounds, sealers, hardeners, and other materials that may interfere with adhesive bond. Determine adhesion and dryness characteristics by performing bond and moisture tests recommended by carpet tile manufacturer.
 - 2. Subfloor finishes comply with requirements specified in Division 03 Section "Cast-in-Place Concrete" for slabs receiving carpet tile.
 - 3. Subfloors are free of cracks, ridges, depressions, scale, and foreign deposits.
- C. Proceed with installation only after unsatisfactory conditions have been corrected.

3.2 PREPARATION

- A. General: Comply with CRI 104, Section 6.2, "Site Conditions; Floor Preparation," and with carpet tile manufacturer's written installation instructions for preparing substrates indicated to receive carpet tile installation.
- B. Use trowelable leveling and patching compounds, according to manufacturer's written instructions, to fill cracks, holes, depressions, and protrusions in substrates. Fill or level cracks, holes and depressions 1/8 inch (3 mm) wide or wider and protrusions more than 1/32 inch (0.8 mm), unless more stringent requirements are required by manufacturer's written instructions.
- C. Remove coatings, including curing compounds, and other substances that are incompatible with adhesives and that contain soap, wax, oil, or silicone, without using solvents. Use mechanical methods recommended in writing by carpet tile manufacturer.
- D. Clean metal substrates of grease, oil, soil and rust, and prime if directed by adhesive manufacturer. Rough sand painted metal surfaces and remove loose paint. Sand aluminum surfaces, to remove metal oxides, immediately before applying adhesive.
- E. Broom and vacuum clean substrates to be covered immediately before installing carpet tile.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

3.3 INSTALLATION

- A. General: Comply with CRI 104, Section 14, "Carpet Modules," and with carpet tile manufacturer's written installation instructions.
- B. Installation Method: As recommended in writing by carpet tile manufacturer
- C. Maintain dye lot integrity. Do not mix dye lots in same area.
- D. Cut and fit carpet tile to butt tightly to vertical surfaces, permanent fixtures, and built-in furniture including cabinets, pipes, outlets, edgings, thresholds, and nosings. Bind or seal cut edges as recommended by carpet tile manufacturer.
- E. Extend carpet tile into toe spaces, door reveals, closets, open-bottomed obstructions, removable flanges, alcoves, and similar openings.
- F. Maintain reference markers, holes, and openings that are in place or marked for future cutting by repeating on finish flooring as marked on subfloor. Use nonpermanent, nonstaining marking device.
- G. Install pattern parallel to walls and borders.

3.4 CLEANING AND PROTECTION

- A. Perform the following operations immediately after installing carpet tile:
 - 1. Remove excess adhesive, seam sealer, and other surface blemishes using cleaner recommended by carpet tile manufacturer.
 - 2. Remove yarns that protrude from carpet tile surface.
 - 3. Vacuum carpet tile using commercial machine with face-beater element.
- B. Protect installed carpet tile to comply with CRI 104, Section 16, "Protection of Indoor Installations."
- C. Protect carpet tile against damage from construction operations and placement of equipment and fixtures during the remainder of construction period. Use protection methods indicated or recommended in writing by carpet tile manufacturer.

END OF SECTION 096813

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 099000 - PAINTING AND COATING - HEALTHCARE FACILITY GUIDE SPECIFICATION - SHERWIN-WILLIAMS

PART 1 GENERAL

1.1 SECTION INCLUDES

- A. Surface preparation.
- B. Interior painting and coating systems.
- C. Scope:
 - 1. Finish surfaces exposed to view, unless fully factory-finished and unless otherwise indicated, including the following:
 - a. Interior:
 - 1) Metal: Aluminum and galvanized.
 - 2) Metal, Galvanized: Ceilings and ductwork.
 - 3) Metal: Structural steel columns, joists, trusses, beams, miscellaneous and ornamental iron, structural iron, and ferrous metal.
 - 4) Wood: Walls, ceilings, doors, and trim.
 - 5) Drywall: Walls, ceilings, gypsum board, and similar items.

1.2 RELATED REQUIREMENTS

- D. Section 016116 - Volatile Organic Compound (VOC) Content Restrictions.
- E. Section 055000 - Metal Fabrications: Shop-primed items.

1.3 REFERENCE STANDARDS

- F. 40 CFR 59, Subpart D - National Volatile Organic Compound Emission Standards for Architectural Coatings; U.S. Environmental Protection Agency current edition.
- G. SSPC-SP 1 - Solvent Cleaning 2015, with Editorial Revision (2016).

1.4 SUBMITTALS

- H. See Section 013000 - Administrative Requirements for submittal procedures.
- I. Product Data: Provide complete list of products to be used, with the following information for each:
 - 1. Product characteristics.
 - 2. Surface preparation instructions and recommendations.
 - 3. Primer requirements and finish specification.
 - 4. Storage and handling requirements and recommendations.
 - 5. Application methods.
 - 6. Clean-up information.
- J. Samples: Submit four paper draw down samples, 8-1/2 by 11 inches (216 by 279 mm) in size, illustrating range of colors available for each finishing product specified.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

1. Samples shall be clearly labeled with the manufacturer's name, type, variety, color, etc. Non-labeled Samples will be rejected.
- K. Certification: By manufacturer that paints and finishes comply with VOC limits specified.
- L. Applicator's qualification statement.
- M. Maintenance Data: Submit coating maintenance manual including finish schedule showing where each product/color/finish was used, product technical data sheets, safety data sheets (SDS), care and cleaning instructions, touch-up procedures, repair of painted and finished surfaces, and color samples of each color and finish used.
- N. Maintenance Materials: Furnish the following for Owner's use in maintenance of project.
 1. See Section 016000 - Product Requirements for additional provisions.
 2. Extra Paint and Finish Materials: 1 gallon (4 L) of each color; from the same product run, store where directed.
 3. Label each container with color in addition to manufacturer's label.

1.5 QUALITY ASSURANCE

- O. Applicator Qualifications: Company specializing in performing the type of work specified with minimum 3 years experience and approved by manufacturer.

1.6 MOCK-UPS

- P. See Section 014000 - Quality Requirements for general requirements for mock-ups.
- Q. Provide one accent wall as directed by Architect to demonstrate color and finish.
- R. Provide door and frame assembly indicating paint color, texture, and finish.
- S. Locate where directed by Architect.
- T. Mock-up may remain as part of the work.

1.7 DELIVERY, STORAGE, AND HANDLING

- U. Deliver products to site in sealed and labeled containers; inspect to verify acceptability.
- V. Container Label: Include manufacturer's name, type of paint, product name, product code, color designation, VOC content, batch date, environmental handling, surface preparation, application, and use instructions.
- W. Paint Materials: Store at a minimum of 45 degrees F (7 degrees C) and a maximum of 90 degrees F (32 degrees C), in ventilated area, and as required by manufacturer's instructions.

1.8 FIELD CONDITIONS

- X. Do not apply materials when environmental conditions are outside the ranges required by manufacturer.
- Y. Follow manufacturer's recommended procedures for producing the best results, including testing of substrates, moisture in substrates, and humidity and temperature limitations.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

PART 2 PRODUCTS

2.1 MANUFACTURERS

- A. Basis of Design Products: Subject to compliance with requirements, provide Sherwin-Williams Company (The) products indicated; www.sherwin-williams.com/#sle.
1. Ref. ID1.00 Interior Finish Material Legend

2.2 PAINTINGS AND COATINGS

- A. Manufacturers Names: The following manufacturers are referred to in the paint schedules by use of shortened versions of their names, which are shown in parentheses:
1. Sherwin-Williams (SW)
 - a. **No Substitutions**
 - B. General:
 1. Provide factory-mixed coatings unless otherwise indicated.
 2. Do not reduce, thin, or dilute coatings or add materials to coatings unless specifically indicated in manufacturer's instructions.
 - C. Volatile Organic Compound (VOC) Content: Comply with Section 016116.
 - D. Accessory Materials: Provide primers, sealers, cleaning agents, cleaning cloths, sanding materials, and clean-up materials as required for final completion of painted surfaces.

2.3 PAINT SYSTEMS – INTERIOR

- E. Metal, Galvanized: Ceilings and ductwork. **(If applicable)**
- F. Metal: Structural steel columns, joists, trusses, beams, miscellaneous and ornamental iron, structural iron, and ferrous metal. **(If applicable)**
1. Latex Systems:
 - a. Eg-Shel/Satin Finish:
 - 1) 1st Coat: Sherwin-Williams Pro Industrial Pro-Cryl Universal Primer, B66-1310 Series: www.sherwin-williams.com/#sle.
(a) 5 mils wet, 2 mils dry per coat.
 - 2) 2nd and 3rd Coats: Sherwin-Williams Pro Industrial Acrylic Gloss, B66-600 Series: www.sherwin-williams.com/#sle.
(a) 2 to 4 mils dry per coat.
 2. Alkyd Systems, Water Based:
 - a. Semi-Gloss Finish:
 - 1) 1st Coat: Sherwin-Williams Pro Industrial Pro-Cryl Universal Primer, B66-1310 Series: www.sherwin-williams.com/#sle.
(a) 5 mils wet, 2 mils dry per coat.
 - 2) 2nd and 3rd Coat: Sherwin-Williams Pro Industrial Water Based Alkyd Urethane Enamel Semi-Gloss, B53-1150 Series: www.sherwin-williams.com/#sle.
(a) 4 to 5 mils wet, 1.4 to 1.7 mils dry per coat.
 3. Epoxy Systems, Water Based:
 - a. Semi-gloss Finish:
 - 1) 1st Coat: Sherwin-Williams Pro Industrial Pro-Cryl Universal Primer, B66-1310 Series: www.sherwin-williams.com/#sle.
(a) 5 mils wet, 2 mils dry per coat.

**Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL**

Copyright 2026, Vero Architecture

- 2) 2nd and 3rd Coat: Sherwin-Williams Pro Industrial Pre-Catalyzed Waterbased Epoxy, K46 Series: www.sherwin-williams.com/#sle.
 - (a) 4 mils wet, 1.5 mils dry per coat.
- G. Drywall: Walls, ceilings, gypsum board, and similar items.
 1. Gypsum Board, Eg-shel, Latex-Based Acrylic-Enamel, Low VOC: 2 finish coats over a primer.
 - a. Sherwin Williams
 - 1) Primer: Roller applied latex texturing compound, ProMar 200 Zero VOC Latex Primer, B28W2600.
 - 2) Second Coat: ProMar 200 Zero VOC Latex Eg-Shel B20-Series, 1.7 mils dry.
 - 3) Third Coat: Same as second coat.
 2. Gypsum Board, Flat, Latex-Based Acrylic-Enamel, Low VOC: 2 finish coats over a primer.
 - a. Sherwin Williams
 - 1) Primer: Roller applied latex texturing compound, ProMar 200 Zero VOC Latex Primer, B28W2600.
 - 2) Second Coat: ProMar 200 Zero VOC Latex Flat B30-Series, 1.7 mils dry.
 - 3) Third Coat: Same as second coat.
 3. Gypsum Board, Semi-Gloss, Latex-Based Acrylic-Enamel, Low VOC: 2 finish coats over a primer.
 - a. Sherwin Williams
 - 1) Primer: Roller applied latex texturing compound, ProMar 200 Zero VOC Latex Primer, B28W2600.
 - 2) Second Coat: ProMar 200 Zero VOC Latex Flat B31-Series, 1.7 mils dry.
 - 3) Third Coat: Same as second coat.
- H. Epoxy Systems; Waterbased:
 1. Gypsum Board, Eg-Shel, Epoxy, Low VOC: 2 finish coats over a primer.
 - a. Sherwin Williams
 - 1) Primer: Roller applied latex texturing compound, ProMar 200 Zero VOC Latex Primer, B28W2600.
 - 2) Second Coat: Pro Industrial Catalyzed Water Based Epoxy Eg-Shel, B73-300 / B73V00300 Series, 3.0 mils DFT.
 - 3) Third Coat: Same as second coat.
- B. Ferrous Metal, Waterbased Enamel, Semi-Gloss, Low VOC: 2 finish coats over a primer. Wherever wall surfaces are scheduled to receive Waterbased Enamel paint, paint doors and frames within the wall with Waterbased Enamel.
 1. Gypsum Board, Semi-Gloss, Epoxy, Low VOC: 2 finish coats over a primer
 - a. Sherwin Williams
 - 1) Primer: Roller applied latex texturing compound, ProMar 200 Zero VOC Latex Primer, B28W2600.
 - 2) Second Coat: Pro Industrial Pre-Catalyzed Water Based Epoxy Eg-Shel, K46-1150/2150 Series, 3.0 mils DFT.
 - 3) Third Coat: Same as second coat.

PART 3 EXECUTION

3.1 EXAMINATION

- A. Verify that surfaces are ready to receive work as instructed by the product manufacturer.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- B. Examine surfaces scheduled to be finished prior to commencement of work. Report any condition that may potentially affect proper application.
- C. Test shop-applied primer for compatibility with subsequent cover materials.

3.2 PREPARATION

- D. Clean surfaces thoroughly and correct defects prior to application.
- E. Prepare surfaces using the methods recommended by the manufacturer for achieving the best result for the substrate under the project conditions.
- F. Remove mildew from impervious surfaces by scrubbing with solution of water and bleach. Rinse with clean water and allow surface to dry.
- G. Gypsum Board: Fill minor defects with filler compound; sand smooth and remove dust prior to painting.
- H. Ferrous Metal:
 - 1. Solvent clean according to SSPC-SP 1.
 - 2. Shop-Primed Surfaces: Sand and scrape to remove loose primer and rust. Feather edges to make touch-up patches inconspicuous. Prime bare steel surfaces.

3.3 APPLICATION

- I. Remove unfinished louvers, grilles, covers, and access panels on mechanical and electrical components and paint separately.
- J. Apply products in accordance with manufacturer's written instructions.
- K. Apply coatings at spread rate required to achieve manufacturer's recommended dry film thickness.

3.4 PRIMING

- L. Apply primer to all surfaces unless specifically not required by coating manufacturer. Apply in accordance with coating manufacturer's instructions.
- M. Primers specified in painting schedules may be omitted on factory primed or factory finished items, if acceptable to top coat manufacturers.

3.5 CLEANING

- N. Collect waste material that could constitute a fire hazard, place in closed metal containers, and remove daily from site.
- O. Clean surfaces immediately of overspray, splatter, and excess material.
- P. After coating has cured, clean and replace finish hardware, fixtures, and fittings previously removed.

3.6 PROTECTION

- Q. Protect finished coatings from damage until completion of project.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

R. Touch-up damaged finishes after Substantial Completion.

END OF SECTION 099000

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 102600

WALL AND DOOR PROTECTION

PART 1 GENERAL

1.1 SECTION INCLUDES

- A. Corner guards.
- B. Protective wall covering.
- C. Bumper Rails

1.2 RELATED REQUIREMENTS

- D. Section 061000 - Rough Carpentry: Blocking for wall and corner guard anchors.
- E. Section 092116 - Gypsum Board Assemblies: Placement of supports in stud wall construction.
- F. Section 092216 - Non-Structural Metal Framing: Placement of supports in stud wall construction.

1.3 REFERENCE STANDARDS

- G. ADA Standards - 2010 ADA Standards for Accessible Design 2010.
- H. ASTM D256 - Standard Test Methods for Determining the Izod Pendulum Impact Resistance of Plastics 2023, with Editorial Revision.
- I. ASTM E84 - Standard Test Method for Surface Burning Characteristics of Building Materials 2023b.
- J. ASTM E119 - Standard Test Methods for Fire Tests of Building Construction and Materials 2022.
- K. ASTM F476 - Standard Test Methods for Security of Swinging Door Assemblies 2023.
- L. ASTM G21 - Standard Practice for Determining Resistance of Synthetic Polymeric Materials to Fungi 2015, with Editorial Revision (2021).

1.4 SUBMITTALS

- M. See Section 013000 - Administrative Requirements for submittal procedures.
- N. Product Data: Indicate physical dimensions, features, wall mounting brackets with mounted measurements, anchorage details, and rough-in measurements.
- O. Shop Drawings: Include plans, elevation, sections, and attachment details. Show design and spacing of supports for protective corridor handrails, required to withstand structural loads.
- P. Samples: Submit samples illustrating component design, configurations, joinery, color and finish.
 - 1. Submit two sections of corner guards, 24 inches (610 mm) long.
 - 2. Submit two samples of protective wall covering and door surface protection, 6 by 6 inches (152 by 152 mm) square.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- Q. Warranty Documentation: Submit manufacturer warranty and ensure that forms have been completed in Owner's name and registered with manufacturer.
- R. Maintenance Materials: Furnish the following for Owner's use in maintenance of project:
 - 1. See Section 016000 - Product Requirements, for additional provisions.
 - 2. Extra Stock Materials: One package(s) of minimum 96 inches (2438 mm) long unit of each kind of covers for corner guards, bumper rails, and protective corridor handrails.

1.5 DELIVERY, STORAGE, AND HANDLING

- S. Deliver wall and door protection items in original, undamaged protective packaging. Label items to designate installation locations.
- T. Protect work from moisture damage.
- U. Protect work from UV light damage.
- V. Do not deliver products to project site until areas for storage and installation are fully enclosed, and interior temperature and humidity are in compliance with manufacturer's recommendations for each type of item.
- W. Store products in either horizontal or vertical position, in compliance with manufacturer's instructions.

1.6 WARRANTY

- X. See Section 017800 - Closeout Submittals for additional warranty requirements.
- Y. Manufacturer Warranty: Provide 5-year manufacturer warranty for metal crash rails. Complete forms in Owner's name and register with manufacturer.
 - 1. Failures include, but are not limited to, the following:
 - a. Structural failures or internal connection failures.
 - b. Deterioration of materials beyond that expected of normal use, as intended by manufacturer.
- Z. Installer Warranty: Provide 5-year warranty for metal crash rails commencing on Date of Substantial Completion. Complete forms in Owner's name and register with installer.

PART 2 PRODUCTS

2.1 MANUFACTURERS

- A. Corner Guards, End Guard and Protective Wall Panels:
 - 1. Ref, Interior Finish Material Legend ID1.00
 - a. Substitutions: See Section 016000 - Product Requirements.
- B. Protective Wall Covering:
 - 1. Ref, Interior Finish Material Legend ID1.00
 - a. Substitutions: See Section 016000 - Product Requirements.
- C. Wall Guards / Bumper Rails
 - 1. Ref, Interior Finish Material Legend ID1.00
 - a. Substitutions: See Section 016000 - Product Requirements.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

2.2 PERFORMANCE CRITERIA

- D. Impact Strength: Unless otherwise noted, provide protection products and assemblies that have been successfully tested for compliance with applicable provisions of ASTM D256 and/or ASTM F476.
- E. Fungal Resistance: Unless otherwise noted, provide protection products and assemblies which pass ASTM G21 testing.

2.3 PRODUCT TYPES

- F. Corner Guards - Flush Mounted:
 - 1. Surface-Mounted, Resilient, Plastic Corner Guards: Assembly consisting of snap-on plastic cover installed over continuous retainer; including mounting hardware; fabricated with 90- or 135-degree turn to match wall condition.
 - a. Cover: Extruded rigid plastic, minimum 0.100-inch (2.5-mm) wall thickness; in dimensions and profiles indicated on Drawings.
 - 1) Height: full height of wall.
 - 2) Color and Texture: As selected by Architect from manufacturer's full range.
 - 2. Retainer: Minimum 0.060-inch- (1.5-mm-) thick, one-piece, **extruded regrind retainer**.
 - 3. Retainer Clips: Manufacturer's standard impact-absorbing clips.
 - 4. Top and Bottom Caps: Prefabricated, injection-molded plastic; color matching cover; field adjustable for close alignment with snap-on cover
- G. Protective Wall Panels:
 - 1. Extruded Rigid Plastic: Textured, chemical- and stain-resistant, high-impact-resistant, PVC or acrylic-modified vinyl plastic; thickness as indicated; with a minimum impact resistance of 25.4 ft-lbf/in.(1356 J/m) of width when tested according to ASTM D 256, Test Method A.
 - a. Color and Texture: Refer to ID1.00 Finish Legend.
 - 2. Plastic Sheet Wall Covering Material: Semi-rigid, textured, chemical- and stain-resistant, high-impact-resistant, PVC or acrylic-modified vinyl plastic sheet; thickness as indicated; with a minimum impact resistance of 25.4 ft-lbf/in. (1356 J/m) of width when tested according to ASTM D 256, Test Method A.
 - a. Color and Texture: Refer to ID1.00 Finish Legend
- H. Wall Guards / Bumper Rails
 - 1. Bumper-Rail-Type Wall Guards: Continuous, snap-on-type plastic cover installed over a continuous aluminum retainer mounted at height indicated.
 - a. Cover: Extruded, rigid plastic, minimum 0.078 inch(2.0 mm) thick, in dimensions and profiles indicated in Finish Legend.
 - b. Retainer: Continuous, one-piece, extruded-aluminum retainer; minimum 0.072 inch(1.83 mm) thick.
 - 1) Mounting Type: Surface mounted flush on wall.
 - c. Accessories: Provide prefabricated, injection-molded end caps and inside and outside corners with concealed splices, cushions, mounting hardware, and other accessories as required.
 - 2. End caps and inside and outside corners shall match plastic cover color and shall be field adjustable for close alignment with snap-on plastic covers.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

2.4 FABRICATION

- I. Fabricate components with tight joints, corners and seams.
- J. Preassemble components in the shop to greatest extent possible to minimize field assembly. Disassemble only as necessary for shipping and handling.
- K. Fabricate components with tight seams and joints with exposed edges rolled. Provide surfaces free of wrinkles, chips, dents, uneven coloration, and other imperfections. Fabricate members and fittings to produce flush, smooth, and rigid hairline joints.
- L. Brackets, Flanges, Fittings, and Anchors: Provide wall brackets, flanges, miscellaneous fittings, and anchors for interconnecting members to other construction.
- M. Provide inserts and other anchoring devices for connecting components to concrete or masonry. Fabricate anchoring devices to withstand imposed loads. Coordinate anchoring devices with the supporting structure.

PART 3 EXECUTION

3.1 EXAMINATION

- A. Verify that rough openings, concealed blocking, and anchors are correctly sized and located.
- B. Verify that field measurements are as indicated on drawings.
- C. Start of installation constitutes acceptance of project conditions.

3.2 INSTALLATION

- D. Position protective wall covering no less than 1 inch (25.4 mm) above finished floor to allow for floor level variation.
 - 1. Apply adhesive with 1/8 inch (3.2 mm) V-notch trowel to an area of wall surface that can be completed within cure time of the adhesive.
 - 2. Install trim pieces as required for a complete installation. Allow tolerance for thermal movement.
 - 3. At joints indicated to be caulked, allow for a minimum 1/16 inch (1.6 mm) wide gap between edges of sheets. Gaps are required to be of consistent width throughout the project.
 - 4. Use a roller to ensure maximum contact with adhesive.
 - 5. At inside and outside corners cut covering sheets to facilitate installation of trim pieces or corner guards.

3.3 TOLERANCES

- E. Maximum Variation From Required Height: 1/4 inch (6 mm).
- F. Maximum Variation From Level or Plane For Visible Length: 1/4 inch (6 mm).

3.4 CLEANING

- G. See Section 017700 - Construction Waste Management and Disposal, for additional requirements.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

H. Clean wall and door protection items of excess adhesive, dust, dirt, and other contaminants.

END OF SECTION

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 102800 – TOILET, BATH AND LAUNDRY

PART 1 - GENERAL

1.1 SECTION INCLUDES

- A. Commercial toilet accessories.
- B. Commercial shower and bath accessories.
- C. Institutional ligature-resistant toilet accessories.

1.2 REFERENCE STANDARDS

- D. ADA Standards - 2010 ADA Standards for Accessible Design 2010.
- E. ASTM A666 - Standard Specification for Annealed or Cold-Worked Austenitic Stainless Steel Sheet, Strip, Plate, and Flat Bar 2023.
- F. ASTM C1036 - Standard Specification for Flat Glass 2021.
- G. ASTM C1503 - Standard Specification for Silvered Flat Glass Mirror 2018.
- H. ASTM C1822 - Standard Specification for Insulating Covers on Accessible Lavatory Piping 2021.
- I. ASTM D4802 - Standard Specification for Poly(Methyl Methacrylate) Acrylic Plastic Sheet 2016.
- J. ASTM D5047 - Standard Specification for Polyethylene Terephthalate Film and Sheeting 2017.
- K. ASTM E84 - Standard Test Method for Surface Burning Characteristics of Building Materials 2023b.
- L. ICC A117.1 - Accessible and Usable Buildings and Facilities 2017.

1.3 ADMINISTRATIVE REQUIREMENTS

- M. Coordinate the work with the placement of internal wall reinforcement, concealed ceiling supports, and reinforcement of toilet partitions to receive anchor attachments.

1.4 SUBMITTALS

- N. See Section 013300 - Administrative Requirements, for submittal procedures.
- O. Product Data: Submit data on accessories describing size, finish, details of function, and attachment methods.
- P. Samples: Submit two samples of each accessory, illustrating color and finish.
- Q. Manufacturer's Installation Instructions: Indicate special procedures and conditions requiring special attention.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

PART 2 PRODUCTS

2.1 MANUFACTURERS

- A. Commercial Toilet, Shower, and Bath Accessories:
 - 1. AJW Architectural Products: www.ajw.com/#sle.
 - 2. American Specialties, Inc: www.americanspecialties.com/#sle.
 - 3. Bradley Corporation: www.bradleycorp.com/#sle.
 - 4. Georgia-Pacific Professional: www.gppro.com/#sle.
 - 5. Kimberly-Clark Corporation; Kimberly-Clark Professional ICON Collection: www.kcprofessional.com/#sle.
 - 6. Substitutions: Section 016000 - Product Requirements.
- B. Healthcare Accessories:
 - 1. American Specialties, Inc: www.americanspecialties.com/#sle.
 - 2. Bowman Dispensers LLC: www.bowmandispensers.com/#sle.
 - 3. Poltex, Inc: www.poltex.com/#sle.
 - 4. Substitutions: Section 016000 - Product Requirements.

2.2 MATERIALS

- C. Accessories - General: Shop assembled, free of dents and scratches and packaged complete with anchors and fittings, steel anchor plates, adapters, and anchor components for installation.
- D. Stainless Steel Sheet: ASTM A666, Type 304.
- E. Acrylic Plastic Sheet: ASTM D4802.
- F. PETG Plastic Sheet: ASTM D5047.
- G. Mirror Glass: Annealed float glass, ASTM C1036 Type I, Class 1, Quality Q2, with silvering, protective and physical characteristics complying with ASTM C1503.

2.3 FINISHES

- H. Stainless Steel: Satin finish, unless otherwise noted.
- I. Baked Enamel: Pretreat to clean condition, apply one coat primer and minimum two coats epoxy baked enamel.

2.4 COMMERCIAL TOILET ACCESSORIES

- J. Toilet Paper Dispenser: SEE EQUIPMENT SCHEDULE IN DRAWING SET.
- K. Paper Towel Dispenser: SEE EQUIPMENT SCHEDULE IN DRAWING SET.
- L. Waste Receptacle: Stainless steel, freestanding style with swing top.
 - 1. Liner: Removable seamless stainless steel receptacle.
 - 2. Minimum capacity: 10 gallons (38 liters).
 - 3. Products:

**Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL**

Copyright 2026, Vero Architecture

- a. American Specialties, Inc: www.americanspecialties.com/#sle.
 - b. Substitutions: Section 016000 - Product Requirements.
- M. Automated Soap Dispenser: SEE EQUIPMENT SCHEDULE IN DRAWING SET.
- N. Mirrors: Stainless steel framed, 1/4 inch (6 mm) thick annealed float glass; ASTM C1036.
 - 1. Annealed Float Glass: Silvering, protective and physical characteristics in compliance with ASTM C1503.
- O. Seat Cover Dispenser: Stainless steel, surface-mounted, reloading by concealed opening at base, tumbler lock.
 - 1. Minimum capacity: 250 seat covers.
 - 2. Products:
 - a. AJW Architectural Products: www.ajw.com/#sle.
 - b. Kimberly-Clark Corporation; Kimberly-Clark Professional Scott Personal Seat Cover Dispenser: www.kcprofessional.com/#sle.
 - c. Substitutions: Section 016000 - Product Requirements.
- P. Grab Bars: Stainless steel, smooth surface.
 - 1. Standard Duty Grab Bars:
 - a. Push/Pull Point Load: 250 pound-force (1112 N), minimum.
 - b. Dimensions: 1-1/4 inch (32 mm) outside diameter, minimum 0.05 inch (1.3 mm) wall thickness, exposed flange mounting, 1-1/2 inch (38 mm) clearance between wall and inside of grab bar.
 - c. Finish: Satin.
 - d. Length and Configuration: As indicated on drawings.
 - e. Products:
 - 1) AJW Architectural Products: www.ajw.com/#sle.
 - 2) American Specialties, Inc: www.americanspecialties.com/#sle.
 - 3) Bradley: bradleycorp.com
 - 4) Bobrick: bobrick.com
 - 2. Wall hung Swing-up Grab Bars: SEE EQUIPMENT SCHEDULE IN DRAWING SET.
 - 1) Bradley: bradleycorp.com
 - 2) Substitutions: Section 016000 - Product Requirements.
 - 3. Ligature resistant - SEE EQUIPMENT SCHEDULE IN DRAWING SET.
- Q. Sanitary Napkin Disposal Unit: Stainless steel, surface-mounted, self-closing door, locking bottom panel with full-length stainless steel piano-type hinge, removable receptacle.
 - 1. Products:
 - a. American Specialties, Inc: www.americanspecialties.com/#sle.
 - b. Substitutions: Section 016000 - Product Requirements.

2.5 COMMERCIAL SHOWER AND BATH ACCESSORIES

- R. Folding Shower Seat: SEE EQUIPMENT SCHEDULE IN DRAWING SET..

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

PART 3 EXECUTION

3.1 EXAMINATION

- A. Verify existing conditions before starting work.
- B. Verify exact location of accessories for installation.
- C. Verify that field measurements are as indicated on drawings.
- D. See Section 061000 Rough Carpentry for installation of blocking, reinforcing plates, and concealed anchors in walls and ceilings.

3.2 PREPARATION

- E. Deliver inserts and rough-in frames to site for timely installation.
- F. Provide templates and rough-in measurements as required.

3.3 INSTALLATION

- G. Install accessories in accordance with manufacturers' instructions in locations indicated on drawings.
- H. Install plumb and level, securely and rigidly anchored to substrate.
- I. Mounting Heights: As required by accessibility regulations, unless otherwise indicated.
 - 1. Grab Bars: As indicated on drawings.

3.4 PROTECTION

- J. Protect installed accessories from damage due to subsequent construction operations.

END OF SECTION 102800

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

SECTION 123661.16 - SOLID SURFACING COUNTERTOPS

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Solid surface material countertops.
 - 2. Solid surface material backsplashes.
 - 3. Solid surface material end splashes.
- B. Related Requirements:
 - 1. Section 064023 "Interior Architectural Woodwork" for Millwork information.
 - 2. Section 079200 "Joint Sealants".

1.3 ACTION SUBMITTALS

- A. Product Data: For countertop materials.
- B. Shop Drawings: For countertops. Show materials, finishes, edge and backsplash profiles, methods of joining, and cutouts for plumbing fixtures.
 - 1. Show locations and details of joints.
 - 2. Show direction of directional pattern, if any.
- C. Samples for Initial Selection: For each type of material exposed to view.
- D. Samples for Verification: For the following products:
 - 1. Countertop material, 6 inches (150 mm) square.
 - 2. One full-size solid surface material countertop, with front edge and backsplash, 8 by 10 inches (200 by 250 mm), of construction and in configuration specified.

1.4 INFORMATIONAL SUBMITTALS

- A. Qualification Data: For fabricator.**CLOSEOUT SUBMITTALS**
- B. Maintenance Data: For solid surface material countertops to include in maintenance manuals. Include Product Data for care products used or recommended by Installer and names, addresses, and telephone numbers of local sources for products.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

1.5 QUALITY ASSURANCE

- A. Fabricator Qualifications: Shop that employs skilled workers who custom-fabricate countertops similar to that required for this Project, and whose products have a record of successful in-service performance.
- B. Installer Qualifications: Fabricator of countertops.
- C. Mockups: Build mockups to demonstrate aesthetic effects and to set quality standards for fabrication and execution.
 - 1. Build mockup of typical countertop as shown on Drawings.
 - 2. Subject to compliance with requirements, approved mockups may become part of the completed Work if undisturbed at time of Substantial Completion.

1.6 FIELD CONDITIONS

- A. Field Measurements: Verify dimensions of countertops by field measurements after base cabinets are installed but before countertop fabrication is complete.

1.7 COORDINATION

- A. Coordinate locations of utilities that will penetrate countertops or backsplashes.

PART 2 - PRODUCTS

2.1 SOLID SURFACE COUNTERTOP MATERIALS

- A. Solid Surface Material: Homogeneous-filled plastic resin complying with ICPA SS-1.
 - 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. AS LISTED IN ARCHITECTURAL DRAWINGS
 - 1) No Substitutions
- B. Particleboard: ANSI A208.1, Grade M-2-Exterior Glue.
- C. Plywood: Exterior softwood plywood complying with DOC PS 1, Grade C-C Plugged, touch sanded.
- D. Plywood (at sinks): **Marine Grade** plywood to be installed at counters with sinks.

2.2 COUNTERTOP FABRICATION

- A. Fabricate countertops according to solid surface material manufacturer's written instructions and to the AWI/AWMAC/WI's "Architectural Woodwork Standards."

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

1. Grade: Custom
- B. Configuration:
 1. Front: Straight, slightly eased at top
 2. Backsplash: Straight, slightly eased at corner
 3. End Splash: Matching backsplash
- C. Countertops: 1/2-inch- (12.7-mm-) thick, solid surface material with front edge built up with same material.
- D. Backsplashes: 1/2-inch- (12.7-mm-) thick, solid surface material.
- E. Fabricate tops with shop-applied edges and backsplashes unless otherwise indicated. Comply with solid surface material manufacturer's written instructions for adhesives, sealers, fabrication, and finishing.
 1. Fabricate with loose backsplashes for field assembly.
- F. Joints: Fabricate countertops without joints.
- G. Joints: Fabricate countertops in sections for joining in field, with joints at locations indicated.
 1. Joint Locations: Not within 18 inches (450 mm) of a sink or cooktop and not where a countertop section less than 36 inches (900 mm) long would result, unless unavoidable.
 2. Splined Joints: Accurately cut kerfs in edges at joints for insertion of metal splines to maintain alignment of surfaces at joints. Make width of cuts slightly more than thickness of splines to provide snug fit. Provide at least three splines in each joint.
- H. Cutouts and Holes:
 1. Under-counter Plumbing Fixtures: Make cutouts for fixtures using template or pattern furnished by fixture manufacturer. Form cutouts to smooth, even curves.
 - a. Provide vertical edges, slightly eased at juncture of cutout edges with top and bottom surfaces of countertop and projecting 3/16 inch (5 mm) into fixture opening.
 - b. Provide vertical edges, rounded to 3/8-inch (10-mm) radius at juncture of cutout edges with top surface of countertop, slightly eased at bottom, and projecting 3/16 inch (5 mm) into fixture opening.
 - c. Provide 3/4-inch (20-mm) full bullnose edges projecting 3/8 inch (10 mm) into fixture opening.
 2. Counter-Mounted Plumbing Fixtures: Prepare countertops in shop for field cutting openings for counter-mounted fixtures. Mark tops for cutouts and drill holes at corners of cutout locations. Make corner holes of largest radius practical.
 3. Fittings: Drill countertops in shop for plumbing fittings, under-counter soap dispensers, and similar items.

2.3 INSTALLATION MATERIALS

- A. Adhesive: Product recommended by solid surface material manufacturer.

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

- B. Sealant for Countertops: Comply with applicable requirements in Section 079200 "Joint Sealants."

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine substrates to receive solid surface material countertops and conditions under which countertops will be installed, with Installer present, for compliance with requirements for installation tolerances and other conditions affecting performance of countertops.
- B. Proceed with installation only after unsatisfactory conditions have been corrected.

3.2 INSTALLATION

- A. Install countertops level to a tolerance of 1/8 inch in 8 feet (3 mm in 2.4 m), 1/4 inch (6 mm) maximum. Do not exceed 1/64-inch (0.4-mm) difference between planes of adjacent units.
- B. Fasten countertops by screwing through corner blocks of base units into underside of countertop. Predrill holes for screws as recommended by manufacturer. Align adjacent surfaces and, using adhesive in color to match countertop, form seams to comply with manufacturer's written instructions. Carefully dress joints smooth, remove surface scratches, and clean entire surface.
- C. Fasten sub-tops to cabinets by screwing through sub-tops into corner-blocks of base cabinets. Shim as needed to align sub-tops in a level plane.
- D. Secure countertops to sub-tops with adhesive according to solid surface material manufacturer's written instructions. Align adjacent surfaces and, using adhesive in color to match countertop, form seams to comply with manufacturer's written instructions. Carefully dress joints smooth, remove surface scratches, and clean entire surface.
- E. Bond joints with adhesive and draw tight as countertops are set. Mask areas of countertops adjacent to joints to prevent adhesive smears.
 - 1. Install metal splines in kerfs in countertop edges at joints where indicated. Fill kerfs with adhesive before inserting splines and remove excess immediately after adjoining units are drawn into position.
 - 2. Clamp units to temporary bracing, supports, or each other to ensure that countertops are properly aligned and joints are of specified width.
- F. Install backsplashes and end splashes by adhering to wall and countertops with adhesive. Mask areas of countertops and splashes adjacent to joints to prevent adhesive smears.
- G. Install aprons to backing and countertops with adhesive. Mask areas of countertops and splashes adjacent to joints to prevent adhesive smears. Fasten by screwing through backing. Predrill holes for screws as recommended by manufacturer.
- H. Complete cutouts not finished in shop. Mask areas of countertops adjacent to cutouts to prevent damage while cutting. Make cutouts to accurately fit items to be installed, and at right angles to

Intermountain Health Care
LAYTON HOSPITAL SLEEP LAB REMODEL
Copyright 2026, Vero Architecture

finished surfaces unless beveling is required for clearance. Ease edges slightly to prevent snipping.

1. Seal edges of cutouts in particleboard sub-tops by saturating with varnish.
- I. Apply sealant to gaps at walls; comply with Section 079200 "Joint Sealants."

END OF SECTION 123661

SECTION 211000

WATER-BASED FIRE-SUPPRESSION SYSTEMS

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. This Section includes the following fire-suppression piping inside the remodeled space:

1. Wet-pipe sprinkler systems.
2. Description: Remodel shell space to new exam clinic space.

- B. Related Sections include the following:

1. Division 10 Section "Fire Extinguisher Cabinets" and "Fire Extinguishers" for cabinets and fire extinguishers.
2. Division 22 Section "Facility Water Distribution Piping" for piping outside the building.
3. Division 28 Section "Fire Detection and Alarm" for alarm devices not specified in this Section.

- C. All black steel sprinkler pipe shall have a wall thickness less than or equal to schedule 40 and greater than schedule 10.

1. Exception: Pipe with a nominal pipe size of 6 inches and greater may be schedule 10.

- D. Summary Table:

Item	Summary	ref
Underground service entrance piping	Not In Scope	
Interior pipe type	Mains: Schedule 40 Branchlines: schedule 40	
Sprinkler Finish	Flat Plate Concealed, except uprights and storage	
Extended Coverage	Not Allowed	
Center of Tile	Required, Center thirds are acceptable for rectangular tiles	
Flexible Sprinkler Drops	Designers preference	
FM Global	Yes Area reduction for quick response sprinklers is not allowed	
Alarm Device	Horn/Strobe	
FDC	Not In Scope	
Special Items		Hazard Classification

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

Seismic		

1.3 DEFINITIONS

- A. CPVC: Chlorinated polyvinyl chloride plastic.
- B. CR: Chlorosulfonated polyethylene synthetic rubber.
- C. High-Pressure Piping System: Fire-suppression piping system designed to operate at working pressure higher than standard 175 psig.
- D. PE: Polyethylene plastic.
- E. Underground Service-Entrance Piping: Underground service piping below the building.

1.4 SYSTEM DESCRIPTIONS

- A. Wet-Pipe Sprinkler System: Automatic sprinklers are attached to piping containing water and that is connected to water supply. Water discharges immediately from sprinklers when they are opened. Sprinklers open when heat melts fusible link or destroys frangible device. Hose connections are included if indicated.

1.5 PERFORMANCE REQUIREMENTS

- A. Standard Piping System Component Working Pressure: Listed for at least 175 psig.
- B. High-Pressure Piping System Component Working Pressure: Listed for 250 psig minimum 300 psig.
- C. Fire-suppression standpipe system design shall be approved by authorities having jurisdiction.
 - 1. Minimum residual pressure at each hose-connection outlet is the following:
 - a. NPS 1-1/2 Hose Connections: 65 psig.
 - b. NPS 2-1/2 Hose Connections: 100 psig.
 - 2. Unless otherwise indicated, the following is maximum residual pressure at required flow at each hose-connection outlet:
 - a. NPS 1-1/2 Hose Connections: 100 psig.
 - b. NPS 2-1/2 Hose Connections: 175 psig.
- D. Design sprinkler piping according to the following and obtain approval from engineer, prior to submitting to other authorities having jurisdiction:
 - 1. Sprinkler Occupancy Hazard Classifications per FM Global:
 - a. Building Service Areas: Hazard Class 1.
 - b. Electrical Equipment Rooms: Hazard Class 2.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- c. General Storage Areas: Hazard Class 1.
 - d. Mechanical Equipment Rooms: Hazard Class 2.
 - e. Office and Public Areas: Hazard Class 1.
 - 2. Sprinkler Design Demands for Hazard Categories with ceilings up to 30 ft.:
 - a. Hazard Class 1-Wet: 0.10 gpm over 1500-sq. ft. area.
 - b. Hazard Class 1-Dry: 0.10 gpm over 1500-sq. ft. area.
 - c. Hazard Class 2-Wet: 0.20 gpm over 2500-sq. ft. area.
 - d. Hazard Class 2-Dry: 0.20 gpm over 3500-sq. ft. area.
 - e. Hazard Class 3-Wet: 0.30 gpm over 2500-sq. ft. area.
 - f. Hazard Class 3-Dry: 0.30 gpm over 3500-sq. ft. area.
 - 3. Minimum Sprinkler K-Factors for Hazard Categories with ceilings up to 30 ft.:
 - a. Hazard Class 1: K5.6, 155 deg. F
 - b. Hazard Class 2: K8.0, 155 deg. F
 - c. Hazard Class 3: K11.2, 286 deg. F
 - 4. Maximum Protection Area per Sprinkler: Per FM Approval
 - 5. Maximum Protection Area per Sprinkler:
 - a. Office Spaces: 225 sq. ft..
 - b. Storage Areas: 130 sq. ft..
 - c. Mechanical Equipment Rooms: 130 sq. ft..
 - d. Electrical Equipment Rooms: 130 sq. ft..
 - e. Other Areas: According to FM Global recommendations, unless otherwise indicated.
 - 6. Total Combined Hose-Stream Demand Requirement for ceilings under 60 ft. Per FM Global:
 - a. Hazard Class 1: 250 gpm for 60 minutes.
 - b. Hazard Class 2: 250 gpm for 60 to 90 minutes.
 - c. Hazard Class 3: 500 gpm for 90 to 120 minutes.
 - 7. Sprinklers are to be installed throughout the premises, as required by NFPA 13.
- E. Seismic Performance: Fire-suppression piping shall be capable of withstanding the effects of earthquake motions determined according to NFPA 13 and FM Global Data Sheet 2-8.

1.6 SUBMITTALS

- A. Product Data: For the following:
 - 1. Piping materials, including dielectric fittings, flexible connections, and sprinkler specialty fittings.
 - 2. Pipe hangers and supports, including seismic restraints.
 - 3. Valves, including listed fire-protection valves, unlisted general-duty valves, and specialty valves and trim.
 - 4. Sprinklers, escutcheons, and guards. Include sprinkler flow characteristics, mounting, finish, and other pertinent data.
 - 5. Alarm devices, including electrical data.
- B. Shop Drawings: Diagram power, signal, and control wiring.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- C. Seismic Calculations.
- D. Approved Sprinkler Piping Drawings: Working plans, prepared according to NFPA 13, that have been approved by authorities having jurisdiction, including hydraulic calculations, if applicable. Drawings are to be approved by Engineer prior to submission to State Fire Marshal. Drawings are to be submitted to FM Global prior to submission to Engineer.
- E. Field Test Reports and Certificates: Indicate and interpret test results for compliance with performance requirements and as described in NFPA 13 and NFPA 14. Include "Contractor's Material and Test Certificate for Aboveground Piping" and "Contractor's Material and Test Certificate for Underground Piping."
- F. Welding certificates.
- G. Field quality-control test reports.
- H. Operation and Maintenance Data: For standpipe and sprinkler specialties to include in emergency, operation, and maintenance manuals.

1.7 QUALITY ASSURANCE

A. Installer Qualifications:

1. An experienced installer who has designed and installed fire-suppression piping similar to that indicated for this Project and obtained design approval and inspection approval from authorities having jurisdiction. The Engineer requires evidence to support the ability of the contractor to perform work in the scope and volume as specified. A contractor, who cannot show such experience, may be found not suitable to perform the work. The following are the approved contractors for this project:

a. PRE-APPROVED CONTRACTORS LIST

- 1) Alta Fire
- 2) Certified Fire
- 3) Chaparral Fire (A-1 National)
- 4) Delta Fire
- 5) Kimco Fire
- 6) Preferred Fire Protection
- 7) Quality Fire Protection
- 8) FireTrol
- 9) FireFly Fire Protection
- 10) Simplex-Grinnell
- 11) State Fire DC Specialties
- 12) The Safety Team
- 13) Western Automatic
- 14) Or prior approved equal

- b. A contractor not listed in the "PRE-APPROVED CONTRACTORS LIST" must receive prior approval from the engineer to bid this project.

- ### **B. Installer's responsibilities include designing, fabricating, and installing fire-suppression systems and providing professional engineering services needed to assume engineering responsibility. Base calculations on results of fire-hydrant flow test.**

1. Engineering Responsibility: Preparation of working plans, calculations, and field test reports by a qualified professional engineer or NICET Level III technician.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- C. Welding: Qualify processes and operators according to ASME Boiler and Pressure Vessel Code: Section IX.
- D. NFPA Standards: Fire-suppression-system equipment, specialties, accessories, installation, and testing shall comply with the following:
 - 1. NFPA 13, "Installation of Sprinkler Systems."
 - 2. NFPA 13R, "Installation of Sprinkler Systems in Residential Occupancies up to and Including Four Stories in Height."
 - 3. NFPA 14, "Installation of Standpipe, Private Hydrant, and Hose Systems."
 - 4. NFPA 24, "Installation of Private Fire Service Mains and Their Appurtenances."
- E. International Conference of Building Code Officials codes and standards complying with the following:
 - 1. IBC-2018, "International Building Code."
 - 2. IFC-2018, "International Fire Code."
- F. Utah Amendments
 - 1. Title 15A
- G. FM Global Property Loss Prevention Data Sheets:
 - 1. 1-12
 - 2. 2-0
 - 3. 2-8
 - 4. 3-0
 - 5. 3-10
 - 6. 3-26
 - 7. 8-9

1.8 COORDINATION

- A. Coordinate layout and installation of sprinklers with other construction that penetrates ceilings, including light fixtures, HVAC equipment, and partition assemblies.

1.9 EXTRA MATERIALS

- A. Furnish extra materials described below that match products installed and that are packaged with protective covering for storage and identified with labels describing contents.
 - 1. Sprinkler Cabinets: Finished, wall-mounting, steel cabinet with hinged cover, with space for minimum of six spare sprinklers plus sprinkler wrench. Include number of sprinklers required by NFPA 13 and sprinkler wrench. Include separate cabinet with sprinklers and wrench for each type of sprinkler on Project.

1.10 GENERAL ENGINEERING QUALITY

- A. Unless noted otherwise the following applies:
 - 1. The maximum water velocity shall not exceed 32-fps.
 - 2. Submit the calculations using the reduced flow data.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

3. When calculating flexible drops, the contractor shall use the maximum number of bends for the associated length. The value is to be taken from the UL tests (unless the material is only FM approved).
4. In the event of multiple (3) submittal rejections (including revise and resubmit) a meeting shall be held at the engineer's office at the engineer time of choosing and the designer, fire sprinkler contractor, and general contractor shall be physically in attendance to discuss the required modifications to the design.

1.11 CONTRACT COMPLETION

- A. Incomplete and Unacceptable work:
 1. If additional site visits or design work is required by the Engineer or Architect because of the use of incomplete or unacceptable work by the Contractor, then the Contractor shall reimburse the Engineer and Architect for all additional time and expenses involved.

PART 2 - PRODUCTS

2.1 MANUFACTURERS

- A. In other Part 2 articles where titles below introduce lists, the following requirements apply to product selection:
 1. Manufacturers: Subject to compliance with requirements, provide products by one of the manufacturers specified. All products to be FM Global approved.

2.2 DUCTILE-IRON PIPE AND FITTINGS

- A. Mechanical-Joint, Ductile-Iron Pipe: AWWA C151, with mechanical-joint bell end and plain end.
 1. Mechanical-Joint, Ductile-Iron Fittings: AWWA C110, Class 53, ductile- or gray-iron standard pattern or AWWA C153, ductile-iron compact pattern.
 2. Glands, Gaskets, and Bolts: AWWA C111, ductile- or gray-iron gland, rubber gasket, and steel bolts and nuts.
- B. Push-on-Joint, Ductile-Iron Pipe: AWWA C151, with push-on-joint bell end and plain end.
 1. Push-on-Joint, Ductile-Iron Fittings: AWWA C110, ductile- or gray-iron standard pattern or AWWA C153, ductile-iron compact pattern.
 2. Gaskets: AWWA C111, rubber.

2.3 C-900 TUBE AND FITTINGS

- A. PVC, AWWA Pipe: AWWA C900, Class 150, with bell end with gasket and spigot end.
 1. Comply with UL 1285 for fire-service mains if indicated.
 2. PVC Fabricated Fittings: AWWA C900, Class 150, with bell-and-spigot or double-bell ends. Include elastomeric gasket in each bell.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

3. PVC Molded Fittings: AWWA C907, Class 150, with bell-and-spigot or double-bell ends. Include elastomeric gasket in each bell.
4. Push-on-Joint, Ductile-Iron Fittings: AWWA C110, ductile- or gray-iron standard pattern or AWWA C153, ductile-iron compact pattern.
 - a. Gaskets: AWWA C111, rubber.
5. Mechanical-Joint, Ductile-Iron Fittings: AWWA C110, ductile- or gray-iron standard pattern or AWWA C153, ductile-iron compact pattern.
 - a. Glands, Gaskets, and Bolts: AWWA C111, ductile- or gray-iron glands, rubber gaskets, and steel bolts.

2.4 STEEL PIPE AND FITTINGS

- A. Threaded-End, Standard-Weight Steel Pipe: ASTM A 53/A 53M, ASTM A 135, or ASTM A 795, hot-dip galvanized where indicated and with factory- or field-formed threaded ends.
 1. Cast-Iron Threaded Flanges: ASME B16.1.
 2. Malleable-Iron Threaded Fittings: ASME B16.3.
 3. Gray-Iron Threaded Fittings: ASME B16.4.
 4. Steel Threaded Pipe Nipples: ASTM A 733, made of ASTM A 53/A 53M or ASTM A 106, Schedule 40, seamless steel pipe hot-dip galvanized where indicated. Include ends matching joining method.
 5. Steel Threaded Couplings: ASTM A 865 hot-dip galvanized-steel pipe where indicated.
- B. Plain-End, Standard-Weight Steel Pipe: ASTM A 53/A 53M, ASTM A 135, or ASTM A 795 hot-dip galvanized-steel pipe where indicated.
 1. Locking-Lug Fittings: UL 213, ductile-iron body with retainer lugs that require one-quarter turn to secure pipe in fitting not allowed.
- C. Plain-End, Standard-Weight Steel Pipe: ASTM A 53/A 53M, ASTM A 135, or ASTM A 795 hot-dip galvanized-steel pipe where indicated.
 1. Steel Welding Fittings: ASTM A 234/A 234M, and ASME B16.9 or ASME B16.11.
 2. Steel Flanges and Flanged Fittings: ASME B16.5.
- D. Grooved-End, Standard-Weight Steel Pipe: ASTM A 53/A 53M, ASTM A 135, or ASTM A 795, hot-dip galvanized where indicated and with factory- or field-formed, roll-grooved ends.
 1. Grooved-Joint Piping Systems:
 - a. Manufacturers:
 - 1) Anvil International, Inc.
 - 2) Central Sprinkler Corp.
 - 3) Victaulic Co. of America.
 - 4) Ward Manufacturing.
 - b. Grooved-End Fittings: UL-listed, ASTM A 536, ductile-iron casting with OD matching steel-pipe OD.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- c. Grooved-End-Pipe Couplings: UL 213 and AWWA C606, rigid pattern, unless otherwise indicated; gasketed fitting matching steel-pipe OD. Include ductile-iron housing with keys matching steel-pipe and fitting grooves, prelubricated rubber gasket listed for use with housing, and steel bolts and nuts.
- E. Threaded-End, Threadable, Thinwall Steel Pipe: ASTM A 135 or ASTM A 795, with wall thickness less than Schedule 40 and greater than Schedule 10, and with factory- or field-formed threaded ends is not allowed.
- F. Plain-End, Threadable, Thinwall Steel Pipe: ASTM A 135 or ASTM A 795, with wall thickness less than Schedule 40 and greater than Schedule 10 is not allowed.
- G. Grooved-End, Threadable, Thinwall Steel Pipe: ASTM A 135 or ASTM A 795, with wall thickness less than Schedule 40 and greater than Schedule 10, and with factory- or field-formed, roll-grooved ends is not allowed.
- H. Plain-End, Schedule 10 Steel Pipe: ASTM A 135 or ASTM A 795, Schedule 10 is not allowed.
- I. Plain-End, Nonstandard OD, Thinwall Steel Pipe: ASTM A 135 or ASTM A 795, with wall thickness less than Schedule 10 is not allowed.
- J. Plain-End, Hybrid Steel Pipe: ASTM A 135 or ASTM A 795, lightwall, with wall thickness less than Schedule 10 and greater than Schedule 5 is not allowed.
- K. Grooved-End, Hybrid Steel Pipe: ASTM A 135 or ASTM A 795, lightwall, with wall thickness less than Schedule 10 and greater than Schedule 5; with factory- or field-formed, roll-grooved ends are not allowed.
- L. Schedule 5 Steel Pipe: ASTM A 135 or ASTM A 795, lightwall, with plain ends is not allowed.

2.5 CPVC TUBE AND FITTINGS

- A. CPVC pipe is produced to the specifications of ASTM F442; Complete system in accordance with its listing limitations, including installation instructions. CPVC is not allowed on this project.

2.6 COPPER TUBE AND FITTINGS

- A. Soft Copper Tube: ASTM B 88, Type L, water tube, annealed temper; with plain ends.
 - 1. Copper fittings: ASME B16.18, cast-copper-alloy or ASME B16.22, wrought-copper, solder-joint pressure type. Furnish only wrought-copper fittings if indicated.
 - 2. Brazing Filler Metals: AWS A5.8, BCuP-3 or BCuP-4.
- B. Plain-End, Hard Copper Tube: ASTM B 88, Type K or ASTM B 88, Type L, water tube, drawn temper.
 - 1. Copper Fittings: ASME B16.18, cast-copper-alloy or ASME B16.22, wrought-copper, solder-joint pressure type. Furnish only wrought-copper fittings if indicated.
 - 2. Bronze Flanges: ASME B16.24, Class 150, with solder-joint end. Furnish Class 300 flanges if required to match tubing system.
 - 3. Copper Unions: MSS SP-123, cast-copper-alloy, hexagonal-stock body with ball-and-socket metal-to-metal seating surfaces, and solder-joint or threaded ends.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

4. Copper, Mechanically Formed Tee Option: For forming T-branch on copper water tube not allowed.
 5. Brazing Filler Metals: AWS A5.8, BCuP-3 or BCuP-4.
- C. Grooved-End, Hard Copper Tube: ASTM B 88, Type K or ASTM B 88, Type L, water tube, drawn temper; with factory- or field-formed, roll-grooved ends.
1. Copper, Mechanically Formed Tee Option: For forming T-branch on copper water tube not allowed.
 2. Grooved-Joint Systems:
 - a. Manufacturers:
 - 1) Anvil International, Inc.
 - 2) Victaulic Co. of America.
 - b. Grooved-End Copper Fittings: ASTM B 75, copper tube or ASTM B 584, bronze casting. Fittings may have ends factory or field expanded to steel-pipe OD if required for copper tube systems using grooved-end-pipe couplings.
 - c. Grooved-End-Tube Couplings: UL 213, rigid pattern, unless otherwise indicated; gasketed fitting equivalent to AWWA C606, but made to match copper-tube OD. Include ductile-iron housing with keys matching steel-pipe and fitting grooves, prelubricated rubber gasket listed for use with housing, and steel bolts and nuts. Use grooved-end-pipe couplings for tube and fitting that have expanded ends.

2.7 DIELECTRIC FITTINGS

- A. Assembly shall be copper alloy, ferrous, and insulating materials with ends matching piping system.
- B. Dielectric Unions: Factory-fabricated assembly, designed for 250-psig minimum working pressure at 180 deg F. Include insulating material that isolates dissimilar materials and ends with inside threads according to ASME B1.20.1.
1. Manufacturers:
 - a. Capitol Manufacturing Co.
 - b. Central Plastics Company.
 - c. Epco Sales, Inc.
 - d. Hart Industries International, Inc.
 - e. Watts Industries, Inc.; Water Products Div.
 - f. Zurn Industries, Inc.; Wilkins Div.
- C. Dielectric Flanges: Factory-fabricated companion-flange assembly, for 175-psig minimum working-pressure rating as required for piping system.
1. Manufacturers:
 - a. Capitol Manufacturing Co.
 - b. Central Plastics Company.
 - c. Epco Sales, Inc.
 - d. Watts Industries, Inc.; Water Products Div.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- D. Dielectric Flange Insulation Kits: Components for field assembly shall include CR or phenolic gasket, PE or phenolic bolt sleeves, phenolic washers, and steel backing washers.
 - 1. Manufacturers:
 - a. Advance Products and Systems, Inc.
 - b. Calpico, Inc.
 - c. Central Plastics Company.
 - d. Pipeline Seal and Insulator, Inc.
 - e. Insert manufacturer's name.
- E. Dielectric Couplings: Galvanized steel with inert and noncorrosive thermoplastic lining and threaded ends and 300-psig working-pressure rating at 225 deg F.
 - 1. Manufacturers:
 - a. Calpico, Inc.
 - b. Lochinvar Corp.
- F. Dielectric Nipples: Electroplated steel with inert and noncorrosive thermoplastic lining, with combination of plain, threaded, or grooved ends and 300-psig working-pressure rating at 225 deg F.
 - 1. Manufacturers:
 - a. Perfection Corporation.
 - b. Precision Plumbing Products, Inc.
 - c. Victaulic Co. of America.

2.8 FLEXIBLE SPRINKLER DROPS

- A. Flexible connectors shall be FM approved with exterior wire braid and have materials suitable for system fluid. Include 175-psig minimum working-pressure rating and ends according to the following:
 - 1. NPS 1: Threaded.
- B. Manufacturers:
 - 1. Flex-Head
 - 2. Victaulic
- C. Stainless-Steel-Hose/Steel Pipe, Flexible Connectors: Corrugated, stainless-steel, inner tubing covered with stainless-steel wire braid. Include steel nipples or flanges, welded to hose.
- D. Stainless-Steel-Hose/Stainless-Steel Pipe, Flexible Connectors: Corrugated, stainless-steel, inner tubing covered with stainless-steel wire braid. Include stainless-steel nipples or flanges, welded to hose.

2.9 FLEXIBLE PIPE CONNECTORS (SEISMIC)

- A. Flexible connectors shall be FM approved with exterior wire braid and have materials suitable for system fluid. Include 175-psig minimum working-pressure rating and ends according to the following:
 - 1. NPS 2 and Smaller: Threaded.
 - 2. NPS 2-1/2 and Larger: Flanged.
 - 3. Option for NPS 2-1/2 and Larger: Grooved for use with grooved-end-pipe couplings.
- B. Manufacturers:
 - 1. Flexicraft Industries.
 - 2. Flex-Pression, Ltd.
 - 3. Metraflex, Inc.
- C. Bronze-Hose, Flexible Connectors: Corrugated, bronze, inner tubing covered with bronze wire braid. Include copper-tube ends or bronze flanged ends, braze welded to hose.
- D. Stainless-Steel-Hose/Steel Pipe, Flexible Connectors: Corrugated, stainless-steel, inner tubing covered with stainless-steel wire braid. Include steel nipples or flanges, welded to hose.
- E. Stainless-Steel-Hose/Stainless-Steel Pipe, Flexible Connectors: Corrugated, stainless-steel, inner tubing covered with stainless-steel wire braid. Include stainless-steel nipples or flanges, welded to hose.

2.10 SPRINKLER SPECIALTY FITTINGS

- A. Sprinkler specialty fittings shall be FMG approved with 175-psig minimum working-pressure rating, and made of materials compatible with piping. Sprinkler specialty fittings shall have 250-psig minimum working-pressure rating if fittings are components of high-pressure piping systems.
- B. Sprinkler Branch-Line Test Fittings: Brass body with threaded inlet, capped drain outlet, and threaded outlet for sprinkler.
- C. Sprinkler Inspector's Test Fitting: Cast- or ductile-iron housing with threaded inlet and drain outlet and sight glass.
- D. Drop-Nipple Fittings: UL 1474, adjustable with threaded inlet and outlet, and seals.

2.11 LISTED FIRE-PROTECTION VALVES

- A. Valves shall be FMG approved, with 175-psig minimum pressure rating. Valves shall have 250-psig minimum pressure rating if valves are components of high-pressure piping system.
- B. Gate Valves with Wall Indicator Posts:
 - 1. Gate Valves: UL 262, cast-iron body, bronze mounted, with solid disc, nonrising stem, operating nut, and flanged ends.
 - 2. Indicator Posts: UL 789, horizontal-wall type, cast-iron body, with hand wheel, extension rod, locking device, and cast-iron barrel.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

3. Manufacturers:
 - a. Grinnell Fire Protection.
 - b. McWane, Inc.; Kennedy Valve Div.
 - c. NIBCO.
 - d. Stockham.
- C. Ball Valves: Comply with UL 1091, except with ball instead of disc.
 1. NPS 1-1/2 and Smaller: Bronze body with threaded ends.
 2. NPS 2 and NPS 2-1/2: Bronze body with threaded ends or ductile-iron body with grooved ends.
 3. NPS 3: Ductile-iron body with grooved ends.
 4. Manufacturers:
 - a. NIBCO.
 - b. Victaulic Co. of America.
- D. Butterfly Valves: UL 1091.
 1. NPS 2 and Smaller: Bronze body with threaded ends.
 - a. Manufacturers:
 - 1) Global Safety Products, Inc.
 - 2) Milwaukee Valve Company.
 2. NPS 2-1/2 and Larger: Bronze, cast-iron, or ductile-iron body; wafer type or with flanged or grooved ends.
 - a. Manufacturers:
 - 1) Central Sprinkler Corp.
 - 2) McWane, Inc.; Kennedy Valve Div.
 - 3) Mueller Company.
 - 4) NIBCO.
 - 5) Victaulic Co. of America.
- E. Check Valves NPS 2 and Larger: UL 312, swing type, cast-iron body with flanged or grooved ends.
 1. Manufacturers:
 - a. American Cast Iron Pipe Co.; Waterous Co.
 - b. Central Sprinkler Corp.
 - c. Clow Valve Co.
 - d. Crane Co.; Crane Valve Group; Crane Valves.
 - e. Crane Co.; Crane Valve Group; Jenkins Valves.
 - f. Fivalco
 - g. Globe Fire Sprinkler Corporation.
 - h. Grinnell Fire Protection.
 - i. Hammond Valve.
 - j. McWane, Inc.; Kennedy Valve Div.
 - k. Mueller Company.
 - l. NIBCO.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- m. Potter-Roemer; Fire Protection Div.
- n. Reliable Automatic Sprinkler Co., Inc.
- o. Star Sprinkler Inc.
- p. Stockham.
- q. United Brass Works, Inc.
- r. Victaulic Co. of America.
- s. Watts Industries, Inc.; Water Products Div.

F. Gate Valves: UL 262, OS&Y type.

1. NPS 2 and Smaller: Bronze body with threaded ends.

a. Manufacturers:

- 1) Crane Co.; Crane Valve Group; Crane Valves.
- 2) Fivalco.
- 3) Hammond Valve.
- 4) NIBCO.
- 5) United Brass Works, Inc.

2. NPS 2-1/2 and Larger: Cast-iron body with flanged ends.

a. Manufacturers:

- 1) Clow Valve Co.
- 2) Crane Co.; Crane Valve Group; Crane Valves.
- 3) Crane Co.; Crane Valve Group; Jenkins Valves.
- 4) Fivalco
- 5) Hammond Valve.
- 6) Milwaukee Valve Company.
- 7) Mueller Company.
- 8) NIBCO.
- 9) United Brass Works, Inc.

G. Indicating Valves: UL 1091, with integral indicating device and ends matching connecting piping.

- 1. Indicator: Electrical, 115-V ac, prewired, single-circuit, supervisory switch and Visual.
- 2. NPS 2 and Smaller: Ball or butterfly valve with bronze body and threaded ends.

a. Manufacturers:

- 1) Milwaukee Valve Company.
- 2) NIBCO.
- 3) Victaulic Co. of America.

3. NPS 2-1/2 and Larger: Butterfly valve with cast- or ductile-iron body; wafer type or with flanged or grooved ends.

a. Manufacturers:

- 1) Central Sprinkler Corp.
- 2) Grinnell Fire Protection.
- 3) McWane, Inc.; Kennedy Valve Div.
- 4) Milwaukee Valve Company.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- 5) NIBCO.
- 6) Victaulic Co. of America.

H. Supervised Normally Closed Valve

- 1. Indicator: Electrical, 115-V ac, prewired, single-circuit, supervisory switch and visual to send signal on partial close.
 - a. Manufactures:
 - 1) NIBCO.
 - 2) Victaulic Co. of America.

2.12 UNLISTED GENERAL-DUTY VALVES

- A. Ball Valves NPS 2 and Smaller: MSS SP-110, 2-piece copper-alloy body with chrome-plated brass ball, 600-psig minimum CWP rating, blowout-proof stem, and threaded ends.
- B. Check Valves NPS 2 and Smaller: MSS SP-80, Type 4, Class 125 minimum, swing type with bronze body, nonmetallic disc, and threaded ends.
- C. Gate Valves NPS 2 and Smaller: MSS SP-80, Type 2, Class 125 minimum, with bronze body, solid wedge, and threaded ends.
- D. Globe Valves NPS 2 and Smaller: MSS SP-80, Type 2, Class 125 minimum, with bronze body, nonmetallic disc, and threaded ends.

2.13 SPECIALTY VALVES

- A. Sprinkler System Control Valves: FMG approved, cast- or ductile-iron body with flanged or grooved ends, and 175-psig minimum pressure rating. Control valves shall have 250-psig minimum pressure rating if valves are components of high-pressure piping system.
 - 1. Manufacturers:
 - a. Globe Fire Sprinkler Corporation.
 - b. Reliable Automatic Sprinkler Co., Inc.
 - c. Victaulic Co. of America.
 - d. Viking Corp.
- B. Automatic Drain Valves: UL 1726, NPS 3/4, ball-check device with threaded ends.
 - 1. Manufacturers:
 - a. Grinnell Fire Protection.

2.14 SPRINKLERS

- A. Sprinklers shall be FM approved, with 175-psig minimum pressure rating. Sprinklers shall have 250-psig minimum 300-psig pressure rating if sprinklers are components of high-pressure piping system.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

B. Manufacturers:

1. Globe Fire Sprinkler Corporation.
2. Reliable Automatic Sprinkler Co., Inc.
3. Victaulic Co. of America.
4. Viking Corp.
5. Tyco Fire

C. Automatic Sprinklers: With heat-responsive element complying with the following:

1. UL 199, for nonresidential applications.
2. UL 1626, for residential applications.

D. Sprinkler Types and Categories: Nominal 1/2-inch orifice for "Ordinary" temperature classification rating, unless otherwise indicated or required by application.

1. Open Sprinklers: UL 199, without heat-responsive element.
 - a. Orifice: 1/2 inch, with discharge coefficient K between 5.3 and 5.8.
 - b. Orifice: 17/32 inch, with discharge coefficient K between 7.4 and 8.2.

E. Sprinkler types, features, and options as follows:

1. Concealed ceiling sprinklers, including cover plate.
2. Extended-coverage sprinklers, not allowed unless approved in writing prior to bidding.
3. Flow-control sprinklers, with automatic open and shutoff feature.
4. Flush ceiling sprinklers, including escutcheon, not allowed.
5. Institution sprinklers, made with a small, breakaway projection.
6. Concealed ceiling sprinklers with a gasketed cleanroom cover plate.
7. Pendent sprinklers.
8. Pendent, dry-type sprinklers.
9. Quick-response sprinklers.
10. Recessed sprinklers, including escutcheon.
11. Sidewall sprinklers.
12. Sidewall, dry-type sprinklers.
13. Upright sprinklers.

F. Sprinkler Finishes: Chrome plated, bronze, and painted. Finishes as approved by FM Global.

G. Special Coatings: Wax, lead, and corrosion-resistant paint.

H. Sprinkler Escutcheons: Materials, types, and finishes for the following sprinkler mounting applications. Escutcheons for concealed, flush, and recessed-type sprinklers are specified with sprinklers.

1. Ceiling Mounting: Flat plate concealed, white.
2. Sidewall Mounting: Semi-Recessed, white.

I. Sprinkler Guards: Wire-cage type, including fastening device for attaching to sprinkler.

PART 3 - EXECUTION

3.1 PREPARATION

- A. Obtain Engineer's Water Analysis or fire-hydrant flow test. Use results for system design calculations required in "Quality Assurance" Article in Part 1 of this Section.

3.2 EXAMINATION

- A. Examine roughing-in for hose connections and stations to verify actual locations of piping connections before installation.
- B. Proceed with installation only after unsatisfactory conditions have been corrected.

3.3 PIPING APPLICATIONS

- A. Shop weld pipe joints where welded piping is indicated.
- B. Do not use welded joints for galvanized-steel pipe.
- C. Flanges, flanged fittings, unions, nipples, and transition and special fittings with finish and pressure ratings same as or higher than system's pressure rating may be used in aboveground applications, unless otherwise indicated.
- D. Sprinkler Main Piping: Use the following:
 - 1. NPS 6 and Smaller: Standard-weight steel pipe with threaded ends, or grooved ends. No plain ends allowed.
 - 2. Outlets shall be welded.
 - a. Victaulic Brand Mechanical tee fittings may be used in lieu of welded outlets.
- E. Branch line piping: Use the following:
 - 1. NPS 1-1/4 and Smaller: Threadable steel pipe with threaded ends; cast- or malleable-iron threaded fittings; and threaded joints.
 - a. Victaulic Brand Mechanical tee fittings may be used.

3.4 VALVE APPLICATIONS

- A. Drawings indicate valve types to be used. Where specific valve types are not indicated, the following requirements apply:
 - 1. Fire-Protection-Service Valves: UL listed and FM approved for applications where required by NFPA 13 and NFPA 14.
 - 2. General-Duty Valves: For applications where UL-listed and FM-approved valves are not required by NFPA 13 and NFPA 14.
 - a. Shutoff Duty: Use gate, ball, or butterfly valves.
 - b. Throttling Duty: Use globe, ball, or butterfly valves.

3.5 JOINT CONSTRUCTION

- A. Refer to Division 23 Section "Common Work Result for HVAC" for basic piping joint construction.
- B. Ductile-Iron-Piping, Grooved Joints: Use ductile-iron pipe with radius-cut-grooved ends; ductile-iron, grooved-end fittings; and ductile-iron, keyed couplings. Assemble joints with couplings, gaskets, lubricant, and bolts according to coupling manufacturer's written instructions.
- C. Steel-Piping, Grooved Joints: Use Schedule 40 steel pipe with cut or roll-grooved ends and Schedule 30 or thinner steel pipe with roll-grooved ends; steel, grooved-end fittings; and steel, keyed couplings. Assemble joints with couplings, gaskets, lubricant, and bolts according to coupling manufacturer's written instructions. Use gaskets listed for dry-pipe service for dry piping.

3.6 PIPING INSTALLATION

- A. Refer to Division 23 Section "Common Work Result for HVAC" for basic piping installation.
- B. Locations and Arrangements: Drawing plans, schematics, and diagrams indicate general location and arrangement of piping. Install piping as indicated, as far as practical.
 - 1. Deviations from approved working plans for piping require written approval from authorities having jurisdiction. File written approval with Architect before deviating from approved working plans.
- C. Use approved fittings to make changes in direction, branch takeoffs from mains, and reductions in pipe sizes.
- D. Install unions adjacent to each valve in pipes NPS 2 and smaller. Unions are not required on flanged devices or in piping installations using grooved joints.
- E. Install flanges or flange adapters on valves, apparatus, and equipment having NPS 2-1/2 and larger connections.
- F. Install "Inspector's Test Connections" in sprinkler piping, complete with shutoff valve, sized and located according to NFPA 13.
- G. Install sprinkler piping with drains for complete system drainage.
- H. Hangers and Supports: Comply with NFPA 13 for hanger materials. Install according to NFPA 13 for sprinkler piping and to NFPA 14 for standpipes.
 - 1. No powder driven studs allowed.
 - 2. Wrap-around braces are to be provided at end of branch lines.
- I. Earthquake Protection: Install piping according to NFPA 13-9.3 and FM Global Datasheet 2-8 requirements, to protect from earthquake damage. Seismic Bracing shall be designed to withstand vertical forces and movement.
- J. Install piping with grooved joints according to manufacturer's written instructions. Construct rigid piping joints, unless otherwise indicated, or required by NFPA 13 for flexibility in seismic zones.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- K. When a fire pipe crosses a seismic expansion joint it shall have a Metraflex fire loop installed at the joint in accordance with NFPA 13 chapter 9.

3.7 SPECIALTY SPRINKLER FITTING INSTALLATION

- A. Install specialty sprinkler fittings according to manufacturer's written instructions.

3.8 VALVE INSTALLATION

- A. Refer to Division 23 Section "Valves" for installing general-duty valves. Install fire-protection specialty valves, trim, fittings, controls, and specialties according to NFPA 13 and NFPA 14, manufacturer's written instructions, and authorities having jurisdiction.
- B. Valves: Install fire-protection-service valves supervised-open, located to control sources of water supply except from fire department connections. Provide permanent identification signs indicating portion of system controlled by each valve.

3.9 SPRINKLER APPLICATIONS

- A. General: All sprinklers are to be quick response type. Sprinkler heads shall be of the latest design closed spray type for 155°F unless specified otherwise or required by code. Extended coverage heads shall not be used. Orifices larger than 1/2" may be used as required by density and spacing demands. Use sprinklers according to the following applications:
1. Rooms without Ceilings: Upright and/or pendent sprinklers. Provide mechanical guards on all heads at or below 7'-0" height above the floor or where damage from room occupant use may occur.
 2. Rooms with Ceilings: Semi-Recessed sprinklers.
 3. Rooms with Ceilings: Concealed sprinklers, where indicated.
 4. Wall Mounting: Sidewall sprinklers with recessed escutcheon.
 5. Institutional sprinklers shall be installed in areas of detention, correctional or mental health care facilities.
 6. Concealed sprinklers with cleanroom gaskets shall be installed in areas with cleanroom requirements.
 7. Spaces Subject to Freezing: Upright; pendent, dry-type; and sidewall, dry-type sprinklers.
 8. Provide freeze proof type automatic sprinkler heads serving unconditioned spaces, areas subject to freezing and in other areas requiring their use.
 9. Heads located within the air streams of unit heaters or other heat-emitting equipment shall be selected for proper temperature rating.
 10. Sprinkler Finishes: Use sprinklers with the following finishes:
 - a. Upright, Pendent, and Sidewall Sprinklers: Chrome in finished spaces exposed to view; rough bronze in unfinished spaces not exposed to view.
 - b. Concealed Sprinklers: Rough brass, with White cover plate to match ceiling color.
 - c. Semi-Recessed Sprinklers: White, with FMG approved white escutcheon.
- B. Sprinklers: Use the following:
1. All sprinklers shall be listed, quick response type.

3.10 SPRINKLER INSTALLATION

- A. Every effort shall be required to ensure that the heads form a symmetrical pattern in the ceiling with the ceiling grid if included, as well as lights, diffusers and grilles. Offsets shall be made in piping to accommodate ductwork in the ceiling. Heads shall be symmetrical in all ceilings and all piping run parallel or perpendicular to building lines. Heads shall be linearly aligned in corridors.
 - 1. In no case shall sprinkler heads be installed closer than approved distances from ceiling obstructions and HVAC ductwork.
 - 2. Sprinkler heads shall not conflict with tile grids.
 - 3. Sprinkler heads shall be located near center of corridors.
- B. Where layout of sprinkler heads is shown on reflected ceiling plans the locations shall be followed unless approval is obtained from the Architect or such locations shown do not meet the requirements of NFPA-13. In either case, approval of the Architect shall be obtained in writing before sprinkler head locations are changed. If the installation of additional heads is needed to conform to NFPA 13 requirements in areas where heads are shown on reflected ceiling plans, they shall be included in the contract price.
- C. Install sprinklers in patterns indicated.
- D. Concealed type sprinkler shall be installed in the following areas:
 - 1. Procedure, Operating & Sterile rooms
 - 2. Communications rooms
 - 3. CT Scan Control/computer room
 - 4. Cat scan/control/computer room
 - 5. Other areas as indicated on drawings.

3.11 CONNECTIONS

- A. Connect water-supply piping and standpipes and sprinklers where indicated.
- B. Connect piping to specialty valves, hose valves, specialties, fire department connections, and accessories.

3.12 LABELING AND IDENTIFICATION

- A. Install labeling and pipe markers on equipment and piping according to requirements in NFPA 13 and NFPA 14 and in Division 23 Section "Common Work Result for HVAC."

3.13 FIELD QUALITY CONTROL

- A. Flush, test, and inspect sprinkler piping according to NFPA 13, "System Acceptance" Chapter.
- B. Flush, test, and inspect standpipes according to NFPA 14, "Tests and Inspection" Chapter.
- C. Replace piping system components that do not pass test procedures and retest to demonstrate compliance. Repeat procedure until satisfactory results are obtained.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- D. When making a mechanical tee connection the coupon shall be attached at the mechanical tee.
- E. Report test results promptly and in writing to Architect and authorities having jurisdiction.

3.14 CLEANING

- A. Clean dirt and debris from sprinklers.
- B. Remove and replace sprinklers having paint other than factory finish.

3.15 PROTECTION

- A. Protect sprinklers from damage until Substantial Completion.

3.16 COMMISSIONING

- A. Verify that specialty valves, trim, fittings, controls, and accessories are installed and operate correctly.
- B. Verify that specified tests of piping are complete and that "Material Test Certificates" are complete.
- C. Verify that damaged sprinklers and sprinklers with paint or coating not specified are replaced with new, correct type.
- D. Verify that sprinklers are correct types, have correct finishes and temperature ratings, and have guards as required for each application.
- E. Fill wet-pipe sprinkler piping with water.
- F. Coordinate with fire alarm tests. Operate as required.

3.17 DEMONSTRATION & TESTS

- A. Demonstrate equipment, specialties, and accessories. Review operating and maintenance information.
- B. All tests will be conducted as required by the local authority having jurisdiction, and in no case less than those required by NFPA standards. As a minimum, piping in the sprinkler system shall be tested at a water pressure at 200 psi for a period of not less two hours, or at 50 psi in excess of the normal pressure when the normal pressure is above 150 psi. Bracing shall be in place, and air shall be removed from the system through the hydrants and drain valves before the test pressure is applied. No apparent leaks will be permitted on interior or underground piping.
- C. The local jurisdiction having authority and the Utah State Fire Marshal's office (where required) shall be notified at least three working days in advance of all tests and flushing. This includes any flushing of underground, hydrostatic testing, or flow testing that may be required.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- D. This contractor shall make all the required tests to the sprinkler system as required by code. He shall be responsible to assure that the Contractor Test Certificates for the overhead, backflow and underground work are completed and delivered to the owner's insurance underwriter to assure proper insurance credit.
- E. All tests requiring the witnessing by local authorities will be the responsibility of this contractor. If tests are not run or do not have the proper witness, then they will be run later and all damage caused by the system, or caused in uncovering the system for such test, will be borne by this contractor.

3.18 WARRANTY

- A. This contractor shall warranty the sprinkler system and all its components for one year from the date of acceptance by the owner. Any costs incurred to extend any warranties of materials to assure this time frame shall be borne by this contractor.
- B. Provide Operation and Maintenance Manuals with correct as-builts test certificates and warranties included. A minimum 6 sets to be provided in red 3-ring binders. Include a current adopted version of NFPA 25 softbound copy left with owner.
- C. Electronic copy of AutoCAD as-built drawings shall also be provided on CD, with each O&M Manual.

3.19 FIELD QUALITY CONTROL

- A. Flush, test and inspect sprinkler piping according to NFPA 13, "System Acceptance" Chapter.
- B. Replace piping system components that do not pass test procedures and retest to demonstrate compliance. Repeat procedure until satisfactory results are obtained.
- C. Report test results promptly and in writing to Architect and authorities having jurisdiction.

END OF SECTION 211000

BLANK PAGE

SECTION 220500

COMMON WORK RESULTS FOR PLUMBING

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. This Section includes the following:
 - 1. Piping materials and installation instructions common to most piping systems.
 - 2. Transition fittings.
 - 3. Dielectric fittings.
 - 4. Mechanical sleeve seals.
 - 5. Sleeves.
 - 6. Escutcheons.
 - 7. Grout.
 - 8. Equipment installation requirements common to equipment sections.
 - 9. Painting and finishing.
 - 10. Concrete bases.
 - 11. Supports and anchorages.
 - 12. Link Seal

1.3 SEISMIC REQUIREMENTS

- A. Seismic Performance: Equipment, pipe hangers and supports shall withstand the effects of earthquake motions determined according to SEI/ASCE 7 and with the requirements specified in Section 22 0548 "Vibration and Seismic Controls for Plumbing Piping and Equipment."
 - 1. For components with a seismic importance factor of 1.0 the term "withstand" means "the system will remain in place without separation of any parts when subjected to the seismic forces specified."
 - 2. For components with a seismic importance factor of 1.5 the term "withstand" means "the system will remain in place without separation of any parts when subjected to the seismic forces specified and the system will be fully operational after the seismic event."

1.4 DEFINITIONS

- A. Finished Spaces: Spaces other than mechanical and electrical equipment rooms, furred spaces, pipe chases, unheated spaces immediately below roof, spaces above ceilings, unexcavated spaces, and crawlspaces.
- B. Exposed, Interior Installations: Exposed to view indoors. Examples include finished occupied spaces and mechanical equipment rooms, accessible pipe shafts, accessible plumbing chases

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

and accessible tunnels.

- C. Exposed, Exterior Installations: Exposed to view outdoors or subject to outdoor ambient temperatures and weather conditions. Examples include rooftop locations.
- D. Concealed, Interior Installations: Concealed from view and protected from physical contact by building occupants. Examples include above ceilings and in chases.
- E. Concealed, Exterior Installations: Concealed from view and protected from weather conditions and physical contact by building occupants but subject to outdoor ambient temperatures. Examples include installations within unheated shelters.
- F. The following are industry abbreviations for rubber materials:
 - 1. EPDM: Ethylene-propylene-diene terpolymer rubber.
 - 2. NBR: Acrylonitrile-butadiene rubber.

1.5 SUBMITTALS

- A. Product Data: For the following:
 - 1. Transition fittings.
 - 2. Dielectric fittings.
 - 3. Mechanical sleeve seals.
 - 4. Escutcheons.
- B. Welding certificates.

1.6 QUALITY ASSURANCE

- A. Steel Support Welding: Qualify processes and operators according to AWS D1.1, "Structural Welding Code--Steel."
- B. Electrical Characteristics for Plumbing Equipment: Equipment of higher electrical characteristics may be furnished provided such proposed equipment is approved in writing and connecting electrical services, circuit breakers, and conduit sizes are appropriately modified. If minimum energy ratings or efficiencies are specified, equipment shall comply with requirements.

1.7 DELIVERY, STORAGE, AND HANDLING

- A. Deliver pipes and tubes with factory-applied end caps. Maintain end caps through shipping, storage, and handling to prevent pipe end damage and to prevent entrance of dirt, debris, and moisture.
- B. Store plastic pipes protected from direct sunlight. Support to prevent sagging and bending.

1.8 COORDINATION

- A. Arrange for pipe spaces, chases, slots, and openings in building structure during progress of construction, to allow for plumbing installations.
- B. Coordinate installation of required supporting devices and set sleeves in poured-in-place concrete and other structural components as they are constructed.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- C. Coordinate requirements for access panels and doors for plumbing items requiring access that are concealed behind finished surfaces. Access panels and doors are specified in Division 08 Section "Access Doors and Frames."

PART 2 - PRODUCTS

2.1 MANUFACTURERS

- A. In other Part 2 articles where subparagraph titles below introduce lists, the following requirements apply for product selection:
 - 1. Manufacturers: Subject to compliance with requirements, provide products by the manufacturers specified.

2.2 PIPE, TUBE, AND FITTINGS

- A. Refer to individual Division 22 piping Sections for pipe, tube, and fitting materials and joining methods.
- B. Pipe Threads: ASME B1.20.1 for factory-threaded pipe and pipe fittings.

2.3 JOINING MATERIALS

- A. Refer to individual Division 22 piping Sections for special joining materials not listed below.
- B. Pipe-Flange Gasket Materials: Suitable for chemical and thermal conditions of piping system contents.
 - 1. ASME B16.21, nonmetallic, flat, asbestos-free, 1/8-inch maximum thickness unless thickness or specific material is indicated.
 - a. Full-Face Type: For flat-face, Class 125, cast-iron and cast-bronze flanges.
 - b. Narrow-Face Type: For raised-face, Class 250, cast-iron and steel flanges.
 - 2. AWWA C110, rubber, flat face, 1/8 inch thick, unless otherwise indicated; and full-face or ring type, unless otherwise indicated.
- C. Flange Bolts and Nuts: ASME B18.2.1, carbon steel, unless otherwise indicated.
- D. Plastic, Pipe-Flange Gasket, Bolts, and Nuts: Type and material recommended by piping system manufacturer, unless otherwise indicated.
- E. Solder Filler Metals: ASTM B 32, lead-free alloys. Include water-flushable flux according to ASTM B 813.
- F. Brazing Filler Metals: AWS A5.8, BCuP Series, copper-phosphorus alloys for general-duty brazing, unless otherwise indicated; and AWS A5.8, BAg1, silver alloy for refrigerant piping, unless otherwise indicated.

2.4 TRANSITION FITTINGS

- A. Flexible Transition Couplings for Underground Nonpressure Drainage Piping: ASTM C 1173 with elastomeric sleeve, ends same size as piping to be joined, and corrosion-resistant metal band on each end.
 - 1. Manufacturers:
 - a. Cascade Waterworks Mfg. Co.
 - b. Fernco, Inc.
 - c. Mission Rubber Company.
 - d. Plastic Oddities, Inc.

2.5 DIELECTRIC FITTINGS

- A. Description: Combination fitting of copper alloy and ferrous materials with threaded, solder-joint, plain, or weld-neck end connections that match piping system materials.
- B. Insulating Material: Suitable for system fluid, pressure, and temperature.
- C. Dielectric Unions: Factory-fabricated, union assembly, for 250-psig minimum working pressure at 180 deg F.
 - 1. Manufacturers:
 - a. Capitol Manufacturing Co.
 - b. Central Plastics Company.
 - c. Eclipse, Inc.
 - d. Epco Sales, Inc.
 - e. Hart Industries, International, Inc.
 - f. Watts Industries, Inc.; Water Products Div.
 - g. Zurn Industries, Inc.; Wilkins Div.
- D. Dielectric Flanges: Factory-fabricated, companion-flange assembly, for 150- or 300-psig minimum working pressure as required to suit system pressures.
 - 1. Manufacturers:
 - a. Capitol Manufacturing Co.
 - b. Central Plastics Company.
 - c. Epco Sales, Inc.
 - d. Watts Industries, Inc.; Water Products Div.
- E. Dielectric-Flange Kits: Companion-flange assembly for field assembly. Include flanges, full-face- or ring-type neoprene or phenolic gasket, phenolic or polyethylene bolt sleeves, phenolic washers, and steel backing washers.
 - 1. Manufacturers:
 - a. Advance Products & Systems, Inc.
 - b. Calpico, Inc.
 - c. Central Plastics Company.
 - d. Pipeline Seal and Insulator, Inc.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

2. Separate companion flanges and steel bolts and nuts shall have 150- or 300-psig minimum working pressure where required to suit system pressures.
- F. Dielectric Couplings: Galvanized-steel coupling with inert and noncorrosive, thermoplastic lining; threaded ends; and 300-psig minimum working pressure at 225 deg F.
 1. Manufacturers:
 - a. Calpico, Inc.
 - b. Lochinvar Corp.
- G. Dielectric Nipples: Electroplated steel nipple with inert and noncorrosive, thermoplastic lining; plain, threaded, or grooved ends; and 300-psig minimum working pressure at 225 deg F.
 1. Manufacturers:
 - a. Perfection Corp.
 - b. Precision Plumbing Products, Inc.
 - c. Sioux Chief Manufacturing Co., Inc.
 - d. Victaulic Co. of America.

2.6 MECHANICAL SLEEVE SEALS

- A. Description: Modular sealing element unit, designed for field assembly, to fill annular space between pipe and sleeve.
 1. Manufacturers:
 - a. Advance Products & Systems, Inc.
 - b. Calpico, Inc.
 - c. Metraflex Co.
 - d. Pipeline Seal and Insulator, Inc.
 2. Sealing Elements: EPDM interlocking links shaped to fit surface of pipe. Include type and number required for pipe material and size of pipe.
 3. Pressure Plates: Stainless steel. Include two for each sealing element.
 4. Connecting Bolts and Nuts: Stainless steel of length required to secure pressure plates to sealing elements. Include one for each sealing element.

2.7 SLEEVES

- A. Galvanized-Steel Sheet: 0.0239-inch minimum thickness; round tube closed with welded longitudinal joint.
- B. Steel Pipe: ASTM A 53, Type E, Grade B, Schedule 40, galvanized, plain ends.
- C. Cast Iron: Cast or fabricated "wall pipe" equivalent to ductile-iron pressure pipe, with plain ends and integral waterstop, unless otherwise indicated.
- D. Stack Sleeve Fittings: Manufactured, cast-iron sleeve with integral clamping flange. Include clamping ring and bolts and nuts for membrane flashing.
 1. Underdeck Clamp: Clamping ring with set screws.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- E. Molded PE: Reusable, PE, tapered-cup shaped, and smooth-outer surface with nailing flange for attaching to wooden forms.

2.8 ESCUTCHEONS

- A. Description: Manufactured wall and ceiling escutcheons and floor plates, with an ID to closely fit around pipe, tube, and insulation of insulated piping and an OD that completely covers opening.
- B. One-Piece, Deep-Pattern Type: Deep-drawn, box-shaped brass with polished chrome-plated finish.
- C. One-Piece, Floor-Plate Type: Cast-iron floor plate.
- D. Split-Casting, Floor-Plate Type: Cast brass with concealed hinge and set screw.

2.9 GROUT

- A. Description: ASTM C 1107, Grade B, nonshrink and nonmetallic, dry hydraulic-cement grout.
 - 1. Characteristics: Post-hardening, volume-adjusting, nonstaining, noncorrosive, nongaseous, and recommended for interior and exterior applications.
 - 2. Design Mix: 5000-psi, 28-day compressive strength.
 - 3. Packaging: Premixed and factory packaged.

2.10 LINK SEAL

- A. Link-Seal® Modular Seal Pressure Plates
 - 1. Link-Seal® modular seal pressure plates shall be molded of glass reinforced Nylon Polymer with the following properties:
 - a. Izod Impact - Notched = 2.05ft-lb/in. per ASTM D-256
 - b. Flexural Strength @ Yield = 30,750 psi per ASTM D-790
 - c. Flexural Modulus = 1,124,000 psi per ASTM D-790
 - d. Elongation Break = 11.07% per ASTM D-638
 - e. Specific Gravity = 1.38 per ASTM D-792
 - 2. Models LS200-275-300-315 shall incorporate the most current Link-Seal® Modular Seal design modifications and shall include an integrally molded compression assist boss on the top (bolt entry side) of the pressure plate, which permits increased compressive loading of the rubber sealing element. Models 315-325-340-360-400-410-425-475-500-525-575-600 shall incorporate an integral recess known as a “Hex Nut Interlock” designed to accommodate commercially available fasteners to insure proper thread engagement for the class and service of metal hardware. All pressure plates shall have a permanent identification of the manufacturer’s name molded into it.
 - 3. For fire and Hi-Temp service, pressure plates shall be steel with 2-part Zinc Dichromate Coating.
 - 4. Link-Seal® Modular Seal Hardware: All fasteners shall be sized according to latest Link-Seal® modular seal technical data. Bolts, flange hex nuts shall be: 316 Stainless Steel per ASTM F593-95, with a 85,000 psi average tensile strength.

PART 3 - EXECUTION

3.1 PLUMBING DEMOLITION

- A. Refer to Division 01 Section "Cutting and Patching" and Division 02 Section "Selective Structure Demolition" for general demolition requirements and procedures.
- B. Disconnect, demolish, and remove plumbing systems, equipment, and components indicated to be removed.
 - 1. Piping to Be Removed: Remove portion of piping indicated to be removed and cap or plug remaining piping with same or compatible piping material.
 - 2. Piping to Be Abandoned in Place: Drain piping and cap or plug piping with same or compatible piping material.
 - 3. Equipment to Be Removed: Disconnect and cap services and remove equipment.
 - 4. Equipment to Be Removed and Reinstalled: Disconnect and cap services and remove, clean, and store equipment; when appropriate, reinstall, reconnect, and make equipment operational.
 - 5. Equipment to Be Removed and Salvaged: Disconnect and cap services and remove equipment and deliver to Owner.
- C. If pipe, insulation, or equipment to remain is damaged in appearance or is unserviceable, remove damaged or unserviceable portions and replace with new products of equal capacity and quality.

3.2 SEISMIC REQUIREMENTS

- A. Comply with SEI/ASCE 7 and with requirements for seismic seismic-restraint devices in Section 22 0548 "Vibration and Seismic Controls for Plumbing Piping and Equipment."

3.3 PIPING SYSTEMS - COMMON REQUIREMENTS

- A. Install piping according to the following requirements and Division 22 Sections specifying piping systems.
- B. Drawing plans, schematics, and diagrams indicate general location and arrangement of piping systems. Indicated locations and arrangements were used to size pipe and calculate friction loss, expansion, pump sizing, and other design considerations. Install piping as indicated unless deviations to layout are approved on Coordination Drawings.
- C. Install piping in concealed locations, unless otherwise indicated and except in equipment rooms and service areas.
- D. Install piping indicated to be exposed and piping in equipment rooms and service areas at right angles or parallel to building walls. Diagonal runs are prohibited unless specifically indicated otherwise.
- E. Install piping above accessible ceilings to allow sufficient space for ceiling panel removal.
- F. Install piping to permit valve servicing.
- G. Install piping at indicated slopes.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- H. Install piping free of sags and bends.
- I. Install fittings for changes in direction and branch connections.
- J. Install piping to allow application of insulation.
- K. Select system components with pressure rating equal to or greater than system operating pressure.
- L. Install escutcheons for penetrations of walls, ceilings, and floors according to the following:
 - 1. New Piping:
 - a. Piping with Fitting or Sleeve Protruding from Wall: One-piece, deep-pattern type.
 - b. Chrome-Plated Piping: One-piece, cast-brass type with polished chrome-plated finish.
 - c. Insulated Piping: One-piece, stamped-steel type with spring clips.
 - d. Bare Piping at Wall and Floor Penetrations in Finished Spaces: One-piece, cast-brass type with polished chrome-plated finish.
 - e. Bare Piping at Wall and Floor Penetrations in Finished Spaces: One-piece, stamped-steel type.
 - f. Bare Piping at Floor Penetrations in Equipment Rooms: One-piece, floor-plate type.
 - 2. Existing Piping: Use the following:
 - a. Chrome-Plated Piping: Split-casting, cast-brass type with chrome-plated finish.
 - b. Bare Piping at Wall and Floor Penetrations in Finished Spaces: Split-casting, cast-brass type with chrome-plated finish.
 - c. Bare Piping at Wall and Floor Penetrations in Finished Spaces: Split-plate, stamped-steel type with concealed hinge and spring clips.
 - d. Bare Piping at Ceiling Penetrations in Finished Spaces: Split-casting, cast-brass type with chrome-plated finish.
 - e. Bare Piping at Ceiling Penetrations in Finished Spaces: Split-plate, stamped-steel type with concealed hinge and set screw.
 - f. Bare Piping in Equipment Rooms: Split-casting, cast-brass type.
 - g. Bare Piping in Equipment Rooms: Split-plate, stamped-steel type with set screw or spring clips.
 - h. Bare Piping at Floor Penetrations in Equipment Rooms: Split-casting, floor-plate type.
- M. Sleeves are not required for core-drilled holes.
- N. Permanent sleeves are not required for holes formed by removable PE sleeves.
- O. Install sleeves for pipes passing through concrete and masonry walls and concrete floor and roof slabs.
- P. Install sleeves for pipes passing through concrete and masonry walls, gypsum-board partitions, and concrete floor and roof slabs.
 - 1. Cut sleeves to length for mounting flush with both surfaces.
 - a. Exception: Extend sleeves installed in floors of mechanical equipment areas or other wet areas 2 inches above finished floor level. Extend cast-iron sleeve fittings below floor slab as required to secure clamping ring if ring is specified.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

2. Install sleeves in new walls and slabs as new walls and slabs are constructed.
 3. Install sleeves that are large enough to provide 1/4-inch annular clear space between sleeve and pipe or pipe insulation. Use the following sleeve materials:
 - a. Steel Pipe Sleeves: For pipes smaller than NPS 6.
 - b. Steel Sheet Sleeves: For pipes NPS 6 and larger, penetrating gypsum-board partitions.
 - c. Stack Sleeve Fittings: For pipes penetrating floors with membrane waterproofing. Secure flashing between clamping flanges. Install section of cast-iron soil pipe to extend sleeve to 2 inches above finished floor level. Refer to Division 07 Section "Sheet Metal Flashing and Trim" for flashing.
- 1) Seal space outside of sleeve fittings with grout.
4. Except for underground wall penetrations, seal annular space between sleeve and pipe or pipe insulation, using joint sealants appropriate for size, depth, and location of joint. Refer to Division 07 Section "Joint Sealants" for materials and installation.
- Q. Aboveground, Exterior-Wall Pipe Penetrations: Seal penetrations using sleeves and mechanical sleeve seals. Select sleeve size to allow for 1-inch annular clear space between pipe and sleeve for installing mechanical sleeve seals.
1. Install steel pipe for sleeves smaller than 6 inches in diameter.
 2. Install cast-iron "wall pipes" for sleeves 6 inches and larger in diameter.
 3. Mechanical Sleeve Seal Installation: Select type and number of sealing elements required for pipe material and size. Position pipe in center of sleeve. Assemble mechanical sleeve seals and install in annular space between pipe and sleeve. Tighten bolts against pressure plates that cause sealing elements to expand and make watertight seal.
- R. Underground, Exterior-Wall Pipe Penetrations: Install cast-iron "wall pipes" for sleeves. Seal pipe penetrations using mechanical sleeve seals. Select sleeve size to allow for 1-inch annular clear space between pipe and sleeve for installing mechanical sleeve seals.
1. Mechanical Sleeve Seal Installation: Select type and number of sealing elements required for pipe material and size. Position pipe in center of sleeve. Assemble mechanical sleeve seals and install in annular space between pipe and sleeve. Tighten bolts against pressure plates that cause sealing elements to expand and make watertight seal.
- S. Fire-Barrier Penetrations: Maintain indicated fire rating of walls, partitions, ceilings, and floors at pipe penetrations. Seal pipe penetrations with firestop materials. Refer to Division 07 Section "Penetration Firestopping" for materials.
- T. Verify final equipment locations for roughing-in.
- U. Refer to equipment specifications in other Sections of these Specifications for roughing-in requirements.

3.4 PIPING JOINT CONSTRUCTION

- A. Join pipe and fittings according to the following requirements and Division 22 Sections specifying piping systems.
- B. Ream ends of pipes and tubes and remove burrs. Bevel plain ends of steel pipe.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- C. Remove scale, slag, dirt, and debris from inside and outside of pipe and fittings before assembly.
- D. Soldered Joints: Apply ASTM B 813, water-flushable flux, unless otherwise indicated, to tube end. Construct joints according to ASTM B 828 or CDA's "Copper Tube Handbook," using lead-free solder alloy complying with ASTM B 32.
- E. Brazed Joints: Construct joints according to AWS's "Brazing Handbook," "Pipe and Tube" Chapter, using copper-phosphorus brazing filler metal complying with AWS A5.8.
- F. Threaded Joints: Thread pipe with tapered pipe threads according to ASME B1.20.1. Cut threads full and clean using sharp dies. Ream threaded pipe ends to remove burrs and restore full ID. Join pipe fittings and valves as follows:
 - 1. Apply appropriate tape or thread compound to external pipe threads unless dry seal threading is specified.
 - 2. Damaged Threads: Do not use pipe or pipe fittings with threads that are corroded or damaged. Do not use pipe sections that have cracked or open welds.
- G. Welded Joints: Construct joints according to AWS D10.12, using qualified processes and welding operators according to Part 1 "Quality Assurance" Article.
- H. Flanged Joints: Select appropriate gasket material, size, type, and thickness for service application. Install gasket concentrically positioned. Use suitable lubricants on bolt threads.
- I. PE Piping Heat-Fusion Joints: Clean and dry joining surfaces by wiping with clean cloth or paper towels. Join according to ASTM D 2657.
 - 1. Plain-End Pipe and Fittings: Use butt fusion.
 - 2. Plain-End Pipe and Socket Fittings: Use socket fusion.
- J. Fiberglass Bonded Joints: Prepare pipe ends and fittings, apply adhesive, and join according to pipe manufacturer's written instructions.

3.5 PIPING CONNECTIONS

- A. Make connections according to the following, unless otherwise indicated:
 - 1. Install unions, in piping NPS 2 and smaller, adjacent to each valve and at final connection to each piece of equipment.
 - 2. Install flanges, in piping NPS 2-1/2 and larger, adjacent to flanged valves and at final connection to each piece of equipment.
 - 3. Dry Piping Systems: Install dielectric unions and flanges to connect piping materials of dissimilar metals.
 - 4. Wet Piping Systems: Install dielectric coupling and nipple fittings to connect piping materials of dissimilar metals.

3.6 EQUIPMENT INSTALLATION - COMMON REQUIREMENTS

- A. Install equipment to allow maximum possible headroom unless specific mounting heights are not indicated.
- B. Install equipment level and plumb, parallel and perpendicular to other building systems and components in exposed interior spaces, unless otherwise indicated.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- C. Install plumbing equipment to facilitate service, maintenance, and repair or replacement of components. Connect equipment for ease of disconnecting, with minimum interference to other installations. Extend grease fittings to accessible locations.
- D. Install equipment to allow right of way for piping installed at required slope.

3.7 PAINTING

- A. Painting of plumbing systems, equipment, and components is specified in Division 09 Sections "Interior Painting" and "Exterior Painting."
- B. Damage and Touchup: Repair marred and damaged factory-painted finishes with materials and procedures to match original factory finish.

3.8 CONCRETE BASES

- A. Concrete Bases: Anchor equipment to concrete base according to equipment manufacturer's written instructions and according to seismic codes at Project.
 - 1. Construct concrete bases of dimensions indicated, but not less than 4 inches larger in both directions than supported unit.
 - 2. Install dowel rods to connect concrete base to concrete floor. Unless otherwise indicated, install dowel rods on 18-inch centers around the full perimeter of the base.
 - 3. Install epoxy-coated anchor bolts for supported equipment that extend through concrete base, and anchor into structural concrete floor.
 - 4. Place and secure anchorage devices. Use supported equipment manufacturer's setting drawings, templates, diagrams, instructions, and directions furnished with items to be embedded.
 - 5. Install anchor bolts to elevations required for proper attachment to supported equipment.
 - 6. Install anchor bolts according to anchor-bolt manufacturer's written instructions.

3.9 ERECTION OF METAL SUPPORTS AND ANCHORAGES

- A. Refer to Division 05 Section "Metal Fabrications" for structural steel.
- B. Cut, fit, and place miscellaneous metal supports accurately in location, alignment, and elevation to support and anchor plumbing materials and equipment.
- C. Field Welding: Comply with AWS D1.1.

3.10 ERECTION OF WOOD SUPPORTS AND ANCHORAGES

- A. Cut, fit, and place wood grounds, nailers, blocking, and anchorages to support, and anchor plumbing materials and equipment.
- B. Select fastener sizes that will not penetrate members if opposite side will be exposed to view or will receive finish materials. Tighten connections between members. Install fasteners without splitting wood members.
- C. Attach to substrates as required to support applied loads.

3.11 GROUTING

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- A. Mix and install grout for plumbing equipment base bearing surfaces, pump and other equipment base plates, and anchors.
- B. Clean surfaces that will come into contact with grout.
- C. Provide forms as required for placement of grout.
- D. Avoid air entrapment during placement of grout.
- E. Place grout, completely filling equipment bases.
- F. Place grout on concrete bases and provide smooth bearing surface for equipment.
- G. Place grout around anchors.
- H. Cure placed grout.

END OF SECTION 220500

BLANK PAGE

SECTION 220517

SLEEVES AND SLEEVE SEALS FOR PLUMBING PIPING

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Sleeves.
 - 2. Sleeve-seal systems.
 - 3. Grout.

1.3 ACTION SUBMITTALS

- A. Product Data: For each type of product indicated.

PART 2 - PRODUCTS

2.1 SLEEVES

- A. Cast-Iron Wall Pipes: Cast or fabricated of cast or ductile iron and equivalent to ductile-iron pressure pipe, with plain ends and integral waterstop unless otherwise indicated.
- B. Galvanized-Steel Wall Pipes: ASTM A 53, Schedule 40, with plain ends and welded steel collar; zinc coated.
- C. Galvanized-Steel-Pipe Sleeves: ASTM A 53, Type E, Grade B, Schedule 40, zinc coated, with plain ends.
- D. PVC-Pipe Sleeves: ASTM D 1785, Schedule 40.
- E. Galvanized-Steel-Sheet Sleeves: 0.0239-inch minimum thickness; round tube closed with welded longitudinal joint.

2.2 SLEEVE-SEAL SYSTEMS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. Advance Products & Systems, Inc.
 - 2. CALPICO, Inc.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

3. Link-Seal
 4. Metraflex Company (The).
 5. Pipeline Seal and Insulator, Inc.
 6. Proco Products, Inc.
- B. Description: Modular sealing-element unit, designed for field assembly, for filling annular space between piping and sleeve.
1. Sealing Elements: EPDM-rubber interlocking links shaped to fit surface of pipe. Include type and number required for pipe material and size of pipe.
 2. Pressure Plates: Carbon steel.
 3. Connecting Bolts and Nuts: Carbon steel, with corrosion-resistant coating, of length required to secure pressure plates to sealing elements.

2.3 GROUT

- A. Standard: ASTM C 1107, Grade B, post-hardening and volume-adjusting, dry, hydraulic-cement grout.
- B. Characteristics: Nonshrink; recommended for interior and exterior applications.
- C. Design Mix: 5000-psi, 28-day compressive strength.
- D. Packaging: Premixed and factory packaged.

PART 3 - EXECUTION

3.1 SLEEVE INSTALLATION

- A. Install sleeves for piping passing through penetrations in floors, partitions, roofs, and walls.
- B. For sleeves that will have sleeve-seal system installed, select sleeves of size large enough to provide 1-inch annular clear space between piping and concrete slabs and walls.
1. Sleeves are not required for core-drilled holes.
- C. Install sleeves in concrete floors, concrete roof slabs, and concrete walls as new slabs and walls are constructed.
1. Permanent sleeves are not required for holes in slabs formed by molded-PE or -PP sleeves.
 2. Cut sleeves to length for mounting flush with both surfaces.
 - a. Exception: Extend sleeves installed in floors of mechanical equipment areas or other wet areas 2 inches above finished floor level.
 3. Using grout, seal the space outside of sleeves in slabs and walls without sleeve-seal system.
- D. Install sleeves for pipes passing through interior partitions.
1. Cut sleeves to length for mounting flush with both surfaces.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

2. Install sleeves that are large enough to provide 1/4-inch annular clear space between sleeve and pipe or pipe insulation.
 3. Seal annular space between sleeve and piping or piping insulation; use joint sealants appropriate for size, depth, and location of joint. Comply with requirements for sealants specified in Division 07 Section "Joint Sealants."
- E. Fire-Barrier Penetrations: Maintain indicated fire rating of walls, partitions, ceilings, and floors at pipe penetrations. Seal pipe penetrations with firestop materials. Comply with requirements for firestopping specified in Division 07 Section "Penetration Firestopping."

3.2 SLEEVE-SEAL-SYSTEM INSTALLATION

- A. Install sleeve-seal systems in sleeves in exterior concrete walls and slabs-on-grade at service piping entries into building.
- B. Select type, size, and number of sealing elements required for piping material and size and for sleeve ID or hole size. Position piping in center of sleeve. Center piping in penetration, assemble sleeve-seal system components, and install in annular space between piping and sleeve. Tighten bolts against pressure plates that cause sealing elements to expand and make a watertight seal.

3.3 SLEEVE AND SLEEVE-SEAL SCHEDULE

- A. Use sleeves and sleeve seals for the following piping-penetration applications:
1. Exterior Concrete Walls above Grade:
 - a. Piping Smaller Than NPS 6: Cast-iron wall sleeves.
 - b. Piping NPS 6 and Larger: Cast-iron wall sleeves.
 2. Exterior Concrete Walls below Grade:
 - a. Piping Smaller Than NPS 6: Cast-iron wall sleeves with sleeve-seal system.
 - 1) Select sleeve size to allow for 1-inch annular clear space between piping and sleeve for installing sleeve-seal system.
 - b. Piping NPS 6 and Larger: Cast-iron wall sleeves with sleeve-seal system.
 - 1) Select sleeve size to allow for 1-inch annular clear space between piping and sleeve for installing sleeve-seal system.
 3. Concrete Slabs-on-Grade:
 - a. Piping Smaller Than NPS 6: Cast-iron wall sleeves with sleeve-seal system.
 - 1) Select sleeve size to allow for 1-inch annular clear space between piping and sleeve for installing sleeve-seal system.
 - b. Piping NPS 6 and Larger: Cast-iron wall sleeves with sleeve-seal system.
 - 1) Select sleeve size to allow for 1-inch annular clear space between piping and sleeve for installing sleeve-seal system.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

4. Concrete Slabs above Grade:
 - a. Piping Smaller Than NPS 6: Galvanized-steel-pipe sleeves.
 - b. Piping NPS 6 and Larger: Galvanized-steel-pipe sleeves.
5. Interior Partitions:
 - a. Piping Smaller Than NPS 6: Galvanized-steel-pipe sleeves.
 - b. Piping NPS 6 and Larger: Galvanized-steel-sheet sleeves.

END OF SECTION 220517

SECTION 220518

ESCUTCHEONS FOR PLUMBING PIPING

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Escutcheons.

1.3 ACTION SUBMITTALS

- A. Product Data: For each type of product indicated.

PART 2 - PRODUCTS

2.1 ESCUTCHEONS

- A. One-Piece, Cast-Brass Type: With polished, chrome-plated finish and setscrew fastener.
- B. One-Piece, Deep-Pattern Type: Deep-drawn, box-shaped brass with chrome-plated finish and spring-clip fasteners.
- C. One-Piece, Stamped-Steel Type: With chrome-plated finish and spring-clip fasteners.

PART 3 - EXECUTION

3.1 INSTALLATION

- A. Install escutcheons for piping penetrations of walls, ceilings, and finished floors.
- B. Install escutcheons with ID to 2 inch (50mm), tube, and insulation of insulated piping and with OD that completely covers opening.
 - 1. Escutcheons for New Piping:
 - a. Piping with Fitting or Sleeve Protruding from Wall: One-piece, deep-pattern type with polished, chrome-plated finish.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- b. Chrome-Plated Piping: One-piece, cast-brass type with polished, chrome-plated finish.
- c. Insulated Piping: One-piece, stamped-steel type with chrome-plated finish.
- d. Bare Piping 2 inch and Smaller at Wall and Floor Penetrations in Finished Spaces: One-piece, cast-brass type with polished, chrome-plated finish.
- e. Bare Piping Larger than 2 inch at Wall and Floor Penetrations in Finished Spaces: One-piece, stamped-steel type with polished, chrome-plated finish.
- f. Bare Piping 2 inch and Smaller at Ceiling Penetrations in Finished Spaces: One-piece, cast-brass type with polished, chrome-plated finish.
- g. Bare Piping Larger than 2 inch at Ceiling Penetrations in Finished Spaces: One-piece, stamped-steel type with polished, chrome-plated finish.
- h. Bare Piping 2 inch and Smaller in Unfinished Service Spaces: One-piece, cast-brass type with polished, chrome-plated or rough-brass finish.
- i. Bare Piping Larger than 2 inch in Unfinished Service Spaces: One-piece, stamped-steel type with polished, chrome-plated finish.
- j. Bare Piping 2 inch and Smaller in Equipment Rooms: One-piece, cast-brass type with polished, chrome-plated or rough-brass finish.
- k. Bare Piping in Equipment Rooms Larger than 2 inch: One-piece, stamped-steel type with chrome- or cadmium-plated finish.

3.2 FIELD QUALITY CONTROL

- A. Replace broken and damaged escutcheons and floor plates using new materials.

END OF SECTION 220518

SECTION 220523

GENERAL-DUTY VALVES FOR PLUMBING PIPING

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

A. Section Includes:

1. Bronze angle valves.
2. Bronze ball valves.
3. Iron, single-flange butterfly valves.
4. Bronze lift check valves.
5. Bronze swing check valves.
6. Iron swing check valves.
7. Bronze globe valves.
8. Iron globe valves.

B. Related Sections:

1. Division 22 plumbing piping Sections for specialty valves applicable to those Sections only.
2. Division 22 Section "Identification for Plumbing Piping and Equipment" for valve tags and schedules.
3. Division 33 water distribution piping Sections for general-duty and specialty valves for site construction piping.

1.3 DEFINITIONS

- A. CWP: Cold working pressure.
- B. EPDM: Ethylene propylene copolymer rubber.
- C. NBR: Acrylonitrile-butadiene, Buna-N, or nitrile rubber.
- D. NRS: Nonrising stem.
- E. OS&Y: Outside screw and yoke.
- F. RS: Rising stem.
- G. SWP: Steam working pressure.

1.4 SUBMITTALS

- A. Product Data: For each type of valve indicated.

1.5 QUALITY ASSURANCE

- A. Source Limitations for Valves: Obtain each type of valve from single source from single manufacturer.
- B. ASME Compliance:
 - 1. ASME B16.10 and ASME B16.34 for ferrous valve dimensions and design criteria.
 - 2. ASME B31.1 for power piping valves.
 - 3. ASME B31.9 for building services piping valves.
- C. NSF Compliance: NSF 61 for valve materials for potable-water service.

1.6 DELIVERY, STORAGE, AND HANDLING

- A. Prepare valves for shipping as follows:
 - 1. Protect internal parts against rust and corrosion.
 - 2. Protect threads, flange faces, grooves, and weld ends.
 - 3. Set angle and globe valves closed to prevent rattling.
 - 4. Set ball and plug valves open to minimize exposure of functional surfaces.
 - 5. Set butterfly valves closed or slightly open.
 - 6. Block check valves in either closed or open position.
- B. Use the following precautions during storage:
 - 1. Maintain valve end protection.
 - 2. Store valves indoors and maintain at higher than ambient dew point temperature. If outdoor storage is necessary, store valves off the ground in watertight enclosures.
- C. Use sling to handle large valves; rig sling to avoid damage to exposed parts. Do not use handwheels or stems as lifting or rigging points.

PART 2 - PRODUCTS

2.1 GENERAL REQUIREMENTS FOR VALVES

- A. Refer to valve schedule articles for applications of valves.
- B. Valve Pressure and Temperature Ratings: Not less than indicated and as required for system pressures and temperatures.
- C. Valve Sizes: Same as upstream piping unless otherwise indicated.
- D. Valve Actuator Types:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Gear Actuator: For quarter-turn valves NPS 8 and larger.
 2. Handwheel: For valves other than quarter-turn types.
 3. Handlever: For quarter-turn valves NPS 6 and smaller except plug valves.
 4. Wrench: For plug valves with square heads. Furnish Owner with 1 wrench for every 5 plug valves, for each size square plug-valve head.
- E. Valves in Insulated Piping: With 2-inch stem extensions and the following features:
1. Ball Valves: With extended operating handle of non-thermal-conductive material, and protective sleeve that allows operation of valve without breaking the vapor seal or disturbing insulation.
 2. Butterfly Valves: With extended neck.
- F. Valve-End Connections:
1. Flanged: With flanges according to ASME B16.1 for iron valves.
 2. Solder Joint: With sockets according to ASME B16.18.
 3. Threaded: With threads according to ASME B1.20.1.
- G. Valve Bypass and Drain Connections: MSS SP-45.

2.2 BRONZE ANGLE VALVES

- A. Class 125, Bronze Angle Valves with Bronze Disc:
1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Hammond Valve.
 - b. Milwaukee Valve Company.
 2. Description:
 - a. Standard: MSS SP-80, Type 1.
 - b. CWP Rating: 200 psig.
 - c. Body Material: ASTM B 62, bronze with integral seat and screw-in bonnet.
 - d. Ends: Threaded.
 - e. Stem and Disc: Bronze.
 - f. Packing: Asbestos free.
 - g. Handwheel: Malleable iron, bronze, or aluminum.

2.3 BRONZE BALL VALVES

- A. Two-Piece, Full-Port, Bronze Ball Valves with Bronze Trim:
1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. American Valve, Inc.
 - b. Conbraco Industries, Inc.; Apollo Valves.
 - c. Crane Co.; Crane Valve Group; Crane Valves.
 - d. Hammond Valve.
 - e. Lance Valves; a division of Advanced Thermal Systems, Inc.
 - f. Legend Valve.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- g. Milwaukee Valve Company.
- h. NIBCO INC.
- i. Red-White Valve Corporation.
- j. Watts Regulator Co.; a division of Watts Water Technologies, Inc.

2. Description:

- a. Standard: MSS SP-110.
- b. SWP Rating: 150 psig.
- c. CWP Rating: 600 psig.
- d. Body Design: Two piece.
- e. Body Material: Bronze.
- f. Ends: Threaded.
- g. Seats: PTFE or TFE.
- h. Stem: Bronze.
- i. Ball: Chrome-plated brass.
- j. Port: Full.

B. Two-Piece, Full-Port, Bronze Ball Valves with Stainless-Steel Trim:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:

- a. Conbraco Industries, Inc.; Apollo Valves.
- b. Crane Co.; Crane Valve Group; Crane Valves.
- c. Hammond Valve.
- d. Lance Valves; a division of Advanced Thermal Systems, Inc.
- e. Milwaukee Valve Company.
- f. NIBCO INC.
- g. Watts Regulator Co.; a division of Watts Water Technologies, Inc.

2. Description:

- a. Standard: MSS SP-110.
- b. SWP Rating: 150 psig.
- c. CWP Rating: 600 psig.
- d. Body Design: Two piece.
- e. Body Material: Bronze.
- f. Ends: Threaded.
- g. Seats: PTFE or TFE.
- h. Stem: Stainless steel.
- i. Ball: Stainless steel, vented.
- j. Port: Full.

C. Three-Piece, Full-Port, Bronze Ball Valves with Bronze Trim:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:

- a. Conbraco Industries, Inc.; Apollo Valves.
- b. DynaQuip Controls.
- c. Hammond Valve.
- d. Milwaukee Valve Company.
- e. NIBCO INC.
- f. Red-White Valve Corporation.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

2. Description:

- a. Standard: MSS SP-110.
- b. SWP Rating: 150 psig.
- c. CWP Rating: 600 psig.
- d. Body Design: Three piece.
- e. Body Material: Bronze.
- f. Ends: Threaded.
- g. Seats: PTFE or TFE.
- h. Stem: Bronze.
- i. Ball: Chrome-plated brass.
- j. Port: Full.

D. Three-Piece, Full-Port, Bronze Ball Valves with Stainless-Steel Trim:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:

- a. Conbraco Industries, Inc.; Apollo Valves.
- b. Hammond Valve.
- c. Milwaukee Valve Company.
- d. NIBCO INC.

2. Description:

- a. Standard: MSS SP-110.
- b. SWP Rating: 150 psig.
- c. CWP Rating: 600 psig.
- d. Body Design: Three piece.
- e. Body Material: Bronze.
- f. Ends: Threaded.
- g. Seats: PTFE or TFE.
- h. Stem: Stainless steel.
- i. Ball: Stainless steel, vented.
- j. Port: Full.

2.4 IRON, SINGLE-FLANGE BUTTERFLY VALVES

A. 200 CWP, Iron, Single-Flange Butterfly Valves with EPDM Seat and Aluminum-Bronze Disc:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:

- a. ABZ Valve and Controls; a division of ABZ Manufacturing, Inc.
- b. Conbraco Industries, Inc.; Apollo Valves.
- c. Cooper Cameron Valves; a division of Cooper Cameron Corporation.
- d. Crane Co.; Crane Valve Group; Jenkins Valves.
- e. Crane Co.; Crane Valve Group; Stockham Division.
- f. DeZurik Water Controls.
- g. Flo Fab Inc.
- h. Hammond Valve.
- i. Kitz Corporation.
- j. Legend Valve.
- k. Milwaukee Valve Company.
- l. NIBCO INC.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- m. Norriseal; a Dover Corporation company.
- n. Red-White Valve Corporation.
- o. Spence Strainers International; a division of CIRCOR International, Inc.
- p. Watts Regulator Co.; a division of Watts Water Technologies, Inc.

2. Description:

- a. Standard: MSS SP-67, Type I.
- b. CWP Rating: 200 psig.
- c. Body Design: Lug type; suitable for bidirectional dead-end service at rated pressure without use of downstream flange.
- d. Body Material: ASTM A 126, cast iron or ASTM A 536, ductile iron.
- e. Seat: EPDM.
- f. Stem: One- or two-piece stainless steel.
- g. Disc: Aluminum bronze.

B. 200 CWP, Iron, Single-Flange Butterfly Valves with EPDM Seat and Ductile-Iron Disc:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:

- a. ABZ Valve and Controls; a division of ABZ Manufacturing, Inc.
- b. American Valve, Inc.
- c. Conbraco Industries, Inc.; Apollo Valves.
- d. Cooper Cameron Valves; a division of Cooper Cameron Corporation.
- e. Crane Co.; Crane Valve Group; Center Line.
- f. Crane Co.; Crane Valve Group; Stockham Division.
- g. DeZurik Water Controls.
- h. Flo Fab Inc.
- i. Hammond Valve.
- j. Kitz Corporation.
- k. Legend Valve.
- l. Milwaukee Valve Company.
- m. Mueller Steam Specialty; a division of SPX Corporation.
- n. NIBCO INC.
- o. Norriseal; a Dover Corporation company.
- p. Spence Strainers International; a division of CIRCOR International, Inc.
- q. Sure Flow Equipment Inc.
- r. Watts Regulator Co.; a division of Watts Water Technologies, Inc.

2. Description:

- a. Standard: MSS SP-67, Type I.
- b. CWP Rating: 200 psig.
- c. Body Design: Lug type; suitable for bidirectional dead-end service at rated pressure without use of downstream flange.
- d. Body Material: ASTM A 126, cast iron or ASTM A 536, ductile iron.
- e. Seat: EPDM.
- f. Stem: One- or two-piece stainless steel.
- g. Disc: Nickel-plated or -coated ductile iron.

C. 200 CWP, Iron, Single-Flange Butterfly Valves with EPDM Seat and Stainless-Steel Disc:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- a. ABZ Valve and Controls; a division of ABZ Manufacturing, Inc.
- b. American Valve, Inc.
- c. Conbraco Industries, Inc.; Apollo Valves.
- d. Cooper Cameron Valves; a division of Cooper Cameron Corporation.
- e. Crane Co.; Crane Valve Group; Jenkins Valves.
- f. Crane Co.; Crane Valve Group; Stockham Division.
- g. DeZurik Water Controls.
- h. Flo Fab Inc.
- i. Hammond Valve.
- j. Kitz Corporation.
- k. Legend Valve.
- l. Milwaukee Valve Company.
- m. Mueller Steam Specialty; a division of SPX Corporation.
- n. NIBCO INC.
- o. Norriseal; a Dover Corporation company.
- p. Red-White Valve Corporation.
- q. Spence Strainers International; a division of CIRCOR International, Inc.
- r. Sure Flow Equipment Inc.
- s. Watts Regulator Co.; a division of Watts Water Technologies, Inc.

2. Description:

- a. Standard: MSS SP-67, Type I.
- b. CWP Rating: 200 psig.
- c. Body Design: Lug type; suitable for bidirectional dead-end service at rated pressure without use of downstream flange.
- d. Body Material: ASTM A 126, cast iron or ASTM A 536, ductile iron.
- e. Seat: EPDM.
- f. Stem: One- or two-piece stainless steel.
- g. Disc: Stainless steel.

2.5 BRONZE LIFT CHECK VALVES

A. Class 125, Lift Check Valves with Bronze Disc:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Crane Co.; Crane Valve Group; Crane Valves.
 - b. Crane Co.; Crane Valve Group; Jenkins Valves.
 - c. Crane Co.; Crane Valve Group; Stockham Division.
2. Description:
 - a. Standard: MSS SP-80, Type 1.
 - b. CWP Rating: 200 psig.
 - c. Body Design: Vertical flow.
 - d. Body Material: ASTM B 61 or ASTM B 62, bronze.
 - e. Ends: Threaded.
 - f. Disc: Bronze.

2.6 BRONZE SWING CHECK VALVES

A. Class 125, Bronze Swing Check Valves with Bronze Disc:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:

- a. American Valve, Inc.
- b. Crane Co.; Crane Valve Group; Crane Valves.
- c. Crane Co.; Crane Valve Group; Jenkins Valves.
- d. Crane Co.; Crane Valve Group; Stockham Division.
- e. Hammond Valve.
- f. Kitz Corporation.
- g. Milwaukee Valve Company.
- h. NIBCO INC.
- i. Powell Valves.
- j. Red-White Valve Corporation.
- k. Watts Regulator Co.; a division of Watts Water Technologies, Inc.
- l. Zy-Tech Global Industries, Inc.

2. Description:

- a. Standard: MSS SP-80, Type 3.
- b. CWP Rating: 200 psig.
- c. Body Design: Horizontal flow.
- d. Body Material: ASTM B 62, bronze.
- e. Ends: Threaded.
- f. Disc: Bronze.

B. Class 150, Bronze Swing Check Valves with Bronze Disc:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:

- a. American Valve, Inc.
- b. Crane Co.; Crane Valve Group; Crane Valves.
- c. Crane Co.; Crane Valve Group; Jenkins Valves.
- d. Crane Co.; Crane Valve Group; Stockham Division.
- e. Kitz Corporation.
- f. Milwaukee Valve Company.
- g. NIBCO INC.
- h. Red-White Valve Corporation.
- i. Zy-Tech Global Industries, Inc.

2. Description:

- a. Standard: MSS SP-80, Type 3.
- b. CWP Rating: 300 psig.
- c. Body Design: Horizontal flow.
- d. Body Material: ASTM B 62, bronze.
- e. Ends: Threaded.
- f. Disc: Bronze.

2.7 IRON SWING CHECK VALVES

A. Class 125, Iron Swing Check Valves with Metal Seats:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- a. Crane Co.; Crane Valve Group; Crane Valves.
- b. Crane Co.; Crane Valve Group; Jenkins Valves.
- c. Crane Co.; Crane Valve Group; Stockham Division.
- d. Hammond Valve.
- e. Kitz Corporation.
- f. Legend Valve.
- g. Milwaukee Valve Company.
- h. NIBCO INC.
- i. Powell Valves.
- j. Red-White Valve Corporation.
- k. Sure Flow Equipment Inc.
- l. Watts Regulator Co.; a division of Watts Water Technologies, Inc.
- m. Zy-Tech Global Industries, Inc.

2. Description:

- a. Standard: MSS SP-71, Type I.
- b. CWP Rating: 200 psig.
- c. Body Design: Clear or full waterway.
- d. Body Material: ASTM A 126, gray iron with bolted bonnet.
- e. Ends: Flanged.
- f. Trim: Bronze.
- g. Gasket: Asbestos free.

B. Class 250, Iron Swing Check Valves with Metal Seats:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:

- a. Crane Co.; Crane Valve Group; Crane Valves.
- b. Crane Co.; Crane Valve Group; Jenkins Valves.
- c. Crane Co.; Crane Valve Group; Stockham Division.
- d. Hammond Valve.
- e. Milwaukee Valve Company.
- f. NIBCO INC.
- g. Watts Regulator Co.; a division of Watts Water Technologies, Inc.

2. Description:

- a. Standard: MSS SP-71, Type I.
- b. CWP Rating: 500 psig.
- c. Body Design: Clear or full waterway.
- d. Body Material: ASTM A 126, gray iron with bolted bonnet.
- e. Ends: Flanged.
- f. Trim: Bronze.
- g. Gasket: Asbestos free.

2.8 BRONZE GLOBE VALVES

A. Class 125, Bronze Globe Valves with Bronze Disc:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:

- a. Crane Co.; Crane Valve Group; Crane Valves.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- b. Crane Co.; Crane Valve Group; Stockham Division.
- c. Hammond Valve.
- d. Kitz Corporation.
- e. Milwaukee Valve Company.
- f. NIBCO INC.
- g. Powell Valves.
- h. Red-White Valve Corporation.
- i. Watts Regulator Co.; a division of Watts Water Technologies, Inc.
- j. Zy-Tech Global Industries, Inc.

2. Description:

- a. Standard: MSS SP-80, Type 1.
- b. CWP Rating: 200 psig.
- c. Body Material: ASTM B 62, bronze with integral seat and screw-in bonnet.
- d. Ends: Threaded or solder joint.
- e. Stem and Disc: Bronze.
- f. Packing: Asbestos free.
- g. Handwheel: Malleable iron, bronze, or aluminum.

2.9 IRON GLOBE VALVES

A. Class 125, Iron Globe Valves:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:

- a. Crane Co.; Crane Valve Group; Crane Valves.
- b. Crane Co.; Crane Valve Group; Jenkins Valves.
- c. Crane Co.; Crane Valve Group; Stockham Division.
- d. Hammond Valve.
- e. Kitz Corporation.
- f. Milwaukee Valve Company.
- g. NIBCO INC.
- h. Powell Valves.
- i. Red-White Valve Corporation.
- j. Watts Regulator Co.; a division of Watts Water Technologies, Inc.
- k. Zy-Tech Global Industries, Inc.

2. Description:

- a. Standard: MSS SP-85, Type I.
- b. CWP Rating: 200 psig.
- c. Body Material: ASTM A 126, gray iron with bolted bonnet.
- d. Ends: Flanged.
- e. Trim: Bronze.
- f. Packing and Gasket: Asbestos free.

B. Class 250, Iron Globe Valves:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:

- a. Crane Co.; Crane Valve Group; Crane Valves.
- b. Crane Co.; Crane Valve Group; Jenkins Valves.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- c. Crane Co.; Crane Valve Group; Stockham Division.
 - d. Hammond Valve.
 - e. Milwaukee Valve Company.
 - f. NIBCO INC.
 - g. Watts Regulator Co.; a division of Watts Water Technologies, Inc.
2. Description:
- a. Standard: MSS SP-85, Type I.
 - b. CWP Rating: 500 psig.
 - c. Body Material: ASTM A 126, gray iron with bolted bonnet.
 - d. Ends: Flanged.
 - e. Trim: Bronze.
 - f. Packing and Gasket: Asbestos free.

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine valve interior for cleanliness, freedom from foreign matter, and corrosion. Remove special packing materials, such as blocks, used to prevent disc movement during shipping and handling.
- B. Operate valves in positions from fully open to fully closed. Examine guides and seats made accessible by such operations.
- C. Examine threads on valve and mating pipe for form and cleanliness.
- D. Examine mating flange faces for conditions that might cause leakage. Check bolting for proper size, length, and material. Verify that gasket is of proper size, that its material composition is suitable for service, and that it is free from defects and damage.
- E. Do not attempt to repair defective valves; replace with new valves.

3.2 VALVE INSTALLATION

- A. Install valves with unions or flanges at each piece of equipment arranged to allow service, maintenance, and equipment removal without system shutdown.
- B. Locate valves for easy access and provide separate support where necessary.
- C. Install valves in horizontal piping with stem at or above center of pipe.
- D. Install valves in position to allow full stem movement.
- E. Install check valves for proper direction of flow and as follows:
 - 1. Swing Check Valves: In horizontal position with hinge pin level.
 - 2. Lift Check Valves: With stem upright and plumb.

3.3 ADJUSTING

- A. Adjust or replace valve packing after piping systems have been tested and put into service but before final adjusting and balancing. Replace valves if persistent leaking occurs.

3.4 GENERAL REQUIREMENTS FOR VALVE APPLICATIONS

- A. If valve applications are not indicated, use the following:
 - 1. Shutoff Service: Ball or butterfly valves.
 - 2. Butterfly Valve Dead-End Service: Single-flange (lug) type.
 - 3. Throttling Service Globe, angle, ball or butterfly valves.
 - 4. Pump-Discharge Check Valves:
 - a. NPS 2 and Smaller: Bronze swing check valves with bronze disc.
 - b. NPS 2-1/2 and Larger for Domestic Water: Iron swing check valves with lever and weight check valves.
 - c. NPS 2-1/2 and Larger for Sanitary Waste and Storm Drainage: Iron swing check valves with lever and weight or spring.
- B. If valves with specified SWP classes or CWP ratings are not available, the same types of valves with higher SWP classes or CWP ratings may be substituted.
- C. Select valves, except wafer types, with the following end connections:
 - 1. For Copper Tubing, NPS 2 and Smaller: Threaded ends except where solder-joint valve-end option is indicated in valve schedules below.
 - 2. For Copper Tubing, NPS 2-1/2 to NPS 4: Flanged ends except where threaded valve-end option is indicated in valve schedules below.
 - 3. For Copper Tubing, NPS 5 and Larger: Flanged ends.
 - 4. For Steel Piping, NPS 2 and Smaller: Threaded ends.
 - 5. For Steel Piping, NPS 2-1/2 to NPS 4: Flanged ends except where threaded valve-end option is indicated in valve schedules below.
 - 6. For Steel Piping, NPS 5 and Larger: Flanged ends.

3.5 DOMESTIC, HOT- AND COLD-WATER VALVE SCHEDULE

- A. Pipe NPS 2 and Smaller:
 - 1. Bronze Valves: May be provided with solder-joint ends instead of threaded ends.
 - 2. Bronze Angle Valves: Class 125 or Class 150, bronze disc.
 - 3. Ball Valves: One, Two or Three piece, full or, regular port, bronze with bronze or stainless-steel trim.
 - 4. Bronze Swing Check Valves: Class 125 or Class 150, bronze disc.
 - 5. Bronze Globe Valves: Class 125 or Class 150, bronze disc.
- B. Pipe NPS 2-1/2 and Larger:
 - 1. Iron Valves, NPS 2-1/2 to NPS 4: May be provided with threaded ends instead of flanged ends.
 - 2. Ball Valves: One, Two or Three piece, full or, regular port, bronze with bronze or stainless-steel trim.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

3. Iron, Single-Flange Butterfly Valves: 200 CWP, EPDM seat, aluminum-bronze, ductile-iron or stainless-steel disc.
4. Iron Swing Check Valves: Class 125 or Class 250, metal seats.
5. Iron Globe Valves: Class 125 or Class 250.

END OF SECTION 220523

BLANK PAGE

SECTION 220548

VIBRATION AND SEISMIC CONTROLS FOR PLUMBING PIPING AND EQUIPMENT

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. This Section includes the following restraints and vibration isolation as defined in Section 23 0548 "Vibration Isolation and Seismic Controls for HVAC" for the following:
 - 1. Plumbing Piping.
 - 2. Plumbing Equipment.

PART 2 - PRODUCTS

2.1 (NOT USED)

PART 3 - EXECUTION

3.1 (NOT USED)

END OF SECTION 220548

BLANK PAGE

SECTION 220553

IDENTIFICATION FOR PLUMBING PIPING AND EQUIPMENT

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Equipment labels.
 - 2. Warning signs and labels.
 - 3. Pipe labels.
 - 4. Stencils.
 - 5. Valve tags.
 - 6. Warning tags.

1.3 SUBMITTALS

- A. Product Data: For each type of product indicated.
- B. Samples: For color, letter style, and graphic representation required for each identification material and device.
- C. Equipment Label Schedule: Include a listing of all equipment to be labeled with the proposed content for each label.
- D. Valve numbering scheme.
- E. Valve Schedules: For each piping system to include in maintenance manuals.

1.4 COORDINATION

- A. Coordinate installation of identifying devices with completion of covering and painting of surfaces where devices are to be applied.
- B. Coordinate installation of identifying devices with locations of access panels and doors.
- C. Install identifying devices before installing acoustical ceilings and similar concealment.

PART 2 - PRODUCTS

2.1 EQUIPMENT LABELS

A. Plastic Labels for Equipment:

1. Material and Thickness: Multilayer, multicolor, plastic labels for mechanical engraving, 1/16 inch thick, and having predrilled holes for attachment hardware.
2. Letter Color: White.
3. Background Color: Blue.
4. Maximum Temperature: Able to withstand temperatures up to 160 deg F.
5. Minimum Label Size: Length and width vary for required label content, but not less than 2-1/2 by 3/4 inch.
6. Minimum Letter Size: 1/4 inch for name of units if viewing distance is less than 24 inches, 1/2 inch for viewing distances up to 72 inches, and proportionately larger lettering for greater viewing distances. Include secondary lettering two-thirds to three-fourths the size of principal lettering.
7. Fasteners: Stainless-steel rivets or self-tapping screws.
8. Adhesive: Contact-type permanent adhesive, compatible with label and with substrate.

B. Label Content: Include equipment's Drawing designation or unique equipment number, Drawing numbers where equipment is indicated (plans, details, and schedules), plus the Specification Section number and title where equipment is specified.

C. Equipment Label Schedule: For each item of equipment to be labeled, on 8-1/2-by-11-inch bond paper. Tabulate equipment identification number and identify Drawing numbers where equipment is indicated (plans, details, and schedules), plus the Specification Section number and title where equipment is specified. Equipment schedule shall be included in operation and maintenance data.

2.2 WARNING SIGNS AND LABELS

A. Material and Thickness: Multilayer, multicolor, plastic labels for mechanical engraving, 1/16 inch thick, and having predrilled holes for attachment hardware.

B. Letter Color: Black.

C. Background Color: Yellow.

D. Maximum Temperature: Able to withstand temperatures up to 160 deg F.

E. Minimum Label Size: Length and width vary for required label content, but not less than 2-1/2 by 3/4 inch.

F. Minimum Letter Size: 1/4 inch for name of units if viewing distance is less than 24 inches, 1/2 inch for viewing distances up to 72 inches, and proportionately larger lettering for greater viewing distances. Include secondary lettering two-thirds to three-fourths the size of principal lettering.

G. Fasteners: Stainless-steel rivets or self-tapping screws.

H. Adhesive: Contact-type permanent adhesive, compatible with label and with substrate.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- I. Label Content: Include caution and warning information, plus emergency notification instructions.

2.3 PIPE LABELS

- A. General Requirements for Manufactured Pipe Labels: Preprinted, color-coded, with lettering indicating service, and showing flow direction.
- B. Pretensioned Pipe Labels: Precoiled, semirigid plastic formed to cover full circumference of pipe and to attach to pipe without fasteners or adhesive.
- C. Self-Adhesive Pipe Labels: Printed plastic with contact-type, permanent-adhesive backing.
- D. Pipe Label Contents: Include identification of piping service using same designations or abbreviations as used on Drawings, pipe size, and an arrow indicating flow direction.
 - 1. Flow-Direction Arrows: Integral with piping system service lettering to accommodate both directions, or as separate unit on each pipe label to indicate flow direction.
 - 2. Lettering Size: At least 1-1/2 inches high.

2.4 STENCILS

- A. Stencils: Prepared with letter sizes according to ASME A13.1 for piping; and minimum letter height of 3/4 inch for access panel and door labels, equipment labels, and similar operational instructions.
 - 1. Stencil Material: Fiberboard or metal.
 - 2. Stencil Paint: Exterior, gloss, alkyd enamel black unless otherwise indicated. Paint may be in pressurized spray-can form.
 - 3. Identification Paint: Exterior, alkyd enamel in colors according to ASME A13.1 unless otherwise indicated.

2.5 VALVE TAGS

- A. Valve Tags: Stamped or engraved with 1/4-inch letters for piping system abbreviation and 1/2-inch numbers.
 - 1. Tag Material: Brass, 0.032-inch minimum thickness, and having predrilled or stamped holes for attachment hardware.
 - 2. Fasteners: Brass wire-link or beaded chain; or S-hook.
- B. Valve Schedules: For each piping system, on 8-1/2-by-11-inch bond paper. Tabulate valve number, piping system, system abbreviation (as shown on valve tag), location of valve (room or space), normal-operating position (open, closed, or modulating), and variations for identification. Mark valves for emergency shutoff and similar special uses.
 - 1. Valve-tag schedule shall be included in operation and maintenance data.

2.6 WARNING TAGS

- A. Warning Tags: Preprinted or partially preprinted, accident-prevention tags, of plasticized card stock with matte finish suitable for writing.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Size: 3 by 5-1/4 inches minimum.
2. Fasteners: Brass grommet and wire.
3. Nomenclature: Large-size primary caption such as "DANGER," "CAUTION," or "DO NOT OPERATE."
4. Color: Yellow background with black lettering.

PART 3 - EXECUTION

3.1 PREPARATION

- A. Clean piping and equipment surfaces of substances that could impair bond of identification devices, including dirt, oil, grease, release agents, and incompatible primers, paints, and encapsulants.

3.2 EQUIPMENT LABEL INSTALLATION

- A. Install or permanently fasten labels on each major item of mechanical equipment.
- B. Locate equipment labels where accessible and visible.

3.3 PIPE LABEL INSTALLATION

- A. Piping Color-Coding: Painting of piping is specified in Division 09.
- B. Stenciled Pipe Label Option: Stenciled labels may be provided instead of manufactured pipe labels, at Installer's option. Install stenciled pipe labels, complying with ASME A13.1, on each piping system.
 1. Identification Paint: Use for contrasting background.
 2. Stencil Paint: Use for pipe marking.
- C. Locate pipe labels where piping is exposed or above accessible ceilings in finished spaces; machine rooms; accessible maintenance spaces such as shafts, tunnels, and plenums; and exterior exposed locations as follows:
 1. Near each valve and control device.
 2. Near each branch connection, excluding short takeoffs for fixtures and terminal units. Where flow pattern is not obvious, mark each pipe at branch.
 3. Near penetrations through walls, floors, ceilings, and inaccessible enclosures.
 4. At access doors, manholes, and similar access points that permit view of concealed piping.
 5. Near major equipment items and other points of origination and termination.
 6. Spaced at maximum intervals of 50 feet along each run. Reduce intervals to 25 feet in areas of congested piping and equipment.
 7. On piping above removable acoustical ceilings. Omit intermediately spaced labels.
- D. Pipe Label Color Schedule:
 1. Low-Pressure, Compressed-Air Piping:
 - a. Background Color: Comply with ASME A13.1.
 - b. Letter Color: Comply with ASME A13.1.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

2. Medium-Pressure, Compressed-Air Piping:
 - a. Background Color: Comply with ASME A13.1.
 - b. Letter Color: Comply with ASME A13.1.
3. Domestic Water Piping:
 - a. Background Color: Comply with ASME A13.1.
 - b. Letter Color: Comply with ASME A13.1.
4. Sanitary Waste and Storm Drainage Piping:
 - a. Background Color: Comply with ASME A13.1.
 - b. Letter Color: Comply with ASME A13.1.

3.4 VALVE-TAG INSTALLATION

- A. Install tags on valves and control devices in piping systems, except check valves; valves within factory-fabricated equipment units; shutoff valves; faucets; convenience and lawn-watering hose connections; and similar roughing-in connections of end-use fixtures and units. List tagged valves in a valve schedule.
- B. Valve-Tag Application Schedule: Tag valves according to size, shape, and color scheme and with captions similar to those indicated in the following subparagraphs:
 1. Valve-Tag Size and Shape:
 - a. Cold Water: 1-1/2 inches, round.
 - b. Hot Water: 1-1/2 inches, round.
 - c. Low-Pressure Compressed Air: 1-1/2 inches, round.
 - d. High-Pressure Compressed Air: 1-1/2 inches, round.
 2. Valve-Tag Color:
 - a. Cold Water: Comply with ASME A13.1.
 - b. Hot Water: Comply with ASME A13.1.
 - c. Low-Pressure Compressed Air: Comply with ASME A13.1.
 - d. High-Pressure Compressed Air: Comply with ASME A13.1.
 3. Letter Color:
 - a. Cold Water: Comply with ASME A13.1.
 - b. Hot Water: Comply with ASME A13.1.
 - c. Low-Pressure Compressed Air: Comply with ASME A13.1.
 - d. High-Pressure Compressed Air: Comply with ASME A13.1.

3.5 WARNING-TAG INSTALLATION

- A. Write required message on, and attach warning tags to, equipment and other items where required.

END OF SECTION 220553

BLANK PAGE

SECTION 220719

PLUMBING PIPING INSULATION

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section includes insulating the following plumbing piping services:
 - 1. Domestic cold-water piping.
 - 2. Domestic hot-water piping.
 - 3. Domestic recirculating hot-water piping.
 - 4. Supplies and drains for handicap-accessible lavatories and sinks.

1.3 DEFINITIONS:

- A. Refer to Section 22 0500 "Common Work Results for Plumbing".

1.4 ACTION SUBMITTALS

- A. Product Data: For each type of product indicated. Include thermal conductivity, water-vapor permeance thickness, and jackets (both factory- and field-applied, if any).
- B. Shop Drawings: Include plans, elevations, sections, details, and attachments to other work.
 - 1. Detail application of protective shields, saddles, and inserts at hangers for each type of insulation and hanger.
 - 2. Detail attachment and covering of heat tracing inside insulation.
 - 3. Detail insulation application at pipe expansion joints for each type of insulation.
 - 4. Detail insulation application at elbows, fittings, flanges, valves, and specialties for each type of insulation.
 - 5. Detail removable insulation at piping specialties, equipment connections, and access panels.
 - 6. Detail application of field-applied jackets.
 - 7. Detail application at linkages of control devices.

1.5 INFORMATIONAL SUBMITTALS

- A. Qualification Data: For qualified Installer.
- B. Material Test Reports: From a qualified testing agency acceptable to authorities having jurisdiction indicating, interpreting, and certifying test results for compliance of insulation materials, sealers, attachments, cements, and jackets, with requirements indicated. Include dates of tests and test methods employed.

1.6 QUALITY ASSURANCE

- A. Installer Qualifications: Skilled mechanics who have successfully completed an apprenticeship program or another craft training program certified by the Department of Labor, Bureau of Apprenticeship and Training.
- B. Surface-Burning Characteristics: For insulation and related materials, as determined by testing identical products according to ASTM E 84 by a testing agency acceptable to authorities having jurisdiction. Factory label insulation and jacket materials and adhesive, mastic, tapes, and cement material containers, with appropriate markings of applicable testing agency.
 - 1. Insulation Installed Indoors: Flame-spread index of 25 or less, and smoke-developed index of 50 or less.
 - 2. Insulation Installed Outdoors: Flame-spread index of 75 or less, and smoke-developed index of 150 or less.

1.7 DELIVERY, STORAGE, AND HANDLING

- A. Packaging: Insulation material containers shall be marked by manufacturer with appropriate ASTM standard designation, type and grade, and maximum use temperature.

1.8 COORDINATION

- A. Coordinate sizes and locations of supports, hangers, and insulation shields specified in Section 22 0529 "Hangers and Supports for Plumbing Piping and Equipment."
- B. Coordinate clearance requirements with piping Installer for piping insulation application. Before preparing piping Shop Drawings establish and maintain clearance requirements for installation of insulation and field-applied jackets and finishes and for space required for maintenance.

1.9 SCHEDULING

- A. Schedule insulation application after pressure testing systems and, where required, after installing and testing heat tracing. Insulation application may begin on segments that have satisfactory test results.
- B. Complete installation and concealment of plastic materials as rapidly as possible in each area of construction.

PART 2 - PRODUCTS

2.1 INSULATION MATERIALS

- A. Comply with requirements in "Piping Insulation Schedule, General," "Indoor Piping Insulation Schedule," "Outdoor, Aboveground Piping Insulation Schedule," and "Outdoor, Underground Piping Insulation Schedule" articles for where insulating materials shall be applied.
- B. Insulation for below-ambient service requires a vapor-barrier.
- C. Products shall not contain asbestos, lead, mercury, or mercury compounds.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- D. Products that come in contact with stainless steel shall have a leachable chloride content of less than 50 ppm when tested according to ASTM C 871.
- E. Insulation materials for use on austenitic stainless steel shall be qualified as acceptable according to ASTM C 795.
- F. Foam insulation materials shall not use CFC or HCFC blowing agents in the manufacturing process.
- G. Flexible Elastomeric Insulation: Closed-cell, sponge- or expanded-rubber materials. Comply with ASTM C 534, Type I for tubular materials.
 - 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Aeroflex USA, Inc.; Aerocel.
 - b. Armacell LLC; AP Armaflex.
 - c. K-Flex USA; Insul-Lock, Insul-Tube, and K-FLEX LS.
- H. Mineral-Fiber Blanket Insulation: Mineral or glass fibers bonded with a thermosetting resin. Comply with ASTM C 553:
 - 1. Type II and ASTM C 1290, Factory-applied jacket requirements are specified in "Factory-Applied Jackets" Article.
 - 2. Products: Subject to compliance with requirements, provide one of the following:
 - a. CertainTeed Corp.; SoftTouch Duct Wrap.
 - b. Johns Manville; Microlite.
 - c. Knauf Insulation; Friendly Feel Duct Wrap.
 - d. Manson Insulation Inc.; Alley Wrap.
 - e. Owens Corning; SOFTR All-Service Duct Wrap.
- I. Mineral-Fiber, Preformed Pipe Insulation:
 - 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Fibrex Insulations Inc.; Coreplus 1200.
 - b. Johns Manville; Micro-Lok.
 - c. Knauf Insulation; 1000-Degree Pipe Insulation.
 - d. Manson Insulation Inc.; Alley-K.
 - e. Owens Corning; Fiberglas Pipe Insulation.
 - 2. Type I, 850 Deg F Materials: Mineral or glass fibers bonded with a thermosetting resin. Comply with ASTM C 547, Type I, Grade A,
 - a. Without factory-applied jacket with factory-applied ASJ-SSL. Factory-applied jacket requirements are specified in "Factory-Applied Jackets" Article.
- J. Prefabricated Thermal Insulating Fitting Covers: Comply with ASTM C 450 for dimensions used in preforming insulation to cover valves, elbows, tees, and flanges.

2.2 INSULATING CEMENTS

- A. Mineral-Fiber Insulating Cement: Comply with ASTM C 195.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Products: Subject to compliance with requirements, provide the following:
 - a. Ramco Insulation, Inc.; Super-Stik.
- B. Mineral-Fiber, Hydraulic-Setting Insulating and Finishing Cement: Comply with ASTM C 449.
 1. Products: Subject to compliance with requirements, provide the following:
 - a. Ramco Insulation, Inc.; Ramcote 1200 and Quik-Cote.

2.3 ADHESIVES

- A. Materials shall be compatible with insulation materials, jackets, and substrates and for bonding insulation to itself and to surfaces to be insulated, unless otherwise indicated.
- B. Flexible Elastomeric Adhesive: Comply with MIL-A-24179A, Type II, Class I.
 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Aeroflex USA, Inc.; Aeroseal.
 - b. Armacell LLC; Armaflex 520 Adhesive.
 - c. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 85-75.
 - d. K-Flex USA; R-373 Contact Adhesive.
 2. For indoor applications, adhesive shall have a VOC content of 50 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).
- C. Mineral-Fiber Adhesive: Comply with MIL-A-3316C, Class 2, Grade A.
 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; CP-127.
 - b. Eagle Bridges - Marathon Industries; 225.
 - c. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 85-60/85-70.
 - d. Mon-Eco Industries, Inc.; 22-25.
 2. For indoor applications, adhesive shall have a VOC content of 80 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).
- D. ASJ Adhesive, and FSK Jacket Adhesive: Comply with MIL-A-3316C, Class 2, Grade A for bonding insulation jacket lap seams and joints.
 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; CP-82.
 - b. Eagle Bridges - Marathon Industries; 225.
 - c. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 85-20.
 - d. Mon-Eco Industries, Inc.; 22-25.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

2. For indoor applications, adhesive shall have a VOC content of 50 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).
- E. PVC Jacket Adhesive: Compatible with PVC jacket.
1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Dow Corning Corporation; 739, Dow Silicone.
 - b. Johns Manville; Zeston Perma-Weld, CEEL-TITE Solvent Welding Adhesive.
 - c. P.I.C. Plastics, Inc.; Welding Adhesive.
 - d. Speedline Corporation; Polyco VP Adhesive.
 2. For indoor applications, adhesive shall have a VOC content of 50 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).

2.4 MASTICS

- A. Materials shall be compatible with insulation materials, jackets, and substrates; comply with MIL-PRF-19565C, Type II.
1. For indoor applications, use mastics that have a VOC content of 50 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).
- B. Vapor-Barrier Mastic: Water based; suitable for indoor use on below-ambient services.
1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 30-80/30-90.
 - b. Vimasco Corporation; 749.
 2. Water-Vapor Permeance: ASTM E 96/E 96M, Procedure B, 0.013 perm at 43-mil dry film thickness.
 3. Service Temperature Range: Minus 20 to plus 180 deg F .
 4. Solids Content: ASTM D 1644, 58 percent by volume and 70 percent by weight.
 5. Color: White.
- C. Vapor-Barrier Mastic: Solvent based; suitable for indoor use on below-ambient services.
1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; CP-30.
 - b. Eagle Bridges - Marathon Industries; 501.
 - c. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 30-35.
 - d. Mon-Eco Industries, Inc.; 55-10.
 2. Water-Vapor Permeance: ASTM F 1249, 0.05 perm at 35-mil dry film thickness.
 3. Service Temperature Range: 0 to 180 deg F .
 4. Solids Content: ASTM D 1644, 44 percent by volume and 62 percent by weight.
 5. Color: White.
- D. Vapor-Barrier Mastic: Solvent based; suitable for outdoor use on below-ambient services.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; Encacel.
 - b. Eagle Bridges - Marathon Industries; 570.
 - c. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 60-95/60-96.
2. Water-Vapor Permeance: ASTM F 1249, 0.05 perm at 30-mil dry film thickness.
3. Service Temperature Range: Minus 50 to plus 220 deg F .
4. Solids Content: ASTM D 1644, 33 percent by volume and 46 percent by weight.
5. Color: White.

E. Breather Mastic: Water based; suitable for indoor and outdoor use on above-ambient services.

1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; CP-10.
 - b. Eagle Bridges - Marathon Industries; 550.
 - c. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 46-50.
 - d. Mon-Eco Industries, Inc.; 55-50.
 - e. Vimasco Corporation; WC-1/WC-5.
2. Water-Vapor Permeance: ASTM F 1249, 1.8 perms at 0.0625-inch dry film thickness.
3. Service Temperature Range: Minus 20 to plus 180 deg F .
4. Solids Content: 60 percent by volume and 66 percent by weight.
5. Color: White.

2.5 SEALANTS

A. ASJ Flashing Sealants, and PVC Jacket Flashing Sealants:

1. Products: Subject to compliance with requirements, provide the following:
 - a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; CP-76.
2. Materials shall be compatible with insulation materials, jackets, and substrates.
3. Fire- and water-resistant, flexible, elastomeric sealant.
4. Service Temperature Range: Minus 40 to plus 250 deg F .
5. Color: White.
6. For indoor applications, sealants shall have a VOC content of 420 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).

2.6 FACTORY-APPLIED JACKETS

A. Insulation system schedules indicate factory-applied jackets on various applications. When factory-applied jackets are indicated, comply with the following:

1. ASJ-SSL: ASJ with self-sealing, pressure-sensitive, acrylic-based adhesive covered by a removable protective strip; complying with ASTM C 1136, Type I.

2.7 FIELD-APPLIED JACKETS

- A. Field-applied jackets shall comply with ASTM C 921, Type I, unless otherwise indicated.
- B. PVC Jacket: High-impact-resistant, UV-resistant PVC complying with ASTM D 1784, Class 16354-C; thickness as scheduled; roll stock ready for shop or field cutting and forming. Thickness is indicated in field-applied jacket schedules.
1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Johns Manville; Zeston.
 - b. P.I.C. Plastics, Inc.; FG Series.
 - c. Proto Corporation; LoSmoke.
 - d. Speedline Corporation; SmokeSafe.
 2. Adhesive: As recommended by jacket material manufacturer.
 3. Color: Color-code jackets based on system.
 - a. White.
 4. Factory-fabricated fitting covers to match jacket if available; otherwise, field fabricate.
 - a. Shapes: 45- and 90-degree, short- and long-radius elbows, tees, valves, flanges, unions, reducers, end caps, soil-pipe hubs, traps, mechanical joints, and P-trap and supply covers for lavatories.
- C. Metal Jacket:
1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; Metal Jacketing Systems.
 - b. ITW Insulation Systems; Aluminum and Stainless Steel Jacketing.
 - c. RPR Products, Inc.; Insul-Mate.
 2. Aluminum Jacket: Comply with ASTM B 209 (ASTM B 209M), Alloy 3003, 3005, 3105, or 5005, Temper H-14.
 - a. Sheet and roll stock ready for shop or field sizing or factory cut and rolled to size.
 - b. Finish and thickness are indicated in field-applied jacket schedules.
 - c. Moisture Barrier for Indoor Applications: 1-mil- thick, heat-bonded polyethylene and kraft paper. [3-mil- thick, heat-bonded polyethylene and kraft paper] [2.5-mil-thick polysurlyn].
 - d. Moisture Barrier for Outdoor Applications: 3-mil- thick, heat-bonded polyethylene and kraft paper. [2.5-mil- thick polysurlyn].
 - e. Factory-Fabricated Fitting Covers:
 - 1) Same material, finish, and thickness as jacket.
 - 2) Preformed 2-piece or gore, 45- and 90-degree, short- and long-radius elbows.
 - 3) Tee covers.
 - 4) Flange and union covers.
 - 5) End caps.
 - 6) Beveled collars.
 - 7) Valve covers.
 - 8) Field fabricate fitting covers only if factory-fabricated fitting covers are not available.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

2.8 TAPES

A. ASJ Tape: White vapor-retarder tape matching factory-applied jacket with acrylic adhesive, complying with ASTM C 1136.

1. Products: Subject to compliance with requirements, provide one of the following:

- a. ABI, Ideal Tape Division; 428 AWF ASJ.
- b. Avery Dennison Corporation, Specialty Tapes Division; Fasson 0836.
- c. Compac Corporation; 104 and 105.
- d. Venture Tape; 1540 CW Plus, 1542 CW Plus, and 1542 CW Plus/SQ.

- 2. Width: 3 inches.
- 3. Thickness: 11.5 mils.
- 4. Adhesion: 90 ounces force/inch in width.
- 5. Elongation: 2 percent.
- 6. Tensile Strength: 40 lbf/inch in width.
- 7. ASJ Tape Disks and Squares: Precut disks or squares of ASJ tape.

B. PVC Tape: White vapor-retarder tape matching field-applied PVC jacket with acrylic adhesive; suitable for indoor and outdoor applications.

1. Products: Subject to compliance with requirements, provide one of the following:

- a. ABI, Ideal Tape Division; 370 White PVC tape.
- b. Compac Corporation; 130.
- c. Venture Tape; 1506 CW NS.

- 2. Width: 2 inches.
- 3. Thickness: 6 mils.
- 4. Adhesion: 64 ounces force/inch in width.
- 5. Elongation: 500 percent.
- 6. Tensile Strength: 18 lbf/inch in width.

C. Aluminum-Foil Tape: Vapor-retarder tape with acrylic adhesive.

1. Products: Subject to compliance with requirements, provide one of the following:

- a. ABI, Ideal Tape Division; 488 AWF.
- b. Avery Dennison Corporation, Specialty Tapes Division; Fasson 0800.
- c. Compac Corporation; 120.
- d. Venture Tape; 3520 CW.

- 2. Width: 2 inches.
- 3. Thickness: 3.7 mils.
- 4. Adhesion: 100 ounces force/inch in width.
- 5. Elongation: 5 percent.
- 6. Tensile Strength: 34 lbf/inch in width.

2.9 SECUREMENTS

A. Staples: Outward-clinching insulation staples, nominal 3/4-inch- wide, stainless steel or Monel.

2.10 PROTECTIVE SHIELDING GUARDS

A. Protective Shielding Pipe Covers:

1. Manufacturers: Subject to compliance with requirements provide products by one of the following:
 - a. Engineered Brass Company.
 - b. Insul-Tect Products Co.; a subsidiary of MVG Molded Products.
 - c. McGuire Manufacturing.
 - d. Plumberex.
 - e. Truebro; a brand of IPS Corporation.
 - f. Zurn Industries, LLC; Tubular Brass Plumbing Products Operation.
2. Description: Manufactured plastic wraps for covering plumbing fixture hot- and cold-water supplies and trap and drain piping. Comply with Americans with Disabilities Act (ADA) requirements.

B. Protective Shielding Piping Enclosures:

1. Manufacturers: Subject to compliance with requirements provide products by one of the following:
 - a. Truebro; a brand of IPS Corporation.
 - b. Zurn Industries, LLC; Tubular Brass Plumbing Products Operation.
2. Description: Manufactured plastic enclosure for covering plumbing fixture hot- and cold-water supplies and trap and drain piping. Comply with ADA requirements.

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine substrates and conditions for compliance with requirements for installation tolerances and other conditions affecting performance of insulation application.
1. Verify that systems to be insulated have been tested and are free of defects.
 2. Verify that surfaces to be insulated are clean and dry.
- B. Proceed with installation only after unsatisfactory conditions have been corrected.

3.2 PREPARATION

- A. Surface Preparation: Clean and dry surfaces to receive insulation. Remove materials that will adversely affect insulation application.
- B. Coordinate insulation installation with the trade installing heat tracing. Comply with requirements for heat tracing that apply to insulation.
- C. Mix insulating cements with clean potable water; if insulating cements are to be in contact with stainless-steel surfaces, use demineralized water.

3.3 GENERAL INSTALLATION REQUIREMENTS

- A. Install insulation materials, accessories, and finishes with smooth, straight, and even surfaces; free of voids throughout the length of piping including fittings, valves, and specialties.
- B. Install insulation materials, forms, vapor barriers or retarders, jackets, and thicknesses required for each item of pipe system as specified in insulation system schedules.
- C. Install accessories compatible with insulation materials and suitable for the service. Install accessories that do not corrode, soften, or otherwise attack insulation or jacket in either wet or dry state.
- D. Install insulation with longitudinal seams at top and bottom of horizontal runs.
- E. Install multiple layers of insulation with longitudinal and end seams staggered.
- F. Do not weld brackets, clips, or other attachment devices to piping, fittings, and specialties.
- G. Keep insulation materials dry during application and finishing.
- H. Install insulation with tight longitudinal seams and end joints. Bond seams and joints with adhesive recommended by insulation material manufacturer.
- I. Install insulation with least number of joints practical.
- J. Where vapor barrier is indicated, seal joints, seams, and penetrations in insulation at hangers, supports, anchors, and other projections with vapor-barrier mastic.
 - 1. Install insulation continuously through hangers and around anchor attachments.
 - 2. For insulation application where vapor barriers are indicated, extend insulation on anchor legs from point of attachment to supported item to point of attachment to structure. Taper and seal ends at attachment to structure with vapor-barrier mastic.
 - 3. Install insert materials and install insulation to tightly join the insert. Seal insulation to insulation inserts with adhesive or sealing compound recommended by insulation material manufacturer.
 - 4. Cover inserts with jacket material matching adjacent pipe insulation. Install shields over jacket, arranged to protect jacket from tear or puncture by hanger, support, and shield.
- K. Apply adhesives, mastics, and sealants at manufacturer's recommended coverage rate and wet and dry film thicknesses.
- L. Install insulation with factory-applied jackets as follows:
 - 1. Draw jacket tight and smooth.
 - 2. Cover circumferential joints with 3-inch wide strips, of same material as insulation jacket. Secure strips with adhesive and outward clinching staples along both edges of strip, spaced 4 inches o.c.
 - 3. Overlap jacket longitudinal seams at least 1-1/2 inches. Install insulation with longitudinal seams at bottom of pipe. Clean and dry surface to receive self-sealing lap. Staple laps with outward clinching staples along edge at:
 - a. 2 inches o.c.
 - b. For below-ambient services, apply vapor-barrier mastic over staples.
 - 4. Cover joints and seams with tape, according to insulation material manufacturer's written instructions, to maintain vapor seal.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

5. Where vapor barriers are indicated, apply vapor-barrier mastic on seams and joints and at ends adjacent to pipe flanges and fittings.
- M. Cut insulation in a manner to avoid compressing insulation more than 75 percent of its nominal thickness.
- N. Finish installation with systems at operating conditions. Repair joint separations and cracking due to thermal movement.
- O. Repair damaged insulation facings by applying same facing material over damaged areas. Extend patches at least 4 inches beyond damaged areas. Adhere, staple, and seal patches similar to butt joints.
- P. For above-ambient services, do not install insulation to the following:
 1. Vibration-control devices.
 2. Testing agency labels and stamps.
 3. Nameplates and data plates.
 4. Cleanouts.

3.4 PENETRATIONS

- A. Insulation Installation at Roof Penetrations: Install insulation continuously through roof penetrations.
 1. Seal penetrations with flashing sealant.
 2. For applications requiring only indoor insulation, terminate insulation above roof surface and seal with joint sealant. For applications requiring indoor and outdoor insulation, install insulation for outdoor applications tightly joined to indoor insulation ends. Seal joint with joint sealant.
 3. Extend jacket of outdoor insulation outside roof flashing at least 2 inches below top of roof flashing.
 4. Seal jacket to roof flashing with flashing sealant.
- B. Insulation Installation at Underground Exterior Wall Penetrations: Terminate insulation flush with sleeve seal. Seal terminations with flashing sealant.
- C. Insulation Installation at Aboveground Exterior Wall Penetrations: Install insulation continuously through wall penetrations.
 1. Seal penetrations with flashing sealant.
 2. For applications requiring only indoor insulation, terminate insulation inside wall surface and seal with joint sealant. For applications requiring indoor and outdoor insulation, install insulation for outdoor applications tightly joined to indoor insulation ends. Seal joint with joint sealant.
 3. Extend jacket of outdoor insulation outside wall flashing and overlap wall flashing at least 2 inches.
 4. Seal jacket to wall flashing with flashing sealant.
- D. Insulation Installation at Interior Wall and Partition Penetrations (That Are Not Fire Rated): Install insulation continuously through walls and partitions.
- E. Insulation Installation at Fire-Rated Wall and Partition Penetrations: Install insulation continuously through penetrations of fire-rated walls and partitions.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Comply with requirements in Section 078413 "Penetration Firestopping" for firestopping and fire-resistive joint sealers.

F. Insulation Installation at Floor Penetrations:

1. Pipe: Install insulation continuously through floor penetrations.
2. Seal penetrations through fire-rated assemblies. Comply with requirements in Section 078413 "Penetration Firestopping."

3.5 GENERAL PIPE INSULATION INSTALLATION

A. Requirements in this article generally apply to all insulation materials except where more specific requirements are specified in various pipe insulation material installation articles.

B. Insulation Installation on Fittings, Valves, Strainers, Flanges, and Unions:

1. Install insulation over fittings, valves, strainers, flanges, unions, and other specialties with continuous thermal and vapor-retarder integrity unless otherwise indicated.
2. Insulate pipe elbows using preformed fitting insulation or mitered fittings made from same material and density as adjacent pipe insulation. Each piece shall be butted tightly against adjoining piece and bonded with adhesive. Fill joints, seams, voids, and irregular surfaces with insulating cement finished to a smooth, hard, and uniform contour that is uniform with adjoining pipe insulation.
3. Insulate tee fittings with preformed fitting insulation or sectional pipe insulation of same material and thickness as used for adjacent pipe. Cut sectional pipe insulation to fit. Butt each section closely to the next and hold in place with tie wire. Bond pieces with adhesive.
4. Insulate valves using preformed fitting insulation or sectional pipe insulation of same material, density, and thickness as used for adjacent pipe. Overlap adjoining pipe insulation by not less than two times the thickness of pipe insulation, or one pipe diameter, whichever is thicker. For valves, insulate up to and including the bonnets, valve stuffing-box studs, bolts, and nuts. Fill joints, seams, and irregular surfaces with insulating cement.
5. Insulate strainers using preformed fitting insulation or sectional pipe insulation of same material, density, and thickness as used for adjacent pipe. Overlap adjoining pipe insulation by not less than two times the thickness of pipe insulation, or one pipe diameter, whichever is thicker. Fill joints, seams, and irregular surfaces with insulating cement. Insulate strainers so strainer basket flange or plug can be easily removed and replaced without damaging the insulation and jacket. Provide a removable reusable insulation cover. For below-ambient services, provide a design that maintains vapor barrier.
6. Insulate flanges and unions using a section of oversized preformed pipe insulation. Overlap adjoining pipe insulation by not less than two times the thickness of pipe insulation, or one pipe diameter, whichever is thicker.
7. Cover segmented insulated surfaces with a layer of finishing cement and coat with a mastic. Install vapor-barrier mastic for below-ambient services and a breather mastic for above-ambient services. Reinforce the mastic with fabric-reinforcing mesh. Trowel the mastic to a smooth and well-shaped contour.
8. For services not specified to receive a field-applied jacket except for flexible elastomeric, install fitted PVC cover over elbows, tees, strainers, valves, flanges, and unions. Terminate ends with PVC end caps. Tape PVC covers to adjoining insulation facing using PVC tape.
9. Stencil or label the outside insulation jacket of each union with the word "union." Match size and color of pipe labels.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- C. Insulate instrument connections for thermometers, pressure gages, pressure temperature taps, test connections, flow meters, sensors, switches, and transmitters on insulated pipes. Shape insulation at these connections by tapering it to and around the connection with insulating cement and finish with finishing cement, mastic, and flashing sealant.
- D. Install removable insulation covers at locations indicated. Installation shall conform to the following:
 - 1. Make removable flange and union insulation from sectional pipe insulation of same thickness as that on adjoining pipe. Install same insulation jacket as adjoining pipe insulation.
 - 2. When flange and union covers are made from sectional pipe insulation, extend insulation from flanges or union long at least two times the insulation thickness over adjacent pipe insulation on each side of flange or union. Secure flange cover in place with stainless-steel or aluminum bands. Select band material compatible with insulation and jacket.
 - 3. Construct removable valve insulation covers in same manner as for flanges, except divide the two-part section on the vertical center line of valve body.
 - 4. When covers are made from block insulation, make two halves, each consisting of mitered blocks wired to stainless-steel fabric. Secure this wire frame, with its attached insulation, to flanges with tie wire. Extend insulation at least 2 inches over adjacent pipe insulation on each side of valve. Fill space between flange or union cover and pipe insulation with insulating cement. Finish cover assembly with insulating cement applied in two coats. After first coat is dry, apply and trowel second coat to a smooth finish.
 - 5. Unless a PVC jacket is indicated in field-applied jacket schedules, finish exposed surfaces with a metal jacket.

3.6 INSTALLATION OF FLEXIBLE ELASTOMERIC INSULATION

- A. Seal longitudinal seams and end joints with manufacturer's recommended adhesive to eliminate openings in insulation that allow passage of air to surface being insulated.
- B. Insulation Installation on Pipe Flanges:
 - 1. Install pipe insulation to outer diameter of pipe flange.
 - 2. Make width of insulation section same as overall width of flange and bolts, plus twice the thickness of pipe insulation.
 - 3. Fill voids between inner circumference of flange insulation and outer circumference of adjacent straight pipe segments with cut sections of sheet insulation of same thickness as pipe insulation.
 - 4. Secure insulation to flanges and seal seams with manufacturer's recommended adhesive to eliminate openings in insulation that allow passage of air to surface being insulated.
- C. Insulation Installation on Pipe Fittings and Elbows:
 - 1. Install mitered sections of pipe insulation.
 - 2. Secure insulation materials and seal seams with manufacturer's recommended adhesive to eliminate openings in insulation that allow passage of air to surface being insulated.
- D. Insulation Installation on Valves and Pipe Specialties:
 - 1. Install preformed valve covers manufactured of same material as pipe insulation when available.
 - 2. When preformed valve covers are not available, install cut sections of pipe and sheet insulation to valve body. Arrange insulation to permit access to packing and to allow valve operation without disturbing insulation.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

3. Install insulation to flanges as specified for flange insulation application.
4. Secure insulation to valves and specialties and seal seams with manufacturer's recommended adhesive to eliminate openings in insulation that allow passage of air to surface being insulated.

3.7 INSTALLATION OF MINERAL-FIBER INSULATION

A. Insulation Installation on Straight Pipes and Tubes:

1. Secure each layer of preformed pipe insulation to pipe with wire or bands and tighten bands without deforming insulation materials.
2. Where vapor barriers are indicated, seal longitudinal seams, end joints, and protrusions with vapor-barrier mastic and joint sealant.
3. For insulation with factory-applied jackets on above-ambient surfaces, secure laps with outward clinched staples at 6 inches o.c.
4. For insulation with factory-applied jackets on below-ambient surfaces, do not staple longitudinal tabs. Instead, secure tabs with additional adhesive as recommended by insulation material manufacturer and seal with vapor-barrier mastic and flashing sealant.

B. Insulation Installation on Pipe Flanges:

1. Install preformed pipe insulation to outer diameter of pipe flange.
2. Make width of insulation section same as overall width of flange and bolts, plus twice the thickness of pipe insulation.
3. Fill voids between inner circumference of flange insulation and outer circumference of adjacent straight pipe segments with mineral-fiber blanket insulation.
4. Install jacket material with manufacturer's recommended adhesive, overlap seams at least 1 inch, and seal joints with flashing sealant.

C. Insulation Installation on Pipe Fittings and Elbows:

1. Install preformed sections of same material as straight segments of pipe insulation when available.
2. When preformed insulation elbows and fittings are not available, install mitered sections of pipe insulation, to a thickness equal to adjoining pipe insulation. Secure insulation materials with wire or bands.

D. Insulation Installation on Valves and Pipe Specialties:

1. Install preformed sections of same material as straight segments of pipe insulation when available.
2. When preformed sections are not available, install mitered sections of pipe insulation to valve body.
3. Arrange insulation to permit access to packing and to allow valve operation without disturbing insulation.
4. Install insulation to flanges as specified for flange insulation application.

3.8 FIELD-APPLIED JACKET INSTALLATION

A. Where PVC jackets are indicated, install with 1-inch overlap at longitudinal seams and end joints. Seal with manufacturer's recommended adhesive.

1. Apply two continuous beads of adhesive to seams and joints, one bead under lap and the finish bead along seam and joint edge.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- B. Where metal jackets are indicated, install with 2-inch overlap at longitudinal seams and end joints. Overlap longitudinal seams arranged to shed water. Seal end joints with weatherproof sealant recommended by insulation manufacturer. Secure jacket with stainless-steel bands 12 inches o.c. and at end joints.

3.9 PIPING INSULATION SCHEDULE, GENERAL

- A. Acceptable preformed pipe and tubular insulation materials and thicknesses are identified for each piping system and pipe size range. If more than one material is listed for a piping system, selection from materials listed is Contractor's option.
- B. Insulation shall have a k value that meets the minimum requirements of the latest International Energy Conservation Code (IECC).
- C. Items Not Insulated: Unless otherwise indicated, do not install insulation on the following:
 - 1. Drainage piping located in crawl spaces.
 - 2. Underground piping.
 - 3. Chrome-plated pipes and fittings unless there is a potential for personnel injury.

3.10 INDOOR PIPING INSULATION SCHEDULE

- A. Domestic Cold Water:
 - 1. NPS 1-1/2 and Smaller: Insulation shall be one of the following:
 - a. Flexible Elastomeric:
 - 1) 1 inch thick
 - b. Mineral-Fiber, Preformed Pipe Insulation, Type I:
 - 1) 1 inch thick
 - 2. NPS 2 and Larger: Insulation shall be one of the following:
 - a. Flexible Elastomeric:
 - 1) 1-1/2 inches thick.
 - b. Mineral-Fiber, Preformed Pipe Insulation:
 - 1) 1-1/2 inches thick.
- B. Domestic Hot and Recirculated Hot Water:
 - 1. NPS 1-1/2 and Smaller: Insulation shall be the following:
 - a. Mineral-Fiber, Preformed Pipe Insulation, Type I:
 - 1) 1 inch thick.
 - 2. NPS 2 and Larger: Insulation shall be the following:
 - a. Mineral-Fiber, Preformed Pipe Insulation, Type I:
 - 1) 1-1/2 inches thick
- C. Domestic Chilled Water (Potable):

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. All Pipe Sizes: Insulation shall be one of the following:
 - a. Flexible Elastomeric: 1 inch thick.
 - b. Mineral-Fiber, Preformed Pipe Insulation, Type I: 1 inch thick.
- D. Floor Drains, Traps, and Sanitary Drain Piping within 10 Feet of Drain Receiving Condensate and Equipment Drain Water below 60 Deg F :
 1. All Pipe Sizes: Insulation shall be one of the following:
 - a. Flexible Elastomeric:
 - 1) 3/4 inch thick.
 - b. Mineral-Fiber, Preformed Pipe Insulation, Type I:
 - 1) 3/4 inch thick.
- E. Hot Service Drains:
 1. All Pipe Sizes: Insulation shall be the following:
 - a. Mineral-Fiber, Preformed Pipe, Type I or II: 1 inch thick.
- F. Hot Service Vents:
 1. All Pipe Sizes: Insulation shall be the following:
 - a. Mineral-Fiber, Preformed Pipe, Type I or II: 1 inch thick.

3.11 INDOOR, FIELD-APPLIED JACKET SCHEDULE

- A. Install jacket over insulation material. For insulation with factory-applied jacket, install the field-applied jacket over the factory-applied jacket.
- B. If more than one material is listed, selection from materials listed is Contractor's option.
- C. Piping, Concealed:
 1. None.
- D. Piping, Exposed:
 1. PVC:
 - a. White: 30 mils thick

END OF SECTION 220719

BLANK PAGE

SECTION 221116

DOMESTIC WATER PIPING

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Under-building-slab and aboveground domestic water pipes, tubes, and fittings inside buildings.
 - 2. Encasement for piping.

1.3 SEISMIC REQUIREMENTS

- A. Seismic Performance: Pipe hangers and supports shall withstand the effects of earthquake motions determined according to SEI/ASCE 7 and with the requirements specified in Section 230548 "Vibration and Seismic Controls for HVAC."
 - 1. For piping with a seismic importance factor of 1.0 the term "withstand" means "the system will remain in place without separation of any parts when subjected to the seismic forces specified."
 - 2. For piping with a seismic importance factor of 1.5 the term "withstand" means "the system will remain in place without separation of any parts when subjected to the seismic forces specified and the system will be fully operational after the seismic event."

1.4 ACTION SUBMITTALS

- A. Product Data: For transition fittings and dielectric fittings.
- B. Delegated-Design Submittal:
 - 1. Design calculations and detailed fabrication and assembly of pipe anchors and alignment guides, hangers and supports for multiple pipes, expansion joints and loops, and attachments of the same to the building structure.
 - 2. Locations of pipe anchors and alignment guides and expansion joints and loops.
 - 3. Locations of and details for penetrations, including sleeves and sleeve seals for exterior walls, floors, basement, and foundation walls.

1.5 INFORMATIONAL SUBMITTALS

- A. System purging and disinfecting activities report.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- B. Field quality-control reports.

1.6 FIELD CONDITIONS

- A. Interruption of Existing Water Service: Do not interrupt water service to facilities occupied by Owner or others unless permitted under the following conditions and then only after arranging to provide temporary water service according to requirements indicated:
 - 1. Notify Construction Manager or owner no fewer than two days in advance of proposed interruption of water service.

PART 2 - PRODUCTS

2.1 PIPING MATERIALS

- A. Comply with requirements in "Piping Schedule" Article for applications of pipe, tube, fitting materials, and joining methods for specific services, service locations, and pipe sizes.
- B. Potable-water piping and components shall comply with NSF 14 and NSF 61. Plastic piping components shall be marked with "NSF-pw."
- C. All piping shall be American made and tested; no import pipe will be permitted.
- D. All exposed water supply piping in toilet rooms, custodial rooms and kitchens shall be chromium plated.
- E. All piping installed in or passing through a plenum must be plenum rated, fire wrapped, or installed in a metal conduit.

2.2 COPPER TUBE AND FITTINGS

- A. Hard Copper Tube: ASTM B 88, Type K and ASTM B 88, Type L water tube, drawn temper.
- B. Soft Copper Tube: ASTM B 88, Type K and ASTM B 88, Type L water tube, annealed temper.
- C. Cast-Copper, Solder-Joint Fittings: ASME B16.18, pressure fittings.
- D. Wrought-Copper, Solder-Joint Fittings: ASME B16.22, wrought-copper pressure fittings.
- E. Bronze Flanges: ASME B16.24, Class 150, with solder-joint ends.
- F. Copper Unions:
 - 1. MSS SP-123.
 - 2. Cast-copper-alloy, hexagonal-stock body.
 - 3. Ball-and-socket, metal-to-metal seating surfaces.
 - 4. Solder-joint or threaded ends.

2.3 DUCTILE-IRON PIPE AND FITTINGS

- A. Mechanical-Joint, Ductile-Iron Pipe:
 - 1. AWWA C151/A21.51, with mechanical-joint bell and plain spigot end unless grooved or flanged ends are indicated.
 - 2. Glands, Gaskets, and Bolts: AWWA C111/A21.11, ductile- or gray-iron glands, rubber gaskets, and steel bolts.
- B. Standard-Pattern, Mechanical-Joint Fittings:
 - 1. AWWA C110/A21.10, ductile or gray iron.
 - 2. Glands, Gaskets, and Bolts: AWWA C111/A21.11, ductile- or gray-iron glands, rubber gaskets, and steel bolts.
- C. Compact-Pattern, Mechanical-Joint Fittings:
 - 1. AWWA C153/A21.53, ductile iron.
 - 2. Glands, Gaskets, and Bolts: AWWA C111/A21.11, ductile- or gray-iron glands, rubber gaskets, and steel bolts.
- D. Plain-End, Ductile-Iron Pipe: AWWA C151/A21.51.

2.4 PIPING JOINING MATERIALS

- A. Pipe-Flange Gasket Materials:
 - 1. AWWA C110/A21.10, rubber, flat face, 1/8 inch thick or ASME B16.21, nonmetallic and asbestos free unless otherwise indicated.
 - 2. Full-face or ring type unless otherwise indicated.
- B. Metal, Pipe-Flange Bolts and Nuts: ASME B18.2.1, carbon steel unless otherwise indicated.
- C. Solder Filler Metals: ASTM B 32, lead-free alloys.
- D. Flux: ASTM B 813, water flushable.
- E. Brazing Filler Metals: AWS A5.8/A5.8M, BCuP Series, copper-phosphorus alloys for general-duty brazing unless otherwise indicated.

2.5 TRANSITION FITTINGS

- A. General Requirements:
 - 1. Same size as pipes to be joined.
 - 2. Pressure rating at least equal to pipes to be joined.
 - 3. End connections compatible with pipes to be joined.
- B. Fitting-Type Transition Couplings: Manufactured piping coupling or specified piping system fitting.
- C. Sleeve-Type Transition Coupling: AWWA C219.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Cascade Waterworks Manufacturing.
 - b. Dresser, Inc.; Piping Specialties Products.
 - c. Ford Meter Box Company, Inc. (The).
 - d. JCM Industries.
 - e. Romac Industries, Inc.
 - f. Smith-Blair, Inc.; a Sensus company.
 - g. Viking Johnson.
- D. Plastic-to-Metal Transition Fittings:
 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following
 - a. Charlotte Pipe and Foundry Company.
 - b. Harvel Plastics, Inc.
 - c. Spears Manufacturing Company.
 2. Description:
 - a. CPVC or PVC one-piece fitting with manufacturer's Schedule 80 equivalent dimensions.
 - b. One end with threaded brass insert and one solvent-cement-socket or threaded end.
- E. PP-to-Metal Transition Fittings:
 1. Description:
 - a. PP one-piece fitting with manufacturer's Schedule 80 equivalent dimensions.
 - b. One end with threaded brass insert and one fusion-socket end.
- F. Plastic-to-Metal Transition Unions:
 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Colonial Engineering, Inc.
 - b. NIBCO Inc.
 - c. Spears Manufacturing Company.
 2. Description:
 - a. CPVC four-part union.
 - b. Brass threaded end.
 - c. Solvent-cement-joint plastic end.
 - d. Rubber O-ring.
 - e. Union nut.

2.6 DIELECTRIC FITTINGS

- A. General Requirements: Assembly of copper alloy and ferrous materials with separating nonconductive insulating material. Include end connections compatible with pipes to be joined.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- B. Dielectric Nipples and Waterways:
 - 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Elster Perfection Corporation.
 - b. Grinnell Mechanical Products; Tyco Fire Products LP.
 - c. Matco-Norca.
 - d. Clearflow/Perfection Corp.
 - e. Precision Plumbing Products, Inc.
 - f. Victaulic Company.
 - 2. Standard: IAPMO PS 66 or ASTM F-1545-97.
 - 3. Electroplated steel nipple or waterway complying with ASTM F 1545 or ANSI/NSF-61 Compliant.
 - 4. Pressure Rating and Temperature: 300 psig at 225 deg F.
 - 5. End Connections: Male threaded or grooved.
 - 6. Lining: Inert and noncorrosive, propylene or LTHS.

PART 3 - EXECUTION

3.1 EARTHWORK

- A. Comply with requirements in Division 31 Section "Earth Moving" for excavating, trenching, and backfilling.

3.2 PIPING INSTALLATION

- A. Drawing plans, schematics, and diagrams indicate general location and arrangement of domestic water piping. Indicated locations and arrangements are used to size pipe and calculate friction loss, expansion, and other design considerations. Install piping as indicated unless deviations to layout are approved on coordination drawings.
- B. Polypropylene pipe in or passing through plenums must be fire wrapped or installed in a metal conduit.
- C. Install copper tubing under building slab according to CDA's "Copper Tube Handbook."
- D. Install ductile-iron piping under building slab with restrained joints according to AWWA C600 and AWWA M41.
- E. Install shutoff valve, hose-end drain valve, strainer, pressure gage, and test tee with valve inside the building at each domestic water-service entrance. Comply with requirements for pressure gages in Division 22 Section "Meters and Gages for Plumbing Piping" and with requirements for drain valves and strainers in Division 22 Section "Domestic Water Piping Specialties."
- F. Install shutoff valve immediately upstream of each dielectric fitting.
- G. Install water-pressure-reducing valves downstream from shutoff valves. Comply with requirements for pressure-reducing valves in Division 22 Section "Domestic Water Piping Specialties."

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- H. Install domestic water piping level with 0.25 percent slope downward toward drain and plumb.
 - 1. Piping will be drained seasonally for freeze protection.
- I. Rough-in domestic water piping for water-meter installation according to utility company's requirements.
- J. Install seismic restraints on piping. Comply with SEI/ASCE 7 and with requirements for seismic-restraint devices in Division 22 Section "Vibration and Seismic Controls for Plumbing Piping and Equipment."
- K. Install piping concealed from view and protected from physical contact by building occupants unless otherwise indicated and except in equipment rooms and service areas.
- L. Install piping indicated to be exposed and piping in equipment rooms and service areas at right angles or parallel to building walls. Diagonal runs are prohibited unless specifically indicated otherwise.
- M. Install piping above accessible ceilings to allow sufficient space for ceiling panel removal, and coordinate with other services occupying that space.
- N. Install piping to permit valve servicing.
- O. Install nipples, unions, special fittings, and valves with pressure ratings the same as or higher than the system pressure rating used in applications below unless otherwise indicated.
- P. Install piping free of sags and bends.
- Q. Install fittings for changes in direction and branch connections.
- R. Install unions in copper tubing at final connection to each piece of equipment, machine, and specialty.
- S. Install pressure gages on suction and discharge piping for each plumbing pump and packaged booster pump. Comply with requirements for pressure gages in Division 22 Section "Meters and Gages for Plumbing Piping."
- T. Install thermostats in hot-water circulation piping. Comply with requirements for thermostats in Division 22 Section "Domestic Water Pumps."
- U. Install thermometers on inlet piping from each water heater. Comply with requirements for thermometers in Division 22 Section "Meters and Gages for Plumbing Piping."
- V. Install sleeves for piping penetrations of walls, ceilings, and floors. Comply with requirements for sleeves specified in Division 22 Section "Sleeves and Sleeve Seals for Plumbing Piping."
- W. Install sleeve seals for piping penetrations of concrete walls and slabs. Comply with requirements for sleeve seals specified in Division 22 Section "Sleeves and Sleeve Seals for Plumbing Piping."
- X. Install escutcheons for piping penetrations of walls, ceilings, and floors. Comply with requirements for escutcheons specified in Division 22 Section "Escutcheons for Plumbing Piping."

3.3 JOINT CONSTRUCTION

- A. Ream ends of pipes and tubes and remove burrs. Bevel plain ends of steel pipe.
- B. Remove scale, slag, dirt, and debris from inside and outside of pipes, tubes, and fittings before assembly.
- C. Threaded Joints: Thread pipe with tapered pipe threads according to ASME B1.20.1. Cut threads full and clean using sharp dies. Ream threaded pipe ends to remove burrs and restore full ID. Join pipe fittings and valves as follows:
 - 1. Apply appropriate tape or thread compound to external pipe threads.
 - 2. Damaged Threads: Do not use pipe or pipe fittings with threads that are corroded or damaged.
- D. Brazed Joints for Copper Tubing: Comply with CDA's "Copper Tube Handbook," "Brazed Joints" chapter.
- E. Soldered Joints for Copper Tubing: Apply ASTM B 813, water-flushable flux to end of tube. Join copper tube and fittings according to ASTM B 828 or CDA's "Copper Tube Handbook."
- F. Joint Construction for Grooved-End Copper Tubing: Make joints according to AWWA C606. Roll groove ends of tubes. Lubricate and install gasket over ends of tubes or tube and fitting. Install coupling housing sections over gasket with keys seated in tubing grooves. Install and tighten housing bolts.
- G. Joint Construction for Grooved-End, Ductile-Iron Piping: Make joints according to AWWA C606. Cut round-bottom grooves in ends of pipe at gasket-seat dimension required for specified (flexible or rigid) joint. Lubricate and install gasket over ends of pipes or pipe and fitting. Install coupling housing sections over gasket with keys seated in piping grooves. Install and tighten housing bolts.
- H. Joint Construction for Grooved-End Steel Piping: Make joints according to AWWA C606. Roll groove ends of pipe as specified. Lubricate and install gasket over ends of pipes or pipe and fitting. Install coupling housing sections over gasket with keys seated in piping grooves. Install and tighten housing bolts.
- I. Flanged Joints: Select appropriate asbestos-free, nonmetallic gasket material in size, type, and thickness suitable for domestic water service. Join flanges with gasket and bolts according to ASME B31.9.
- J. Joints for Dissimilar-Material Piping: Make joints using adapters compatible with materials of both piping systems.

3.4 TRANSITION FITTING INSTALLATION

- A. Install transition couplings at joints of dissimilar piping.
- B. Transition Fittings in Underground Domestic Water Piping:
 - 1. Fittings for NPS 1-1/2 and Smaller: Fitting-type coupling.
 - 2. Fittings for NPS 2 and Larger: Sleeve-type coupling.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- C. Transition Fittings in Aboveground Domestic Water Piping NPS 2 and Smaller: Plastic-to-metal transition fittings.

3.5 DIELECTRIC FITTING INSTALLATION

- A. Install dielectric fittings in piping at connections of dissimilar metal piping and tubing.
- B. Dielectric Fittings for NPS 2 and Smaller: Use dielectric nipples/waterways.
- C. Dielectric Fittings for NPS 2-1/2 to NPS 4: Use dielectric nipples/waterways.
- D. Dielectric Fittings for NPS 5 and Larger: Use dielectric nipples/waterways.

3.6 HANGER AND SUPPORT INSTALLATION

- A. Comply with requirements for seismic-restraint devices in Division 22 Section "Vibration and Seismic Controls for Plumbing Piping and Equipment."
- B. Comply with requirements for pipe hanger, support products, and installation in Division 22 Section "Hangers and Supports for Plumbing Piping and Equipment."
 - 1. Vertical Piping: MSS Type 8 or 42, clamps.
 - 2. Individual, Straight, Horizontal Piping Runs:
 - a. 100 Feet and Less: MSS Type 1, adjustable, steel clevis hangers.
 - b. Longer Than 100 Feet: MSS Type 43, adjustable roller hangers.
 - c. Longer Than 100 Feet if Indicated: MSS Type 49, spring cushion rolls.
 - 3. Multiple, Straight, Horizontal Piping Runs 100 Feet or Longer: MSS Type 44, pipe rolls. Support pipe rolls on trapeze.
 - 4. Base of Vertical Piping: MSS Type 52, spring hangers.
- C. Support vertical piping and tubing at base and at each floor.
- D. Rod diameter may be reduced one size for double-rod hangers, to a minimum of 3/8 inch.
- E. Install hangers for copper tubing with the following maximum horizontal spacing and minimum rod diameters:
 - 1. NPS 3/4 and Smaller: 60 inches with 3/8-inch rod.
 - 2. NPS 1 and NPS 1-1/4: 72 inches with 3/8-inch rod.
 - 3. NPS 1-1/2 and NPS 2: 96 inches with 3/8-inch rod.
 - 4. NPS 2-1/2: 108 inches with 1/2-inch rod.
 - 5. NPS 3 to NPS 5: 10 feet with 1/2-inch rod.
 - 6. NPS 6: 10 feet with 5/8-inch rod.
 - 7. NPS 8: 10 feet with 3/4-inch rod.
- F. Install supports for vertical copper tubing every 10 feet.
- G. Install hangers for steel piping with the following maximum horizontal spacing and minimum rod diameters:
 - 1. NPS 1-1/4 and Smaller: 84 inches with 3/8-inch rod.
 - 2. NPS 1-1/2: 108 inches with 3/8-inch rod.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

3. NPS 2: 10 feet with 3/8-inch rod.
 4. NPS 2-1/2: 11 feet with 1/2-inch rod.
 5. NPS 3 and NPS 3-1/2: 12 feet with 1/2-inch rod.
 6. NPS 4 and NPS 5: 12 feet with 5/8-inch rod.
 7. NPS 6: 12 feet with 3/4-inch rod.
 8. NPS 8 to NPS 12: 12 feet with 7/8-inch rod.
- H. Install supports for vertical steel piping every 15 feet.
- I. Install supports for vertical PP piping every 60 inches for NPS 1 and smaller, and every 72 inches for NPS 1-1/4 and larger.
- J. Support piping and tubing not listed in this article according to MSS SP-69 and manufacturer's written instructions.

3.7 CONNECTIONS

- A. Drawings indicate general arrangement of piping, fittings, and specialties.
- B. When installing piping adjacent to equipment and machines, allow space for service and maintenance.
- C. Connect domestic water piping to exterior water-service piping. Use transition fitting to join dissimilar piping materials.
- D. Connect domestic water piping to water-service piping with shutoff valve; extend and connect to the following:
1. Domestic Water Booster Pumps: Cold-water suction and discharge piping.
 2. Water Heaters: Cold-water inlet and hot-water outlet piping in sizes indicated, but not smaller than sizes of water heater connections.
 3. Plumbing Fixtures: Cold- and hot-water-supply piping in sizes indicated, but not smaller than that required by plumbing code. Comply with requirements for connection sizes in Division 22 plumbing fixture Sections.
 4. Equipment: Cold- and hot-water-supply piping as indicated, but not smaller than equipment connections. Provide shutoff valve and union for each connection. Use flanges instead of unions for NPS 2-1/2 and larger.

3.8 IDENTIFICATION

- A. Identify system components. Comply with requirements for identification materials and installation in Division 22 Section "Identification for Plumbing Piping and Equipment."
- B. Label pressure piping with system operating pressure.

3.9 FIELD QUALITY CONTROL

- A. Perform the following tests and inspections:
1. Piping Inspections:
 - a. Do not enclose, cover, or put piping into operation until it has been inspected and approved by authorities having jurisdiction.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- b. During installation, notify authorities having jurisdiction at least one day before inspection must be made. Perform tests specified below in presence of authorities having jurisdiction:
 - 1) Roughing-in Inspection: Arrange for inspection of piping before concealing or closing in after roughing in and before setting fixtures.
 - 2) Final Inspection: Arrange for authorities having jurisdiction to observe tests specified in "Piping Tests" Subparagraph below and to ensure compliance with requirements.
 - c. Reinspection: If authorities having jurisdiction find that piping will not pass tests or inspections, make required corrections and arrange for reinspection.
 - d. Reports: Prepare inspection reports and have them signed by authorities having jurisdiction.
2. Piping Tests:
- a. Fill domestic water piping. Check components to determine that they are not air bound and that piping is full of water.
 - b. Test for leaks and defects in new piping and parts of existing piping that have been altered, extended, or repaired. If testing is performed in segments, submit a separate report for each test, complete with diagram of portion of piping tested.
 - c. Leave new, altered, extended, or replaced domestic water piping uncovered and unconcealed until it has been tested and approved. Expose work that was covered or concealed before it was tested.
 - d. Cap and subject piping to static water pressure of 50 psig above operating pressure, without exceeding pressure rating of piping system materials. Isolate test source and allow it to stand for four hours. Leaks and loss in test pressure constitute defects that must be repaired.
 - e. Repair leaks and defects with new materials, and retest piping or portion thereof until satisfactory results are obtained.
 - f. Prepare reports for tests and for corrective action required.
- B. Domestic water piping will be considered defective if it does not pass tests and inspections.
- C. Prepare test and inspection reports.

3.10 ADJUSTING

- A. Perform the following adjustments before operation:
- 1. Close drain valves, hydrants, and hose bibbs.
 - 2. Open shutoff valves to fully open position.
 - 3. Open throttling valves to proper setting.
 - 4. Adjust balancing valves in hot-water-circulation return piping to provide adequate flow.
 - a. Manually adjust ball-type balancing valves in hot-water-circulation return piping to provide hot-water flow in each branch.
 - b. Adjust calibrated balancing valves to flows indicated.
 - 5. Remove plugs used during testing of piping and for temporary sealing of piping during installation.
 - 6. Remove and clean strainer screens. Close drain valves and replace drain plugs.
 - 7. Remove filter cartridges from housings and verify that cartridges are as specified for application where used and are clean and ready for use.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

8. Check plumbing specialties and verify proper settings, adjustments, and operation.

3.11 CLEANING

- A. Clean and disinfect potable domestic water piping as follows:
 1. Purge new piping and parts of existing piping that have been altered, extended, or repaired before using.
 2. Use purging and disinfecting procedures prescribed by authorities having jurisdiction; if methods are not prescribed, use procedures described in either AWWA C651 or AWWA C652 or follow procedures described below:
 - a. Flush piping system with clean, potable water until dirty water does not appear at outlets.
 - b. Fill and isolate system according to either of the following:
 - 1) Fill system or part thereof with water/chlorine solution with at least 50 ppm of chlorine. Isolate with valves and allow to stand for 24 hours.
 - 2) Fill system or part thereof with water/chlorine solution with at least 200 ppm of chlorine. Isolate and allow to stand for three hours.
 - c. Flush system with clean, potable water until no chlorine is in water coming from system after the standing time.
 - d. Repeat procedures if biological examination shows contamination.
 - e. Submit water samples in sterile bottles to authorities having jurisdiction.
- B. Clean non-potable domestic water piping as follows:
 1. Purge new piping and parts of existing piping that have been altered, extended, or repaired before using.
 2. Use purging procedures prescribed by authorities having jurisdiction or; if methods are not prescribed, follow procedures described below:
 - a. Flush piping system with clean, potable water until dirty water does not appear at outlets.
 - b. Submit water samples in sterile bottles to authorities having jurisdiction. Repeat procedures if biological examination shows contamination.
- C. Prepare and submit reports of purging and disinfecting activities. Include copies of water-sample approvals from authorities having jurisdiction.
- D. Clean interior of domestic water piping system. Remove dirt and debris as work progresses.

3.12 PIPING SCHEDULE

- A. Some piping types and sizes mentioned in this section may not be used on this project.
- B. Transition and special fittings with pressure ratings at least equal to piping rating may be used in applications below unless otherwise indicated.
- C. Flanges and unions may be used for aboveground piping joints unless otherwise indicated.
- D. All exposed water supply piping in toilet rooms, custodial rooms and kitchens shall be chromium plated.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- E. Aboveground domestic water piping, NPS 2 and smaller, shall be the following:
 - 1. Hard copper tube, ASTM B 88, Type L; cast- copper, solder-joint fittings; and soldered joints.
- F. Aboveground domestic water piping, NPS 2-1/2 to NPS 4, shall be the following:
 - 1. Hard copper tube, ASTM B 88, Type L; cast- copper, solder-joint fittings; and soldered joints.
- G. Aboveground domestic water piping, NPS 5 and larger , shall be the following:
 - 1. Hard copper tube, ASTM B 88, Type L; cast- copper, solder-joint fittings; and soldered joints.

3.13 VALVE SCHEDULE

- A. Drawings indicate valve types to be used. Where specific valve types are not indicated, the following requirements apply:
 - 1. Shutoff Duty: Use ball for piping NPS 3 and smaller. Use butterfly or ball, with flanged ends for piping NPS 4 and larger.
 - 2. Throttling Duty: Use ball or globe valves for piping NPS 2 and smaller. Use butterfly or ball valves with flanged ends for piping NPS 2-1/2 and larger.
 - 3. Hot-Water Circulation Piping, Balancing Duty: Calibrated balancing valves.
 - 4. Drain Duty: Hose-end drain valves.
- B. Use check valves to maintain correct direction of domestic water flow to and from equipment.

END OF SECTION 221116

BLANK PAGE

SECTION 221119

DOMESTIC WATER PIPING SPECIALTIES

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. This Section includes the following domestic water piping specialties:
 - 1. Vacuum breakers.
 - 2. Backflow preventers.
 - 3. Water pressure-reducing valves.
 - 4. Balancing valves.
 - 5. Temperature-actuated water mixing valves.
 - 6. Strainers.
 - 7. Outlet boxes.
 - 8. Hose bibbs.
 - 9. Wall hydrants.
 - 10. Drain valves.
 - 11. Water hammer arresters.
 - 12. Trap-seal primer valves.
 - 13. Trap-seal primer systems.
- B. Related Sections include the following:
 - 1. Division 22 Section "Meters and Gages for Plumbing Piping" for thermometers, pressure gages, and flow meters in domestic water piping.
 - 2. Division 22 Section "Emergency Plumbing Fixtures" for water tempering equipment.
 - 3. Division 22 Section "Drinking Fountains and Water Coolers" for water filters for water coolers.

1.3 PERFORMANCE REQUIREMENTS

- A. Minimum Working Pressure for Domestic Water Piping Specialties: 125 psig, unless otherwise indicated.

1.4 SUBMITTALS

- A. Product Data: For each type of product indicated.
- B. Shop Drawings: Diagram power, signal, and control wiring.
- C. Field quality-control test reports.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- D. Operation and Maintenance Data: For domestic water piping specialties to include in emergency, operation, and maintenance manuals.

1.5 QUALITY ASSURANCE

- A. Electrical Components, Devices, and Accessories: Listed and labeled as defined in NFPA 70, Article 100, by a testing agency acceptable to authorities having jurisdiction, and marked for intended use.
- B. NSF Compliance:
 - 1. Comply with NSF 14, "Plastics Piping Components and Related Materials," for plastic domestic water piping components.
 - 2. Comply with NSF 61, "Drinking Water System Components - Health Effects; Sections 1 through 9."

PART 2 - PRODUCTS

2.1 VACUUM BREAKERS

- A. Pipe-Applied, Atmospheric-Type Vacuum Breakers:
 - 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Ames Co.
 - b. Cash Acme.
 - c. Conbraco Industries, Inc.
 - d. FEBCO; SPX Valves & Controls.
 - e. Rain Bird Corporation.
 - f. Toro Company (The); Irrigation Div.
 - g. Watts Industries, Inc.; Water Products Div.
 - h. Zurn Plumbing Products Group; Wilkins Div.
 - 2. Standard: ASSE 1001.
 - 3. Size: NPS 1/4 to NPS 3, as required to match connected piping.
 - 4. Body: Bronze.
 - 5. Inlet and Outlet Connections: Threaded.
 - 6. Finish: Chrome plated.
- B. Hose-Connection Vacuum Breakers:
 - 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Arrowhead Brass Products, Inc.
 - b. Cash Acme.
 - c. Conbraco Industries, Inc.
 - d. Legend Valve.
 - e. MIFAB, Inc.
 - f. Prier Products, Inc.
 - g. Watts Industries, Inc.; Water Products Div.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- h. Woodford Manufacturing Company.
 - i. Zurn Plumbing Products Group; Light Commercial Operation.
 - j. Zurn Plumbing Products Group; Wilkins Div.
 - 2. Standard: ASSE 1011.
 - 3. Body: Bronze, nonremovable, with manual drain.
 - 4. Outlet Connection: Garden-hose threaded complying with ASME B1.20.7.
 - 5. Finish: Chrome or nickel plated.
- C. Pressure Vacuum Breakers:
 - 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Ames Co.
 - b. Conbraco Industries, Inc.
 - c. FEBCO; SPX Valves & Controls.
 - d. Flomatic Corporation.
 - e. Toro Company (The); Irrigation Div.
 - f. Watts Industries, Inc.; Water Products Div.
 - g. Zurn Plumbing Products Group; Wilkins Div.
 - 2. Standard: ASSE 1020.
 - 3. Operation: Continuous-pressure applications.
 - 4. Pressure Loss: 5 psig maximum, through middle 1/3 of flow range.
 - 5. Accessories:
 - a. Valves: Ball type, on inlet and outlet.
- D. Spill-Resistant Vacuum Breakers:
 - 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Conbraco Industries, Inc.
 - b. Watts Industries, Inc.; Water Products Div.
 - 2. Standard: ASSE 1056.
 - 3. Operation: Continuous-pressure applications.
 - 4. Accessories:
 - a. Valves: Ball type, on inlet and outlet.

2.2 BACKFLOW PREVENTERS

- A. Reduced-Pressure-Principle Backflow Preventers:
 - 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Ames Co.
 - b. Conbraco Industries, Inc.
 - c. FEBCO; SPX Valves & Controls.
 - d. Flomatic Corporation.
 - e. Watts Industries, Inc.; Water Products Div.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- f. Zurn Plumbing Products Group; Wilkins Div.
 - 2. Standard: ASSE 1013.
 - 3. Operation: Continuous-pressure applications.
 - 4. Pressure Loss: 12 psig maximum, through middle 1/3 of flow range.
 - 5. Body: Bronze for NPS 2 and smaller; cast iron with interior lining complying with AWWA C550 or that is FDA approved] for NPS 2-1/2 and larger.
 - 6. End Connections: Threaded for NPS 2 and smaller; flanged for NPS 2-1/2 and larger.
 - 7. Accessories:
 - a. Valves: Ball type with threaded ends on inlet and outlet of NPS 2 and smaller; outside screw and yoke gate-type with flanged ends on inlet and outlet of NPS 2-1/2 and larger.
 - b. Air-Gap Fitting: ASME A112.1.2, matching backflow-preventer connection.
- B. Double-Check Backflow-Prevention Assemblies:
- 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Ames Co.
 - b. Conbraco Industries, Inc.
 - c. FEBCO; SPX Valves & Controls.
 - d. Flomatic Corporation.
 - e. Watts Industries, Inc.; Water Products Div.
 - f. Zurn Plumbing Products Group; Wilkins Div.
 - 2. Standard: ASSE 1015.
 - 3. Operation: Continuous-pressure applications, unless otherwise indicated.
 - 4. Pressure Loss: 5 psig maximum, through middle 1/3 of flow range.
 - 5. Body: Bronze for NPS 2 and smaller; cast iron with interior lining complying with AWWA C550 or that is FDA approved for NPS 2-1/2 and larger.
 - 6. End Connections: Threaded for NPS 2 and smaller; [flanged] <Insert type> for NPS 2-1/2 and larger.
 - 7. Accessories:
 - a. Valves: Ball type with threaded ends on inlet and outlet of NPS 2 and smaller; outside screw and yoke gate-type with flanged ends on inlet and outlet of NPS 2-1/2 and larger.
- C. Beverage-Dispensing-Equipment Backflow Preventers:
- 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Conbraco Industries, Inc.
 - b. Watts Industries, Inc.; Water Products Div.
 - c. Zurn Plumbing Products Group; Wilkins Div.
 - 2. Standard: ASSE 1022.
 - 3. Operation: Continuous-pressure applications.
 - 4. Size: NPS 1/4 or NPS 3/8.
 - 5. Body: Stainless steel.
 - 6. End Connections: Threaded.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

D. Dual-Check-Valve Backflow Preventers:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Cash Acme.
 - b. Conbraco Industries, Inc.
 - c. FEBCO; SPX Valves & Controls.
 - d. Flomatic Corporation.
 - e. Ford Meter Box Company, Inc. (The).
 - f. Honeywell Water Controls.
 - g. Legend Valve.
 - h. McDonald, A. Y. Mfg. Co.
 - i. Mueller Co.; Water Products Div.
 - j. Watts Industries, Inc.; Water Products Div.
 - k. Zurn Plumbing Products Group; Wilkins Div.
2. Standard: ASSE 1024.
3. Operation: Continuous-pressure applications.
4. Body: Bronze with union inlet.

E. Carbonated-Beverage-Dispenser, Dual-Check-Valve Backflow Preventers:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Cash Acme.
 - b. Lancer Corporation.
 - c. Watts Industries, Inc.; Water Products Div.
2. Standard: ASSE 1032.
3. Operation: Continuous-pressure applications.
4. Size: NPS 1/4 or NPS 3/8.
5. Body: Stainless steel.
6. End Connections: Threaded.

2.3 WATER PRESSURE-REDUCING VALVES

A. Water Regulators: (Direct Type)

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Cash Acme.
 - b. Conbraco Industries, Inc.
 - c. Honeywell Water Controls.
 - d. Watts Industries, Inc.; Water Products Div.
 - e. Zurn Plumbing Products Group; Wilkins Div.
2. Standard: ASSE 1003.
3. Pressure Rating: Initial working pressure of 150 psig.
4. Body: Bronze, provide chrome-plated finish if connected to chrome plated or stainless steel piping for NPS 2 and smaller; cast iron with interior lining complying with AWWA C550 or that is FDA approved for NPS 2-1/2 and NPS 3.
5. Valves for Booster Heater Water Supply: Include integral bypass.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

6. End Connections: Threaded for NPS 2 and smaller; flanged for NPS 2-1/2 and NPS 3.

B. Water Control Valves: (Pilot type)

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. CLA-VAL Automatic Control Valves.
 - b. Mifab Corp; Beeco.
 - c. Watts Industries, Inc.; Ames Fluid Control Systems.
 - d. Watts Industries, Inc.; Watts ACV.
 - e. Zurn Plumbing Products Group; Wilkins Div.
2. Description: Pilot-operation, diaphragm-type, single-seated main water control valve.
3. Pressure Rating: Initial working pressure of 150 psig minimum with AWWA C550 or FDA-approved, interior epoxy coating. Include small pilot-control valve, restrictor device, specialty fittings, and sensor piping.
4. Main Valve Body: Cast- or ductile-iron body with AWWA C550 or FDA-approved, interior epoxy coating; or stainless-steel body.
5. End Connections: Threaded for NPS 2 and smaller; flanged for NPS 2-1/2 and larger.

2.4 BALANCING VALVES

A. Copper-Alloy Calibrated Balancing Valves:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Armstrong International, Inc.
 - b. Flo Fab Inc.
 - c. ITT Industries; Bell & Gossett Div.
 - d. NIBCO INC.
 - e. TAC Americas.
 - f. Taco, Inc.
 - g. Victaulic
 - h. Watts Industries, Inc.; Water Products Div.
2. Type: Ball or Y-pattern globe valve with two readout ports and memory setting indicator.
3. Body: bronze,
4. Size: Same as connected piping, but not larger than NPS 2.
5. Accessories: Meter hoses, fittings, valves, differential pressure meter, and carrying case.

B. Cast-Iron Calibrated Balancing Valves:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Armstrong International, Inc.
 - b. Flo Fab Inc.
 - c. ITT Industries; Bell & Gossett Div.
 - d. NIBCO INC.
 - e. TAC Americas.
 - f. Watts Industries, Inc.; Water Products Div.
2. Type: Adjustable with Y-pattern globe valve, two readout ports, and memory-setting

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- indicator.
- 3. Size: Same as connected piping, but not smaller than NPS 2-1/2.
- C. Accessories: Meter hoses, fittings, valves, differential pressure meter, and carrying case.

2.5 TEMPERATURE-ACTUATED WATER MIXING VALVES

A. Water-Temperature Limiting Devices:

- 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Armstrong International, Inc.
 - b. Cash Acme.
 - c. Conbraco Industries, Inc.
 - d. Honeywell Water Controls.
 - e. Legend Valve.
 - f. Leonard Valve Company.
 - g. Powers; a Watts Industries Co.
 - h. Symmons Industries, Inc.
 - i. Taco, Inc.
 - j. Watts Industries, Inc.; Water Products Div.
 - k. Zurn Plumbing Products Group; Wilkins Div.
- 2. Standard: ASSE 1017.
- 3. Pressure Rating: 125 psig.
- 4. Type: Thermostatically controlled water mixing valve.
- 5. Material: Bronze body with corrosion-resistant interior components.
- 6. Connections: Threaded union inlets and outlet.
- 7. Accessories: Check stops on hot- and cold-water supplies, and adjustable, temperature-control handle.
- 8. Valve Finish: Rough bronze.

B. Primary, Thermostatic, Water Mixing Valves:

- 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Armstrong International, Inc.
 - b. Lawler Manufacturing Company, Inc.
 - c. Leonard Valve Company.
 - d. Powers; a Watts Industries Co.
 - e. Symmons Industries, Inc.
- 2. Standard: ASSE 1017.
- 3. Pressure Rating: 125 psig.
- 4. Type: Exposed-mounting, thermostatically controlled water mixing valve.
- 5. Material: Bronze body with corrosion-resistant interior components.
- 6. Connections: Threaded union inlets and outlet.
- 7. Accessories: Manual temperature control, check stops on hot- and cold-water supplies, and adjustable, temperature-control handle.
- 8. Valve Pressure Rating: 125 psig minimum, unless otherwise indicated.
- 9. Valve Finish: Chrome plated.
- 10. Piping Finish: Copper.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

C. Individual-Fixture, Water Tempering Valves:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Cash Acme.
 - b. Conbraco Industries, Inc.
 - c. Honeywell Water Controls.
 - d. Lawler Manufacturing Company, Inc.
 - e. Leonard Valve Company.
 - f. Powers; a Watts Industries Co.
 - g. Watts Industries, Inc.; Water Products Div.
 - h. Zurn Plumbing Products Group; Wilkins Div.
2. Standard: ASSE 1016, thermostatically controlled water tempering valve.
3. Pressure Rating: 125 psig minimum, unless otherwise indicated.
4. Body: Bronze body with corrosion-resistant interior components.
5. Temperature Control: Adjustable.
6. Inlets and Outlet: Threaded.
7. Finish: Rough or chrome-plated bronze.

2.6 STRAINERS FOR DOMESTIC WATER PIPING

A. Y-Pattern Strainers:

1. Pressure Rating: 125 psig minimum, unless otherwise indicated.
2. Body: Bronze for NPS 2 and smaller; cast iron with interior lining complying with AWWA C550 or FDA-approved, epoxy coating and for NPS 2-1/2 and larger.
3. End Connections: Threaded for NPS 2 and smaller; flanged for NPS 2-1/2 and larger.
4. Screen: Stainless steel with round perforations, unless otherwise indicated.
5. Perforation Size:
 - a. Strainers NPS 2 and Smaller: 0.020 inch.
 - b. Strainers NPS 2-1/2 to NPS 4: 0.045 inch.
 - c. Strainers NPS 5 and Larger: 0.10 inch.
6. Drain: Factory-installed, hose-end drain valve.

2.7 OUTLET BOXES

A. Icemaker Outlet Boxes:

1. Basis of Design: Guy Gray model FR1212SHACP fire rated washing machine box with one ¼ turn valve with water hammer arrestor and 1-1/2" drain connection.
2. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Acorn Engineering Company.
 - b. Guy Gray Manufacturing Co., Inc.
 - c. IPS Corporation.
 - d. LSP Products Group, Inc.
 - e. Oatey.
 - f. Plastic Oddities; a division of Diverse Corporate Technologies.
 - g. Symmons Industries, Inc.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- h. Watts Industries, Inc.; Water Products Div.
 - i. Whitehall Manufacturing; a div. of Acorn Engineering Company.
 - j. Zurn Plumbing Products Group; Light Commercial Operation.
- 3. Mounting: Recessed.
 - 4. Material and Finish: Enameled-steel or epoxy-painted-steel or plastic box and faceplate.
 - 5. Faucet: Combination, valved fitting or separate hot- and cold-water, valved fittings complying with ASME A112.18.1. Include garden-hose thread complying with ASME B1.20.7 on outlets.
 - 6. Supply Shutoff Fittings: NPS 1/2 gate, globe, or ball valves and NPS 1/2 copper, water tubing.
 - 7. Drain: NPS 2 standpipe and P-trap for direct waste connection to drainage piping.
 - 8. Inlet Hoses: Two 60-inch- long, rubber household clothes washer inlet hoses with female, garden-hose-thread couplings. Include rubber washers.
 - 9. Drain Hose: One 48-inch- long, rubber household clothes washer drain hose with hooked end.
- B. Water Outlet Boxes:
- 1. Basis of Design: Water-Tite model W9200HA 6" diameter outlet box with ¼ turn valve and water hammer arrestor.
 - 2. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Acorn Engineering Company.
 - b. IPS Corporation.
 - c. LSP Products Group, Inc.
 - d. Oatey.
 - e. Plastic Oddities; a division of Diverse Corporate Technologies.
 - 3. Mounting: Recessed.
 - 4. Material and Finish: Enameled-steel or epoxy-painted-steel or plastic box and faceplate.
 - 5. Faucet: Valved fitting complying with ASME A112.18.1. Include NPS 1/2 or smaller copper tube outlet.
 - 6. Supply Shutoff Fitting: NPS 1/2 gate, globe, or ball valve and NPS 1/2 copper, water tubing.

2.8 HOSE BIBBS

- A. Hose Bibbs:
- 1. Standard: ASME A112.18.1 for sediment faucets.
 - 2. Body Material: Bronze.
 - 3. Seat: Bronze, replaceable.
 - 4. Supply Connections: NPS 1/2 or NPS 3/4 threaded or solder-joint inlet.
 - 5. Outlet Connection: Garden-hose thread complying with ASME B1.20.7.
 - 6. Pressure Rating: 125 psig.
 - 7. Vacuum Breaker: Integral or field-installation, nonremovable, drainable, hose-connection vacuum breaker complying with ASSE 1011.
 - 8. Finish for Equipment Rooms: Rough bronze, or chrome or nickel plated.
 - 9. Finish for Service Areas: Chrome or nickel plated.
 - 10. Finish for Finished Rooms: Chrome or nickel plated.
 - 11. Operation for Equipment Rooms: Wheel handle or operating key.
 - 12. Operation for Service Areas: Wheel handle.
 - 13. Operation for Finished Rooms: Operating key.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

14. Include operating key with each operating-key hose bibb.
15. Include integral wall flange with each chrome- or nickel-plated hose bibb.

2.9 DRAIN VALVES

A. Ball-Valve-Type, Hose-End Drain Valves:

1. Standard: MSS SP-110 for standard-port, two-piece ball valves.
2. Pressure Rating: 400-psig minimum CWP.
3. Size: NPS 3/4.
4. Body: Copper alloy.
5. Ball: Chrome-plated brass.
6. Seats and Seals: Replaceable.
7. Handle: Vinyl-covered steel.
8. Inlet: Threaded or solder joint.
9. Outlet: Threaded, short nipple with garden-hose thread complying with ASME B1.20.7 and cap with brass chain.

2.10 WATER HAMMER ARRESTERS

A. Water Hammer Arresters:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. AMTROL, Inc.
 - b. Josam Company.
 - c. MIFAB, Inc.
 - d. PPP Inc.
 - e. Sioux Chief Manufacturing Company, Inc.
 - f. Smith, Jay R. Mfg. Co.; Division of Smith Industries, Inc.
 - g. Tyler Pipe; Wade Div.
 - h. Watts Drainage Products Inc.
 - i. Zurn Plumbing Products Group; Specification Drainage Operation.
2. Standard: ASSE 1010 or PDI-WH 201.
3. Type: Metal bellows or Copper tube with piston.
4. Size: ASSE 1010, Sizes AA and A through F or PDI-WH 201, Sizes A through F.

2.11 TRAP-SEAL PRIMER VALVES

A. TP-1 Trap Seal Primer Valves: ASSE 1018, water-supply-fed type, with the following characteristics:

1. 125-psig minimum working pressure.
2. Bronze body with atmospheric-vented drain chamber.
3. Inlet and Outlet Connections: 1/2-inch threaded, union, or solder joint.
4. Gravity Drain Outlet Connection: 1/2-inch threaded or solder joint.
5. Finish: Chrome plated, or rough bronze for units used with pipe or tube that is not chrome finished.

PART 3 - EXECUTION

3.1 INSTALLATION

- A. Refer to Division 22 Section "Common Work Results for Plumbing" for piping joining materials, joint construction, and basic installation requirements.
- B. Install backflow preventers in each water supply to mechanical equipment and systems and to other equipment and water systems that may be sources of contamination. Comply with authorities having jurisdiction.
 - 1. Locate backflow preventers in same room as connected equipment or system.
 - 2. Install drain for backflow preventers with atmospheric-vent drain connection with air-gap fitting, fixed air-gap fitting, or equivalent positive pipe separation of at least two pipe diameters in drain piping and pipe to floor drain. Locate air-gap device attached to or under backflow preventer. Simple air breaks are not acceptable for this application.
 - 3. Do not install bypass piping around backflow preventers.
- C. Install water control valves with inlet and outlet shutoff valves. Install pressure gages on inlet and outlet.
- D. Install balancing valves in locations where they can easily be adjusted.
- E. Install temperature-actuated water mixing valves with check stops or shutoff valves on inlets and with shutoff valve on outlet.
 - 1. Install thermometers and water regulators if specified.
 - 2. Install cabinet-type units recessed in or surface mounted on wall as specified.
- F. Install Y-pattern strainers for water on supply side of each control valve, water pressure-reducing valve, solenoid valve, and pump.
- G. Install outlet boxes recessed in wall. Install 2-by-4-inch fire-retardant-treated-wood blocking wall reinforcement between studs. Fire-retardant-treated-wood blocking is specified in Division 06 Section "Rough Carpentry."
- H. Install water hammer arresters in water piping according to PDI-WH 201.
- I. Install supply-type, trap-seal primer valves with outlet piping pitched down toward drain trap a minimum of 1 percent, and connect to floor-drain body, trap, or inlet fitting. Adjust valve for proper flow.
- J. Install drainage-type, trap-seal primer valves as lavatory trap with outlet piping pitched down toward drain trap a minimum of 1 percent, and connect to floor-drain body, trap, or inlet fitting.
- K. Install trap-seal primer systems with outlet piping pitched down toward drain trap a minimum of 1 percent, and connect to floor-drain body, trap, or inlet fitting. Adjust system for proper flow.

3.2 CONNECTIONS

- A. Piping installation requirements are specified in other Division 22 Sections. Drawings indicate

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

general arrangement of piping and specialties.

- B. Ground equipment according to Division 26 Section "Grounding and Bonding for Electrical Systems."
- C. Connect wiring according to Division 26 Section "Low-Voltage Electrical Power Conductors and Cables."

3.3 LABELING AND IDENTIFYING

- A. Equipment Nameplates and Signs: Install engraved plastic-laminate equipment nameplate or sign on or near each of the following:
 - 1. Pressure vacuum breakers.
 - 2. Reduced-pressure-principle backflow preventers.
 - 3. Double-check backflow-prevention assemblies.
 - 4. Carbonated-beverage-machine backflow preventers.
 - 5. Dual-check-valve backflow preventers.
 - 6. Water pressure-reducing valves.
 - 7. Calibrated balancing valves.
 - 8. Primary, thermostatic, water mixing valves.
 - 9. Primary water tempering valves.
 - 10. Outlet boxes.
 - 11. Supply-type, trap-seal primer valves.
 - 12. Trap-seal primer systems.
- B. Distinguish among multiple units, inform operator of operational requirements, indicate safety and emergency precautions, and warn of hazards and improper operations, in addition to identifying unit. Nameplates and signs are specified in Division 22 Section "Identification for Plumbing Piping and Equipment."

3.4 FIELD QUALITY CONTROL

- A. Perform the following tests and prepare test reports:
 - 1. Test each backflow preventer according to authorities having jurisdiction and the device's reference standard.
- B. Remove and replace malfunctioning domestic water piping specialties and retest as specified above.

3.5 ADJUSTING

- A. Set field-adjustable pressure set points of water pressure-reducing valves.
- B. Set field-adjustable flow set points of balancing valves.
- C. Set field-adjustable temperature set points of temperature-actuated water mixing valves.

END OF SECTION 221119

BLANK PAGE

SECTION 221316

SANITARY WASTE AND VENT PIPING

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Pipe, tube, and fittings.
 - 2. Specialty pipe fittings.

1.3 DEFINITIONS

- A. EPDM: Ethylene-propylene-diene terpolymer rubber.
- B. PVC: Polyvinyl chloride plastic.

1.4 PERFORMANCE REQUIREMENTS

- A. Components and installation shall be capable of withstanding the following minimum working pressure unless otherwise indicated:
 - 1. Soil, Waste, and Vent Piping: 10-foot head of water.
- B. Seismic Performance: Soil, waste, and vent piping and support and installation shall withstand the effects of earthquake motions determined according to SEI/ASCE 7 and with the requirements specified in Section 230548 "Vibration and Seismic Controls for HVAC."
 - 1. For piping with a seismic importance factor of 1.0 the term "withstand" means "the unit will remain in place without separation of any parts from the device when subjected to the seismic forces specified."
 - 2. For piping with a seismic importance factor of 1.5 the term "withstand" means "the unit will remain in place without separation of any parts from the device when subjected to the seismic forces specified and the unit will be fully operational after the seismic event."

1.5 ACTION SUBMITTALS

- A. Product Data: For each type of product indicated.

1.6 INFORMATIONAL SUBMITTALS

- A. Seismic Qualification Certificates: For waste and vent piping, accessories, and components, from manufacturer.
 - 1. Basis for Certification: Indicate whether withstand certification is based on actual test of assembled components or on calculation.
 - 2. Detailed description of piping anchorage devices on which the certification is based and their installation requirements.
- B. Field quality-control reports.

1.7 QUALITY ASSURANCE

- A. Piping materials shall bear label, stamp, or other markings of specified testing agency.
- B. Comply with NSF/ANSI 14, "Plastics Piping Systems Components and Related Materials," for plastic piping components. Include marking with "NSF-dwv" for plastic drain, waste, and vent piping; "NSF-sewer" for plastic sewer piping; "NSF-drain" for plastic drain piping, and "NSF-tubular" for plastic continuous waste piping.

1.8 PROJECT CONDITIONS

- A. Interruption of Existing Sanitary Waste Service: Do not interrupt service to facilities occupied by Owner or others unless permitted under the following conditions and then only after arranging to provide temporary service according to requirements indicated:
 - 1. Notify Construction Manager no fewer than two days in advance of proposed interruption of sanitary waste service.

PART 2 - PRODUCTS

2.1 PIPING MATERIALS

- A. Comply with requirements in "Piping Schedule" Article for applications of pipe, tube, fitting materials, and joining methods for specific services, service locations, and pipe sizes.

2.2 HUBLESS, CAST-IRON SOIL PIPE AND FITTINGS

- A. Pipe and Fittings: All cast-iron waste, vent and sewer pipe and fittings shall conform to the requirements of CISPI Standard 301 and ASTM A 888. All products shall be marked with the collective trademark of the Cast Soil Pipe Institute and shall be listed by NSF International or receive prior approval of the engineer. All cast-iron pipe and fittings shall be American made and tested. Non-compliant import cast-iron products will not be permitted. Any non-compliant cast-iron product installed by the contractor on this project will be replaced at the contractor's expense and shall include all repairs, patching, painting and other incidental work required to return the project to its pre-remediation state.
 - 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- a. AB&I Foundry
 - b. Charlotte Pipe
 - c. Tyler Pipe
- B. CISPI, Hubless-Piping Couplings:
 - 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. ANACO.
 - b. Ideal
 - c. Mission Rubber Company; a division of MCP Industries, Inc.
 - d. Tyler Pipe.
 - 2. Standards: ASTM C 1277 and CISPI 310.
 - 3. Description: Stainless-steel corrugated shield with stainless-steel bands and tightening devices; and ASTM C 564, rubber sleeve with integral, center pipe stop.
 - 4. Listing: Couplings shall be listed by NSF International. Each coupling shall be embossed with the NSF seal.
- C. Heavy-Duty, Hubless-Piping Couplings:
 - 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Husky SD 4000.
 - b. Clamp-All Corp HI-TORQ 125.
 - 2. Standards: ASTM C 1277 and ASTM C 1540.
 - 3. Description: Stainless-steel shield with stainless-steel bands and tightening devices; and ASTM C 564, rubber sleeve with integral, center pipe stop.

PART 3 - EXECUTION

3.1 PIPING INSTALLATION

- A. Drawing plans, schematics, and diagrams indicate general location and arrangement of piping systems. Indicated locations and arrangements were used to size pipe and calculate friction loss, expansion, pump sizing, and other design considerations. Install piping as indicated unless deviations to layout are approved on coordination drawings.
- B. Install piping in concealed locations unless otherwise indicated and except in equipment rooms and service areas.
- C. Install piping indicated to be exposed and piping in equipment rooms and service areas at right angles or parallel to building walls. Diagonal runs are prohibited unless specifically indicated otherwise.
- D. Install piping above accessible ceilings to allow sufficient space for ceiling panel removal.
- E. Install piping to permit valve servicing.
- F. Install piping at indicated slopes.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- G. Install piping free of sags and bends.
- H. Install fittings for changes in direction and branch connections.
- I. Install piping to allow application of insulation.
- J. Install seismic restraints on piping. Comply with SEI/ASCE 7 and with requirements for seismic-restraint devices specified in Division 22 Section "Vibration and Seismic Controls for Plumbing Piping and Equipment."
- K. Make changes in direction for soil and waste drainage and vent piping using appropriate branches, bends, and long-sweep bends. Sanitary tees and short-sweep 1/4 bends may be used on vertical stacks if change in direction of flow is from horizontal to vertical. Use long-turn, double Y-branch and 1/8-bend fittings if two fixtures are installed back to back or side by side with common drain pipe. Straight tees, elbows, and crosses may be used on vent lines. Do not change direction of flow more than 90 degrees. Use proper size of standard increasers and reducers if pipes of different sizes are connected. Reducing size of drainage piping in direction of flow is prohibited.
- L. Lay buried building drainage piping beginning at low point of each system. Install true to grades and alignment indicated, with unbroken continuity of invert. Place hub ends of piping upstream. Install required gaskets according to manufacturer's written instructions for use of lubricants, cements, and other installation requirements. Maintain swab in piping and pull past each joint as completed.
- M. Install soil and waste drainage and vent piping at the following minimum slopes unless otherwise indicated:
 - 1. Building Sanitary Drain: 2 percent downward in direction of flow for piping
 - 2. Horizontal Sanitary Drainage Piping: 2 percent downward in direction of flow.
 - 3. Vent Piping: 1 percent down toward vertical fixture vent or toward vent stack.
- N. Install cast-iron soil piping according to CISPI's "Cast Iron Soil Pipe and Fittings Handbook," Chapter IV, "Installation of Cast Iron Soil Pipe and Fittings."
 - 1. Install encasement on underground piping according to ASTM A 674 or AWWA C105/A 21.5.
- O. Install engineered soil and waste drainage and vent piping systems as follows:
 - 1. Combination Waste and Vent: Comply with standards of authorities having jurisdiction.
- P. Plumbing Specialties:
 - 1. Install cleanouts at grade and extend to where building sanitary drains connect to building sanitary sewers in sanitary drainage gravity-flow piping. Install cleanout fitting with closure plug inside the building in sanitary drainage force-main piping. Comply with requirements for cleanouts specified in Division 22 Section "Sanitary Waste Piping Specialties."
 - 2. Install drains in sanitary drainage gravity-flow piping. Comply with requirements for drains specified in Division 22 Section "Sanitary Waste Piping Specialties."
 - 3. Install cleanout fitting with closure plug inside the building in sanitary force-main piping.
- Q. Do not enclose, cover, or put piping into operation until it is inspected and approved by authorities having jurisdiction.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- R. Install sleeves for piping penetrations of walls, ceilings, and floors. Comply with requirements for sleeves specified in Division 22 Section "Sleeves and Sleeve Seals for Plumbing Piping."
- S. Install sleeve seals for piping penetrations of concrete walls and slabs. Comply with requirements for sleeve seals specified in Division 22 Section "Sleeves and Sleeve Seals for Plumbing Piping."
- T. Install escutcheons for piping penetrations of walls, ceilings, and floors. Comply with requirements for escutcheons specified in Division 22 Section "Escutcheons for Plumbing Piping."

3.2 JOINT CONSTRUCTION

- A. Join hubless, cast-iron soil piping according to CISPI 310 and CISPI's "Cast Iron Soil Pipe and Fittings Handbook" for hubless-piping coupling joints.

3.3 HANGER AND SUPPORT INSTALLATION

- A. Comply with requirements for seismic-restraint devices specified in Division 22 Section "Vibration and Seismic Controls for Plumbing Piping and Equipment."
- B. Comply with requirements for pipe hanger and support devices and installation specified in Division 22 Section "Hangers and Supports for Plumbing Piping and Equipment."
 - 1. Install carbon-steel pipe hangers for horizontal piping in noncorrosive environments.
 - 2. Install stainless-steel pipe hangers for horizontal piping in corrosive environments.
 - 3. Install carbon-steel pipe support clamps for vertical piping in noncorrosive environments.
 - 4. Install stainless-steel pipe support clamps for vertical piping in corrosive environments.
 - 5. Vertical Piping: MSS Type 8 or Type 42, clamps.
 - 6. Install individual, straight, horizontal piping runs:
 - a. 100 Feet and Less: MSS Type 1, adjustable, steel clevis hangers.
 - b. Longer Than 100 Feet: MSS Type 43, adjustable roller hangers.
 - c. Longer Than 100 Feet if Indicated: MSS Type 49, spring cushion rolls.
 - 7. Multiple, Straight, Horizontal Piping Runs 100 Feet or Longer: MSS Type 44, pipe rolls. Support pipe rolls on trapeze.
 - 8. Base of Vertical Piping: MSS Type 52, spring hangers.
- C. Support horizontal piping and tubing within 12 inches of each fitting and coupling or valve and coupling.
- D. Support vertical piping and tubing at base and at each floor.
- E. Rod diameter may be reduced one size for double-rod hangers, with 3/8-inch minimum rods.
- F. Install hangers for cast-iron soil piping with the following maximum horizontal spacing and minimum rod diameters:
 - 1. NPS 1-1/2 and NPS 2: 60 inches with 3/8-inch rod.
 - 2. NPS 3: 60 inches with 1/2-inch rod.
 - 3. NPS 4 and NPS 5: 60 inches with 5/8-inch rod.
 - 4. NPS 6 and NPS 8: 60 inches with 3/4-inch rod.
 - 5. NPS 10 and NPS 12: 60 inches with 7/8-inch rod.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- 6. Spacing for 10-foot lengths may be increased to 10 feet. Spacing for fittings is limited to 60 inches.
- G. Install supports for vertical cast-iron soil piping every 15 feet.
- H. Support piping and tubing not listed above according to MSS SP-69 and manufacturer's written instructions.

3.4 CONNECTIONS

- A. Drawings indicate general arrangement of piping, fittings, and specialties.
- B. Connect soil and waste piping to exterior sanitary sewerage piping. Use transition fitting to join dissimilar piping materials.
- C. Connect drainage and vent piping to the following:
 - 1. Plumbing Fixtures: Connect drainage piping in sizes indicated, but not smaller than required by plumbing code.
 - 2. Plumbing Fixtures and Equipment: Connect atmospheric vent piping in sizes indicated, but not smaller than required by authorities having jurisdiction.
 - 3. Plumbing Specialties: Connect drainage and vent piping in sizes indicated, but not smaller than required by plumbing code.
 - 4. Install test tees (wall cleanouts) in conductors near floor and floor cleanouts with cover flush with floor.
 - 5. Comply with requirements for cleanouts and drains specified in Division 22 Section "Sanitary Waste Piping Specialties."
 - 6. Equipment: Connect drainage piping as indicated. Provide shutoff valve if indicated and union for each connection. Use flanges instead of unions for connections NPS 2-1/2 and larger.
- D. Where installing piping adjacent to equipment, allow space for service and maintenance of equipment.
- E. Make fixture and equipment connections according to the following unless otherwise indicated:
 - 1. Install unions, in piping NPS 2 and smaller, adjacent to each valve and at final connection to each piece of equipment.
 - 2. Install flanges, in piping NPS 2-1/2 and larger, adjacent to flanged valves and at final connection to each piece of equipment.

3.5 IDENTIFICATION

- A. Identify exposed sanitary waste and vent piping. Comply with requirements for identification specified in Division 22 Section "Identification for Plumbing Piping and Equipment."

3.6 FIELD QUALITY CONTROL

- A. During installation, notify authorities having jurisdiction at least 24 hours before inspection must be made. Perform tests specified below in presence of authorities having jurisdiction.
 - 1. Roughing-in Inspection: Arrange for inspection of piping before concealing or closing-in after roughing-in and before setting fixtures.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

2. Final Inspection: Arrange for final inspection by authorities having jurisdiction to observe tests specified below and to ensure compliance with requirements.
- B. Reinspection: If authorities having jurisdiction find that piping will not pass test or inspection, make required corrections and arrange for reinspection.
 - C. Reports: Prepare inspection reports and have them signed by authorities having jurisdiction.
 - D. Test sanitary drainage and vent piping according to procedures of authorities having jurisdiction or, in absence of published procedures, as follows:
 1. Test for leaks and defects in new piping and parts of existing piping that have been altered, extended, or repaired. If testing is performed in segments, submit separate report for each test, complete with diagram of portion of piping tested.
 2. Leave uncovered and unconcealed new, altered, extended, or replaced drainage and vent piping until it has been tested and approved. Expose work that was covered or concealed before it was tested.
 3. Roughing-in Plumbing Test Procedure: Test drainage and vent piping except outside leaders on completion of roughing-in. Close openings in piping system and fill with water to point of overflow, but not less than 10-foot head of water. From 15 minutes before inspection starts to completion of inspection, water level must not drop. Inspect joints for leaks.
 4. Finished Plumbing Test Procedure: After plumbing fixtures have been set and traps filled with water, test connections and prove they are gastight and watertight. Plug vent-stack openings on roof and building drains where they leave building. Introduce air into piping system equal to pressure of 1-inch wg. Use U-tube or manometer inserted in trap of water closet to measure this pressure. Air pressure must remain constant without introducing additional air throughout period of inspection. Inspect plumbing fixture connections for gas and water leaks.
 5. Repair leaks and defects with new materials and retest piping, or portion thereof, until satisfactory results are obtained.
 6. Prepare reports for tests and required corrective action.

3.7 CLEANING AND PROTECTION

- A. Clean interior of piping. Remove dirt and debris as work progresses.
- B. Protect drains during remainder of construction period to avoid clogging with dirt and debris and to prevent damage from traffic and construction work.
- C. Place plugs in ends of uncompleted piping at end of day and when work stops.

3.8 PIPING SCHEDULE

- A. Flanges and unions may be used on aboveground pressure piping unless otherwise indicated.
- B. Aboveground, soil and waste piping NPS 3 and smaller shall be the following:
 1. Hubless, cast-iron soil pipe and fittings CISPI hubless-piping couplings; and coupled joints.
 2. Dissimilar Pipe-Material Couplings: Shielded, nonpressure transition couplings.
- C. Aboveground, soil and waste piping NPS 4 and larger shall be the following:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Hubless, cast-iron soil pipe and fittings heavy-duty hubless-piping couplings; and coupled joints.
 2. Dissimilar Pipe-Material Couplings: Shielded, nonpressure transition couplings.
- D. Aboveground, vent piping NPS 3 and smaller shall be the following:
1. Hubless, cast-iron soil pipe and fittings CISPI hubless-piping couplings; and coupled joints.
 2. Dissimilar Pipe-Material Couplings: Shielded, nonpressure transition couplings.
- E. Aboveground, vent piping NPS 4 and larger shall be the following:
1. Hubless, cast-iron soil pipe and fittings CISPI hubless-piping couplings; and coupled joints.
 2. Dissimilar Pipe-Material Couplings: Unshielded, nonpressure transition couplings.

END OF SECTION 221316

SECTION 221319

SANITARY WASTE PIPING SPECIALTIES

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. This Section includes the following sanitary drainage piping specialties:
 - 1. Cleanouts.
 - 2. Floor drains.
 - 3. Through-penetration firestop assemblies.
 - 4. Miscellaneous sanitary drainage piping specialties.
- B. Related Sections include the following:
 - 1. Division 22 Section "Storm Drainage Piping Specialties" for trench drains for storm water, channel drainage systems for storm water, roof drains, and catch basins.

1.3 SEISMIC REQUIREMENTS

- A. Component Importance Factor. All plumbing components shall be assigned a component importance factor. The component importance factor, I_p , shall be taken as 1.5 if any of the following conditions apply:
 - 1. The component is required to function for life-safety purposes after an earthquake.
 - 2. The component contains hazardous materials.
 - 3. The component is in or attached to an Occupancy Category IV structure and it is needed for continued operation of the facility or its failure could impair the continued operation of the facility.
- B. All other components shall be assigned a component importance factor, I_p , equal to 1.0.
- C. Seismic Performance: Plumbing equipment, hangers and supports shall withstand the effects of earthquake motions determined according to SEI/ASCE 7 and with the requirements specified in Section 220548 "Vibration and Seismic Controls for Plumbing Piping and Equipment.

1.4 DEFINITIONS

- A. FOG: Fats, oils, and greases.
- B. FRP: Fiberglass-reinforced plastic.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- C. HDPE: High-density polyethylene plastic.
- D. PE: Polyethylene plastic.
- E. PP: Polypropylene plastic.
- F. PVC: Polyvinyl chloride plastic.

1.5 SUBMITTALS

- A. Product Data: For each type of product indicated. Include rated capacities, operating characteristics, and accessories for the following:

1.6 QUALITY ASSURANCE

- A. Drainage piping specialties shall bear label, stamp, or other markings of specified testing agency.
- B. Electrical Components, Devices, and Accessories: Listed and labeled as defined in NFPA 70, Article 100, by a testing agency acceptable to authorities having jurisdiction, and marked for intended use.

1.7 COORDINATION

- A. Coordinate size and location of concrete bases. Cast anchor-bolt inserts into bases. Concrete, reinforcement, and formwork requirements are specified in Division 03.
- B. Coordinate size and location of roof penetrations.

PART 2 - PRODUCTS

2.1 CLEANOUTS

- A. Exposed Metal Cleanouts:
 - 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Josam Company; Josam Div.
 - b. MIFAB, Inc.
 - c. Smith, Jay R. Mfg. Co.; Division of Smith Industries, Inc.
 - d. Tyler Pipe; Wade Div.
 - e. Watts Drainage Products Inc.
 - f. Zurn Plumbing Products Group; Specification Drainage Operation.
 - 2. Standard: ASME A112.36.2M for cast iron for cleanout test tee.
 - 3. Size: Same as connected drainage piping
 - 4. Body Material: Hubless, cast-iron soil pipe test tee as required to match connected piping.
 - 5. Closure: Countersunk, brass plug.
 - 6. Closure Plug Size: Same as or not more than one size smaller than cleanout size.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

7. Closure: Stainless-steel plug with seal.

B. Metal Floor Cleanouts:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Josam Company; Josam Div.
 - b. Oatey.
 - c. Smith, Jay R. Mfg. Co.; Division of Smith Industries, Inc.
 - d. Tyler Pipe; Wade Div.
 - e. Watts Drainage Products Inc.
 - f. Zurn Plumbing Products Group; Light Commercial Operation.
 - g. Zurn Plumbing Products Group; Specification Drainage Operation.
2. Standard: ASME A112.36.2M for adjustable housing cleanout.
3. Size: Same as connected branch.
4. Type: Adjustable housing.
5. Body or Ferrule: Cast iron.
6. Clamping Device: Required.
7. Outlet Connection: Inside calk.
8. Closure: Brass plug with tapered threads.
9. Adjustable Housing Material: Cast iron with threads.
10. Frame and Cover Material and Finish: Nickel-bronze, copper alloy.
11. Frame and Cover Shape: Round.
12. Top Loading Classification: Heavy Duty.
13. Riser: ASTM A 74, Service class, cast-iron drainage pipe fitting and riser to cleanout.
14. Standard: ASME A112.3.1.
15. Size: Same as connected branch.
16. Housing: Stainless steel.
17. Closure: Stainless steel with seal.
18. Riser: Stainless-steel drainage pipe fitting to cleanout.

C. Cast-Iron Wall Cleanouts:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Josam Company; Josam Div.
 - b. MIFAB, Inc.
 - c. Smith, Jay R. Mfg. Co.; Division of Smith Industries, Inc.
 - d. Tyler Pipe; Wade Div.
 - e. Watts Drainage Products Inc.
 - f. Zurn Plumbing Products Group; Specification Drainage Operation.
2. Standard: ASME A112.36.2M. Include wall access.
3. Size: Same as connected drainage piping.
4. Body: Hub-and-spigot, cast-iron soil pipe T-branch as required to match connected piping.
5. Closure: Countersunk, brass plug.
6. Closure Plug Size: Same as or not more than one size smaller than cleanout size.
7. Wall Access: Round, flat, chrome-plated brass or stainless-steel cover plate with screw.
8. Wall Access: Round, stainless-steel wall-installation frame and cover.

2.2 FLOOR DRAINS

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

A. Cast-Iron Floor Drains:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
2. Basis-of-Design Product: See Schedule at end of this Section:
 - a. Josam Company; Josam Div.
 - b. MIFAB, Inc.
 - c. Smith, Jay R. Mfg. Co.; Division of Smith Industries, Inc.
 - d. Tyler Pipe; Wade Div.
 - e. Watts Drainage Products Inc.
 - f. Zurn Plumbing Products Group; Specification Drainage Operation.
3. Standard: ASME A112.6.3.
4. Body Material: Gray iron.
5. Seepage Flange: Required.
6. Anchor Flange: Not required.
7. Outlet: Bottom.
8. Trap Material: Cast iron>.
9. Trap Pattern: Deep-seal P-trap>.
10. Trap Features: Trap-seal primer valve drain connection>.

2.3 THROUGH-PENETRATION FIRESTOP ASSEMBLIES

A. Through-Penetration Firestop Assemblies:

1. Available Manufacturers: Subject to compliance with requirements, manufacturers offering products that may be incorporated into the Work include, but are not limited to, the following:
2. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. ProSet Systems Inc.
3. Standard: UL 1479 assembly of sleeve and stack fitting with firestopping plug.
4. Size: Same as connected soil, waste, or vent stack.
5. Sleeve: Molded PVC plastic, of length to match slab thickness and with integral nailing flange on one end for installation in cast-in-place concrete slabs.
6. Stack Fitting: ASTM A 48/A 48M, gray-iron, hubless-pattern, wye branch with neoprene O-ring at base and gray-iron plug in thermal-release harness. Include PVC protective cap for plug.
7. Special Coating: Corrosion resistant on interior of fittings.

2.4 MISCELLANEOUS SANITARY DRAINAGE PIPING SPECIALTIES

A. Deep-Seal Traps:

1. Description: Cast-iron or bronze casting, with inlet and outlet matching connected piping and cleanout trap-seal primer valve connection.
2. Size: Same as connected waste piping.
 - a. NPS 2: 4-inch- minimum water seal.
 - b. NPS 2-1/2 and Larger: 5-inch- minimum water seal.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

B. Floor-Drain, Trap-Seal Primer Fittings:

1. Description: Cast iron, with threaded inlet and threaded or spigot outlet, and trap-seal primer valve connection.
2. Size: Same as floor drain outlet with NPS 1/2 side inlet.

C. Air-Gap Fittings:

1. Standard: ASME A112.1.2, for fitting designed to ensure fixed, positive air gap between installed inlet and outlet piping.
2. Body: Bronze or cast iron.
3. Inlet: Opening in top of body.
4. Outlet: Larger than inlet.
5. Size: Same as connected waste piping and with inlet large enough for associated indirect waste piping.

D. Sleeve Flashing Device:

1. Description: Manufactured, cast-iron fitting, with clamping device, that forms sleeve for pipe floor penetrations of floor membrane. Include galvanized-steel pipe extension in top of fitting that will extend 1 inch > above finished floor and galvanized-steel pipe extension in bottom of fitting that will extend through floor slab.
2. Size: As required for close fit to riser or stack piping.

2.5 MOTORS

A. General requirements for motors are specified in Division 22 Section "Common Motor Requirements for Plumbing Equipment."

1. Motor Sizes: Minimum size as indicated. If not indicated, large enough so driven load will not require motor to operate in service factor range above 1.0.
2. Controllers, Electrical Devices, and Wiring: Electrical devices and connections are specified in Division 26 Sections.

PART 3 - EXECUTION

3.1 INSTALLATION

- A. Comply with requirements for seismic-restraint devices in Section 220548 "Vibration and Seismic Controls for Plumbing Piping and Equipment."**
- B. Refer to Division 22 Section "Common Work Results for Plumbing" for piping joining materials, joint construction, and basic installation requirements.**
- C. Install cleanouts in aboveground piping and building drain piping according to the following, unless otherwise indicated:**
1. Size same as drainage piping up to NPS 4. Use NPS 4 for larger drainage piping unless larger cleanout is indicated.
 2. Locate at each change in direction of piping greater than 45 degrees.
 3. Locate at minimum intervals of 50 feet for piping NPS 4 and smaller and 100 feet for larger piping.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

4. Locate at base of each vertical soil and waste stack.
- D. For floor cleanouts for piping below floors, install cleanout deck plates with top flush with finished floor.
- E. For cleanouts located in concealed piping, install cleanout wall access covers, of types indicated, with frame and cover flush with finished wall.
- F. Install floor drains at low points of surface areas to be drained. Set grates of drains flush with finished floor, unless otherwise indicated.
 1. Position floor drains for easy access and maintenance.
 2. Set floor drains below elevation of surrounding finished floor to allow floor drainage. Set with grates depressed according to the following drainage area radii:
 - a. Radius, 30 Inches or Less: Equivalent to 1 percent slope, but not less than 1/4-inch total depression.
 - b. Radius, 30 to 60 Inches: Equivalent to 1 percent slope.
 - c. Radius, 60 Inches or Larger: Equivalent to 1 percent slope, but not greater than 1-inch total depression.
 3. Install floor-drain flashing collar or flange so no leakage occurs between drain and adjoining flooring. Maintain integrity of waterproof membranes where penetrated.
 4. Install individual traps for floor drains connected to sanitary building drain, unless otherwise indicated.
- G. Assemble plastic channel drainage system components according to manufacturer's written instructions. Install on support devices so that top will be flush with adjacent surface.
- H. Install deep-seal traps on floor drains and other waste outlets, if indicated.
- I. Install floor-drain, trap-seal primer fittings on inlet to floor drains that require trap-seal primer connection.
 1. Exception: Fitting may be omitted if trap has trap-seal primer connection.
 2. Size: Same as floor drain inlet.
- J. Install air-gap fittings on draining-type backflow preventers and on indirect-waste piping discharge into sanitary drainage system.
- K. Install sleeve flashing device with each riser and stack passing through floors with waterproof membrane.
- L. Install wood-blocking reinforcement for wall-mounting-type specialties.
- M. Install traps on plumbing specialty drain outlets. Omit traps on indirect wastes unless trap is indicated.
- N. Install escutcheons at wall, floor, and ceiling penetrations in exposed finished locations and within cabinets and millwork. Use deep-pattern escutcheons if required to conceal protruding pipe fittings.

3.2 CONNECTIONS

- A. Piping installation requirements are specified in other Division 22 Sections. Drawings indicate general arrangement of piping, fittings, and specialties.
- B. Install piping adjacent to equipment to allow service and maintenance.
- C. Ground equipment according to Division 26 Section "Grounding and Bonding for Electrical Systems."
- D. Connect wiring according to Division 26 Section "Low-Voltage Electrical Power Conductors and Cables."

3.3 FIELD QUALITY CONTROL

- A. Perform tests and inspections and prepare test reports.
 - 1. Manufacturer's Field Service: Engage a factory-authorized service representative to inspect field-assembled grease removal devices and their installation, including piping and electrical connections, and to assist in testing.
- B. Tests and Inspections:
 - 1. Leak Test: After installation, charge system and test for leaks. Repair leaks and retest until no leaks exist.
 - 2. Test and adjust controls and safeties. Replace damaged and malfunctioning controls and equipment.

3.4 PROTECTION

- A. Protect drains during remainder of construction period to avoid clogging with dirt or debris and to prevent damage from traffic or construction work.
- B. Place plugs in ends of uncompleted piping at end of each day or when work stops.

3.5 DEMONSTRATION

- A. Engage a factory-authorized service representative to train Owner's maintenance personnel to adjust, operate, and maintain grease removal devices. Refer to Division 01 Section "Demonstration and Training."

END OF SECTION 221319

SECTION 224000

PLUMBING FIXTURES

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. This Section includes the following conventional plumbing fixtures and related components:
 - 1. Faucets for lavatories showers and sinks.
 - 2. Flushometers.
 - 3. Toilet seats.
 - 4. Protective shielding guards.
 - 5. Fixture supports.
 - 6. Water closets.
 - 7. Urinals.
 - 8. Lavatories.
 - 9. Commercial sinks.
 - 10. Service sinks.
- B. :
 - 1. Division 10 Section "Toilet, Bath, and Laundry Accessories."
 - 2. Division 22 Section "Domestic Water Piping Specialties" for backflow preventers, floor drains, and specialty fixtures not included in this Section.
 - 3. Division 22 Section "Emergency Plumbing Fixtures."
 - 4. Division 22 Section "Drinking Fountains and Water Coolers."

1.3 DEFINITIONS

- A. Accessible Fixture: Plumbing fixture that can be approached, entered, and used by people with disabilities.
- B. Cast Polymer: Cast-filled-polymer-plastic material. This material includes cultured-marble and solid-surface materials.
- C. Cultured Marble: Cast-filled-polymer-plastic material with surface coating.
- D. Fitting: Device that controls the flow of water into or out of the plumbing fixture. Fittings specified in this Section include supplies and stops, faucets and spouts, shower heads and tub spouts, drains and tailpieces, and traps and waste pipes. Piping and general-duty valves are included where indicated.
- E. FRP: Fiberglass-reinforced plastic.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- F. PMMA: Polymethyl methacrylate (acrylic) plastic.
- G. PVC: Polyvinyl chloride plastic.
- H. Solid Surface: Nonporous, homogeneous, cast-polymer-plastic material with heat-, impact-, scratch-, and stain-resistance qualities.

1.4 SUBMITTALS

- A. Product Data: For each type of plumbing fixture indicated. Include selected fixture and trim, fittings, accessories, appliances, appurtenances, equipment, and supports. Indicate materials and finishes, dimensions, construction details, and flow-control rates.
- B. Shop Drawings: Diagram power, signal, and control wiring.
- C. Operation and Maintenance Data: For plumbing fixtures to include in emergency, operation, and maintenance manuals.
- D. Warranty: Special warranty specified in this Section.

1.5 QUALITY ASSURANCE

- A. Source Limitations: Obtain plumbing fixtures, faucets, and other components of each category through one source from a single manufacturer.
 - 1. Exception: If fixtures, faucets, or other components are not available from a single manufacturer, obtain similar products from other manufacturers specified for that category.
- B. Electrical Components, Devices, and Accessories: Listed and labeled as defined in NFPA 70, Article 100, by a testing agency acceptable to authorities having jurisdiction, and marked for intended use.
- C. Regulatory Requirements: Comply with requirements in ICC A117.1, "Accessible and Usable Buildings and Facilities"; Public Law 90-480, "Architectural Barriers Act"; and Public Law 101-336, "Americans with Disabilities Act"; for plumbing fixtures for people with disabilities.
- D. Regulatory Requirements: Comply with requirements in Public Law 102-486, "Energy Policy Act," about water flow and consumption rates for plumbing fixtures.
- E. NSF Standard: Comply with NSF 61, "Drinking Water System Components--Health Effects," for fixture materials that will be in contact with potable water.
- F. Select combinations of fixtures and trim, faucets, fittings, and other components that are compatible.
- G. Comply with the following applicable standards and other requirements specified for plumbing fixtures:
 - 1. Enameled, Cast-Iron Fixtures: ASME A112.19.1M.
 - 2. Porcelain-Enameled, Formed-Steel Fixtures: ASME A112.19.4M.
 - 3. Slip-Resistant Bathing Surfaces: ASTM F 462.
 - 4. Solid-Surface-Material Lavatories and Sinks: ANSI/ICPA SS-1.
 - 5. Stainless-Steel Residential Sinks: ASME A112.19.3.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

6. Vitreous-China Fixtures: ASME A112.19.2M.
 7. Water-Closet, Flushometer Tank Trim: ASSE 1037.
 8. Whirlpool Bathtub Fittings: ASME A112.19.8M.
- H. Comply with the following applicable standards and other requirements specified for lavatory and sink faucets:
1. Backflow Protection Devices for Faucets with Side Spray: ASME A112.18.3M.
 2. Backflow Protection Devices for Faucets with Hose-Thread Outlet: ASME A112.18.3M.
 3. Diverter Valves for Faucets with Hose Spray: ASSE 1025.
 4. Faucets: ASME A112.18.1.
 5. Hose-Connection Vacuum Breakers: ASSE 1011.
 6. Hose-Coupling Threads: ASME B1.20.7.
 7. Integral, Atmospheric Vacuum Breakers: ASSE 1001.
 8. NSF Potable-Water Materials: NSF 61.
 9. Pipe Threads: ASME B1.20.1.
 10. Sensor-Actuated Faucets and Electrical Devices: UL 1951.
 11. Supply Fittings: ASME A112.18.1.
 12. Brass Waste Fittings: ASME A112.18.2.
 13. NSF61 Appendage G-AB 1953. Lead free potable drinking faucets.
- I. Comply with the following applicable standards and other requirements specified for bathtub/shower and shower faucets:
1. Backflow Protection Devices for Hand-Held Showers: ASME A112.18.3M.
 2. Combination, Pressure-Equalizing and Thermostatic-Control Antiscald Faucets: ASSE 1016.
 3. Deck-Mounted Bath/Shower Transfer Valves: ASME 18.7.
 4. Faucets: ASME A112.18.1.
 5. Hand-Held Showers: ASSE 1014.
 6. High-Temperature-Limit Controls for Thermal-Shock-Preventing Devices: ASTM F 445.
 7. Hose-Coupling Threads: ASME B1.20.7.
 8. Manual-Control Antiscald Faucets: ASTM F 444.
 9. Pipe Threads: ASME B1.20.1.
 10. Pressure-Equalizing-Control Antiscald Faucets: ASTM F 444 and ASSE 1016.
 11. Sensor-Actuated Faucets and Electrical Devices: UL 1951.
 12. Thermostatic-Control Antiscald Faucets: ASTM F 444 and ASSE 1016.
- J. Comply with the following applicable standards and other requirements specified for miscellaneous fittings:
1. Atmospheric Vacuum Breakers: ASSE 1001.
 2. Brass and Copper Supplies: ASME A112.18.1.
 3. Dishwasher Air-Gap Fittings: ASSE 1021.
 4. Manual-Operation Flushometers: ASSE 1037.
 5. Plastic Tubular Fittings: ASTM F 409.
 6. Brass Waste Fittings: ASME A112.18.2.
 7. Sensor-Operation Flushometers: ASSE 1037 and UL 1951.
 8. NSF61 Appendage G-AB 1953. Lead free potable drinking faucets.
- K. Comply with the following applicable standards and other requirements specified for miscellaneous components:
1. Disposers: ASSE 1008 and UL 430.
 2. Dishwasher Air-Gap Fittings: ASSE 1021.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

3. Flexible Water Connectors: ASME A112.18.6.
4. Floor Drains: ASME A112.6.3.
5. Grab Bars: ASTM F 446.
6. Hose-Coupling Threads: ASME B1.20.7.
7. Off-Floor Fixture Supports: ASME A112.6.1M.
8. Pipe Threads: ASME B1.20.1.
9. Plastic Toilet Seats: ANSI Z124.5.
10. Supply and Drain Protective Shielding Guards: ICC A117.1.

1.6 EXTRA MATERIALS

- A. Furnish extra materials described below that match products installed and that are packaged with protective covering for storage and identified with labels describing contents.
1. Faucet Washers and O-Rings: Equal to 10 percent of amount of each type and size installed.
 2. Faucet Cartridges and O-Rings: Equal to 5 percent of amount of each type and size installed.
 3. Flushometer Valve, Repair Kits: Equal to 10 percent of amount of each type installed, but no fewer than 12 of each type.
 4. Provide hinged-top wood or metal box, or individual metal boxes, with separate compartments for each type and size of extra materials listed above.
 5. Toilet Seats: Equal to 5 percent of amount of each type installed.

PART 2 - PRODUCTS

2.1 LAVATORY FAUCETS

- A. Lavatory Faucets:
1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Chicago Faucets.
 - b. T & S Brass and Bronze Works, Inc.
 - c. Moen, Inc.

2.2 SHOWER FAUCETS

- A. Shower Faucets:
1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Chicago Faucets.
 - b. Leonard Valve Company.
 - c. Moen, Inc.
 - d. Powers; a Watts Industries Co.
 - e. Symmons Industries, Inc.
 - f. T & S Brass and Bronze Works, Inc.

2.3 SINK FAUCETS

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

A. Sink Faucets:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Chicago Faucets.
 - b. T & S Brass and Bronze Works, Inc.
 - c. Moen, Inc.

2.4 FLUSHOMETERS

A. Flushometers:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Sloan Valve Company.
 - b. Zurn Plumbing Products Group; Commercial Brass Operation.
 - c. Moen, Inc.

2.5 TOILET SEATS

A. Toilet Seats:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Bemis Manufacturing Company.
 - b. Centoco Manufacturing Corp.
 - c. Church Seats.
 - d. Olsonite Corp.
 - e. Sperzel.
2. Description: Toilet seat for water-closet-type fixture.
 - a. Material: Molded, solid plastic with antimicrobial agent.
 - b. Configuration: Open front without cover.
 - c. Size: Elongated.
 - d. Hinge Type: CK, check.
 - e. Class: Heavy-duty commercial.
 - f. Color: White.

2.6 PROTECTIVE SHIELDING GUARDS

A. Protective Shielding Pipe Covers:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Engineered Brass Co.
 - b. Insul-Tect Products Co.; a Subsidiary of MVG Molded Products.
 - c. McGuire Manufacturing Co., Inc.
 - d. Plumberex Specialty Products Inc.
 - e. TCI Products.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- f. TRUEBRO, Inc.
 - g. Zurn Plumbing Products Group; Tubular Brass Plumbing Products Operation.
 - 2. Description: Manufactured plastic wraps for covering plumbing fixture hot- and cold-water supplies and trap and drain piping. Comply with Americans with Disabilities Act (ADA) requirements. Product shall also meet the ASTM E 84 25/450 smoke and flame rating.
- B. Protective Shielding Piping Enclosures:
 - 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. TRUEBRO, Inc.
 - 2. Description: Manufactured plastic enclosure for covering plumbing fixture hot- and cold-water supplies and trap and drain piping. Comply with ADA requirements.

2.7 FIXTURE SUPPORTS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. Josam Company.
 - 2. MIFAB Manufacturing Inc.
 - 3. Smith, Jay R. Mfg. Co.
 - 4. Tyler Pipe; Wade Div.
 - 5. Watts Drainage Products Inc.; a div. of Watts Industries, Inc.
 - 6. Zurn Plumbing Products Group; Specification Drainage Operation.
- B. Urinal Supports:
 - 1. Description: Type I, urinal carrier with fixture support plates and coupling with seal and fixture bolts and hardware matching fixture for wall-mounting, urinal-type fixture. Include steel uprights with feet.
 - 2. Accessible-Fixture Support: Include rectangular steel uprights.
- C. Lavatory Supports:
 - 1. Description: Type II, lavatory carrier with concealed arms and tie rod for wall-mounting, lavatory-type fixture. Include steel uprights with feet.
 - 2. Accessible-Fixture Support: Include rectangular steel uprights.

2.8 WATER CLOSETS

- A. Water Closets:
 - 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. American Standard Companies, Inc.
 - b. Crane Plumbing, L.L.C./Fiat Products.
 - c. Eljer.
 - d. Kohler Co.

2.9 URINALS

A. Urinals:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. American Standard Companies, Inc.
 - b. Briggs Plumbing Products, Inc.
 - c. Crane Plumbing, L.L.C./Fiat Products.
 - d. Eljer.
 - e. Kohler Co.

2.10 LAVATORIES

A. Lavatories:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. American Standard Companies, Inc.
 - b. Briggs Plumbing Products, Inc.
 - c. Crane Plumbing, L.L.C./Fiat Products.
 - d. Eljer.
 - e. Kohler Co.

2.11 COMMERCIAL SINKS

A. Commercial Sinks:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Elkay Manufacturing Co.
 - b. Just Manufacturing Company.

2.12 SERVICE SINKS

A. Service Sinks:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. American Standard Companies, Inc.
 - b. Commercial Enameling Company.
 - c. Eljer.
 - d. Kohler Co.
 - e. Crane Plumbing, L.L.C./Fiat Products.

PART 3 - EXECUTION

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

3.1 EXAMINATION

- A. Examine roughing-in of water supply and sanitary drainage and vent piping systems to verify actual locations of piping connections before plumbing fixture installation.
- B. Examine cabinets, counters, floors, and walls for suitable conditions where fixtures will be installed.
- C. Proceed with installation only after unsatisfactory conditions have been corrected.

3.2 INSTALLATION

- A. Assemble plumbing fixtures, trim, fittings, and other components according to manufacturers' written instructions.
- B. Install off-floor supports, affixed to building substrate, for wall-mounting fixtures.
 - 1. Use carrier supports with waste fitting and seal for back-outlet fixtures.
 - 2. Use carrier supports without waste fitting for fixtures with tubular waste piping.
 - 3. Use chair-type carrier supports with rectangular steel uprights for accessible fixtures.
- C. Install back-outlet, wall-mounting fixtures onto waste fitting seals and attach to supports.
- D. Install floor-mounting fixtures on closet flanges or other attachments to piping or building substrate.
- E. Install wall-mounting fixtures with tubular waste piping attached to supports.
- F. Install counter-mounting fixtures in and attached to casework.
- G. Install fixtures level and plumb according to roughing-in drawings.
- H. Install water-supply piping with stop on each supply to each fixture to be connected to water distribution piping. Attach supplies to supports or substrate within pipe spaces behind fixtures. Install stops in locations where they can be easily reached for operation.
 - 1. Exception: Use ball, gate, or globe valves if supply stops are not specified with fixture. Valves are specified in Division 22 Section "General-Duty Valves for Plumbing Piping."
- I. Install trap and tubular waste piping on drain outlet of each fixture to be directly connected to sanitary drainage system.
- J. Install tubular waste piping on drain outlet of each fixture to be indirectly connected to drainage system.
- K. Install flushometer valves for accessible water closets and urinals with handle mounted on wide side of compartment. Install other actuators in locations that are easy for people with disabilities to reach.
- L. Install toilet seats on water closets.
- M. Install faucet-spout fittings with specified flow rates and patterns in faucet spouts if faucets are not available with required rates and patterns. Include adapters if required.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- N. Install water-supply flow-control fittings with specified flow rates in fixture supplies at stop valves.
- O. Install faucet flow-control fittings with specified flow rates and patterns in faucet spouts if faucets are not available with required rates and patterns. Include adapters if required.
- P. Install shower flow-control fittings with specified maximum flow rates in shower arms.
- Q. Install traps on fixture outlets.
 - 1. Exception: Omit trap on fixtures with integral traps.
 - 2. Exception: Omit trap on indirect wastes, unless otherwise indicated.
- R. Install escutcheons at piping wall ceiling penetrations in exposed, finished locations and within cabinets and millwork. Use deep-pattern escutcheons if required to conceal protruding fittings. Escutcheons are specified in Division 22 Section "Common Work Results for Plumbing."
- S. Set service basins in leveling bed of cement grout. Grout is specified in Division 22 Section "Common Work Results for Plumbing."
- T. Seal joints between fixtures and walls, floors, and countertops using sanitary-type, one-part, mildew-resistant silicone sealant. Match sealant color to fixture color. Sealants are specified in Division 07 Section "Joint Sealants."
- U. All plumbing fixtures are to be mounted at the height specified on the Architectural drawings.

3.3 CONNECTIONS

- A. Piping installation requirements are specified in other Division 22 Sections. Drawings indicate general arrangement of piping, fittings, and specialties.
- B. Connect fixtures with water supplies, stops, and risers, and with traps, soil, waste, and vent piping. Use size fittings required to match fixtures.
- C. Ground equipment according to Division 26 Section "Grounding and Bonding for Electrical Systems."
- D. Connect wiring according to Division 26 Section "Low-Voltage Electrical Power Conductors and Cables."

3.4 FIELD QUALITY CONTROL

- A. Verify that installed plumbing fixtures are categories and types specified for locations where installed.
- B. Check that plumbing fixtures are complete with trim, faucets, fittings, and other specified components.
- C. Inspect installed plumbing fixtures for damage. Replace damaged fixtures and components.
- D. Test installed fixtures after water systems are pressurized for proper operation. Replace malfunctioning fixtures and components, then retest. Repeat procedure until units operate properly.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- E. Install fresh batteries in sensor-operated mechanisms.

3.5 ADJUSTING

- A. Operate and adjust faucets and controls. Replace damaged and malfunctioning fixtures, fittings, and controls.
- B. Adjust water pressure at faucets and flushometer valves to produce proper flow and stream.
- C. Replace washers and seals of leaking and dripping faucets and stops.
- D. Install fresh batteries in sensor-operated mechanisms.

3.6 CLEANING

- A. Clean fixtures, faucets, and other fittings with manufacturers' recommended cleaning methods and materials. Do the following:
 - 1. Remove faucet spouts and strainers, remove sediment and debris, and reinstall strainers and spouts.
 - 2. Remove sediment and debris from drains.
- B. After completing installation of exposed, factory-finished fixtures, faucets, and fittings, inspect exposed finishes and repair damaged finishes.

3.7 PROTECTION

- A. Provide protective covering for installed fixtures and fittings.
- B. Do not allow use of plumbing fixtures for temporary facilities unless approved in writing by Owner.

END OF SECTION 224000

BLANK PAGE

SECTION 226314

MEDICAL GAS PIPING

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 1 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. This Section includes piping and related specialties for the following medical gas systems:
 - 1. Oxygen piping, designated "oxygen," OX.
 - 2. Medical compressed-air piping, designated "medical air, MA.
 - 3. Nitrous-oxide piping, designated "nitrous oxide," NO or N2O.
 - 4. Nitrogen piping, designated "nitrogen," N or N2.
 - 5. Carbon-dioxide piping, designated "carbon dioxide" or CO2.
 - 6. Medical-surgical vacuum piping, designated "medical vacuum," V or MV.
 - 7. Waste anesthetic gas disposal piping, designated "evacuation," EV or EVAC.
- B. Contractor furnished products and services.
 - 1. All materials – piping, fittings, hangers, labeling, etc. that are not owner-furnished required by contract documents NFPA 99, for a complete system.
 - 2. Medical gas equipment and specialties including, but not limited to, valves, valve boxes, pressure controllers, pressure sensors, alarm panels, manifolds, emergency O2 connections, wall outlets, and ceiling-service hose drops.
 - 3. The entire medical gas system shall, upon successful completion of Installer Performed Tests, be verified by an independent verifier provided by Allied Healthcare Products, Inc.
 - 4. Verifier shall perform all tests required by NFPA 99 and all federal, state and local requirements, and submit results to the mechanical contractor for distribution to the general contractor, mechanical/plumbing engineer/s, owner, and others as directed by the project engineer.
- C. The following products will be furnished by the owner under a Hospital Equipment contract:
 - 1. Medical gas equipment such as ceiling booms, ceiling columns, floor pedestals, etc. which are designated with a "MEDICAL EQUIPMENT #" in the MEDICAL GAS OUTLETS schedule.
 - 2. The Bulk O2 storage and reserve tanks, controls, and alarms will be furnished by the bulk gas supplier (Praxair).
- D. Owner will furnish medical gases for Phase II testing specified in this Section.
- E. Related Sections include the following:
 - 1. Division 23 Section "Meters and Gages" for thermometers, pressure gages, and fittings.
 - 2. Division 22 Section "Medical Air and Medivac Equipment" for medical and dental air equipment and accessories.
 - 3. Division 22 Section "Medical Vacuum Equipment" for medical and dental vacuum equipment and accessories.

1.3 SEISMIC REQUIREMENTS

- A. Component Importance Factor: All plumbing components shall be assigned a component importance factor. The component importance factor, I_p , shall be taken as 1.5 if any of the following conditions apply:
 - 1. The component is required to function for life-safety purposes after an earthquake.
 - 2. The component contains hazardous materials.
 - 3. The component is in or attached to an Occupancy Category IV structure and it is needed for continued operation of the facility or its failure could impair the continued operation of the facility.
- B. All other components shall be assigned a component importance factor, I_p , equal to 1.0.
- C. Seismic Performance: Plumbing equipment, hangers and supports shall withstand the effects of earthquake motions determined according to SEI/ASCE 7 and with the requirements specified in Section 220548 "Vibration and Seismic Controls for Plumbing Piping and Equipment."
 - 1. For components with a seismic importance factor of 1.0 the term "withstand" means "the system will remain in place without separation of any parts when subjected to the seismic forces specified."
 - 2. For components with a seismic importance factor of 1.5 the term "withstand" means "the system will remain in place without separation of any parts when subjected to the seismic forces specified and the system will be fully operational after the seismic event."

1.4 DEFINITIONS

- A. PTFE: Polytetrafluoroethylene.
- B. TFE: Tetrafluoroethylene.

1.5 SUBMITTALS

- A. Product Data: For the following:
 - 1. Medical gas tubes & fittings
 - 2. Medical gas valves & valve boxes.
 - 3. Medical gas specialties.
 - 4. Medical gas manifolds.
 - 5. Medical gas service connection & pressure control panels
 - 6. Medical gas service units. Include integral service connections.
 - 7. Medical gas alarm system components.
 - 8. Cylinder wall racks and storage racks.
- B. Wiring diagrams for medical gas alarm systems and tanks. Differentiate between manufacturer-installed and field-installed wiring.
- C. Coordination Drawings: For medical gas systems, including relationship to other services that serve same work areas.
- D. Brazing Certificates: As required by ASME Boiler and Pressure Vessel Code, Section 1X, or AWS B2.2

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- E. Product Certificates: Signed by manufacturer certifying that copper tubing complies with NFPA 99, Paragraph 4-3.1.2.7, "Piping Materials."
- F. Certificates of Shop Inspection and Data Report: As required by ASME Boiler and Pressure Vessel Code.
- G. Inspection and test reports specified in "Field Quality Control" Article in Part 3 of this Section.
- H. Certificates of inspections and tests from an independent testing agency specified in "Field Quality Control" Article in Part 3 of this Section.
- I. Operation & Maintenance Data: For specialties to include in the maintenance manuals specified in Division 1.
- J. Delegated-Design Submittal:
 - 1. Design calculations and detailed fabrication and assembly of pipe anchors and alignment guides, hangers and supports for multiple pipes, expansion joints and loops, and attachments of the same to the building structure.
 - 2. Locations of pipe anchors and alignment guides and expansion joints and loops.
 - 3. Locations of and details for penetrations, including sleeves and sleeve seals for exterior walls, floors, basement, and foundation walls.
 - 4. Seismic calculations and detailed analysis: Indicate fabrication and arrangement. Detail attachments of restraints to the restrained items and to the structure. Show attachment locations, methods, and spacings. Identify components, list their strengths, and indicate directions and values of forces transmitted to the structure during seismic events. Indicate association with vibration isolation devices. Project specific design documentation and calculations shall be prepared and stamped by a registered professional engineer who is responsible for the seismic restraint design and who is licensed in the state where the project is being constructed (ASCE 7, 13.2.1.1).

1.6 QUALITY ASSURANCE

- A. Testing Agency Services: This Division will provide an independent testing agency to inspect, test, and certify medical gas piping and components, except for inspections and tests specified in "Field Quality Control" Article in Part 3 of this Section.
- B. Testing Agency Qualifications: Demonstrate to Architect's satisfaction, based on Architect's evaluation of criteria conforming to ASTM E 699 that the independent testing agency has the experience and capability to satisfactorily conduct the testing indicated without delaying the Work.
- C. Listing and Labeling: Provide electrically operated specialties specified in this Section that are listed and labeled.
 - 1. Terms "Listed" and "Labeled": As defined in National Electrical Code, Article 100.
 - 2. Listing and Labeling Agency Qualifications: A "Nationally Recognized Testing Laboratory" as defined in OSHA Regulation 1910.7.
- D. Comply with NFPA 50, "Standard for Bulk Oxygen Systems at Consumer Sites."
- E. Comply with NFPA 70, "National Electrical Code."
- F. Comply with NFPA 99, "Health Care Facilities."
- G. Comply with UL 498, "Attachment Plugs and Receptacles."

H. Comply with UL 544, "Medical and Dental Equipment."

1.7 DELIVERY, STORAGE, AND HANDLING

- A. Deliver and store large medical gas specialties on factory-installed shipping skids, small specialties in factory-fabricated fiberboard containers, and piping with sealing plugs in ends or with other end protection.
1. Store pre-cleaned and sealed medical gas pipe, fittings, valves, and specialties with sealing plugs and sealing packaging intact.
 2. Label medical gas pipe, fittings, valves, and specialties that have not been pre-cleaned, or that have been pre-cleaned but have seal or packaging that is not intact, with temporary labels indicating that cleaning is required before installation.

PART 2 - PRODUCTS

2.1 MANUFACTURERS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
1. Medical Gas Piping Specialties:
 - a. Beacon
 - b. Amico by MTA
 - c. Pattons Medical
 2. Medical Gas Alarm Systems:
 - a. Beacon
 - b. Amico by MTA
 - c. Pattons Medical
 3. Medical Gas Storage Tanks (Bulk Oxygen Tanks):
 - a. Praxair

2.2 PIPE AND TUBES

- A. Pre-cleaned, Hard Copper Tube: ASTM B 819, Type K or Type L, seamless, drawn temper, factory cleaned, purged, and sealed for medical gas service. Include marking or labeling "CLEANED FOR MEDICAL GAS SERVICE," "CLEAN FOR OXYGEN SERVICE," "NITROGENIZED."
- B. Soft Copper Tube: ASTM B 88, Type K water tube, seamless, annealed temper. Tube may be factory cleaned, purged, and sealed for medical gas service according to ASTM B 819 or field cleaned, purged, and sealed as specified in "Preparation" Article in Part 3. Include marking or labeling "CLEANED FOR MEDICAL GAS SERVICE," "CLEAN FOR OXYGEN SERVICE," "NITROGENIZED."

2.3 PIPE AND TUBE FITTINGS

- A. Wrought-Copper Fittings: ASME B16.22, solder-joint, pressure type. Fittings may be factory cleaned, purged, and sealed for medical gas service according to ASTM B 819 or field cleaned, purged, and sealed as specified in "Preparation" Article in Part 3. Include marking or labeling "CLEANED FOR MEDICAL GAS SERVICE," "CLEAN FOR OXYGEN SERVICE," "NITROGENIZED."
- B. Bronze-Tube Flanges: ASME B16.24, Class 300.
- C. Flexible Connectors: Bronze or stainless-steel flexible pipe connectors as specified in Division 22 Section "Vibration Control."

2.4 JOINING MATERIALS

- A. Refer to Division 23 Section "Basic Mechanical Materials and Methods" for joining materials not in this Section.
- B. Brazing Filler Metals: AWS A5.8, BCuP (copper-phosphorus) series alloys. Flux is prohibited, except when used with bronze fittings.
- C. Threaded-Joint Tape: PTFE plastic.
- D. Gasket Material: ASME B16.21, nonmetallic, flat, asbestos free, and suitable for oxygen use.

2.5 VALVES AND VALVE BOXES

- A. Ball Valves, 3-Inch NPS and Smaller: MSS SP-110, bronze-body, full-port valve rated for 300-psig working pressure, with chrome-plated brass ball, PTFE or TFE seals, blowout-proof stem, threaded or braze-joint ends. Provide locking type for valves not located in valve box and handle designed for quarter turn between open and closed positions.
 - 1. Include union-type body with bolted swing-away center section.
 - 2. Include factory-cleaned, factory-sealed for oxygen use, and factory-installed, ASTM B 88, Type K or L, copper-tube extensions with pressure gage installed downstream from valve in pressure systems and upstream from valve in vacuum systems.
- B. Ball Valves, 4-Inch NPS and Larger: MSS SP-72, bronze- or iron-alloy body, full-port valve rated for 300-psig working pressure, with chrome-plated brass ball valve, PTFE or TFE seals, blowout-proof stem, flanged ends, and provide locking type for valves not located in a valve box, and handle designed for quarter turn between open and closed positions.
- C. Check Valves, 3-Inch NPS and Smaller: Bronze-body, straight-through pattern, spring-loaded ball check valve, designed for 300-psig minimum working pressure.
- D. Check Valves, 4-Inch NPS and Larger: MSS SP-71, Class 250, iron-body, bronze-trim, swing check valve, with flanged ends.
- E. Safety Valves: Bronze body with settings to match system requirements.
 - 1. Pressure Safety Valves: ASME construction.
 - 2. Vacuum Relief Valves: Equipment manufacturer's option.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- F. Pressure Regulators: Brass or bronze body and trim; spring-loaded, diaphragm-operated, relieving type; manual pressure-setting adjustment; rated for 250-psig minimum inlet pressure; and capable of controlling delivered air pressure within 0.5 psig for each 10-psig inlet pressure.
- G. Automatic Drain Valves: Corrosion-resistant metal body and internal parts, 200-psig minimum working-pressure rating, capable of automatic discharge of collected condensate.
- H. Zone Valve Boxes: Minimum 0.048-inch- thick steel, valve boxes for recessed mounting, with holes for medical gas piping and anchors. Include for single- or multiple-valve (with pressure gage) installation and in sizes to permit manual operation of valves.
 - 1. Interior Finish: Factory-applied white enamel.
 - 2. Cover Plate: Minimum 0.08-inch- thick aluminum or extruded-anodized aluminum with frangible or removable windows.
 - 3. Valve-Box Windows: Clear or tinted transparent plastic with labeling, including space for rooms served, according to NFPA 99.

2.6 MEDICAL GAS PIPING SPECIALTIES

- A. General: Provide the following medical gas piping specialties by same manufacturer:
- B. Emergency Oxygen Connection: Low-pressure gaseous-oxygen inlet assembly, consisting of weatherproof enclosure with hinged locking cover, suitable for recessed mounting, with factory-installed 1- or 1-1/4-inch NPS plugged inlet, pressure gage, and minimum 1-inch NPS ball valve, for connection to oxygen system. Include brass-body safety valve, set at 75 or 80 psig, which may be installed in enclosure or be separate for installation in oxygen piping system. Label enclosure cover "Emergency Low-Pressure Gaseous Oxygen Inlet." Comply with NFPA 99.
- C. Medical Gas Manifolds: Comply with NFPA 99, Chapter 4, "Cylinder Systems without Reserve Supply," with the following features:
 - 1. Central Control Panel Unit: Weatherproof cabinet, supply and delivery pressure gages, electrical alarm system connections and transformer, indicator lights or devices, manifold connection, pressure changeover switch, line-pressure regulator, shutoff valves, and safety valve.
 - 2. Manifold and Headers: Duplex, nonferrous metal header for number of cylinders indicated on plans, divided into 2 equal banks or as noted two equal banks ___ x ___. Units include design for 2000-psig minimum inlet pressure, except nitrous-oxide manifolds may be designed for 800 psig and carbon-dioxide manifolds may be designed for 1500 psig. Include cylinder bank headers with flexible braided stainless steel inlet (pigtail) connections complying with CGA V-1, individual inlet check valves, shutoff valve, pressure regulator, check valve, and pressure gage.
 - 3. Operation: Automatic, pressure-switch-activated changeover from one cylinder bank to other cylinder bank when first bank becomes exhausted, without line-pressure fluctuation or resetting of regulators, and without supply interruption by shutoff of either cylinder bank header.
 - 4. Mounting: Wall mounting, complete with mounting brackets for manifold control cabinet and headers.
 - 5. Mounting: Floor mounting, complete with support legs for manifold control cabinet.
 - 6. Label manifold control unit with permanent label identifying medical gas type and system operating pressure.
 - 7. Nitrous-Oxide Manifolds: 2000 cu. ft./h at 55-psig line pressure with electric heater or orifice design that will prevent freezing during high demand.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

8. Nitrogen Manifolds: 3000 cu. ft./h at 180-psig line pressure.
 9. Carbon-Dioxide Manifolds: 500 cu. ft./h at 55-psig line pressure.
 10. High-Pressure Air Manifolds: 3000 cu. ft./h at 180-psig line pressure.
- D. Service Outlets (wall type): Gas specific for services listed with roughing-in and finishing assemblies. Include the following:
1. Roughing-in Assembly: Include the following:
 - a. Steel outlet box or mounting plate.
 - b. Brass-body outlet block with secondary check valve that will prevent gas flow when primary valve is removed.
 - c. Double seals that will prevent gas leakage.
 - d. ASTM B 88, Type K, 3/8-inch NPS copper inlet or outlet tube brazed to valve with gas-service marking and tube-end dust cap.
 2. Finishing Assembly: Include the following:
 - a. Brass housing with primary check valve.
 - b. Double seals that will prevent gas leakage.
 - c. Cover plate with gas-service label.
 3. Quick-Connect Coupling: Indexing to prevent interchange between services, constructed to permit one-handed connection and removal of equipment, and with positive-locking that retains equipment stem in valve during use. Outlets to be a type that accepts Chemetron adaptors.
 4. DISS-Type Coupling: CGA V-5, DISS-threaded indexing to prevent interchange between services; constructed to permit one-handed connection and removal of equipment.
 - a. Oxygen Outlets: CGA V-5, DISS No. 1240.
 - b. Medical Air Outlets: CGA V-5, DISS No. 1160.
 - c. Medical Vacuum Inlets: CGA V-5, DISS No. 1220.
 - d. Nitrous-Oxide Outlets: CGA V-5, DISS No. 1040.
 - e. Nitrogen Outlets: CGA V-5, DISS No. 1120.
 - f. Evacuation Inlets: CGA V-5, DISS No. 2220.
 - g. Carbon-Dioxide Outlets: CGA V-5, DISS No. 1080.
 - h. High-Pressure Air Outlets: CGA V-5, DISS No. 1160.
 5. Wall Outlet Cover Plates: One-piece metal, with chrome-plated finish and permanent, color-coded, medical gas identifying label matching corresponding outlets.
 6. Vacuum Bottle-Slide Brackets: Bottle-slide and mounting assembly matching pattern of vacuum outlet. Include one slide bracket for each wall-mounted vacuum inlet, except where no slide bracket requirement is indicated or for ceiling outlets.
- E. Outlet Cover Plates: One-piece stainless steel, with NAAMM AMP 503, No. 4 finish and permanent identifying label.
- F. Outlet Cover Plates: One-piece metal, with chrome-plated finish and permanent identifying label.
- G. Outlet Cover Plates: One-piece anodized aluminum, with permanent identifying label.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- H. Service Hose Assemblies (ceiling type): Color coded, conductive, neoprene, 1/4- or 5/16-inch ID, lengths as required for finished ceiling height, and with indexed or DISS-type end-connection fittings suitable for medical gas service indicated.
 - 1. All gases except Nitrogen, Hose Assemblies: length as required for height of ceiling with 18" of pull down loop, with quick-connect fittings, valve on one end and DISS connection at the ceiling.
 - 2. Nitrogen Hose Assemblies: length as required for height of ceiling, with nitrogen CGA V-5, DISS No. 1120 fittings, nut on ceiling end and female Schrader outlet on other end.
 - 3. All gases: provide single or double key chain retractor as required for retraction of pull down loop.
- I. Pressure Control Panels: Steel box and steel support brackets for recessed roughing-in. Include stainless-steel or anodized-aluminum cover plate with printed operating instructions. Include control panels with manifold assembly consisting of inlet supply valve, inlet supply pressure gage, line-pressure control regulator, outlet supply pressure gage, DISS service outlet, and piping outlet for remote service outlet.
 - 1. Minimum Working Pressure: 180 psig.
 - 2. Line-Pressure Control Regulator: Self-relieving, diaphragm type, and with precision manual adjustment.
 - 3. Pressure Gages: 0- to 300-psig range.
 - 4. Provide temporary dust shield and U-tube for testing for use before final assembly.
 - 5. Nitrogen Control Panels: Label cover plate "Nitrogen Pressure Control." Include CGA V-5, DISS No. 1120 nitrogen service outlet or Schrader female outlet as required by owners.
 - 6. Air Control Panels: Label cover plate "Air Pressure Control." Include CGA V-5, DISS No. 1160 air service outlet or Schrader female outlet as required by owners.

2.7 MEDICAL GAS ALARM SYSTEMS

- A. Description: Compatible alarm panels, remote sensing devices, and other related components where indicated and where required by NFPA 99. Power wiring is specified in Division 16 Sections. Panel wiring is by Division 15, Automatic Temperature Controls.
- B. Components: Designed for continuous service and to operate on power supplied from 120-V, ac power source to alarm panels and with connections for 24- or 12-V, ac low-voltage wiring to remote sensing devices. Include step-down transformers if required.
- C. Dew-Point Monitors: Continuous line monitoring, having panel with gage or digital display, pipeline sensing element, electrical connections for alarm system, factory- or field-installed valved bypass, and visual and cancelable audio signal for dryer site and master alarm panels. Operate alarm when pressure dew point rises above 39 deg F at 55 psig.
 - 1. Operation: Chilled-mirror method.
 - 2. Operation: Hygrometer moisture analyzer with sensor probe.
- D. Pressure and Vacuum Switches or Pressure Transducer Sensors: Continuous line monitoring with electrical connections for alarm system.
 - 1. Low-Pressure Switches: 0- to 100-psig operating range.
 - 2. High-Pressure Switches: Up to 250-psig operating range.
 - 3. Vacuum Switches: 0- to 30-in. Hg range.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- E. Carbon-Monoxide Monitors: Panel with gage or digital display, pipeline sensing element, electrical connections for alarm system, and factory- or field-installed valved bypass. Operate alarm when carbon-monoxide level rises above 10 ppm.
- F. Alarm Panels: Factory wired with audible and color-coded visible signals to indicate specified functions.
 - 1. Mounting: Recessed installation.
 - 2. Enclosures: Fabricated from minimum 0.047-inch- thick steel or minimum 0.05-inch-thick aluminum, and with knockouts for electrical and piping connections.
- G. Special Features: In addition to manufacturer's standard features, include the following:
 - 1. Master Alarm Panels: Provide (2) master alarm panels at two separate locations as indicated, each with dedicated wiring from source sensors as per NFPA 99. Each with separate trouble alarm signals, pressure (vacuum) gages, and indicators for oxygen, medical air, medical vacuum, nitrous oxide, nitrogen, evacuation, carbon dioxide, high-pressure air, laboratory air, and laboratory vacuum. Include signal alarms at master alarm panels to meet applicable codes and when the following conditions exist:
 - a. Oxygen: Main liquid level is low, pressure downstream from main shutoff valve drops below 40 psig or rises above 60 psig, reserve is in use, reserve level is low, and reserve pressure is low.
 - b. Medical Air: Pressure drops below 40 psig or rises above 60 psig, dew point rises above 39 deg F at 55 psig, carbon-monoxide level rises above 10 ppm, and fault from air compressor local alarm.
 - c. Medical Vacuum: Vacuum drops below 12 in. Hg and back-up vacuum pump is in operation (fault from local alarm).
 - d. Nitrous Oxide: Pressure drops below 40 psig or rises above 60 psig, and changeover is made to alternate bank.
 - e. Nitrogen: Pressure drops below 160 psig or rises above 200 psig, and changeover is made to alternate bank.
 - f. Evacuation: Vacuum drops below 12 in. Hg.
 - g. Carbon Dioxide: Pressure drops below 40 psig or rises above 60 psig, and changeover is made to alternate bank.
 - 2. Area Alarm Panels: Separate trouble alarm signals; pressure and vacuum gages; and indicators for gases served - oxygen, medical air, and medical vacuum.
 - 3. Anesthetizing-Area Alarm Panels: Separate trouble alarm signals; pressure and vacuum gages; and indicators for oxygen, medical air, medical vacuum, nitrous oxide, nitrogen, evacuation, carbon dioxide, and high-pressure air.
 - 4. Signal alarms at area alarm panels and at anesthetizing-area alarm panels when the following conditions exist:
 - a. Oxygen: Pressure drops below 40 psig or rises above 60 psig.
 - b. Medical Air: Pressure drops below 40 psig or rises above 60 psig.
 - c. Medical Vacuum: Vacuum drops below 12 in. Hg.
 - d. Nitrous Oxide: Pressure drops below 40 psig or rises above 60 psig.
 - e. Nitrogen: Pressure drops below 160 psig or rises above 200 psig.
 - f. Evacuation: Vacuum drops below 12 in. Hg.
 - g. Carbon Dioxide: Pressure drops below 40 psig or rises above 60 psig.
 - h. High-Pressure Air: Pressure drops below 160 psig or rises above 200 psig.

2.8 CYLINDER WALL AND STORAGE RACKS

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- A. Medical Gas Cylinder Wall Racks: provide manufactured wall racks.

2.9 IDENTIFICATION

- A. Refer to Division 23 Section "Mechanical Identification" for piping, valves, gages, alarms, accessories, and labels for bulk storage tanks.

PART 3 - EXECUTION

3.1 PREPARATION

- A. General: Where factory-precleaned and -capped piping is not available, or when precleaned piping must be recleaned because of exposure, perform the following procedures:
 - 1. Clean medical gas pipe and pipe fittings, valves, gages, and other components of oil, grease, and other readily oxidizable materials as required for oxygen service, according to CGA G-4.1, "Cleaning Equipment for Oxygen Service."
 - 2. Wash medical gas piping and components in hot, alkaline cleaner-water solution of sodium carbonate or trisodium phosphate in proportion of 1 lb of chemical to 3 gal. of water.
 - a. Scrub to ensure complete cleaning.
 - b. Rinse with clean, hot water after washing to remove cleaning solution.

3.2 CONCRETE BASES

- A. Construct concrete bases of dimensions indicated, but not less than 6 inches larger in both directions than supported unit and not less than 4 inches high.
- B. Refer to Division 3 Section "Cast-in-Place Concrete" for reinforcement, framing, and concrete materials for 4000-psi, 28-day compressive strength.

3.3 PIPING APPLICATIONS

- A. General: Refer to Part 2 of this Section for the following materials:
 - 1. Interior and Medical Gas Piping: Use precleaned, hard copper tube with wrought-copper fittings and brazed joints.
 - 2. Exterior, Buried Medical Gas Piping: Use soft copper tube with wrought-copper fittings and brazed joints.
 - 3. Underground, Protective Conduit: Use Schedule 80 PVC plastic pipe, Schedule 80 PVC plastic threaded pipe fittings, and threaded joints; or Schedule 80 PVC plastic socket-type pipe fittings, and solvent cement joints.

3.4 SERVICE ENTRANCES

- A. Extend piping and connect to bulk storage tanks and exterior manifolds, of sizes and in locations indicated for service entrances to building.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- B. Install sleeve and mechanical sleeve seal at penetrations through foundation wall for watertight installation.

3.5 PIPING INSTALLATION, GENERAL

- A. Refer to Division 23 Section "Basic Mechanical Materials and Methods" for basic piping installation.
- B. Install supports and anchors according to Division 23 Section "Hangers and Supports."
 - 1. Spacing between Hangers: As described in NFPA 99 and NFPA 99C.
- C. Comply with SEI/ASCE 7 and with requirements for seismic-restraint devices in Section 220548 "Vibration and Seismic Controls for Plumbing Piping and Equipment."
- D. Install emergency oxygen connection assembly with pressure relief valve and full-size discharge piping to outside, with check valve downstream from pressure relief valve, and with ball valve and check valve in supply main from bulk oxygen storage tank.
- E. Valve Applications: Use ball valves specified in this Section for main shutoff and zone valve duties.
- F. Install zone valves in valve box anchored to structure. Install valves at angle that prevents closure of cover when valve is in closed position. Single boxes may be used for multiple valves that serve same area or function.
- G. Install thermometers and pressure gages according to Division 15 Section "Meters and Gages."
- H. Install exterior, buried medical gas piping in protective conduit fabricated with PVC pipe and fittings. Do not extend conduit through foundation wall. Provide sand bedding 6" all around and metallic warning tape 18" above pipe. Bury pipe at 36" depth.
- I. Purging: Purge medical gas piping using oil-free, dry nitrogen during brazing and after installing piping but before connecting to service-outlet valves, alarms, and gages.

3.6 JOINT CONSTRUCTION

- A. Refer to Division 23 Section "Basic Mechanical Materials and Methods" for basic piping joint construction.

3.7 SPECIALTIES INSTALLATION

- A. Install specialties according to NFPA 99 and manufacturer's written instructions.
- B. Install manifolds firmly anchored to substrate and with seismic controls as indicated.
- C. Connect to ceiling-mounting service units firmly anchored to substrate according to manufacturer's written instructions.

3.8 MEDICAL GAS ALARM SYSTEM INSTALLATION

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- A. General: Install alarm system components according to NFPA 99 and manufacturer's written instructions.
- B. Install alarm panels in locations indicated.

3.9 CONNECTIONS

- A. Install piping next to equipment to allow service and maintenance.
- B. Connect medical gas piping to bulk storage tanks with unions. Install with ball valves and strainers where required.
- C. Connect medical gas piping to equipment, gas manifolds, and accessories with unions. Install with ball valves and strainers.
 - 1. Install flexible pipe connectors on air piping connections to air compressors, vacuum piping connections to vacuum units, and where indicated.
 - 2. Install thermometers on air-compressor discharge piping, air receiver tanks, vacuum receiver tanks, and where indicated.
 - 3. Install pressure gages on air-compressor discharge piping, air receiver tanks, vacuum receiver tanks, and where indicated.
 - 4. Install pressure regulators downstream from air compressors, dryers, purification units, and filter assemblies.
- D. Install medical gas piping and electrical connections to medical gas alarm system components.
- E. Arrange for electric-power connections to specialties and devices that require power. Electric power, wiring, and disconnect switches are specified in Division 26 Sections.

3.10 LABELING AND IDENTIFICATION

- A. Install labeling on valves, valve-box covers, and alarm panels according to requirements of NFPA 99.
- B. Refer to Division 23 Section "Mechanical Identification" for labeling and identification materials.
- C. Captions and Color Coding: Use the following or similar medical gas captions and color coding for specialties, when specified and where required by NFPA 99:
 - 1. Oxygen: White letters on green background.
 - 2. Medical Air: Black or white letters on yellow background.
 - 3. Medical Vacuum: Black letters on white background.
 - 4. Nitrous Oxide: White letters on blue background.
 - 5. Nitrogen: White letters on black background.
 - 6. Evacuation: Black letters on white background or white letters on purple background.
 - 7. Carbon Dioxide: White letters on gray background.
- D. Label medical gas systems operating at other than standard pressure with system operating pressure.
- E. Install continuous metallic underground warning tape during backfilling of trench for underground medical gas piping.

F. Refer to Division 2 Section "Earthwork" for warning tapes.

3.11 FIELD QUALITY CONTROL

- A. Pressure Test: Subject each piping section of each system, except high-pressure air and nitrogen, to test pressure of from 150 to 200 psig and high-pressure air and nitrogen systems to test pressure of 250 psig with oil-free, dry nitrogen before attaching system components, after installing station outlets with test caps (when supplied) in place, and before concealing piping system. Maintain test until joints are examined for leaks by means of soapy water.
- B. Standing-Pressure Test: Install assembled system components after testing individual systems as specified above. Subject systems to 24-hour standing-pressure test at 20 percent above normal line pressure, but not less than 66 psig. Subject vacuum and evacuation systems to 12- to 18-in. Hg minimum vacuum instead of pressure test.
- C. Repair leaks, replace damaged components with new materials, and retest system until satisfactory results are obtained.
- D. Inspect, test, and certify complete medical gas systems according to requirements of NFPA 99, "Health Care Facilities." Inspect, test, and certify each medical gas system, including each piping system, outlets and inlets, accessories, alarm panels and devices, safety devices, medical gas sources, and equipment.
- E. Provide oil-free, dry nitrogen; materials; equipment; and labor required for testing.
- F. Provide medical gases required for testing systems.
- G. Prepare written reports of tests results, including corrective action.
- H. Certify that medical gas systems comply with requirements specified, that tests were properly performed, and that test results were satisfactory.
- I. Inspect outlets and inlets, gages, alarms, and zone valves for proper labeling for gas service and function.
- J. Inspect manifold supply systems for installation and operation as required by NFPA 99, Chapter 4, "Gas and Vacuum Systems."
- K. Inspect bulk oxygen supply systems for installation and operation as required by NFPA 50.
- L. Inspect bulk nitrous-oxide supply systems for installation and operation as required by CGA G-8.1.
- M. Phase I Tests: Perform the following tests using oil-free, dry nitrogen after installing gas systems but before connecting new systems to existing gas sources:
 - 1. Outlet and Inlet Cross-Connection Test: Pressurize one medical gas system to 50 psig, with other systems at atmospheric pressure, and access each outlet with appropriate adapter and test gage. Repeat procedure for each system.
 - 2. Outlet and Inlet Cross-Connection Test: Pressurize each system in 10-psig increments and access each outlet with appropriate adapter and test gage.
 - 3. Alarm System Test: Test for operation of functions specified in "Medical Gas Alarm Systems" Article within limits required.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

4. Pressure Test: Test systems at operational pressure with system components installed. No leaks are allowed. Conduct tests by zone.
 5. Particulate Sampling: Test positive-pressure terminal outlets, using 0.45-micron filter, for evidence of solid particulate contamination. Allowable limit is 2 mg/cu. m.
 6. Moisture: Test positive-pressure terminal outlets for dew point to verify absence of moisture in piping. Dew point of gas dispensed from terminal outlets shall not exceed dew point of source test gas by more than 4 deg F.
 7. System Purity: Test terminal outlets and gas source for contaminant levels as defined below. Excessive contaminant levels will require additional purging to outlets within specific zone until levels are within the following limits:
 - a. Total Hydrocarbons as Methane: One ppm.
 - b. Halogenated Hydrocarbons: 2 ppm.
 - c. Carbon Monoxide: 2 ppm.
 8. Air-Compressor Purity: Collect medical air-compressor air samples taken from downstream side of filters and air dryers. Test samples for contaminants and moisture within the following limits:
 - a. Total Hydrocarbons as Methane: 25 ppm.
 - b. Halogenated Hydrocarbons: 5 ppm.
 - c. Carbon Monoxide: 10 ppm.
 - d. Moisture, Dew Point: Plus 40 deg F at dryer discharge.
- N. Phase II Tests: After Phase I testing has been completed, test completed medical gas systems using applicable medical gas for each system. Completed systems have outlets and inlets, alarms, and gages installed; and gas supply systems are installed and ready for operation.
1. Final Purging: Introduce applicable medical gas for each system into respective piping systems. Purge installed outlet valves to remove nitrogen test gas present from Phase I testing. Test vacuum inlets for ability to flow.
 2. Outflow Analysis: Analyze medical gas at positive-pressure outlets to confirm delivery of proper medical gas at proper concentration level. Minimum allowable concentration levels are defined by U.S. Pharmacopeia's USP-NF and the following CGA Commodity Specifications:
 - a. CGA G-4.3, "Commodity Specification for Oxygen."
 - b. CGA G-6.2, "Commodity Specification for Carbon Dioxide."
 - c. CGA G-7.1, "Commodity Specification for Air."
 - d. CGA G-8.2, "Commodity Specification for Nitrous Oxide."
 - e. CGA G-10.1, "Commodity Specification for Nitrogen."
 3. System Delivery Pressures: Test pressure piping systems to confirm supply sources are set to deliver gas at the following nominal pressure levels:
 - a. All Systems, except Nitrogen and High-Pressure Air: 50 to 55 psig at maximum flow.
 - b. Nitrogen and High-Pressure Air: 180 psig minimum at maximum flow.
 4. System Suction Levels: Test vacuum and evacuation piping systems to confirm that vacuum producers are set to maintain suction of not less than 12 in. Hg at most distant inlets.
- O. Testing Agency Certification: Certify that specified inspection, tests, and procedures have been performed and report results. Include the following:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Inspections performed.
2. Procedures, materials, and gases used.
3. Test methods used.
4. Results of tests.

3.12 COMMISSIONING

- A. Startup Services: Engage a factory-authorized service representative to inspect alarm system installation and to provide startup service.
 1. Test and adjust controls and safeties. Replace damaged and malfunctioning controls and equipment discovered by service representative.
- B. Perform the following final checks before startup:
 1. Verify that specified tests of piping are complete.
 2. Check safety valves for correct settings. Ensure settings are greater than air-compressor discharge pressure, but not greater than rating of system components.

3.13 DEMONSTRATION

- A. Startup Services: Engage a factory-authorized service representative to demonstrate procedures for alarm system startup and shutdown, preventive maintenance and servicing, and troubleshooting. Review operating and maintenance information.
- B. Provide written notice 7 days in advance of demonstration.

END OF SECTION 226314

SECTION 230100

MECHANICAL REQUIREMENTS

PART 1 - GENERAL

1.1 GENERAL CONDITIONS

- A. The General Conditions of the Contract, with the amendments, supplements, forms and requirements in Division 1, and herewith made a part of this Division.
- B. All sections of Division 21, 22, & 23 shall comply with the Mechanical General Requirements. The standards established in this section as to quality of materials and equipment, the type and quality of workmanship, mode of operations, safety rules, code requirements, etc., shall apply to all sections of this Division as though they were repeated in each Division.
- C. Mechanical equipment that is pre-purchased if any will be assigned to the Mechanical Contractor. By assignment to the Mechanical Contractor, the Mechanical Contractor shall accept and installed the equipment and provide all warranties and guarantees as if the Mechanical Contractor had purchased the equipment.
- D. Construction Indoor-Air Quality Management
 - 1. Comply with SMACNA's "SMACNA IAQ Guideline for Occupied Buildings under Construction."
 - a. If Owner authorizes use of permanent heating, cooling, and ventilating systems during construction period as specified in Division 01 Section "Temporary Facilities and Controls," install filter media having a MERV 8 according to ASHRAE 52.2 at each return-air inlet for the air-handling system used during construction.
 - b. Replace all air filters immediately prior to occupancy.

1.2 SCOPE OF WORK

- A. The project described herein is the Intermountain Layton Hospital Sleep Lab Remodel. This work shall include all labor, materials, equipment, fixtures, and devices for the entire mechanical work and a complete operating and tested installation as required for this project.

1.3 CODES & ORDINANCES

- A. All work shall be executed in accordance with all underwriters, public utilities, local and state rules and regulations applicable to the trade affected. Should any change in the plans and Specifications be required to comply with these regulations, the Contractor shall notify the Architect before the time of submitting his bid. After entering into contract, the Contractor will be held to complete all work necessary to meet these requirements without extra expense to the Owner. Where work required by drawings or specifications is above the standard required, it shall be done as shown or specified.
- B. Applicable codes:
 - 1. Utah Boiler and Pressure Vessel Rules and Regulations-2013 Edition

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

2. International Building code- 2018 Edition
3. International Mechanical Code- 2018 Edition
4. International Plumbing Code- 2018 Edition
5. International Fire Code- 2018 Edition

6. International Energy Code- 2018 Edition
7. International Fuel Gas Code- 2018 Edition
8. National Electrical Code- 2015 Edition

1.4 INDUSTRY STANDARDS

A. All work shall comply with the following standards.

1. Associated Air Balance council (AABC)
2. Air Conditioning and Refrigeration Institute (ARI)
3. Air Diffusion council (ADC)
4. Air Movement and Control Association (AMCA)
5. American Gas Association (AGA)
6. American National Standards Institute (ANSI)
7. American Society of Heating, Refrigeration, and Air Conditioning Engineers (ASHRAE)
8. American Society of Mechanical Engineers (ASME)
9. American Society of Testing Materials (ASTM)
10. American Water Works Association (AWWA)
11. Cooling Tower Institute (CTI)
12. ETL Testing Laboratories (ETL)
13. Institute of Electrical and Electronic Engineers (IEEE)
14. Hydronics Institute (HI)
15. Manufacturers Standardization Society of the Valve and Fitting Industry (MSS)
16. National Fire Protection Association (NFPA)
17. National Electrical Code (NEC)
18. National Electrical Manufacturers Association (NEMA)
19. National Electrical Safety code (NESC)
20. Utah safety Standard (OSHA), Utah State Industrial Council.
21. Sheet Metal and Air Conditioning Contractor's National Association (SMACNA)
22. Underwriters Laboratories (UL)
23. Tubular Exchanger Manufacturers Association, Inc. (TEMA)
24. Heat Exchanger Institute (HEI)
25. Hydraulic Institute (HI)
26. Thermal Insulation Manufacturer=s Association (TIMA)
27. Scientific Apparatus Makers Association (SAMA)

B. Compliance Verification:

1. All items required by code or specified to conform to the ASME code shall be stamped with the ASME seal.
2. Form U-1, the manufacturer=s data report for pressure vessels, is to be included in the Operation and Maintenance Manuals. National Board Register (NBR) numbers shall be provided where required by code.
3. Manufactured equipment which is represented by a UL classification and/or listing, shall bear the UL or equivalent ETL label.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1.5 UTILITIES & FEES

- A. All fees for permits required by this work will be paid by this division. The contractor shall obtain the necessary permits to perform this work. Unless noted otherwise, all systems furnished and or installed by this Contractor, shall be complete with all utilities, components, commodities and accessories required for a fully functioning system. This Contractor shall furnish smoke generators when required for testing, furnish glycol for glycol piping systems, full load of salt to fill brine tank for water softening system, furnish cleaners and water treatment additives.

1.6 SUBMITTALS AND SHOP DRAWINGS

- A. General: As soon as possible after the contract is awarded, but in no case more than 45 calendar days thereafter, the Contractor shall submit to the Architect manufacturer's data on products and materials to be used in the installation of mechanical systems for this project. The review of the submitted data will require a minimum of 14 days. The first day starts after the day they are received in the engineer's office to which the project is being constructed from. If the Contractors schedule requires return of submitted literature in less than the allotted time, the Contractor shall accelerate his submittal delivery date. The Contractor shall resubmit all items requiring re-review within 14 days of returned submittals. Refer to each specification section for items requiring submittal review. If the re-submittal is returned a 2nd time for correction the Contractor will provide the specific equipment that is specified on the drawings and/or the specifications. Written approval of the Owner's Representative shall be obtained before installing any such equipment or materials for the project.
- B. Review by the Owner's Representative is for general conformance of the submitted equipment to the project specification. In no way does such review relieve this Contractor of his obligation to furnish equipment and materials that comply in detail to the specification nor does it relieve the Contractor of his obligation to determine actual field dimensions and conditions that may affect his work. Regardless of any items overlooked by the submittal review, the requirements of the contract drawings and specifications must be followed and are not waived or superseded in any way by the review.
- C. By description, catalog number, and manufacturer's names, standards of quality have been established by the Architect and the Engineer for certain manufactured equipment items and specialties that are to be furnished by this Division. Alternate products and equipment may be proposed for use only if specifically named in the specifications or if given written prior approval in published addenda. Design equipment is the equipment listed on the drawings or if not listed on the drawings is the equipment first named in the specifications.
- D. If the Engineer is required to do additional design work to incorporate changes caused by submitting equipment or products, different than the design equipment specified, as defined above, the contractor shall reimburse the engineer for additional time and expenses at the engineer's current, recognized, hourly rates.
- E. Submittal Format: At the contractor's discretion, project submittals may be in either of the formats described in the following paragraphs, but mixing the two formats is not acceptable.
 - 1. Hardcopy Submittal Format: Six (6) copies of the descriptive literature covering products and materials to be used in the installation of mechanical systems for this project will be provided for review. The submittals shall be prepared in an orderly manner, contained in a 3-ring loose-leaf binder with index and identification tab for each item or group of items and for each specification section. All items shall be submitted at one time except automatic temperature control drawings and seismic restraint drawings which may be submitted

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

separately within 120 days of the contract award date. Partial submittals will not be reviewed until the complete submittal is received.

- a. Submitted literature shall bear the Contractor's stamp, indicating that he has checked all equipment being submitted; that each item will fit into the available space with the accesses shown on the drawings; and, further, that each item conforms to the capacity and quality standards given in the contract documents.
 - b. Submitted literature shall clearly indicate performance, quality, and utility requirements; shall show dimension and size of connection points; and shall include derating factors that were applied for each item of equipment to provide capacity at job site elevation. Temperature control submittals shall include piping and wiring diagrams, sequence of operation and equipment. Equipment must fit into the available space with allowance for operation, maintenance, etc. Factory piped and wired equipment shall include shop drawings for all internal wiring and piping furnished with the unit.
 - c. Submitted literature shall clearly show all required field install wiring, piping, and accessory installations required by the Contractor to provide a complete operating system.
2. Electronic Submittal Format: Identify and incorporate information in each electronic submittal file as follows:
- a. All items shall be submitted at one time except automatic temperature control drawings and seismic restraint drawings which may be submitted separately within 120 days of the contract award date. Partial submittals will not be reviewed until the complete submittal is received.
 - b. Submitted electronic file shall bear the Contractor's stamp, indicating that he has checked all equipment being submitted; that each item will fit into the available space with the accesses shown on the drawings; and, further, that each item conforms to the capacity and quality standards given in the contract documents.
 - c. Submitted electronic file shall clearly indicate performance, quality, and utility requirements; shall show dimension and size of connection points; and shall include derating factors that were applied for each item of equipment to provide capacity at job site elevation. Temperature control submittals shall include piping and wiring diagrams, sequence of operation and equipment. Equipment must fit into the available space with allowance for operation, maintenance, etc. Factory piped and wired equipment shall include shop drawings for all internal wiring and piping furnished with the unit.
 - d. Submitted electronic file shall clearly show all required field install wiring, piping, and accessory installations required by the Contractor to provide a complete operating system.
 - e. Assemble complete submittal package into a single indexed file incorporating submittal requirements of a single Specification Section and transmittal form with links enabling navigation to each item.
 - f. Name file with submittal number or other unique identifier, including revision identifier.
 - g. Electronic file shall be completely electronically searchable or it will be rejected.
 - h. Provide means for insertion to permanently record Contractor's review and approval markings and action taken by:
 - 1) Architect.
 - i. Transmittal Form for Electronic Submittals:
 - 1) Use one of the following options acceptable to the Owner;
 - a) Software-generated form from electronic project management software.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- b) Electronic form.
- 2) The Electronic Submittal shall contain the following information:
 - a) Project name.
 - b) Date.
 - c) Name and address of Architect.
 - d) Name of Construction Manager.
 - e) Name of Contractor.
 - f) Name of firm or entity that prepared submittal.
 - g) Names of subcontractor, manufacturer, and supplier.
 - h) Category and type of submittal.
 - i) Submittal purpose and description.
 - j) Specification Section number and title.
 - k) Specification paragraph number or drawing designation and generic name for each of multiple items.
 - l) Drawing number and detail references, as appropriate.
 - m) Location(s) where product is to be installed, as appropriate.
 - n) Related physical samples submitted directly.
 - o) Indication of full or partial submittal.
 - p) Transmittal number[, numbered consecutively].
 - q) Submittal and transmittal distribution record.
 - r) Other necessary identification.
 - s) Remarks.
- j. Metadata: Include the following information as keywords in the electronic submittal file metadata:
 - 1) Project name.
 - 2) Number and title of appropriate Specification Section.
 - 3) Manufacturer name.
 - 4) Product name.

1.7 DRAWINGS AND MEASUREMENTS

- A. Construction Drawings: The contract document drawings show the general design, arrangements, and extent of the system. In certain cases, the drawings may include details that show more nearly exact locations and arrangements; however, the locations, as shown diagrammatically, are to be regarded as general.
- B. It shall be the work of this Section to make such slight alterations as may be necessary to make adjustable parts fit to fixed parts, leaving all complete and in proper shape when done. All dimensions given on the drawings shall be verified as related to this work and with the Architect's office before work is started.
- C. This Section shall carefully study building sections, space, clearances, etc., and then provide offsets in piping or ductwork as required to accommodate the building structure without additional cost to the Owner. In any case and at any time during the construction process, a change in location required by obstacles or the installation of other trades not shown on the mechanical plans shall be made without charge.
- D. The drawings shall not be scaled for roughing in measurements nor shall they be used as shop drawings. Where drawings are required for these purposes or where drawings must be made from field measurements, the Contractor shall take the necessary measurements and prepare the drawings. Shop drawings of the various subcontractors shall be coordinated to eliminate all

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

interferences and to provide sufficient space for the installation of all equipment, piping, ductwork, etc.

- E. The drawings and specifications have been prepared to supplement each other and they shall be interpreted as an integral unit with items shown on one and not the other being furnished and installed as though shown and called out on both.
- F. Coordination Drawings: The contractor shall provide coordination drawings for mechanical rooms, fan rooms, equipment rooms, and congested areas to eliminate conflicts with equipment, piping, or work of other trades. The drawings shall be a minimum scale of 1/4 inch= 1 foot and of such detail as may be required by the Engineer to fully illustrate the work. These drawings shall include all piping, conduit, valves, equipment, and ductwork.
- G. Sheet-metal shop drawings will be required for all ductwork in the entire building. These drawings will show all ductwork in the entire building and shall be coordinated with architectural, structural and electrical portions of the project. The contractor shall specifically obtain copies of the structural shop drawings and shall coordinate the ductwork shop drawings with approved structural members. These drawings shall be submitted to the engineer for review prior to any fabrication. The contractor is responsible for all modifications necessary to accommodate duct installation within the structural, architectural and electrical restrictions. These drawings, once reviewed by the engineer, will be made available to all mechanical, electrical, and fire sprinkler subcontractors to coordinate installation of their work.

1.8 CONTRACTOR'S USE OF BUILDING EQUIPMENT

- A. The Contractor may use equipment such as electric motors, fans, heat exchangers, filters, etc., with the written permission of the Owner. As each piece of equipment is used (such as electric motors and fans), maintenance procedures approved by the manufacturer are to be followed. A careful record is to be kept of the length of the time the equipment is used, maintenance procedures followed, and any difficulty encountered. The record is to be submitted to the Owner upon acceptance. All fan belts and filter media (such as bearings) shall be carefully inspected just prior to acceptance. Any excessive wear noted shall require replacement. New filter media shall be installed in air handlers at the time systems are turned over to the owner.

1.9 EXISTING CONDITIONS

- A. The Contractor shall carefully examine all existing conditions that might affect the mechanical system and shall compare these conditions with all drawings and specifications for work included under this contract. He shall, at such time, ascertain and check all conditions that may affect his work. No allowance shall subsequently be made in his behalf for an extra expense incurred as a result of his failure or neglect to make such examination. This Contractor shall include in his bid proposal all necessary allowances to repair or replace any item that will remain or will be removed, and any item that will be damaged or destroyed by new construction.
- B. The Contractor shall remove all abandoned piping, etc., required by new construction and cap or plug openings. No capping, etc., shall be exposed in occupied areas. All openings of items removed shall be sealed to match adjacent surfaces.
- C. The Contractor shall verify the exact location of all existing services, utilities, piping, etc., and make connections to existing systems as required or as shown on the drawings. The exact location of each utility line, together with size and elevation, shall be established before any on-site lines are installed. Should elevation or size of existing main utility lines make connections to them impossible as shown on drawings, then notification of such shall immediately be given to the Owners Representative for a decision.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1.10 EQUIPMENT CAPACITIES

- A. Capacities shown for equipment in the specifications and on the drawings are the minimum acceptable. No equipment shall be considered as an alternate that has capacities or performance less than that of design equipment.
- B. All equipment shall give the specified capacity and performance at the job-site elevation. Manufacturers' standard ratings shall be adjusted accordingly. All capacities and performances listed on drawings or in specifications are for job-site conditions.

1.11 SEISMIC REQUIREMENTS FOR EQUIPMENT

- A. All equipment shall be furnished structurally adequate to withstand seismic forces as outlined in the International Building Code. Refer to section Mechanical Vibration Controls and Seismic Restraints. Equipment bases shall be designed for direct attachment of seismic snubbers and/or seismic anchors.

1.12 COOPERATION WITH OTHER TRADES

- A. The Contractor shall refer to other drawings and parts of this specification that cover work of other trades that is carried on in conjunction with the mechanical work such that all work can proceed without interference resulting from lack of coordination.
- B. The Contractor shall properly size and locate all openings, chases, sleeves, equipment bases, and accesses. He shall provide accurate wiring diagrams to the Electrical Contractor for all equipment furnished under this Division.
- C. The ceiling cavity must be carefully reviewed and coordinated with all trades. In the event of conflict, the installation of the mechanical equipment and piping shall be in the following order: plumbing, waste, and soil lines; supply, return, and exhaust ductwork; water piping; medical gases; fire protection piping; and pneumatic control piping.
- D. The mechanical Contractor shall insure that the installation of all piping, ducts and equipment is in compliance with Articles 110-16 and 384-4 of the National Electrical Code relative to proper clearances in front of and over all electrical panels and equipment. No piping or ductwork will be allowed to run over electrical panel.

1.13 RESPONSIBILITY OF CONTRACTOR

- A. The Contractor is responsible for the installation of a satisfactory piece of work in accordance with the true intent of the drawings and specifications. He shall provide, as a part of his work and without expense, all incidental items required even though these items are not particularly specified or indicated. The installation shall be made so that its several component parts will function together as a workable system and shall be left with all equipment properly adjusted and in working order. The Contractor shall familiarize the Owner's Representative with maintenance and lubrication instructions as prepared by the Contractor and shall explain and fully instruct him relative to operating, servicing, and maintenance of them.
- B. If a conflict arises between the drawings and the specifications the most stringent procedure/action shall be followed. A clarification to the engineer will help to determine the course of action to be taken. If a conflict arises between specification sections the engineer will determine which course of action is to be followed.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1.14 PIPE AND DUCT OPENINGS AND EQUIPMENT RECESSES

- A. Pipe and duct chases, openings, and equipment recesses shall be provided by others only if shown on architectural or structural drawings. All openings for the mechanical work, except where plans and specifications indicate otherwise, shall be provided as work of this Division. Include openings information with coordination drawings.
- B. Whether chases, recesses, and openings are provided as work of this Division or by others, this Contractor shall supervise their construction and be responsible for the correct size and location even though detailed and dimensioned on the drawings. This Contractor shall pay for all necessary cutting, repairing, and finishing if any are left out or incorrectly made. All necessary openings thru existing walls, ceilings, floors, roofs, etc. shall be provided by this Contractor unless indicated otherwise by the drawing and/or specifications.

1.15 UNFIT OR DAMAGED WORK

- A. Any part of this installation that fails, is unfit, or becomes damaged during construction, shall be replaced or otherwise made good. The cost of such remedy shall be the responsibility of this Division.

1.16 WORKMANSHIP

- A. Workmanship shall be the best quality of its kind for the respective industries, trades, crafts, and practices, and shall be acceptable in every respect to the Owner's representative. Nothing contained herein shall relieve the Contractor from making good and perfect work in all details in construction.

1.17 SAFETY REGULATION

- A. The Contractor shall comply with all local, Federal, and OSHA safety requirements in performance with this work. (See General Conditions). This Contractor shall be required to provide equipment, supervision, construction, procedures, and all other necessary items to assure safety to life and property.

1.18 ELECTRICAL SERVICES

- A. All equipment control wiring and all automatic temperature control wiring including all necessary contacts, relays, and interlocks, whether low or line voltage, except power wiring, shall be furnished and installed as work of this Division unless shown to be furnished by Division 26. All such wiring shall be in conduit as required by electrical codes. Wiring in the mechanical rooms, fans rooms and inaccessible ceilings and walls shall be installed in conduit as well. Installation of any and all wiring done under Division 21, 22 and 23 shall be in accordance with the requirements of Division 26, Electrical.
- B. All equipment that requires an electrical connection shall be furnished so that it will operate properly and deliver full capacity on the electrical service available.
- C. Refer to the electrical control equipment and wiring shown on the diagrams. Any changes or additions required by specific equipment furnished shall be the complete responsibility of the Contractor furnishing the equipment.
- D. The Mechanical Contractor must coordinate with the Electrical Contractor to insure that all required

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

components of control work are included and fully understood. No additional cost shall accrue to the Owner as a result of lack of such coordination.

1.19 WORK, MATERIALS, AND QUALITY OF EQUIPMENT

- A. Unless otherwise specified, all materials shall be new and of the best quality of their respective kinds and all labor shall be done in a most thorough and workmanlike manner.
- B. Products or equipment of any of the manufacturers cited herein or any of the products approved by the Addenda may be used. However, where lists of products are cited herein, the one first listed in the design equipment used in drawings and schedules to establish size, quality, function, and capacity standards. If other than design equipment is used, it shall be carefully checked for access to equipment, electrical and control requirements, valving, and piping. Should changes or additions occur in piping, valving, electrical work, etc., or if the work of other Contractors would be revised by the alternate equipment, the cost of all changes shall be borne as work of this Division.
- C. The Execution portions of the specifications specify what products and materials may be used. Any products listed in the Product section of the specification that are not listed in the Execution portion of the specification may not be used without written approval by the Engineer.
- D. The access to equipment shown on the drawings is the minimum acceptable space requirements. No equipment that reduces or restricts accessibility to this or any other equipment will be considered.
- E. All major items of equipment are specified in the equipment schedules on the drawings or in these specifications and shall be furnished complete with all accessories normally supplied with the catalog item listed and all other accessories necessary for a complete and satisfactory installation.
- F. All welders shall be certified in accordance with Section IX of the ASME Boiler and Pressure Vessel Code, latest Edition.

1.20 PROTECTION AGAINST WEATHER AND STORING OF MATERIALS

- A. All equipment and materials shall be properly stored and protected against moisture, dust, and wind. Coverings or other protection shall be used on all items that may be damaged or rusted or may have performance impaired by adverse weather or moisture conditions. Damage or defect developing before acceptance of the work shall be made good at the Contractor's expense.
- B. All open duct and pipe openings shall be adequately covered at all times.

1.21 INSTALLATION CHECK

- A. An experienced, competent, and authorized representative of the manufacturer or supplier of each item of equipment indicated in the equipment schedule and the seismic supplier shall visit the site of the work and inspect, check, adjust if necessary, and approve the equipment installation. In each case, the equipment supplier's representative shall be present when the equipment is placed in operation. The equipment supplier's representative shall revisit the job site as often as necessary until all trouble is corrected and the equipment installation and operation is satisfactory to the Engineer.
- B. Each equipment supplier's representative shall furnish to the Owner, through the Engineer, a written report certifying that the equipment (1) has been properly installed and lubricated; (2) is in

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

accurate alignment; (3) is free from any undue stress imposed by connecting piping or anchor bolts; and, (4) has been operated under full load conditions and that it operated satisfactorily.

- C. All costs for this work shall be included in the prices quoted by equipment suppliers.

1.22 EQUIPMENT LUBRICATION

- A. The Contractor shall properly lubricate all pieces of equipment before turning the building over to the Owner. A linen tag shall be attached to each piece of equipment, showing the date of lubrication and the lubricant used. No equipment shall be started until it is properly lubricated.
- B. Necessary time shall be spent with the Owner's Representative to thoroughly familiarize him with all necessary lubrications and maintenance that will be required of him.
- C. Detergent oil as used for automotive purposes shall not be used for this work.

1.23 CUTTING AND PATCHING

- A. No cutting or drilling in structural members shall be done without written approval of the Architect. The work shall be carefully laid out in advance, and cutting, channeling, chasing, or drilling of floors, walls, partitions, ceilings, or other surfaces necessary for the mechanical work shall be carefully done. Any damage to building, piping, or equipment shall be repaired by professional plasterers, masons, concrete workers, etc., and all such work shall be paid for as work of this Division.
- B. When concrete, grading, etc., is disturbed, it shall be restored to original condition as described in the applicable Division of this Specification.

1.24 EXCAVATION AND BACKFILLING

- A. All necessary excavations and backfilling for the Mechanical phase of this project shall be provided as work of this Division. Trenches for all underground pipelines shall be excavated to the required depths. The bottom of trenches shall be compacted hard and graded to obtain required fall. Backfill shall be placed in horizontal layers, not exceeding 12 inches in thickness, and properly moistened. Each layer shall be compacted, by suitable equipment, to a density of not less than 95 percent as determined by ASTM D-1557. After pipelines have been tested, inspected, and approved, the trench shall be backfilled with selected material. Excess earth shall be hauled from the job site. Fill materials approved by the Architect shall be provided as work of this Division.
- B. No trenches shall be cut near or under any footings without consultation first with the Architect's office. Any trenches or excavations more than 30 inches deep shall be tapered, shored, covered, or otherwise made absolutely safe so that no vehicle or persons can be injured by falling into such excavations, or in any way be harmed by cave-ins, shifting earth, rolling rocks, or by drowning. This protection shall be extended to all persons approaching excavation related to this work whether or not such persons are authorized to be in the vicinity of the construction.

1.25 ACCESS

- A. Provide access doors in walls, ceilings and floors by this division unless otherwise noted. For access to mechanical equipment such as valves, dampers, VAV boxes, fans, controls, etc. Refer to Division 8 for door specifications. All access doors shall be 24" x 24" unless otherwise indicated or required. Coordinate location of doors with the Architect prior to installation. . If doors are not specified in Division 8, provide the following: Doors in ceilings and wall shall be equal to JR Smith

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

No. 4760 bonderized and painted. Doors in tile walls shall be equal to JR Smith No. 4730 chrome plated. Doors in floors shall be equal to JR Smith No. 4910

- B. Valves: Valve must be installed in locations where access is readily available. If access is compromised, as judged by the Mechanical Engineer, these valves shall be relocated where directed at the Contractors expense.
- C. Equipment: Equipment must be installed in locations and orientations so that access to all components requiring service or maintenance will not be compromised. If access is compromised, as judged by the Mechanical Engineer, the contractor shall modify the installation as directed by the Engineer at the Contractors expense.
- D. It is the responsibility of this division to install terminal boxes, valves and all other equipment and devices so they can be accessed. If any equipment or devices are installed so they cannot be accessed on a ladder a catwalk and ladder system shall be installed above the ceiling to access and service this equipment.

1.26 CONCRETE BASES AND INSERTS

- A. Bases: The concrete bases shall be provided and installed as work by this division. This Division shall be responsible for the proper size and location of bases and shall furnish all required anchor bolts and sleeves with templates to be installed as work of Division 3, Concrete.
- B. All floor-mounted mechanical equipment shall be set on 6-inch high concrete bases, unless otherwise noted or shown on drawings. Such bases shall extend 6 inches beyond equipment or mounting rails on all sides or as shown on the drawings and shall have a 1-inch beveled edge all around.
- C. Inserts: Where slotted or other types of inserts required for this work are to be cast into concrete, they shall be furnished as work of this Division
- D. Concrete inserts and pipe support systems shall be equal to Unistrut P3200 series for all piping where more than one pipe is suspended at a common location. Spacing of the inserts shall match the size and type of pipe and of ductwork being supported. The Unistrut insert and pipe support system shall include all inserts, vertical supports, horizontal support members, clamps, hangers, rollers, bolts, nuts, and any other accessory items for a complete pipe-supporting system.

1.27 CLEANING AND PAINTING

- A. Cleaning: After all tests and adjustments have been made and all systems pronounced satisfactory for permanent operation, this Contractor shall clean all exposed piping, ductwork, insulated members, fixture, and equipment installed under this Section and leave them ready for painting. He shall refinish any damaged finish and leave everything in proper working order. The Contractor shall remove all stains or grease marks on walls, floors, glass, hardware, fixtures, or elsewhere, caused by his workman or for which he is responsible. He shall remove all stickers on plumbing fixtures, do all required patching up and repair all work of others damaged by this division of the work, and leave the premises in a clean and orderly condition.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- B. Painting: Painting of exposed pipe, insulated pipe, ducts, or equipment is work of Division 9, Painting.
- C. Mechanical Contractor: All equipment which is to be furnished in factory prefinished conditions by the mechanical Contractor shall be left without mark, scratch, or impairment to finish upon completion of job. Any necessary refinishing to match original shall be done. Do not paint over nameplates, serial numbers, or other identifying marks.
- D. Removal of Debris, Etc: Upon completion of this division of the work, remove all surplus material and rubbish resulting from this work, and leave the premises in a clean and orderly condition.

1.28 CONTRACT COMPLETION

- A. Incomplete and Unacceptable Work: If additional site visits or design work is required by the Engineer or Architect because of the use of incomplete or unacceptable work by the Contractor, then the Contractor shall reimburse the Engineer and Architect for all additional time and expenses involved.
- B. Maintenance Instructions: The Contractor shall furnish the Owner complete printed and illustrated operating and maintenance instructions covering all units of mechanical equipment, together with parts lists.
- C. Instructions To Owner's Representatives: In addition to any detailed instructions called for, the mechanical Contractor must provide, without expense to the Owner, competent instructors to train the Owner's representatives who will be in charge of the apparatus and equipment, in the care, adjustment, and operation of all parts on the heating, air conditioning, ventilating, plumbing, fire protection, and automatic temperature control equipment. Instruction dates shall be scheduled at time of final inspection. A written report specifying times, dates, and name of personnel instructed shall be forwarded to the Architect. A minimum of four 8-hour instruction periods shall be provided. The instruction periods will be broken down to shorter periods when requested by the Owner. The total instruction hours shall not be reduced. The ATC Contractor shall provide 4 hours of instructions. The remaining hours shall be divided between the mechanical and sheet metal Contractor.
- D. Guarantee: By the acceptance of any contract award for the work herein described or shown on the drawings, the Contractor assumes the full responsibility imposed by the guarantee as set forth herein and in the General Conditions, and should protect himself through proper guarantees from equipment and special equipment Contractors and from subcontractors as their interests may appear.
- E. The guarantee so assumed by the Contractor and as work of this Section is as follows:
 - 1. That the entire mechanical system, including plumbing, heating, and air-conditioning system shall be quiet in operation.
 - 2. That the circulation of water shall be complete and even.
 - 3. That all pipes, conduit, and connections shall be perfectly free from foreign matter and pockets and that all other obstructions to the free passage of air, water, liquid, sewage, and vent shall be removed.
 - 4. That he shall make promptly and free of charge, upon notice from the Owner, any necessary repairs due to defective workmanship or materials that may occur during a period of one year from date of Substantial Completion.
 - 5. That all specialties, mechanical, and patent devices incorporated in these systems shall be adjusted in a manner that each shall develop its maximum efficiency in the operation of the system; i.e., diffusers shall deliver the designed amount of air shown on drawings,

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- thermostats shall operate to the specified limits, etc.
6. All equipment and the complete mechanical, ductwork, piping and plumbing systems shall be guaranteed for a period of one year from the date of the Architect's Certificate of Substantial Completion, this includes all mechanical, ductwork, piping and plumbing equipment and products and is not limited to boiler, chillers, coils, fans, filters etc. Any equipment supplier not willing to comply with this guarantee period shall not submit a bid price for this project. The Contractor shall be responsible for a 100-percent guarantee for the system and all items of equipment for this period. If the contractor needs to provide temporary heating or cooling to the building and or needs to insure systems are installed properly and or to meet the project schedule the guaranteed of all systems and equipment shall be as indicated above, on year from the date of the Architect's Certificate of Substantial Completion.
 7. All filters used during construction shall be replaced just before equipment is turned over to the Owner, and all required equipment and parts shall be oiled. Any worn parts shall also be replaced.
 8. If any systems or equipment is used for temporary heating or cooling the systems shall be protected so they remain clean. I.e. if the ductwork systems are used temporary filters and a filter holder (not duct-taped to ducts or grilles) shall be installed to insure the systems and the equipment remain clean.

1.29 CURBS

- A. Unless otherwise noted in these specifications or on the documents all roof curbs for all equipment are to be provided by Division 22 and 23.

1.30 TEST RUN

- A. The Mechanical Contractor shall operate the mechanical system for a minimum of 30 days to prove the operation of the system.

1.31 EQUIPMENT STARTUP AND CHECKOUT

- A. Each major piece of equipment shall be started and checked out by an authorized representative of the equipment manufacturer. A certificate indicating the equipment is operating to the satisfaction of the manufacturer shall be provided and shall be included in the commissioning report.
- B. This contractor shall coordinate commissioning procedures and activities with the commissioning agent.

1.32 DEMOLITION

- A. General: Demolish and remove existing construction only to the extent required by new construction and as indicated. Use methods required to complete the Work within limitations of governing regulations and as follows:
- B. Proceed with demolition systematically, from higher to lower level. Complete selective demolition operations above each floor or tier before disturbing supporting members on the next lower level.
- C. Neatly cut openings and holes plumb, square, and true to dimensions required. Use cutting methods least likely to damage construction to remain or adjoining construction. Use hand tools or small power tools designed for sawing or grinding, not hammering and chopping, to minimize disturbance of adjacent surfaces. Temporarily cover openings to remain.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- D. Cut or drill from the exposed or finished side into concealed surfaces to avoid marring existing finished surfaces.
- E. Do not use cutting torches until work area is cleared of flammable materials. At concealed spaces, such as duct and pipe interiors, verify condition and contents of hidden space before starting flame-cutting operations. Maintain portable fire-suppression devices during flame-cutting operations.
- F. Maintain adequate ventilation when using cutting torches.
- G. Remove decayed, vermin-infested, or otherwise dangerous or unsuitable materials and promptly dispose of off-site.
- H. Remove structural framing members and lower to ground by method suitable to avoid free fall and to prevent ground impact or dust generation.
- I. Locate selective demolition equipment and remove debris and materials so as not to impose excessive loads on supporting walls, floors, or framing.
- J. Dispose of demolished items and materials promptly.
- K. Return elements of construction and surfaces that are to remain to condition existing before selective demolition operations began.
- L. Existing Facilities: Comply with building manager's requirements for using and protecting elevators, stairs, walkways, loading docks, building entries, and other building facilities during selective demolition operations.
- M. Concrete: Demolish in sections. Cut concrete full depth at junctures with construction to remain and at regular intervals, using power-driven saw, then remove concrete between saw cuts.
- N. Masonry: Demolish in small sections. Cut masonry at junctures with construction to remain, using power-driven saw, and then remove masonry between saw cuts.
- O. Concrete Slabs-on-Grade: Saw-cut perimeter of area to be demolished, then break up and remove.
- P. Air-Conditioning Equipment: Remove equipment without releasing refrigerants.

END OF SECTION 230100

BLANK PAGE

SECTION 230150

TEMPORARY USE OF EQUIPMENT AND SYSTEMS

PART 1 - GENERAL

1.1 SUMMARY

- A. This section includes requirements for temporary use of equipment and systems and any other items that are used during the construction of the project.

1.2 EQUIPMENT OR SYSTEMS NEEDED TO OPERATE BEFORE CONTRACT COMPLETION

- A. If the contractor needs to provide temporary heating or cooling to the building and or needs to insure systems are installed properly for start up and or to meet the project schedule the guaranteed of all systems and equipment shall be for one year from the date of the Architect's Certificate of Substantial Completion.
- B. All equipment and the complete mechanical, ductwork, piping and plumbing systems shall be guaranteed for a period of one year from the date of the Architect's Certificate of Substantial Completion, this includes all mechanical, ductwork, piping and plumbing equipment and products and is not limited to boiler, chillers, coils, fans, filters etc. Any contractor or equipment supplier who is not willing to comply with this guarantee period shall not submit a bid price for this project. The Contractor shall be responsible for a 100-percent guarantee for the systems and all items of equipment for this period.
- C. All filters used during construction shall be replaced just before equipment is turned over to the Owner, and all required equipment and parts shall be oiled. Any worn parts shall also be replaced.
- D. If any systems or equipment is used for temporary heating or cooling the systems shall be protected so they remain clean. I.e. if the ductwork systems are used temporary filters and a filter holder (not duct-taped to ducts or grilles) shall be installed to insure the systems and the equipment remain clean. All return air openings shall be protected with a metal filter frame and filters.

1.3 TEMPORARY EQUIPMENT OR SYSTEM SUBMITTALS

- A. If it is determined by the project or contractor that equipment or systems are needed to operate to provide heating, cooling or other needed services this division shall submit a document indicating what measures will be taken to insure the safe and proper operation of the equipment, systems and personal associated with the operation, this document shall be submitted to the engineer for approval. This plan shall show connections of equipment, utility hookups (if required) staging areas etc.

1.4 QUALITY ASSURANCE

- A. Electric Service: Comply with NECA, NEMA, and UL standards and regulations for temporary electric service. Install service to comply with NFPA 70.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- B. Tests and Inspections: Arrange for authorities having jurisdiction to test and inspect each temporary utility before use. Obtain required certifications and permits.
- C. Accessible Temporary Egress: Comply with applicable provisions in the U.S. Architectural & Transportation Barriers Compliance Board's ADA-ABA Accessibility Guidelines.
- D. SMACNA: The latest standard from SSMACNA shall apply.

1.5 PROJECT CONDITIONS

- A. Temporary Use of equipment or systems: Engage installer of each permanent service to assume responsibility for operation, maintenance, and protection of each permanent service during its use until the facility has been accepted by the owner regardless of previously assigned responsibilities.

PART 2 - PRODUCTS

2.1 EQUIPMENT

- A. Fire Extinguishers: Portable, UL rated; with class and extinguishing agent as required by locations and classes of fire exposures.
- B. HVAC Equipment: Unless Owner authorizes use of permanent HVAC system, provide vented, self-contained, liquid-propane-gas or fuel-oil heaters and cooling units if required with individual space thermostatic control.
 - 1. Usually retain first subparagraph below. Gasoline-burning and salamander-type heating units are usually prohibited.
 - 2. Use of gasoline-burning space heaters, open-flame heaters, or salamander-type heating units is prohibited.
 - 3. Heating Units: Listed and labeled for type of fuel being consumed, by a testing agency acceptable to authorities having jurisdiction, and marked for intended use.
 - 4. Retain first option in subparagraph below for LEED-NC or LEED-CI Credit EQ 3.1 or insert another number. This requirement is only part of an Indoor Air Quality (IAQ) Management Plan required by this Credit for the construction and pre-occupancy phases of the building.
 - 5. Permanent HVAC System: If Owner authorizes use of permanent HVAC system for temporary use during construction, provide filters with MERV of 8 at each return air opening in system and remove at end of construction. These filters are to be installed in a filter housing frame and are not to be duct taped. Clean HVAC system as required in Division 01 Section "Closeout Procedures."

PART 3 - EXECUTION

3.1 INSTALLATION, GENERAL

- A. Locate equipment where they will serve Project adequately and result in minimum interference with performance of the Work. Relocate and modify equipment and systems as required by progress of the Work.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Locate equipment to limit site disturbance as specified in Division 01 Section "Summary."

3.2 TEMPORARY UTILITY INSTALLATION

- A. General: Install temporary service or connect to existing service.
 1. Arrange with utility company, Owner, and existing users for time when service can be interrupted, if necessary, to make connections for temporary services.
- B. Water Service: Install water service and distribution piping in sizes and pressures adequate for construction.
- C. Heating and Cooling: Provide temporary heating and cooling required by construction activities for curing or drying of completed installations or for protecting installed construction from adverse effects of low temperatures or high humidity. Select equipment that will not have a harmful effect on completed installations or elements being installed.
- D. Ventilation and Humidity Control: Provide temporary ventilation required by construction activities for curing or drying of completed installations or for protecting installed construction from adverse effects of high humidity. Select equipment that will not have a harmful effect on completed installations or elements being installed. Coordinate ventilation requirements to produce ambient condition required and minimize energy consumption.

3.3 OPERATION, TERMINATION, AND REMOVAL

- A. Maintenance: Maintain equipment and systems in good operating condition until removal.
 1. Maintain operation of temporary enclosures, heating, cooling, humidity control, ventilation, and similar equipment and systems on a 24-hour basis where required to achieve indicated results and to avoid possibility of damage.
- B. Termination and Removal: Remove each temporary facility or equipment when need for its service has ended, when it has been replaced by authorized use of a permanent facility, or no later than Substantial Completion. Complete or, if necessary, restore permanent construction that may have been delayed because of interference with temporary facility. Repair damaged Work, clean exposed surfaces, and replace construction that cannot be satisfactorily repaired.
 1. Materials equipment that constitute temporary equipment are property of Contractor.
 2. At Substantial Completion, repair, renovate, and clean permanent equipment and systems used during construction period. Comply with final cleaning requirements specified in Division 01 Section "Closeout Procedures."

3.4 EQUIPMENT STARTUP AND CHECKOUT

- A. Each major piece of equipment shall be started and checked out by an authorized representative of the equipment manufacturer at substantial completion. A certificate indicating the equipment is operating to the satisfaction of the manufacturer shall be provided and shall be included in the commissioning report.

END OF SECTION 230150

SECTION 230500

COMMON WORK RESULTS FOR HVAC

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. This Section includes the following:
 - 1. Piping materials and installation instructions common to most piping systems.
 - 2. Transition fittings.
 - 3. Dielectric fittings.
 - 4. Mechanical sleeve seals.
 - 5. Sleeves.
 - 6. Escutcheons.
 - 7. Grout.
 - 8. Equipment installation requirements common to equipment sections.
 - 9. Painting and finishing.
 - 10. Concrete bases.
 - 11. Supports and anchorages.
 - 12. Link-Seal

1.3 DEFINITIONS

- A. Finished Spaces: Spaces other than mechanical and electrical equipment rooms, furred spaces, pipe and duct chases, unheated spaces immediately below roof, spaces above ceilings, unexcavated spaces, and crawlspaces.
- B. Exposed, Interior Installations: Exposed to view indoors. Examples include finished occupied spaces, mechanical equipment rooms, accessible pipe shafts, accessible plumbing chases, and accessible tunnels.
- C. Exposed, Exterior Installations: Exposed to view outdoors or subject to outdoor ambient temperatures and weather conditions. Examples include rooftop locations.
- D. Concealed, Interior Installations: Concealed from view and protected from physical contact by building occupants. Examples include above ceilings and chases.
- E. Concealed, Exterior Installations: Concealed from view and protected from weather conditions and physical contact by building occupants but subject to outdoor ambient temperatures. Examples include installations within unheated shelters.
- F. The following are industry abbreviations for plastic materials:
 - 1. CPVC: Chlorinated polyvinyl chloride plastic.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

2. PVC: Polyvinyl chloride plastic.

G. The following are industry abbreviations for rubber materials:

1. EPDM: Ethylene-propylene-diene terpolymer rubber.
2. NBR: Acrylonitrile-butadiene rubber.

1.4 SUBMITTALS

A. Product Data: For the following:

1. Transition fittings.
2. Dielectric fittings.
3. Mechanical sleeve seals.
4. Escutcheons.

B. Welding certificates.

1.5 QUALITY ASSURANCE

A. Steel Support Welding: Qualify processes and operators according to AWS D1.1, "Structural Welding Code--Steel."

B. Steel Pipe Welding: Qualify processes and operators according to ASME Boiler and Pressure Vessel Code: Section IX, "Welding and Brazing Qualifications."

1. Comply with provisions in ASME B31 Series, "Code for Pressure Piping."
2. Certify that each welder has passed AWS qualification tests for welding processes involved and that certification is current.

C. Electrical Characteristics for HVAC Equipment: Equipment of higher electrical characteristics may be furnished provided such proposed equipment is approved in writing and connecting electrical services, circuit breakers, and conduit sizes are appropriately modified. If minimum energy ratings or efficiencies are specified, equipment shall comply with requirements.

1.6 DELIVERY, STORAGE, AND HANDLING

A. Deliver pipes and tubes with factory-applied end caps. Maintain end caps through shipping, storage, and handling to prevent pipe end damage and to prevent entrance of dirt, debris, and moisture.

B. Store plastic pipes protected from direct sunlight. Support to prevent sagging and bending.

1.7 COORDINATION

A. Arrange for pipe spaces, chases, slots, and openings in building structure during progress of construction, to allow for HVAC installations.

B. Coordinate installation of required supporting devices and set sleeves in poured-in-place concrete and other structural components as they are constructed.

C. Coordinate requirements for access panels and doors for HVAC items requiring access that are concealed behind finished surfaces. Access panels and doors are specified in Division 08 Section "Access Doors and Frames."

PART 2 - PRODUCTS

2.1 MANUFACTURERS

- A. In other Part 2 articles where subparagraph titles below introduce lists, the following requirements apply for product selection:
 - 1. Manufacturers: Subject to compliance with requirements, provide products by the manufacturers specified.

2.2 PIPE, TUBE, AND FITTINGS

- A. Refer to individual Division 23 piping Sections for pipe, tube, and fitting materials and joining methods.
- B. Pipe Threads: ASME B1.20.1 for factory-threaded pipe and pipe fittings.

2.3 JOINING MATERIALS

- A. Refer to individual Division 23 piping Sections for special joining materials not listed below.
- B. Pipe-Flange Gasket Materials: Suitable for chemical and thermal conditions of piping system contents.
 - 1. ASME B16.21, nonmetallic, flat, asbestos-free, 1/8-inch maximum thickness unless thickness or specific material is indicated.
 - a. Full-Face Type: For flat-face, Class 125, cast-iron and cast-bronze flanges.
 - b. Narrow-Face Type: For raised-face, Class 250, cast-iron and steel flanges.
 - 2. AWWA C110, rubber, flat face, 1/8 inch thick, unless otherwise indicated; and full-face or ring type, unless otherwise indicated.
- C. Flange Bolts and Nuts: ASME B18.2.1, carbon steel, unless otherwise indicated.
- D. Solder Filler Metals: ASTM B 32, lead-free alloys. Include water-flushable flux according to ASTM B 813.
- E. Brazing Filler Metals: AWS A5.8, BCuP Series, copper-phosphorus alloys for general-duty brazing, unless otherwise indicated; and AWS A5.8, BAg1, silver alloy for refrigerant piping, unless otherwise indicated.
- F. Welding Filler Metals: Comply with AWS D10.12 for welding materials appropriate for wall thickness and chemical analysis of steel pipe being welded.

2.4 TRANSITION FITTINGS

- A. Plastic-to-Metal Transition Fittings: CPVC and PVC one-piece fitting with manufacturer's Schedule 80 equivalent dimensions; one end with threaded brass insert, and one solvent-cement-joint end.
 - 1. Manufacturers:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- a. Eslon Thermoplastics.
- B. Plastic-to-Metal Transition Adaptors: One-piece fitting with manufacturer's SDR 11 equivalent dimensions; one end with threaded brass insert, and one solvent-cement-joint end.
 - 1. Manufacturers:
 - a. Thompson Plastics, Inc.

2.5 DIELECTRIC FITTINGS

- A. General: Assembly or fitting with insulating material isolating joined dissimilar metals, to prevent galvanic action and stop corrosion.
- B. Description: Combination of copper alloy and ferrous; threaded, solder, plain, and weld-neck end types and matching piping system materials.
- C. Insulating Material: Suitable for system fluid, pressure, and temperature.
- D. Dielectric Unions: Factory-fabricated, union assembly, for 250-psig minimum working pressure at 180 deg F.
- E. Dielectric Flanges: Factory-fabricated, companion-flange assembly, for 150- or 300-psig minimum working pressure as required to suit system pressures.
- F. Dielectric-Flange Insulation Kits: Field-assembled, companion-flange assembly, full-face or ring type. Components include neoprene or phenolic gasket, phenolic or polyethylene bolt sleeves, phenolic washers, and steel backing washers.
 - 1. Provide separate companion flanges and steel bolts and nuts for 150- or 300-psig minimum working pressure as required to suit system pressures.
- G. Dielectric Couplings: Galvanized-steel coupling with inert and noncorrosive, thermoplastic lining; threaded ends; and 300-psig minimum working pressure at 225 deg F.
- H. Dielectric Nipples: Electroplated steel nipple with inert and noncorrosive, thermoplastic lining; plain, threaded, or grooved ends; and 300-psig minimum working pressure at 225 deg F.
 - 1. Manufacturers:
 - a. Capitol Manufacturing Co.
 - b. Central Plastics Company.
 - c. Watts Industries, Inc.; Water Products Div

2.6 MECHANICAL SLEEVE SEALS

- A. Description: Modular sealing element unit, designed for field assembly, to fill annular space between pipe and sleeve.
 - 1. Manufacturers:
 - a. Advance Products & Systems, Inc.
 - b. Calpico, Inc.
 - c. Metraflex Co.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- d. Pipeline Seal and Insulator, Inc.
- 2. Sealing Elements: EPDM interlocking links shaped to fit surface of pipe. Include type and number required for pipe material and size of pipe.
- 3. Pressure Plates: Stainless steel. Include two for each sealing element.
- 4. Connecting Bolts and Nuts: Stainless steel of length required to secure pressure plates to sealing elements. Include one for each sealing element.

2.7 SLEEVES

- A. Galvanized-Steel Sheet: 0.0239-inch minimum thickness; round tube closed with welded longitudinal joint.
- B. Steel Pipe: ASTM A 53, Type E, Grade B, Schedule 40, galvanized, plain ends.
- C. Cast Iron: Cast or fabricated "wall pipe" equivalent to ductile-iron pressure pipe, with plain ends and integral waterstop, unless otherwise indicated.
- D. Stack Sleeve Fittings: Manufactured, cast-iron sleeve with integral clamping flange. Include clamping ring and bolts and nuts for membrane flashing.
 - 1. Underdeck Clamp: Clamping ring with set screws.
- E. Molded PVC: Permanent, with nailing flange for attaching to wooden forms.
- F. PVC Pipe: ASTM D 1785, Schedule 40.

2.8 ESCUTCHEONS

- A. Description: Manufactured wall and ceiling escutcheons and floor plates, with an ID to closely fit around pipe, tube, and insulation of insulated piping and an OD that completely covers opening.
- B. One-Piece, Deep-Pattern Type: Deep-drawn, box-shaped brass with polished chrome-plated finish.
- C. One-Piece, Cast-Brass Type: With set screw.
 - 1. Finish: Polished chrome-plated and rough brass.
- D. One-Piece, Stamped-Steel Type: With set screw or spring clips and chrome-plated finish.
- E. Split-Plate, Stamped-Steel Type: With concealed hinge, set screw or spring clips, and chrome-plated finish.

2.9 GROUT

- A. Description: ASTM C 1107, Grade B, non-shrink and nonmetallic, dry hydraulic-cement grout.
 - 1. Characteristics: Post-hardening, volume-adjusting, non-staining, noncorrosive, nongaseous, and recommended for interior and exterior applications.
 - 2. Design Mix: 5000-psi, 28-day compressive strength.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

3. Packaging: Premixed and factory packaged.

2.10 LINK-SEAL MODULAR SEAL PRESSURE PLATES

- A. Link-Seal® modular seal pressure plates shall be molded of glass reinforced Nylon Polymer with the following properties:
 1. Izod Impact - Notched = 2.05ft-lb/in. per ASTM D-256
 2. Flexural Strength @ Yield = 30,750 psi per ASTM D-790
 3. Flexural Modulus = 1,124,000 psi per ASTM D-790
 4. Elongation Break = 11.07% per ASTM D-638
 5. Specific Gravity = 1.38 per ASTM D-792
- B. Models LS200-275-300-315 shall incorporate the most current Link-Seal® Modular Seal design modifications and shall include an integrally molded compression assist boss on the top (bolt entry side) of the pressure plate, which permits increased compressive loading of the rubber sealing element. Models 315-325-340-360-400-410-425-475-500-525-575-600 shall incorporate an integral recess known as a “Hex Nut Interlock” designed to accommodate commercially available fasteners to insure proper thread engagement for the class and service of metal hardware. All pressure plates shall have a permanent identification of the manufacturer's name molded into it.
- C. For fire service, pressure plates shall be steel with 2-part Zinc Dichromate Coating.
- D. Link-Seal® Modular Seal Hardware: All fasteners shall be sized according to latest Link-Seal® modular seal technical data. Bolts, flange hex nuts shall be:
 1. 316 Stainless Steel per ASTM F593-95, with a 85,000 psi average tensile strength.

PART 3 - EXECUTION

3.1 PIPING SYSTEMS - COMMON REQUIREMENTS

- A. Install piping according to the following requirements and Division 23 Sections specifying piping systems.
- B. Drawing plans, schematics, and diagrams indicate general location and arrangement of piping systems. Indicated locations and arrangements were used to size pipe and calculate friction loss, expansion, pump sizing, and other design considerations. Install piping as indicated unless deviations to layout are approved on Coordination Drawings.
- C. Install piping in concealed locations, unless otherwise indicated and except in equipment rooms and service areas.
- D. Install piping indicated to be exposed and piping in equipment rooms and service areas at right angles or parallel to building walls. Diagonal runs are prohibited unless specifically indicated otherwise.
- E. Install piping above accessible ceilings to allow sufficient space for ceiling panel removal.
- F. Install piping to permit valve servicing.
- G. Install piping at indicated slopes.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- H. Install piping free of sags and bends.
- I. Install fittings for changes in direction and branch connections.
- J. Install piping to allow application of insulation.
- K. Select system components with pressure rating equal to or greater than system operating pressure.
- L. Install escutcheons for penetrations of walls, ceilings, and floors according to the following:
 - 1. New Piping:
 - a. Piping with Fitting or Sleeve Protruding from Wall: One-piece, deep-pattern type.
 - b. Chrome-Plated Piping: One-piece, cast-brass type with polished chrome-plated finish.
 - c. Insulated Piping: One-piece, stamped-steel type with spring clips.
 - d. Bare Piping at Wall and Floor Penetrations in Finished Spaces: One-piece, cast-brass type with polished chrome-plated finish.
 - e. Bare Piping at Wall and Floor Penetrations in Finished Spaces: One-piece, stamped-steel type.
 - f. Bare Piping at Ceiling Penetrations in Finished Spaces: One-piece or split-casting, cast-brass type with polished chrome-plated finish.
 - g. Bare Piping at Ceiling Penetrations in Finished Spaces: One-piece, stamped-steel type or split-plate, stamped-steel type with concealed hinge and set screw.
- M. Install sleeves for pipes passing through concrete and masonry walls and concrete floor and roof slabs.
- N. Install sleeves for pipes passing through concrete and masonry walls, gypsum-board partitions, and concrete floor and roof slabs.
 - 1. Cut sleeves to length for mounting flush with both surfaces.
 - a. Exception: Extend sleeves installed in floors of mechanical equipment areas or other wet areas 2 inches above finished floor level. Extend cast-iron sleeve fittings below floor slab as required to secure clamping ring if ring is specified.
 - 2. Install sleeves in new walls and slabs as new walls and slabs are constructed.
 - 3. Install sleeves that are large enough to provide 1/4-inch annular clear space between sleeve and pipe or pipe insulation. Use the following sleeve materials:
 - a. PVC Steel Pipe Sleeves: For pipes smaller than NPS 6.
 - b. Steel Sheet Sleeves: For pipes NPS 6 and larger, penetrating gypsum-board partitions.
 - c. Stack Sleeve Fittings: For pipes penetrating floors with membrane waterproofing. Secure flashing between clamping flanges. Install section of cast-iron soil pipe to extend sleeve to 2 inches above finished floor level. Refer to Division 07 Section "Sheet Metal Flashing and Trim" for flashing.
 - 1) Seal space outside of sleeve fittings with grout.
 - 4. Except for underground wall penetrations, seal annular space between sleeve and pipe

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

or pipe insulation, using joint sealants appropriate for size, depth, and location of joint.
Refer to Division 07 Section "Joint Sealants" for materials and installation.

- O. Aboveground, Exterior-Wall Pipe Penetrations: Seal penetrations using sleeves and mechanical sleeve seals. Select sleeve size to allow for 1-inch annular clear space between pipe and sleeve for installing mechanical sleeve seals.
 - 1. Install steel pipe for sleeves smaller than 6 inches in diameter.
 - 2. Install cast-iron "wall pipes" for sleeves 6 inches and larger in diameter.
 - 3. Mechanical Sleeve Seal Installation: Select type and number of sealing elements required for pipe material and size. Position pipe in center of sleeve. Assemble mechanical sleeve seals and install in annular space between pipe and sleeve. Tighten bolts against pressure plates that cause sealing elements to expand and make watertight seal.
- P. Underground, Exterior-Wall Pipe Penetrations: Install cast-iron "wall pipes" for sleeves. Seal pipe penetrations using mechanical sleeve seals. Select sleeve size to allow for 1-inch annular clear space between pipe and sleeve for installing mechanical sleeve seals.
 - 1. Mechanical Sleeve Seal Installation: Select type and number of sealing elements required for pipe material and size. Position pipe in center of sleeve. Assemble mechanical sleeve seals and install in annular space between pipe and sleeve. Tighten bolts against pressure plates that cause sealing elements to expand and make watertight seal.
- Q. Fire-Barrier Penetrations: Maintain indicated fire rating of walls, partitions, ceilings, and floors at pipe penetrations. Seal pipe penetrations with firestop materials. Refer to Division 07 Section "Penetration Firestopping" for materials.
- R. Verify final equipment locations for roughing-in.
- S. Refer to equipment specifications in other Sections of these Specifications for roughing-in requirements.

3.2 PIPING JOINT CONSTRUCTION

- A. Join pipe and fittings according to the following requirements and Division 23 Sections specifying piping systems.
- B. Ream ends of pipes and tubes and remove burrs. Bevel plain ends of steel pipe.
- C. Remove scale, slag, dirt, and debris from inside and outside of pipe and fittings before assembly.
- D. Soldered Joints: Apply ASTM B 813, water-flushable flux, unless otherwise indicated, to tube end. Construct joints according to ASTM B 828 or CDA's "Copper Tube Handbook," using lead-free solder alloy complying with ASTM B 32.
- E. Brazed Joints: Construct joints according to AWS's "Brazing Handbook," "Pipe and Tube" Chapter, using copper-phosphorus brazing filler metal complying with AWS A5.8.
- F. Threaded Joints: Thread pipe with tapered pipe threads according to ASME B1.20.1. Cut threads full and clean using sharp dies. Ream threaded pipe ends to remove burrs and restore

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

full ID. Join pipe fittings and valves as follows:

1. Apply appropriate tape or thread compound to external pipe threads unless dry seal threading is specified.
 2. Damaged Threads: Do not use pipe or pipe fittings with threads that are corroded or damaged. Do not use pipe sections that have cracked or open welds.
- G. Welded Joints: Construct joints according to AWS D10.12, using qualified processes and welding operators according to Part 1 "Quality Assurance" Article.
- H. Flanged Joints: Select appropriate gasket material, size, type, and thickness for service application. Install gasket concentrically positioned. Use suitable lubricants on bolt threads.

3.3 PIPING CONNECTIONS

- A. Make connections according to the following, unless otherwise indicated:
1. Install unions, in piping NPS 2 and smaller, adjacent to each valve and at final connection to each piece of equipment.
 2. Install flanges, in piping NPS 2-1/2 and larger, adjacent to flanged valves and at final connection to each piece of equipment.
 3. Dry Piping Systems: Install dielectric unions and flanges to connect piping materials of dissimilar metals.
 4. Wet Piping Systems: Install dielectric coupling and nipple fittings to connect piping materials of dissimilar metals.

3.4 EQUIPMENT INSTALLATION - COMMON REQUIREMENTS

- A. Install equipment to allow maximum possible headroom unless specific mounting heights are not indicated.
- B. Install equipment level and plumb, parallel and perpendicular to other building systems and components in exposed interior spaces, unless otherwise indicated.
- C. Install HVAC equipment to facilitate service, maintenance, and repair or replacement of components. Connect equipment for ease of disconnecting, with minimum interference to other installations. Extend grease fittings to accessible locations.
- D. Install equipment to allow right of way for piping installed at required slope.

3.5 PAINTING

- A. Painting of HVAC systems, equipment, and components is specified in Division 09 Sections "Interior Painting" and "Exterior Painting."
- B. Damage and Touchup: Repair marred and damaged factory-painted finishes with materials and procedures to match original factory finish.

3.6 CONCRETE BASES

- A. Concrete Bases: Anchor equipment to concrete base according to equipment manufacturer's

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

written instructions and according to seismic codes at Project.

1. Construct concrete bases of dimensions indicated, but not less than 4 inches larger in both directions than supported unit.
2. Install dowel rods to connect concrete base to concrete floor. Unless otherwise indicated, install dowel rods on 18-inch centers around the full perimeter of the base.
3. Install epoxy-coated anchor bolts for supported equipment that extend through concrete base, and anchor into structural concrete floor.
4. Place and secure anchorage devices. Use supported equipment manufacturer's setting drawings, templates, diagrams, instructions, and directions furnished with items to be embedded.
5. Install anchor bolts to elevations required for proper attachment to supported equipment.
6. Install anchor bolts according to anchor-bolt manufacturer's written instructions.
7. Use 3000-psi, 28-day compressive-strength concrete and reinforcement as specified in Division 03 Section "Miscellaneous Cast-in-Place Concrete."

3.7 ERECTION OF METAL SUPPORTS AND ANCHORAGES

- A. Refer to Division 5 Section "Metal Fabrications" for structural steel.
- B. Cut, fit, and place miscellaneous metal supports accurately in location, alignment, and elevation to support and anchor HVAC materials and equipment.
- C. Field Welding: Comply with AWS D1.1.

3.8 GROUTING

- A. Mix and install grout for HVAC equipment base bearing surfaces, pump and other equipment base plates, and anchors.
- B. Clean surfaces that will come into contact with grout.
- C. Provide forms as required for placement of grout.
- D. Avoid air entrapment during placement of grout.
- E. Place grout, completely filling equipment bases.
- F. Place grout on concrete bases and provide smooth bearing surface for equipment.
- G. Place grout around anchors.
- H. Cure placed grout.

3.9 LINK SEAL

- A. Provide Link Seal at all piping penetrations from the outside.

END OF SECTION 230500

BLANK PAGE

SECTION 230513

COMMON MOTOR REQUIREMENTS FOR HVAC EQUIPMENT

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section includes general requirements for single-phase and polyphase, general-purpose, horizontal, small and medium, squirrel-cage induction motors for use on ac power systems up to 600 V and installed at equipment manufacturer's factory or shipped separately by equipment manufacturer for field installation.

1.3 COORDINATION

- A. Coordinate features of motors, installed units, and accessory devices to be compatible with the following:
 - 1. Motor controllers.
 - 2. Torque, speed, and horsepower requirements of the load.
 - 3. Ratings and characteristics of supply circuit and required control sequence.
 - 4. Ambient and environmental conditions of installation location.

PART 2 - PRODUCTS

2.1 GENERAL MOTOR REQUIREMENTS

- A. Comply with requirements in this Section except when the requirements in equipment schedules, other specification sections, drawing notes or in other contract documents are more stringent.
- B. Comply with NEMA MG 1 unless otherwise indicated.

2.2 MOTOR CHARACTERISTICS

- A. Duty: Continuous duty at ambient temperature of 40 deg C and at altitude of 3300 feet above sea level.
- B. Capacity and Torque Characteristics: Sufficient to start, accelerate, and operate connected loads at designated speeds, at installed altitude and environment, with indicated operating sequence, and without exceeding nameplate ratings or considering service factor.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- C. Motors 3/4 HP and larger: Polyphase.
- D. Motors smaller than 3/4 HP: Single phase.
- E. All motors shall have ASTM Grade 5 hardware that is Yellow Zinc-dichromate plated.

2.3 POLYPHASE MOTORS

- A. Description: NEMA MG 1, Design B, medium induction motor.
- B. Efficiency: Energy efficient, as defined in NEMA MG 1.
- C. Service Factor: 1.15.
- D. Rotor: Random-wound, squirrel cage.
- E. Bearings: Regreasable, shielded, antifriction ball bearings suitable for radial and thrust loading.
- F. Temperature Rise: Match insulation rating.
- G. Insulation: Class F.
- H. Code Letter Designation:
 - 1. Motors 15 HP and Larger: NEMA starting Code F or Code G.
 - 2. Motors smaller than 15 HP: Manufacturer's standard starting characteristic.
- I. Enclosure Material: Cast iron for motor frame sizes 324T and larger; rolled steel for motor frame sizes smaller than 324T.

2.4 POLYPHASE MOTORS WITH ADDITIONAL REQUIREMENTS

- A. Motors Used with Reduced-Voltage and Multispeed Controllers: Match wiring connection requirements for controller with required motor leads. Provide terminals in motor terminal box, suited to control method.
- B. Motors Used with Variable Frequency Controllers: Ratings, characteristics, and features coordinated with and approved by controller manufacturer.
 - 1. Windings: Copper magnet wire with moisture-resistant insulation varnish, designed and tested to resist transient spikes, high frequencies, and short time rise pulses produced by pulse-width modulated inverters.
 - 2. Energy- and Premium-Efficient Motors: Class B temperature rise; Class F insulation.
 - 3. Inverter-Duty Motors: Class F temperature rise; Class H insulation.
 - 4. Thermal Protection: Comply with NEMA MG 1 requirements for thermally protected motors.
 - 5. Shaft Grounding Ring: Microfiber type.
 - a. Provide grounded discharge path for VFD induced voltage in the shaft to prevent arching in the motor bearings.

2.5 ELECTRONICALLY COMMUTATED MOTOR (ECM)

1. Motor enclosures: Open type
2. Motor to be a DC electronic commutation type motor (ECM).
 - a. AC induction type motors are not acceptable.
3. Permanently lubricated motor with heavy duty ball bearing
4. Internal motor circuitry to convert AC power supplied to the fan to DC power to operate the motor.
5. Speed controllable to 20% of full speed (80% turndown).
 - a. Potentiometer dial mounted at the motor speed controller
 - b. 0-10 VDC signal.
6. 85% efficient at all speeds minimum.
7. Motors smaller than 2.0 hp.

2.6 SINGLE-PHASE MOTORS

- A. Motors larger than 1/20 hp shall be one of the following, to suit starting torque and requirements of specific motor application:
 1. Permanent-split capacitor.
 2. Split phase.
 3. Capacitor start, inductor run.
 4. Capacitor start, capacitor run.
- B. Bearings: Prelubricated, antifriction ball bearings or sleeve bearings suitable for radial and thrust loading.
- C. Motors 1/20 HP and Smaller: Shaded-pole type.
- D. Thermal Protection: Internal protection to automatically open power supply circuit to motor when winding temperature exceeds a safe value calibrated to temperature rating of motor insulation. Thermal-protection device shall automatically reset when motor temperature returns to normal range, unless otherwise indicated.

PART 3 - EXECUTION (Not Applicable)

END OF SECTION 230513

BLANK PAGE

SECTION 230517

SLEEVES AND SLEEVE SEALS FOR HVAC PIPING

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Sleeves.
 - 2. Sleeve-seal systems.
 - 3. Grout.

1.3 ACTION SUBMITTALS

- A. Product Data: For each type of product indicated.

PART 2 - PRODUCTS

2.1 SLEEVES

- A. Cast-Iron Wall Pipes: Cast or fabricated of cast or ductile iron and equivalent to ductile-iron pressure pipe, with plain ends and integral waterstop unless otherwise indicated.
- B. Galvanized-Steel Wall Pipes: ASTM A 53, Schedule 40, with plain ends and welded steel collar; zinc coated.
- C. Galvanized-Steel-Pipe Sleeves: ASTM A 53, Type E, Grade B, Schedule 40, zinc coated, with plain ends.
- D. PVC-Pipe Sleeves: ASTM D 1785, Schedule 40.
- E. Galvanized-Steel-Sheet Sleeves: 0.0239-inch minimum thickness; round tube closed with welded longitudinal joint.

2.2 SLEEVE-SEAL SYSTEMS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. Advance Products & Systems, Inc.
 - 2. CALPICO, Inc.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

3. Metraflex Company (The).
 4. Pipeline Seal and Insulator, Inc.
 5. Proco Products, Inc.
- B. Description: Modular sealing-element unit, designed for field assembly, for filling annular space between piping and sleeve.
1. Sealing Elements: EPDM-rubber interlocking links shaped to fit surface of pipe. Include type and number required for pipe material and size of pipe.
 2. Pressure Plates: Stainless steel.
 3. Connecting Bolts and Nuts: Stainless steel of length required to secure pressure plates to sealing elements.

2.3 GROUT

- A. Standard: ASTM C 1107/C 1107M, Grade B, post-hardening and volume-adjusting, dry, hydraulic-cement grout.
- B. Characteristics: Nonshrink; recommended for interior and exterior applications.
- C. Design Mix: 5000-psi, 28-day compressive strength.
- D. Packaging: Premixed and factory packaged.

PART 3 - EXECUTION

3.1 SLEEVE INSTALLATION

- A. Install sleeves for piping passing through penetrations in floors, partitions, roofs, and walls.
- B. For sleeves that will have sleeve-seal system installed, select sleeves of size large enough to provide 1-inch annular clear space between piping and concrete slabs and walls.
1. Sleeves are not required for core-drilled holes.
- C. Install sleeves in concrete floors, concrete roof slabs, and concrete walls as new slabs and walls are constructed.
1. Permanent sleeves are not required for holes in slabs formed by molded-PE or -PP sleeves.
 2. Cut sleeves to length for mounting flush with both surfaces.
 - a. Exception: Extend sleeves installed in floors of mechanical equipment areas or other wet areas 2 inches above finished floor level.
 3. Using grout, seal the space outside of sleeves in slabs and walls without sleeve-seal system.
- D. Install sleeves for pipes passing through interior partitions.
1. Cut sleeves to length for mounting flush with both surfaces.
 2. Install sleeves that are large enough to provide 1/4-inch annular clear space between sleeve and pipe or pipe insulation.
 3. Seal annular space between sleeve and piping or piping insulation; use joint sealants appropriate for size, depth, and location of joint. Comply with requirements for sealants specified in Section 079200 "Joint Sealants."

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- E. Fire-Barrier Penetrations: Maintain indicated fire rating of walls, partitions, ceilings, and floors at pipe penetrations. Seal pipe penetrations with firestop materials. Comply with requirements for firestopping specified in Section 078413 "Penetration Firestopping."

3.2 SLEEVE-SEAL-SYSTEM INSTALLATION

- A. Install sleeve-seal systems in sleeves in exterior concrete walls and slabs-on-grade at service piping entries into building.
- B. Select type, size, and number of sealing elements required for piping material and size and for sleeve ID or hole size. Position piping in center of sleeve. Center piping in penetration, assemble sleeve-seal system components, and install in annular space between piping and sleeve. Tighten bolts against pressure plates that cause sealing elements to expand and make a watertight seal.

3.3 SLEEVE AND SLEEVE-SEAL SCHEDULE

- A. Use sleeves and sleeve seals for the following piping-penetration applications:
 - 1. Exterior Concrete Walls above Grade:
 - a. Piping Smaller Than NPS 6: Cast-iron wall sleeves.
 - b. Piping NPS 6 and Larger: Cast-iron wall sleeves.
 - c.
 - 2. Exterior Concrete Walls below Grade:
 - a. Piping Smaller Than NPS 6: Cast-iron wall sleeves with sleeve-seal system.
 - 1) Select sleeve size to allow for 1-inch annular clear space between piping and sleeve for installing sleeve-seal system.
 - b. Piping NPS 6 and Larger: Cast-iron wall sleeves with sleeve-seal system.
 - 1) Select sleeve size to allow for 1-inch annular clear space between piping and sleeve for installing sleeve-seal system.
 - 3. Concrete Slabs-on-Grade:
 - a. Piping Smaller Than NPS 6: Cast-iron wall sleeves with sleeve-seal system.
 - 1) Select sleeve size to allow for 1-inch annular clear space between piping and sleeve for installing sleeve-seal system.
 - b. Piping NPS 6 and Larger: Cast-iron wall sleeves with sleeve-seal system.
 - 1) Select sleeve size to allow for 1-inch annular clear space between piping and sleeve for installing sleeve-seal system.
 - 4. Concrete Slabs above Grade:
 - a. Piping Smaller Than NPS 6: Galvanized-steel-pipe sleeves.
 - b. Piping NPS 6 and Larger: Galvanized-steel-pipe sleeves.
 - 5. Interior Partitions:
 - a. Piping Smaller Than NPS 6: Galvanized-steel-pipe sleeves.
 - b. Piping NPS 6 and Larger: Galvanized-steel-sheet sleeves.

END OF SECTION 230517

SECTION 230518

ESCUTCHEONS FOR HVAC PIPING

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Escutcheons.

1.3 ACTION SUBMITTALS

- A. Product Data: For each type of product indicated.

PART 2 - PRODUCTS

2.1 ESCUTCHEONS

- A. One-Piece, Cast-Brass Type: With polished, chrome-plated or rough-brass finish and setscrew fastener.
- B. One-Piece, Deep-Pattern Type: Deep-drawn, box-shaped brass with chrome-plated finish and spring-clip fasteners.
- C. One-Piece, Stamped-Steel Type: With chrome-plated finish and spring-clip fasteners.

PART 3 - EXECUTION

3.1 INSTALLATION

- A. Install escutcheons for piping penetrations of walls, ceilings, and finished floors.
- B. Install escutcheons with ID to closely fit around pipe, tube, and insulation of insulated piping and with OD that completely covers opening.
 - 1. Escutcheons for New Piping:
 - a. Piping with Fitting or Sleeve Protruding from Wall: One-piece, deep-pattern type with polished, chrome-plated finish.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- b. Chrome-Plated Piping: One-piece, cast-brass type with polished, chrome-plated finish.
- c. Insulated Piping: One-piece, stamped-steel type with chrome-plated finish. Retain one of first two subparagraphs below.
- d. Bare Piping 2 inch and Smaller at Wall and Floor Penetrations in Finished Spaces: One-piece, cast-brass type with polished, chrome-plated finish.
- e. Bare Piping Larger than 2 inch at Wall and Floor Penetrations in Finished Spaces: One-piece, stamped-steel type with polished, chrome-plated finish.
- f. Bare Piping 2 inch and Smaller at Ceiling Penetrations in Finished Spaces: One-piece, cast-brass type with polished, chrome-plated finish.
- g. Bare Piping Larger than 2 inch at Ceiling Penetrations in Finished Spaces: One-piece, stamped-steel type with polished, chrome-plated finish.
- h. Bare Piping 2 inch and Smaller in Unfinished Service Spaces: One-piece, cast-brass type with polished, chrome-plated.
- i. Bare Piping Larger than 2 inch in Unfinished Service Spaces: One-piece, stamped-steel type with polished, chrome-plated finish.
- j. Bare Piping 2 inch and Smaller in Equipment Rooms: One-piece, cast-brass type with polished, chrome-plated finish.
- k. Bare Piping in Equipment Rooms Larger than 2 inch: One-piece, stamped-steel type with chrome- or cadmium-plated finish.

3.2 FIELD QUALITY CONTROL

- A. Replace broken and damaged escutcheons and floor plates using new materials.

END OF SECTION 230518

SECTION 230519

METERS AND GAGES FOR HVAC

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Liquid-in-glass thermometers.
 - 2. Thermowells.
 - 3. Pressure gages.
 - 4. Gage attachments.
 - 5. Test plugs.
 - 6. Test-plug kits.
 - 7. Flowmeters.

1.3 ACTION SUBMITTALS

- A. Product Data: For each type of product indicated.
- B. Wiring Diagrams: For power, signal, and control wiring.

1.4 INFORMATIONAL SUBMITTALS

- A. Product Certificates: For each type of meter and gage, from manufacturer.

1.5 CLOSEOUT SUBMITTALS

- A. Operation and Maintenance Data: For meters and gages to include in operation and maintenance manuals.

PART 2 - PRODUCTS

2.1 LIQUID-IN-GLASS THERMOMETERS

- A. Metal-Case, Industrial-Style, Liquid-in-Glass Thermometers:
 - 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- a. Palmer Wahl Instrumentation Group.
 - b. Terice, H. O. Co.
 - c. Weiss Instruments, Inc.
 - d. Weksler.
2. Standard: ASME B40.200.
 3. Case: Die Cast aluminum or brass; nominal size unless otherwise indicated.
 4. Case Form: Adjustable angle type unless otherwise indicated, 180 degrees in vertical plane, 360 degrees in horizontal plane, with locking device.
 5. Tube: Glass with magnifying lens and blue organic liquid.
 6. Tube Background: Satin faced, nonreflective aluminum with permanently etched scale markings graduated in deg F.
 7. Window: Glass.
 8. Stem: Copper-plated steel, aluminum, stainless steel, or brass designed for thermowell installation. Stem shall be of length to match thermowell insertion length.
- a. Design for Thermowell Installation: Bare stem.
9. Connector: 1-1/4 inches, with ASME B1.1 screw threads.
 10. Accuracy: Plus or minus 1 percent of scale range or one scale division, to a maximum of 1.5 percent of scale range.

2.2 THERMOWELLS

A. Thermowells:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. AMETEK, Inc.; U.S. Gauge Div.
 - b. Ashcroft Commercial Instrument Operations; Dresser Industries; Instrument Div.
 - c. Ernst Gage Co.
 - d. Marsh Bellofram.
 - e. Miljoco Corp.
 - f. NANMAC Corporation.
 - g. Noshok, Inc.
 - h. Palmer - Wahl Instruments Inc.
 - i. REO TEMP Instrument Corporation.
 - j. Tel-Tru Manufacturing Company.
 - k. Terice, H. O. Co.
 - l. Weiss Instruments, Inc.
 - m. Weksler
 - n. WIKA Instrument Corporation.
 - o. Winters Instruments.
2. Manufacturers: Same as manufacturer of thermometer being used.
3. Standard: ASME B40.200.
4. Description: Pressure-tight, socket-type fitting made for insertion into piping tee fitting.
5. Material for Use with Copper Tubing: Brass.
6. Material for Use with Steel Piping: Brass.
7. Type: Stepped shank unless straight or tapered shank is indicated.
8. External Threads: NPS 1/2, NPS 3/4, NPS 1 or NPS 1-1/4 ASME B1.20.1 pipe threads.
9. Internal Threads: 1/2, 3/4, and 1 inch with ASME B1.1 screw threads.
10. Bore: Diameter required to match thermometer bulb or stem.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

11. Insertion Length: Length required to match thermometer bulb or stem.
12. Lagging Extension: Include on thermowells for insulated piping and tubing.
13. Bushings: For converting size of thermowell's internal screw thread to size of thermometer connection.

B. Heat-Transfer Medium: Mixture of graphite and glycerin.

2.3 PRESSURE GAGES

A. Direct-Mounted, Metal-Case, Dial-Type Pressure Gages:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. AMETEK, Inc.; U.S. Gauge.
 - b. Ashcroft Inc.
 - c. Ernst Flow Industries.
 - d. KOBOLD Instruments, Inc.
 - e. Marsh Bellofram.
 - f. Miljoco Corporation.
 - g. Noshok.
 - h. Palmer Wahl Instrumentation Group.
 - i. REOTEMP Instrument Corporation.
 - j. Terice, H. O. Co.
 - k. Weiss Instruments, Inc.
 - l. Weksler
 - m. WIKA Instrument Corporation.
 - n. Winters Instruments - U.S.
2. Standard: ASME B40.100.
3. Case: Liquid-filled type; cast aluminum or drawn steel; 4-1/2-inch nominal diameter.
4. Pressure-Element Assembly: Bourdon tube unless otherwise indicated.
5. Pressure Connection: Brass, with ASME B1.20.1 pipe threads and bottom-outlet type unless back-outlet type is indicated. NPS 1/4 or NPS 1/2.
6. Movement: Mechanical, with link to pressure element and connection to pointer.
7. Dial: Satin faced, nonreflective aluminum with permanently etched scale markings graduated in psi.
8. Pointer: Dark-colored metal.
9. Window: Glass.
10. Ring: Stainless steel.
11. Accuracy: Grade A, plus or minus 1 percent of middle half of scale range.

B. Remote-Mounted, Metal-Case, Dial-Type Pressure Gages:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. AMETEK, Inc.; U.S. Gauge.
 - b. Ashcroft Inc.
 - c. Ernst Flow Industries.
 - d. KOBOLD Instruments, Inc.
 - e. Marsh Bellofram.
 - f. Miljoco Corporation.
 - g. Noshok.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- h. Palmer Wahl Instrumentation Group.
 - i. REOTEMP Instrument Corporation.
 - j. Terice, H. O. Co.
 - k. Weiss Instruments, Inc.
 - l. Weksler
 - m. WIKA Instrument Corporation.
 - n. Winters Instruments - U.S.
- 2. Standard: ASME B40.100.
 - 3. Case: Liquid-filled, cast aluminum or drawn steel; diameter with back flange for panel surface mounting or front flange for panel recessed mounting. Flanges to include pre-drilled screw holes.
 - 4. Pressure-Element Assembly: Bourdon tube unless otherwise indicated.
 - 5. Pressure Connection: Brass, with ASME B1.20.1 pipe threads and bottom-outlet type unless back-outlet type is indicated. NPS 1/4 or NPS 1/2.
 - 6. Movement: Mechanical, with link to pressure element and connection to pointer.
 - 7. Dial: Satin faced, nonreflective aluminum with permanently etched scale markings graduated in psi .
 - 8. Pointer: Dark-colored metal.
 - 9. Window: Glass.
 - 10. Ring: Stainless steel.
 - 11. Accuracy: Grade A, plus or minus 1 percent of middle half of scale range.

2.4 GAGE ATTACHMENTS

- A. Snubbers: ASME B40.100, brass; with ASME B1.20.1 pipe threads. Include extension for use on insulated piping. NPS 1/4 or NPS 1/2 .
 - 1. Surge-dampening device: porous-metal-type.
- B. Siphons:
 - 1. Loop-shaped section: Brass pipe with pipe threads. NPS 1/4 or NPS 1/2.
- C. Valves:
 - 1. Needle: Brass, with NPS 1/4 or NPS 1/2 ASME B1.20.1 pipe threads.

2.5 TEST PLUGS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. Flow Design, Inc.
 - 2. MG Piping Products Co.
 - 3. National Meter, Inc.
 - 4. Peterson Equipment Co., Inc.
 - 5. Sisco Manufacturing Company, Inc.
 - 6. Terice, H. O. Co.
 - 7. Twin City Hose.
 - 8. Watts Regulator Co.; a div. of Watts Water Technologies, Inc.
 - 9. Welsler.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- B. Description: Test-station fitting made for insertion into piping tee fitting.
- C. Body: Brass or stainless steel with core inserts and gasketed and threaded cap. Include extended stem on units to be installed in insulated piping.
- D. Thread Size: or , ASME B1.20.1 pipe thread.
- E. Minimum Pressure and Temperature Rating:
- F. Core Inserts: Self-sealing synthetic rubber;
 - 1. EPDM (Nordel) for air, water or glycol operation between 30 and 275 deg F.
 - 2. CR (Neoprene) for air, water, glycol, oil, or gas operation between -30 to 200 deg

2.6 TEST-PLUG KITS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. Flow Design, Inc.
 - 2. MG Piping Products Co.
 - 3. National Meter, Inc.
 - 4. Peterson Equipment Co., Inc.
 - 5. Sisco Manufacturing Company, Inc.
 - 6. Trerice, H. O. Co.
 - 7. Watts Regulator Co.; a div. of Watts Water Technologies, Inc.
 - 8. Weiss Instruments, Inc.
- B. Furnish the number of test-plug kits given below with the number of thermometers given below, with each kit having one pressure gage and adapter, and carrying case. Thermometer sensing elements, pressure gage, and adapter probes shall be of diameter to fit test plugs and of length to project into piping.
 - 1. Low-Range Thermometer: Small, bimetallic insertion type with 1- to 2-inch diameter dial and tapered-end sensing element. Dial range shall be at least 25 to 125 deg F .
 - 2. High-Range Thermometer: Small, bimetallic insertion type with 1- to 2-inch diameter dial and tapered-end sensing element. Dial range shall be at least 0 to 220 deg F .
 - 3. Pressure Gage: Small, Bourdon-tube insertion type with 2- to 3-inch diameter dial and probe. Dial range shall be at least to 200 psig.
 - 4. Carrying Case: Metal or plastic, with formed instrument padding.
 - 5. One test-plug kit with:
 - a. Two thermometers.

2.7 FLOWMETERS

- A. Orifice Flowmeters:
 - 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. ABB; Instrumentation and Analytical.
 - b. Armstrong Pumps Inc.; S. A. Armstrong Limited.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- c. Badger Meter, Inc.; Industrial Div.
 - d. Bell & Gossett; ITT Industries.
 - e. Meriam Process Technologies.
 - f. Spirax Sarco
- 2. Description: Flowmeter with sensor, hoses or tubing, quick connect hose fittings, valves, indicator, and conversion chart.
 - 3. Flow Range: Sensor and indicator shall cover operating range of equipment or system served.
 - 4. Sensor: Wafer-orifice-type, calibrated, flow-measuring element; for installation between pipe flanges.
 - a. Design: Differential-pressure-type measurement:
 - 1) For HVAC hot and chilled water.
 - b. Construction: Cast-iron body, brass valves with integral check valves and caps, and calibrated nameplate.
 - c. Minimum Pressure Rating: 300 psig.
 - d. Minimum Temperature Rating: 250 deg F.
 - 5. Portable Indicators: Hand-held, differential-pressure type, calibrated for connected sensor and having two 12-foot hoses, with carrying case.
 - a. Scale: Gallons per minute.
 - b. Accuracy: Plus or minus 2 percent between 20 and 80 percent of scale range.
 - 6. Conversion Chart: Flow rate data compatible with sensor and indicator.
 - 7. Operating Instructions: Include complete instructions with each flowmeter.
- B. Venturi Flowmeters:
- 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Armstrong Pump
 - b. Badger Meter, Inc.; Industrial Division
 - c. Bailey-Fischer & Porter Co.
 - d. Flow Design, Inc.
 - e. Gerand Engineering Co.
 - f. Hyspan Precision Products, Inc.
 - g. Leeds & Northrup.
 - h. McCrometer, Inc.
 - i. Preso Meters; a division of Racine Federated Inc.
 - j. Victaulic Company.
 - k. Spirax Sarco
 - 2. Description: Flowmeter with calibrated flow-measuring element, hoses or tubing, quick connect hose fittings, valves, indicator, and conversion chart.
 - 3. Flow Range: Sensor and indicator shall cover operating range of equipment or system served.
 - 4. Sensor: Venturi-type, calibrated, flow-measuring element; for installation in piping.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- a. Design: Differential-pressure-type measurement for water.
- b. Construction: Bronze, brass, or factory-primed steel, with brass fittings and attached tag with flow conversion data.
- c. Minimum Pressure Rating: 250 psig .
- d. Minimum Temperature Rating: 250 deg F .
- e. End Connections for NPS 2 and Smaller: Threaded.
- f. End Connections for NPS 2-1/2 and Larger: Flanged or welded.
- g. Flow Range: Flow-measuring element and flowmeter shall cover operating range of equipment or system served.

PART 3 - EXECUTION

3.1 INSTALLATION

- A. Install thermowells: with socket extending one-third of pipe diameter and in vertical position in piping tees.
- B. Install thermowells of sizes required to match thermometer connectors. Include bushings if required to match sizes.
- C. Install thermowells with extension on insulated piping.
- D. Fill thermowells with heat-transfer medium.
- E. Install direct-mounted thermometers in thermowells and adjust vertical and tilted positions to most readable position.
- F. Install direct-mounted pressure gages in piping tees with pressure gage located on pipe at the most readable position.
- G. Install needle-valve and snubber in piping for each pressure gage for fluids. Exception: Steam.
- H. Install test plugs in piping tees.
- I. Install thermometers in the following locations:
 - 1. Inlet and outlet of each hydronic boiler.
 - 2. Two inlets and two outlets of each chiller.
 - 3. Inlet and outlet of each hydronic coil in air-handling units.
 - 4. Two inlets and two outlets of each hydronic heat exchanger.
 - 5. Inlet and outlet of each thermal-storage tank.
 - 6. Inlet and outlet of each piece of steam equipment.
- J. Install pressure gages in the following locations:
 - 1. Inlet and discharge of each pressure-reducing valve.
 - 2. Inlet and outlet of each chiller chilled-water and condenser-water connection.
 - 3. Suction and discharge of each pump.

3.2 CONNECTIONS

- A. Install meters and gages adjacent to machines and equipment to allow service and

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

maintenance of meters, gages, machines, and equipment.

3.3 ADJUSTING

- A. Adjust faces of meters and gages to proper angle for best visibility.

3.4 THERMOMETER SCHEDULE

- A. Thermometers at inlet and outlet of each hydronic zone shall be one of the following:
 - 1. Test plug: With EPDM self-sealing rubber inserts.
- B. Thermometers at inlet and outlet of each hydronic coil in air-handling units and built-up central systems shall be one of the following:
 - 1. Industrial-style, liquid-in-glass type.
- C. Thermometers at inlet and outlet of each hydronic coil at fan coils, cabinet heaters, unit heaters and reheat coils and as shown on details shall be the following:
 - 1. Industrial-style, liquid-in-glass type.
 - 2. Test plug with CR self-sealing rubber inserts.
 - 3. Test plug with EPDM self-sealing rubber inserts.
- D. Thermometers at inlets and outlets of each hydronic heat exchanger shall be the one of following:
 - 1. Industrial-style, liquid-in-glass type.
- E. Thermometer stems shall be of length to match thermowell insertion length.

3.5 THERMOMETER SCALE-RANGE SCHEDULE

- A. Scale Range for Chilled-Water Piping: 0 to 100 deg F.
- B. Scale Range for Heating, Hot-Water Piping: 30 to 240 deg F.
- C. Scale Range for Air Ducts: Minus 40 to plus 110 deg F.

3.6 PRESSURE-GAGE SCHEDULE

- A. Pressure gages at inlet and discharge of each pressure-reducing valve shall be the one of following:
 - 1. Dry-case type, direct-mounted, metal case.
- B. Pressure gages at inlet and outlet of each chiller chilled-water and condenser-water connection shall be one of the following:
 - 1. Liquid-filled, direct-mounted, metal case.
- C. Pressure gages at suction and discharge of each pump shall be one of the following:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Liquid-filled, direct-mounted, metal case.

3.7 PRESSURE-GAGE SCALE-RANGE SCHEDULE

- A. Scale Range for Chilled-Water, Condenser-Water, Heating, Hot-Water, Steam and Condensate Piping shall be twice the normal operating pressure of the measured system with gage ranges as follows:
1. 30 in. Hg to 15 psi.
 2. 0 to 30 psi.
 3. 0 to 100 psi.
 4. 0 to 160 psi.
 5. 0 to 200 psi.
 6. 0 to 300 psi.
 7. 0 to 600 psi.

3.8 FLOWMETER SCHEDULE

- A. Flowmeters for Heating, Hot-Water Piping: Venturi type.

END OF SECTION 230519

BLANK PAGE

SECTION 230523

GENERAL-DUTY VALVES FOR HVAC PIPING

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Bronze ball valves.
 - 2. Iron, single-flange butterfly valves.
 - 3. Bronze lift check valves.
 - 4. Bronze swing check valves.
 - 5. Iron swing check valves.
 - 8. Bronze globe valves.
 - 9. Iron globe valves.
 - 10. Lubricated plug valves.
- B. Related Sections:
 - 1. Section 230553 "Identification for HVAC Piping and Equipment" for valve tags and schedules.

1.3 DEFINITIONS

- A. CWP: Cold working pressure.
- B. EPDM: Ethylene propylene copolymer rubber.
- C. NBR: Acrylonitrile-butadiene, Buna-N, or nitrile rubber.
- D. NRS: Nonrising stem.
- E. OS&Y: Outside screw and yoke.
- F. RS: Rising stem.
- G. SWP: Steam working pressure.

1.4 ACTION SUBMITTALS

- A. Product Data: For each type of valve indicated. Body material, valve design, pressure and temperature classification, end connection details, seating materials, trim material and

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

arrangement, dimensions and required clearances, and installation instructions. Include list indicating valve and its application.

- B. Maintenance data for valves to be included in the operation and maintenance data specified in Division 1. Include detailed manufacturer's instructions on adjusting, servicing, disassembling, and repairing.

1.5 QUALITY ASSURANCE

- A. Source Limitations for Valves: Obtain each type of valve as listed in SUMMARY from a single source and from a single manufacturer.
- B. Compliance:
 - 1. ASME B16.10 and ASME B16.34 for ferrous valve dimensions and design criteria.
 - 2. ASME B31.1 for power piping valves.
 - 3. ASME B31.9 for building services piping valves.
 - 4. MSS Compliance: Comply with the various MSS Standard Practice documents referenced.

1.6 DELIVERY, STORAGE, AND HANDLING

- A. Prepare valves for shipping as follows:
 - 1. Protect internal parts against rust and corrosion.
 - 2. Protect threads, flange faces, and weld ends.
 - 3. Set angle, and globe valves closed to prevent rattling.
 - 4. Set ball and plug valves open to minimize exposure of functional surfaces.
 - 5. Set butterfly valves closed or slightly open.
 - 6. Block check valves in either closed or open position.
- B. Use the following precautions during storage:
 - 1. Maintain valve end protection.
 - 2. Store valves indoors and maintain at higher than ambient dew point temperature. If outdoor storage is necessary, store valves off the ground in watertight enclosures.
- C. Use sling to handle large valves; rig sling to avoid damage to exposed parts. Do not use handwheels or stems as lifting or rigging points.

PART 2 - PRODUCTS

2.1 GENERAL REQUIREMENTS FOR VALVES

- A. Refer to HVAC valve schedule articles for applications of valves.
- B. Valve Pressure and Temperature Ratings: Not less than indicated and as required for system pressures and temperatures.
- C. Valve Sizes: Same as upstream piping unless otherwise indicated.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

D. Valve Actuator Types:

1. Gear Actuator: For quarter-turn valves NPS 8 and larger.
2. Handwheel: For valves other than quarter-turn types.
3. Handlever: For quarter-turn valves NPS 6 and smaller.
4. Wrench: For plug valves with square heads. Furnish Owner with 1 wrench for every 5 plug valves, for each size square plug-valve head.

E. Valves in Insulated Piping: With 2-inch stem extensions and the following features:

1. Ball Valves: With extended operating handle of non-thermal-conductive material, and protective sleeve that allows operation of valve without breaking the vapor seal or disturbing insulation.
2. Butterfly Valves: With extended neck.

F. Valve-End Connections:

1. Flanged: With flanges according to ASME B16.1 for iron valves.
2. Solder Joint: With sockets according to ASME B16.18.
 - a. Caution: Where soldered end connections are used, use solder having a melting point below 840 deg. For, globe, and check valves: below 421 deg. F for ball valves.
3. Threaded: With threads according to ASME B1.20.1.

G. Valve Bypass and Drain Connections: MSS SP-45.

2.2 MANUFACTURERS

A. Subject to compliance with requirements, provide products by one of the following:

1. APCO Willamette Valve and Primer Corp.
2. Babbitt Steam Specialty Company.
3. Bray Controls.
4. Center Line.
5. Cla-Val Company.
6. Conbraco Industries Inc.
7. Crane Co.; Crane Valve Group.
8. Fisher Valve by Emerson.
9. Flo Fab Inc.
10. Flow-Tek Inc.
11. Grinnell Corporation.
12. Hammond Valve.
13. Jamesbury; a subsidiary of Metso Automation.
14. Jomar International LTD.
15. Keystone Valve USA, Inc.
16. Kitz Corp.
17. Legend Valve.
18. Metraflex Company.
19. Milwaukee Valve Company.
20. Mueller Steam Specialty.
21. NIBCO Inc.
22. Red-White Valve Corp.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- 23. Spence Strainers International.
- 24. Stockham Valves and Fittings, Inc.
- 25. Tyco Fire/Shurjoint Piping Products.
- 26. Tyco/Pentair LTD.
- 27. Val-Matic Valve & Mfg. Corp.
- 28. Victaulic Company.
- 29. Watts Regulator Company.

2.4 BRONZE BALL VALVES

C. Two-Piece, Full-Port, Bronze Ball Valves with Bronze Trim:

- 1. Description:
 - a. Standard: MSS SP-110.
 - b. SWP Rating: 150 psig.
 - c. CWP Rating: 600 psig.
 - d. Body Design: Two piece.
 - e. Body Material: Bronze.
 - f. Ends: Threaded.
 - g. Seats: PTFE or TFE.
 - h. Stem: Bronze.
 - i. Ball: Chrome-plated brass.
 - j. Port: Full.

2.5 IRON, SINGLE-FLANGE BUTTERFLY VALVES

A. 150 CWP, Iron, Single-Flange (Lug) Butterfly Valves:

- 1. Description:
 - a. Standard: MSS SP-67, Type I.
 - b. CWP Rating: 150 psig.
 - c. Body Design: Lug type; suitable for bidirectional dead-end service at rated pressure without use of downstream flange.
 - d. Body Material: ASTM A 126, cast iron or ASTM A 536, ductile iron.
 - e. Seat: EPDM.
 - f. Stem: One- or two-piece stainless steel.
 - g. Disc: Nylon 11 coated ductile iron.

B. 175 CWP, Iron, Single-Flange (Lug) Butterfly Valves:

- 1. Description:
 - a. Standard: MSS SP-67, Type I.
 - b. CWP Rating: 175 psig.
 - c. Body Design: Lug type; suitable for bidirectional dead-end service at rated pressure without use of downstream flange.
 - d. Body Material: ASTM A 126, cast iron or ASTM A 536, ductile iron.
 - e. Seat: EPDM.
 - f. Stem: One- or two-piece stainless steel.
 - g. Disc: Nylon 11 coated ductile iron.

C. 200 CWP, Iron, Single-Flange Butterfly Valves with EPDM Seat and Nylon 11 coated ductile

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

Iron Disc:

1. Description:

- a. Standard: MSS SP-67, Type I.
- b. CWP Rating: 200 psig.
- c. Body Design: Lug type; suitable for bidirectional dead-end service at rated pressure without use of downstream flange.
- d. Body Material: ASTM A 126, cast iron or ASTM A 536, ductile iron.
- e. Seat: EPDM.
- f. Stem: One- or two-piece stainless steel.
- g. Disc: Nylon 11 coated ductile iron.

D. 250 CWP, Iron, Single-Flange Butterfly Valves with EPDM Seat and Nylon 11 coated ductile Iron Disc:

1. Description:

- a. Standard: MSS SP-67, Type I.
- b. CWP Rating: 250 psig.
- c. Body Design: Lug type; suitable for bidirectional dead-end service at rated pressure without use of downstream flange.
- d. Body Material: ASTM A 126, cast iron or ASTM A 536, ductile iron.
- e. Seat: EPDM.
- f. Stem: One- or two-piece stainless steel.
- g. Disc: Nylon 11 coated ductile iron.

2.6 BRONZE LIFT CHECK VALVES

A. Class 125, Lift Check Valve:

1. Description:

- a. Standard: MSS SP-80.
- b. CWP Rating: 200 psig.
- c. Body Design: Vertical flow.
- d. Body Material: ASTM B 61, ASTM B 62, bronze.
- e. Ends: Threaded.
- f. Disc: Bronze, Type 1.

2.7 BRONZE SWING CHECK VALVES

A. Class 150, Bronze Swing Check Valves with Bronze Disc:

1. Description:

- a. Standard: MSS SP-80, Type 3.
- b. CWP Rating: 300 psig.
- c. Body Design: Horizontal flow.
- d. Body Material: ASTM B 62, bronze.
- e. Ends: Threaded.
- f. Disc: Bronze.

2.8 IRON SWING CHECK VALVES

A. Class 125, Iron Swing Check Valves with Metal Seats:

1. Description:
 - a. Standard: MSS SP-71, Type I.
 - b. NPS 2-1/2 to NPS 12, CWP Rating: 200 psig.
 - c. Body Design: Clear or full waterway.
 - d. Body Material: ASTM A 126, gray iron with bolted bonnet.
 - e. Ends: Flanged.
 - f. Trim: Bronze.
 - g. Gasket: Asbestos free.

2.9 BRONZE GLOBE VALVES

A. Class 150, Bronze Globe Valves with Nonmetallic Disc:

1. Description:
 - a. Standard: MSS SP-80, Type 2.
 - b. CWP Rating: 300 psig.
 - c. Body Material: ASTM B 62, bronze with integral seat and union-ring bonnet.
 - d. Ends: Threaded.
 - e. Stem: Bronze.
 - f. Disc: PTFE or TFE.
 - g. Packing: Teflon impregnated, asbestos free.
 - h. Handwheel: Malleable iron.

2.10 IRON GLOBE VALVES

A. Class 125, Iron Globe Valves:

1. Description:
 - a. Standard: MSS SP-85, Type I.
 - b. CWP Rating: 200 psig.
 - c. Body Material: ASTM A 126, gray iron with bolted bonnet.
 - d. Ends: Flanged.
 - e. Stem: Brass alloy. OS & Y.
 - f. Disc: Renewable bronze seat.
 - g. Trim: Bronze.
 - h. Packing and Gasket: Teflon impregnated, asbestos free.
 - i. Handwheel: Cast iron

2.11 LUBRICATED PLUG VALVES

A. Class 125, Regular-Gland, Lubricated Plug Valves with Threaded Ends:

1. Description:

- a. Standard: MSS SP-78, Type II.
- b. NPS 2-1/2 to NPS 12, CWP Rating: 200 psig.
- c. Pattern: Regular or short.
- d. Body Material: ASTM A 48 or ASTM A 126, cast iron with lubrication-sealing system.
- e. Plug: Cast iron or bronze with sealant groove.

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine piping system for compliance with requirements for installation tolerances and other conditions affecting performance of valves. Do not proceed with installation until unsatisfactory conditions have been corrected.
- B. Examine valve interior for cleanliness, freedom from foreign matter, and corrosion. Remove special packing materials, such as blocks, used to prevent disc movement during shipping and handling.
- C. Operate valves in positions from fully open to fully closed. Examine guides and seats made accessible by such operations.
- D. Examine threads on valve and mating pipe for form and cleanliness.
- E. Examine mating flange faces for conditions that might cause leakage. Check bolting for proper size, length, and material. Verify that gasket is of proper size, that its material composition is suitable for service, and that it is free from defects and damage.
- F. Do not attempt to repair defective valves; replace with new valves.

3.2 VALVE INSTALLATION

- A. Install valves as indicated, according to manufacturer's written instructions.
- B. Piping installation requirements are specified in other Division 23 Sections. Drawings indicate the general arrangement of piping, fittings, and specialties.
- C. Install valves with unions or flanges at each piece of equipment arranged to allow service, maintenance, and equipment removal without system shutdown.
- D. Locate valves for easy access and provide separate support where necessary.
- E. Install valves in horizontal piping with stem at or above center of pipe.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- F. Install valves in position to allow full stem movement.
- G. Install check valves for proper direction of flow and as follows:
 - 1. Swing Check Valves: In horizontal position with hinge pin level.
 - 2. Check Valves: In horizontal or vertical position, between flanges.
 - 3. Lift Check Valves: With stem upright and plumb.
 - 4. Install all check valves a minimum of five pipe diameters downstream of pump discharge or elbow to avoid flow turbulence. In extreme cases add flow straighteners as required to correct the turbulence.

3.3 ADJUSTING

- A. Adjust or replace valve packing after piping systems have been tested and put into service but before final adjusting and balancing. Replace valves if persistent leaking occurs.

3.4 GENERAL REQUIREMENTS FOR VALVE APPLICATIONS

- A. If valve applications are not indicated, use the following:
 - 1. Shutoff Service: Ball or butterfly valves.
 - 2. Butterfly Valve Dead-End Service: Single-flange (lug) type.
 - 3. Throttling Service except Steam: Globe valves.
 - 4. Throttling Service, Steam: Globe valves.
 - 5. Pump-Discharge Check Valves:
 - a. NPS 2 and Smaller: Bronze swing check valves with bronze disc.
 - b. NPS 2-1/2 and Larger: Iron swing check valves with lever and weight or with spring or iron, metal-seat check valves.
 - 6. Drain Service (except Steam): Two-Piece, Full Port Bronze Ball Valves with Bronze Trim. To be installed with NPS $\frac{3}{4}$ hose thread outlet and hose cap with chain.
- B. If valves with specified SWP classes or CWP ratings are not available, the same types of valves with higher SWP classes or CWP ratings may be substituted.
- C. Select valves, except wafer types, with the following end connections:
 - 1. For Copper Tubing, NPS 2 and Smaller: Threaded ends except where solder-joint valve-end option is indicated in valve schedules below.
 - 2. For Copper Tubing, NPS 2-1/2 to NPS 4: Flanged ends except where threaded valve-end option is indicated in valve schedules below.
 - 3. For Copper Tubing, NPS 5 and Larger: Flanged ends.
 - 4. For Steel Piping, NPS 2 and Smaller: Threaded ends.
 - 5. For Steel Piping, NPS 2-1/2 to NPS 4: Flanged ends except where threaded valve-end option is indicated in valve schedules below.
 - 6. For Steel Piping, NPS 5 and Larger: Flanged ends.

3.5 CHILLED-WATER VALVE SCHEDULE

A. Pipe NPS 2 and Smaller:

1. Bronze Valves: May be provided with solder-joint ends instead of threaded ends.
3. Ball Valves:
 - a. Piece: Two
 - b. Port: Full.
 - c. Material/Trim: Bronze with:
 - 1) Bronze trim.
4. Bronze Swing Check Valves:
 - a. Class 150
 - b. Bronze disc.
6. Bronze Globe Valves:
 - a. Class 125
 - b. Bronze disc.

B. Pipe NPS 2-1/2 and Larger:

1. Iron Valves, NPS 2-1/2 to NPS 4: May be provided with threaded ends instead of flanged ends.
2. Iron, Single-Flange Butterfly Valves, NPS 2-1/2 to NPS 12:
 - a. 200 CWP,
 - b. Seat: EPDM.
 - c. Disc: Ductile-iron.
3. Iron Swing Check Valves: Class 125, metal seats.
4. Iron Globe Valves: Class 125.
5. Lubricated Plug Valves: Class 125, regular gland, flanged.

3.6 HEATING-WATER VALVE SCHEDULE

A. Pipe NPS 2 and Smaller:

1. Bronze Valves: May be provided with solder-joint ends instead of threaded ends.
3. Ball Valves:
 - a. Piece: Two
 - b. Port: Full.
 - c. Material/Trim: Bronze with:
 - 1) Bronze trim.
4. Bronze Swing Check Valves:
 - a. Class 150
 - b. Bronze disc.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- 6. Bronze Globe Valves:
 - a. Class 125
 - b. Bronze disc.
- B. Pipe NPS 2-1/2 and Larger:
 - 1. Iron Valves, NPS 2-1/2 to NPS 4: May be provided with threaded ends instead of flanged ends.
 - 2. Iron, Single-Flange Butterfly Valves, NPS 2-1/2 to NPS 12:
 - a. 200 CWP,
 - b. Seat: EPDM.
 - c. Disc: Ductile-iron.
 - 3. Iron Swing Check Valves: Class 125, metal seats.
 - 4. Iron Globe Valves: Class 125.

END OF SECTION 230523

SECTION 230529

HANGERS AND SUPPORTS FOR HVAC PIPING AND EQUIPMENT

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Metal pipe hangers and supports.
 - 2. Trapeze pipe hangers.
 - 3. Metal framing systems.
- B. Related Sections:
 - 1. Division 05 for structural-steel shapes and plates for trapeze hangers for pipe and equipment supports.
 - 2. Section 230516 "Expansion Fittings and Loops for HVAC Piping" for pipe guides and anchors.
 - 3. Section 230548 "Vibration and Seismic Controls for HVAC" for vibration isolation devices.
 - 4. Section 233113 "Metal Ducts" for duct hangers and supports.

1.3 DEFINITIONS

- A. MSS: Manufacturers Standardization Society of The Valve and Fittings Industry Inc.

1.4 PERFORMANCE REQUIREMENTS

- A. Structural Performance: Hangers and supports for HVAC piping and equipment shall withstand the effects of gravity loads and stresses within limits and under conditions indicated according to ASCE/SEI 7.
 - 1. Design supports for multiple pipes, including pipe stands, capable of supporting combined weight of supported systems, system contents, and test water.
 - 2. Design equipment supports capable of supporting combined operating weight of supported equipment and connected systems and components.

1.5 ACTION SUBMITTALS

- A. Product Data: For each type of product indicated.
- B. Shop Drawings: Signed and sealed by a qualified professional engineer. Show fabrication and installation details and include calculations for the following; include Product Data for

components:

1. Trapeze pipe hangers.
2. Metal framing systems.

1.6 INFORMATIONAL SUBMITTALS

- A. Welding certificates.

PART 2 - PRODUCTS

2.1 METAL PIPE HANGERS AND SUPPORTS

- A. Carbon-Steel Pipe Hangers and Supports:
 1. Description: MSS SP-58, Types 1 through 58, factory-fabricated components.
 2. Galvanized Metallic Coatings: Pregalvanized or hot dipped.
 3. Nonmetallic Coatings: Plastic coating, jacket, or liner.
 4. Padded Hangers: Hanger with fiberglass or other pipe insulation pad or cushion to support bearing surface of piping.
 5. Hanger Rods: Continuous-thread rod, nuts, and washer made of carbon steel.

2.2 TRAPEZE PIPE HANGERS

- A. Description: MSS SP-69, Type 59, shop- or field-fabricated pipe-support assembly made from structural carbon-steel shapes with MSS SP-58 carbon-steel hanger rods, nuts, saddles, and U-bolts.

2.3 METAL FRAMING SYSTEMS

- A. MFMA Manufacturer Metal Framing Systems:
 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Anvil International.
 - b. Cooper B-Line, Inc.; a division of Cooper Industries.
 - c. ERICO/Michigan Hanger Co. ; ERISTRUT Div.
 - d. FNW/Ferguson Enterprises
 - e. GS Metals Corp.
 - f. Hilti, Inc.insert manufacturer's name.
 - g. Power-Strut Div. Tyco International.
 - h. Thomas & Betts Corporation.
 - i. Tolco Inc.
 - j. Unistrut; an Atkore International company.
 2. Description: Shop- or field-fabricated pipe-support assembly for supporting multiple parallel pipes.
 3. Standard: MFMA-4.
 4. Channels: Continuous slotted steel channel with inturned lips.
 5. Channel Nuts: Formed or stamped steel nuts or other devices designed to fit into

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

channel slot and, when tightened, prevent slipping along channel.

6. Hanger Rods: Continuous-thread rod, nuts, and washer made of carbon steel.
7. Metallic Coating:
 - a. Electroplated zinc.

B. Non-MFMA Manufacturer Metal Framing Systems:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Anvil International; a subsidiary of Mueller Water Products, Inc.
 - b. Empire Industries, Inc.
 - c. ERICO International Corporation.
 - d. FNW/Ferguson Enterprises
 - e. Haydon Corporation.
 - f. NIBCO INC.
 - g. PHD Manufacturing, Inc.
 - h. PHS Industries, Inc.
2. Description: Shop- or field-fabricated pipe-support assembly made of steel channels, accessories, fittings, and other components for supporting multiple parallel pipes.
3. Standard: Comply with MFMA-4.
4. Channels: Continuous slotted steel channel with inturned lips.
5. Channel Nuts: Formed or stamped steel nuts or other devices designed to fit into channel slot and, when tightened, prevent slipping along channel.
6. Hanger Rods: Continuous-thread rod, nuts, and washer made of carbon steel.
7. Coating:
 - a. Zinc.

2.4 THERMAL-HANGER SHIELD INSERTS

- A. Manufacturers:** Subject to compliance with requirements, provide products by one of the following:
1. Carpenter & Paterson, Inc.
 2. Clement Support Services.
 3. ERICO International Corporation.
 4. National Pipe Hanger Corporation.
 5. PHS Industries, Inc.
 6. Pipe Shields Inc.
 7. Piping Technology & Products, Inc.
 8. Rilco Manufacturing Co., Inc.
 9. Value Engineered Products, Inc.
- B. Insulation-Insert Material for Cold Piping:**
1. Water-repellent treated, ASTM C 533, Type I calcium silicate with 100-psig minimum compressive strength.
- C. Insulation-Insert Material for Hot Piping:**
1. Water-repellent treated, ASTM C 533, Type I calcium silicate with 100-psig minimum

compressive strength.

- D. For Trapeze or Clamped Systems: Insert and shield shall cover entire circumference of pipe.
- E. For Clevis or Band Hangers: Insert and shield shall cover lower 180 degrees of pipe.
- F. Insert Length: Extend 2 inches beyond sheet metal shield for piping operating below ambient air temperature.

2.5 FASTENER SYSTEMS

- A. Powder-Actuated Fasteners: Threaded-steel stud, for use in hardened portland cement concrete with pull-out, tension, and shear capacities appropriate for supported loads and building materials where used.
- B. Mechanical-Expansion Anchors: Insert-wedge-type, [zinc-coated] [stainless-] steel anchors, for use in hardened portland cement concrete; with pull-out, tension, and shear capacities appropriate for supported loads and building materials where used.

2.6 MISCELLANEOUS MATERIALS

- A. Structural Steel: ASTM A 36, carbon-steel plates, shapes, and bars; black and galvanized.
- B. Grout: ASTM C 1107, factory-mixed and -packaged, dry, hydraulic-cement, nonshrink and nonmetallic grout; suitable for interior and exterior applications.
 - 1. Properties: Nonstaining, noncorrosive, and nongaseous.
 - 2. Design Mix: 5000-psi, 28-day compressive strength.

PART 3 - EXECUTION

3.1 HANGER AND SUPPORT INSTALLATION

- A. Comply with SEI/ASCE 7 and with requirements for seismic-restraint devices in Section 230548 "Vibration and Seismic Controls for HVAC."
- B. Metal Pipe-Hanger Installation: Comply with MSS SP-69 and MSS SP-89. Install hangers, supports, clamps, and attachments as required to properly support piping from the building structure.
- C. Metal Trapeze Pipe-Hanger Installation: Comply with MSS SP-69 and MSS SP-89. Arrange for grouping of parallel runs of horizontal piping, and support together on field-fabricated trapeze pipe hangers.
 - 1. Pipes of Various Sizes: Support together and space trapezes for smallest pipe size or install intermediate supports for smaller diameter pipes as specified for individual pipe hangers.
 - 2. Field fabricate from ASTM A 36, carbon-steel shapes selected for loads being supported. Weld steel according to AWS D1.1.
- D. Metal Framing System Installation: Arrange for grouping of parallel runs of piping, and support

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

together on field-assembled metal framing systems.

- E. Install hangers and supports complete with necessary attachments, inserts, bolts, rods, nuts, washers, and other accessories.
- F. Install hangers and supports to allow controlled thermal and seismic movement of piping systems, to permit freedom of movement between pipe anchors, and to facilitate action of expansion joints, expansion loops, expansion bends, and similar units.
- G. Install lateral bracing with pipe hangers and supports to prevent swaying.
- H. Install building attachments within concrete slabs or attach to structural steel. Install additional attachments at concentrated loads, including valves, flanges, and strainers, NPS 2-1/2 and larger and at changes in direction of piping. Install concrete inserts before concrete is placed; fasten inserts to forms and install reinforcing bars through openings at top of inserts.
- I. Load Distribution: Install hangers and supports so that piping live and dead loads and stresses from movement will not be transmitted to connected equipment.
- J. Pipe Slopes: Install hangers and supports to provide indicated pipe slopes and to not exceed maximum pipe deflections allowed by ASME B31.9 for building services piping.
- K. Insulated Piping:
 - 1. Attach clamps and spacers to piping.
 - a. Piping Operating above Ambient Air Temperature: Clamp may project through insulation.
 - b. Piping Operating below Ambient Air Temperature: Use thermal-hanger shield insert with clamp sized to match OD of insert.
 - c. Do not exceed pipe stress limits allowed by ASME B31.9 for building services piping.
 - 2. Install MSS SP-58, Type 39, protection saddles if insulation without vapor barrier is indicated. Fill interior voids with insulation that matches adjoining insulation.
 - a. Option: Thermal-hanger shield inserts may be used. Include steel weight-distribution plate for pipe NPS 4 and larger if pipe is installed on rollers.
 - 3. Install MSS SP-58, Type 40, protective shields on cold piping with vapor barrier. Shields shall span an arc of 180 degrees.
 - a. Option: Thermal-hanger shield inserts may be used. Include steel weight-distribution plate for pipe NPS 4 and larger if pipe is installed on rollers.
 - 4. Shield Dimensions for Pipe: Not less than the following:
 - a. NPS 1/4 to NPS 3-1/2: 12 inches long and 0.048 inch thick.
 - b. NPS 4: 12 inches long and 0.06 inch thick.
 - c. NPS 5 and NPS 6: 18 inches long and 0.06 inch thick.
 - d. NPS 8 to NPS 14: 24 inches long and 0.075 inch thick.
 - e. NPS 16 to NPS 24: 24 inches long and 0.105 inch thick.
 - 5. Pipes NPS 8 and Larger: Include wood or reinforced calcium-silicate-insulation inserts of

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- length at least as long as protective shield.
6. Thermal-Hanger Shields: Install with insulation same thickness as piping insulation.

3.2 METAL FABRICATIONS

- A. Cut, drill, and fit miscellaneous metal fabrications for trapeze pipe hangers.
- B. Fit exposed connections together to form hairline joints. Field weld connections that cannot be shop welded because of shipping size limitations.
- C. Field Welding: Comply with AWS D1.1/D1.1M procedures for shielded, metal arc welding; appearance and quality of welds; and methods used in correcting welding work; and with the following:
 - 1. Use materials and methods that minimize distortion and develop strength and corrosion resistance of base metals.
 - 2. Obtain fusion without undercut or overlap.
 - 3. Remove welding flux immediately.
 - 4. Finish welds at exposed connections so no roughness shows after finishing and so contours of welded surfaces match adjacent contours.

3.3 ADJUSTING

- A. Hanger Adjustments: Adjust hangers to distribute loads equally on attachments and to achieve indicated slope of pipe.
- B. Trim excess length of continuous-thread hanger and support rods to 1-1/2 inches.

3.4 PAINTING

- A. Touchup: Cleaning and touchup painting of field welds, bolted connections, and abraded areas of shop paint on miscellaneous metal are specified in Division 09.
- B. Galvanized Surfaces: Clean welds, bolted connections, and abraded areas and apply galvanizing-repair paint to comply with ASTM A 780.

3.5 HANGER AND SUPPORT SCHEDULE

- A. Specific hanger and support requirements are in Sections specifying piping systems and equipment.
- B. Comply with MSS SP-69 for pipe-hanger selections and applications that are not specified in piping system Sections.
- C. Use hangers and supports with galvanized metallic coatings for piping and equipment that will not have field-applied finish.
- D. Use nonmetallic coatings on attachments for electrolytic protection where attachments are in direct contact with copper tubing.
- E. Use carbon-steel pipe hangers and supports and attachments for general service applications.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- F. Use padded hangers for piping that is subject to scratching.
- G. Use thermal-hanger shield inserts for insulated piping and tubing.
- H. Horizontal-Piping Hangers and Supports: Unless otherwise indicated and except as specified in piping system Sections, install the following types:
 - 1. Adjustable, Steel Clevis Hangers (MSS Type 1): For suspension of noninsulated or insulated, stationary pipes NPS 1/2 to NPS 30.
 - 2. Yoke-Type Pipe Clamps (MSS Type 2): For suspension of up to 1050 deg F, pipes NPS 4 to NPS 24, requiring up to 4 inches of insulation.
 - 3. Carbon- or Alloy-Steel, Double-Bolt Pipe Clamps (MSS Type 3): For suspension of pipes NPS 3/4 to NPS 36, requiring clamp flexibility and up to 4 inches of insulation.
 - 4. Steel Pipe Clamps (MSS Type 4): For suspension of cold and hot pipes NPS 1/2 to NPS 24 if little or no insulation is required.
 - 5. Pipe Hangers (MSS Type 5): For suspension of pipes NPS 1/2 to NPS 4, to allow off-center closure for hanger installation before pipe erection.
 - 6. Adjustable, Swivel Split- or Solid-Ring Hangers (MSS Type 6): For suspension of noninsulated, stationary pipes NPS 3/4 to NPS 8.
 - 7. Adjustable, Steel Band Hangers (MSS Type 7): For suspension of noninsulated, stationary pipes NPS 1/2 to NPS 8.
 - 8. Adjustable Band Hangers (MSS Type 9): For suspension of noninsulated, stationary pipes NPS 1/2 to NPS 8.
 - 9. Adjustable, Swivel-Ring Band Hangers (MSS Type 10): For suspension of noninsulated, stationary pipes NPS 1/2 to NPS 8.
 - 10. Split Pipe Ring with or without Turnbuckle Hangers (MSS Type 11): For suspension of noninsulated, stationary pipes NPS 3/8 to NPS 8.
 - 11. Extension Hinged or Two-Bolt Split Pipe Clamps (MSS Type 12): For suspension of noninsulated, stationary pipes NPS 3/8 to NPS 3.
 - 12. U-Bolts (MSS Type 24): For support of heavy pipes NPS 1/2 to NPS 30.
 - 13. Clips (MSS Type 26): For support of insulated pipes not subject to expansion or contraction.
 - 14. Pipe Saddle Supports (MSS Type 36): For support of pipes NPS 4 to NPS 36, with steel-pipe base stanchion support and cast-iron floor flange or carbon-steel plate.
 - 15. Pipe Stanchion Saddles (MSS Type 37): For support of pipes NPS 4 to NPS 36, with steel-pipe base stanchion support and cast-iron floor flange or carbon-steel plate, and with U-bolt to retain pipe.
 - 16. Adjustable Pipe Saddle Supports (MSS Type 38): For stanchion-type support for pipes NPS 2-1/2 to NPS 36 if vertical adjustment is required, with steel-pipe base stanchion support and cast-iron floor flange.
 - 17. Single-Pipe Rolls (MSS Type 41): For suspension of pipes NPS 1 to NPS 30, from two rods if longitudinal movement caused by expansion and contraction might occur.
 - 18. Adjustable Roller Hangers (MSS Type 43): For suspension of pipes NPS 2-1/2 to NPS 24, from single rod if horizontal movement caused by expansion and contraction might occur.
 - 19. Complete Pipe Rolls (MSS Type 44): For support of pipes NPS 2 to NPS 42 if longitudinal movement caused by expansion and contraction might occur but vertical adjustment is not necessary.
 - 20. Pipe Roll and Plate Units (MSS Type 45): For support of pipes NPS 2 to NPS 24 if small horizontal movement caused by expansion and contraction might occur and vertical adjustment is not necessary.
 - 21. Adjustable Pipe Roll and Base Units (MSS Type 46): For support of pipes NPS 2 to NPS 30 if vertical and lateral adjustment during installation might be required in addition to expansion and contraction.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- I. Vertical-Piping Clamps: Unless otherwise indicated and except as specified in piping system Sections, install the following types:
 - 1. Extension Pipe or Riser Clamps (MSS Type 8): For support of pipe risers NPS 3/4 to NPS 24.
 - 2. Carbon- or Alloy-Steel Riser Clamps (MSS Type 42): For support of pipe risers NPS 3/4 to NPS 24 if longer ends are required for riser clamps.
- J. Hanger-Rod Attachments: Unless otherwise indicated and except as specified in piping system Sections, install the following types:
 - 1. Steel Turnbuckles (MSS Type 13): For adjustment up to 6 inches for heavy loads.
 - 2. Steel Clevises (MSS Type 14): For 120 to 450 deg F piping installations.
 - 3. Swivel Turnbuckles (MSS Type 15): For use with MSS Type 11, split pipe rings.
 - 4. Malleable-Iron Sockets (MSS Type 16): For attaching hanger rods to various types of building attachments.
 - 5. Steel Weldless Eye Nuts (MSS Type 17): For 120 to 450 deg F piping installations.
- K. Building Attachments: Unless otherwise indicated and except as specified in piping system Sections, install the following types:
 - 1. Steel or Malleable Concrete Inserts (MSS Type 18): For upper attachment to suspend pipe hangers from concrete ceiling.
 - 2. Top-Beam C-Clamps (MSS Type 19): For use under roof installations with bar-joint construction, to attach to top flange of structural shape.
 - 3. Side-Beam or Channel Clamps (MSS Type 20): For attaching to bottom flange of beams, channels, or angles.
 - 4. Center-Beam Clamps (MSS Type 21): For attaching to center of bottom flange of beams.
 - 5. Welded Beam Attachments (MSS Type 22): For attaching to bottom of beams if loads are considerable and rod sizes are large.
 - 6. C-Clamps (MSS Type 23): For structural shapes.
 - 7. Top-Beam Clamps (MSS Type 25): For top of beams if hanger rod is required tangent to flange edge.
 - 8. Side-Beam Clamps (MSS Type 27): For bottom of steel I-beams.
 - 9. Steel-Beam Clamps with Eye Nuts (MSS Type 28): For attaching to bottom of steel I-beams for heavy loads.
 - 10. Linked-Steel Clamps with Eye Nuts (MSS Type 29): For attaching to bottom of steel I-beams for heavy loads, with link extensions.
 - 11. Malleable-Beam Clamps with Extension Pieces (MSS Type 30): For attaching to structural steel.
 - 12. Welded-Steel Brackets: For support of pipes from below or for suspending from above by using clip and rod. Use one of the following for indicated loads:
 - a. Light (MSS Type 31): 750 lb.
 - b. Medium (MSS Type 32): 1500 lb.
 - c. Heavy (MSS Type 33): 3000 lb.
 - 13. Side-Beam Brackets (MSS Type 34): For sides of steel or wooden beams.
 - 14. Plate Lugs (MSS Type 57): For attaching to steel beams if flexibility at beam is required.
 - 15. Horizontal Travelers (MSS Type 58): For supporting piping systems subject to linear horizontal movement where headroom is limited.
- L. Saddles and Shields: Unless otherwise indicated and except as specified in piping system Sections, install the following types:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Steel-Pipe-Covering Protection Saddles (MSS Type 39): To fill interior voids with insulation that matches adjoining insulation.
 2. Protection Shields (MSS Type 40): Of length recommended in writing by manufacturer to prevent crushing insulation.
 3. Thermal-Hanger Shield Inserts: For supporting insulated pipe.
- M. Spring Hangers and Supports: Unless otherwise indicated and except as specified in piping system Sections, install the following types:
1. Restraint-Control Devices (MSS Type 47): Where indicated to control piping movement.
 2. Spring Cushions (MSS Type 48): For light loads if vertical movement does not exceed 1-1/4 inches.
 3. Spring-Cushion Roll Hangers (MSS Type 49): For equipping Type 41, roll hanger with springs.
 4. Spring Sway Braces (MSS Type 50): To retard sway, shock, vibration, or thermal expansion in piping systems.
 5. Variable-Spring Hangers (MSS Type 51): Preset to indicated load and limit variability factor to 25 percent to allow expansion and contraction of piping system from hanger.
 6. Variable-Spring Base Supports (MSS Type 52): Preset to indicated load and limit variability factor to 25 percent to allow expansion and contraction of piping system from base support.
 7. Variable-Spring Trapeze Hangers (MSS Type 53): Preset to indicated load and limit variability factor to 25 percent to allow expansion and contraction of piping system from trapeze support.
 8. Constant Supports: For critical piping stress and if necessary to avoid transfer of stress from one support to another support, critical terminal, or connected equipment. Include auxiliary stops for erection, hydrostatic test, and load-adjustment capability. These supports include the following types:
 - a. Horizontal (MSS Type 54): Mounted horizontally.
 - b. Vertical (MSS Type 55): Mounted vertically.
 - c. Trapeze (MSS Type 56): Two vertical-type supports and one trapeze member.
- N. Comply with MSS SP-69 for trapeze pipe-hanger selections and applications that are not specified in piping system Sections.
- O. Comply with MFMA-103 for metal framing system selections and applications that are not specified in piping system Sections.
- P. Use powder-actuated fasteners or mechanical-expansion anchors instead of building attachments where required in concrete construction.

END OF SECTION 230529

SECTION 230548

VIBRATION ISOLATION AND SEISMIC RESTRAINT

All isolation materials, flexible connectors and seismic restraints shall be of the same vendor and shall be selected and certified using published or factory certified data. Any variance or non-compliance with these specification requirements shall be corrected by the contractor in an approved manner.

PART 1 - SEISMIC DESIGN

1.1 DESCRIPTION

- A. The work in this section consists of furnishing engineering and materials necessary for the required seismic design of supports and attachments for systems and equipment contained herein for the project.
- B. Other sections of DIVISION 22 & 23 form a part of this section. Refer to all sections for a complete description of the work.
- C. Unless otherwise specified, all mechanical, electrical, fire protection and plumbing equipment, pipe, and duct shall be restrained to resist seismic forces. Restraints shall maintain equipment, piping, and duct work in a captive position.
- D. The 2012 IBC/ASCE 7 requires that mechanical & electrical components be assigned a component importance factor. This importance factor is used to determine which equipment may or may not be exempt from seismic design force requirements. The component importance factor is determined as follows:
 - 1. $I_p = 1.5$
 - a. Life-safety component is required to function after an earthquake.
- E. SEE PROJECT DOCUMENTS FOR COMPONENT AND SYSTEM I_p 's AND ALL OTHER DESIGN INFORMATION.

1.2 GENERAL SEISMIC DESIGN REQUIREMENTS:

- A. Per IBC 1613.1, the seismic restraint of nonstructural components shall meet the requirements of ASCE 7. If the component in question is exempted by Section 13.1.4 of ASCE 7, a submittal noting that seismic restraint of that particular component is not required.
- B. The seismic restraint design must meet the requirements listed in Table 13.2-1 of ASCE 7. These requirements may be met by providing a project-specific design prepared by a registered design professional in the state where the project is being constructed, and a manufacturer's certification that the component is seismically qualified.
- C. On projects with Seismic Design Category C:
 - 1. Pipe: Where pipe $I_p > 1.0$, brace all pipe > 2" diameter.
 - 2. Equipment: Where equipment $I_p > 1.0$, provide anchorage or restraint design for all floor, wall mounted or suspended equipment.
- D. On projects with Seismic Design Category D:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Seismic anchorage design is not required for floor mounted mechanical, electrical, and plumbing components where $I_p = 1.0$ and flexible connections between the components and associated duct work, piping and conduit are provided, the components are mounted at 4 feet (1219 mm) or less above a floor level and they weigh 400 pounds (1780 N) or less.
- E. Seismic anchorage or bracing is not required for hanging, wall mounted, and flexibly supported mechanical, plumbing and electrical components that weigh 20 pounds (89 N) or less, where $I_p = 1.0$ and flexible connections are provided between the components and associated duct work, piping and conduit.
- F. Where equipment $I_p > 1.0$, provide anchorage or restraint design for all floor, wall mounted or suspended equipment.
- G. Duct:
 1. Where duct $I_p > 1.0$, brace all duct $> 5 \text{ lb/lf}$
- H. Pipe:
 1. Where pipe $I_p > 1.0$, brace all pipe $> 1"$ diameter.
- I. Regardless of Seismic Design Category:
 1. Seismic restraints are not required on piping supported by individual clevis hangers where the distance, as measured from the top of the pipe to the supporting structure, is less than 12 inches (305mm) for the entire pipe run and the pipe can accommodate the expected deflections. Trapeze or double rod hangers, where the distance from the top of the trapeze or support to the structure is less than 12 inches for the entire run. HVAC ducts suspended from hangers that are 12 inches (305 mm) or less in length from the top of the duct to the supporting structure and the hangers are detailed to avoid significant bending of the hangers and their connections. Duct must be positively attached to hanger with minimum #10 screws within 2" from the top of the duct. Hanger rods shall not be constructed in a manner that would subject the rod to bending moments (swivel, eye bolt, or vibration isolation hanger connection to structure are required to prevent bending moments when utilizing this exclusion). Displacement of the component shall not cause damaging impact with other utilities or the structure. Flexible connections are required between unbraced systems and equipment to accommodate differential displacements. Where HVAC systems $I_p > 1.0$, this exclusion shall not apply (per ASCE 7, 13.6.7).
- J. Brace spacing for low deformability piping and duct (e.g., cast iron, PVC, fiberglass, glass, etc.) shall not exceed one half of the brace spacing of high deformability piping or duct.
- K. Wherever systems or components are vibration isolated, seismic restraints must be designed to prevent short circuiting of the isolation systems.
- L. ANCHORAGE REQUIREMENTS:
 1. All post installed anchors utilized in the seismic design must be qualified for use in cracked concrete and approved for use with seismic loads.
 2. Expansion anchors shall not be used for anchorage of equipment with motors rated over 10hp with the exception of undercut expansion anchors. Spring or internally isolated equipment are exempt from this requirement.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

3. All beam clamps utilized for vertical support must also incorporate retention straps.
 4. All seismic brace arm anchorages to include concrete anchors, beam clamps, truss connections, etc., must be approved for use with seismic loads.
 5. Calculations and restraint device submittal drawings shall specify anchor bolt type, embedment, concrete compressive strength, minimum spacing between anchors, and minimum distances of anchors from concrete edges. Concrete anchor locations shall not be near edges, stress joints, or an existing fracture. All bolts shall be ASTM A307 or better.
 6. Gravity supports must be designed by a licensed engineer in the project state for systems subject to seismic requirements as listed above. Gravity supports include primary support and anchorage of all distributed systems, riser supports, and supports for floor mounted utilities. Design is to include seismic loads in conjunction with dead loads as required by the IBC/ASCE 7.
- M. See Part 2 for additional seismic restraint requirements associated with vibration isolated systems and components.

1.3 MANUFACTURER'S RESPONSIBILITIES

- A. The following seismic restraint manufacturers are accepted: International Seismic Application Technology (ISAT), Amber / Booth, Mason Industries Inc. (M.I.), Kinetics Noise Control Inc. (K.N.C.), Vibration Mounting & Controls, Inc. (V.M.C.) and Vibro Acoustics.
- B. Determine vibration isolation and seismic restraint sizes and locations.
- C. Provide installation instructions and shop drawings for all materials supplied under this section of the specifications.
- D. Provide calculations to determine restraint loads resulting from seismic forces presented in local building code or IBC, Chapter 16 latest edition. Seismic calculations shall be certified by the manufacturers engineer licensed in the state of Utah.
- E. Seismic restraint load ratings must be certified and substantiated by testing or calculations under direct control of a registered professional engineer. Copies of testing and calculations must be submitted as part of submittal documents. OSHPD pre-approved restraint systems are exempt from this requirement if their pre-approval is current and based upon the IBC 2012 (i.e. OPA-07 pre-approval numbers).

1.4 QUALITY CONTROL

- A. All seismic restraint components exposed to the weather shall be zinc or cadmium-plated, epoxy coat or PVC coated, and/or galvanized steel. Nuts, bolts and washers may be zinc-electroplated. Restraints for outdoor mounted components shall provide adequate restraint for the greater of either wind or seismic loads required by local codes or withstand a minimum of 30 lb. / sq. ft. applied to any exposed surface of the equipment.
- B. Seismic restraint designer must provide, in writing, the special inspection requirements for all Designated Seismic Systems as indicated in Chapter 17 of the IBC.

1.5 SUBMITTALS

- A. Each contractor responsible for the installation of Designated Seismic Systems (systems with component $I_p > 1.0$) must submit a "Statement of Responsibility" as required by Section 1706.1

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

of the IBC 2012, prior to beginning work on the system or component.

- B. Submittal documents must include a “Basis for Design” or “Design Criteria” which includes a statement from the registered design professional that the design complies with the requirements of the ASCE 7, Chapter 13 and IBC 2012 chapter 1909/ACI 318 (concrete anchors).
- C. Submittals must include seismic bracing layout drawings indicating the location of all seismic restraints. The submittal package must include seismic restraint details providing specific information relating to the materials, type, size, and locations of anchorages; materials used for bracing; attachment requirements of bracing to structure and component; and locations of transverse and longitudinal sway bracing and rod stiffeners.
- D. Catalog cut sheets and installation instructions shall be included for each type seismic restraint used on equipment or components being restrained.
- E. Submit special inspection requirements as required under 1.4 at time of seismic submittals.
- F. Submittal drawings and calculations must be stamped by a registered professional engineer in the State where the project is being constructed who is responsible for the seismic restraint design. All seismic restraint submittals not complying with this certification will be rejected.

1.6 SEISMIC CERTIFICATION OF EQUIPMENT

- A. For equipment or components where $I_p = 1.0$.
- B. Submittal documents must include a “Basis for Design” or “Design Criteria” which includes a statement from the registered design professional that the design complies with the requirements of the ASCE 7, Chapter 13 and IBC 2012 chapter 1909/ACI 318 (concrete anchors). In addition, the basis for compliance must also be noted, as listed below:
 - 1. Project specific design documentation prepared and submitted by a registered design professional (ASCE 7, 13.2.1.1)
 - 2. Submittal of the manufacturer’s certification that the equipment is seismically qualified by:
 - a. An engineered analysis conforming to the requirements of Chapter 13 of ASCE 7.
 - b. Testing by a nationally recognized testing standard procedure such as ICC-ES AC 156. The substantiated seismic design capacities shall exceed the seismic demands determined by Section 13.3 of ASCE 7.
 - c. Experience data conforming to a nationally recognized procedure. The substantiated seismic design capacities shall exceed the seismic demands determined by Section 13.3 of ASCE 7.
 - 3. The equipment and components listed below are considered rugged and shall not require Special Seismic Certification:
 - a. Valves (not in cast-iron housings, except for ductile cast iron).
 - b. Pneumatic operators.
 - c. Hydraulic operators.
 - d. Motors and motor operators.
 - e. Horizontal and vertical pumps (including vacuum pumps).
 - f. Air compressors
 - g. Refrigerators and freezers.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- h. Elevator cabs.
 - i. Underground tanks.
 - j. Equipment and components weighing not more than 20 lbs. supported directly on structures (and not mounted on other equipment or components) with supports and attachments in accordance with Chapter 13, ASCE 7.
 - 4. Exemptions in this section are for factory assembled discrete equipment and components only and do not apply to site assembled or field assembled equipment or equipment anchorage. The list is based in part on OSHPD Code Application Notice 2-1708A.5.
- C. Special Certification requirements for Designated Seismic Systems (i.e. $I_p > 1.0$):
Seismic Certificates of Compliance supplied by manufacturers shall be submitted for all components that are part of Designated Seismic Systems. In accordance with the ASCE 7, certification shall be via one of the following methods:
- 1. For active mechanical and electrical equipment that must remain operable following the design earthquake:
 - a. Testing as detailed by part c above.
 - b. Experience data as detailed by part c above.
 - c. Equipment that is considered “rugged” per part c above.
 - 2. Components with hazardous contents shall be certified by the manufacturer as maintaining containment following the design earthquake by:
 - a. Testing as detailed by part c above.
 - b. Experience data as detailed by part c above.
 - c. Engineering analysis utilizing dynamic characteristics and forces. Tanks (without vibration isolators) designed by a registered design professional in accordance with ASME Boiler and Pressure Vessel Code, 2007 (BPVC 2007), and satisfying the force and displacement requirements of Sections 13.3.1 and 13.3.2 of ASCE 7 having an importance factor, $I = 1.5$ and reviewed by DFCM shall be considered to satisfy the Special Seismic Certification requirements on the basis of ASCE 7 Section 13.6.9.

1.7 INSTALLATION

- A. Comply with manufacturer/engineer’s instructions for the installation of seismic restraint materials and products.

PART 2 - VIBRATION ISOLATION

See Part 1 for seismic design requirements. Additional seismic design requirements are outlined below where they pertain specifically to vibration isolated components or systems.

2.1 DESCRIPTION

- A. The work in this section consists of furnishing engineering and materials necessary for vibration isolation for systems and equipment contained herein for the project.
- B. Other sections of DIVISION 21, 22 & 23 form a part of this section. Refer to all sections for a complete description of the work.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- C. All mechanical equipment .75 HP and over listed in the equipment schedule shall be mounted on vibration isolators to prevent the transmission of objectionable vibration and vibration induced sound to the building structure.
- D. All isolation materials, flexible connectors and seismic restraints shall be of the same vendor and shall be selected and certified using published or factory certified data. Any variance or non-compliance with these specification requirements shall be corrected by the contractor in an approved manner.
- E. The contractor and vendor of the isolation and seismic restraints for floor mounted equipment shall refer to the isolator and seismic restraint schedule which lists isolator types, isolator deflections and seismic restraint type. Vibration isolators shall be selected in accordance with the equipment, pipe or duct weight distribution so as to produce reasonably uniform deflections.
- F. Install full line size flexible pipe connectors at the inlet and outlet of each pump, cooling tower, condenser, chiller, coiling connections and where shown on the drawings. All connectors shall be suitable for use at the temperature, pressure, and service encountered at the point of installation and operation. End fitting connectors shall conform to the pipefitting schedule. Control rods or protective braid must be used to limit elongation to 3/8". Flexible connectors shall not be required for suspended in-line pumps.

2.2 MANUFACTURER'S RESPONSIBILITIES

- A. Manufacturer of vibration and seismic restraint products shall have the following responsibilities:
 - 1. Determine vibration isolation and seismic restraint sizes and locations.
 - 2. Provide installation instructions and shop drawings for all materials supplied under this section of the specifications.
 - 3. Provide calculations to determine equipment restraint loads resulting from seismic forces presented in local building code or IBC, Chapter 16 latest edition. Seismic calculations shall be certified by the manufacturers engineer licensed in the state of Utah.
- B. Seismic restraint load ratings must be certified and substantiated by testing or calculations under direct control of a registered professional engineer.
- C. Calculations and restraint device submittal drawings shall meet the requirements of Part 1, Seismic Design.

2.3 QUALITY CONTROL

- A. The isolators and seismic restraint systems listed herein are as manufactured by International Seismic Application Technology (ISAT), Amber / Booth, Mason Industries Inc. (M.I.), Kinetics Noise Control Inc. (K.N.C.), California Dynamics (CalDyn), Vibration Mounting & Controls, Inc. (V.M.C.) and Vibro Acoustics.
- B. Steel components shall be cleaned and painted with industrial enamel. All nuts, bolts and washers shall be zinc-electroplated. Structural steel bases shall be thoroughly cleaned of welding slag and primed with zinc-chromate or metal etching primer.
- C. All isolators, bases and seismic restraints exposed to the weather shall utilize weather resistant plating, epoxy coat or PVC coated springs and galvanized steel components. Nuts, bolts and washers may be zinc-electroplated. Isolators for outdoor mounted equipment shall provide adequate restraint for the greater of either wind loads required by local codes or withstand a minimum of 30 lb. / sq. ft. applied to any exposed surface of the equipment.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- D. Vibration isolation designer must provide a written special inspection plan as indicated in Chapter 17 of the IBC.

2.4 SUBMITTALS

- A. Submit shop drawings of all isolators, seismic restraints and calculations provided.
- B. The manufacturer of vibration isolation products shall submit the following data for each piece of isolated equipment: clearly identified equipment tag, quantity and size of vibration isolators and seismic restraints for each piece of rotating isolated equipment. Submittals for mountings and hangers incorporating springs shall include spring diameter and free height, rated deflections, and solid load. Submittals for bases shall clearly identify locations for all mountings as well as all locations for attachment points of the equipment to the mounting base. Submittals shall include seismic calculations signed and checked by a qualified licensed engineer in the state where the project is being constructed. Catalog cut sheets and installation instructions shall be included for each type of isolation mounting or seismic restraint used on equipment being isolated.
- C. Submit special inspection requirements as required under 2.4 at time of isolator/seismic submittals. Submittal must be stamped by a registered Utah professional engineer who is responsible for the vibration isolation and seismic restraint design. All vibration isolation not complying with this certification will be rejected.
- D. Submittal documents must include a “Basis for Design” or “Design Criteria” which includes a statement from the registered design professional that the design complies with the requirements of the ASCE 7, Chapter 13 and IBC 2012 chapter 1909/ACI 318 (concrete anchors). In addition, the basis for compliance must also be noted, as listed below:
 - 1. Project specific design documentation prepared and submitted by a registered design professional (ASCE 7, 13.2.1.1)
 - 2. Submittal of the manufacturer’s certification that the isolation equipment is seismically qualified by:
 - a. An engineered analysis conforming to the requirements of Chapter 13 of ASCE 7.
 - b. Testing by a nationally recognized testing standard procedure such as ICC-ES AC 156. The substantiated seismic design capacities shall exceed the seismic demands determined by Section 13.3 of ASCE 7.
 - c. Experience data conforming to a nationally recognized procedure. The substantiated seismic design capacities shall exceed the seismic demands determined by Section 13.3 of ASCE 7.

2.5 VIBRATION ISOLATION PRODUCTS

- A. ISOLATORS
 - 1. Specification W: a pad type mounting consisting of two layers of ribbed elastomeric pads with a ½” poro-elastic vibration absorptive material bonded between them. Pads shall be sized for approximate deflection of 0.10” to 0.18”. Pads shall be Amber / Booth Type NRC or equal.
- B. ROOFTOP UNIT CURBS AND ISOLATION SYSTEMS
 - 1. Specification W: Non-isolated seismically rated rooftop curb system that is flashed into

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

roofing membrane. Air and watertight curb shall have a neoprene sponge seal at the top and be rigid enough provide continuous perimeter support for rooftop unit. Curb must provide means to positively anchor to concrete deck, or bolt or weld directly to structural steel to withstand seismic loading. Curb shall provide a means by which contractor supplied insulation may be installed for thermal insulation and acoustic attenuation. Curbs shall accommodate roof pitch shown on drawings. Curb shall use minimum 16 gage galvanized steel and shall be designed with crossbracing required to withstand the greater of seismic forces (para 1.3.4.) or wind loading per local building code. Design must be certified by registered professional engineer in the employ of the manufacturer. Seismic curbs shall be Amber/Booth Type RTC or equal.

C. FLEXIBLE PIPE CONNECTIONS

1. Specification K: Water Service: For flanged connection – a double sphere arch rubber expansion joint constructed of molded reinforced neoprene with integral steel floating flanges, and designed to be suitable for pressures up to 225 PSI (4 to 1 safety factor) and temperatures up to 225 °F. Connectors shall have minimum movement capabilities of 1.77" compression, 1.18" lateral and 1.18" extension. Connectors shall provide a minimum 35° angular movement up to 6", minimum 30° up to 12" and minimum 20° up to 24". Spring-loaded control units shall be furnished to limit movement to within allowables. Amber/Booth Type 2600 or equal.
2. Water Service: For threaded type – A double spherical rubber hose connector, minimum 8" long, constructed of molded neoprene, nylon cord reinforced, with female pipe unions each end. Connectors shall have a minimum movement capability of 7/8" compression, 7/8" lateral, 1/4" extension and 20° angular through 1-1/4", 13° through 2", and 9° through 3". Connectors shall be suitable for a maximum working pressure (4 to 1 safety factor) of 150 psi and 225 degree F. Connectors shall have cable control units to limit extension to 1/4". Amber/Booth Type 2655 or equal.
3. Specification L: Steam and Condensate Service:
 - a. For flanged connection – a metal hose connector constructed of stainless steel hose and braid with carbon steel plate flanges. Live lengths shall conform to hose minimum length to absorb thermal and dynamic movement. Hose axis must be perpendicular to pipe movement. Amber/Booth Type SS-FP or SS-FW or equal.
 - b. For threaded connections - a metal hose connector constructed of stainless steel hose and braid with carbon steel NPT threaded end fittings. Minimum lengths shall conform to the following table:

1-1/2" dia. (and smaller) x 10" long
2" x 12"
2-1/2" x 13"
3" x 14"
3-1/2" x 16"
4" x 16"

- c. Amber/Booth Type SS-PM or equal.

PART 3 - EXECUTION

Isolator and seismic restraints shall be installed as recommended by the manufacturer. Isolate all mechanical equipment 0.75 hp and over per the isolation schedule and these specifications.

3.1 PIPING ISOLATION

- A. Horizontal Pipe Isolation: all HVAC pumped water, pumped condensate, glycol, and refrigerant piping size 1-1/4" and larger within mechanical rooms shall be isolated. Outside equipment rooms this piping shall be isolated for the greater of 50' or 100 pipe diameters from rotating equipment. For the first 3 support locations from externally isolated equipment provide specification E hangers or specification SB or SX floor mounts with the same deflection as equipment isolators (max 2"). All other piping within the equipment rooms shall be isolated with the same specification isolators with a 3/4" minimum deflection. Steam piping size 1-1/4" and larger which is within an equipment room and connected to rotating equipment shall be isolated for three (3) support locations from the equipment. Provide specification E or SB (SX) isolators with the same deflection as the equipment but a minimum of 3/4"
- B. All plumbing pumped water, pumped condensate, and steam piping size 1-1/4" and larger within mechanical rooms shall be isolated the same as HVAC piping (para. 3.2.1). Isolators are not required for any plumbing pumped water, pumped condensate, and steam piping outside of mechanical rooms unless listed in the isolation schedule (para. 3.5.5.)

3.2 INSTALLATION

- A. Comply with manufacturer's instructions for the installation and load application of vibration isolation materials and products. Adjust to ensure that units do not exceed rated operating deflections or bottom out under loading, and are not short-circuited by other contacts or bearing points. Remove space blocks and similar devices (if any) intended for temporary support during installation or shipping.
- B. Locate isolation hangers as near the overhead support structure as possible.
- C. Adjust leveling devices as required to distribute loading uniformly on isolators. Shim units as required where leveling devices cannot be used to distribute loading properly.
- D. Install isolated inertia base frames and steel bases on isolator units as indicated so that a minimum of 2 inch clearance below base will result when supported equipment has been installed and loaded for operation.
- E. Roof curbs shall be installed directly to building structural steel or concrete roof deck. Installation on top of steel deck or roofing material is not acceptable.

3.3 APPLICATION OF SEISMIC RESTRAINTS

- A. All floor mounted isolated equipment shall be protected with type SB or type C unitized isolator and restraint or with separate type SL restraints (minimum of 4) in conjunction with type B isolators. For equipment with high center of gravity additional cable restraints shall be furnished, as required by isolation manufacturer, to limit forces and motion caused by rocking.
- B. Floor mounted which are exempt (section 2.2.) shall be protected by properly sized anchor bolts with elastomeric grommets provided by the isolation manufacturer
- C. Where riser pipes pass through cored holes, core diameters to be a maximum of 2" larger than pipe O.D. including insulation. Cored holes must be packed with resilient material or firestop as provided by other sections of this specification or local codes. Restrained isolators type C or SB shall support risers and provide longitudinal restraint at floors where thermal expansion is minimal and will not bind isolator restraints.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

3.4 QUALITY ASSURANCE

- A. Representative of vibration isolation system manufacturer to walk the project and provide documentation indicating conformance to vibration isolation design intent (see example below)

EQUIPMENT ISOLATION SCHEDULE (1)(4)									
EQUIPMENT	LOCATI ON								
	A' CRITIC AL (35'-50' SPAN)			B' UPPER STORY (20'-35' SPAN)			C' GRADE		
	ISOLA TOR TYPE	MINIMU M DEFLE CTION (IN)	BASE (1) TYPE	ISOLA TOR TYPE	MINIMU M DEFLE CTION (IN)	BASE (1) TYPE	ISOLA TOR TYPE	MINIMU M DEFLE CTION (IN)	BASE (1) TYPE
AIR HANDLING UNITS FLOOR MOUNTED UP TO 15 HP 20 HP & OVER SUSPENDED (4)	SWSR SWSR	1.5 2.5	WSB	SWSR SWSR	0.75 1.5		SWSR SWSR	0.75 0.75	
UP TO 15 HP	PBSRA	1.75		BSRA	1		BSR A	1	
20 HP & OVER	PBSRA	2.5	WSB	PBSRA	1.75		PBS RA	1	
HIGH PRESSURE FAN SECTIONS (2)									
UP TO 30 HP	SW	2.5	CPF	SWIS WSR	1.5	CPF	SWIS WSR	0.75	CPF
40 HP & OVER	SW	3.5	CPF	SWIS WSR	2.5	CPF	SWIS WSR	1.5	CPF
CENTRIFUGAL FANS CL. I & II UP TO 54-112" W.D.									
UPT015HP	SWIS WSR	1.5	SFB	SWIS WSR	0.75	SFB	SWIS WSR	0.75	SFB
20-50 HP	SW	2.5	CPF	SWIS WSR	1.5	CPF	SWIS WSR	0.75	SFB
60 HP & OVER	SW	3.5	CPF	SW	2.5	CPF	SWIS WSR	1.5	SFB
CL. I & II 60" W.D. & OVER ALL CL. III FANS									
UPT015HP	SW	2.5	CPF	SWIS WSR	1.5	CPF	SWIS WSR	0.75	CPF
20-50 H P	SW	2.5	CPF	SW	2.5	CPF	SWIS WSR	1.5	CPF
60 HP & OVER	SW	3.5	CPF	SW	2.5	CPF	SWIS WSR	1.5	CPF
AXIAL FLOWFANS (2) FLOOR MTD.									
UP TO 15 HP	SWIS WSR	1.5	WSB	SWSR	0.75		SWSR	0.75	
20 HP & OVER SUSPENDED (4)	SW	3.5	CPF	SWSR	1.5		SWSR	0.75	

Intermountain Health
Layton Hospital – Sleep Lab Remodel
 Copyright 2026, Vero Architecture

UP TO 15 HP	PBSRA	1.75	WSB	BSR A	1		BSR A	1	
20 HP & OVER	PBSRA	2.5	WSB	PBS RA	1.75	WSB	PBS RA	1.5	
VENT (UTILITY SETS)									
FLOOR MTD	SWIS WSR	1.5	WSB	SWS R	0.75		SWSR	0.75	
SUSPENDE (4)	BSRA	1.75	WSB	BSR A	1		BSRA	0.75	
CABINET FANS, FANS SECTIONS (2)									
FLOOR MTD.									
UP TO 15 HP	SWSR	1.5		SWSR	0.75		SWSR	0.75	
20 HP & OVER	SW	2.5	CPF	SWSR	1.5		SWSR	0.75	
SUSPENDE (4)									
UP TO 15 HP	PBSRA	1.75		BSR A	1		BSRA	0.75	
20 HP & OVER	PBSRA	2.5	WSB	PBS RA	1.75		BSRA	1.75	
PUMPS									
FLOOR MTD.									
UP TO 15 HP	SWIS WSR	0.75	CPF	SWIS WSR	0.75	CPF	SRVD	0.4	CPF
7-112 HP & OVER	SWIS WSR	1.5	CPF	SWIS WSR	1.5	CPF	SWIS WSR	0.75	CPF
SUSPENDE INLINE	PBSRA	1.75		PBSRA	1.75		PBSRA	1	
REFRIGERATION UNITS									
RECIPROCATING COMPRESSORS	SW	2.5	CPF	SWIS WSR	1.5	CPF	SWIS WSR	0.75	CPF
RECIPROCATING CONDO	SW	2.5	CPF	CTER	1.5		SWSR	0.75	
UNITS & CHILLERS									
HERMETIC CENTRIFUGALS	CTER	2.5		CTER	1.5		NRC	0.15	
OPEN CENTRIFUGALS	SW	2.5	CPF	SWIS WSR	1.5	CPF	NRC	0.15	
ABSORPTION MACHINES	CTER	1.5		CTER	0.75		NRC	0.15	
AIR COMPRESSORS									
TANK TYPE (HORIZONTAL TANK)	SW	2.5	CPF	SWSR	1.5		SWS R	0.75	
TANK TYPE (VERTICAL TANK)	SW	2.5	CPF	SWIS WSR	1.5	CPF	SWS R	0.75	
COOLING TOWERS & CLOSED CIRCUIT COOLERS									
UP TO 500 TONS	CTE R	2.5	(3)	CTER	0.75	(3)	NRC	0.15	
OVER 500 TONS	CTE R	4.5	(3)	CTER	2.5	(3)	NRC	0.15	
AIR COOLED CONDENSERS									
UP TO 50 TONS	CTER	1.5	(3)	CTER	0.75	(3)	NRC	0.15	
OVER 50 TONS	CTER	2.5	(3)	CTER	1.5	(3)	NRC	0.15	
ROOFTOP AIR CONDITIONING UNITS									
REQUIRING WEATHER SEAL									
UP TO 5000 CFM (12 TON)	SW	1.5	RTIR	SW	0.75	RTIR			

Intermountain Health
Layton Hospital – Sleep Lab Remodel
 Copyright 2026, Vero Architecture

OVER 5000 CFM (12 TON)	CTER	2.5	RTIC	CTE R	1.5	RTIC			
OTHER TYPES									
UP TO 25 TONS	CTER	1.5	(3)	CTE R	1.5	(3)			
OVER 25 TONS	CTER	2.5	(3)	CTE R	1.5	(3)			
BOILER (PACKAGE TYPE)									
ALL SIZES	CTER	1.5		CTER	0.75		NRC	0.15	
ENGINE DRIVEN GENERATORS									
UP TO 60 HP	SW	2.5	CPF	CTE R	1.5	CPF	CTER	0.75	
75 HP & OVER	SW	3.5	CPF	CTE R	2.5	CPF	CTER	0.75	

NOTES:

- 1) WITH TYPE ER SEISMIC SNUBBERS IF SW ISOLATORS ARE USED. NO ADDITIONAL SNUBBER IS REQUIRED FOR SWSR ISOLATORS.
- 2) TYPE TRK THRUST RESISTORS REQUIRED ON ALL HIGH PRESSURE FAN SECTIONS, SUSPENDED AXIAL FLOW FANS AND ON FLOOR MOUNTED AXIAL FANS OPERATING AT 3" S.P. OR GREATER.
- 3) WITH STEEL BASE TYPE WSB IF REQUIRED FOR SUPPORT.

END OF SECTION 230548

BLANK PAGE

SECTION 230550

OPERATION AND MAINTENANCE OF HVAC SYSTEMS

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. All pertinent sections of Division 21, 22, & 23 Mechanical General Requirements, are part of the work of this Section. Division 1 is part of this and all other sections of these specifications.
 - 1. Testing and Balancing is specified in section 230594.
 - 2. Training and Instructions to Owner's Representative is specified in section 230100.

1.2 SCOPE OF WORK

- A. Submission of Operating and Maintenance Manuals complete with Balancing reports. (Coordinate with Division 1).
- B. Coordination of work required for system commissioning.
- C. Provide a hard copy and an electronic copy on CD of the O and M manual fully searchable in PDF format.

1.3 SUBMITTALS

- A. Submit product data in accordance with Division 1 and Section 230100. Submit the following:
 - 1. Sample of O and M manual outline.

PART 2 - PRODUCTS

2.1 O & M MANUALS

- A. The operating and maintenance manuals shall be as follows:
 - 1. Binders shall be red buckram with easy-view metal for size 8-1/2 x 11-inch sheets, with capacity expandable from 2 inches to 3-1/2 inches as required for the project. Construction shall be rivet-through with library corners. No. 12 backbone and lining shall be the same material as the cover. The front cover and backbone shall be foil-stamped in white as follows: (coordinate with Division 01)

OPERATING AND MAINTENANCE
MANUAL
FOR THE

(INSERT PROJECT NAME)

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

(INSERT PROJECT COMPLETION YEAR)

VOLUME No. ()

VAN BOERUM & FRANK ASSOCIATES, INC.
MECHANICAL ENGINEER

(INSERT ARCHITECT)

PART 3 - EXECUTION

3.1 OPERATING AND MAINTENANCE MANUALS:

- A. Work under this section shall be performed in concert with the contractor performing the system testing and balancing. Six (6) copies of the manuals shall be furnished to the Architect for distribution to the owner.
- B. The "Start-Up and Operation" section is one of the most important in the manual. Information in this section shall be complete and accurately written and shall be verified with the actual equipment on the job, such as switches, starters, relays, automatic controls, etc. A step-by-step start-up procedure shall be described.
- C. The manuals shall include air and water-balancing reports, system commissioning procedures, start-up tests and reports, equipment and system performance test reports, warranties, and certificates of training given to the owner's representatives.
- D. An index sheet typed on AICO Gold-Line indexes shall be provided in the front of the binder. The manual shall include the following:
 - 1. SYSTEM DESCRIPTIONS
 - 2. START-UP PROCEDURE AND OPERATION OF SYSTEM
 - 3. MAINTENANCE AND LUBRICATION TABLE
 - 4. OPERATION AND MAINTENANCE BULLETINS
 - 5. AUTOMATIC TEMPERATURE CONTROL DESCRIPTION OF OPERATION, INTERLOCK AND CONTROL DIAGRAMS, AND CONTROL PANELS.
 - 6. AIR AND WATER SYSTEM BALANCING REPORTS
 - 7. EQUIPMENT WARRANTIES AND TRAINING CERTIFICATES
 - 8. SYSTEM COMMISSIONING REPORTS
 - 9. EQUIPMENT START-UP CERTIFICATES

END OF SECTION 230550

SECTION 230553

IDENTIFICATION FOR HVAC PIPING AND EQUIPMENT

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Equipment labels.
 - 2. Danger, Warning and Caution signs and labels.
 - 3. Pipe labels.
 - 4. Duct labels.
 - 5. Stencils.
 - 6. Valve tags.
 - 7. Danger tags.
 - 8. Warning tags.
 - 9. Caution tags.

1.3 ACTION SUBMITTALS

- A. Product Data: For each type of product indicated.
- B. Equipment Label Schedule: Include a listing of all equipment to be labeled with the proposed content for each label.
- C. Valve numbering scheme.
- D. Valve Schedules: For each piping system to include in maintenance manuals.
- E. Ceiling Grid Labeling: Proposed lettering for location identification on ceiling grids for locating and labeling valves, VAV boxes, fire and fire smoke dampers and all other above ceiling equipment.

1.4 COORDINATION

- A. Coordinate installation of identifying devices with completion of covering and painting of surfaces where devices are to be applied.
- B. Coordinate installation of identifying devices with locations of access panels and doors.
- C. Install identifying devices before installing acoustical ceilings and similar concealment.

PART 2 - PRODUCTS

2.1 EQUIPMENT LABELS

A. Metal Labels for Equipment:

1. Material and Minimum Thickness, predrilled or stamped holes for attachment hardware:
 - a. Brass, 0.032-inch .
2. Minimum Label Size: Length and width vary for required label content, but not less than 2-1/2 by 3/4 inch.
3. Minimum Letter Size: 1/4 inch for name of units if viewing distance is less than 24 inches, 1/2 inch for viewing distances up to 72 inches, and proportionately larger lettering for greater viewing distances. Include secondary lettering two-thirds to three-fourths the size of principal lettering.
4. Fasteners: Stainless-steel;
 - a. Rivets or self-tapping screws
5. Adhesive: Contact-type permanent adhesive, compatible with label and with substrate.

B. Plastic Labels for Equipment:

1. Material and Thickness: Multilayer, multicolor, plastic labels for mechanical engraving, and having predrilled holes for attachment hardware, 1/16 inch thick.
2. Letter Color:
 - a. Black.
3. Background Color:
 - a. White.
4. Maximum Temperature: Able to withstand temperatures up to 160 deg F.
5. Minimum Label Size: Length and width vary for required label content, but not less than 2-1/2 by 3/4 inch.
6. Minimum Letter Size: 1/4 inch for name of units if viewing distance is less than 24 inches, 1/2 inch for viewing distances up to 72 inches, and proportionately larger lettering for greater viewing distances. Include secondary lettering two-thirds to three-fourths the size of principal lettering.
7. Fasteners: Stainless-steel;
 - a. Rivets or self-tapping screws
8. Adhesive: Contact-type permanent adhesive, compatible with label and with substrate.

C. Label Content: Include equipment's Drawing designation or unique equipment number, Drawing numbers where equipment is indicated (plans, details, and schedules), plus the Specification Section number and title where equipment is specified.

D. Equipment Label Schedule: For each item of equipment to be labeled, on 8-1/2-by-11-inch

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

bond paper. Tabulate equipment identification number and identify Drawing numbers where equipment is indicated (plans, details, and schedules), plus the Specification Section number and title where equipment is specified. Equipment schedule shall be included in operation and maintenance data.

2.2 DANGER, WARNING AND CAUTION SIGNS AND LABELS

- A. Material and Thickness: Multilayer, multicolor, plastic labels for mechanical engraving, having predrilled holes for attachment hardware; 1/16 inch thick.
- B. Danger signs, colors:
 - 1. Letter Color:
 - a. White.
 - 2. Background Color:
 - a. Red.
- C. Warning signs, colors:
 - 1. Letter Color:
 - a. Black.
 - 2. Background Color:
 - a. Orange.
- D. Caution signs, colors:
 - 1. Letter Color:
 - a. Black.
 - 2. Background Color:
 - a. Yellow.
- E. Maximum Temperature: Able to withstand temperatures up to 160 deg F.
- F. Minimum Label Size: Length and width vary for required label content, but not less than 2-1/2 by 3/4 inch.
- G. Minimum Letter Size: 1/4 inch for name of units if viewing distance is less than 24 inches, 1/2 inch for viewing distances up to 72 inches, and proportionately larger lettering for greater viewing distances. Include secondary lettering two-thirds to three-fourths the size of principal lettering.
- H. Fasteners: Stainless-steel;
 - 1. Rivets or self-tapping screws
- I. Adhesive: Contact-type permanent adhesive, compatible with label and with substrate.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- J. Label Content: Include caution and warning information, plus emergency notification instructions.

2.3 PIPE LABELS

- A. General Requirements for Manufactured Pipe Labels: Preprinted, color-coded, with lettering indicating service, and showing flow direction.
- B. Pretensioned Pipe Labels: Precoiled, semirigid plastic formed to partially cover circumference of pipe and to attach to pipe without fasteners or adhesive.
- C. Self-Adhesive Pipe Labels: Printed plastic with contact-type, permanent-adhesive backing.
- D. Pipe Label Contents: Include identification of piping service using same designations or abbreviations as used on Drawings, pipe size, and an arrow indicating flow direction.
 - 1. Flow-Direction Arrows: Integral with piping system service lettering to accommodate both directions, or as separate unit on each pipe label to indicate flow direction.
 - 2. Lettering Size: At least 1-1/2 inches high.

2.4 DUCT LABELS

- A. Material and Thickness: Multilayer, multicolor, plastic labels for mechanical engraving, having predrilled holes for attachment hardware; 1/16 inch thick.
- B. Letter Color:
 - 1. White.
- C. Background Color:
 - 1. Black.
- D. Maximum Temperature: Able to withstand temperatures up to 160 deg F.
- E. Minimum Label Size: Length and width vary for required label content, but not less than 2-1/2 by 3/4 inch.
- F. Minimum Letter Size: 1/4 inch for name of units if viewing distance is less than 24 inches, 1/2 inch for viewing distances up to 72 inches, and proportionately larger lettering for greater viewing distances. Include secondary lettering two-thirds to three-fourths the size of principal lettering.
- G. Fasteners: Stainless-steel;
 - 1. Rivets or self-tapping screws
- H. Adhesive: Contact-type permanent adhesive, compatible with label and with substrate.
- I. Duct Label Contents: Include identification of duct service using same designations or abbreviations as used on Drawings, duct size, and an arrow indicating flow direction.
 - 1. Flow-Direction Arrows: Integral with duct system service lettering to accommodate both

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- directions, or as separate unit on each duct label to indicate flow direction.
2. Lettering Size: At least 1-1/2 inches high.

2.5 STENCILS

- A. Stencils: Prepared with letter sizes according to ASME A13.1 for piping; minimum letter height of 1-1/4 inches for ducts; and minimum letter height of 3/4 inch for access panel and door labels, equipment labels, and similar operational instructions.
 1. Stencil Material:
 - a. Aluminum.
 2. Stencil Paint:
 - a. Exterior, gloss, alkyd enamel black unless otherwise indicated.
 - b. Paint may be in pressurized spray-can form.
 3. Identification Paint:
 - a. Exterior, alkyd enamel in colors according to ASME A13.1 unless otherwise indicated.

2.6 VALVE TAGS

- A. Valve Tags: Stamped or engraved with 1/4-inch letters for piping system abbreviation and 1/2-inch numbers.
 1. Tag Material, predrilled or stamped holes for attachment hardware, minimum thickness:
 - a. Brass, 0.032-inch
 2. Fasteners: Brass;
 - a. Wire-link or beaded chain; or S-hook
 3. For each piping system, on 8-1/2-by-11-inch bond paper, tabulate;
 - a. Valve number.
 - b. Piping system.
 - c. System abbreviation (as shown on valve tag).
 - d. Location of valve (room or space).
 - e. Normal-operating position (open, closed, or modulating).
 - f. Variations for identification.
 - g. Mark valves for emergency shutoff and similar special uses.
 4. Valve-tag schedule:
 - a. Shall be included in operation and maintenance data.

2.7 DANGER TAGS

- A. Danger Tags: Preprinted or partially preprinted, accident-prevention tags, of plasticized card stock with matte finish suitable for writing.
 - 1. Size:
 - a. 3 by 5-1/4 inches minimum
 - 2. Fasteners:
 - a. Brass grommet and wire.
 - 3. Nomenclature: Large-size primary caption such as "DANGER," and "DO NOT OPERATE."
 - 4. Color: Red background with white lettering.

2.8 WARNING TAGS

- A. Warning Tags: Preprinted or partially preprinted, accident-prevention tags, of plasticized card stock with matte finish suitable for writing.
 - 1. Size:
 - a. 3 by 5-1/4 inches minimum
 - 2. Fasteners:
 - a. Brass grommet and wire.
 - 3. Nomenclature: Large-size primary caption such as "WARNING" and "DO NOT OPERATE."
 - 4. Color: Yellow background with black lettering.

2.9 CAUTION TAGS

- A. Caution Tags: Preprinted or partially preprinted, accident-prevention tags, of plasticized card stock with matte finish suitable for writing.
 - 1. Size:
 - a. 3 by 5-1/4 inches minimum
 - 2. Fasteners:
 - a. Brass grommet and wire.
 - 3. Nomenclature: Large-size primary caption such as "CAUTION," and "DO NOT OPERATE."

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

4. Color: Orange background with black lettering.

PART 3 - EXECUTION

3.1 PREPARATION

- A. Clean piping and equipment surfaces of substances that could impair bond of identification devices, including dirt, oil, grease, release agents, and incompatible primers, paints, and encapsulants.

3.2 EQUIPMENT LABEL INSTALLATION

- A. Install or permanently fasten labels on each major item of mechanical equipment.
- B. Locate equipment labels where accessible and visible.
- C. Where equipment is located above a ceiling, the equipment type and number shall be placed on the t-bar grid under the equipment location, or at the corner of an access door that has been provided for valve access above hard lid ceilings.

3.3 PIPE LABEL INSTALLATION

- A. Piping Color-Coding: Painting of piping is specified in Division 09.
- B. Stenciled Pipe Label Option:
 1. Stenciled labels may be provided instead of manufactured pipe labels, at Installer's option.
 2. Install stenciled pipe labels with painted, color-coded bands or rectangles on each piping system.
 - a. Identification Paint: Use for contrasting background.
 - b. Stencil Paint: Use for pipe marking.
- C. Locate pipe labels where piping is exposed or above accessible ceilings in finished spaces; machine rooms; accessible maintenance spaces such as shafts, tunnels, and plenums; and exterior exposed locations as follows:
 1. Near each valve and control device.
 2. Near each branch connection, excluding short takeoffs for fixtures and terminal units. Where flow pattern is not obvious, mark each pipe at branch.
 3. Near penetrations through walls, floors, ceilings, and inaccessible enclosures.
 4. At access doors, manholes, and similar access points that permit view of concealed piping.
 5. Near major equipment items and other points of origination and termination.
 6. Spaced at maximum intervals of 50 feet along each run. Reduce intervals to 25 feet in areas of congested piping and equipment.
 7. On piping above removable acoustical ceilings. Omit intermediately spaced labels.
- D. Pipe Label Color Schedule: (See Drawing Schedules)

3.4 DUCT LABEL INSTALLATION

- A. Install plastic-laminated duct labels with permanent adhesive on air ducts in the following color codes:
 - 1. Blue: For cold-air supply ducts.
 - 2. Yellow: For hot-air supply ducts.
 - 3. Green: For exhaust-, outside-, relief-, return-, and mixed-air ducts.
 - 4. ASME A13.1 Colors and Designs: For hazardous material exhaust.
- B. Locate labels near points where ducts enter into concealed spaces and at maximum intervals of 50 feet in each space where ducts are exposed or concealed by removable ceiling system.

3.5 VALVE-TAG INSTALLATION (See Drawing Schedules.)

- A. Install tags on valves and control devices in piping systems, except check valves; valves within factory-fabricated equipment units; shutoff valves; faucets; convenience and lawn-watering hose connections; and HVAC terminal devices and similar roughing-in connections of end-use fixtures and units. List tagged valves in a valve schedule.

3.6 WARNING-TAG INSTALLATION

- A. Write required message on, and attach warning tags to, equipment and other items where required.

END OF SECTION 230553

SECTION 230593

TESTING, ADJUSTING, AND BALANCING FOR HVAC

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Balancing Air Systems:
 - a. Constant-volume air systems.
 - b. Variable-air-volume systems.
 - 2. Balancing Hydronic Piping Systems:
 - a. Constant-flow hydronic systems.
 - b. Variable-flow hydronic systems.
 - c. Primary-secondary hydronic systems.
 - 3. Various HVAC Equipment.
 - a. Motors.
 - b. Heat Transfer Coils.

1.3 DEFINITIONS

- A. AABC: Associated Air Balance Council.
- B. NEBB: National Environmental Balancing Bureau.
- C. TAB: Testing, adjusting, and balancing.
- D. TABB: Testing, Adjusting, and Balancing Bureau.
- E. TAB Specialist: An entity engaged to perform TAB Work.

1.4 INFORMATIONAL SUBMITTALS

- A. Qualification Data: Within the following number of days of the Contractor's Notice to Proceed, submit documentation that the TAB contractor and this Project's TAB team members meet the qualifications specified in "Quality Assurance" Article;
 - 1. 30 days.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- B. Certified TAB reports.
- C. Instrument calibration reports, to include the following:
 - 1. Instrument type and make.
 - 2. Serial number.
 - 3. Application.
 - 4. Dates of use.
 - 5. Dates of calibration.

1.5 QUALITY ASSURANCE

- A. TAB Contractor Qualifications: Engage a TAB entity certified by AABC or NEBB.
 - 1. TAB Field Supervisor: Employee of the TAB contractor and certified by AABC or NEBB and shall be the same as the TAB Contractor.
 - 2. TAB Technician: Employee of the TAB contractor and who is certified by AABC or NEBB as a TAB technician and shall be the same as the TAB Contractor.
- B. Certify TAB field data reports and perform the following:
 - 1. Review field data reports to validate accuracy of data and to prepare certified TAB reports.
 - 2. Certify that the TAB team complied with the approved TAB plan and the procedures specified and referenced in this Specification.
- C. TAB Report Forms: Use standard TAB contractor's forms approved by:
 - 1. Architect.
- D. Instrumentation Type, Quantity, Accuracy, and Calibration: As described in ASHRAE 111, Section 5, "Instrumentation."

1.6 PROJECT CONDITIONS

- A. Full Owner Occupancy: Owner will occupy the site and existing building during entire TAB period. Cooperate with Owner during TAB operations to minimize conflicts with Owner's operations.

1.7 COORDINATION

- A. Notice: Provide seven days' advance notice for each test. Include scheduled test dates and times.
- B. Perform TAB after leakage and pressure tests on the following distribution systems have been satisfactorily completed:
 - 1. Air and water.

PART 2 - PRODUCTS (Not Applicable)

PART 3 - EXECUTION

3.1 TAB SPECIALISTS

- A. Subject to compliance with requirements, engage one of the following:
 - 1. BTC Service.
 - 2. Certified Test & Balance.
 - 3. Diamond Test & Balance.
 - 4. RS Analysis.
 - 5. Test & Balance Inc.
 - 6. Payson Sheetmetal.

3.2 EXAMINATION

- A. Examine the Contract Documents to become familiar with Project requirements and to discover conditions in systems' designs that may preclude proper TAB of systems and equipment.
- B. Examine systems for installed balancing devices, such as test ports, gage cocks, thermometer wells, flow-control devices, balancing valves and fittings, and manual volume dampers. Verify that locations of these balancing devices are accessible.
- C. Examine the approved submittals for HVAC systems and equipment.
- D. Examine design data including HVAC system descriptions, statements of design assumptions for environmental conditions and systems' output, and statements of philosophies and assumptions about HVAC system and equipment controls.
- E. Examine:
 - 1. Ceiling plenums and underfloor air plenums used for supply, return, or relief air to verify that they meet the leakage class of connected ducts as specified in:
 - a. Section 233113 "Metal Ducts"
 - 2. Verify ceiling plenums and underfloor air plenums used for supply, return or relief air are properly separated from adjacent areas.
 - 3. Verify that penetrations in plenum walls are sealed and fire-stopped if required.
- F. Examine equipment performance data including fan and pump curves.
 - 1. Relate performance data to Project conditions and requirements, including system effects that can create undesired or unpredicted conditions that cause reduced capacities in all or part of a system.
 - 2. Calculate system-effect factors to reduce performance ratings of HVAC equipment when installed under conditions different from the conditions used to rate equipment performance. To calculate system effects for air systems, use tables and charts found in AMCA 201, "Fans and Systems," or in SMACNA's "HVAC Systems - Duct Design." Compare results with the design data and installed conditions.
- G. Examine system and equipment installations and verify that field quality-control testing, cleaning, and adjusting specified in individual Sections have been performed.
- H. Examine test reports specified in individual system and equipment Sections.
- I. Examine HVAC equipment and filters and verify that bearings are greased, belts are aligned and tight, and equipment with functioning controls is ready for operation.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- J. Examine terminal units, such as variable-air-volume boxes, and verify that they are accessible and their controls are connected and functioning.
- K. Examine strainers. Verify that startup screens are replaced by permanent screens with indicated perforations.
- L. Examine three-way valves for proper installation for their intended function of diverting or mixing fluid flows.
- M. Examine heat-transfer coils for correct piping connections and for clean and straight fins.
- N. Examine system pumps to ensure absence of entrained air in the suction piping.
- O. Examine operating safety interlocks and controls on HVAC equipment.
- P. Report deficiencies discovered before and during performance of TAB procedures. Observe and record system reactions to changes in conditions. Record default set points if different from indicated values.

3.3 PREPARATION

- A. Prepare a TAB plan that includes strategies and step-by-step procedures.
- B. Complete system-readiness checks and prepare reports. Verify the following:
 - 1. Permanent electrical-power wiring is complete.
 - 2. Hydronic systems are filled, clean, and free of air.
 - 3. Automatic temperature-control systems are operational.
 - 4. Equipment and duct access doors are securely closed.
 - 5. Balance, smoke, and fire dampers are open.
 - 6. Isolating and balancing valves are open and control valves are operational.
 - 7. Ceilings are installed in critical areas where air-pattern adjustments are required and access to balancing devices is provided.
 - 8. Windows and doors can be closed so indicated conditions for system operations can be met.

3.4 GENERAL PROCEDURES FOR TESTING AND BALANCING

- A. Perform testing and balancing procedures on each system according to the procedures contained in this section and:
 - 1. AABC's "National Standards for Total System Balance"
- B. Cut insulation, ducts, pipes, and equipment cabinets for installation of test probes to the minimum extent necessary for TAB procedures.
 - 1. After testing and balancing, patch probe holes in ducts with same material and thickness as used to construct ducts.
 - 2. Install and join new insulation that matches removed materials. Restore insulation, coverings, vapor barrier, and finish according to Section 230713 "Duct Insulation," Section 230716 "HVAC Equipment Insulation," and Section 230719 "HVAC Piping Insulation."
- C. Mark equipment and balancing devices, including damper-control positions, valve position

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

indicators, fan-speed-control levers, and similar controls and devices, with paint or other suitable, permanent identification material to show final settings.

- D. Take and report testing and balancing measurements in inch-pound (IP).

3.5 GENERAL PROCEDURES FOR BALANCING AIR SYSTEMS

- A. Prepare test reports for both fans and outlets. Obtain manufacturer's outlet factors and recommended testing procedures. Crosscheck the summation of required outlet volumes with required fan volumes.
- B. Prepare schematic diagrams of systems' "as-built" duct layouts.
- C. For variable-air-volume systems, develop a plan to simulate diversity.
- D. Determine the best locations in main and branch ducts for accurate duct-airflow measurements.
- E. Check airflow patterns from the outdoor-air louvers and dampers and the return- and exhaust-air dampers through the supply-fan discharge and mixing dampers.
- F. Locate start-stop and disconnect switches, electrical interlocks, and motor starters.
- G. Verify that motor starters are equipped with properly sized thermal protection.
- H. Check dampers for proper position to achieve desired airflow path.
- I. Check for airflow blockages.
- J. Check condensate drains for proper connections and functioning.
- K. Check for proper sealing of air-handling-unit components.
- L. Verify that air duct system is sealed as specified in Section 233113 "Metal Ducts."

3.6 PROCEDURES FOR CONSTANT-VOLUME AIR SYSTEMS

- A. Adjust fans to deliver total indicated airflows within the maximum allowable fan speed listed by fan manufacturer.
 - 1. Measure total airflow.
 - a. Where sufficient space in ducts is unavailable for Pitot-tube traverse measurements, measure airflow at terminal outlets and inlets and calculate the total airflow.
 - 2. Measure fan static pressures as follows to determine actual static pressure:
 - a. Measure outlet static pressure as far downstream from the fan as practical and upstream from restrictions in ducts such as elbows and transitions.
 - b. Measure static pressure directly at the fan outlet or through the flexible connection.
 - c. Measure inlet static pressure of single-inlet fans in the inlet duct as near the fan as possible, upstream from the flexible connection, and downstream from duct restrictions.
 - d. Measure inlet static pressure of double-inlet fans through the wall of the plenum

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

that houses the fan.

3. Measure static pressure across each component that makes up an air-handling unit, rooftop unit, and other air-handling and -treating equipment.
 - a. Report the cleanliness status of filters and the time static pressures are measured.
 4. Measure static pressures entering and leaving other devices, such as sound traps, heat-recovery equipment, and air washers, under final balanced conditions.
 5. Review Record Documents to determine variations in design static pressures versus actual static pressures. Calculate actual system-effect factors. Recommend adjustments to accommodate actual conditions.
 6. Obtain approval from one of the following entities for adjustment of fan speed higher or lower than indicated speed. Comply with requirements in HVAC Sections for air-handling units for adjustment of fans, belts, and pulley sizes to achieve indicated air-handling-unit performance:
 - a. Architect.
 7. Do not make fan-speed adjustments that result in motor overload. Consult equipment manufacturers about fan-speed safety factors. Modulate dampers and measure fan-motor amperage to ensure that no overload will occur. Measure amperage in full-cooling, full-heating, economizer, and any other operating mode to determine the maximum required brake horsepower.
- B. Adjust volume dampers for main duct, submain ducts, and major branch ducts to indicated airflows within specified tolerances.
1. Measure airflow of submain and branch ducts.
 - a. Where sufficient space in submain and branch ducts is unavailable for Pitot-tube traverse measurements, measure airflow at terminal outlets and inlets and calculate the total airflow for that zone.
 2. Measure static pressure at a point downstream from the balancing damper, and adjust volume dampers until the proper static pressure is achieved.
 3. Remeasure each submain and branch duct after all have been adjusted. Continue to adjust submain and branch ducts to indicated airflows within specified tolerances.
- C. Measure air outlets and inlets without making adjustments.
1. Measure terminal outlets using a direct-reading hood or outlet manufacturer's written instructions and calculating factors.
- D. Adjust air outlets and inlets for each space to indicated airflows within specified tolerances of indicated values. Make adjustments using branch volume dampers rather than extractors and the dampers at air terminals.
1. Adjust each outlet in same room or space to within specified tolerances of indicated quantities without generating noise levels above the limitations prescribed by the Contract Documents.
 2. Adjust patterns of adjustable outlets for proper distribution without drafts.

3.7 PROCEDURES FOR VARIABLE-AIR-VOLUME SYSTEMS

- A. Compensating for Diversity: When the total airflow of all terminal units is more than the indicated airflow of the fan, place a selected number of terminal units at a minimum set-point

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

airflow with the remainder at maximum-airflow condition until the total airflow of the terminal units equals the indicated airflow of the fan. Select the reduced-airflow terminal units so they are distributed evenly among the branch ducts.

- B. Pressure-Independent, Variable-Air-Volume Systems: After the fan systems have been adjusted, adjust the variable-air-volume systems as follows:
1. Set outdoor-air dampers at minimum, and set return- and exhaust-air dampers at a position that simulates full-cooling load.
 2. Select the terminal unit that is most critical to the supply-fan airflow and static pressure. Measure static pressure. Adjust system static pressure so the entering static pressure for the critical terminal unit is not less than the sum of the terminal-unit manufacturer's recommended minimum inlet static pressure plus the static pressure needed to overcome terminal-unit discharge system losses.
 3. Measure total system airflow. Adjust to within indicated airflow.
 4. Set terminal units at maximum airflow and adjust controller or regulator to deliver the designed maximum airflow. Use terminal-unit manufacturer's written instructions to make this adjustment. When total airflow is correct, balance the air outlets downstream from terminal units the same as described for constant-volume air systems.
 5. Set terminal units at minimum airflow and adjust controller or regulator to deliver the designed minimum airflow. Check air outlets for a proportional reduction in airflow the same as described for constant-volume air systems.
 - a. If air outlets are out of balance at minimum airflow, report the condition but leave outlets balanced for maximum airflow.
 6. Remeasure the return airflow to the fan while operating at maximum return airflow and minimum outdoor airflow.
 7. Measure static pressure at the most critical terminal unit and adjust the static-pressure controller at the main supply-air sensing station to ensure that adequate static pressure is maintained at the most critical unit.
 8. Record final fan-performance data.
- C. Pressure-Dependent, Variable-Air-Volume Systems without Diversity: After the fan systems have been adjusted, adjust the variable-air-volume systems as follows:
1. Balance variable-air-volume systems the same as described for constant-volume air systems.
 2. Set terminal units and supply fan at full-airflow condition.
 3. Adjust inlet dampers of each terminal unit to indicated airflow and verify operation of the static-pressure controller. When total airflow is correct, balance the air outlets downstream from terminal units the same as described for constant-volume air systems.
 4. Readjust fan airflow for final maximum readings.
 5. Measure operating static pressure at the sensor that controls the supply fan if one is installed, and verify operation of the static-pressure controller.
 6. Set terminal units at minimum airflow and adjust controller or regulator to deliver the designed minimum airflow. Check air outlets for a proportional reduction in airflow the same as described for constant-volume air systems.
 - a. If air outlets are out of balance at minimum airflow, report the condition but leave the outlets balanced for maximum airflow.
 7. Measure the return airflow to the fan while operating at maximum return airflow and minimum outdoor airflow.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- D. Pressure-Dependent, Variable-Air-Volume Systems with Diversity: After the fan systems have been adjusted, adjust the variable-air-volume systems as follows:
1. Set system at maximum indicated airflow by setting the required number of terminal units at minimum airflow. Select the reduced-airflow terminal units so they are distributed evenly among the branch ducts.
 2. Adjust supply fan to maximum indicated airflow with the variable-airflow controller set at maximum airflow.
 3. Set terminal units at full-airflow condition.
 4. Adjust terminal units starting at the supply-fan end of the system and continuing progressively to the end of the system. Adjust inlet dampers of each terminal unit to indicated airflow. When total airflow is correct, balance the air outlets downstream from terminal units the same as described for constant-volume air systems.
 5. Adjust terminal units for minimum airflow.
 6. Measure the return airflow to the fan while operating at maximum return airflow and minimum outdoor airflow. Adjust the fan and balance the return-air ducts and inlets the same as described for constant-volume air systems.

3.8 GENERAL PROCEDURES FOR HYDRONIC SYSTEMS

- A. Prepare test reports with pertinent design data, and number in sequence starting at pump to end of system. Check the sum of branch-circuit flows against the approved pump flow rate. Correct variations that exceed plus or minus 5 percent.
- B. Prepare schematic diagrams of systems' "as-built" piping layouts.
- C. Prepare hydronic systems for testing and balancing according to the following, in addition to the general preparation procedures specified above:
1. Open all manual valves for maximum flow.
 2. Check liquid level in expansion tank.
 3. Check makeup water-station pressure gage for adequate pressure for highest vent.
 4. Check flow-control valves for specified sequence of operation, and set at indicated flow.
 5. Set differential-pressure control valves at the specified differential pressure. Do not set at fully closed position when pump is positive-displacement type unless several terminal valves are kept open.
 6. Set system controls so automatic valves are wide open to heat exchangers.
 7. Check pump-motor load. If motor is overloaded, throttle main flow-balancing device so motor nameplate rating is not exceeded.
 8. Check air vents for a forceful liquid flow exiting from vents when manually operated.

3.9 PROCEDURES FOR CONSTANT-FLOW HYDRONIC SYSTEMS

- A. Measure water flow at pumps. Use the following procedures except for positive-displacement pumps:
1. Verify impeller size by operating the pump with the discharge valve closed. Read pressure differential across the pump. Convert pressure to head and correct for differences in gage heights. Note the point on manufacturer's pump curve at zero flow and verify that the pump has the intended impeller size.
 - a. If impeller sizes must be adjusted to achieve pump performance, obtain approval from the following entity and comply with requirements in Section 232123 "Hydronic Pumps.”:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- 1) Architect.
2. Check system resistance. With all valves open, read pressure differential across the pump and mark pump manufacturer's head-capacity curve. Adjust pump discharge valve until indicated water flow is achieved.
 - a. Monitor motor performance during procedures and do not operate motors in overload conditions.
3. Verify pump-motor brake horsepower. Calculate the intended brake horsepower for the system based on pump manufacturer's performance data. Compare calculated brake horsepower with nameplate data on the pump motor. Report conditions where actual amperage exceeds motor nameplate amperage.
4. Report flow rates that are not within plus or minus 10 percent of design.
- B. Measure flow at all automatic flow control valves to verify that valves are functioning as designed.
- C. Measure flow at all pressure-independent characterized control valves, with valves in fully open position, to verify that valves are functioning as designed.
- D. Set calibrated balancing valves, if installed, at calculated presettings.
- E. Measure flow at all stations and adjust, where necessary, to obtain first balance.
 1. System components that have Cv rating or an accurately cataloged flow-pressure-drop relationship may be used as a flow-indicating device.
- F. Measure flow at main balancing station and set main balancing device to achieve flow that is 5 percent greater than indicated flow.
- G. Adjust balancing stations to within specified tolerances of indicated flow rate as follows:
 1. Determine the balancing station with the highest percentage over indicated flow.
 2. Adjust each station in turn, beginning with the station with the highest percentage over indicated flow and proceeding to the station with the lowest percentage over indicated flow.
 3. Record settings and mark balancing devices.
- H. Measure pump flow rate and make final measurements of pump amperage, voltage, rpm, pump heads, and systems' pressures and temperatures including outdoor-air temperature.
- I. Measure the differential-pressure-control-valve settings existing at the conclusion of balancing.
- J. Check settings and operation of each safety valve. Record settings.

3.10 PROCEDURES FOR VARIABLE-FLOW HYDRONIC SYSTEMS

- A. Balance systems with automatic two- and three-way control valves by setting systems at maximum flow through heat-exchange terminals and proceed as specified above for hydronic systems.

3.11 PROCEDURES FOR PRIMARY-SECONDARY HYDRONIC SYSTEMS

- A. Balance the primary circuit flow first and then balance the secondary circuits.

3.12 PROCEDURES FOR MOTORS

- A. Motors, 1/2 HP and Larger: Test at final balanced conditions and record the following data:
 - 1. Manufacturer's name, model number, and serial number.
 - 2. Motor horsepower rating.
 - 3. Motor rpm.
 - 4. Efficiency rating.
 - 5. Nameplate and measured voltage, each phase.
 - 6. Nameplate and measured amperage, each phase.
 - 7. Starter thermal-protection-element rating.
- B. Motors Driven by Variable-Frequency Controllers: Test for proper operation at speeds varying from minimum to maximum. Test the manual bypass of the controller to prove proper operation. Record observations including name of controller manufacturer, model number, serial number, and nameplate data.

3.13 PROCEDURES FOR HEAT-TRANSFER COILS

- A. Measure, adjust, and record the following data for each water coil:
 - 1. Entering- and leaving-water temperature.
 - 2. Water flow rate.
 - 3. Water pressure drop.
 - 4. Dry-bulb temperature of entering and leaving air.
 - 5. Wet-bulb temperature of entering and leaving air for cooling coils.
 - 6. Airflow.
 - 7. Air pressure drop.
- B. Measure, adjust, and record the following data for each electric heating coil:
 - 1. Nameplate data.
 - 2. Airflow.
 - 3. Entering- and leaving-air temperature at full load.
 - 4. Voltage and amperage input of each phase at full load and at each incremental stage.
 - 5. Calculated kilowatt at full load.
 - 6. Fuse or circuit-breaker rating for overload protection.
- C. Measure, adjust, and record the following data for each steam coil:
 - 1. Dry-bulb temperature of entering and leaving air.
 - 2. Airflow.
 - 3. Air pressure drop.
 - 4. Inlet steam pressure.
- D. Measure, adjust, and record the following data for each refrigerant coil:
 - 1. Dry-bulb temperature of entering and leaving air.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

2. Wet-bulb temperature of entering and leaving air.
3. Airflow.
4. Air pressure drop.
5. Refrigerant suction pressure and temperature.

3.14 TOLERANCES

- A. Set HVAC system's air flow rates and water flow rates within the following tolerances:
1. Supply, Return, and Exhaust Fans and Equipment with Fans: Plus or minus 10 percent.
 2. Air Outlets and Inlets: Plus or minus 10 percent.
 3. Heating-Water Flow Rate: Plus or minus 10 percent.
 4. Cooling-Water Flow Rate: Plus or minus 10 percent.

3.15 REPORTING

- A. Initial Construction-Phase Report: Based on examination of the Contract Documents as specified in "Examination" Article, prepare a report on the adequacy of design for systems' balancing devices. Recommend changes and additions to systems' balancing devices to facilitate proper performance measuring and balancing. Recommend changes and additions to HVAC systems and general construction to allow access for performance measuring and balancing devices.
- B. Status Reports: Prepare progress reports on the following interval to describe completed procedures, procedures in progress, and scheduled procedures. Include a list of deficiencies and problems found in systems being tested and balanced. Prepare a separate report for each system and each building floor for systems serving multiple floors;
1. Weekly.

3.16 FINAL REPORT

- A. General: Prepare a certified written report; tabulate and divide the report into separate sections for tested systems and balanced systems.
1. Include a certification sheet at the front of the report's binder, signed and sealed by the certified testing and balancing engineer.
 2. Include a list of instruments used for procedures, along with proof of calibration.
- B. Final Report Contents: In addition to certified field-report data, include the following:
1. Pump curves.
 2. Fan curves.
 3. Manufacturers' test data.
 4. Field test reports prepared by system and equipment installers.
 5. Other information relative to equipment performance; do not include Shop Drawings and product data.
- C. General Report Data: In addition to form titles and entries, include the following data:
1. Title page.
 2. Name and address of the TAB contractor.
 3. Project name.
 4. Project location.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

5. Architect's name and address.
 6. Engineer's name and address.
 7. Contractor's name and address.
 8. Report date.
 9. Signature of TAB supervisor who certifies the report.
 10. Table of Contents with the total number of pages defined for each section of the report. Number each page in the report.
 11. Summary of contents including the following:
 - a. Indicated versus final performance.
 - b. Notable characteristics of systems.
 - c. Description of system operation sequence if it varies from the Contract Documents.
 12. Nomenclature sheets for each item of equipment.
 13. Data for terminal units, including manufacturer's name, type, size, and fittings.
 14. Notes to explain why certain final data in the body of reports vary from indicated values.
 15. Test conditions for fans and pump performance forms including the following:
 - a. Settings for outdoor-, return-, and exhaust-air dampers.
 - b. Conditions of filters.
 - c. Cooling coil, wet- and dry-bulb conditions.
 - d. Face and bypass damper settings at coils.
 - e. Fan drive settings including settings and percentage of maximum pitch diameter.
 - f. Inlet vane settings for variable-air-volume systems.
 - g. Settings for supply-air, static-pressure controller.
 - h. Other system operating conditions that affect performance.
- D. System Diagrams: Include schematic layouts of air and hydronic distribution systems. Present each system with single-line diagram and include the following:
1. Quantities of outdoor, supply, return, and exhaust airflows.
 2. Water and steam flow rates.
 3. Duct, outlet, and inlet sizes.
 4. Pipe and valve sizes and locations.
 5. Terminal units.
 6. Balancing stations.
 7. Position of balancing devices.
- E. Air-Handling-Unit Test Reports: For air-handling units with coils, include the following:
1. Unit Data:
 - a. Unit identification.
 - b. Location.
 - c. Make and type.
 - d. Model number and unit size.
 - e. Manufacturer's serial number.
 - f. Unit arrangement and class.
 - g. Discharge arrangement.
 - h. Sheave make, size in inches, and bore.
 - i. Center-to-center dimensions of sheave, and amount of adjustments in inches.
 - j. Number, make, and size of belts.
 - k. Number, type, and size of filters.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

2. Motor Data:
 - a. Motor make, and frame type and size.
 - b. Horsepower and rpm.
 - c. Volts, phase, and hertz.
 - d. Full-load amperage and service factor.
 - e. Sheave make, size in inches, and bore.
 - f. Center-to-center dimensions of sheave, and amount of adjustments in inches.
3. Test Data (Indicated and Actual Values):
 - a. Total air flow rate in cfm.
 - b. Total system static pressure in inches wg.
 - c. Fan rpm.
 - d. Discharge static pressure in inches wg.
 - e. Filter static-pressure differential in inches wg.
 - f. Preheat-coil static-pressure differential in inches wg.
 - g. Cooling-coil static-pressure differential in inches wg.
 - h. Heating-coil static-pressure differential in inches wg.
 - i. Outdoor airflow in cfm.
 - j. Return airflow in cfm.
 - k. Outdoor-air damper position.
 - l. Return-air damper position.
 - m. Vortex damper position.

F. Apparatus-Coil Test Reports:

1. Coil Data:
 - a. System identification.
 - b. Location.
 - c. Coil type.
 - d. Number of rows.
 - e. Fin spacing in fins per inch o.c.
 - f. Make and model number.
 - g. Face area in sq. ft..
 - h. Tube size in NPS.
 - i. Tube and fin materials.
 - j. Circuiting arrangement.
2. Test Data (Indicated and Actual Values):
 - a. Air flow rate in cfm.
 - b. Average face velocity in fpm.
 - c. Air pressure drop in inches wg.
 - d. Outdoor-air, wet- and dry-bulb temperatures in deg F.
 - e. Return-air, wet- and dry-bulb temperatures in deg F.
 - f. Entering-air, wet- and dry-bulb temperatures in deg F.
 - g. Leaving-air, wet- and dry-bulb temperatures in deg F.
 - h. Water flow rate in gpm.
 - i. Water pressure differential in feet of head or psig.
 - j. Entering-water temperature in deg F.
 - k. Leaving-water temperature in deg F.
 - l. Refrigerant expansion valve and refrigerant types.
 - m. Refrigerant suction pressure in psig.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- n. Refrigerant suction temperature in deg F.
 - o. Inlet steam pressure in psig.
- G. Fan Test Reports: For supply, return, and exhaust fans, include the following:
- 1. Fan Data:
 - a. System identification.
 - b. Location.
 - c. Make and type.
 - d. Model number and size.
 - e. Manufacturer's serial number.
 - f. Arrangement and class.
 - g. Sheave make, size in inches, and bore.
 - h. Center-to-center dimensions of sheave, and amount of adjustments in inches.
 - 2. Motor Data:
 - a. Motor make, and frame type and size.
 - b. Horsepower and rpm.
 - c. Volts, phase, and hertz.
 - d. Full-load amperage and service factor.
 - e. Sheave make, size in inches, and bore.
 - f. Center-to-center dimensions of sheave, and amount of adjustments in inches.
 - g. Number, make, and size of belts.
 - 3. Test Data (Indicated and Actual Values):
 - a. Total airflow rate in cfm.
 - b. Total system static pressure in inches wg.
 - c. Fan rpm.
 - d. Discharge static pressure in inches wg.
 - e. Suction static pressure in inches wg.
- H. Round, Flat-Oval, and Rectangular Duct Traverse Reports: Include a diagram with a grid representing the duct cross-section and record the following:
- 1. Report Data:
 - a. System and air-handling-unit number.
 - b. Location and zone.
 - c. Traverse air temperature in deg F.
 - d. Duct static pressure in inches wg.
 - e. Duct size in inches.
 - f. Duct area in sq. ft..
 - g. Indicated air flow rate in cfm.
 - h. Indicated velocity in fpm.
 - i. Actual air flow rate in cfm.
 - j. Actual average velocity in fpm.
 - k. Barometric pressure in psig.
- I. Air-Terminal-Device Reports:
- 1. Unit Data:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- a. System and air-handling unit identification.
 - b. Location and zone.
 - c. Apparatus used for test.
 - d. Area served.
 - e. Make.
 - f. Number from system diagram.
 - g. Type and model number.
 - h. Size.
 - i. Effective area in sq. ft..
 2. Test Data (Indicated and Actual Values):
 - a. Air flow rate in cfm.
 - b. Air velocity in fpm.
 - c. Preliminary air flow rate as needed in cfm.
 - d. Preliminary velocity as needed in fpm.
 - e. Final air flow rate in cfm.
 - f. Final velocity in fpm.
 - g. Space temperature in deg F.
- J. System-Coil Reports: For reheat coils and water coils of terminal units, include the following:
1. Unit Data:
 - a. System and air-handling-unit identification.
 - b. Location and zone.
 - c. Room or riser served.
 - d. Coil make and size.
 - e. Flowmeter type.
 2. Test Data (Indicated and Actual Values):
 - a. Air flow rate in cfm.
 - b. Entering-water temperature in deg F.
 - c. Leaving-water temperature in deg F.
 - d. Water pressure drop in feet of head or psig.
 - e. Entering-air temperature in deg F.
 - f. Leaving-air temperature in deg F.
- K. Pump Test Reports: Calculate impeller size by plotting the shutoff head on pump curves and include the following:
1. Unit Data:
 - a. Unit identification.
 - b. Location.
 - c. Service.
 - d. Make and size.
 - e. Model number and serial number.
 - f. Water flow rate in gpm.
 - g. Water pressure differential in feet of head or psig.
 - h. Required net positive suction head in feet of head or psig.
 - i. Pump rpm.
 - j. Impeller diameter in inches.
 - k. Motor make and frame size.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- l. Motor horsepower and rpm.
 - m. Voltage at each connection.
 - n. Amperage for each phase.
 - o. Full-load amperage and service factor.
 - p. Seal type.
 - 2. Test Data (Indicated and Actual Values):
 - a. Static head in feet of head or psig.
 - b. Pump shutoff pressure in feet of head or psig.
 - c. Actual impeller size in inches.
 - d. Full-open flow rate in gpm.
 - e. Full-open pressure in feet of head or psig.
 - f. Final discharge pressure in feet of head or psig.
 - g. Final suction pressure in feet of head or psig.
 - h. Final total pressure in feet of head or psig.
 - i. Final water flow rate in gpm.
 - j. Voltage at each connection.
 - k. Amperage for each phase.
 - L. Instrument Calibration Reports:
 - 1. Report Data:
 - a. Instrument type and make.
 - b. Serial number.
 - c. Application.
 - d. Dates of use.
 - e. Dates of calibration.
- 3.17 INSPECTIONS**
- A. Initial Inspection:
 - 1. After testing and balancing are complete, operate each system and randomly check measurements to verify that the system is operating according to the final test and balance readings documented in the final report.
 - 2. Check the following for each system:
 - a. Measure airflow of at least 10 percent of air outlets.
 - b. Measure water flow of at least 5 percent of terminals.
 - c. Measure room temperature at each thermostat/temperature sensor. Compare the reading to the set point.
 - d. Verify that balancing devices are marked with final balance position.
 - e. Note deviations from the Contract Documents in the final report.
 - B. Final Inspection:
 - 1. After initial inspection is complete and documentation by random checks verifies that testing and balancing are complete and accurately documented in the final report, request that a final inspection be made by:
 - a. Architect.
 - 2. The TAB contractor's test and balance engineer shall conduct the inspection in the presence of:
 - a. Architect.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

3. The following entity shall randomly select measurements, documented in the final report, to be rechecked. Rechecking shall be limited to either 10 percent of the total measurements recorded or the extent of measurements that can be accomplished in a normal 8-hour business day:
 - a. Architect.
 4. If rechecks yield measurements that differ from the measurements documented in the final report by more than the tolerances allowed, the measurements shall be noted as "FAILED."
 5. If the number of "FAILED" measurements is greater than 10 percent of the total measurements checked during the final inspection, the testing and balancing shall be considered incomplete and shall be rejected.
- C. TAB Work will be considered defective if it does not pass final inspections. If TAB Work fails, proceed as follows:
1. Recheck all measurements and make adjustments. Revise the final report and balancing device settings to include all changes; resubmit the final report and request a second final inspection.
 2. If the second final inspection also fails, Owner may contract the services of another TAB contractor to complete TAB Work according to the Contract Documents and deduct the cost of the services from the original TAB contractor's final payment.
- D. Prepare test and inspection reports.

3.18 ADDITIONAL TESTS

- A. Within 90 days of completing TAB, perform additional TAB to verify that balanced conditions are being maintained throughout and to correct unusual conditions.
- B. Seasonal Periods: If initial TAB procedures were not performed during near-peak summer and winter conditions, perform additional TAB during near-peak summer and winter conditions.

END OF SECTION 230593

SECTION 230713

DUCT INSULATION

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section includes insulating the following duct services:
 - 1. Indoor, concealed supply and outdoor air.
 - 2. Indoor, exposed supply and outdoor air.
 - 3. Indoor, concealed return located in unconditioned space.
 - 4. Indoor, exposed return located in unconditioned space.
- B. Related Sections:
 - 1. Section 230716 "HVAC Equipment Insulation."
 - 2. Section 230719 "HVAC Piping Insulation."
 - 3. Section 233113 "Metal Ducts" for duct liners.

1.3 ACTION SUBMITTALS

- A. Product Data: For each type of product indicated. Include thermal conductivity, water-vapor permeance thickness, and jackets (both factory- and field-applied if any).
- B. Shop Drawings: Include plans, elevations, sections, details, and attachments to other work.
 - 1. Detail application of protective shields, saddles, and inserts at hangers for each type of insulation and hanger.
 - 2. Detail insulation application at elbows, fittings, dampers, specialties and flanges for each type of insulation.
 - 3. Detail application of field-applied jackets.
 - 4. Detail application at linkages of control devices.

1.4 INFORMATIONAL SUBMITTALS

- A. Qualification Data: For qualified Installer.
- B. Material Test Reports: From a qualified testing agency acceptable to authorities having jurisdiction indicating, interpreting, and certifying test results for compliance of insulation materials, sealers, attachments, cements, and jackets, with requirements indicated. Include dates of tests and test methods employed.
- C. Field quality-control reports.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1.5 QUALITY ASSURANCE

- A. Installer Qualifications: Skilled mechanics who have successfully completed an apprenticeship program or another craft training program certified by the Department of Labor, Bureau of Apprenticeship and Training.
- B. Surface-Burning Characteristics: For insulation and related materials, as determined by testing identical products according to ASTM E 84, by a testing agency acceptable to authorities having jurisdiction. Factory label insulation and jacket materials and adhesive, mastic, tapes, and cement material containers, with appropriate markings of applicable testing agency.
 - 1. Insulation Installed Indoors: Flame-spread index of 25 or less, and smoke-developed index of 50 or less.
 - 2. Insulation Installed Outdoors: Flame-spread index of 75 or less, and smoke-developed index of 150 or less.

1.6 DELIVERY, STORAGE, AND HANDLING

- A. Packaging: Insulation material containers shall be marked by manufacturer with appropriate ASTM standard designation, type and grade, and maximum use temperature.

1.7 COORDINATION

- A. Coordinate sizes and locations of supports, hangers, and insulation shields specified in Section 23 0529 "Hangers and Supports for HVAC Piping and Equipment."
- B. Coordinate clearance requirements with duct Installer for duct insulation application. Before preparing ductwork Shop Drawings, establish and maintain clearance requirements for installation of insulation and field-applied jackets and finishes and for space required for maintenance.
- C. Coordinate installation and testing of heat tracing.

1.8 SCHEDULING

- A. Schedule insulation application after pressure testing systems and, where required, after installing and testing heat tracing. Insulation application may begin on segments that have satisfactory test results.
- B. Complete installation and concealment of plastic materials as rapidly as possible in each area of construction.

PART 2 - PRODUCTS

2.1 INSULATION MATERIALS

- A. Comply with requirements in "Duct Insulation Schedule, General," "Indoor Duct and Plenum Insulation Schedule," and "Aboveground, Outdoor Duct and Plenum Insulation Schedule" articles for where insulating materials shall be applied.
- B. Products shall not contain asbestos, lead, mercury, or mercury compounds.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- C. Products that come in contact with stainless steel shall have a leachable chloride content of less than 50 ppm when tested according to ASTM C 871.
- D. Insulation materials for use on austenitic stainless steel shall be qualified as acceptable according to ASTM C 795.
- E. Foam insulation materials shall not use CFC or HCFC blowing agents in the manufacturing process.
- F. Flexible Elastomeric Insulation: Closed-cell, sponge- or expanded-rubber materials. Comply with ASTM C 534, Type II for sheet materials.
 - 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Aeroflex USA, Inc.; Aerocel.
 - b. Armacell LLC; AP Armaflex.
 - c. K-Flex USA; Insul-Sheet, K-Flex Gray Duct Liner, and K-FLEX LS.
- G. Mineral-Fiber Blanket Insulation: Mineral or glass fibers bonded with a thermosetting resin. Comply with ASTM C 553, Type II and ASTM C 1290, Type III with factory-applied FSK jacket. Factory-applied jacket requirements are specified in "Factory-Applied Jackets" Article.
 - 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. CertainTeed Corp.; SoftTouch Duct Wrap.
 - b. Johns Manville; Microlite.
 - c. Knauf Insulation; Friendly Feel Duct Wrap.
 - d. Manson Insulation Inc.; Alley Wrap.
 - e. Owens Corning; SOFTR All-Service Duct Wrap.
- H. Mineral-Fiber Board Insulation: Mineral or glass fibers bonded with a thermosetting resin. Comply with ASTM C 612, Type IA or Type IB. For duct and plenum applications, provide insulation with factory-applied ASJ. Factory-applied jacket requirements are specified in "Factory-Applied Jackets" Article.
 - 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. CertainTeed Corp.; Commercial Board.
 - b. Fibrex Insulations Inc.; FBX.
 - c. Johns Manville; 800 Series Spin-Glas.
 - d. Knauf Insulation; Insulation Board.
 - e. Manson Insulation Inc.; AK Board.
 - f. Owens Corning; Fiberglas 700 Series.
- I. Polyolefin: Unicellular, polyethylene thermal plastic insulation. Comply with ASTM C 534 or ASTM C 1427, Type I, Grade 1 for tubular materials and Type II, Grade 1 for sheet materials.
 - 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Armacell LLC; Tubolit.
 - b. Nomaco Insulation; IMCOLOCK, IMCOSHEET, NOMALOCK, and NOMAPLY.

2.2 FIRE-RATED INSULATION SYSTEMS

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- A. Fire-Rated Board: Structural-grade, press-molded, xonolite calcium silicate, fireproofing board suitable for operating temperatures up to 1700 deg F. Comply with ASTM C 656, Type II, Grade 6. Tested and certified to provide a:
 - a. 2-hour fire rating by an NRTL acceptable to authorities having jurisdiction
- 1. Products: Subject to compliance with requirements, provide the following :
 - a. Johns Manville; Super Firetemp M.
- B. Fire-Rated Blanket: High-temperature, flexible, blanket insulation with FSK jacket that is tested and certified to provide a:
 - a. 2-hour fire rating by an NRTL acceptable to authorities
- 1. Products: Subject to compliance with requirements, provide one of the following :
 - a. CertainTeed Corp.; FlameChek.
 - b. Johns Manville; Firetemp Wrap.
 - c. Nelson Fire Stop Products; Nelson FSB Flameshield Blanket.
 - d. Thermal Ceramics; FireMaster Duct Wrap.
 - e. 3M; Fire Barrier Wrap Products.
 - f. Unifrax Corporation; FyreWrap.

2.3 ADHESIVES

- A. Materials shall be compatible with insulation materials, jackets, and substrates and for bonding insulation to itself and to surfaces to be insulated unless otherwise indicated.
- B. Flexible Elastomeric and Polyolefin Adhesive: Comply with MIL-A-24179A, Type II, Class I.
 - 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Aeroflex USA, Inc.; AeroSeal.
 - b. Armacell LLC; Armaflex 520 Adhesive.
 - c. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 85-75.
 - d. K-Flex USA; R-373 Contact Adhesive.
 - 2. For indoor applications, adhesive shall have a VOC content of 50 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).
- C. Mineral-Fiber Adhesive: Comply with MIL-A-3316C, Class 2, Grade A.
 - 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; CP-127.
 - b. Eagle Bridges - Marathon Industries; 225.
 - c. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 85-60/85-70.
 - d. Mon-Eco Industries, Inc.; 22-25.
 - 2. For indoor applications, adhesive shall have a VOC content of 80 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- D. FSK Jacket Adhesive, and ASJ Adhesive: Comply with MIL-A-3316C, Class 2, Grade A for bonding insulation jacket lap seams and joints.

1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; CP-82.
 - b. Eagle Bridges - Marathon Industries; 225.
 - c. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 85-50.
 - d. Mon-Eco Industries, Inc.; 22-25.
2. For indoor applications, adhesive shall have a VOC content of 50 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).

2.4 MASTICS

- A. Materials shall be compatible with insulation materials, jackets, and substrates; comply with MIL-PRF-19565C, Type II.

1. For indoor applications, use mastics that have a VOC content of 50 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).

- B. Vapor-Barrier Mastic: Water based; suitable for indoor use on below ambient services.

1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 30-80/30-90.
 - b. Vimasco Corporation; 749.
2. Water-Vapor Permeance: ASTM E 96/E 96M, Procedure B, 0.013 perm at 43-mil dry film thickness.
3. Service Temperature Range: Minus 20 to plus 180 deg F.
4. Solids Content: ASTM D 1644, 58 percent by volume and 70 percent by weight.
5. Color: White.

- C. Breather Mastic: Water based; suitable for indoor and outdoor use on above ambient services.

1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; CP-10.
 - b. Eagle Bridges - Marathon Industries; 550.
 - c. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 46-50.
 - d. Mon-Eco Industries, Inc.; 55-50.
 - e. Vimasco Corporation; WC-1/WC-5.
2. Water-Vapor Permeance: ASTM F 1249, 1.8 perms at 0.0625-inch dry film thickness.
3. Service Temperature Range: Minus 20 to plus 180 deg F.
4. Solids Content: 60 percent by volume and 66 percent by weight.
5. Color: White.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

2.5 LAGGING ADHESIVES

- A. Description: Comply with MIL-A-3316C, Class I, Grade A and shall be compatible with insulation materials, jackets, and substrates.
1. For indoor applications, use lagging adhesives that have a VOC content of 50 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).
 2. Products: Subject to compliance with requirements, provide one of the following:
 - a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; CP-50 AHV2.
 - b. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 30-36.
 - c. Vimasco Corporation; 713 and 714.
 3. Fire-resistant, water-based lagging adhesive and coating for use indoors to adhere fire-resistant lagging cloths over duct insulation.
 4. Service Temperature Range: 0 to plus 180 deg F.
 5. Color: White.

2.6 SEALANTS

- A. FSK and Metal Jacket Flashing Sealants:
1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; CP-76.
 - b. Eagle Bridges - Marathon Industries; 405.
 - c. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 95-44.
 - d. Mon-Eco Industries, Inc.; 44-05.
 2. Materials shall be compatible with insulation materials, jackets, and substrates.
 3. Fire- and water-resistant, flexible, elastomeric sealant.
 4. Service Temperature Range: Minus 40 to plus 250 deg F.
 5. Color: Aluminum.
 6. For indoor applications, sealants shall have a VOC content of 420 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).

2.7 FACTORY-APPLIED JACKETS

- A. Insulation system schedules indicate factory-applied jackets on various applications. When factory-applied jackets are indicated, comply with the following:
1. FSK Jacket: Aluminum-foil, fiberglass-reinforced scrim with kraft-paper backing; complying with ASTM C 1136, Type II.

2.8 FIELD-APPLIED JACKETS

- A. Field-applied jackets shall comply with ASTM C 921, Type I, unless otherwise indicated.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- B. FSK Jacket: Aluminum-foil-face, fiberglass-reinforced scrim with kraft-paper backing.
- C. Metal Jacket:
 - 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; Metal Jacketing Systems.
 - b. ITW Insulation Systems; Aluminum and Stainless Steel Jacketing.
 - c. RPR Products, Inc.; Insul-Mate.
 - 2. Aluminum Jacket: Comply with ASTM B 209, Alloy 3003, 3005, 3105, or 5005, Temper H-14.
 - a. Sheet and roll stock ready for shop or field sizing
 - b. Finish and thickness are indicated in field-applied jacket schedules.
 - c. Moisture Barrier for Indoor Applications: 3-mil-thick, heat-bonded polyethylene and kraft paper.
 - d. Moisture Barrier for Outdoor Applications: 3-mil-thick, heat-bonded polyethylene and kraft.

2.9 TAPES

- A. FSK Tape: Foil-face, vapor-retarder tape matching factory-applied jacket with acrylic adhesive; complying with ASTM C 1136.
 - 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. ABI, Ideal Tape Division; 491 AWF FSK.
 - b. Avery Dennison Corporation, Specialty Tapes Division; Fasson 0827.
 - c. Compac Corporation; 110 and 111.
 - d. Venture Tape; 1525 CW NT, 1528 CW, and 1528 CW/SQ.
 - 2. Width: 3 inches.
 - 3. Thickness: 6.5 mils.
 - 4. Adhesion: 90 ounces force/inch in width.
 - 5. Elongation: 2 percent.
 - 6. Tensile Strength: 40 lbf/inch in width.
 - 7. FSK Tape Disks and Squares: Precut disks or squares of FSK tape.
- B. Aluminum-Foil Tape: Vapor-retarder tape with acrylic adhesive.
 - 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. ABI, Ideal Tape Division; 488 AWF.
 - b. Avery Dennison Corporation, Specialty Tapes Division; Fasson 0800.
 - c. Compac Corporation; 120.
 - d. Venture Tape; 3520 CW.
 - 2. Width: 2 inches.
 - 3. Thickness: 3.7 mils.
 - 4. Adhesion: 100 ounces force/inch in width.
 - 5. Elongation: 5 percent.
 - 6. Tensile Strength: 34 lbf/inch in width.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

2.10 SECUREMENTS

A. Bands:

1. Products: Subject to compliance with requirements, provide one of the following:
 - a. ITW Insulation Systems; Gerrard Strapping and Seals.
 - b. RPR Products, Inc.; Insul-Mate Strapping, Seals, and Springs.
2. Aluminum: ASTM B 209, Alloy 3003, 3005, 3105, or 5005; Temper H-14, 0.020 inch thick, 3/4 inch wide with wing seal.
3. Springs: Twin spring set constructed of stainless steel with ends flat and slotted to accept metal bands. Spring size determined by manufacturer for application.

B. Insulation Pins and Hangers:

1. Capacitor-Discharge-Weld Pins: Copper- or zinc-coated steel pin, fully annealed for capacitor-discharge welding, 0.135-inch-diameter shank, length to suit depth of insulation indicated.
 - a. Products: Subject to compliance with requirements, provide one of the following:
 - 1) AGM Industries, Inc.; CWP-1.
 - 2) GEMCO; CD.
 - 3) Midwest Fasteners, Inc.; CD.
 - 4) Nelson Stud Welding; TPA, TPC, and TPS.
2. Cupped-Head, Capacitor-Discharge-Weld Pins: Copper- or zinc-coated steel pin, fully annealed for capacitor-discharge welding, 0.135-inch- diameter shank, length to suit depth of insulation indicated with integral 1-1/2-inch galvanized carbon-steel washer.
 - a. Products: Subject to compliance with requirements, provide one of the following:
 - 1) AGM Industries, Inc.; CHP-1.
 - 2) GEMCO; Cupped Head Weld Pin.
 - 3) Midwest Fasteners, Inc.; Cupped Head.
 - 4) Nelson Stud Welding; CHP.
3. Metal, Adhesively Attached, Perforated-Base Insulation Hangers: Baseplate welded to projecting spindle that is capable of holding insulation, of thickness indicated, securely in position indicated when self-locking washer is in place. Comply with the following requirements:
 - a. Products: Subject to compliance with requirements, provide one of the following:
 - 1) AGM Industries, Inc.; Tactoo Perforated Base Insul-Hangers.
 - 2) GEMCO; Perforated Base.
 - 3) Midwest Fasteners, Inc.; Spindle.
 - b. Baseplate: Perforated, galvanized carbon-steel sheet, 0.030 inch thick by 2 inches square.
 - c. Spindle: Copper- or zinc-coated, low-carbon steel fully annealed, 0.106-inch-diameter shank, length to suit depth of insulation indicated.
 - d. Adhesive: Recommended by hanger manufacturer. Product with demonstrated capability to bond insulation hanger securely to substrates indicated without

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

damaging insulation, hangers, and substrates.

4. Nonmetal, Adhesively Attached, Perforated-Base Insulation Hangers: Baseplate fastened to projecting spindle that is capable of holding insulation, of thickness indicated, securely in position indicated when self-locking washer is in place. Comply with the following requirements:
 - a. Products: Subject to compliance with requirements, provide one of the following:
 - 1) GEMCO; Nylon Hangers.
 - 2) Midwest Fasteners, Inc.; Nylon Insulation Hangers.
 - b. Baseplate: Perforated, nylon sheet, 0.030 inch thick by 1-1/2 inches in diameter.
 - c. Spindle: Nylon, 0.106-inch- diameter shank, length to suit depth of insulation indicated, up to 2-1/2 inches.
 - d. Adhesive: Recommended by hanger manufacturer. Product with demonstrated capability to bond insulation hanger securely to substrates indicated without damaging insulation, hangers, and substrates.
5. Self-Sticking-Base Insulation Hangers: Baseplate welded to projecting spindle that is capable of holding insulation, of thickness indicated, securely in position indicated when self-locking washer is in place. Comply with the following requirements:
 - a. Products: Subject to compliance with requirements, provide one of the following:
 - 1) AGM Industries, Inc.; Tactoo Self-Adhering Insul-Hangers.
 - 2) GEMCO; Peel & Press.
 - 3) Midwest Fasteners, Inc.; Self Stick.
 - b. Baseplate: Galvanized carbon-steel sheet, 0.030 inch thick by 2 inches square.
 - c. Spindle: Copper- or zinc-coated, low-carbon steel, fully annealed, 0.106-inch-diameter shank, length to suit depth of insulation indicated.
 - d. Adhesive-backed base with a peel-off protective cover.

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine substrates and conditions for compliance with requirements for installation tolerances and other conditions affecting performance of insulation application.
 1. Verify that systems to be insulated have been tested and are free of defects.
 2. Verify that surfaces to be insulated are clean and dry.
- B. Proceed with installation only after unsatisfactory conditions have been corrected.

3.2 PREPARATION

- A. Surface Preparation: Clean and dry surfaces to receive insulation. Remove materials that will adversely affect insulation application.

3.3 GENERAL INSTALLATION REQUIREMENTS

- A. Install insulation materials, accessories, and finishes with smooth, straight, and even surfaces; free of voids throughout the length of ducts and fittings.
- B. Install insulation materials, vapor barriers or retarders, jackets, and thicknesses required for each item of duct system as specified in insulation system schedules.
- C. Install accessories compatible with insulation materials and suitable for the service. Install accessories that do not corrode, soften, or otherwise attack insulation or jacket in either wet or dry state.
- D. Install insulation with longitudinal seams at top and bottom of horizontal runs.
- E. Install multiple layers of insulation with longitudinal and end seams staggered.
- F. Keep insulation materials dry during application and finishing.
- G. Install insulation with tight longitudinal seams and end joints. Bond seams and joints with adhesive recommended by insulation material manufacturer.
- H. Install insulation with least number of joints practical.
- I. Where vapor barrier is indicated, seal joints, seams, and penetrations in insulation at hangers, supports, anchors, and other projections with vapor-barrier mastic.
 - 1. Install insulation continuously through hangers and around anchor attachments.
 - 2. For insulation application where vapor barriers are indicated, extend insulation on anchor legs from point of attachment to supported item to point of attachment to structure. Taper and seal ends at attachment to structure with vapor-barrier mastic.
 - 3. Install insert materials and install insulation to tightly join the insert. Seal insulation to insulation inserts with adhesive or sealing compound recommended by insulation material manufacturer.
- J. Apply adhesives, mastics, and sealants at manufacturer's recommended coverage rate and wet and dry film thicknesses.
- K. Install insulation with factory-applied jackets as follows:
 - 1. Draw jacket tight and smooth.
 - 2. Cover circumferential joints with 3-inch- wide strips, of same material as insulation jacket. Secure strips with adhesive and outward clinching staples along both edges of strip, spaced 4 inches o.c.
 - 3. Overlap jacket longitudinal seams at least 1-1/2 inches. Clean and dry surface to receive self-sealing lap. Staple laps with outward clinching staples along edge at:
 - a. 2 inch o.c.
 - b. For below ambient services, apply vapor-barrier mastic over staples.
 - 4. Cover joints and seams with tape, according to insulation material manufacturer's written instructions, to maintain vapor seal.
 - 5. Where vapor barriers are indicated, apply vapor-barrier mastic on seams and joints and at ends adjacent to duct flanges and fittings.
- L. Cut insulation in a manner to avoid compressing insulation more than 75 percent of its nominal

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

thickness.

- M. Finish installation with systems at operating conditions. Repair joint separations and cracking due to thermal movement.
- N. Repair damaged insulation facings by applying same facing material over damaged areas. Extend patches at least 4 inches beyond damaged areas. Adhere, staple, and seal patches similar to butt joints.

3.4 PENETRATIONS

- A. Insulation Installation at Roof Penetrations: Install insulation continuously through roof penetrations.
 - 1. Seal penetrations with flashing sealant.
 - 2. For applications requiring only indoor insulation, terminate insulation above roof surface and seal with joint sealant. For applications requiring indoor and outdoor insulation, install insulation for outdoor applications tightly joined to indoor insulation ends. Seal joint with joint sealant.
 - 3. Extend jacket of outdoor insulation outside roof flashing at least 2 inches below top of roof flashing.
 - 4. Seal jacket to roof flashing with flashing sealant.
- B. Insulation Installation at Aboveground Exterior Wall Penetrations: Install insulation continuously through wall penetrations.
 - 1. Seal penetrations with flashing sealant.
 - 2. For applications requiring only indoor insulation, terminate insulation inside wall surface and seal with joint sealant. For applications requiring indoor and outdoor insulation, install insulation for outdoor applications tightly joined to indoor insulation ends. Seal joint with joint sealant.
 - 3. Extend jacket of outdoor insulation outside wall flashing and overlap wall flashing at least 2 inches.
 - 4. Seal jacket to wall flashing with flashing sealant.
- C. Insulation Installation at Interior Wall and Partition Penetrations (That Are Not Fire Rated): Install insulation continuously through walls and partitions.
- D. Insulation Installation at Fire-Rated Wall and Partition Penetrations: Terminate insulation at fire damper sleeves for fire-rated wall and partition penetrations. Externally insulate damper sleeves to match adjacent insulation and overlap duct insulation at least 2 inches.
 - 1. Comply with requirements in Section 078413 "Penetration Firestopping" firestopping and fire-resistive joint sealers.
- E. Insulation Installation at Floor Penetrations:
 - 1. Duct: For penetrations through fire-rated assemblies, terminate insulation at fire damper sleeves and externally insulate damper sleeve beyond floor to match adjacent duct insulation. Overlap damper sleeve and duct insulation at least 2 inches.
 - 2. Seal penetrations through fire-rated assemblies. Comply with requirements in Section 078413 "Penetration Firestopping."

3.5 INSTALLATION OF FLEXIBLE ELASTOMERIC INSULATION

- A. Seal longitudinal seams and end joints with manufacturer's recommended adhesive to eliminate openings in insulation that allow passage of air to surface being insulated.

3.6 INSTALLATION OF MINERAL-FIBER INSULATION

- A. Blanket Insulation Installation on Ducts and Plenums: Secure with adhesive and insulation pins.
 - 1. Apply adhesives according to manufacturer's recommended coverage rates per unit area, for:
 - a. 100 percent coverage of duct and plenum surfaces.
 - 2. Apply adhesive to entire circumference of ducts and to all surfaces of fittings and transitions.
 - 3. Install either capacitor-discharge-weld pins and speed washers or cupped-head, capacitor-discharge-weld pins on sides and bottom of horizontal ducts and sides of vertical ducts as follows:
 - a. On duct sides with dimensions 18 inches and smaller, place pins along longitudinal centerline of duct. Space 3 inches maximum from insulation end joints, and 16 inches o.c.
 - b. On duct sides with dimensions larger than 18 inches, place pins 16 inches o.c. each way, and 3 inches maximum from insulation joints. Install additional pins to hold insulation tightly against surface at cross bracing.
 - c. Pins may be omitted from top surface of horizontal, rectangular ducts and plenums.
 - d. Do not overcompress insulation during installation.
 - e. Impale insulation over pins and attach speed washers.
 - f. Cut excess portion of pins extending beyond speed washers or bend parallel with insulation surface. Cover exposed pins and washers with tape matching insulation facing.
 - 4. For ducts and plenums with surface temperatures below ambient, install a continuous unbroken vapor barrier. Create a facing lap for longitudinal seams and end joints with insulation by removing 2 inches from one edge and one end of insulation segment. Secure laps to adjacent insulation section with 1/2-inch outward-clinching staples, 1 inch o.c. Install vapor barrier consisting of factory- or field-applied jacket, adhesive, vapor-barrier mastic, and sealant at joints, seams, and protrusions.
 - a. Repair punctures, tears, and penetrations with tape or mastic to maintain vapor-barrier seal.
 - b. Install vapor stops for ductwork and plenums operating below 50 deg F at 18-foot intervals. Vapor stops shall consist of vapor-barrier mastic applied in a Z-shaped pattern over insulation face, along butt end of insulation, and over the surface. Cover insulation face and surface to be insulated a width equal to two times the insulation thickness, but not less than 3 inches.
 - 5. Overlap unfaced blankets a minimum of 2 inches on longitudinal seams and end joints. At end joints, secure with steel bands spaced a maximum of 18 inches o.c.
 - 6. Install insulation on rectangular duct elbows and transitions with a full insulation section for each surface. Install insulation on round and flat-oval duct elbows with individually mitered gores cut to fit the elbow.
 - 7. Insulate duct stiffeners, hangers, and flanges that protrude beyond insulation surface with 6-inch- wide strips of same material used to insulate duct. Secure on alternating sides of

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

stiffener, hanger, and flange with pins spaced 6 inches o.c.

- B. Board Insulation Installation on Ducts and Plenums: Secure with adhesive and insulation pins.
1. Apply adhesives according to manufacturer's recommended coverage rates per unit area, for:
 - a. 50 percent coverage of duct and plenum surfaces.
 2. Apply adhesive to entire circumference of ducts and to all surfaces of fittings and transitions.
 3. Install either capacitor-discharge-weld pins and speed washers or cupped-head, capacitor-discharge-weld pins on sides and bottom of horizontal ducts and sides of vertical ducts as follows:
 - a. On duct sides with dimensions 18 inches and smaller, place pins along longitudinal centerline of duct. Space 3 inches maximum from insulation end joints, and 16 inches o.c.
 - b. On duct sides with dimensions larger than 18 inches, space pins 16 inches o.c. each way, and 3 inches maximum from insulation joints. Install additional pins to hold insulation tightly against surface at cross bracing.
 - c. Pins may be omitted from top surface of horizontal, rectangular ducts and plenums.
 - d. Do not overcompress insulation during installation.
 - e. Cut excess portion of pins extending beyond speed washers or bend parallel with insulation surface. Cover exposed pins and washers with tape matching insulation facing.
 4. For ducts and plenums with surface temperatures below ambient, install a continuous unbroken vapor barrier. Create a facing lap for longitudinal seams and end joints with insulation by removing 2 inches from one edge and one end of insulation segment. Secure laps to adjacent insulation section with 1/2-inch outward-clinching staples, 1 inch o.c. Install vapor barrier consisting of factory- or field-applied jacket, adhesive, vapor-barrier mastic, and sealant at joints, seams, and protrusions.
 - a. Repair punctures, tears, and penetrations with tape or mastic to maintain vapor-barrier seal.
 5. Install insulation on rectangular duct elbows and transitions with a full insulation section for each surface. Groove and score insulation to fit as closely as possible to outside and inside radius of elbows. Install insulation on round and flat-oval duct elbows with individually mitered gores cut to fit the elbow.
 6. Insulate duct stiffeners, hangers, and flanges that protrude beyond insulation surface with 6-inch- wide strips of same material used to insulate duct. Secure on alternating sides of stiffener, hanger, and flange with pins spaced 6 inches o.c.

3.7 FIELD-APPLIED JACKET INSTALLATION

- A. Where glass-cloth jackets are indicated, install directly over bare insulation or insulation with factory-applied jackets.
1. Draw jacket smooth and tight to surface with 2-inch overlap at seams and joints.
 2. Embed glass cloth between two 0.062-inch- thick coats of lagging adhesive.
 3. Completely encapsulate insulation with coating, leaving no exposed insulation.
- B. Where FSK jackets are indicated, install as follows:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Draw jacket material smooth and tight.
 2. Install lap or joint strips with same material as jacket.
 3. Secure jacket to insulation with manufacturer's recommended adhesive.
 4. Install jacket with 1-1/2-inch laps at longitudinal seams and 3-inch- wide joint strips at end joints.
 5. Seal openings, punctures, and breaks in vapor-retarder jackets and exposed insulation with vapor-barrier mastic.
- C. Where PVC jackets are indicated, install with 1-inch overlap at longitudinal seams and end joints; for horizontal applications, install with longitudinal seams along top and bottom of tanks and vessels. Seal with manufacturers recommended adhesive.
1. Apply two continuous beads of adhesive to seams and joints, one bead under lap and the finish bead along seam and joint edge.
- D. Where metal jackets are indicated, install with 2-inch overlap at longitudinal seams and end joints. Overlap longitudinal seams arranged to shed water. Seal end joints with weatherproof sealant recommended by insulation manufacturer. Secure jacket with stainless-steel bands 12 inches o.c. and at end joints.

3.8 FIRE-RATED INSULATION SYSTEM INSTALLATION

- A. Where fire-rated insulation system is indicated, secure system to ducts and duct hangers and supports to maintain a continuous fire rating.
- B. Insulate duct access panels and doors to achieve same fire rating as duct.
- C. Install firestopping at penetrations through fire-rated assemblies. Fire-stop systems are specified in Section 078413 "Penetration Firestopping."

3.9 FINISHES

- A. Insulation with ASJ, Glass-Cloth, or Other Paintable Jacket Material: Paint jacket with paint system identified below and as specified in Section 099113 "Exterior Painting" and Section 09 9123 "Interior Painting."
1. Flat Acrylic Finish: Two finish coats over a primer that is compatible with jacket material and finish coat paint. Add fungicidal agent to render fabric mildew proof.
 - a. Finish Coat Material: Interior, flat, latex-emulsion size.
- B. Flexible Elastomeric Thermal Insulation: After adhesive has fully cured, apply two coats of insulation manufacturer's recommended protective coating.
- C. Color: Final color as selected by Architect. Vary first and second coats to allow visual inspection of the completed Work.
- D. Do not field paint aluminum or stainless-steel jackets.

3.10 FIELD QUALITY CONTROL

- A. Testing Agency:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- a. Engage a qualified testing agency to perform tests and inspections.
- B. Perform tests and inspections.
- C. Tests and Inspections:
 - 1. Inspect ductwork, randomly selected by Architect, by removing field-applied jacket and insulation in layers in reverse order of their installation. Extent of inspection shall be limited to one location (s) for each duct system defined in the "Duct Insulation Schedule, General" Article.
- D. All insulation applications will be considered defective Work if sample inspection reveals noncompliance with requirements.

3.11 DUCT INSULATION SCHEDULE, GENERAL

- A. Plenums and Ducts Requiring Insulation:
 - 1. Indoor, concealed supply and outdoor air.
 - 2. Indoor, exposed supply and outdoor air.
 - 3. Indoor, concealed return located in unconditioned space.
 - 4. Indoor, exposed return located in unconditioned space.
- B. Items Not Insulated:
 - 1. Fibrous-glass ducts.
 - 2. Metal ducts with duct liner of sufficient thickness to comply with energy code and ASHRAE/IESNA 90.1.
 - 3. Factory-insulated flexible ducts.
 - 4. Factory-insulated plenums and casings.
 - 5. Flexible connectors.
 - 6. Vibration-control devices.
 - 7. Factory-insulated access panels and doors.
- C. Insulation shall have an R value that meets the minimum requirements of the latest International Energy Conservation Code (IECC).

3.12 INDOOR DUCT AND PLENUM INSULATION SCHEDULE

- A. Concealed, round and flat-oval, supply-air duct insulation shall be one of the following:
 - 1. Flexible Elastomeric: 1 inch thick.
 - 2. Mineral-Fiber Blanket: 2 inches thick and 0.75-lb/cu. ft. nominal density.
- B. Concealed, round and flat-oval, return-air duct insulation shall be one of the following:
 - 1. Flexible Elastomeric: 1 inch thick.
 - 2. Mineral-Fiber Blanket: 2 inches thick and 0.75-lb/cu. ft. nominal density.
- C. Concealed, round and flat-oval, outdoor-air and combustion-air duct insulation shall be one of the following:
 - 1. Flexible Elastomeric: 1 inch thick.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

2. Mineral-Fiber Blanket: 2 inches thick and 0.75-lb/cu. ft. nominal density.
- D. Concealed, round and flat-oval, exhaust-air duct insulation shall be one of the following:
1. Flexible Elastomeric: 1 inch thick.
 2. Mineral-Fiber Blanket: 2 inches thick and 0.75-lb/cu. ft. nominal density.
- E. Concealed, rectangular, supply-air duct insulation shall be one of the following:
1. Flexible Elastomeric: 1 inch thick.
 2. Mineral-Fiber Blanket: 2 inches thick and 0.75-lb/cu. ft. nominal density.
- F. Concealed, rectangular, return-air duct insulation shall be one of the following:
1. Flexible Elastomeric: 1 inch thick.
 2. Mineral-Fiber Blanket: 2 inches thick and 0.75-lb/cu. ft. nominal density.
- G. Concealed, rectangular, outdoor-air and combustion-air duct insulation shall be one of the following:
1. Flexible Elastomeric: 1 inch thick.
 2. Mineral-Fiber Blanket: 2 inches thick and 0.75-lb/cu. ft. nominal density.
- H. Concealed, supply-air plenum insulation shall be one of the following:
1. Flexible Elastomeric: 1 inch thick.
 2. Mineral-Fiber Blanket: 2 inches thick and 0.75-lb/cu. ft. nominal density.
- I. Concealed, return-air plenum insulation shall be one of the following:
1. Flexible Elastomeric: 1 inch thick.
 2. Mineral-Fiber Blanket: 2 inches thick and 0.75-lb/cu. ft. nominal density.
- J. Concealed, outdoor-air plenum insulation shall be one of the following:
1. Flexible Elastomeric: 1 inch thick.
 2. Mineral-Fiber Blanket: 2 inches thick and 0.75-lb/cu. ft. nominal density.
- K. Exposed, round and flat-oval, supply-air duct insulation shall be one of the following:
1. Flexible Elastomeric: 1 inch thick.
 2. Mineral-Fiber Blanket: 2 inches thick and 0.75-lb/cu. ft. nominal density.
- L. Exposed, round and flat-oval, return-air duct insulation shall be one of the following:
1. Flexible Elastomeric: 1 inch thick.
 2. Mineral-Fiber Blanket: 2 inches thick and 0.75-lb/cu. ft. nominal density.
- M. Exposed, round and flat-oval, outdoor-air and combustion-air duct insulation shall be one of the following:
1. Flexible Elastomeric: 1 inch thick.
 2. Mineral-Fiber Blanket: 2 inches thick and 0.75-lb/cu. ft. nominal density.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- N. Exposed, rectangular, supply-air duct insulation shall be one of the following:
1. Flexible Elastomeric: 1 inch thick.
 2. Mineral-Fiber Blanket: 2 inches thick and 0.75-lb/cu. ft. nominal density.
- O. Exposed, rectangular, return-air duct insulation shall be one of the following:
1. Flexible Elastomeric: 1 inch thick.
 2. Mineral-Fiber Blanket: 2 inches thick and 0.75-lb/cu. ft. nominal density.
- P. Exposed, supply-air plenum insulation shall be one of the following:
1. Flexible Elastomeric: 1 inch thick.
 2. Mineral-Fiber Blanket: 2 inches thick and 0.75-lb/cu. ft. nominal density.
- Q. Exposed, return-air plenum insulation shall be one of the following:
1. Flexible Elastomeric: 1 inch thick.
 2. Mineral-Fiber Blanket: 2 inches thick and 0.75-lb/cu. ft. nominal density.

END OF SECTION 230713

SECTION 230719

HVAC PIPING INSULATION

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section includes insulating the following HVAC piping systems:
 - 1. Chilled-water piping.
 - 2. Heating hot-water piping.
 - 3. Refrigerant suction and hot-gas piping.
- B. Related Sections:
 - 1. Section 23 0713 "Duct Insulation."

1.3 DEFINITIONS:

- A. Refer to Section 23 0500 "Common Work Results for HVAC".

1.4 ACTION SUBMITTALS

- A. Product Data: For each type of product indicated. Include thermal conductivity, water-vapor permeance thickness, and jackets (both factory and field applied if any).
- B. Shop Drawings: Include plans, elevations, sections, details, and attachments to other work.
 - 1. Detail application of protective shields, saddles, and inserts at hangers for each type of insulation and hanger.
 - 2. Detail attachment and covering of heat tracing inside insulation.
 - 3. Detail insulation application at pipe expansion joints for each type of insulation.
 - 4. Detail insulation application at elbows, fittings, flanges, valves, and specialties for each type of insulation.
 - 5. Detail removable insulation at piping specialties.
 - 6. Detail application of field-applied jackets.
 - 7. Detail application at linkages of control devices.

1.5 INFORMATIONAL SUBMITTALS

- A. Qualification Data: For qualified Installer.
- B. Material Test Reports: From a qualified testing agency acceptable to authorities having

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

jurisdiction indicating, interpreting, and certifying test results for compliance of insulation materials, sealers, attachments, cements, and jackets, with requirements indicated. Include dates of tests and test methods employed.

1.6 QUALITY ASSURANCE

- A. Installer Qualifications: Skilled mechanics who have successfully completed an apprenticeship program or another craft training program certified by the Department of Labor, Bureau of Apprenticeship and Training.
- B. Surface-Burning Characteristics: For insulation and related materials, as determined by testing identical products according to ASTM E 84, by a testing and inspecting agency acceptable to authorities having jurisdiction. Factory label insulation and jacket materials and adhesive, mastic, tapes, and cement material containers, with appropriate markings of applicable testing agency.
 - 1. Insulation Installed Indoors: Flame-spread index of 25 or less, and smoke-developed index of 50 or less.
 - 2. Insulation Installed Outdoors: Flame-spread index of 75 or less, and smoke-developed index of 150 or less.

1.7 DELIVERY, STORAGE, AND HANDLING

- A. Packaging: Insulation material containers shall be marked by manufacturer with appropriate ASTM standard designation, type and grade, and maximum use temperature.

1.8 COORDINATION

- A. Coordinate sizes and locations of supports, hangers, and insulation shields specified in Section 23 0529 "Hangers and Supports for HVAC Piping and Equipment."
- B. Coordinate clearance requirements with piping Installer for piping insulation application. Before preparing piping Shop Drawings, establish and maintain clearance requirements for installation of insulation and field-applied jackets and finishes and for space required for maintenance.

1.9 SCHEDULING

- A. Schedule insulation application after pressure testing systems and, where required, after installing and testing heat tracing. Insulation application may begin on segments that have satisfactory test results.
- B. Complete installation and concealment of plastic materials as rapidly as possible in each area of construction.

PART 2 - PRODUCTS

2.1 INSULATION MATERIALS

- A. Comply with requirements in "Piping Insulation Schedule, General," "Indoor Piping Insulation Schedule," "Outdoor, Aboveground Piping Insulation Schedule," and "Outdoor, Underground

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

Piping Insulation Schedule" articles for where insulating materials shall be applied.

- B. Insulation for below-ambient service requires a vapor-barrier.
- C. Products shall not contain asbestos, lead, mercury, or mercury compounds.
- D. Products that come in contact with stainless steel shall have a leachable chloride content of less than 50 ppm when tested according to ASTM C 871.
- E. Insulation materials for use on austenitic stainless steel shall be qualified as acceptable according to ASTM C 795.
- F. Foam insulation materials shall not use CFC or HCFC blowing agents in the manufacturing process.
- G. Calcium Silicate:
 - 1. Products: Subject to compliance with requirements, provide the following:
 - a. Industrial Insulation Group (IIG); Thermo-12 Gold.
 - 2. Preformed Pipe Sections: Flat-, curved-, and grooved-block sections of noncombustible, inorganic, hydrous calcium silicate with a non-asbestos fibrous reinforcement. Comply with ASTM C 533, Type I.
 - 3. Flat-, curved-, and grooved-block sections of noncombustible, inorganic, hydrous calcium silicate with a non-asbestos fibrous reinforcement. Comply with ASTM C 533, Type I.
 - 4. Prefabricated Fitting Covers: Comply with ASTM C 450 and ASTM C 585 for dimensions used in preforming insulation to cover valves, elbows, tees, and flanges.
- H. Flexible Elastomeric Insulation: Closed-cell, sponge- or expanded-rubber materials. Comply with ASTM C 534, Type I for tubular materials.
 - 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Aeroflex USA, Inc.; Aerocel.
 - b. Armacell LLC; AP Armaflex.
 - c. K-Flex USA; Insul-Lock, Insul-Tube, and K-FLEX LS.
- I. Mineral-Fiber Blanket Insulation: Mineral or glass fibers bonded with a thermosetting resin. Comply with ASTM C 553,
 - 1. Type II and ASTM C 1290, Factory-applied jacket requirements are specified in "Factory-Applied Jackets" Article.
 - 2. Products: Subject to compliance with requirements, provide one of the following:
 - a. CertainTeed Corp.; SoftTouch Duct Wrap.
 - b. Johns Manville; Microlite.
 - c. Knauf Insulation; Friendly Feel Duct Wrap.
 - d. Manson Insulation Inc.; Alley Wrap.
 - e. Owens Corning; SOFTR All-Service Duct Wrap.
- J. Mineral-Fiber, Preformed Pipe Insulation:
 - 1. Products: Subject to compliance with requirements, provide one of the following:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- a. Johns Manville; Micro-Lok.
 - b. Knauf Insulation; 1000-Degree Pipe Insulation.
 - c. Manson Insulation Inc.; Alley-K.
 - d. Owens Corning; Fiberglas Pipe Insulation.
 - e. Type I, 850 deg F Materials: Mineral or glass fibers bonded with a thermosetting resin. Comply with ASTM C 547, Type I, Grade A:
 - 1) with factory-applied ASJ-SSL. Factory-applied jacket requirements are specified in "Factory-Applied Jackets" Article.
- K. Mineral-Fiber, Pipe and Tank Insulation: Mineral or glass fibers bonded with a thermosetting resin. Semirigid board material with factory-applied:
 - 1. ASJ complying with ASTM C 1393, Type II or Type IIIA Category 2, or with properties similar to ASTM C 612, Type IB. Nominal density is 2.5 lb/cu. ft. or more. Thermal conductivity (k-value) at 100 deg F is 0.29 Btu x in./h x sq. ft. x deg F or less. Factory-applied jacket requirements are specified in "Factory-Applied Jackets" Article.
 - 2. Products: Subject to compliance with requirements, provide one of the following:
 - a. CertainTeed Corp.; CrimpWrap.
 - b. Johns Manville; MicroFlex.
 - c. Knauf Insulation; Pipe and Tank Insulation.
 - d. Manson Insulation Inc.; AK Flex.
 - e. Owens Corning; Fiberglas Pipe and Tank Insulation.
- L. Prefabricated Thermal Insulating Fitting Covers: Comply with ASTM C 450 for dimensions used in preforming insulation to cover valves, elbows, tees, and flanges.

2.2 INSULATING CEMENTS

- A. Mineral-Fiber Insulating Cement: Comply with ASTM C 195.
 - 1. Products: Subject to compliance with requirements, provide the following:
 - a. Ramco Insulation, Inc.; Super-Stik.
- B. Mineral-Fiber, Hydraulic-Setting Insulating and Finishing Cement: Comply with ASTM C 449.
 - 1. Products: Subject to compliance with requirements, provide the following:
 - a. Ramco Insulation, Inc.; Ramcote 1200 and Quik-Cote.

2.3 ADHESIVES

- A. Materials shall be compatible with insulation materials, jackets, and substrates and for bonding insulation to itself and to surfaces to be insulated unless otherwise indicated.
- B. Calcium Silicate Adhesive: Fibrous, sodium-silicate-based adhesive with a service temperature range of 50 to 800 deg F.
 - 1. Products: Subject to compliance with requirements, provide one of the following:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; CP-97.
 - b. Eagle Bridges - Marathon Industries; 290.
 - c. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 81-27.
 - d. Mon-Eco Industries, Inc.; 22-30.
 - e. Vimasco Corporation; 760.
 2. For indoor applications, adhesive shall have a VOC content of 80 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).
- C. Flexible Elastomeric Adhesive: Comply with MIL-A-24179A, Type II, Class I.
1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Aeroflex USA, Inc.; Aero seal.
 - b. Armacell LLC; Armaflex 520 Adhesive.
 - c. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 85-75.
 - d. K-Flex USA; R-373 Contact Adhesive.
 2. For indoor applications, adhesive shall have a VOC content of 50 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).
- D. Mineral-Fiber Adhesive: Comply with MIL-A-3316C, Class 2, Grade A.
1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; CP-127.
 - b. Eagle Bridges - Marathon Industries; 225.
 - c. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 85-60/85-70.
 - d. Mon-Eco Industries, Inc.; 22-25.
 2. For indoor applications, adhesive shall have a VOC content of 80 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).
- E. ASJ Adhesive, and FSK Jacket Adhesive: Comply with MIL-A-3316C, Class 2, Grade A for bonding insulation jacket lap seams and joints.
1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; CP-82.
 - b. Eagle Bridges - Marathon Industries; 225.
 - c. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 85-50.
 - d. Mon-Eco Industries, Inc.; 22-25.
 2. For indoor applications, adhesive shall have a VOC content of 50 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).
- F. PVC Jacket Adhesive: Compatible with PVC jacket.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Dow Corning Corporation; 739, Dow Silicone.
 - b. Johns Manville; Zeston Perma-Weld, CEEL-TITE Solvent Welding Adhesive.
 - c. P.I.C. Plastics, Inc.; Welding Adhesive.
 - d. Speedline Corporation; Polyco VP Adhesive.
2. For indoor applications, adhesive shall have a VOC content of 50 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).

2.4 MASTICS

- A. Materials shall be compatible with insulation materials, jackets, and substrates; comply with MIL-PRF-19565C, Type II.
 1. For indoor applications, use mastics that have a VOC content of 50 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).
- B. Vapor-Barrier Mastic: Water based; suitable for indoor use on below-ambient services.
 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 30-80/30-90.
 - b. Vimasco Corporation; 749.
 2. Water-Vapor Permeance: ASTM E 96/E 96M, Procedure B, 0.013 perm at 43-mil dry film thickness.
 3. Service Temperature Range: Minus 20 to plus 180 deg F.
 4. Solids Content: ASTM D 1644, 58 percent by volume and 70 percent by weight.
 5. Color: White.
- C. Vapor-Barrier Mastic: Solvent based; suitable for outdoor use on below-ambient services.
 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; Encacel.
 - b. Eagle Bridges - Marathon Industries; 570.
 - c. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 60-95/60-96.
 2. Water-Vapor Permeance: ASTM F 1249, 0.05 perm at 30-mil dry film thickness.
 3. Service Temperature Range: Minus 50 to plus 220 deg F.
 4. Solids Content: ASTM D 1644, 33 percent by volume and 46 percent by weight.
 5. Color: White.
- D. Breather Mastic: Water based; suitable for indoor and outdoor use on above-ambient services.
 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; CP-10.
 - b. Eagle Bridges - Marathon Industries; 550.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- c. Foster Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; 46-50.
 - d. Mon-Eco Industries, Inc.; 55-50.
 - e. Vimasco Corporation; WC-1/WC-5.
- 2. Water-Vapor Permeance: ASTM F 1249, 1.8 perms at 0.0625-inch dry film thickness.
 - 3. Service Temperature Range: Minus 20 to plus 180 deg F.
 - 4. Solids Content: 60 percent by volume and 66 percent by weight.
 - 5. Color: White.

2.5 SEALANTS

A. ASJ Flashing Sealants and PVC Jacket Flashing Sealants:

- 1. Products: Subject to compliance with requirements, provide the following:
 - a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; CP-76.
- 2. Materials shall be compatible with insulation materials, jackets, and substrates.
- 3. Fire- and water-resistant, flexible, elastomeric sealant.
- 4. Service Temperature Range: Minus 40 to plus 250 deg F.
- 5. Color: White.
- 6. For indoor applications, sealants shall have a VOC content of 420 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).

2.6 FACTORY-APPLIED JACKETS

A. Insulation system schedules indicate factory-applied jackets on various applications. When factory-applied jackets are indicated, comply with the following:

- 1. ASJ-SSL: ASJ with self-sealing, pressure-sensitive, acrylic-based adhesive covered by a removable protective strip; complying with ASTM C 1136, Type I.

2.7 FIELD-APPLIED JACKETS

A. Field-applied jackets shall comply with ASTM C 921, Type I, unless otherwise indicated.

B. PVC Jacket: High-impact-resistant, UV-resistant PVC complying with ASTM D 1784, Class 16354-C; thickness as scheduled; roll stock ready for shop or field cutting and forming. Thickness is indicated in field-applied jacket schedules.

- 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Johns Manville; Zeston.
 - b. P.I.C. Plastics, Inc.; FG Series.
 - c. Proto Corporation; LoSmoke.
 - d. Speedline Corporation; SmokeSafe.
- 2. Adhesive: As recommended by jacket material manufacturer.
- 3. Color: Color-code jackets based on system:
 - a. White

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

4. Factory-fabricated fitting covers to match jacket if available; otherwise, field fabricate.
 - a. Shapes: 45- and 90-degree, short- and long-radius elbows, tees, valves, flanges, unions, reducers, end caps, soil-pipe hubs, traps, mechanical joints, and P-trap and supply covers for lavatories.

C. Metal Jacket:

1. Products: Subject to compliance with requirements, provide one of the following:
 - a. Childers Brand, Specialty Construction Brands, Inc., a business of H. B. Fuller Company; Metal Jacketing Systems.
 - b. ITW Insulation Systems; Aluminum and Stainless Steel Jacketing.
 - c. RPR Products, Inc.; Insul-Mate.
2. Aluminum Jacket: Comply with ASTM B 209, Alloy 3003, 3005, 3105, or 5005, Temper H-14.
 - a. Sheet and roll stock ready for shop or field sizing or factory cut and rolled to size.
 - b. Finish and thickness are indicated in field-applied jacket schedules.
 - c. Moisture Barrier for Indoor Applications:
 - 1) 1-mil- thick, heat-bonded polyethylene and kraft paper.
 - d. Moisture Barrier for Outdoor Applications:
 - 1) 3-mil- thick, heat-bonded polyethylene and kraft paper.
 - e. Factory-Fabricated Fitting Covers:
 - 1) Same material, finish, and thickness as jacket.
 - 2) Preformed 2-piece or gore, 45- and 90-degree, short- and long-radius elbows.
 - 3) Tee covers.
 - 4) Flange and union covers.
 - 5) End caps.
 - 6) Beveled collars.
 - 7) Valve covers.
 - 8) Field fabricate fitting covers only if factory-fabricated fitting covers are not available.

2.8 TAPES

- A. ASJ Tape: White vapor-retarder tape matching factory-applied jacket with acrylic adhesive, complying with ASTM C 1136.
 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. ABI, Ideal Tape Division; 428 AWF ASJ.
 - b. Avery Dennison Corporation, Specialty Tapes Division; Fasson 0836.
 - c. Compac Corporation; 104 and 105.
 - d. Venture Tape; 1540 CW Plus, 1542 CW Plus, and 1542 CW Plus/SQ.
 2. Width: 3 inches.
 3. Thickness: 11.5 mils.
 4. Adhesion: 90 ounces force/inch in width.
 5. Elongation: 2 percent.
 6. Tensile Strength: 40 lbf/inch in width.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

7. ASJ Tape Disks and Squares: Precut disks or squares of ASJ tape.
- B. PVC Tape: White vapor-retarder tape matching field-applied PVC jacket with acrylic adhesive; suitable for indoor and outdoor applications.
 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. ABI, Ideal Tape Division; 370 White PVC tape.
 - b. Compac Corporation; 130.
 - c. Venture Tape; 1506 CW NS.
 2. Width: 2 inches.
 3. Thickness: 6 mils.
 4. Adhesion: 64 ounces force/inch in width.
 5. Elongation: 500 percent.
 6. Tensile Strength: 18 lbf/inch in width.
- C. Aluminum-Foil Tape: Vapor-retarder tape with acrylic adhesive.
 1. Products: Subject to compliance with requirements, provide one of the following:
 - a. ABI, Ideal Tape Division; 488 AWF.
 - b. Avery Dennison Corporation, Specialty Tapes Division; Fasson 0800.
 - c. Compac Corporation; 120.
 - d. Venture Tape; 3520 CW.
 2. Width: 2 inches.
 3. Thickness: 3.7 mils.
 4. Adhesion: 100 ounces force/inch in width.
 5. Elongation: 5 percent.
 6. Tensile Strength: 34 lbf/inch in width.

2.9 SECUREMENTS

- A. Staples: Outward-clinching insulation staples, nominal 3/4-inch- wide, stainless steel or Monel.

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine substrates and conditions for compliance with requirements for installation tolerances and other conditions affecting performance of insulation application.
 1. Verify that systems to be insulated have been tested and are free of defects.
 2. Verify that surfaces to be insulated are clean and dry.
 3. Proceed with installation only after unsatisfactory conditions have been corrected.

3.2 PREPARATION

- A. Surface Preparation: Clean and dry surfaces to receive insulation. Remove materials that will adversely affect insulation application.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- B. Mix insulating cements with clean potable water; if insulating cements are to be in contact with stainless-steel surfaces, use demineralized water.

3.3 GENERAL INSTALLATION REQUIREMENTS

- A. Install insulation materials, accessories, and finishes with smooth, straight, and even surfaces; free of voids throughout the length of piping including fittings, valves, and specialties.
- B. Install insulation materials, forms, vapor barriers or retarders, jackets, and thicknesses required for each item of pipe system as specified in insulation system schedules.
- C. Install accessories compatible with insulation materials and suitable for the service. Install accessories that do not corrode, soften, or otherwise attack insulation or jacket in either wet or dry state.
- D. Install insulation with longitudinal seams at top and bottom of horizontal runs.
- E. Install multiple layers of insulation with longitudinal and end seams staggered.
- F. Do not weld brackets, clips, or other attachment devices to piping, fittings, and specialties.
- G. Keep insulation materials dry during application and finishing.
- H. Install insulation with tight longitudinal seams and end joints. Bond seams and joints with adhesive recommended by insulation material manufacturer.
- I. Install insulation with least number of joints practical.
- J. Where vapor barrier is indicated, seal joints, seams, and penetrations in insulation at hangers, supports, anchors, and other projections with vapor-barrier mastic.
 - 1. Install insulation continuously through hangers and around anchor attachments.
 - 2. For insulation application where vapor barriers are indicated, extend insulation on anchor legs from point of attachment to supported item to point of attachment to structure. Taper and seal ends at attachment to structure with vapor-barrier mastic.
 - 3. Install insert materials and install insulation to tightly join the insert. Seal insulation to insulation inserts with adhesive or sealing compound recommended by insulation material manufacturer.
 - 4. Cover inserts with jacket material matching adjacent pipe insulation. Install shields over jacket, arranged to protect jacket from tear or puncture by hanger, support, and shield.
- K. Apply adhesives, mastics, and sealants at manufacturer's recommended coverage rate and wet and dry film thicknesses.
- L. Install insulation with factory-applied jackets as follows:
 - 1. Draw jacket tight and smooth.
 - 2. Cover circumferential joints with 3-inch- wide strips, of same material as insulation jacket. Secure strips with adhesive and outward clinching staples along both edges of strip, spaced 4 inches o.c.
 - 3. Overlap jacket longitudinal seams at least 1-1/2 inches. Install insulation with longitudinal seams at bottom of pipe. Clean and dry surface to receive self-sealing lap. Staple laps with outward clinching staples along edge at
 - a. 2 inches o.c.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- b. For below-ambient services, apply vapor-barrier mastic over staples.
- 4. Cover joints and seams with tape, according to insulation material manufacturer's written instructions, to maintain vapor seal.
- 5. Where vapor barriers are indicated, apply vapor-barrier mastic on seams and joints and at ends adjacent to pipe flanges and fittings.
- M. Cut insulation in a manner to avoid compressing insulation more than 75 percent of its nominal thickness.
- N. Finish installation with systems at operating conditions. Repair joint separations and cracking due to thermal movement.
- O. Repair damaged insulation facings by applying same facing material over damaged areas. Extend patches at least 4 inches beyond damaged areas. Adhere, staple, and seal patches similar to butt joints.
- P. For above-ambient services, do not install insulation to the following:
 - 1. Vibration-control devices.
 - 2. Testing agency labels and stamps.
 - 3. Nameplates and data plates.
 - 4. Manholes.
 - 5. Handholes.
 - 6. Cleanouts.

3.4 PENETRATIONS

- A. Insulation Installation at Roof Penetrations: Install insulation continuously through roof penetrations.
 - 1. Seal penetrations with flashing sealant.
 - 2. For applications requiring only indoor insulation, terminate insulation above roof surface and seal with joint sealant. For applications requiring indoor and outdoor insulation, install insulation for outdoor applications tightly joined to indoor insulation ends. Seal joint with joint sealant.
 - 3. Extend jacket of outdoor insulation outside roof flashing at least 2 inches below top of roof flashing.
 - 4. Seal jacket to roof flashing with flashing sealant.
- B. Insulation Installation at Underground Exterior Wall Penetrations: Terminate insulation flush with sleeve seal. Seal terminations with flashing sealant.
- C. Insulation Installation at Aboveground Exterior Wall Penetrations: Install insulation continuously through wall penetrations.
 - 1. Seal penetrations with flashing sealant.
 - 2. For applications requiring only indoor insulation, terminate insulation inside wall surface and seal with joint sealant. For applications requiring indoor and outdoor insulation, install insulation for outdoor applications tightly joined to indoor insulation ends. Seal joint with joint sealant.
 - 3. Extend jacket of outdoor insulation outside wall flashing and overlap wall flashing at least 2 inches.
 - 4. Seal jacket to wall flashing with flashing sealant.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- D. Insulation Installation at Interior Wall and Partition Penetrations (That Are Not Fire Rated): Install insulation continuously through walls and partitions.
- E. Insulation Installation at Fire-Rated Wall and Partition Penetrations: Install insulation continuously through penetrations of fire-rated walls and partitions.
 - 1. Comply with requirements in Section 078413 "Penetration Firestopping" for firestopping and fire-resistive joint sealers.
- F. Insulation Installation at Floor Penetrations:
 - 1. Pipe: Install insulation continuously through floor penetrations.
 - 2. Seal penetrations through fire-rated assemblies. Comply with requirements in Section 078413 "Penetration Firestopping."

3.5 GENERAL PIPE INSULATION INSTALLATION

- A. Requirements in this article generally apply to all insulation materials except where more specific requirements are specified in various pipe insulation material installation articles.
- B. Insulation Installation on Fittings, Valves, Strainers, Flanges, and Unions:
 - 1. Install insulation over fittings, valves, strainers, flanges, unions, and other specialties with continuous thermal and vapor-retarder integrity unless otherwise indicated.
 - 2. Insulate pipe elbows using preformed fitting insulation or mitered fittings made from same material and density as adjacent pipe insulation. Each piece shall be butted tightly against adjoining piece and bonded with adhesive. Fill joints, seams, voids, and irregular surfaces with insulating cement finished to a smooth, hard, and uniform contour that is uniform with adjoining pipe insulation.
 - 3. Insulate tee fittings with preformed fitting insulation or sectional pipe insulation of same material and thickness as used for adjacent pipe. Cut sectional pipe insulation to fit. Butt each section closely to the next and hold in place with tie wire. Bond pieces with adhesive.
 - 4. Insulate valves using preformed fitting insulation or sectional pipe insulation of same material, density, and thickness as used for adjacent pipe. Overlap adjoining pipe insulation by not less than two times the thickness of pipe insulation, or one pipe diameter, whichever is thicker. For valves, insulate up to and including the bonnets, valve stuffing-box studs, bolts, and nuts. Fill joints, seams, and irregular surfaces with insulating cement.
 - 5. Insulate strainers using preformed fitting insulation or sectional pipe insulation of same material, density, and thickness as used for adjacent pipe. Overlap adjoining pipe insulation by not less than two times the thickness of pipe insulation, or one pipe diameter, whichever is thicker. Fill joints, seams, and irregular surfaces with insulating cement. Insulate strainers so strainer basket flange or plug can be easily removed and replaced without damaging the insulation and jacket. Provide a removable reusable insulation cover. For below-ambient services, provide a design that maintains vapor barrier.
 - 6. Insulate flanges and unions using a section of oversized preformed pipe insulation. Overlap adjoining pipe insulation by not less than two times the thickness of pipe insulation, or one pipe diameter, whichever is thicker.
 - 7. Cover segmented insulated surfaces with a layer of finishing cement and coat with a mastic. Install vapor-barrier mastic for below-ambient services and a breather mastic for above-ambient services. Reinforce the mastic with fabric-reinforcing mesh. Trowel the mastic to a smooth and well-shaped contour.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

8. For services not specified to receive a field-applied jacket except for flexible elastomeric install fitted PVC cover over elbows, tees, strainers, valves, flanges, and unions. Terminate ends with PVC end caps. Tape PVC covers to adjoining insulation facing using PVC tape.
 9. Stencil or label the outside insulation jacket of each union with the word "union." Match size and color of pipe labels.
- C. Insulate instrument connections for thermometers, pressure gages, pressure temperature taps, test connections, flow meters, sensors, switches, and transmitters on insulated pipes. Shape insulation at these connections by tapering it to and around the connection with insulating cement and finish with finishing cement, mastic, and flashing sealant.
- D. Install removable insulation covers at locations indicated. Installation shall conform to the following:
1. Make removable flange and union insulation from sectional pipe insulation of same thickness as that on adjoining pipe. Install same insulation jacket as adjoining pipe insulation.
 2. When flange and union covers are made from sectional pipe insulation, extend insulation from flanges or union long at least two times the insulation thickness over adjacent pipe insulation on each side of flange or union. Secure flange cover in place with stainless-steel or aluminum bands. Select band material compatible with insulation and jacket.
 3. Construct removable valve insulation covers in same manner as for flanges, except divide the two-part section on the vertical center line of valve body.
 4. When covers are made from block insulation, make two halves, each consisting of mitered blocks wired to stainless-steel fabric. Secure this wire frame, with its attached insulation, to flanges with tie wire. Extend insulation at least 2 inches over adjacent pipe insulation on each side of valve. Fill space between flange or union cover and pipe insulation with insulating cement. Finish cover assembly with insulating cement applied in two coats. After first coat is dry, apply and trowel second coat to a smooth finish.
 5. Unless a PVC jacket is indicated in field-applied jacket schedules, finish exposed surfaces with a metal jacket.

3.6 INSTALLATION OF CALCIUM SILICATE INSULATION

- A. Insulation Installation on Straight Pipes and Tubes:
1. Secure single-layer insulation with stainless-steel bands at 12-inch intervals and tighten bands without deforming insulation materials.
 2. Install two-layer insulation with joints tightly butted and staggered at least 3 inches. Secure inner layer with wire spaced at 12-inch intervals. Secure outer layer with stainless-steel bands at 12-inch intervals.
 3. Apply a skim coat of mineral-fiber, hydraulic-setting cement to insulation surface. When cement is dry, apply flood coat of lagging adhesive and press on one layer of glass cloth or tape. Overlap edges at least 1 inch. Apply finish coat of lagging adhesive over glass cloth or tape. Thin finish coat to achieve smooth, uniform finish.
- B. Insulation Installation on Pipe Flanges:
1. Install preformed pipe insulation to outer diameter of pipe flange.
 2. Make width of insulation section same as overall width of flange and bolts, plus twice the thickness of pipe insulation.
 3. Fill voids between inner circumference of flange insulation and outer circumference of adjacent straight pipe segments with cut sections of block insulation of same material and

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- thickness as pipe insulation.
- 4. Finish flange insulation same as pipe insulation.
- C. Insulation Installation on Pipe Fittings and Elbows:
 - 1. Install preformed sections of same material as straight segments of pipe insulation when available. Secure according to manufacturer's written instructions.
 - 2. When preformed insulation sections of insulation are not available, install mitered sections of calcium silicate insulation. Secure insulation materials with wire or bands.
 - 3. Finish fittings insulation same as pipe insulation.
- D. Insulation Installation on Valves and Pipe Specialties:
 - 1. Install mitered segments of calcium silicate insulation to valve body. Arrange insulation to permit access to packing and to allow valve operation without disturbing insulation.
 - 2. Install insulation to flanges as specified for flange insulation application.
 - 3. Finish valve and specialty insulation same as pipe insulation.

3.7 INSTALLATION OF FLEXIBLE ELASTOMERIC INSULATION

- A. Seal longitudinal seams and end joints with manufacturer's recommended adhesive to eliminate openings in insulation that allow passage of air to surface being insulated.
- B. Insulation Installation on Pipe Flanges:
 - 1. Install pipe insulation to outer diameter of pipe flange.
 - 2. Make width of insulation section same as overall width of flange and bolts, plus twice the thickness of pipe insulation.
 - 3. Fill voids between inner circumference of flange insulation and outer circumference of adjacent straight pipe segments with cut sections of sheet insulation of same thickness as pipe insulation.
 - 4. Secure insulation to flanges and seal seams with manufacturer's recommended adhesive to eliminate openings in insulation that allow passage of air to surface being insulated.
- C. Insulation Installation on Pipe Fittings and Elbows:
 - 1. Install mitered sections of pipe insulation.
 - 2. Secure insulation materials and seal seams with manufacturer's recommended adhesive to eliminate openings in insulation that allow passage of air to surface being insulated.
- D. Insulation Installation on Valves and Pipe Specialties:
 - 1. Install preformed valve covers manufactured of same material as pipe insulation when available.
 - 2. When preformed valve covers are not available, install cut sections of pipe and sheet insulation to valve body. Arrange insulation to permit access to packing and to allow valve operation without disturbing insulation.
 - 3. Install insulation to flanges as specified for flange insulation application.
 - 4. Secure insulation to valves and specialties and seal seams with manufacturer's recommended adhesive to eliminate openings in insulation that allow passage of air to surface being insulated.

3.8 INSTALLATION OF MINERAL-FIBER INSULATION

A. Insulation Installation on Straight Pipes and Tubes:

1. Secure each layer of preformed pipe insulation to pipe with wire or bands and tighten bands without deforming insulation materials.
2. Where vapor barriers are indicated, seal longitudinal seams, end joints, and protrusions with vapor-barrier mastic and joint sealant.
3. For insulation with factory-applied jackets on above-ambient surfaces, secure laps with outward-clinched staples at 6 inches o.c.
4. For insulation with factory-applied jackets on below-ambient surfaces, do not staple longitudinal tabs. Instead, secure tabs with additional adhesive as recommended by insulation material manufacturer and seal with vapor-barrier mastic and flashing sealant.

B. Insulation Installation on Pipe Flanges:

1. Install preformed pipe insulation to outer diameter of pipe flange.
2. Make width of insulation section same as overall width of flange and bolts, plus twice the thickness of pipe insulation.
3. Fill voids between inner circumference of flange insulation and outer circumference of adjacent straight pipe segments with mineral-fiber blanket insulation.
4. Install jacket material with manufacturer's recommended adhesive, overlap seams at least 1 inch, and seal joints with flashing sealant.

C. Insulation Installation on Pipe Fittings and Elbows:

1. Install preformed sections of same material as straight segments of pipe insulation when available.
2. When preformed insulation elbows and fittings are not available, install mitered sections of pipe insulation, to a thickness equal to adjoining pipe insulation. Secure insulation materials with wire or bands.

D. Insulation Installation on Valves and Pipe Specialties:

1. Install preformed sections of same material as straight segments of pipe insulation when available.
2. When preformed sections are not available, install mitered sections of pipe insulation to valve body.
3. Arrange insulation to permit access to packing and to allow valve operation without disturbing insulation.
4. Install insulation to flanges as specified for flange insulation application.

3.9 FIELD-APPLIED JACKET INSTALLATION

A. Where PVC jackets are indicated, install with 1-inch overlap at longitudinal seams and end joints; for horizontal applications. Seal with manufacturer's recommended adhesive.

1. Apply two continuous beads of adhesive to seams and joints, one bead under lap and the finish bead along seam and joint edge.

B. Where metal jackets are indicated, install with 2-inch overlap at longitudinal seams and end joints. Overlap longitudinal seams arranged to shed water. Seal end joints with weatherproof

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

sealant recommended by insulation manufacturer. Secure jacket with stainless-steel bands 12 inches o.c. and at end joints.

3.10 FINISHES

- A. Pipe Insulation with ASJ, Glass-Cloth, or Other Paintable Jacket Material: Paint jacket with paint system identified below and as specified in Section 09 9113 "Exterior Painting" and Section 09 9123 "Interior Painting."
 - 1. Flat Acrylic Finish: Two finish coats over a primer that is compatible with jacket material and finish coat paint. Add fungicidal agent to render fabric mildew proof.
 - a. Finish Coat Material: Interior, flat, latex-emulsion size.
- B. Flexible Elastomeric Thermal Insulation: After adhesive has fully cured, apply two coats of insulation manufacturer's recommended protective coating.
- C. Color: Final color as selected by Architect. Vary first and second coats to allow visual inspection of the completed Work.
- D. Do not field paint aluminum or stainless-steel jackets.

3.11 PIPING INSULATION SCHEDULE, GENERAL

- A. Acceptable preformed pipe and tubular insulation materials and thicknesses are identified for each piping system and pipe size range. If more than one material is listed for a piping system, selection from materials listed is Contractor's option.
- B. Items Not Insulated: Unless otherwise indicated, do not install insulation on the following:
 - 1. Drainage piping located in crawl spaces.
 - 2. Underground piping.
 - 3. Chrome-plated pipes and fittings unless there is a potential for personnel injury.

3.12 INSULATION SHALL HAVE A K VALUE THAT MEETS THE MINIMUM REQUIREMENTS OF THE LATEST INTERNATIONAL ENERGY CONSERVATION CODE (IECC).

3.13 INDOOR PIPING INSULATION SCHEDULE

- A. Condensate and Equipment Drain Water below 60 Deg F:
 - 1. All Pipe Sizes: Insulation shall be one of the following:
 - a. Flexible Elastomeric:
 - 1) 1/2 inch thick
 - b. Mineral-Fiber, Preformed Pipe Insulation, Type I:
 - 1) 1/2 inch thick

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

B. Chilled Water, 40 Deg F and below:

1. NPS 1-1/2 inch and Smaller: Insulation shall be the following:
 - a. Flexible Elastomeric:
 - 1) 1-1/2 inch thick.
2. NPS 2 inch and Larger: Insulation shall be the following:
 - a. Flexible Elastomeric:
 - 1) 1-1/2 inch thick.
3. Insulation for runouts not exceeding 48 inches in length for connection to equipment shall be the following:
 - a. Flexible Elastomeric: 1 inch thick.

C. Chilled Water, above 40 Deg F:

1. NPS 1-1/2 inch and Smaller: Insulation shall be one of the following:
 - a. Flexible Elastomeric:
 - 1) 1-1/2 inch thick.
 - b. Mineral-Fiber, Preformed Pipe, Type I:
 - 1) 1-1/2 inches thick.
2. NPS 2 inch and Larger: Insulation shall be one of the following:
 - a. Flexible Elastomeric:
 - 1) 1-1/2 inch thick.
 - b. Mineral-Fiber, Preformed Pipe, Type I:
 - 1) 1-1/2 inches thick.
3. Insulation runouts not exceeding 48 inches in length for connection to equipment shall be one of the following:
 - a. Flexible Elastomeric: 1 inch thick.
 - b. Mineral-Fiber, Preformed Pipe, Type I: 1 inch thick
4. Condenser-water supply and return piping located indoors and operating in range of 55 to 105 deg F (13 to 41 deg C) is not always insulated. If condenser-water system operates as part of a water-side economizer cycle or if Project requires condensation control, piping should be insulated.

D. Heating-Hot-Water Supply and Return, 200 Deg F and Below:

1. NPS 1 1/2 and Smaller: Insulation shall be the following:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- a. Mineral-Fiber, Preformed Pipe, Type I:
 - 1) 1-1/2 inch thick
- 2. Greater than NPS 1-1/2 inch : Insulation shall be the following:
 - a. Mineral-Fiber, Preformed Pipe, Type I or Pipe and Tank Insulation:
 - 1) 2 inches thick
- 3. Insulation for runouts not exceeding 48 inches in length for connection to equipment shall be the following:
 - a. Mineral-Fiber, Preformed Pipe, Type I: 1 inch thick.
- E. Heating-Hot-Water Supply and Return, above 200 Deg F:
 - 1. NPS 1 and Smaller: Insulation shall be one of the following:
 - a. Calcium Silicate:
 - 1) 2 inches thick
 - b. Mineral-Fiber, Preformed Pipe, Type I or II:
 - 1) 1-1/2 inches thick
 - 2. NPS 1-1/4 and Larger: Insulation shall be one of the following:
 - a. Calcium Silicate:
 - 1) 3 inches thick
 - b. Mineral-Fiber, Preformed Pipe, Type I or II:
 - 1) 2 inches thick
 - 3. Insulation runouts not exceeding 48 inches in length for connection to equipment shall be the following:
 - a. Mineral-Fiber, Preformed Pipe, Type I: 1-1/2 inch thick.
- F. Refrigerant Suction and Hot-Gas Piping:
 - 1. All Pipe Sizes: Insulation shall be the following:
 - a. Flexible Elastomeric: 1 inch thick.
- G. Refrigerant Suction and Hot-Gas Flexible Tubing:
 - 1. All Pipe Sizes: Insulation shall be the following:
 - a. Flexible Elastomeric: 1 inch thick.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

3.14 INDOOR, FIELD-APPLIED JACKET SCHEDULE

- A. Install jacket over insulation material. For insulation with factory-applied jacket, install the field-applied jacket over the factory-applied jacket.
- B. If more than one material is listed, selection from materials listed is Contractor's option.
- C. Piping, Concealed:
 - 1. None.
- D. Piping, Exposed:
 - 1. PVC:
 - a. White: 30 mils thick.

END OF SECTION 230719

SECTION 230900

INSTRUMENTATION AND CONTROL FOR HVAC

PART 1 - GENERAL

1.1 SUMMARY

- A. This Section includes control equipment and installation for HVAC systems and components, including control components for terminal heating and cooling units not supplied with factory-furnished controls.
- B. See "Sequences of Operation" for requirements that relate to this Section.
- C. The BAS control system shall be extension of the existing Johnson Controls BAS and all controllers and software shall match existing or be latest version of existing.

1.2 SYSTEM DESCRIPTION

- A. The Building Automation System (BAS) contractor shall furnish and install a networked system of HVAC controls. The contractor shall incorporate direct digital control (DDC) for central plant equipment, building ventilation equipment, supplemental heating and cooling equipment, and terminal units.
- B. Provide networking to new DDC equipment using communication standards. The system shall not be limited to only standard protocols, but shall also be able to integrate to a wide variety of third-party devices and applications via drivers and gateways.
- C. Provide standalone controls where called for on the drawings or sequences.

1.3 WORK INCLUDED

- A. The installation of the control system shall be performed under the direct supervision of the controls manufacturer with the shop drawings, flow diagrams, bill of materials, component designation, or identification number and sequence of operation all bearing the name of the manufacturer.
- B. Furnish a complete distributed direct digital control system in accordance with this specification section. This includes all system controllers, logic controllers, and all input/output devices. Items of work included are as follows:
 - 1. Provide a submittal that meets the requirements below for approval.
 - 2. Coordinate installation schedule with the mechanical contractor and general contractor.
 - 3. Provide installation of all panels and devices unless otherwise stated.
 - 4. Provide power for panels and control devices.
 - 5. Provide all low voltage control wiring for the DDC system.
 - 6. Provide miscellaneous control wiring for HVAC and related systems regardless of voltage.
 - 7. Provide engineering and technician labor to program and commission software for each system and operator interface. Submit commissioning reports for approval.
 - 8. Participate in commissioning for all equipment that is integrated into the BAS (Refer to Commissioning sections of the equipment or systems in other parts of this specification.)
 - 9. Provide testing, demonstration and training as specified below.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1.4 SYSTEM PERFORMANCE

- A. Comply with the following performance requirements:
1. Reporting Accuracy and Stability of Control: Report values and maintain measured variables within tolerances as follows:
 - a. Water Temperature: Plus or minus 1 deg F.
 - b. Water Flow: Plus or minus 5 percent of full scale.
 - c. Water Pressure: Plus or minus 2 percent of full scale.
 - d. Space Temperature: Plus or minus 1 deg F.
 - e. Ducted Air Temperature: Plus or minus 1 deg F.
 - f. Outside Air Temperature: Plus or minus 2 deg F.
 - g. Dew Point Temperature: Plus or minus 3 deg F.
 - h. Temperature Differential: Plus or minus 0.25 deg F.
 - i. Relative Humidity: Plus or minus 2 percent.
 - j. Airflow (Pressurized Spaces): Plus or minus 3 percent of full scale.
 - k. Airflow (Measuring Stations): Plus or minus 5 percent of full scale.
 - l. Airflow (Terminal): Plus or minus 10 percent of full scale.
 - m. Air Pressure (Space): Plus or minus 0.01-inch wg.
 - n. Air Pressure (Ducts): Plus or minus 0.1-inch wg.
 - o. Carbon Monoxide: Plus or minus 5 percent of reading.
 - p. Carbon Dioxide: Plus or minus 50 ppm.
 - q. Electrical: Plus or minus 5 percent of reading.

1.5 SUBMITTALS

- A. Provide submittals for fast track items that need to be approved and released to meet the schedule of the project. Provide submissions for the following items separately:
1. Valve schedule and cut sheets
 2. Factory mounting and wiring diagrams and cut sheets
 3. Thermostat locations
- B. Provide a complete submittal with all controls system information for approval before construction starts. Include the following:
1. Wiring Diagrams: Power, signal, and control wiring.
 2. Schedule of valves including leakage and flow characteristics.
 3. Written description of the Sequence of Operations.
 4. Network riser diagram showing wiring types, network protocols, locations of floor penetrations and number of control panels. Label control panels with network addresses. Show all routers, switches, hubs and repeaters.
 5. Point list for each system controller including both inputs and outputs (I/O), point numbers, controlled device associated with each I/O point, and location of I/O device.
 6. Starter and variable frequency drive wiring details of all automatically controlled motors.
- C. Product Data: Include manufacturer's technical literature for each control device indicated, labeled with setting or adjustable range of control. Indicate dimensions, capacities, performance characteristics, electrical characteristics, finishes for materials, and installation and startup instructions for each type of product indicated. Submit a write-up of the application software that will be used on the operator workstation including revision level, functionality and software applications required to meet the specifications.
- D. Wiring Diagrams: Detail the wiring of the control devices and the panels. Show point-to-point wiring from field devices to the control panel. Show point-to-point wiring of hardwired interlocks.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

Show a ladder diagram or schematic of wiring internal to the panels, including numbered terminals. Clearly designate wiring that is done at a factory, at a panel shop or in the field.

- E. Variance letter: Submit a letter detailing each item in the submission that varies from the contract specification or sequence of operation in any way.

1.6 COORDINATION

- A. Coordinate location of thermostats, humidistats, panels, and other exposed control components with plans and room details before installation.
- B. Coordinate power for control units and operator workstation with electrical contractor.
- C. Coordinate equipment with provider of starters and drives to achieve compatibility with motor starter control coils and VFD control wiring.
- D. Coordinate scheduling with the mechanical contractor and general contractor. Submit a schedule for approval based upon the installation schedule of the mechanical equipment.
- E. Products Furnished but Not Installed Under This Section
 - 1. Hydronic Piping:
 - a. Control Valves
 - b. Temperature Sensor Wells and Sockets
 - c. Flow Switches
 - d. Flow Meters
 - 2. Sheetmetal accessories
 - a. Dampers
 - b. Airflow Stations
 - c. Terminal Unit Controls
- F. Integrate to equipment as called for in the sequence of operations

1.7 WARRANTY

- A. Warranty shall cover all costs for parts, labor, associated travel, and expenses for a period of one year from completion of system demonstration.
- B. This warranty shall apply equally to both hardware and software.

PART 2 - PRODUCTS

2.1 ACCEPTABLE SYSTEMS

- A. Provide an extension to the existing Johnson Controls System as installed by the Johnson Controls branch office.
- B. The vendors and products listed shall comply with these specifications. It shall not be assumed that standard products and methods will be acceptable without prior approval. Exceptions shall be noted during the bid process and documented in the submittal process.

2.2 ELECTRONIC DOCUMENTATION

- A. Provide all controls cut sheets in PDF format. Make them available to any user accessing the system over the Internet.
- B. Provide a text version of the sequence of operation. Make the written sequence available from the graphic that represents each system.

2.3 CONTROLLER SOFTWARE (i.e. Building Controller software, , DDC software, Field Panel software)

- A. Reuse existing software. If new controllers need updated versions of the controller software, then provide updated versions, such that at the completion of this project, the Owner has controller software licenses for all of the existing and new generations of controllers.

2.4 GENERAL SPECIFICATIONS FOR DEVICES

- A. Provide mounting hardware for all devices, including actuator linkages, wells, installation kits for insertion devices, wall boxes and fudge plates, brackets, etc.
- B. If a special tool is required to mount a device, provide that tool.

2.5 SENSORS

- A. Terminal Unit Space Thermostats
 - 1. Each controller performing space temperature control shall be provided with a matching room temperature sensor.
 - a. Temperature display Space Temperature Sensors – Wired: Where called for in the sequences or on the drawings, provide sensors with temperature display covers.
 - b. The sensing element for the space temperature sensor shall be thermistor type providing the following.

1)	Element Accuracy:	+ /- 1.0°F
2)	Operating Range:	55 to 95°F
3)	Set Point Adjustment Range:	55 to 95°F
4)	Calibration Adjustments:	None required
5)	Installation:	Up to 100 ft. from controller
6)	Auxiliary Communications Port:	as required
7)	Local LCD Temperature Display:	as required
8)	Setpoint Adjustment Dial	as required
9)	Occupancy Override Switch	as required
 - 2. Provide the following options as they are called for in the sequences or on the drawings:
 - a. Setpoint Adjustment. The setpoint adjustment function shall allow for modification of the temperature by the building operators. Setpoint adjustment may be locked out, overridden, or limited as to time or temperature through software by an authorized operator at any central workstation, Building Controller, room sensor two-line display, or via the portable operator's terminal.
 - b. Override Switch. An override button shall initiate override of the night setback mode to normal (day) operation when activated by the occupant and enabled by building operators. The override shall be limited to two (2) hours (adjustable.) The override function may be locked out, overridden, or limited through software by an authorized

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

operator at the operator interface, Building Controller, room sensor two-line display or via the portable operator's terminal.

- c. Space Combination Temperature and Humidity Sensors. Each controller performing space temperature control shall be provided with a matching room temperature sensor, which also includes the ability to measure humidity for either monitoring or control purposes. The combination temperature and humidity sensors shall have the same appearance as the space temperature sensors. Humidity elements shall measure relative humidity with a +/- 2% accuracy over the range of 10 to 90% relative humidity. Humidity element shall be an IC (integrated circuit) sensing element. Humidity sensing elements shall be removable and field replaceable if needed.

B. Temperature Sensors

1. All temperature sensors shall meet the following specifications:
 - a. Accuracy: Plus or minus 0.2 percent at calibration point.
 - b. Wire: Twisted, shielded-pair cable.
 - c. Vibration and corrosion resistant
2. Space temperature sensors shall meet the following specifications:
 - a. 10k ohm type 2 thermisters
3. Insertion Elements in Ducts shall meet the following specifications:
 - a. Single point 10k ohm thermister
 - b. Use where not affected by temperature stratification
 - c. The sensor shall reach more than 1/3 the distance from the duct wall
 - d. Junction box for wire splices
4. Averaging Elements in Ducts shall meet the following specifications:
 - a. 72 inches (183 cm) long
 - b. Flexible
 - c. Use where prone to temperature stratification, in front of coils, or where ducts are larger than 9 sq. ft.
 - d. Junction box for wire splices
5. Insertion Elements for Liquids shall meet the following specifications:
 - a. Platinum RTD with 4-20mA transmitter
 - b. Threaded mounting with matching well
 - c. Brass well with minimum insertion length of 2-1/2 inches for pipes up to 4" diameter
 - d. Brass well with insertion length of 6 inches for pipes up to 10" diameter
 - e. Junction box for wire splices

C. Humidity Sensors shall meet the following specifications:

1. Bulk polymer sensor element
2. Accuracy: 2 percent full range with linear output
3. Room Sensors: With locking cover matching room thermostats, span of 0 to 100 percent relative humidity
4. Duct and Outside-Air Sensors: With element guard and mounting plate, range of 0 to 100 percent relative humidity

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- D. Air Static Pressure Transmitter shall meet the following specifications:
1. Non-directional sensor with suitable range for expected input, and temperature compensated.
 2. Accuracy: 2 percent of full scale with repeatability of 0.5 percent.
 3. Output: 4 to 20 mA.
 4. Building Static-Pressure Range: 0 to 0.25 inches wg.
 5. Duct Static-Pressure Range: 0 to 5 inches wg.
- E. Pressure Transmitters: Direct acting for gas, liquid, or steam service; range suitable for system; proportional output 4 to 20 mA.
- F. Equipment operation sensors as follows:
1. Status Inputs for direct drive electric motors: Current-sensing relay with current transformers, adjustable and sized for 175 percent of rated motor current.
 2. Status inputs for belt drive electric motors: Current sensing transmitter with linear 4-20mA output
- G. Air Differential Pressure Switches: Diaphragm type air differential pressure switches with die cast aluminum housing, adjustable setpoint, minimum 5 amp switch rating at 120VAC, SPDT switches, and the switch pressure range shall be suited for the application. Provide Dwyer or equal. These switches shall be utilized for filter status.

2.6 AUTOMATIC CONTROL VALVES

- A. General:
1. All automatic control valves shall be fully proportioning, unless specified otherwise. The valves shall be quiet in operation and fail-safe in either normally open or normally closed position in the event of control air failure. All valves shall be capable of operating at varying rates of speed to correspond to the exact dictates of the controllers and variable load requirements. The valves shall be capable of operating in sequence with other valves and/or dampers when required by the sequence of operation. All control valves shall be sized by the control vendor and shall be guaranteed to accommodate the flow rates as scheduled. All control valves shall be suitable for the pressure conditions and shall close against the differential pressures involved. Body pressure rating and connection type construction shall conform to fitting and valve schedules. Control valve operators shall be sized to close against a differential pressure equal to the design pump heads plus 10 percent.
 2. Cold water, hot water and steam valves, throttling type, and bypass valves shall have equal percentage flow characteristics.
 3. Unless otherwise specified, control valves 2 inches and smaller shall have cast iron or bronze bodies with screwed NPT connections.
 4. Valves between 2-1/2 inch and 4 inch shall have cast iron bodies with flanged connections.
 5. All automatic control valves installed exposed to the elements shall be provided with electric actuators with operating characteristics and accessories as described in herein. Coordinate with electrical contractor for power availability and point of connection.
 6. All automatic control valves controlled by the BAS shall be furnished by the controls contractor unless noted otherwise in these documents.
 7. All automatic control valves shall be installed by the mechanical trade.
 8. The controls contractor shall provide wiring as follows:
 - a. All line voltage power for electric valve actuators shall be wired by the controls contractor from the nearest available power panel. Coordinate with electrical trade.
 - b. All wiring between the central control system (ATC/BMS) and the valve actuator shall be wired by the controls contractor.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- c. All wiring between the valve actuator and their associated thermostats, pressure switches, control devices, etc. shall be wired by the controls contractor.
- d. All wiring shall comply with code requirements. Segregate high and low voltage wiring & circuits and segregate the FAS and controls (BMS) terminals.

B. Hot Water / Condenser Water / Control Valves

- 1. Single-seated.
- 2. Fully proportioning with modulating plug or V-port inner valves.
- 3. Body pressure rating and connection type construction shall conform to fitting and valve schedules. The ANSI rating of the valve shall match the ANSI rating of the piping in which the valve is installed. Minimum ANSI rating shall be ANSI 125.
- 4. Stainless steel stems and trim.
- 5. Spring loaded Teflon packing
- 6. Quiet in operation.
- 7. Fail-safe in either normally open or normally closed position in the event of power failure.
- 8. Capable of operating in sequence with other valves and/or dampers when required by the sequence of operation.
- 9. Capable of operating at varying rates of speed to correspond to the exact dictates of the controller and variable load requirements.

C. Differential Pressure Control Valves :

- 1. Provide for all water systems where modulating water flow conditions are required to prevent excessive pump pressure build-up. Provide a valve for each closed loop water system. Valve to be globe type. Provide valves 2" and smaller with screwed end bodies and provide valves 2-1/2" and larger with flanged ends.

2.7 ELECTRONIC ACTUATOR SPECIFICATION

A. ELECTRONIC VALVE ACTUATORS

- 1. Actuator shall be fully modulating, floating (tri-state), two position, and/or spring return as indicated in the control sequences. Specified fail safe actuators shall require mechanical spring return.
- 2. Modulating valves shall be positive positioning, responding to a 2-10VDC or 4-20mA signal. There shall be a visual valve position indicator.
- 3. The actuator shall have the capability of adding auxiliary switches or feedback potentiometer if specified.
- 4. Actuator shall provide minimum torque required for proper valve close-off. The actuator shall be designed with a current limiting motor protection. A release button (clutch) or handle on the actuator shall be provided to allow for manual override (except when actuator is spring return type).
- 5. Actuators shall be UL listed.

B. ELECTRONIC DAMPER ACTUATORS

- 1. Actuator shall be direct coupled (over the shaft), enabling it to be mounted directly to the damper shaft without the need for connecting linkage. The actuator-to-shaft clamp shall use a "V" bolt and "V" shaped, toothed cradle to attach to the damper shaft for maximum holding strength. Single bolt or set screw type fasteners are not acceptable.
- 2. Actuator shall have electronic overload or digital rotation sensing circuitry to prevent damage to the actuator throughout the rotation of the actuator. End switches to deactivate the actuator at the end of rotation or magnetic clutch are not acceptable.
- 3. For power-failure/safety applications, a mechanical, spring return mechanism shall be used.
- 4. Actuators with spring return mechanisms shall be capable of either clockwise or counterclockwise spring return operation by simply changing the mounting orientation.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

5. Proportional actuators shall accept a 2-10VDC, 4-20mA signal, or be of the 2 point floating type and provide a 2-10VDC actuator position feedback signal.
6. All actuators shall have an external manual gear release (clutch) or manual crank to aid in installation and for allowing manual positioning when the actuator is not powered.
7. All actuators shall have an external direction of rotation switch to aid in installation and to allow proper control response.
8. Actuators shall be provided with a factory-mounted 3-foot electrical cable and conduit fitting to provide easy hook-up to an electrical junction box.
9. Actuators shall be listed under Underwriters Laboratories Standard 873 and Canadian Standards Association. They must be manufactured under ISO 9001.

2.8 EXECUTION

- A. The project plans shall be thoroughly examined for control device and equipment locations. Any discrepancies, conflicts, or omissions shall be reported to the architect/engineer for resolution before rough-in work is started.
- B. The contractor shall inspect the site to verify that equipment may be installed as shown. Any discrepancies, conflicts, or omissions shall be reported to the engineer for resolution before rough-in work is started.
- C. The contractor shall examine the drawings and specifications for other parts of the work. If head room or space conditions appear inadequate—or if any discrepancies occur between the plans and the contractor's work and the plans and the work of others—the contractor shall report these discrepancies to the engineer and shall obtain written instructions for any changes necessary to accommodate the contractor's work with the work of others.

2.8 INSTALLATION

- A. Provide all relays, switches, and all other auxiliaries, accessories and connections necessary to make a complete operable system in accordance with the sequences specified. All field wiring shall be by this contractor.
- B. Install controls so that adjustments and calibrations can be readily made. Controls are to be installed by the control equipment manufacturer.
- C. Mount surface-mounted control devices on brackets to clear the final finished surface on insulation.
- D. Install equipment level and plumb.
- E. Install control valves horizontally with the power unit up.
- F. Unless otherwise noted, install wall mounted thermostats and humidistat 60" above the floor measured to the center line of the instrument, or as otherwise directed by the Architect.
- G. Install averaging elements in ducts and plenums in horizontal crossing or zigzag pattern.
- H. Install damper motors on outside of duct in protected areas, not in locations exposed to outdoor temperatures.
- I. Install labels and nameplates on each control panel listing the name of the panel referenced in the graphics and a list of equipment numbers served by that panel.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- J. Furnish hydronic instrument wells, valves, and other accessories to the mechanical contractor for installation.

2.9 ELECTRICAL WIRING SCOPE

- A. This contractor shall not be responsible for power to control panels and control devices that are furnished by others, unless it is part of the control interlock wiring.
- B. Refer to Coordination section for what devices this contractor is responsible to mount and which are turned over to others to mount.
- C. This contractor shall be responsible for wiring of any control device that is furnished as part of this section of specification.
- D. Wiring for controls furnished by others:
 - 1. Provide control wiring for HVAC controls furnished by others. Wiring may include, but not limited to, interlocks, standalone thermostats, safeties and remote control devices such as valves, sensors, etc.
- E. Interlock wiring shall be run in separate conduits from BAS associated wiring.
- F. Provide network wiring for equipment that is called to be integrated to the BAS.

2.10 ELECTRICAL WIRING AND CONNECTION INSTALLATION

- A. All low voltage control wiring shall be class 2. Control wiring that is not class 2 shall be run in separate conduits from class 2 wiring.
- B. Floor level network wiring between terminal units can be combined with thermostat and other low voltage wiring in the same conduit. All other network wiring shall be in dedicated conduits.
- C. Install raceways, boxes, and cabinets according to Division 26 Section "Raceways and Boxes."
- D. Install building wire and cable according to Division 26 Section "Conductors and Cables."
- E. Installation shall meet the following requirements:
 - 1. Conceal cable and conduit, except in mechanical rooms and areas where other conduit and piping are exposed.
 - 2. Install exposed cable in raceway or conduit.
 - 3. Install concealed cable using plenum rated cable.
 - 4. Bundle and harness multiconductor instrument cable in place of single cables where several cables follow a common path.
 - 5. Fasten flexible conductors, bridging cabinets and doors, along hinge side; protect against abrasion. Tie and support conductors.
 - 6. Number-code or color-code conductors for future identification and service of control system, except local individual room control cables.
- F. Install conduit adjacent to machine to allow service and maintenance.

2.11 COMMUNICATION WIRING

- A. All cabling shall be installed in a neat and workmanlike manner. Follow manufacturer's installation recommendations for all communication cabling.
- B. Do not install communication wiring in raceway and enclosures containing Class 1 wiring.
- C. Maximum pulling, tension, and bend radius for cable installation, as specified by the cable manufacturer, shall not be exceeded during installation.
- D. Contractor shall verify the integrity of the entire network following the cable installation. Use appropriate test measures for each particular cable.
- E. Cable bundling:
 - 1. RS485 cabling run open air in accessible areas can be bundled with other class 2 low voltage cabling.
 - 2. RS485 cabling run between terminal units in conduits above ceilings or under floors or in inaccessible areas can be bundled with other class 2 low voltage cabling.
 - 3. RS485 cabling run between floors shall be in a communication only conduit.
 - 4. RS485 conduit run long distances between utility rooms or between buildings shall be in a communication only conduit.
 - 5. Ethernet cabling shall be in a communication only conduit.
 - 6. Ethernet and RS485 can be run together.
 - 7. Fiber optics can be run with Ethernet and RS485 cabling as long as the conduit is bent to fiber optic standards and junction boxes are sized for fiber optic use.
- F. FLN Cabling
 - 1. FLN cabling shall be low capacitance, 20-24 gauge, twisted shielded pair.
 - 2. The shields shall be tied together at each device.
 - 3. The shield shall be grounded at one end only and capped at the other end.
- G. Ethernet Cabling
 - 1. Ethernet shall not be run with any Class 1 or low voltage Class 2 wiring.
 - 2. CAT6, unshielded twisted pair (UTP) cable shall be used for BAS Ethernet.
 - 3. Solid wire shall be used for long runs, between mechanical rooms and between floors. Stranded cable can be used for patch cables and between panels in the same mechanical room up to 50 feet away.
 - 4. When the BAS Ethernet connects to an Owner's network switch, document the port number on the BAS As-builts.
- H. When a cable enters or exits a building, a lightning arrestor must be installed between the lines and ground. The lightning arrestor shall be installed according to the manufacturer's instructions.
- I. All runs of communication wiring shall be unspliced length when that length is commercially available.
- J. All communication wiring shall be labeled to indicate origination and destination data.
- K. Grounding of coaxial cable shall be in accordance with NEC regulations article on "Communications Circuits, Cable, and Protector Grounding."

2.12 IDENTIFICATION

- A. Match the existing wiring and conduit identification methods.

2.13 FIELD QUALITY CONTROL

- A. Manufacturer's Field Service: Engage a factory-authorized service representative to inspect field-assembled components and equipment installation, including piping and electrical connections. Report results in writing.
 - 1. Operational Test: After electrical circuitry has been energized, start units to confirm proper unit operation. Remove malfunctioning units, replace with new units, and retest.
 - 2. Test and adjust controls and safeties. Replace damaged and malfunctioning controls and equipment, and retest.
 - 3. Calibration test controllers by disconnecting input sensors and stimulating operation with compatible signal generator.
- B. Engage a factory-authorized service representative to perform startup service.
- C. Replace damaged or malfunctioning controls and equipment.
 - 1. Start, test, and adjust control systems.
 - 2. Demonstrate compliance with requirements, including calibration and testing, and control sequences.
 - 3. Adjust, calibrate, and fine tune circuits and equipment to achieve sequence of operation specified.

2.14 SYSTEM CHECKOUT AND STARTUP

- A. Inspect each termination in the MER control panels and devices to make sure all wires are connected according to the wiring diagrams and all termination are tight.
- B. After the controls devices and panels are installed and power is available to the controls, perform a static checkout of all the points, including the following:
 - 1. Inspect the setup and reading on each temperature sensor against a thermometer to verify its accuracy.
 - 2. Inspect the setup and reading on each humidity sensor against a hygrometer to verify its accuracy.
 - 3. Inspect the reading on each CO2 sensor using a calibration kit to verify the sensor range accuracy matches the DDC setup.
 - 4. Inspect the reading of each status switch to verify the DDC reads the open and close correctly.
 - 5. Command each relay to open and close to verify its operation.
 - 6. Command each 2-position damper actuator to open and close to verify operation.
 - 7. Command each 2-position valve to open and close to verify operation.
 - 8. Ramp each modulating actuator to 0%, 25%, 50%, 75% and 100% to verify its operation.
 - 9. Ramp each modulating output signal, such as a VFD speed, to verify its operation.
 - 10. Test each safety device with a real life simulation, for instance check freezestats with ice water, water detectors with water, etc.
- C. Document that each point was verified and operating correctly. Correct each failed point before proceeding to the dynamic startup.
- D. Verify that each DDC controller communicates on its respective network correctly.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- E. After all of the points are verified, and power is available to the mechanical system, coordinate a startup of each system with the mechanical contractor. Include the following tests:
 - 1. Start systems from DDC.
 - 2. Verify that each setpoint can be met by the system.
 - 3. Change setpoints and verify system response.
 - 4. Change sensor readings to verify system response.
 - 5. Test safety shutdowns.
 - 6. Verify time delays.
 - 7. Verify mode changes.
 - 8. Adjust filter switches and current switches for proper reactions.
 - 9. Adjust proportional bands and integration times to stabilize control loops.
- F. Perform all program changes and debugging of the system for a fully operational system.
- G. Verify that all graphics at the operator workstations correspond to the systems as installed. Verify that the points on the screens appear and react properly. Verify that all adjustable setpoints and manual commands operate from the operator workstations.
- H. After the sequence of operation is verified, setup the trends that are listed in the sequence of operations for logging and archiving for the commissioning procedure.

2.15 SYSTEM COMMISSIONING, DEMONSTRATION AND TURNOVER

- A. The BAS Contractor shall prepare and submit for approval a complete acceptance test procedure including submittal data relevant to point index, functions, sequence, inter-locks, and associated parameters, and other pertinent information for the operating system. Prior to acceptance of the BAS by the Owner and Engineer, the BAS contractor shall completely test the BAS using the approved test procedure.
- B. After the BAS contractor has completed the tests and certified the BAS is 100% complete, the Engineer shall be requested, in writing, to approve the satisfactory operation of the system, sub-systems and accessories. The BAS contractor shall submit Maintenance and Operating manuals at this time for approval. An acceptance test in the presence of the Engineer and Owner's representative shall be performed. The Owner will then shake down the system for a fixed period of time (30 days).
- C. The BAS contractor shall fix punch list items within 30 days of acceptance.
- D. When the system performance is deemed satisfactory in whole or in part by these observers, the system parts will be accepted for beneficial use and placed under warranty.

2.16 PROJECT RECORD DOCUMENTS

- A. Project Record Documents: Submit three (3) copies of record (as-built) documents upon completion of installation. Submittal shall consist of:
 - 1. Project Record Drawings. As-built versions of the submittal shop drawings provided as AutoCAD compatible files in electronic format and as 11 x 17 inch prints.
 - 2. Testing and Commissioning Reports and Checklists. Completed versions of reports, checklists, and trend logs used to meet requirements in the Control System Demonstration and Acceptance section of this specification.
 - 3. Operation and Maintenance (O & M) Manual.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- a. Operator's Manual with procedures for operating control systems, logging on and off, handling alarms, producing point reports, trending data, overriding computer control, and changing setpoints and variables.
 - b. Documentation of all programs created using custom programming language, including setpoints, tuning parameters, and object database.
 - c. Graphic files, programs, and database on electronic media.
 - d. List of recommended spare parts with part numbers and suppliers.
 - e. Licenses, guarantees, and warranty documents for equipment and systems.
- B. Provide updated versions of Operating manuals.

2.17 TRAINING

- A. At a time mutually agreed upon, during System commissioning as stated above, the BAS contractor shall give 4-hours of onsite training on the operation of all BAS equipment. Describe its intended use with respect to the programmed functions specified. Operator orientation of the automation system shall include, but not be limited to:
- 1. Explanation of drawings and operator's maintenance manuals.
 - 2. Walk-through of the job to locate all control components.
 - 3. Operator workstation and peripherals.
 - 4. DDC Controller and ASC operation/sequence.
 - 5. Operator control functions including scheduling, alarming, and trending.
 - 6. Explanation of adjustment, calibration and replacement procedures.

PART 3 - SEQUENCE OF OPERATION

3.1 GENERAL:

- A. All mechanical equipment shall be monitored thru the DDC Control system with proof of flow devices. The run time of a monitored motors shall be available at the Facility Management System. Console. A maintenance alarm message shall be programmed at a specific run time as designated by the system operator. The alarm message shall be a designated by the operator.

3.2 VAV ZONES WITH REHEAT COIL

- A. Occupied mode of the zone controller shall be determined by the central control. In the occupied mode if the space temperature is between the heating temperature and the cooling temperature set point, the box shall be in a dead band mode. The local DDC control loop shall modulate the primary damper to maintain the ventilation minimum CFM set point. On a fall in space temperature equal to the heating temperature set point, the controller shall then modulate the reheat coil as well as reset the supply air volume between the ventilation minimum and the heating maximum set point. The heating volume shall be a function of the heating calculation percentage to minimize the amount of reheat. On a 100% call for heat, the VAV box shall control to the maximum heating velocity set point and the control valve shall be wide open. A discharge sensor/control loop limits the supply air temperature 15° F above setpoint maximum programmable.
- B. The reverse shall occur on an increase in space temperature equal to or greater than the heating temperature set point. When the space temperature is equal to or greater than the cooling temperature set point the VAV box shall enter the cooling mode. The controller shall reset the box CFM set point from the minimum ventilation set point to the cooling maximum set point. If the

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

zone CO2 level is above 800 ppm (adj), then the VAV box minimum shall be indexed upwards towards the cooling maximum, to meet the CO2 set point maximum.

- C. In the unoccupied mode the VAV box damper shall be closed and the reheat coil valve closed. On a fall in space temperature below the unoccupied heating set point the control valve shall open and the primary air damper shall control to the heating volume to maintain the night set back setting.
- D. All VAV and constant volume boxes in the system shall be equipped with discharge air temperature sensors and the FMCS shall monitor and display the discharge air temperature.
- E. When the zone is scheduled for occupancy and a motioned controlled lighting sensor by electrical contractor determines the space is vacant, the auxiliary contact in the motion sensor shall signal the VAV zone to go to zero ventilation minimum if there is no call for heating or cooling above 55° OSA temperature. Interlock wiring is by this contractor. See the mechanical HVAC drawings for locations where a VAV boxes serve one physical space. If a VAV box serves multiple spaces then the occupancy sensor located in each space will be connected in parallel and ties into the VAV box. If one space is occupied the VAV box will operate to maintain space temperature. The interlock will occur where electrical has provided occupancy sensors for lighting control. See electrical.

END OF SECTION 230900

BLANK PAGE

SECTION 232113

HYDRONIC PIPING

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section includes pipe and fitting materials and joining methods for the following:
 - 1. Hot-water heating piping.
 - 2. Chilled-water piping.
 - 3. Air-vent piping.
 - 4. Dielectric fittings.

1.3 SEISMIC REQUIREMENTS

- A. Seismic Performance: Pipe hangers and supports shall withstand the effects of earthquake motions determined according to SEI/ASCE 7 and with the requirements specified in Section 230548 "Vibration and Seismic Controls for HVAC."
 - 1. For piping with a seismic importance factor of 1.0 the term "withstand" means "the system will remain in place without separation of any parts when subjected to the seismic forces specified."
 - 2. For piping with a seismic importance factor of 1.5 the term "withstand" means "the system will remain in place without separation of any parts when subjected to the seismic forces specified and the system will be fully operational after the seismic event."

1.4 ACTION SUBMITTALS

- A. Product Data: For each type of the following:
 - 1. Steel pipe and fittings.
 - 2. Copper pipe, tubing and fittings.
 - 3. Dielectric fittings.
- B. Delegated-Design Submittal:
 - 1. Design calculations and detailed fabrication and assembly of pipe anchors and alignment guides, hangers and supports for multiple pipes, expansion joints and loops, and attachments of the same to the building structure.
 - 2. Locations of pipe anchors and alignment guides and expansion joints and loops.
 - 3. Locations of and details for penetrations, including sleeves and sleeve seals for exterior walls, floors, basement, and foundation walls.

1.5 INFORMATIONAL SUBMITTALS

- A. Coordination Drawings: Piping layout, drawn to scale, on which the following items are shown and coordinated with each other, using input from installers of the items involved:
 - 1. Suspended ceiling components.
 - 2. Other building services.
 - 3. Structural members.
- B. Qualification Data: For Installer.
- C. Welding certificates.
- D. Field quality-control reports: Written reports as specified in Part 3 of this section including:
 - 1. Test procedures used.
 - 2. Test results showing compliance with specified requirements.
 - 3. Failed test results with corrective action taken to achieve compliance with specified requirements.

1.6 QUALITY ASSURANCE

- A. Steel Support Welding: Qualify procedures and personnel according to AWS D1.1/D1.1M, "Structural Welding Code - Steel."
- B. Pipe Welding: Qualify procedures and operators according to ASME Boiler and Pressure Vessel Code: Section IX.
 - 1. Comply with ASME B31.9, "Building Services Piping," for materials, products, and installation.
 - 2. Certify that each welder has passed AWS qualification tests for welding processes involved and that certification is current.

1.7 COORDINATION

- A. Coordinate layout and installation of hydronic piping and suspension system components with other construction, including light fixtures, HVAC equipment, fire-suppression-system components, and partition assemblies.
- B. Coordinate pipe sleeve installations for foundation wall penetrations.
- C. Coordinate piping installation with roof curbs, equipment supports, and roof penetrations. Roof specialties are specified in Division 7 Sections.
- D. Coordinate pipe fitting pressure classes with products specified in related sections.
- E. Coordinate size and location of concrete bases. Cast anchor-bolt inserts into base. Concrete, reinforcement, and formwork requirements are specified in Division 3 Sections.
- F. Coordinate installation of pipe sleeves for penetrations through exterior walls and floor assemblies. Coordinate with requirements for firestopping specified in Division 7 Section "Through-Penetration Firestop Systems" for fire and smoke wall and floor assemblies.

PART 2 - PRODUCTS

2.1 COPPER TUBE AND FITTINGS

- A. Drawn-Temper Copper Tubing: ASTM B 88, Type L.

2.2 STEEL PIPE AND FITTINGS

- A. Steel Pipe: ASTM A 53, black steel with plain ends; welded and seamless, Grade B, and wall thickness as indicated in "Piping Applications" Article.
- B. Cast-Iron Threaded Fittings: ASME B16.4; Classes 125 and 250 as indicated in "Piping Applications" Article.
- C. Malleable-Iron Threaded Fittings: ASME B16.3, Classes 150 and 300 as indicated in "Piping Applications" Article.
- D. Malleable-Iron Unions: ASME B16.39; Classes 150, 250, and 300 as indicated in "Piping Applications" Article.
- E. Cast-Iron Pipe Flanges and Flanged Fittings: ASME B16.1, Classes 25, 125, and 250; raised ground face, and bolt holes spot faced as indicated in "Piping Applications" Article.
- F. Wrought-Steel Fittings: ASTM A 234, wall thickness to match adjoining pipe.
- G. Wrought Cast- and Forged-Steel Flanges and Flanged Fittings: ASME B16.5, including bolts, nuts, and gaskets of the following material group, end connections, and facings:
 - 1. Material Group: 1.1.
 - 2. End Connections: Butt welding.
 - 3. Facings: Raised face.
- H. Forged Steel "Olet" Type Fittings, Welding, Socket-Welding and Threaded: ASME B16.11 and ASTM A105.
 - 1. Welding Filler Metals: Comply with AWS D10.12M/D10.12 for welding materials appropriate for wall thickness and chemical analysis of steel pipe being welded.
- I. Steel Pipe Nipples: ASTM A 733, made of same materials and wall thicknesses as pipe in which they are installed.

2.3 JOINING MATERIALS

- A. Pipe-Flange Gasket Materials: Suitable for chemical and thermal conditions of piping system contents.
 - 1. ASME B16.21, nonmetallic, flat, asbestos free, 1/8-inch (3.2-mm) maximum thickness unless otherwise indicated.
 - a. Full-Face Type: For flat-face, Class 125, cast-iron and cast-bronze flanges.
 - b. Narrow-Face Type: For raised-face, Class 250, cast-iron and steel flanges.
- B. Flange Bolts and Nuts: ASME B18.2.1, carbon steel, unless otherwise indicated.
- C. Solder Filler Metals: ASTM B 32, lead-free alloys. Include water-flushable flux according to ASTM B 813.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- D. Brazing Filler Metals: AWS A5.8, BCuP Series, copper-phosphorus alloys for joining copper with copper; or BAg-1, silver alloy for joining copper with bronze or steel.
- E. Welding Filler Metals: Comply with AWS D10.12M/D10.12 for welding materials appropriate for wall thickness and chemical analysis of steel pipe being welded.

2.4 DIELECTRIC FITTINGS

- A. General: Assembly or fitting with insulating material isolating joined dissimilar metals, to prevent galvanic action and stop corrosion.
 - 1. Manufacturers:
 - a. Advance Products & Systems, Inc.
 - b. Calpico, Inc. Capitol Manufacturing Co.
 - c. Capitol Manufacturing Company.
 - d. Central Plastics Company.
 - e. Elster Perfection.
 - f. Grinnell Mechanical Products.
 - g. Matco-Norca.
 - h. Pipeline Seal and Insulator, Inc.
 - i. Precision Plumbing Products, Inc.
 - j. Victaulic Company.
 - k. Watts Regulator Co.
 - l. Zurn Industries, LLC.
- B. Description: Combination of copper alloy and ferrous; threaded, solder, plain, and weld-neck end types and matching piping system materials.
- C. Insulating Material: Suitable for system fluid, pressure, and temperature.
- D. End Connections: Threaded, or flanged.
- E. Dielectric Couplings: Galvanized-steel coupling with inert and noncorrosive, thermoplastic lining; threaded ends; and 300-psig minimum working pressure at 225 deg F.
- F. Dielectric Nipples or Waterways: Electroplated steel with inert and noncorrosive, thermoplastic lining; plain, threaded, or grooved ends; and 300-psig minimum working pressure at 225 deg F.

PART 3 - EXECUTION

3.1 PIPING APPLICATIONS

- A. Hot-water heating piping, aboveground, NPS 2 and smaller shall be any of the following:
 - 1. Type L drawn-temper copper tubing, wrought-copper fittings, and soldered joints.
 - 2. Schedule 40, Grade B, Type 96 steel pipe; Class 125, cast-iron fittings; cast-iron flanges and flange fittings; and threaded joints.
- B. Hot-water heating piping, aboveground, NPS 2-1/2 and larger, shall be any of the following:
 - 1. Type L, drawn-temper copper tubing, wrought-copper fittings, and soldered joints.
 - 2. Schedule 40 steel pipe, wrought-steel fittings and wrought-cast or forged-steel flanges and flange fittings, and welded and flanged joints.
- C. Chilled-water piping, aboveground, NPS 2 and smaller, shall be any of the following:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Type L, drawn-temper copper tubing, wrought-copper fittings, and soldered joints.
 2. Schedule 40, Grade B, Type 96 steel pipe; Class 125, cast-iron fittings; cast-iron flanges and flange fittings; and threaded joints.
- D. Chilled-water piping, aboveground, NPS 2-1/2 and larger, shall be any of the following:
1. Type L, drawn-temper copper tubing, wrought-copper fittings, and soldered joints.
 2. Schedule 40 steel pipe, wrought-steel fittings and wrought-cast or forged-steel flanges and flange fittings, and welded and flanged joints.
- E. Glycol cooling-water piping, aboveground, NPS 2 and smaller, shall be any of the following:
1. Type L, drawn-temper copper tubing, wrought-copper fittings, and soldered joints.
 2. Schedule 40, Grade B, Type 96 steel pipe; Class 125, cast-iron fittings; cast-iron flanges and flange fittings; and threaded joints.
- F. Glycol cooling-water piping, aboveground, NPS 2-1/2 and larger, shall be any of the following:
1. Type L, drawn-temper copper tubing, wrought-copper fittings, and soldered joints.
 2. Schedule 40 steel pipe, wrought-steel fittings and wrought-cast or forged-steel flanges and flange fittings, and welded and flanged joints.
- G. Condensate-drain piping shall be the following:
1. Type M, drawn-temper copper tubing, wrought-copper fittings, and soldered joints.
- H. Blowdown-Drain Piping: Same materials and joining methods as for piping specified for the service in which blowdown drain is installed.
- I. Air-Vent Piping:
1. Inlet: Same as service where installed with metal-to-plastic transition fittings for plastic piping systems according to piping manufacturer's written instructions.
 2. Outlet: Type K, annealed-temper copper tubing with soldered or flared joints.
- J. Safety-Valve-Inlet and -Outlet Piping for Hot-Water Piping: Same materials and joining methods as for piping specified for the service in which safety valve is installed with metal-to-plastic transition fittings for plastic piping systems according to piping manufacturer's written instructions.

3.2 PIPING INSTALLATIONS

- A. PRE-WORK / PRE-REQUISITES
1. Drawing plans, schematics, and diagrams indicate general location and arrangement of piping systems. Install piping as indicated unless deviations to layout are approved on Coordination Drawings.
 2. The Contractor shall study the architectural, structural, mechanical, electrical and other drawings to eliminate conflict of piping with other structure lighting or other services.
- B. CONDITION
1. All installed pipe lines shall be free from dents, scars, and burrs, with ends reamed smooth.
 2. All piping shall be clean and free from acids and loose dirt when installed and shall be kept clean during the completion of the installation.
 3. Install piping free of sags and bends.
 4. All installed pipe lines shall remain straight against strains tending to cause distortion during system operation. The contractor shall make proper allowance for pipe line expansion and contraction so that no unsightly distortion, noise, damage or improper operation results therefrom.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

C. SELECTION

1. Select system components with pressure rating equal to or greater than system operating pressure.
2. No street type fittings shall be used.
3. No short nipples shall be used except at drain valves.
4. Plugs of rags, wools, cottons, waste, or similar materials may not be used for plugging.

D. ROUTING/ARRANGEMENT

1. Piping installations shall be neatly organized.
2. Install piping in concealed locations unless otherwise indicated and except in equipment rooms and service areas.
3. Install groups of pipes parallel to each other.
4. Install piping spaced to permit application of insulation.
5. Install piping parallel and spaced to permit the servicing of valves.
6. Install piping indicated to be exposed and piping in equipment rooms and service areas at right angles or parallel to building walls or axis of the building.
7. Diagonal runs are prohibited unless specifically indicated otherwise.
8. Install fittings for all changes in direction.
9. No piping shall be run above any electrical panels, electrical equipment or access clearances for electrical for electrical panels or equipment. No piping shall be allowed to run through any electrical rooms.
10. Piping shall be arranged, placed and installed to facilitate equipment maintenance and shall be so arranged to not interfere with the installation of the air-conditioning equipment, ducts, or the removal of other equipment or devices. All specialties shall be so placed to permit easy operation and access.
11. All piping shall be so installed to insure noiseless circulation.
12. Install fittings for all branch connections.
13. Unless otherwise indicated, install branch connections to mains using tee fittings or forged steel branch fittings in main pipe, with the branch connected to the bottom of the main pipe.
14. For up-feed risers, connect the branch to the top of the main pipe.
15. Forged branch fittings shall be installed per the manufacturer's recommendations.

E. ACCESS / ARRANGEMENT

1. Install piping above accessible ceilings to allow sufficient space for ceiling panel removal. All piping shall be so arranged to not block access to manholes, access openings, etc.
2. Install piping at indicated slopes. If not indicated, install piping at a uniform grade of 0.2 percent where possible, upward in direction of flow. Traps are to be avoided where-ever possible.
3. Reduce pipe sizes using eccentric reducer fitting installed with level side up.
4. When insulated pipes are supported by a roller hanger they shall be protected from damage by suitable pipe covering protection saddles. Saddles shall support pipe on roller and shall be packed with insulation.
5. Install valves according to Section 230523 "General-Duty Valves for HVAC Piping."
6. Install unions in piping, NPS 2 and smaller, adjacent to valves, at final connections of equipment, at each coil on all sides of automatic valves where valves do not have union connections, elsewhere as indicated, and wherever necessary to prevent undue difficulty in making repairs or replacement. Unions are not required at flanged connections.
7. Install flanges in piping, NPS 2-1/2 and larger, at final connections of equipment and elsewhere as indicated. Install flanges on valves, apparatus, and equipment having 2 1/2 inch NPS and larger connections. Flanges or unions as applicable for the type of piping specified, shall be provided in the piping at connections to all items of equipment.
8. Install shutoff valve immediately upstream of each dielectric fitting. Install dielectric coupling and nipple fittings to connect piping materials of dissimilar metals.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

9. Comply with requirements in Section 230516 "Expansion Fittings and Loops for HVAC Piping" for installation of expansion loops, expansion joints, anchors, and pipe alignment guides. Anchor piping for proper direction of expansion and contraction.
10. Install sleeves for piping penetrations of walls, ceilings, and floors. Comply with requirements for sleeves specified in Section 230517 "Sleeves and Sleeve Seals for HVAC Piping."
11. Install sleeve seals for piping penetrations of concrete walls and slabs. Comply with requirements for sleeve seals specified in Section 230517 "Sleeves and Sleeve Seals for HVAC Piping."
12. Install escutcheons for piping penetrations of walls, ceilings, and floors. Comply with requirements for escutcheons specified in Section 230518 "Escutcheons for HVAC Piping."
13. Install strainers on supply side of each control valve, pressure-reducing valve, solenoid valve, in-line pump, and elsewhere as indicated. Install NPS ¾" nipple and ball valve in blow-down connection of strainers NPS 2" and larger. Match size of strainer blow-off connection for strainers smaller than NPS 2".
14. Install flexible connectors at inlet and discharge connections to pumps (except inline pumps) and other vibration-producing equipment.
15. Polypropylene pipe in or passing through plenums must be fire wrapped or installed in a metal conduit.

F. DRAINAGE

1. Drain valves shall be installed at all low points in all piping systems to allow for complete drainage of piping systems.
2. Install drains, consisting of a tee fitting, NPS 3/4" ball valve, and short NPS 3/4" threaded nipple with cap, at low points in piping system mains and elsewhere as required for system drainage.
3. All piping systems shall be installed so that they can be easily drained by means of drainage of low points of all piping without disconnecting pipe.
4. If not specifically indicated on the drawings, the frequency of draining shall determine whether drain caps, plugs, cocks, or valves are to be used.

G. IDENTIFICATION

1. Comply with requirements in Section 230553 "Identification for HVAC Piping and Equipment" for identifying piping.

3.3 DIELECTRIC FITTING INSTALLATION

A. Make connections according to the following, unless otherwise indicated:

1. Install dielectric nipples or waterways in piping NPS 2" and smaller, adjacent to each valve and at final connection to each piece of equipment.
2. Install waterways, in piping NPS 2-1/2" and larger, adjacent to flanged valves and at final connection to each piece of equipment.
3. Install Dielectric Fittings into Hydronic Piping Systems: Install dielectric nipples, waterways or couplings to connect piping materials of dissimilar metals.
4. End Connections: Threaded, or flanged.

3.4 HANGERS AND SUPPORTS

- A. Comply with requirements in Section 230529 "Hangers and Supports for HVAC Piping and Equipment" for hanger, support, and anchor devices. Comply with the following requirements for maximum spacing of supports.**

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- B. Comply with requirements in Section 230548 "Vibration and Seismic Controls for HVAC" for seismic restraints.
- C. Steel roof deck shall not be used to support loads from piping, ductwork or equipment, unless noted otherwise. Hanger loads less than 50 lbs. may be hung from the steel roof deck in cases when hanging from the steel roof deck cannot be avoided; the attachment method must distribute the load across the deck as approved by the Structural Engineer.
- D. Install the following pipe attachments:
 - 1. Adjustable steel clevis hangers for individual horizontal piping less than 20 feet long.
 - 2. Adjustable roller hangers and spring hangers for individual horizontal piping 20 feet or longer.
 - 3. Pipe Roller: MSS SP-58, Type 44 for multiple horizontal piping 20 feet or longer, supported on a trapeze.
 - 4. Spring hangers to support vertical runs.
 - 5. Provide copper-clad hangers and supports for hangers and supports in direct contact with copper pipe.
 - 6. On plastic pipe, install pads or cushions on bearing surfaces to prevent hanger from scratching pipe.
- E. Install hangers for steel piping with the following maximum spacing and minimum rod sizes:
 - 1. NPS 3/4: Maximum span, 7 feet; minimum rod size, 3/8 inch.
 - 2. NPS 1: Maximum span, 7 feet; minimum rod size, 3/8 inch.
 - 3. NPS 1-1/2: Maximum span, 9 feet; minimum rod size, 3/8 inch.
 - 4. NPS 2: Maximum span, 10 feet; minimum rod size, 3/8 inch.
 - 5. NPS 2-1/2: Maximum span, 11 feet; minimum rod size, 1/2 inch.
 - 6. NPS 3 and Larger: Maximum span, 12 feet; minimum rod size, 1/2 inch.
- F. Install hangers for drawn-temper copper piping with the following maximum spacing and minimum rod sizes:
 - 1. NPS 3/4: Maximum span, 5 feet; minimum rod size, 1/4 inch.
 - 2. NPS 1: Maximum span, 6 feet; minimum rod size, 1/4 inch.
 - 3. NPS 1-1/4: Maximum span, 7 feet; minimum rod size, 3/8 inch.
 - 4. NPS 1-1/2: Maximum span, 8 feet; minimum rod size, 3/8 inch.
 - 5. NPS 2: Maximum span, 8 feet; minimum rod size, 3/8 inch.
 - 6. NPS 2-1/2: Maximum span, 9 feet; minimum rod size, 3/8 inch.
 - 7. NPS 3 and Larger: Maximum span, 10 feet; minimum rod size, 3/8 inch.
- G. Support vertical runs at roof, at each floor, and at 10-foot intervals between floors.
- H. Support piping and tubing not listed in this article according to MSS SP-69 and manufacturer's written instructions.

3.5 PIPE JOINT CONSTRUCTION

- A. Ream ends of pipes and tubes and remove burrs. Bevel plain ends of steel pipe.
- B. Remove scale, slag, dirt, and debris from inside and outside of pipe and fittings before assembly.
- C. Soldered Joints: Apply ASTM B 813, water-flushable flux, unless otherwise indicated, to tube end. Construct joints according to ASTM B 828 or CDA's "Copper Tube Handbook," using lead-free solder alloy complying with ASTM B 32.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- D. Brazed Joints: Construct joints according to AWS's "Brazing Handbook," "Pipe and Tube" Chapter, using copper-phosphorus brazing filler metal complying with AWS A5.8.
- E. Threaded Joints: Thread pipe with tapered pipe threads according to ASME B1.20.1. Cut threads full and clean using sharp dies. Ream threaded pipe ends to remove burrs and restore full ID. Join pipe fittings and valves as follows:
 - 1. Apply appropriate tape or thread compound to external pipe threads unless dry seal threading is specified.
 - 2. Damaged Threads: Do not use pipe or pipe fittings with threads that are corroded or damaged. Do not use pipe sections that have cracked or open welds.
- F. Welded Joints: Construct joints according to AWS D10.12M/D10.12, using qualified processes and welding operators according to "Quality Assurance" Article.
- G. Flanged Joints: Select appropriate gasket material, size, type, and thickness for service application. Install gasket concentrically positioned. Use suitable lubricants on bolt threads.

3.6 TERMINAL EQUIPMENT CONNECTIONS

- A. Sizes for supply and return piping connections shall be the same as or larger than equipment connections.
- B. Install control valves in accessible locations close to connected equipment.

3.7 FIELD QUALITY CONTROL

- A. Prepare hydronic piping according to ASME B31.9 and as follows:
 - 1. Leave joints, including welds, uninsulated and exposed for examination during test.
 - 2. Provide temporary restraints for expansion joints that cannot sustain reactions due to test pressure. If temporary restraints are impractical, isolate expansion joints from testing.
 - 3. Flush hydronic piping systems with clean water; then remove and clean or replace strainer screens.
 - 4. Isolate equipment from piping. If a valve is used to isolate equipment, its closure shall be capable of sealing against test pressure without damage to valve. Install blinds in flanged joints to isolate equipment.
 - 5. Install safety valve, set at a pressure no more than one-third higher than test pressure, to protect against damage by expanding liquid or other source of overpressure during test.
- B. Perform the following tests on hydronic piping:
 - 1. Use ambient temperature water as a testing medium unless there is risk of damage due to freezing. Another liquid that is safe for workers and compatible with piping may be used.
 - 2. While filling system, use vents installed at high points of system to release air. Use drains installed at low points for complete draining of test liquid.
 - 3. Isolate expansion tanks and determine that hydronic system is full of water.
 - 4. Subject piping system to hydrostatic test pressure that is not less than 1.5 times the system's working pressure. Test pressure shall not exceed maximum pressure for any vessel, pump, valve, or other component in system under test. Verify that stress due to pressure at bottom of vertical runs does not exceed 90 percent of specified minimum yield strength or 1.7 times the "SE" value in Appendix A in ASME B31.9, "Building Services Piping."

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

5. After hydrostatic test pressure has been applied for at least 10 minutes, examine piping, joints, and connections for leakage. Eliminate leaks by tightening, repairing, or replacing components, and repeat hydrostatic test until there are no leaks.
 6. Prepare written report of testing.
- C. Perform the following before operating the system:
1. Open manual valves fully.
 2. Inspect pumps for proper rotation.
 3. Set makeup pressure-reducing valves for required system pressure.
 4. Inspect air vents at high points of system and determine if all are installed and operating freely (automatic type), or bleed air completely (manual type).
 5. Set temperature controls so all coils are calling for full flow.
 6. Inspect and set operating temperatures of hydronic equipment, such as boilers, chillers, cooling towers, to specified values.
 7. Verify lubrication of motors and bearings.

END OF SECTION 232113

SECTION 232116

HYDRONIC PIPING SPECIALTIES

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section includes special-duty valves and specialties for the following:
 - 1. Hot-water heating piping.
 - 2. Chilled-water piping.
 - 3. Condensate-drain piping.
 - 4. Air-vent piping.
 - 5. Glycol cooling-water piping.

1.3 ACTION SUBMITTALS

- A. Product Data: For each type of the following:
 - 1. Valves: Include flow and pressure drop curves based on manufacturer's testing for calibrated-orifice balancing valves and automatic flow-control valves.
 - 2. Air-control devices.
 - 3. Hydronic specialties.

1.4 CLOSEOUT SUBMITTALS

- A. Operation and Maintenance Data: For air-control devices, hydronic specialties, and special-duty valves to include in emergency, operation, and maintenance manuals.

1.5 QUALITY ASSURANCE

- A. Pipe Welding: Qualify procedures and operators according to ASME Boiler and Pressure Vessel Code: Section IX.
 - 1. Safety valves and pressure vessels shall bear the appropriate ASME label. Fabricate and stamp air separators and expansion tanks to comply with ASME Boiler and Pressure Vessel Code: Section VIII, Division 1.

PART 2 - PRODUCTS

2.1 VALVES

- A. Globe, Check, Ball, and Butterfly Valves: Comply with requirements specified in Section 230523 "General-Duty Valves for HVAC Piping. Gate valves are not allowed on this project.
- B. Automatic Temperature-Control Valves, Actuators, and Sensors: Comply with requirements specified in Section 230900 "Instrumentation and Control for HVAC.
- C. Refer to Part 3 "Valve Applications" Article for applications of each valve.
- D. Bronze, Calibrated-Orifice or Venturi, Balancing Valves, NPS 2 and smaller:
 - 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Armstrong Pumps, Inc.
 - b. Bell & Gossett Domestic Pump.
 - c. Flow Design Inc.
 - d. Gerand Engineering Co.
 - e. Griswold Controls.
 - f. Taco.
 - g. Tour & Andersson; available through Victaulic Company.
 - h. Tyco-Grinnell
 - 2. Body: Bronze, ball or plug type with calibrated orifice or ☐enture.
 - 3. Ball: Brass or stainless steel.
 - 4. Plug: Resin.
 - 5. Seat: PTFE.
 - 6. End Connections: Threaded or socket.
 - 7. Pressure Gage Connections: Integral seals for portable differential pressure meter.
 - 8. Handle Style: Lever, with memory stop to retain set position.
 - 9. CWP Rating: Minimum 125 psig.
 - 10. Maximum Operating Temperature: 250 deg F.
- E. Cast-Iron or Steel, Calibrated-Orifice or Venturi, Balancing Valves, NPS 2 ½ and larger:
 - 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Amtrol, Inc.
 - b. Armstrong Pumps, Inc.
 - c. Bell & Gossett Domestic Pump.
 - d. Flow Design Inc.
 - e. Gerand Engineering Co.
 - f. Grinnell.
 - g. Griswold Controls.
 - h. Taco.
 - i. Tour & Andersson; available through Victaulic Company.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- j. Spence Engineering Company Inc.
 - k. Watts Regulator Co.
-
- 2. Body: Cast-iron or steel body, ball, plug, or globe pattern with calibrated orifice or ☐enture.
 - 3. Ball: Brass or stainless steel.
 - 4. Stem Seals: EPDM O-rings.
 - 5. Disc: Glass and carbon-filled PTFE.
 - 6. Seat: PTFE.
 - 7. End Connections: Flanged or grooved.
 - 8. Pressure Gage Connections: Integral seals for portable differential pressure meter.
 - 9. Handle Style: Lever, with memory stop to retain set position.
 - 10. CWP Rating: Minimum 125 psig.
 - 11. Maximum Operating Temperature: 250 deg F.
- F. Diaphragm-Operated, Pressure-Reducing Valves: ASME labeled.
- 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Amtrol, Inc.
 - b. Armstrong Pumps, Inc.
 - c. Bell & Gossett Domestic Pump.
 - d. Conbraco Industries, Inc.
 - e. Spence Engineering Company, Inc.
 - f. Watts Regulator Co.
 - 2. Body: Bronze or brass.
 - 3. Disc: Glass and carbon-filled PTFE.
 - 4. Seat: Brass.
 - 5. Stem Seals: EPDM O-rings.
 - 6. Diaphragm: EPT.
 - 7. Low inlet-pressure check valve.
 - 8. Inlet Strainer: Brass, removable without system shutdown.
 - 9. Valve Seat and Stem: Noncorrosive.
 - 10. Valve Size, Capacity, and Operating Pressure: Selected to suit system in which installed, with operating pressure and capacity factory set and field adjustable.
- G. Diaphragm-Operated Safety Valves: ASME labeled.
- 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Amtrol, Inc.
 - b. Armstrong Pumps, Inc.
 - c. Bell & Gossett Domestic Pump.
 - d. Conbraco Industries, Inc.
 - e. Kunkle.
 - f. Spence Engineering Company, Inc.
 - 2. Body: Bronze or brass.
 - 3. Disc: Glass and carbon-filled PTFE.
 - 4. Seat: Brass.
 - 5. Stem Seals: EPDM O-rings.
 - 6. Diaphragm: EPT.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

7. Wetted, Internal Work Parts: Brass and rubber.
8. Inlet Strainer: Brass, removable without system shutdown.
9. Valve Seat and Stem: Noncorrosive.
10. Valve Size, Capacity, and Operating Pressure: Comply with ASME Boiler and Pressure Vessel Code: Section IV, and selected to suit system in which installed, with operating pressure and capacity factory set and field adjustable.

H. Automatic Flow-Control Valves:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Armstrong Pumps, Inc.
 - b. Bell & Gossett Domestic Pump.
 - c. Flow Design Inc.
 - d. Griswold Controls.
 - e. Taco
2. Body: Brass or ferrous metal.
3. Piston and Spring Assembly: Tamper proof, self-cleaning, and removable, for inspections and replacement.
 - a. Corrosion resistant.
4. Combination Assemblies: Include bronze or brass-alloy ball valve.
5. Identification Tag: Attached by chain and marked with zone identification, valve number, and flow rate.
6. Size: Same as pipe in which installed.
7. Performance: Maintain constant flow, plus or minus 5 percent over system pressure fluctuations:
 - a. Minimum CWP Rating: 175 psig.
8. Maximum Operating Temperature: 200 deg F.
9. Fitted with pressure and temperature test valves.
10. Equipped with a readout kit including flow meter, probes, hoses, flow charts, and carrying case.

2.2 AIR-CONTROL DEVICES

A. Manual Air Vents:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Amtrol, Inc.
 - b. Armstrong Pumps, Inc.
 - c. Bell & Gossett Domestic Pump.
 - d. Taco, Inc.
2. Body: Bronze.
3. Internal Parts: Nonferrous.
4. Operator: Screwdriver or thumbscrew.
5. Manually operated with ball valve in the down position.
6. Inlet Connection: NPS 1/2.
7. Discharge Connection: NPS 1/8.
8. CWP Rating: 150 psig.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

9. Maximum Operating Temperature: 225 deg F.

B. Automatic Air Vents:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Amtrol, Inc.
 - b. Bell & Gossett Domestic Pump.
 - c. Hoffman Specialty ITT; Fluid Handling Div.
 - d. Spirax-Sarco.
 - e. Spirovent.
 - f. Taco, Inc.
 - g. Honeywell-Baukman.
2. Body: Bronze or cast iron.
3. Internal Parts: Nonferrous.
4. Operator: Noncorrosive metal float.
5. Inlet Connection: NPS 1/2.
6. Discharge Connection: NPS 1/4.
7. CWP Rating: 150 psig.
8. Maximum Operating Temperature: 240 deg F.

C. Tangential-Type Air Separators:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Amtrol, Inc.
 - b. Armstrong Pumps, Inc.
 - c. Bell & Gossett Domestic Pump.
 - d. Taco, Inc.
2. Tank: Welded steel; ASME constructed and labeled for 125-psig minimum working pressure and 240 deg F maximum operating temperature.
3. Air Collector Tube: Perforated stainless steel, constructed to direct released air into expansion tank.
4. Tangential Inlet and Outlet Connections: Threaded for NPS 2 and smaller; flanged connections for NPS 2-1/2 and larger.
5. Blowdown Connection: Threaded.
6. Size: Match system flow capacity.

2.3 HYDRONIC PIPING SPECIALTIES

A. Y-Pattern Strainers:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Armstrong Machine Works.
 - b. Hoffman Specialty ITT; Fluid Handling Div.
 - c. Metraflex Co.
 - d. Mueller

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- e. Spirax Sarco.
 - f. Trane Co.
 - g. Tyco-Grinnell.
 - h. Tour & Andersson; available through Victaulic Company.
 - i. Watts Regulator Co.
- 2. Body: ASTM A 126, Class B, cast iron with bolted cover and bottom drain connection.
 - 3. End Connections: Threaded ends for NPS 2 and smaller; flanged ends for NPS 2-1/2 and larger.
 - 4. Strainer Screen: Stainless-steel, or perforated stainless-steel basket:
 - a. 20-mesh strainer.
 - 5. CWP Rating: 125 psig.
- B. Basket Strainers:**
- 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Crane Co.
 - b. Metraflex Co.
 - c. Mueller
 - d. Spirax Sarco.
 - e. Tyco-Grinnell.
 - f. Tour & Andersson; available through Victaulic Company.
 - 2. Body: ASTM A 126, Class B, high-tensile cast iron with bolted cover and bottom drain connection.
 - 3. End Connections: Threaded ends for NPS 2 and smaller; flanged ends for NPS 2-1/2 and larger.
 - 4. Strainer Screen: Perforated stainless-steel basket with 50 percent free area:
 - a. 40-mesh startup strainer.
 - 5. CWP Rating: 125 psig.
- C. Spherical, Rubber, Flexible Connectors:**
- 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Amber-Booth.
 - b. Mason Industries.
 - c. Metraflex Co.
 - d. Flex-Weld.
 - e. Proco.
 - f. Fugate.
 - g. Twin City Hose.
 - 2. Body: Double-sphere fiber-reinforced EPDM rubber body.
 - 3. End Connections: Steel flanges drilled to align with Classes 150 and 300 steel flanges.
 - 4. Performance: Capable of misalignment.
 - 5. CWP Rating: 150 psig.
 - 6. Maximum Operating Temperature: 250 deg F.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

D. Diverting Fittings:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Amtrol, Inc.
 - b. Armstrong Pumps, Inc.
 - c. Bell & Gossett Domestic Pump.
 - d. Taco, Inc.
2. Body: Cast Iron or Wrought Copper
3. Ends: Threaded or Soldered
4. Flow Direction: Indicated on fitting.
5. CWP Rating: 125 psig.
6. Maximum Operating Temperature: 250 deg F.

PART 3 - EXECUTION

3.1 VALVE APPLICATIONS

- A. Install shutoff-duty valves at each branch connection to supply mains and at supply connection to each piece of equipment.
- B. Install calibrated-orifice, balancing valves at each branch connection to return main.
- C. Install calibrated-orifice, balancing valves in the return pipe of each heating or cooling terminal.
- D. Install check valves at each pump discharge and elsewhere as required to control flow direction.
- E. Install safety valves at hot-water generators and elsewhere as required by ASME Boiler and Pressure Vessel Code. Install drip-pan elbow on safety-valve outlet and pipe without valves to the outdoors; pipe drain to nearest floor drain or as indicated on Drawings. Comply with ASME Boiler and Pressure Vessel Code: Section VIII, Division 1, for installation requirements.
- F. Install pressure-reducing valves at makeup-water connection to regulate system fill pressure.

3.2 HYDRONIC SPECIALTIES

- A. Install manual air vents at high points in piping, at heat-transfer coils, and elsewhere as required for system air venting.
- B. Automatic air vents may cause damage to ceilings and other finished surfaces. Air vents aid in system filling. Air removal after initial startup is accomplished by air separator or boiler diptube. Manual air vents may be a better solution.
- C. Install automatic air vents at high points of system piping in mechanical equipment rooms only. Install manual vents at heat-transfer coils and elsewhere as required for air venting.
- D. Install piping from boiler air outlet, air separator, or air purger to expansion tank with a 2 percent upward slope toward tank.
- E. Install in-line air separators in pump suction. Install drain valve on air separators NPS 2 and

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

larger.

- F. Install tangential air separator in pump suction. Install blowdown piping with full-port ball valve; extend full size to nearest floor drain.
- G. Install expansion tanks above the air separator. Install tank fitting in tank bottom and charge tank. Use manual vent for initial fill to establish proper water level in tank.
 - 1. Install tank fittings that are shipped loose.
 - 2. Support tank from floor or structure above with sufficient strength to carry weight of tank, piping connections, fittings, plus tank full of water. Do not overload building components and structural members.
- H. Install expansion tanks on the floor. Vent and purge air from hydronic system, and ensure that tank is properly charged with air to suit system Project requirements.

END OF SECTION 232116

SECTION 233001

COMMON DUCT REQUIREMENTS

PART 1 - PRODUCTS

1.1 SUMMARY

- A. Includes But Not Limited To:
 - 1. General procedures and requirements for ductwork.
 - 2. Repair leaks in ductwork, as identified by smoke test, at no additional cost to Owner.
 - 3. Soundproofing procedures for duct penetrations of walls, ceilings, and floors in mechanical equipment rooms.
- B. Related Sections:
 - 1. Division 07: Quality of Acoustic Sealant.
 - 2. Section 23 0500: Common Work Results for HVAC
 - 3. Section 23 0593: Testing Adjusting and Balancing for HVAC.

1.2 SUBMITTALS

- A. Samples: Sealer and gauze proposed for sealing ductwork.
- B. Quality Assurance / Control:
 - 1. Manufacturer's installation manuals providing detailed instructions on assembly, joint sealing, and system pressure testing for leaks.
 - 2. Specification data on sealer and gauze proposed for sealing ductwork.

1.3 QUALITY ASSURANCE

- A. Requirements: Construction details not specifically called out in Contract Documents shall conform to applicable requirements of SMACNA HVAC Duct Construction Standards.
- B. Pre-Installation Conference: Schedule conference immediately before installation of ductwork.

PART 2 - PRODUCTS

2.1 FINISHES, WHERE APPLICABLE: COLORS AS SELECTED BY ARCHITECT.

2.2 DUCT HANGERS:

- A. One inch by 18 ga galvanized steel straps or steel rods as shown on Drawings, and spaced not more than 96 inches apart. Do not use wire hangers.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Attaching screws at trusses shall be 2 inch No. 10 round head wood screws. Nails not allowed.
2. Attach threaded rod to steel joist with Grinnell Steel washer plate Fig. 60 - ph-1. Double nut connection.

2.3 PENETRATION SOUNDPROOFING MATERIALS:

- A. Insulation for Packing: Fiberglass.
- B. Calking: Polysulphide.
- C. Escutcheon Frame: 22 ga galvanized iron 2 inches wide.

PART 3 - EXECUTION

3.1 INSTALLATION

- A. During installation, protect open ends of ducts by covering with plastic sheet tied in place to prevent entrance of debris and dirt.
- B. Make necessary allowances and provisions in installation of sheet metal ducts for structural conditions of building. Revisions in layout and configuration may be allowed, with prior written approval of Architect. Maintain required airflows in suggesting revisions.
- C. Hangers And Supports:
 1. Install pair of hangers close to each transverse joint and elsewhere as required by spacing indicated in table on Drawings.
 2. Install upper ends of hanger securely to floor or roof construction above by method shown on Drawings.
 3. Attach strap hangers to ducts with cadmium-plated screws. Use of pop rivets or other means will not be accepted.
 4. Where hangers are secured to forms before concrete slabs are poured, cut off flush all nails, strap ends, and other projections after forms are removed.
 5. Secure vertical ducts passing through floors by extending bracing angles to rest firmly on floors without loose blocking or shimming. Support vertical ducts, which do not pass through floors, by using bands bolted to walls, columns, etc. Size, spacing, and method of attachment to vertical ducts shall be same as specified for hanger bands on horizontal ducts.
- D. Penetration Soundproofing
 1. Pack space between ducts and structure full of fiberglass insulation of sufficient thickness to be wedged tight, allowing space for application of calking.
 2. Provide calking at least 2 inches thick between duct and structure on both ends of opening through structure.
 3. Provide metal escutcheon on Equipment Room side. Secure escutcheon to wall.

3.2 CLEANING

- A. Clean interior of duct systems before final completion.

END OF SECTION 233001

BLLANK PAGE

SECTION 233113

METAL DUCTS

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Single-wall rectangular ducts and fittings.
 - 2. Single-wall round and flat-oval ducts and fittings.
 - 3. Sheet metal materials.
 - 4. Duct liner.
 - 5. Sealants and gaskets.
 - 6. Hangers and supports.
- B. Related Sections:
 - 1. Section 230593 "Testing, Adjusting, and Balancing for HVAC" for testing, adjusting, and balancing requirements for metal ducts.
 - 2. Section 233300 "Air Duct Accessories" for dampers, sound-control devices, duct-mounting access doors and panels, turning vanes, and flexible ducts.
 - 3. Section 230713 "Duct Insulation" for duct insulation and fire wrap.

1.3 PERFORMANCE REQUIREMENTS

- A. Delegated Duct Design: Duct construction, including sheet metal thicknesses, seam and joint construction, reinforcements, and hangers and supports, shall comply with SMACNA's "HVAC Duct Construction Standards - Metal and Flexible" and performance requirements and design criteria indicated in "Duct Schedule" Article.
- B. Seismic Performance: Duct hangers and supports shall withstand the effects of earthquake motions determined according to SEI/ASCE 7 and with the requirements specified in Section 230548 "Vibration and Seismic Controls for HVAC."
 - 1. For equipment with a seismic importance factor of 1.0 the term "withstand" means "the unit will remain in place without separation of any parts from the device when subjected to the seismic forces specified."
 - 2. For equipment with a seismic importance factor of 1.5 the term "withstand" means "the unit will remain in place without separation of any parts from the device when subjected to the seismic forces specified and the unit will be fully operational after the seismic event."
- C. Structural Performance: Duct hangers and supports shall withstand the effects of gravity loads

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

and stresses within limits and under conditions described in SMACNA's "HVAC Duct Construction Standards - Metal and Flexible"

- D. Airstream Surfaces: Surfaces in contact with the airstream shall comply with requirements in ASHRAE 62.1.

1.4 ACTION SUBMITTALS

- A. Product Data: For each type of the following products:

1. Liners and adhesives.
2. Sealants and gaskets.

- B. Shop Drawings:

1. Fabrication, assembly, and installation, including plans, elevations, sections, components, and attachments to other work.
2. Factory- and shop-fabricated ducts and fittings.
3. Duct layout indicating sizes, configuration, liner material, and static-pressure classes.
4. Elevation of top of ducts.
5. Dimensions of main duct runs from building grid lines.
6. Fittings.
7. Reinforcement and spacing.
8. Seam and joint construction.
9. Penetrations through fire-rated and other partitions.
10. Equipment installation based on equipment being used on Project.
11. Locations for duct accessories, including dampers, turning vanes, and access doors and panels.
12. Hangers and supports, including methods for duct and building attachment and vibration isolation.
13. Duct fabrication shall not begin until shop drawings have been submitted and reviewed by the mechanical engineer.

- C. Delegated-Design Submittal:

1. Sheet metal thicknesses.
2. Joint and seam construction and sealing.
3. Reinforcement details and spacing.
4. Materials, fabrication, assembly, and spacing of hangers and supports.
5. Design Calculations: Calculations for selecting hangers and supports.

1.5 INFORMATIONAL SUBMITTALS

- A. Coordination Drawings: Plans, drawn to scale, on which the following items are shown and coordinated with each other, using input from installers of the items involved:

1. Duct installation in congested spaces, indicating coordination with general construction, building components, and other building services. Indicate proposed changes to duct layout.
2. Suspended ceiling components.
3. Structural members to which duct will be attached.
4. Size and location of initial access modules for acoustical tile.
5. Penetrations of smoke barriers and fire-rated construction.
6. Items penetrating finished ceiling including, but not limited to the following:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- a. Lighting fixtures.
 - b. Air outlets and inlets.
 - c. Speakers.
 - d. Sprinklers.
 - e. Access panels.
 - f. Perimeter moldings.
- B. Field quality-control reports.

1.6 QUALITY ASSURANCE

- A. Welding Qualifications: Qualify procedures and personnel according to AWS D1.1/D1.1M, "Structural Welding Code - Steel," for hangers and supports. AWS D9.1M/D9.1, "Sheet Metal Welding Code," for duct joint and seam welding.
- B. Welding Qualifications: Qualify procedures and personnel according to the following:
- 1. AWS D1.1/D1.1M, "Structural Welding Code - Steel," for hangers and supports.
 - 2. AWS D1.2/D1.2M, "Structural Welding Code - Aluminum," for aluminum supports.
 - 3. AWS D9.1M/D9.1, "Sheet Metal Welding Code," for duct joint and seam welding.
- C. ASHRAE Compliance: Applicable requirements in ASHRAE 62.1, Section 5 - "Systems and Equipment" and Section 7 - "Construction and System Start-up."
- D. ASHRAE/IESNA Compliance: Applicable requirements in ASHRAE/IESNA 90.1, Section 6.4.4 - "HVAC System Construction and Insulation."

PART 2 - PRODUCTS

2.1 SINGLE-WALL RECTANGULAR DUCTS AND FITTINGS

- A. General Fabrication Requirements: Comply with SMACNA's "HVAC Duct Construction Standards - Metal and Flexible" based on indicated static-pressure class unless otherwise indicated.
- B. Transverse Joints: Select joint types and fabricate according to SMACNA's "HVAC Duct Construction Standards - Metal and Flexible," Figure 2-1, "Rectangular Duct/Transverse Joints," for static-pressure class, applicable sealing requirements, materials involved, duct-support intervals, and other provisions in SMACNA's "HVAC Duct Construction Standards - Metal and Flexible."
- C. Longitudinal Seams: Select seam types and fabricate according to SMACNA's "HVAC Duct Construction Standards - Metal and Flexible," Figure 2-2, "Rectangular Duct/Longitudinal Seams," for static-pressure class, applicable sealing requirements, materials involved, duct-support intervals, and other provisions in SMACNA's "HVAC Duct Construction Standards - Metal and Flexible."
- D. Duct dimensions shown on drawings are inside clear dimensions.
- E. Elbows, Transitions, Offsets, Branch Connections, and Other Duct Construction: Select types and fabricate according to SMACNA's "HVAC Duct Construction Standards - Metal and Flexible," Chapter 4, "Fittings and Other Construction," for static-pressure class, applicable

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

sealing requirements, materials involved, duct-support intervals, and other provisions in SMACNA's "HVAC Duct Construction Standards - Metal and Flexible."

2.2 SINGLE-WALL ROUND AND FLAT-OVAL DUCTS AND FITTINGS

- A. General Fabrication Requirements: Comply with SMACNA's "HVAC Duct Construction Standards - Metal and Flexible," Chapter 3, "Round, Oval, and Flexible Duct," based on indicated static-pressure class unless otherwise indicated.
- B. Duct dimensions shown on drawings are inside clear dimensions.
- C. Flat-Oval Ducts: Indicated dimensions are the duct width (major dimension) and diameter of the round sides connecting the flat portions of the duct (minor dimension).
- D. Transverse Joints: Select joint types and fabricate according to SMACNA's "HVAC Duct Construction Standards - Metal and Flexible," Figure 3-1, "Round Duct Transverse Joints," for static-pressure class, applicable sealing requirements, materials involved, duct-support intervals, and other provisions in SMACNA's "HVAC Duct Construction Standards - Metal and Flexible."
 - 1. Transverse Joints in Ducts Larger Than 60 Inches in Diameter: Flanged.
- E. Longitudinal Seams: Not allowed.
- F. Tees and Laterals: Select types and fabricate according to SMACNA's "HVAC Duct Construction Standards - Metal and Flexible," Figure 3-5, "90 Degree Tees and Laterals," and Figure 3-6, "Conical Tees," for static-pressure class, applicable sealing requirements, materials involved, duct-support intervals, and other provisions in SMACNA's "HVAC Duct Construction Standards - Metal and Flexible."

2.3 SHEET METAL MATERIALS

- A. General Material Requirements: Comply with SMACNA's "HVAC Duct Construction Standards - Metal and Flexible" for acceptable materials, material thicknesses, and duct construction methods unless otherwise indicated. Sheet metal materials shall be free of pitting, seam marks, roller marks, stains, discolorations, and other imperfections.
- B. Galvanized Sheet Steel: Comply with ASTM A 653.
 - 1. Galvanized Coating Designation: G90.
 - 2. Finishes for Surfaces Exposed to View: Mill phosphatized.
- C. Reinforcement Shapes and Plates: ASTM A 36, steel plates, shapes, and bars; black and galvanized.
 - 1. Where black- and galvanized-steel shapes and plates are used to reinforce aluminum ducts, isolate the different metals with butyl rubber, neoprene, or EPDM gasket materials.
- D. Tie Rods: Galvanized steel, 1/4-inch minimum diameter for lengths 36 inches or less; 3/8-inch minimum diameter for lengths longer than 36 inches.

2.4 DUCT LINER

- A. Fibrous-Glass Duct Liner: Comply with ASTM C 1071, NFPA 90A, or NFPA 90B; and with NAIMA AH124, "Fibrous Glass Duct Liner Standard."
1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. CertainTeed Corporation; Insulation Group.
 - b. Johns Manville.
 - c. Knauf Insulation.
 - d. Owens Corning.
 2. Maximum Thermal Conductivity:
 - a. Type I, Flexible: 0.27 Btu x in./h x sq. ft. x deg F at 75 deg F mean temperature.
 - b. Type II, Rigid: 0.23 Btu x in./h x sq. ft. x deg F at 75 deg F mean temperature.
 3. Antimicrobial Erosion-Resistant Coating: Apply to the surface of the liner that will form the interior surface of the duct to act as a moisture repellent and erosion-resistant coating. Antimicrobial compound shall be tested for efficacy by an NRTL and registered by the EPA for use in HVAC systems.
 4. Water-Based Liner Adhesive:
 - a. Comply with NFPA 90A or NFPA 90B and with ASTM C 916.
 - b. For indoor applications, adhesive shall have a VOC content of 80 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).
- B. Flexible Elastomeric Duct Liner: Preformed, cellular, closed-cell, sheet materials complying with ASTM C 534, Type II, Grade 1; and with NFPA 90A or NFPA 90B.
1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Aeroflex USA Inc.
 - b. Armacell LLC.
 - c. Rubatex International, LLC
 2. Surface-Burning Characteristics: Maximum flame-spread index of 25 and maximum smoke-developed index of 50 when tested according to UL 723; certified by an NRTL.
 3. Liner Adhesive: As recommended by insulation manufacturer and complying with NFPA 90A or NFPA 90B.
 - a. For indoor applications, adhesive shall have a VOC content of 50 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).
- C. Insulation Pins and Washers:
1. Cupped-Head, Capacitor-Discharge-Weld Pins: Copper- or zinc-coated steel pin, fully annealed for capacitor-discharge welding, , length to suit depth of insulation indicated with integral 1-1/2-inch galvanized carbon-steel washer.
 - a. 0.135-inch-diameter shank.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

2. Insulation-Retaining Washers: With beveled edge sized as required to hold insulation securely in place but not less than 1-1/2 inches in diameter.
 - a. Self-locking washers formed from 0.016-inch-thick aluminum.
- D. Shop Application of Duct Liner: Comply with SMACNA's "HVAC Duct Construction Standards - Metal and Flexible," Figure 7-11, "Flexible Duct Liner Installation."
 1. Adhere a single layer of indicated thickness of duct liner with at least 90 percent adhesive coverage at liner contact surface area. Attaining indicated thickness with multiple layers of duct liner is prohibited.
 2. Apply adhesive to transverse edges of liner facing upstream that do not receive metal nosing.
 3. Butt transverse joints without gaps, and coat joint with adhesive.
 4. Fold and compress liner in corners of rectangular ducts or cut and fit to ensure butted-edge overlapping.
 5. Do not apply liner in rectangular ducts with longitudinal joints, except at corners of ducts, unless duct size and dimensions of standard liner make longitudinal joints necessary.
 6. Secure liner with mechanical fasteners 4 inches from corners and at intervals not exceeding 12 inches transversely; at 3 inches from transverse joints and at intervals not exceeding 18 inches longitudinally.
 7. Secure transversely oriented liner edges facing the airstream with metal nosings that have either channel or "Z" profiles or are integrally formed from duct wall. Fabricate edge facings at the following locations:
 - a. Fan discharges.
 - b. Intervals of lined duct preceding unlined duct.
 8. Secure insulation between perforated sheet metal inner duct of same thickness as specified for outer shell. Use mechanical fasteners that maintain inner duct at uniform distance from outer shell without compressing insulation.
 - a. Sheet Metal Inner Duct Perforations: 3/32-inch diameter, with an overall open area of 23 percent.
 9. Terminate inner ducts with buildouts attached to fire-damper sleeves, dampers, turning vane assemblies, or other devices. Fabricated build-outs (metal hat sections) or other buildout means are optional; when used, secure buildouts to duct walls with bolts, screws, rivets, or welds.

2.5 SEALANT AND GASKETS

- A. General Sealant and Gasket Requirements: Surface-burning characteristics for sealants and gaskets shall be a maximum flame-spread index of 25 and a maximum smoke-developed index of 50 when tested according to UL 723; certified by an NRTL.
- B. Two-Part Tape Sealing System:
 1. Tape: Woven cotton fiber impregnated with mineral gypsum and modified acrylic/silicone activator to react exothermically with tape to form hard, durable, airtight seal.
 2. Tape Width: 4 inches.
 3. Sealant: Modified styrene acrylic.
 4. Water resistant.
 5. Mold and mildew resistant.
 6. Maximum Static-Pressure Class: 10-inch wg, positive and negative.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

7. Service: Indoor and outdoor.
8. Service Temperature: Minus 40 to plus 200 deg F.
9. Substrate: Compatible with galvanized sheet steel (both PVC coated and bare), stainless steel, or aluminum.
10. For indoor applications, sealant shall have a VOC content of 250 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).

C. Water-Based Joint and Seam Sealant:

1. Application Method: Brush on.
2. Solids Content: Minimum 65 percent.
3. Shore A Hardness: Minimum 20.
4. Water resistant.
5. Mold and mildew resistant.
6. VOC: Maximum 75 g/L (less water).
7. Maximum Static-Pressure Class: 10-inch wg, positive and negative.
8. Service: Indoor or outdoor.
9. Substrate: Compatible with galvanized sheet steel, stainless steel, or aluminum sheets.

D. Solvent-Based Joint and Seam Sealant:

1. Application Method: Brush on.
2. Base: Synthetic rubber resin.
3. Solvent: Toluene and heptane.
4. Solids Content: Minimum 60 percent.
5. Shore A Hardness: Minimum 60.
6. Water resistant.
7. Mold and mildew resistant.
8. For indoor applications, sealant shall have a VOC content of 250 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).
9. VOC: Maximum 395 g/L.
10. Maximum Static-Pressure Class: 10-inch wg, positive or negative.
11. Service: Indoor or outdoor.
12. Substrate: Compatible with galvanized sheet steel (both PVC coated and bare), stainless steel, or aluminum sheets.

E. Flanged Joint Sealant: Comply with ASTM C 920.

1. General: Single-component, acid-curing, silicone, elastomeric.
2. Type: S.
3. Grade: NS.
4. Class: 25.
5. Use: O.
6. For indoor applications, sealant shall have a VOC content of 250 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).

F. Flange Gaskets: Butyl rubber, neoprene, or EPDM polymer with polyisobutylene plasticizer.

G. Round Duct Joint O-Ring Seals:

1. Seal shall provide maximum leakage class of 3 cfm/100 sq. ft. at 1-inch wg and shall be rated for 10-inch wg static-pressure class, positive or negative.
2. EPDM O-ring to seal in concave bead in coupling or fitting spigot.
3. Double-lipped, EPDM O-ring seal, mechanically fastened to factory-fabricated couplings and fitting spigots.

2.6 HANGERS AND SUPPORTS

- A. Hanger Rods for Noncorrosive Environments: Cadmium-plated steel rods and nuts.
- B. Hanger Rods for Corrosive Environments: Electrogalvanized, all-thread rods or galvanized rods with threads painted with zinc-chromate primer after installation.
- C. Strap and Rod Sizes: Comply with SMACNA's "HVAC Duct Construction Standards - Metal and Flexible," Table 5-1, "Rectangular Duct Hangers Minimum Size," and Table 5-2, "Minimum Hanger Sizes for Round Duct."
- D. Steel Cables for Galvanized-Steel Ducts: Galvanized steel complying with ASTM A 603.
- E. Steel Cables for Stainless-Steel Ducts: Stainless steel complying with ASTM A 492.
- F. Steel Cable End Connections: Cadmium-plated steel assemblies with brackets, swivel, and bolts designed for duct hanger service; with an automatic-locking and clamping device.
- G. Duct Attachments: Sheet metal screws, blind rivets, or self-tapping metal screws; compatible with duct materials.
- H. Trapeze and Riser Supports:
 - 1. Supports for Galvanized-Steel Ducts: Galvanized-steel shapes and plates.
 - 2. Supports for Stainless-Steel Ducts: Stainless-steel shapes and plates.
 - 3. Supports for Aluminum Ducts: Aluminum or galvanized steel coated with zinc chromate.

PART 3 - EXECUTION

3.1 DUCT INSTALLATION

- A. Drawing plans, schematics, and diagrams indicate general location and arrangement of duct system. Indicated duct locations, configurations, and arrangements were used to size ducts and calculate friction loss for air-handling equipment sizing and for other design considerations. Install duct systems as indicated unless deviations to layout are approved on Shop Drawings and Coordination Drawings.
- B. Install ducts according to SMACNA's "HVAC Duct Construction Standards - Metal and Flexible" unless otherwise indicated.
- C. Install round and flat-oval ducts in maximum practical lengths.
- D. Install ducts with fewest possible joints.
- E. Install factory- or shop-fabricated fittings for changes in direction, size, and shape and for branch connections.
- F. Unless otherwise indicated, install ducts vertically and horizontally, and parallel and perpendicular to building lines.
- G. Install ducts close to walls, overhead construction, columns, and other structural and permanent enclosure elements of building.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- H. Install ducts with a clearance of 2 inch, plus allowance for insulation thickness.
- I. Route ducts to avoid passing through transformer vaults and electrical equipment rooms and enclosures.
- J. Where ducts pass through non-fire-rated interior partitions and exterior walls and are exposed to view, cover the opening between the partition and duct or duct insulation with sheet metal flanges of same metal thickness as the duct. Overlap openings on four sides by at least 1-1/2 inches.
- K. Where ducts pass through fire-rated interior partitions and exterior walls, install fire dampers. Comply with requirements in Section 233300 "Air Duct Accessories" for fire and smoke dampers.
- L. Protect duct interiors from moisture, construction debris and dust, and other foreign materials. Comply with SMACNA's "IAQ Guidelines for Occupied Buildings Under Construction," Appendix G, "Duct Cleanliness for New Construction Guidelines" .

3.2 INSTALLATION OF EXPOSED DUCTWORK

- A. Protect ducts exposed in finished spaces from being dented, scratched, or damaged.
- B. Trim duct sealants flush with metal. Create a smooth and uniform exposed bead. Do not use two-part tape sealing system.
- C. Grind welds to provide smooth surface free of burrs, sharp edges, and weld splatter. When welding stainless steel with a No. 3 or 4 finish, grind the welds flush, polish the exposed welds, and treat the welds to remove discoloration caused by welding.
- D. Maintain consistency, symmetry, and uniformity in the arrangement and fabrication of fittings, hangers and supports, duct accessories, and air outlets.
- E. Repair or replace damaged sections and finished work that does not comply with these requirements.

3.3 DUCT SEALING

- A. Seal ducts for duct static-pressure, seal classes, and leakage classes specified in "Duct Schedule" Article according to SMACNA's "HVAC Duct Construction Standards - Metal and Flexible."
- B. Seal ducts to the following seal classes according to SMACNA's "HVAC Duct Construction Standards - Metal and Flexible":
 - 1. Comply with SMACNA's "HVAC Duct Construction Standards - Metal and Flexible."
 - 2. Outdoor, Supply-Air Ducts: Seal Class A.
 - 3. Outdoor, Exhaust Ducts: Seal Class A.
 - 4. Outdoor, Return-Air Ducts: Seal Class A.
 - 5. Unconditioned Space, Supply-Air Ducts in Pressure Classes 2-Inch wg and Lower: Seal Class A.
 - 6. Unconditioned Space, Supply-Air Ducts in Pressure Classes Higher Than 2-Inch wg: Seal Class A.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

7. Unconditioned Space, Exhaust Ducts: Seal Class A.
8. Unconditioned Space, Return-Air Ducts: Seal Class A.
9. Conditioned Space, Supply-Air Ducts in Pressure Classes 2-Inch wg and Lower: Seal Class A.
10. Conditioned Space, Supply-Air Ducts in Pressure Classes Higher Than 2-Inch wg: Seal Class A.
11. Conditioned Space, Exhaust Ducts: Seal Class A.
12. Conditioned Space, Return-Air Ducts: Seal Class A.

3.4 HANGER AND SUPPORT INSTALLATION

- A. Comply with SMACNA's "HVAC Duct Construction Standards - Metal and Flexible," Chapter 5, "Hangers and Supports."
- B. Building Attachments: Concrete inserts, powder-actuated fasteners, or structural-steel fasteners appropriate for construction materials to which hangers are being attached.
 1. Where practical, install concrete inserts before placing concrete.
 2. Install powder-actuated concrete fasteners after concrete is placed and completely cured.
 3. Use powder-actuated concrete fasteners for standard-weight aggregate concretes or for slabs more than 4 inchesthick.
 4. Do not use powder-actuated concrete fasteners for lightweight-aggregate concretes or for slabs less than 4 inchesthick.
 5. Do not use powder-actuated concrete fasteners for seismic restraints.
- C. Hanger Spacing: Comply with SMACNA's "HVAC Duct Construction Standards - Metal and Flexible," Table 5-1, "Rectangular Duct Hangers Minimum Size," and Table 5-2, "Minimum Hanger Sizes for Round Duct," for maximum hanger spacing; install hangers and supports within 24 inches of each elbow and within 48 inches of each branch intersection.
- D. Hangers Exposed to View: Threaded rod and angle or channel supports.
- E. Support vertical ducts with steel angles or channel secured to the sides of the duct with welds, bolts, sheet metal screws, or blind rivets; support at each floor and at a maximum intervals of 16 feet.
- F. Install upper attachments to structures. Select and size upper attachments with pull-out, tension, and shear capacities appropriate for supported loads and building materials where used.

3.5 SEISMIC-RESTRAINT-DEVICE INSTALLATION

- A. Install ducts with hangers and braces designed to support the duct and to restrain against seismic forces required by applicable building codes. Comply with the requirements specified in Section 23 0548 "Vibration and Seismic Controls for HVAC."
 1. Comply with ASCE/SEI 7.

3.6 CONNECTIONS

- A. Make connections to equipment with flexible connectors complying with Section 233300 "Air

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

Duct Accessories."

- B. Comply with SMACNA's "HVAC Duct Construction Standards - Metal and Flexible" for branch, outlet and inlet, and terminal unit connections.

3.7 PAINTING

- A. Paint interior of metal ducts that are visible through registers and grilles and that do not have duct liner. Apply one coat of flat, black, latex paint over a compatible galvanized-steel primer. Paint materials and application requirements are specified in Section 099113 "Exterior Painting" and Section 099123 "Interior Painting."

3.8 FIELD QUALITY CONTROL

- A. Perform tests and inspections.
- B. Leakage Tests:
 - 1. Comply with SMACNA's "HVAC Air Duct Leakage Test Manual." Submit a test report for each test.
 - 2. Test the following systems:
 - a. Supply Ducts with a Pressure Class of 2-Inch wg or Higher: Test representative duct sections, selected by Architect from sections installed, totaling no less than 50 percent of total installed duct area for each designated pressure class.
 - b. Return Ducts with a Pressure Class of 2-Inch wg or Higher: Test representative duct sections, selected by Architect from sections installed, totaling no less than 50 percent of total installed duct area for each designated pressure class.
 - c. Exhaust Ducts with a Pressure Class of 2-Inch wg or Higher: Test representative duct sections, selected by Architect from sections installed, totaling no less than 50 percent of total installed duct area for each designated pressure class.
 - d. Outdoor Air Ducts with a Pressure Class of 2-Inch wg or Higher: Test representative duct sections, selected by Architect from sections installed, totaling no less than 50 percent of total installed duct area for each designated pressure class.
 - 3. Disassemble, reassemble, and seal segments of systems to accommodate leakage testing and for compliance with test requirements.
 - 4. Test for leaks before applying external insulation.
 - 5. Conduct tests at static pressures equal to maximum design pressure of system or section being tested. If static-pressure classes are not indicated, test system at maximum system design pressure. Do not pressurize systems above maximum design operating pressure.
 - 6. Give seven days' advance notice for testing.
- C. Duct System Cleanliness Tests:
 - 1. Visually inspect duct system to ensure that no visible contaminants are present.
 - 2. Any liner showing evidence that it has wet at any time shall be removed and replaced with new liner.
 - a. Disinfect affected sheet metal, and pins.
 - b. Install new liner per specifications

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- c. Seal friable edges and seams of repaired liner.
- D. Duct system will be considered defective if it does not pass tests and inspections.
- E. Prepare test and inspection reports.

3.9 DUCT CLEANING

- A. Clean new duct system before testing, adjusting, and balancing.
- B. Use service openings for entry and inspection.
 - 1. Create new openings and install access panels appropriate for duct static-pressure class if required for cleaning access. Provide insulated panels for insulated or lined duct. Patch insulation and liner as recommended by duct liner manufacturer. Comply with Section 233300 "Air Duct Accessories" for access panels and doors.
 - 2. Disconnect and reconnect flexible ducts as needed for cleaning and inspection.
 - 3. Remove and reinstall ceiling to gain access during the cleaning process.
- C. Particulate Collection and Odor Control:
 - 1. When venting vacuuming system inside the building, use HEPA filtration with 99.97 percent collection efficiency for 0.3-micron-size (or larger) particles.
 - 2. When venting vacuuming system to outdoors, use filter to collect debris removed from HVAC system, and locate exhaust downwind and away from air intakes and other points of entry into building.
- D. Clean the following components by removing surface contaminants and deposits:
 - 1. Air outlets and inlets (registers, grilles, and diffusers).
 - 2. Supply, return, and exhaust fans including fan housings, plenums (except ceiling supply and return plenums), scrolls, blades or vanes, shafts, baffles, dampers, and drive assemblies.
 - 3. Air-handling unit internal surfaces and components including mixing box, coil section, air wash systems, spray eliminators, condensate drain pans, humidifiers and dehumidifiers, filters and filter sections, and condensate collectors and drains.
 - 4. Coils and related components.
 - 5. Return-air ducts, dampers, actuators, and turning vanes except in ceiling plenums and mechanical equipment rooms.
 - 6. Supply-air ducts, dampers, actuators, and turning vanes.
 - 7. Dedicated exhaust and ventilation components and makeup air systems.
- E. Mechanical Cleaning Methodology:
 - 1. Clean metal duct systems using mechanical cleaning methods that extract contaminants from within duct systems and remove contaminants from building.
 - 2. Use vacuum-collection devices that are operated continuously during cleaning. Connect vacuum device to downstream end of duct sections so areas being cleaned are under negative pressure.
 - 3. Use mechanical agitation to dislodge debris adhered to interior duct surfaces without damaging integrity of metal ducts, duct liner, or duct accessories.
 - 4. Clean fibrous-glass duct liner with HEPA vacuuming equipment; do not permit duct liner to get wet. Replace fibrous-glass duct liner that is damaged, deteriorated, or delaminated

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- or that has friable material, mold, or fungus growth.
5. Clean coils and coil drain pans according to NADCA 1992. Keep drain pan operational. Rinse coils with clean water to remove latent residues and cleaning materials; comb and straighten fins.
 6. Provide drainage and cleanup for wash-down procedures.
 7. Antimicrobial Agents and Coatings: Apply EPA-registered antimicrobial agents if fungus is present. Apply antimicrobial agents according to manufacturer's written instructions after removal of surface deposits and debris.

3.10 START UP

- A. Air Balance: Comply with requirements in Section 230593 "Testing, Adjusting, and Balancing for HVAC."

3.11 DUCT SCHEDULE

- A. Fabricate ducts with galvanized sheet steel.
- B. Ductwork running in areas where there are no ceilings or when noted on the drawings shall be doubled wall duct and shall meet the requirements indicated below.
- C. Supply Ducts:
 1. Ducts Connected to Fan Coil Units, Furnaces, Heat Pumps, and Terminal Units:
 - a. Pressure Class: Positive 2-inch wg.
 - b. Minimum SMACNA Seal Class: A.
 - c. SMACNA Leakage Class for Rectangular: 16.
 - d. SMACNA Leakage Class for Round: 8.
 2. Ducts Connected to Constant-Volume Air-Handling Units:
 - a. Pressure Class: Positive 3-inch wg.
 - b. Minimum SMACNA Seal Class: A.
 - c. SMACNA Leakage Class for Rectangular: 8.
 - d. SMACNA Leakage Class for Round: 4.
 3. Ducts Connected to Variable-Air-Volume Air-Handling Units:
 - a. Pressure Class: Positive 6-inch wg.
 - b. Minimum SMACNA Seal Class: A.
 - c. SMACNA Leakage Class for Rectangular: 4.
 - d. SMACNA Leakage Class for Round: 2.
 4. Ducts Connected to Equipment Not Listed Above:
 - a. Pressure Class: Positive 4-inch wg.
 - b. Minimum SMACNA Seal Class: A.
 - c. SMACNA Leakage Class for Rectangular: 4.
 - d. SMACNA Leakage Class for Round: 2.
- D. Return Ducts:
 1. Ducts Connected to Fan Coil Units, Furnaces, Heat Pumps, and Terminal Units:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- a. Pressure Class: Positive or negative 2-inch wg.
 - b. Minimum SMACNA Seal Class: A.
 - c. SMACNA Leakage Class for Rectangular: 16.
 - d. SMACNA Leakage Class for Round: 8.
 - 2. Ducts Connected to Air-Handling Units:
 - a. Pressure Class: Positive or negative 2-inch wg.
 - b. Minimum SMACNA Seal Class: A.
 - c. SMACNA Leakage Class for Rectangular: 16.
 - d. SMACNA Leakage Class for Round: 8.
 - 3. Ducts Connected to Equipment Not Listed Above:
 - a. Pressure Class: Positive or negative 3-inch wg.
 - b. Minimum SMACNA Seal Class: A.
 - c. SMACNA Leakage Class for Rectangular: 8.
 - d. SMACNA Leakage Class for Round: 4.
- E. Exhaust Ducts:
- 1. Ducts Connected to Fans Exhausting (ASHRAE 62.1, Class 1 and 2) Air:
 - a. Pressure Class: Negative 2-inch wg.
 - b. Minimum SMACNA Seal Class: A.
 - c. SMACNA Leakage Class for Rectangular: 16.
 - d. SMACNA Leakage Class for Round: 4.
 - 2. Ducts Connected to Air-Handling Units:
 - a. Pressure Class: Positive or negative 3-inch wg.
 - b. Minimum SMACNA Seal Class: A.
 - c. SMACNA Leakage Class for Rectangular: 8.
 - d. SMACNA Leakage Class for Round: 4.
 - 3. Ducts Connected to Variable-Air-Volume Air-Handling Units:
 - a. Pressure Class: Positive 6-inch wg.
 - b. Minimum SMACNA Seal Class: A.
 - c. SMACNA Leakage Class for Rectangular: 4.
 - d. SMACNA Leakage Class for Round: 2.
 - 4. Ducts Connected to Equipment Not Listed Above:
 - a. Pressure Class: Positive or negative 4-inch wg.
 - b. Minimum SMACNA Seal Class: A.
 - c. SMACNA Leakage Class for Rectangular: 4 .
 - d. SMACNA Leakage Class for Round: 2 .
- F. Outdoor-Air (Not Filtered, Heated, or Cooled) Ducts:
- 1. Ducts Connected to Fan Coil Units, Furnaces, Heat Pumps, and Terminal Units:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- a. Pressure Class: Positive or negative 2-inch wg.
 - b. Minimum SMACNA Seal Class: A.
 - c. SMACNA Leakage Class for Rectangular: 16 .
 - d. SMACNA Leakage Class for Round and Flat Oval: 4.
 2. Ducts Connected to Air-Handling Units:
 - a. Pressure Class: Positive or negative 3-inch wg.
 - b. Minimum SMACNA Seal Class: A.
 - c. SMACNA Leakage Class for Rectangular: 8.
 - d. SMACNA Leakage Class for Round: 4.
 3. Ducts Connected to Equipment Not Listed Above:
 - a. Pressure Class: Positive or negative 3-inch wg.
 - b. Minimum SMACNA Seal Class: A.
 - c. SMACNA Leakage Class for Rectangular: 8.
 - d. SMACNA Leakage Class for Round: 4.
- G. Intermediate Reinforcement:
1. Galvanized-Steel Ducts: Galvanized steel.
- H. Duct Liner Restrictions:
1. Duct liner exposed to air movement shall not be used in supply air ducts serving the following rooms: Operating rooms, trauma rooms, LDR rooms, NICU nurseries, ICU nurseries, positive pressure isolation rooms, cath labs, bone marrow, triage rooms, angiogram rooms, fluoroscopy rooms, linear accelerators, decontamination areas and any invasive procedure rooms where the duct insulation could be a source of contamination.
 2. Duct Liner exposed to air movement shall not be used on medium pressure ductwork (2000 to 4000 FPM velocity). See section 230713 "Duct Insulation" for insulation requirements.
 3. Duct Liner exposed to air movement shall not be used on high pressure ductwork (Greater than 4000 FPM velocity). See section 230713 "Duct Insulation" for insulation requirements.
 4. All duct liner shall meet all of the requirements found in 2012 IECC
- I. Liner: (Ductwork located in Unconditioned space)
1. LEED Prerequisite EA 2 requires that duct insulation R-value comply with ASHRAE/IESNA 90.1 tables titled "Minimum Duct Insulation R-Value, Cooling and Heating Only Supply Ducts and Return Ducts" and "Minimum Duct Insulation R-Value, Combined Heating and Cooling Supply Ducts and Return Ducts." If using liner alone to satisfy thermal requirements, verify that material selected is available in thickness needed to provide thermal performance without jeopardizing other requirements.
 2. Flexible elastomeric insulation is available in thicknesses through 1-1/2 inches (38 mm), which comply with NFPA 90A. Some options in subparagraphs below may create a restrictive proprietary specification. Verify availability of performance with manufacturers.
 3. Retain one option for material and one option for thickness, or insert another thickness, in each of six subparagraphs below.
 4. Low Pressure Supply Air Ducts (Less than 2000 FPM velocity): Fibrous glass, Type I, 1-1/2 inch thick with a minimum R value of 6.0 for ducts in unconditioned spaces.
 5. Supply Air Ducts: Fibrous glass, Type I [or flexible elastomeric] [Natural fiber], 1 inch

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- thick for ducts in conditioned spaces.
6. Return Air Ducts: Fibrous glass, Type I, 1-1/2 inch thick with a minimum R value of 6.0 for ducts in unconditioned spaces.
 7. Return Air Ducts: Fibrous glass, Type I [or flexible elastomeric] [Natural fiber], 1 inch thick for ducts in conditioned spaces.
 8. Exhaust Air Ducts: Fibrous glass, Type I [or flexible elastomeric] [Natural fiber], 1 inch thick.
 9. Supply Fan Plenums: Fibrous glass, Type I, 1-1/2 inch thick with a minimum R value of 6.0.
 10. Return- and Exhaust-Fan Plenums: Fibrous glass, Type II, 1-1/2 inch thick with a minimum R value of 6.0.
 11. Transfer Ducts: Fibrous glass, Type I thick.
- J. Liner: (Ductwork located Interior to building Insulated Envelope)
1. LEED Prerequisite EA 2 requires that duct insulation R-value comply with ASHRAE/IESNA 90.1 tables titled "Minimum Duct Insulation R-Value, Cooling and Heating Only Supply Ducts and Return Ducts" and "Minimum Duct Insulation R-Value, Combined Heating and Cooling Supply Ducts and Return Ducts." If using liner alone to satisfy thermal requirements, verify that material selected is available in thickness needed to provide thermal performance without jeopardizing other requirements.
 2. Flexible elastomeric insulation is available in thicknesses through 1-1/2 inches (38 mm), which comply with NFPA 90A. Some options in subparagraphs below may create a restrictive proprietary specification. Verify availability of performance with manufacturers.
 3. Retain one option for material and one option for thickness, or insert another thickness, in each of six subparagraphs below.
 4. Low Pressure Supply Air Ducts (Less than 2000 FPM velocity): Fibrous glass, Type I, 1 inch thick with a minimum R value of 4.0 for ducts in unconditioned spaces.
 5. Supply Air Ducts: Fibrous glass, Type I, 1 inch thick for ducts in conditioned spaces.
 6. Return Air Ducts: Fibrous glass, Type I, 1 inch thick with a minimum R value of 4.0 for ducts in unconditioned spaces.
 7. Return Air Ducts: Fibrous glass, Type I, 1 inch thick for ducts in conditioned spaces.
 8. Exhaust Air Ducts: Fibrous glass, Type I, 1 inch thick.
 9. Supply Fan Plenums: Fibrous glass, Type I, 1 inch thick with a minimum R value of 4.0.
 10. Return- and Exhaust-Fan Plenums: Fibrous glass, Type II, 1 inch thick with a minimum R value of 4.0.
 11. Transfer Ducts: Fibrous glass, Type I, 1 inch thick.
- K. Elbow Configuration:
1. Rectangular Duct: Comply with SMACNA's "HVAC Duct Construction Standards - Metal and Flexible," Figure 4-2, "Rectangular Elbows."
 - a. Radius Type RE 1 with minimum 1.5 radius-to-diameter ratio.
 - b. Radius Type RE 3 with minimum 1.0 radius-to-diameter ratio and two vanes.
 - c. Mitered Type RE 2 with vanes complying with SMACNA's "HVAC Duct Construction Standards - Metal and Flexible," Figure 4-3, "Vanes and Vane Runners," and Figure 4-4, "Vane Support in Elbows."
 2. Round Duct: Comply with SMACNA's "HVAC Duct Construction Standards - Metal and Flexible," Figure 3-4, "Round Duct Elbows."
 - a. Minimum Radius-to-Diameter Ratio and Elbow Segments: Comply with SMACNA's "HVAC Duct Construction Standards - Metal and Flexible," Table 3-1, "Mitered Elbows." Elbows with less than 90-degree change of direction have

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

proportionately fewer segments.

- 1) Velocity 1000 fpm or Lower: 1.0 radius-to-diameter ratio and three segments for 90-degree elbow.
- 2) Velocity 1000 to 1500 fpm: 1.5 radius-to-diameter ratio and four segments for 90-degree elbow.
- 3) Velocity 1500 fpm or Higher: 1.5 radius-to-diameter ratio and five segments for 90-degree elbow.
- 4) Radius-to Diameter Ratio: 1.5.

- b. Round Elbows, 12 Inches and Smaller in Diameter: Stamped or pleated.
- c. Round Elbows, 14 Inches and Larger in Diameter: Welded.

L. Branch Configuration:

1. Rectangular Duct: Comply with SMACNA's "HVAC Duct Construction Standards - Metal and Flexible," Figure 4-6, "Branch Connection."
 - a. Rectangular Main to Rectangular Branch: 45-degree entry high efficiency take-off.
 - b. Rectangular Main to Round Branch: 45-degree entry high efficiency take-off.
2. Round and Flat Oval:
 - a. Comply with SMACNA's "HVAC Duct Construction Standards - Metal and Flexible," Figure 3-5, "90 Degree Tees and Laterals," and Figure 3-6, "Conical Tees." Saddle taps are permitted in existing duct.
 - b. Velocity 1000 to 1500 fpm: 45-degree entry high efficiency tap.
 - c. Velocity 1500 fpm or Higher: 45-degree lateral.

END OF SECTION 233113

SECTION 233300

AIR DUCT ACCESSORIES

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Backdraft dampers
 - 2. Manual volume dampers.
 - 3. Control dampers
 - 4. Fire dampers.
 - 5. Smoke dampers.
 - 6. Combination fire and smoke dampers.
 - 7. Turning vanes.
 - 8. Remote damper operators.
 - 9. Duct-mounted access doors.
 - 10. Flexible connectors.
 - 11. Flexible ducts.
 - 12. Duct accessory hardware.
 - 13. High efficiency take-offs.
- B. Related Requirements:
 - 1. Division 23 "HVAC Gravity Ventilators" for roof-mounted ventilator caps.
 - 2. Division 23 "Diffusers, Registers and Grilles".
 - 3. Division 28 "Digital, Addressable Fire-Alarm System" for duct-mounted fire and smoke detectors.
 - 4. Division 28 "Zoned (DC-Loop) Fire-Alarm System" for duct-mounted fire and smoke detectors.

1.3 ACTION SUBMITTALS

- A. Product Data: For each type of product.
 - 1. For duct silencers, include pressure drop and dynamic insertion loss data. Include breakout noise calculations for high transmission loss casings.
- B. Shop Drawings: For duct accessories. Include plans, elevations, sections, details and attachments to other work.
 - 1. Detail duct accessories fabrication and installation in ducts and other construction. Include dimensions, weights, loads, and required clearances; and method of field assembly into duct systems and other construction. Include the following:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- a. Special fittings.
- b. Manual volume damper installations.
- c. Control-damper installations.
- d. Fire-damper, smoke-damper, combination fire- and smoke-damper, pressure relief-damper, ceiling, and corridor damper installations, including sleeves; and duct-mounted access doors and remote damper operators.
- e. Wiring Diagrams: For power, signal, and control wiring.

1.4 INFORMATIONAL SUBMITTALS

- A. Coordination Drawings: Reflected ceiling plans, drawn to scale, on which ceiling-mounted access panels and access doors required for access to duct accessories are shown and coordinated with each other, using input from Installers of the items involved.
- B. Source quality-control reports.

1.5 CLOSEOUT SUBMITTALS

- A. Operation and Maintenance Data: For air duct accessories to include in operation and maintenance manuals.

1.6 MAINTENANCE MATERIAL SUBMITTALS

- A. Furnish extra materials that match products installed and that are packaged with protective covering for storage and identified with labels describing contents.
 - 1. Fusible Links: Furnish quantity equal to 10 percent of amount installed.

PART 2 - PRODUCTS

2.1 ASSEMBLY DESCRIPTION

- A. Comply with NFPA 90A, "Installation of Air Conditioning and Ventilating Systems," and with NFPA 90B, "Installation of Warm Air Heating and Air Conditioning Systems."
- B. Comply with SMACNA's "HVAC Duct Construction Standards - Metal and Flexible" for acceptable materials, material thicknesses, and duct construction methods unless otherwise indicated. Sheet metal materials shall be free of pitting, seam marks, roller marks, stains, discolorations, and other imperfections.

2.2 MATERIALS

- A. Galvanized Sheet Steel: Comply with ASTM A 653.
 - 1. Galvanized Coating Designation: G60.
 - 2. Exposed-Surface Finish: Mill phosphatized.
- B. Aluminum Sheets: Comply with ASTM B 209, Alloy 3003, Temper H14; with mill finish for concealed ducts and standard, 1-side bright finish for exposed ducts.
- C. Extruded Aluminum: Comply with ASTM B 221, Alloy 6063, Temper T6.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- D. Reinforcement Shapes and Plates: Galvanized-steel reinforcement where installed on galvanized sheet metal ducts; compatible materials for aluminum and stainless-steel ducts.
- E. Tie Rods: Galvanized steel, 1/4-inch minimum diameter for lengths 36 inches or less; 3/8-inch minimum diameter for lengths longer than 36 inches.

2.3 BACKDRAFT DAMPERS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. American Warming and Ventilating; a division of Mestek, Inc.
 - 2. Greenheck Fan Corporation.
 - 3. Nailor Industries Inc.
 - 4. Pottorff.
 - 5. Ruskin Company.
 - 6. United Enertech
- B. Function:
 - 1. Designed to allow airflow in one direction and prevent reverse airflow.
 - 2. Keeps outside air out of the space by sensing and closing against mass flow.
- C. Description:
 - 1. Gravity balanced.
- D. Maximum Air Velocity:
 - 1. 1000 fpm
- E. Maximum System Pressure:
 - 1. 3-inch wg.
- F. Frame: Hat-shaped, with welded corners or mechanically attached and mounting flange:
 - 1. 16GA 0.063-inch- thick extruded aluminum.
- G. Blades: Multiple single-piece blades, maximum 6-inch width noncombustible, tear-resistant, neoprene-coated fiberglass with sealed edges:
 - 1. Center pivoted: 16GA 0.050-inch- thick aluminum sheet.
- H. Blade Action: Parallel.
- I. Blade Seals: Mechanically locked.
 - 1. Neoprene.
- J. Blade Axles: 0.20 inch diameter:
 - 1. Material: Nonferrous metal.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

K. Tie Bars and Brackets:

1. Aluminum.

L. Return Spring: Adjustable tension.

M. Bearings:

1. Synthetic pivot bushings.

N. Accessories.

1. Adjustment device to permit setting for varying differential static pressure.
2. Counterweights and spring-assist kits for vertical airflow installations.
3. Screen Mounting: Front mounted in sleeve.
 - a. Sleeve Thickness: 20 gage minimum.
 - b. Sleeve Length: 6 inches minimum.
4. Screen Mounting: Rear mounted.
5. Screen Material:
 - a. Aluminum.
6. Screen Type:
 - a. Bird
7. 90-degree stops.

2.4 MANUAL VOLUME DAMPERS

A. Standard, Steel, Manual Volume Dampers:

1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. American Warming and Ventilating; a division of Mestek, Inc.
 - b. McGill AirFlow LLC.
 - c. Nailor Industries Inc.
 - d. Pottorff.
 - e. Ruskin Company.
 - f. United Enertech
2. Standard leakage rating , with linkage outside airstream .
3. Suitable for horizontal or vertical applications.
4. Frames: Hat-shaped, Mitered and welded corners. Flanges for attaching to walls and flangeless frames for installing in ducts.
 - a. 16GA 0.064-inch thick, galvanized sheet steel.
5. Blades:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- a. Multiple or single blade. Parallel- or opposed-blade design. Stiffened damper blades for stability.
 - b. Material:
 - 1) Galvanized -steel, 16GA 0.064 inch thick.
 - 6. Blade Axles:
 - a. Nonferrous metal
 - b. Shall extend full length of damper blades in ducts with pressure classes of 3-inch wg or more.
 - 7. Bearings:
 - a. Material:
 - 1) Molded synthetic.
 - b. Bearings at both ends of damper operating shafts in ducts with pressure classes of 3-inch wg or more.
 - 8. Tie Bars and Brackets: Galvanized steel.
- B. Low-Leakage, Steel, Manual Volume Dampers:
- 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. American Warming and Ventilating; a division of Mestek, Inc.
 - b. McGill AirFlow LLC.
 - c. Nailor Industries Inc.
 - d. Pottorff.
 - e. Ruskin Company.
 - f. United Enertech
 - 2. Comply with AMCA 500-D testing for damper rating.
 - 3. Low-leakage rating ,with linkage outside airstream, and bearing AMCA's Certified Ratings Seal for both air performance and air leakage.
 - 4. Suitable for horizontal or vertical applications.
 - 5. Frames:
 - a. Frame: Hat-shaped,
 - 1) 16GA 0.064-inch thick, galvanized sheet steel.
 - b. Mitered and welded corners.
 - c. Flanges for attaching to walls and flangeless frames for installing in ducts.
 - 6. Blades:
 - a. Multiple or single blade.
 - b. Parallel- or opposed-blade design.
 - c. Stiffen damper blades for stability.
 - d. Material:
 - 1) Galvanized, roll-formed steel, 16GA 0.064 inch thick.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

7. Blade Axles:
 - a. Nonferrous metal.
 8. Bearings:
 - a. Molded synthetic.
 - b. Dampers in ducts with pressure classes of 3-inch wg or more shall have axles full length of damper blades and bearings at both ends of operating shaft.
 9. Blade Seals:
 - a. Neoprene.
 10. Jamb Seals: Cambered Stainless steel or aluminum.
 11. Tie Bars and Brackets: Galvanized steel or aluminum.
 12. Accessories:
 - a. Include locking device to hold single-blade dampers in a fixed position without vibration.
- C. Jackshaft:
1. Size:
 - a. 1-inch diameter.
 2. Material: Galvanized-steel pipe rotating within pipe-bearing assembly mounted on supports at each mullion and at each end of multiple-damper assemblies.
 3. Length and Number of Mountings: As required to connect linkage of each damper in multiple-damper assembly.
- D. Damper Hardware:
1. Zinc-plated, die-cast core with dial and handle made of 3/32-inch- thick zinc-plated steel, and a 3/4-inch hexagon locking nut.
 2. Include center hole to suit damper operating-rod size.
 3. Include elevated platform for insulated duct mounting.

2.5 CONTROL DAMPERS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
1. Greenheck Fan Corporation.
 2. Pottorff.
 3. Ruskin Company.
 4. Young Regulator Company.
 5. United Enertech
- B. Low-leakage rating, with linkage outside airstream, and bearing AMCA's Certified Ratings Seal for both air performance and air leakage.
- C. Frames:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Section:
 - a. Hat shaped.
 2. Material:
 - a. 20 GA 0.40-inch- thick galvanized steel.
 3. Corners:
 - a. Mitered-and-welded.
- D. Blades: Multiple.
1. Maximum blade width:
 - a. 6 inches.
 2. Opposed -blade design.
 3. Material:
 - a. Galvanized-steel.
 4. Thickness:
 - a. 20 GA 0.40-inch- thick galvanized steel
 5. Blade Edging: Inflatable seal blade edging, or replaceable rubber seals.
 - a. Closed-cell neoprene
- E. Blade Axles:
1. Section:
 - a. 3/8-inch-square
 2. Material:
 - a. Galvanized steel.
 3. Blade-linkage hardware:
 - a. Zinc-plated steel and brass.
 - b. Ends sealed against blade bearings:
 4. Operating Temperature Range: From minus 40 to plus 200 deg F.
- F. Bearings:
1. Type:
 - a. Molded synthetic.
 2. Axles: Dampers in ducts with pressure classes of 3-inch wg or more shall have axles full length of damper blades.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

3. Bearings: Thrust bearings at each end of every blade. Bearings at both ends of each operating shaft.

2.6 FIRE DAMPERS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 1. Arrow United Industries; a division of Mestek, Inc.
 2. Greenheck Fan Corporation.
 3. Nailor Industries Inc.
 4. Pottorff.
 5. Ruskin Company.
 6. United Enertech
- B. Type:
 1. Dynamic.
- C. Standard: Rated and labeled according to UL 555 by an NRTL.
- D. Closing rating in ducts up to 4-inch wg static pressure class and minimum 2000-fpm velocity.
- E. Fire Rating:
 1. 1-1/2 hours.
- F. Frame:
 1. Curtain type with blades outside airstream.
 2. Material:
 - a. Fabricated with roll-formed galvanized steel; with mitered and interlocking corners.
 - b. Thickness:
 - 1) 20GA-0.040-inch-
- G. Mounting Sleeve: Factory- or field-installed, galvanized sheet steel. Length to suit application.
 1. Minimum Thickness:
 - a. 18GA-0.05 inch, as indicated.
 2. Exception: Omit sleeve where damper-frame width permits direct attachment of perimeter mounting angles on each side of wall or floor; thickness of damper frame must comply with sleeve requirements.
- H. Mounting Orientation: Vertical or horizontal as indicated.
- I. Blades: Roll-formed, interlocking, galvanized sheet steel.
 1. Thickness:
 - a. 24GA-0.024-inch-

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- 2. In place of interlocking blades, use full-length, 0.034-inch- thick, galvanized-steel blade connectors.
- J. Horizontal Dampers: Include blade lock and Type 301 constant force stainless-steel closure spring.
- K. Heat-Responsive Device: Replaceable, 212 deg F rated, fusible links.

2.7 SMOKE DAMPERS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. Greenheck Fan Corporation.
 - 2. Nailor Industries Inc.
 - 3. Pottorff.
 - 4. Ruskin Company.
 - 5. United Enertech
- B. General Requirements: Label according to UL 555S by an NRTL.
- C. Smoke Detector: Integral, factory wired for single-point connection.
 - 1. Type: Photoelectric.
- D. Frame: Galvanized sheet steel. With or without mounting flange as required.
 - 1. Thickness:
 - a. Hat-shaped, 16GA-0.064-inch.
 - 2. Corners:
 - a. Welded.
- E. Blades: Horizontal, galvanized sheet steel.
 - 1. Section;
 - a. Roll-formed.
 - 2. Fit:
 - a. Interlocking.
 - 3. Thickness:
 - a. 14GA-0.079-inch.
- F. Leakage:
 - 1. Class II.
- G. Seals:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Blade: Inflatable silicone fiberglass material to maintain smoke leakage rating to a minimum of 450 deg F.
- H. Rated pressure and velocity to exceed design airflow conditions.
- I. Mounting Sleeve: Factory-installed, galvanized sheet steel; length to suit wall or floor application with factory-furnished silicone calking.
 1. Minimum 17-inches long.
 2. Thickness:
 - a. 0.05-inch-.
- J. Damper Motors:
 1. Action:
 - a. Two-position
 2. Mode: Fail close.
 3. Mounting: External.
- K. Comply with NEMA designation, temperature rating, service factor, enclosure type, and efficiency requirements for motors specified in Section 230513 "Common Motor Requirements for HVAC Equipment."
 1. Electrical Connection: 115 V, single phase, 60 Hz .
- L. Accessories:
 1. Auxiliary switches for signaling:
 - a. Position indication.
 2. Test Switch type:
 - a. Momentary test switch.
 3. Test Switch Mounting:
 - a. Damper.

2.8 COMBINATION FIRE AND SMOKE DAMPERS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 1. Greenheck Fan Corporation.
 2. Nailor Industries Inc.
 3. Pottorff.
 4. Ruskin Company.
 5. United Enertech

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- B. Type: Dynamic; rated and labeled according to UL 555 and UL 555S by an NRTL.
- C. Closing rating in ducts up to 4-inch wg static pressure class and minimum velocity of:
 - 1. 4000-fpm
- D. Fire Rating:
 - 1. 1-1/2 hours.
- E. Frame: Hat shaped, galvanized sheet steel. With or without mounting flange as required.
 - 1. Thickness:
 - a. 16GA-0.064-inch
 - 2. Corners:
 - a. Welded.
- F. Heat-Responsive Device: Replaceable, 212 deg F rated, fusible links.
- G. Blades: Horizontal, galvanized sheet steel.
 - 1. Type:
 - a. Air-foil.
 - 2. Fit:
 - a. Interlocking.
 - 3. Thickness:
 - a. 0.063-inch-.
- H. Leakage:
 - 1. Class I.
- I. Rated pressure and velocity to exceed design airflow conditions.
- J. Mounting Sleeve: Factory-installed, galvanized sheet steel; length to suit wall or floor application with factory-furnished silicone caulking.
 - 1. Thickness:
 - a. 18GA 0.05-inch-.
- K. Master control panel for use in dynamic smoke-management systems.
- L. Damper Motors:
 - 1. Locate outside air stream unless otherwise indicated,

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

2. Action:
 - a. Two-position.
 3. Voltage: to match fire alarm system (coordinate).
 4. Listed: UL, as part of damper assembly.
 5. Outdoor Motors and Motors in Outside-Air Intakes:
 - a. Gaskets: O-ring gaskets designed to make motors weatherproof.
 - b. Internal heaters: Equip to permit normal operation at minus 40 deg F .
- M. Comply with NEMA designation, temperature rating, service factor, enclosure type, and efficiency requirements for motors specified in Section 230513 "Common Motor Requirements for HVAC Equipment."
1. Electrical Connection: 115 V, single phase, 60 Hz.
- N. Accessories:
1. Auxiliary switches:
 - a. Signaling.
 - b. Position indication.
 2. Test Switch type:
 - a. Momentary test switch.
 3. Test Switch Mounting:
 - a. Damper.

2.9 TURNING VANES

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
1. METALAIRE, Inc.
 2. SEMCO Incorporated.
 3. Ward Industries, Inc.; a division of Hart & Cooley, Inc.
- B. Manufactured Turning Vanes for Metal Ducts: Curved blades of galvanized sheet steel; support with bars perpendicular to blades set; set into vane runners suitable for duct mounting.
1. Fabricate single blade vanes to comply with SMACNA's "HVAC Duct Construction Standards-Metal and Flexible."
 2. Acoustic Turning Vanes: Fabricate airfoil-shaped aluminum extrusions with perforated faces and fibrous-glass fill.
- C. Manufactured Turning Vanes for Nonmetal Ducts: Fabricate curved blades of resin-bonded fiberglass with acrylic polymer coating; support with bars perpendicular to blades set; set into vane runners suitable for duct mounting.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- D. General Requirements: Comply with SMACNA's "HVAC Duct Construction Standards - Metal and Flexible"; Figures 4-3, "Vanes and Vane Runners," and 4-4, "Vane Support in Elbows."
- E. Vane Construction:
 - 1. Single wall
- F. Vane Spacing:
 - 1. 1-1/2" spacing between turning vanes
 - 2. 3-1/4" spacing not allowed.
- G. Vane Construction: Single wall for ducts up to 36 inches wide and additional bracing for larger dimensions.

2.10 REMOTE DAMPER OPERATORS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. Pottorff.
 - 2. Ruskin Company; Tomkins PLC.
 - 3. Young Regulator Company.
- B. Cable Type:
 - 1. Description: Cable system designed for remote manual damper adjustment.
 - 2. Tubing/Sheathing: Galvinsed, Brass, Copper or Aluminum.
 - 3. Cable: Stainless steel or Steel.
 - 4. Wall-Box Mounting: Coordinate with Architect.
 - 5. Wall-Box Cover-Plate Material: Coordinate with Architect.
- C. Activated Electric Type:
 - 1. Description: Electrically activated zone control damper for remote adjustment. When an adjustment is needed the system is powered up.
 - 2. Means: Factory mounted actuator factory wired to damper.
 - 3. Portable 9 volt system. No field power requirement.
 - 4. Mounting: Recessed Wall Box or Diffuser or Hand Held.
 - 5. Wall-Box Cover Finish: Coordinate with Architect.
 - 6. Wall-Box Porting: 1 to 6 ports or more.

2.11 DUCT-MOUNTED ACCESS DOORS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. Greenheck Fan Corporation.
 - 2. McGill AirFlow LLC.
 - 3. Pottorff.
 - 4. Ward Industries, Inc.; a division of Hart & Cooley, Inc.
 - 5. Ruskin Company

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- B. Duct-Mounted Access Doors: Fabricate access panels according to SMACNA's "HVAC Duct Construction Standards - Metal and Flexible"; Figures 7-2, "Duct Access Doors and Panels," and 7-3, "Access Doors - Round Duct."
1. Door:
 - a. Double wall, rectangular.
 - b. Galvanized sheet metal with insulation fill and thickness as indicated for duct pressure class.
 - c. Vision panel.
 - d. Hinges and Latches: 1-by-1-inch butt or piano hinge and cam latches.
 - e. Fabricate doors airtight and suitable for duct pressure class.
 2. Frame: Galvanized sheet steel, with bend-over tabs and foam gaskets.
 3. Number of Hinges and Locks:
 - a. Access Doors Less Than 12 Inches Square: No hinges and two sash locks.
 - b. Access Doors up to 18 Inches Square:
 - 1) Hinges:
 - a) Two hinges and two sash locks.
 - c. Access Doors up to 24 by 48 Inches, provide outside and inside handles:
 - 1) Hinges:
 - a) Three hinges and two compression latches.
 - d. Access Doors Larger Than 24 by 48 Inches, provide outside and inside handles:
 - 1) Hinges:
 - a) Continuous and two compression latches with outside and inside handles.

2.12 FLEXIBLE CONNECTORS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
1. Ductmate Industries, Inc.
 2. Ventfabrics, Inc.
 3. Ward Industries, Inc.; a division of Hart & Cooley, Inc.
- B. Materials: Flame-retardant or noncombustible fabrics.
- C. Coatings and Adhesives: Comply with UL 181, Class 1.
- D. Metal-Edged Connectors: Factory fabricated with a wide fabric strip attached to two narrower metal strips. Provide strips of metal compatible with connected ducts.
1. Wide Strip:

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- a. 3-1/2 inches.
- 2. Narrow Strips:
 - a. 0.028-inch- thick, galvanized sheet steel.
- E. Indoor System, Flexible Connector Fabric: Glass fabric double coated with neoprene.
 - 1. Minimum Weight: 26 oz./sq. yd..
 - 2. Tensile Strength: 530 lbf/inch in the warp and 440 lbf/inch in the filling.
 - 3. Service Temperature: Minus 40 to plus 200 deg F.
- F. Outdoor System, Flexible Connector Fabric: Glass fabric double coated with weatherproof, synthetic rubber resistant to UV rays and ozone.
 - 1. Minimum Weight: 24 oz./sq. yd..
 - 2. Tensile Strength: 530 lbf/inch in the warp and 440 lbf/inch in the filling.
 - 3. Service Temperature: Minus 50 to plus 250 deg F.

2.13 FLEXIBLE DUCTS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. Flexmaster U.S.A., Inc.
 - 2. McGill AirFlow LLC.
 - 3. Themaflex
 - 4. Ward Industries, Inc.; a division of Hart & Cooley, Inc.
- B. Ducts shall conform to the requirements for Class I connectors when tested in accordance with "Standard for Factory Made Air Ducts Materials and Air Duct Connectors" (UL 181).
- C. Ducts shall also pass the 15 minute U.L. flame penetration test as specified in the UL 181 Standard.
- D. Insulated, Flexible Duct: Two-ply vinyl film supported by helically wound, spring-steel wire; fibrous-glass insulation; polyethylene or aluminized vapor-barrier film.
 - 1. Pressure Rating: 10-inch wg positive and 1.0-inch wg negative.
 - 2. Maximum Air Velocity: 4000 fpm.
 - 3. Temperature Range: Minus 10 to plus 160 deg F.
 - 4. Insulation R-value: Comply with ASHRAE/IESNA 90.1.
- E. Flexible Duct Connectors:
 - 1. Clamps: in sizes 3 through 18 inches, to suit duct size.
 - a. Material: Stainless-steel band with cadmium-plated hex screw to tighten band with a worm-gear action.

2.14 DUCT ACCESSORY HARDWARE

- A. Instrument Test Holes: Cast iron or cast aluminum to suit duct material, including screw cap and gasket. Size to allow insertion of pitot tube and other testing instruments and of length to suit duct-insulation thickness.
- B. Adhesives: High strength, quick setting, neoprene based, waterproof, and resistant to gasoline and grease.
- C. Splitter Damper Accessories: Zinc-plated damper blade bracket; 1/4-inch, zinc-plated operating rod; and a duct-mounted, ball-joint bracket with flat rubber gasket and square-head set screw.
- D. Flexible Duct Clamps: Stainless-steel band with cadmium-plated hex screw to tighten band with a worm-gear action, in sizes 3 to 18 inches to suit duct size.

2.15 HIGH EFFICIENCY TAKE-OFFS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following.
 - 1. Air-Rite
 - 2. Hercules Industries
 - 3. Sheet Metal Connectors, Inc.
 - 4. Spiral Manufacturing Co. Inc.
 - 5. Ferguson
- B. Materials:
 - 1. 24 gauge galvanized sheet metal meeting ASTM A653 and A924
- C. Take-off shall meet SMACNA third edition Section 4.8 figure 4.6 - 45 degree entry.
- D. Rectangular opening with flanged sides on all sides.
 - 1. Complete with closed cell neoprene gasket to provide a tight seal.

PART 3 - EXECUTION

3.1 INSTALLATION

General

- A. Install duct accessories according to applicable details in SMACNA's "HVAC Duct Construction Standards - Metal and Flexible" for metal ducts and in NAIMA AH116, "Fibrous Glass Duct Construction Standards," for fibrous-glass ducts.
- B. Install duct accessories of materials suited to duct materials; use galvanized-steel accessories in galvanized-steel and fibrous-glass ducts, stainless-steel accessories in stainless-steel ducts, and aluminum accessories in aluminum ducts.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- C. Use the Remote Damper Operator when they are called out on the drawings or when the damper cannot be easily accessed.
- D. Install high efficiency take-off on all branch duct take-offs. Provide take-off with balancing damper as shown on drawings. Spin-in fittings are not allowed.

Flexible Ducts / Flexible Duct Connectors

- E. Install flexible connectors to connect ducts to equipment.
- F. Flexible duct connections from the main trunk ducts to diffuser boots shall be furnished and installed as shown on the drawings. Flexible ductwork shall only be used as indicated on the drawings.
- G. Where flexible duct is indicated, use insulated flexible duct for supply air return and exhaust air.
- H. Flexible ductwork shall be run in straight lengths.
- I. Provide support in flexible duct every three feet.
- J. Flexible ducts shall have compression fittings on both ends.
- K. Flexible ductwork is not allowed to bend 90 degrees. If a bend is needed use sheet-metal hard elbows. Hard turns, offsets, or kinks will not be allowed.
- L. Flexible ducts shall connect to trunk duct with high efficiency takeoffs.
- M. Connect flexible ducts to metal ducts with draw bands.
- N. Connect ducts to duct silencers:
 - 1. With flexible duct connectors.
- O. Connect terminal units to supply ducts:
 - 1. With maximum 12-inch lengths of flexible duct.
- P. Do not use flexible ducts to change directions.
- Q. Connect diffusers or light troffer boots to ducts:
 - 1. With maximum 60-inch lengths of flexible duct clamped or strapped in place.

Backdraft/Control/Pressure Relief Dampers

- R. Install backdraft dampers at inlet of exhaust fans or exhaust ducts as close as possible to exhaust fan unless otherwise indicated.
- S. Install pressure relief damper immediately upstream of main fire damper.

Volume Damper

- T. Install volume dampers at points on supply, return, and exhaust systems where branches extend from larger ducts. Where dampers are installed in ducts having duct liner, install dampers with hat channels of same depth as liner, and terminate liner with nosing at hat channel.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

1. Install steel volume dampers in steel ducts.
 2. Install aluminum volume dampers in aluminum ducts.
- U. Set dampers to fully open position before testing, adjusting, and balancing. Exception: Pressure relief damper.
- V. A balance damper with locking quadrant will be provided downstream of take-off from trunk duct.

Fans And Test Holes

- W. For fans developing static pressures of 5-inch wg and more, cover flexible connectors with loaded vinyl sheet held in place with metal straps.
- X. Install thrust limits at centerline of thrust, symmetrical on both sides of equipment. Attach thrust limits at centerline of thrust and adjust to a maximum of 1/4-inch movement during start and stop of fans.
- Y. Install duct test holes where required for testing and balancing purposes.
- Z. Install test holes at fan inlets and outlets and elsewhere as indicated.

3.2 FIRE, SMOKE AND FIRE-SMOKE DAMPERS

- A. Install fire and smoke dampers according to UL listing.
1. Install fusible links in fire dampers.
- B. For round ductwork 24-inch and smaller a true round fire damper with the same rating may be used.

Access Doors

- C. Install duct access doors on sides of ducts to allow for inspecting, adjusting, and maintaining accessories and equipment at the following locations:
1. On upstream side of duct coils.
 2. Upstream from duct filters.
 3. At outdoor-air intakes and mixed-air plenums.
 4. At drain pans and seals.
 5. Downstream from manual volume dampers, control dampers, backdraft dampers, and equipment.
 6. Adjacent to and close enough to fire or smoke dampers, to reset or reinstall fusible links. Access doors for access to fire or smoke dampers having fusible links shall be standard access doors and shall be outward operation for access doors installed upstream from dampers and inward operation for access doors installed downstream from dampers.
 7. At each change in direction and at maximum 50-foot spacing.
 8. Upstream from turning vanes.
 9. Upstream or downstream from duct silencers.
 10. Control devices requiring inspection.
 11. Elsewhere as indicated.
- D. Install access doors with swing against duct static pressure.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

E. Access Door Sizes:

1. One-Hand or Inspection Access: 8 by 5 inches.
2. Two-Hand Access: 12 by 6 inches.
3. Head and Hand Access: 18 by 10 inches.
4. Head and Shoulders Access: 21 by 14 inches.
5. Body Access: 25 by 14 inches.
6. Body plus Ladder Access: 25 by 17 inches.

F. Label access doors according to Section 230553 "Identification for HVAC Piping and Equipment" to indicate the purpose of access door.

3.3 FIELD QUALITY CONTROL

A. Tests and Inspections:

1. Operate dampers to verify full range of movement.
2. Inspect locations of access doors and verify that purpose of access door can be performed.
3. Operate fire, smoke, and combination fire and smoke dampers to verify full range of movement and verify that proper heat-response device is installed.
4. Inspect turning vanes for proper and secure installation.
5. Operate remote damper operators to verify full range of movement of operator and damper.

3.4 ADJUSTING

- A. Adjust duct accessories for proper settings.
- B. Adjust fire and smoke dampers for proper action.
- C. Final positioning of manual-volume dampers is specified in Division 23 Section "Testing, Adjusting, and Balancing for HVAC."

END OF SECTION 233300

SECTION 233600

AIR TERMINAL UNITS

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Shutoff, single-duct air terminal units.

1.3 ACTION SUBMITTALS

- A. Product Data: For each type of the following products, including rated capacities, furnished specialties, sound-power ratings, and accessories.
 - 1. Air terminal units.
 - 2. Liners and adhesives.
 - 3. Sealants and gaskets.
 - 4. Seismic-restraint devices.
- B. Shop Drawings: For air terminal units. Include plans, elevations, sections, details, and attachments to other work.
 - 1. Detail equipment assemblies and indicate dimensions, weights, loads, required clearances, method of field assembly, components, and location and size of each field connection.
 - 2. Wiring Diagrams:
 - a. For power, signal, and control wiring.
 - b. Differentiate between manufacturer-installed and field-installed wiring.
 - 3. Hangers and supports, including methods for duct and building attachment and vibration isolation.
- C. Delegated-Design Submittal:
 - 1. Materials, fabrication, assembly, and spacing of hangers and supports.
 - 2. Design Calculations: Calculations, including analysis data signed and sealed by the qualified professional engineer responsible for their preparation for selecting hangers and supports.

1.4 INFORMATIONAL SUBMITTALS

- A. Coordination Drawings: Reflected ceiling plans, drawn to scale, on which the following items are shown and coordinated with each other, using input from Installers of the items involved:
 - 1. Ceiling suspension assembly members.
 - 2. Size and location of initial access modules for acoustic tile.
 - 3. Ceiling-mounted items including lighting fixtures, diffusers, grilles, speakers, sprinklers, access panels, and special moldings.
- B. Field quality-control reports.

1.5 PERFORMANCE REQUIREMENTS

- A. Seismic Performance: Air terminal units shall withstand the effects of earthquake motions determined according to SEI/ASCE 7.
 - 1. The term "withstand" means "the unit will remain in place without separation of any parts from the device when subjected to the seismic forces specified and the unit will be fully operational after the seismic event."

1.6 CLOSEOUT SUBMITTALS

- A. Operation and Maintenance Data: For air terminal units to include in emergency, operation, and maintenance manuals. In addition to items specified in Section 01 7823 "Operation and Maintenance Data," include the following:
 - 1. Instructions for resetting minimum and maximum air volumes.
 - 2. Instructions for adjusting software set points.

1.7 MAINTENANCE MATERIAL SUBMITTALS

- A. Furnish extra materials that match products installed and that are packaged with protective covering for storage and identified with labels describing contents.
 - 1. Fan-Powered-Unit Filters: Furnish one spare filter for each filter installed.

1.8 QUALITY ASSURANCE

- A. ASHRAE Compliance: Applicable requirements in ASHRAE 62.1, Section 5 - "Systems and Equipment" and Section 7 - "Construction and System Start-Up."
- B. Product Options: Drawings and schedules indicate requirements of air terminals and are based on specific systems indicated. Other manufacturers' systems with equal performance characteristics may be considered. Refer to Division 1 Section "Substitutions."
- C. Listing and Labeling: Provide electrically operated air terminals specified in this Section that are listed and labeled.
 - 1. The Terms "Listed" and "Labeled": As defined in NFPA 70, Article 100.
- D. NFPA Compliance: Install air terminals according to NFPA 90A, "Standard for the Installation of Air Conditioning and Ventilating Systems."

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- E. Comply with NFPA 70 for electrical components and installation.

PART 2 - PRODUCTS

2.1 PERFORMANCE REQUIREMENTS

- A. Structural Performance: Hangers and supports shall withstand the effects of gravity loads and stresses within limits and under conditions described in SMACNA's "HVAC Duct Construction Standards - Metal and Flexible" .

2.2 SYSTEM DESCRIPTION

- A. Electrical Components, Devices, and Accessories: Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.

2.3 SHUTOFF, SINGLE-DUCT AIR TERMINAL UNITS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
1. Anemostat Products; a Mestek Company.
 2. Carnes.
 3. Environmental Technologies, Inc.
 4. Krueger.
 5. METALAIRE, Inc.
 6. Nailor Industries Inc.
 7. Price Industries.
 8. Titus.
 9. Trox USA Inc.; a subsidiary of the TROX GROUP.
 10. Tuttle & Bailey.
 11. Warren Technology.
- B. Configuration: Volume-damper assembly inside unit casing with control components inside a protective metal shroud.
- C. Casing: 0.034-inch steel, single wall.
1. Casing Lining: Adhesive attached, coated, fibrous-glass duct liner complying with ASTM C 1071, and having a maximum flame-spread index of 25 and a maximum smoke-developed index of 50, for both insulation and adhesive, when tested according to ASTM E 84.
 - a. Lining thickness:
 - 1) 1/2-inch-
 - b. Cover liner with nonporous foil.
 2. Air Inlet: Round stub connection or S-slip and drive connections for duct attachment.
 3. Air Outlet: S-slip and drive connections.
 4. Air Outlet: S-slip and drive connections size matching inlet size.
 5. Access: Removable panels for access to parts requiring service, adjustment, or

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

- maintenance; with airtight gasket.
- 6. Access Door: Access door upstream of the reheat coil.
- D. Volume Damper: Galvanized steel with peripheral gasket and self-lubricating bearings.
 - 1. Maximum Damper Leakage:
 - a. ARI 880 rated, 3 percent of nominal airflow at 3-inch wg inlet static pressure.
 - 2. Damper Position:
 - a. Normally open.
- E. Hydronic Coils: Copper tube, with mechanically bonded aluminum fins spaced no closer than 0.1 inch, and rated for a minimum working pressure of 200 psig and a maximum entering-water temperature of 220 deg F. Include manual air vent and drain valve.
- L. Direct Digital Controls: Bidirectional damper operators and microprocessor-based controller and room sensor. Control devices shall be compatible with temperature controls specified in Section 230900 "Instrumentation and Control for HVAC" and shall have the following features:
 - 1. Damper Actuator: 24 V, powered closed, spring return open.
 - 2. Terminal Unit Controller: Pressure-independent, variable-air-volume controller with electronic airflow transducer with multipoint velocity sensor at air inlet, factory calibrated to minimum and maximum air volumes, and having the following features:
 - a. Occupied and unoccupied operating mode.
 - b. Remote reset of airflow or temperature set points.
 - c. Adjusting and monitoring with portable terminal.
 - d. Communication with temperature-control system specified in Section 230900 "Instrumentation and Control for HVAC."
 - 3. Room Sensor: Wall mounted with temperature set-point adjustment and access for connection of portable operator terminal.
- F. Control Sequence:
 - 1. Suitable for operation with duct pressures between 0.25- and 3.0-inch wg inlet static pressure.
 - 2. System-powered, wall-mounted thermostat.

2.4 HANGERS AND SUPPORTS

- A. Hanger Rods for Noncorrosive Environments: Cadmium-plated steel rods and nuts.
- B. Hanger Rods for Corrosive Environments: Electrogalvanized, all-thread rods or galvanized rods with threads painted with zinc-chromate primer after installation.
- C. Steel Cables: Galvanized steel complying with ASTM A 603.
- D. Steel Cable End Connections: Cadmium-plated steel assemblies with brackets, swivel, and bolts designed for duct hanger service; with an automatic-locking and clamping device.
- E. Air Terminal Unit Attachments: Sheet metal screws, blind rivets, or self-tapping metal screws; compatible with duct materials.
- F. Trapeze and Riser Supports: Steel shapes and plates for units with steel casings; aluminum

for units with aluminum casings.

2.5 SOURCE QUALITY CONTROL

- A. Factory Tests: Test assembled air terminal units according to ARI 880.
 - 1. Label each air terminal unit with plan number, nominal airflow, maximum and minimum factory-set airflows, and ARI certification seal.

PART 3 - EXECUTION

3.1 INSTALLATION

- A. Install air terminal units according to NFPA 90A, "Standard for the Installation of Air Conditioning and Ventilating Systems."
- B. Install air terminal units level and plumb. Maintain sufficient clearance for normal service and maintenance.
- C. Install wall-mounted thermostats.
- D. Install discharge air temperature sensors at the outlet of each Air Terminal Unit.
- E. Connect ductwork to air terminals according to Division 23 ductwork Sections.
- F. Comply with SEI/ASCE 7 and with requirements for seismic-restraint devices in Section 230548 "Vibration and Seismic Controls for HVAC."

3.2 HANGER AND SUPPORT INSTALLATION

- A. Comply with SMACNA's "HVAC Duct Construction Standards - Metal and Flexible," Chapter 5, "Hangers and Supports."
- B. Building Attachments: Concrete inserts, powder-actuated fasteners, or structural-steel fasteners appropriate for construction materials to which hangers are being attached.
 - 1. Where practical, install concrete inserts before placing concrete.
 - 2. Install powder-actuated concrete fasteners after concrete is placed and completely cured.
 - 3. Use powder-actuated concrete fasteners for standard-weight aggregate concretes and for slabs more than 4 inches thick.
 - 4. Do not use powder-actuated concrete fasteners for lightweight-aggregate concretes and for slabs less than 4 inches thick.
 - 5. Do not use powder-actuated concrete fasteners for seismic restraints.
- C. Hangers Exposed to View: Threaded rod and angle or channel supports.
- D. Install upper attachments to structures. Select and size upper attachments with pull-out, tension, and shear capacities appropriate for supported loads and building materials where used.

3.3 CONNECTIONS

- A. Install piping adjacent to air terminal unit to allow service and maintenance.
- B. Hot-Water Piping: In addition to requirements in Section 232113 "Hydronic Piping" and Section 232116 Hydronic Piping Specialties," connect heating coils to supply with shutoff valve, strainer, control valve, and union or flange; and to return with balancing valve and union or flange.
- C. Connect ducts to air terminal units according to Section 233113 "Metal Ducts.
- D. Electrically ground all equipment:
 - 1. Tighten electrical connectors and terminals according to manufacturer's published torque-tightening values. Where manufacturer's torque values are not indicated, use those specified in UL 486A and UL 486B.

3.4 IDENTIFICATION

- A. Label each air terminal unit with plan number, nominal airflow, and maximum and minimum factory-set airflows. Comply with requirements in Section 230553 "Identification for HVAC Piping and Equipment" for equipment labels and warning signs and labels.

3.5 FIELD QUALITY CONTROL

- A. Testing Agency: Owner will engage a qualified testing agency to perform tests and inspections.
- B. Manufacturer's Field Service: Engage a factory-authorized service representative to inspect, test, and adjust components, assemblies, and equipment installations, including connections.
- C. Perform tests and inspections.
 - 1. Manufacturer's Field Service: Engage a factory-authorized service representative to inspect components, assemblies, and equipment installations, including connections, and to assist in testing.
- D. Tests and Inspections:
 - 1. After installing air terminal units and after electrical circuitry has been energized, test for compliance with requirements.
 - 2. Leak Test: After installation, fill water coils and test for leaks. Repair leaks and retest until no leaks exist.
 - 3. Operational Test: After electrical circuitry has been energized, start units to confirm proper motor rotation and unit operation.
 - 4. Test and adjust controls and safeties. Replace damaged and malfunctioning controls and equipment.
- E. Air terminal unit will be considered defective if it does not pass tests and inspections.
- F. Prepare test and inspection reports.

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

G. Cleaning:

1. After completing system installation, including outlet fittings and devices, inspect exposed finish. Remove burrs, dirt, and construction debris, and repair damaged finishes.

3.6 STARTUP SERVICE

A. Engage a factory-authorized service representative to perform startup service.

1. Complete installation and startup checks according to:
 - a. Manufacturer's written instructions.
 - b. Construction documents.
2. Verify that inlet duct connections are as recommended by air terminal unit manufacturer to achieve proper performance.
3. Verify that controls and control enclosure are accessible.
4. Verify that control connections are complete.
5. Verify that nameplate and identification tag are visible.
6. Verify that controls respond to inputs as specified.

3.7 DEMONSTRATION

A. Engage a factory-authorized service representative to train Owner's maintenance personnel to adjust, operate, and maintain air terminal units:

1. Train Owner's maintenance personnel on procedures and schedules related to startup and shutdown, troubleshooting, servicing, and preventive maintenance.
2. Review data in the maintenance manuals. Refer to Division 1 Section "Contract Closeout."
3. Review data in the maintenance manuals. Refer to Division 1 Section "Operation and Maintenance Data."
4. Schedule training with Owner, through Architect, with at least 7 days' advance notice.

END OF SECTION 233600

SECTION 233713

DIFFUSERS, REGISTERS, AND GRILLES

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. This section includes ceiling- and wall-mounted diffusers, registers, and grilles.
- B. Related Sections:
 - 1. Section 233714 "Fixed Louvers" for fixed and louvers and wall vents, whether or not they are connected to ducts.
 - 2. Section 233300 "Air Duct Accessories" for fire and smoke dampers and volume-control dampers not integral to diffusers, registers, and grilles.
 - 3. Section 230594 "General Testing, Adjusting and Balancing" for balancing diffusers, registers, and grilles.

1.3 ACTION SUBMITTALS

- A. Product Data: For each type of product indicated, include the following:
 - 1. Data Sheet: Indicate materials of construction, finish, and mounting details; and performance data including throw and drop, static-pressure drop, and noise ratings.
 - 2. Diffuser, Register, and Grille Schedule: Indicate drawing designation, room location, quantity, model number, size, and accessories furnished.

1.4 INFORMATIONAL SUBMITTALS

- A. Coordination Drawings: Reflected ceiling plans, drawn to scale, on which the following items are shown and coordinated with each other, using input from Installers of the items involved:
 - 1. Ceiling suspension assembly members.
 - 2. Method of attaching hangers to building structure.
 - 3. Size and location of initial access modules for acoustical tile.
 - 4. Ceiling-mounted items including lighting fixtures, diffusers, grilles, speakers, sprinklers, access panels, and special moldings.
 - 5. Duct access panels.
- B. Source quality-control reports.

1.5 QUALITY ASSURANCE

- A. Product Options: Drawings and schedules indicate specific requirements of diffusers, registers,

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

and grilles and are based on the specific requirements of the systems indicated.

- B. NFPA Compliance: Install diffusers, registers, and grilles according to NFPA 90A, "Standard for the Installation of Air-Conditioning and Ventilating Systems."

PART 2 - PRODUCTS

2.1 MANUFACTURERS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. Air Factors
 - 2. Carnes.
 - 3. Kruegar.
 - 4. METALAIR, Inc.
 - 5. Nailor Industries Inc.
 - 6. Price Industries.
 - 7. Titus.
 - 8. Tuttle & Bailey.

2.2 REGISTERS, GRILLES, & DIFFUSERS

- A. General: The frames for all registers, grilles, and diffusers shall match type of ceiling where they are to be installed. Special frames shall be provided for narrow T-bar ceilings. Refer to reflected ceiling plan and other specification divisions for ceiling type. See drawings AND schedules for additional information.

2.3 SOURCE QUALITY CONTROL

- A. Verification of Performance: Rate diffusers, registers, and grilles according to ASHRAE 70, "Method of Testing for Rating the Performance of Air Outlets and Inlets."

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine areas where diffusers, registers, and grilles are to be installed for compliance with requirements for installation tolerances and other conditions affecting performance of equipment.
- B. Proceed with installation only after unsatisfactory conditions have been corrected.

3.2 INSTALLATION

- A. Install diffusers, registers, and grilles level and plumb, according to manufacturer's written instructions, coordination drawings, original design, and referenced standards.
- B. Ceiling-Mounted Outlets and Inlets: Drawings indicate general arrangement of ducts, fittings, and accessories. Air outlet and inlet locations have been indicated to achieve design

Intermountain Health
Layton Hospital – Sleep Lab Remodel
Copyright 2026, Vero Architecture

requirements for air volume, noise criteria, airflow pattern, throw, and pressure drop. Make final locations where indicated, as much as practical. For units installed in lay-in ceiling panels, locate units in the center of panel. Where architectural features or other items conflict with installation, notify Architect for a determination of final location.

- C. Install diffusers, registers, and grilles with airtight connections to ducts and to allow service and maintenance of dampers, air extractors, and fire dampers.

3.3 ADJUSTING

- A. After installation, adjust diffusers, registers, and grilles to air patterns indicated, or as directed, before starting air balancing.

3.4 CLEANING

- A. After installation of diffusers, registers, and grilles, inspect exposed finish. Clean exposed surfaces to remove burrs, dirt, and smudges. Replace diffusers, registers, and grilles that have damaged finishes.

END OF SECTION 233713

BLANK PAGE

Division	Section Title	Pages

SPECIFICATIONS GROUP

Facility Services Subgroup

DIVISION 26 - ELECTRICAL

260519	LOW-VOLTAGE ELECTRICAL POWER CONDUCTORS AND CABLES	7
260523	CONTROL-VOLTAGE ELECTRICAL POWER CABLES	9
260526	GROUNDING AND BONDING FOR ELECTRICAL SYSTEMS	6
260529	HANGERS AND SUPPORTS FOR ELECTRICAL SYSTEMS	6
260533	RACEWAYS AND BOXES FOR ELECTRICAL SYSTEMS	9
260543	UNDERGROUND DUCTS AND RACEWAYS FOR ELECTRICAL SYSTEMS	6
260544	SLEEVES AND SLEEVE SEALS FOR ELECTRICAL SYSTEMS	4
260548	SEISMIC CONTROLS FOR ELECTRICAL SYSTEMS	5
260553	IDENTIFICATION FOR ELECTRICAL SYSTEMS	7
260923	LIGHTING CONTROL DEVICES	9
260936	STANDALONE MULTIPRESET MODULAR DIMMING CONTROLS	5
260943	RELAY-BASED LIGHTING CONTROLS	10
262726	WIRING DEVICES	9
262813	FUSES	3
262816	ENCLOSED SWITCHES AND CIRCUIT BREAKERS	7
262913	ENCLOSED CONTROLLERS	7
265119	LED INTERIOR LIGHTING	10

DIVISION 27 - COMMUNICATIONS

270000	COMMON GENERAL CONDITIONS FOR COMMUNICATIONS SECTIONS	8
270100	OPERATION AND MAINTENANCE OF COMMUNICATION SYSTEMS	2
270113	WARRANTY PRODUCT AND SYSTEM	2
270119	FIELD TESTING AND REPORTING	4
270133	SHOP DRAWINGS PRODUCT DATA SAMPLES DESIGN RECORDS AND EXISTING CONDITIONS	3
270143	QUALIFICATIONS AND REQUIRED TRAINING FOR CONTRACTOR AND INSTALLER	1
270171	RESPONSIBILITY AND WORKMANSHIP OF CONTRACTOR	2
270500	COMMON WORK RESULTS FOR COMMUNICATIONS	1
270526	GROUNDING AND BONDING FOR COMMUNICATIONS SYSTEMS	2
270528	PATHWAYS FOR COMMUNICATIONS SYSTEMS	4
270529	HANGERS AND SUPPORTS FOR COMMUNICATIONS SYSTEMS	1
270533	CONDUITS AND BACK BOXES FOR COMMUNICATIONS SYSTEMS	2
270536	CABLE TRAY FOR COMMUNICATIONS SYSTEMS	5

270553	IDENTIFICATION FOR LOW-VOLTAGE CABLES AND LABELING	4
271100	EQUIPMENT ROOM FITTING	11
271116	CABINETS, RACKS, FRAMES, AND ENCLOSURES	2
271119	TERMINATION BLOCKS AND PATCH PANELS	2
271300	BACKBONE CABLING	2
271500	HORIZONTAL CABLING	4
271513	COPPER CABLE	1
271543	FACEPLATES AND CONNECTORS	2
271619	PATCH CABLES	1
275113	OVERHEAD PAGING	2
275117	NETWORKED PUBLIC ADDRESS AND PAGING SYSTEM	18
275119	SOUND MASKING SYSTEMS	11
275223	NURSE CALL CODE BLUE SYSTEMS	3
276001	APPENDIX 01 DEVIATION REQUEST PROCESS	2
276002	APPENDIX 02 DOCUMENT REFRESH PROCESS	1
276003	APPENDIX 03 DATA CENTER, TEC, TDR PART NUMBERS	10
276004	APPENDIX 04 REFERENCE STANDARDS	2
276005	APPENDIX 05 DEFINITIONS AND ABBREVIATIONS	1
276006	APPENDIX 06 MATERIAL SUPPLIERS	1
276007	APPENDIX 07 SIEMON - CERTIFIED INSTALLATION FIRMS	2
276008	APPENDIX 08 LEAD WALL PENETRATIONS	3
 DIVISION 28 - ELECTRONIC SAFETY AND SECURITY		
281300	ACCESS CONTROL	10
282300	VIDEO SURVEILLANCE	5
282400	DIGITAL, ADDRESSABLE FIRE ALARM SYSTEM	14
284400	OWNER CONTACTS	1

END OF TABLE OF CONTENTS

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 26 05 19
LOW-VOLTAGE ELECTRICAL POWER CONDUCTORS AND CABLES**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Building wires and cables rated 600 V and less.
 - 2. Connectors, splices, and terminations rated 600 V and less.
- B. Related Requirements:
 - 1. Section 26 05 33 "Raceways and Boxes for Electrical Systems"
 - 2. Section 26 09 23 "Lighting Control Devices"
 - 3. Section 26 09 36 "Standalone Modular Preset Dimming Controls"
 - 4. Section 26 09 43 "Relay-Based Lighting Controls"
 - 5. Section 27 41 33 "Master Antenna Television System"
 - 6. Section 27 51 17 "Networked Public Address and Paging System"
 - 7. Section 27 51 19 "Sound Masking Systems"
 - 8. Section 28 13 00 "Access Control"
 - 9. Section 28 31 11 "Digital, Addressable Fire-Alarm System"
 - 10. Section 27 00 00 "Intermountain Healthcare Networked Structured Cable & Standards" for cabling used for voice and data circuits.

1.3 DEFINITIONS

- A. Outlet Box: Electrical box used to support utilization equipment such as a receptacle or light fixture.
- B. Pull Box: Electrical box through which branch circuit or feeder conductors are run but are not spliced.
- C. Junction Box: Electrical box used for splicing branch circuit or feeder conductors.
- D. Multiwire Branch Circuit: A branch circuit as defined by the National Electrical Code that shares a grounded conductor between two or more phase conductors.

1.4 ACTION SUBMITTALS

- A. Product Data: For each type of product.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1.5 INFORMATIONAL SUBMITTALS

- A. Field quality-control reports.

PART 2 - PRODUCTS

2.1 SINGLE CONDUCTORS

- A. Manufacturers: Subject to compliance with requirements, available manufacturers offering products that may be incorporated into the Work include, but are not limited to the following:
 - 1. Alpha Wire Company.
 - 2. Belden Inc.
 - 3. Cerro Wire LLC.
 - 4. Encore Wire Corporation.
 - 5. General Cable; General Cable Corporation.
 - 6. Southwire Company.
 - 7. Thomas & Betts Corporation; A Member of the ABB Group.
- B. Aluminum and Copper Conductors: Comply with NEMA WC 70/ICEA S-95-658.
- C. Conductor Insulation: Comply with NEMA WC 70/ICEA S-95-658 for Type THHN/THWN-2, Type XHHW-2 and Type SO.

2.2 ISOLATED POWER SYSTEM CONDUCTORS

- A. Manufacturers: Subject to compliance with requirements, available manufacturers offering products that may be incorporated into the Work include, but are not limited to the following:
 - 1. Alpha Wire Company.
 - 2. Belden Inc.
 - 3. Cerro Wire LLC.
 - 4. Encore Wire Corporation.
 - 5. General Cable; General Cable Corporation.
 - 6. Southwire Company.
 - 7. Thomas & Betts Corporation; A Member of the ABB Group.
- B. Copper Conductors: Comply with NEMA WC 70/ICEA S-95-658.
- C. Conductor Insulation: Type XHHW wire with crosslinked polyethylene insulation and a dielectric constant of 3.5 or less shall be used for all branch circuit wiring.

2.3 MULTI-CONDUCTOR CABLES

- A. Manufacturers: Subject to compliance with requirements, available manufacturers offering products that may be incorporated into the Work include, but are not limited to the following:
 - 1. Southwire Company.
 - 2. AFC Cable Systems.
- B. Copper Conductors: Comply with NEMA WC 70/ICEA S-95-658.
- C. Conductor Insulation: Comply with NEMA WC 70/ICEA S-95-658 for Type THHN/THWN-2, Type XHHW-2 and Type SO.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- D. Multi-conductor Cable, Type AC-HCF:
1. Armor: Galvanized Interlocking Steel Strip (green striped or solid green).
 2. Conductors: Solid Copper
 3. Conductor Insulation: THHN-2 with individual moisture resistant, fire retardant paper wrap on each individual conductor.
 4. Grounding: 16 AWG integral bond wire and insulated green copper grounding conductor.
 5. Neutral (Grounded) Conductor: White for 120Y/208 volt systems and Grey 480Y/277 volt systems.
 6. Maximum Voltage Rating: 600 volts.
 7. References and Ratings:
 - a. UL 4, 83, 1479, 1581, 2556, File Reference E7330
 - b. NEC 250.118(8), 300.22(C), 392, 320, 517.13, 518, 645
 - c. Federal Specification A-A-59544 (formerly J-C-30B)
 - d. UL Classified 1, 2, and 3-hour through (Fire) penetration product, R-14141
 - e. Environmental Air-Handling Space Installation per NEC 300.22(C)
- E. Other Multi-conductor Cable: Comply with NEMA WC 70/ICEA S-95-658 for Type SO with ground wire.

2.4 CONNECTORS AND SPLICES

- A. Manufacturers: Subject to compliance with requirements, available manufacturers offering products that may be incorporated into the Work include, but are not limited to the following:
1. 3M.
 2. AFC Cable Systems; a part of Atkore International.
 3. Hubbell Power Systems, Inc.
 4. Ideal Industries, Inc.
 5. ILSCO.
 6. O-Z/Gedney; a brand of Emerson Industrial Automation.
- B. Description: Factory-fabricated connectors and splices of size, ampacity rating, material, type, and class for application and service indicated.

2.5 CORD REELS

- A. Manufacturers: Subject to compliance with requirements, available manufacturers offering products that may be incorporated into the Work include, but are not limited to the following:
1. APC Group; Kitchen Leash
- B. Case (housing):
1. Dimensions: 9" x 12" x 3'
 2. Material: Molded Polypropylene 3.175 mm thickness
 3. 94v-2 flammability rating
- C. Power Cord
1. Conductors: 14/3 AWG copper type SJOW
 2. Length: 10 feet
 3. Rating: 200 degrees F
- D. Receptacle/Plug
1. Rated: 125vac/20 amp
 2. Receptacle: NEMA 5-15P
 3. Plug: Dual Duplex rated 20 amp

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- E. Mounting Bracket: Designed for installation on the ceiling type where the cord reel will be installed.

2.6 SYSTEM DESCRIPTION

- A. Electrical Components, Devices, and Accessories: Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.
- B. Comply with NFPA 70.

2.7 FIRE-ALARM WIRE AND CABLE

- A. General Wire and Cable Requirements: NRTL listed and labeled as complying with NFPA 70, Article 760.
- B. Signaling Line Circuits: Twisted, shielded pair, size as recommended by system manufacturer.
 - 1. Circuit Integrity Cable: Twisted shielded pair, NFPA 70, Article 760, Classification CI, for power-limited fire-alarm signal service Type FPL. NRTL listed and labeled as complying with UL 1424 and UL 2196 for a two-hour rating.
- C. Non-Power-Limited Circuits: Solid-copper conductors with 600-V rated, 75 deg C, color-coded insulation, and complying with requirements in UL 2196 for a two-hour rating.
 - 1. Low-Voltage Circuits: No. 14 AWG, minimum, in pathway.
 - 2. Line-Voltage Circuits: No. 12 AWG, minimum, in pathway.

PART 3 - EXECUTION

3.1 CONDUCTOR MATERIAL APPLICATIONS

- A. Feeders: Copper for feeders smaller than No. 4 AWG; for feeders No. 4 AWG and larger provide copper feeders unless aluminum is specifically indicated on the one-line diagrams. Solid for No. 10 AWG and smaller; stranded for No. 8 AWG and larger. Aluminum conductors may not be installed for circuiting to imaging and mechanical equipment.
- B. Branch Circuits: Copper. Solid or stranded for No. 10 AWG and smaller; stranded for No. 8 AWG and larger.

3.2 CONDUCTOR INSULATION AND MULTICONDUCTOR CABLE APPLICATIONS AND WIRING METHODS

- A. Refer to Section 26 05 33 "Raceways and Boxes for Electrical Systems" for raceway types and applications.
- B. Exposed Feeders: Type THHN/THWN-2, single conductors in raceway.
- C. Feeders Concealed in Ceilings, Walls, Partitions, and Crawlspace: Type THHN/THWN-2, single conductors in raceway.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- D. Feeders below Slabs-On-Grade, and Underground: Type THWN-2, single conductors in raceway.
- E. Multiwire Circuits: may not be used for branch circuit wiring. All 120 volt and 277 volt circuits shall be provided with a dedicated grounded conductor (neutral) for each phase conductor. Up to three of these circuits may be installed in a single conduit but not more than one conductor of each phase may be installed in a single conduit.
- F. Branch Circuits Concealed in Ceilings, Walls, and Partitions: Type THHN/THWN-2, single conductors in raceway.
 - 1. Armored cable, Type AC-HCF may be installed for normal and equipment system single branch circuits concealed in walls, and partitions in lengths between outlet boxes 30' or less and not as homeruns or wiring between pullboxes or junction boxes.
 - 2. Armored cable, Type AC-HCF may be installed between the first outlet box concealed in a wall or partition and a junction box above an accessible ceiling immediately above the location where the cable exits the wall or partition framing.
- G. Branch Circuits below Slabs-on-Grade and Underground: Type THHN/THWN-2, single conductors in raceway. Installation of raceways within any concrete slab or composite concrete and steel deck is prohibited. NEC 517.13 (A) requires that all branch circuits serving patient care areas are provided with an effective ground-fault current path by installation in a metal raceway system, or a cable having a metallic armor or sheath assembly that qualifies as an equipment grounding conductor. Metallic raceways are not a specified raceway for branch circuits installed below slabs-on-grade. To assure compliance with the NEC requirement, both initially and when remodels occur in the future, the installation of branch circuit wiring under slabs-on-grade is limited to circuits supplying only the following rooms and area types without extension beyond the room or area to a room or area not listed here:
 - 1. Mechanical Spaces.
 - 2. Electrical Rooms.
 - 3. Food Service.
- H. Branch circuit wiring may also be installed under slabs-on-grade to supply power for the following:
 - 1. Systems Furniture.
 - 2. Floor Boxes.
 - 3. Direct wired equipment that is not located against a wall.
- I. Cord Drops and Portable Appliance Connections: Type SO, hard service cord with stainless-steel, wire-mesh, strain-relief device at terminations to suit application.
- J. Isolated Power System Conductors: #10 AWG, Type XHHW-2 stranded with cross-linked PE insulation and a dielectric constant of 3.5 or less, installed in EMT conduit. To limit leakage-current the branch circuit conductors must be reduced to the shortest overall length possible. Install conduits for Isolated Power System branch circuits in the most direct path between the panel and the outlet box, which is not necessarily parallel and perpendicular to the structure and framing, to reduce conductor length. Install only one circuit in per conduit. Do not use pulling compounds when installing the branch circuit conductors of Isolated Power Systems.

3.3 INSTALLATION OF CONDUCTORS AND CABLES

- A. Conceal cables in finished walls, ceilings, and floors unless otherwise indicated.
- B. Complete raceway installation between conductor and cable termination points according to Section 26 05 33 "Raceways and Boxes for Electrical Systems" prior to pulling conductors and cables.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- C. Use manufacturer-approved pulling compound or lubricant where necessary; compound used must not deteriorate conductor or insulation. Do not exceed manufacturer's recommended maximum pulling tensions and sidewall pressure values. Do not use pulling compounds or lubricant for installation of branch circuit conductors for Isolated Power Systems.
- D. Use pulling means, including fish tape, cable, rope, and basket-weave wire/cable grips, that will not damage cables or raceway.
- E. Install exposed cables parallel and perpendicular to surfaces of exposed structural members, and follow surface contours where possible.
- F. Support cables according to Section 26 05 29 "Hangers and Supports for Electrical Systems."

3.4 CORD REELS

- A. Coordinate location of cord reels to align with kitchen equipment supplied by the cord reel.
- B. Fasten brackets to structure using minimum 3/8" threaded rod and to rigidly support the cord reel. Minimum of 2 rods per bracket with addition if required to provide a rigid support.
- C. Adjust cord stopper as coordinated with owner.

3.5 CONNECTIONS

- A. Tighten electrical connectors and terminals according to manufacturer's published torque-tightening values. If manufacturer's torque values are not indicated, use those specified in UL 486A-486B.
- B. Make splices, terminations, and taps that are compatible with conductor material and that possess equivalent or better mechanical strength and insulation ratings than unspliced conductors.
 - 1. Use oxide inhibitor in each splice, termination, and tap for aluminum conductors.
- C. Wiring at Outlets: Install conductor at each outlet, with at least 12 inches (300 mm) of slack.
- D. Comply with requirements in Section 283111 "Digital, Addressable Fire-Alarm System" for connecting, terminating, and identifying wires and cables.

3.6 IDENTIFICATION

- A. Identify and color-code conductors and cables according to Section 26 05 53 "Identification for Electrical Systems."
- B. Identify each spare conductor at each end with panel and circuit number and identify as spare conductor.

3.7 SLEEVE AND SLEEVE-SEAL INSTALLATION FOR ELECTRICAL PENETRATIONS

- A. Install sleeves and sleeve seals at penetrations of exterior floor and wall assemblies. Comply with requirements in Section 26 05 44 "Sleeves and Sleeve Seals for Electrical Raceways and Cabling."

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3.8 FIRESTOPPING

- A. Apply firestopping to electrical penetrations of fire-rated floor and wall assemblies to restore original fire-resistance rating of assembly according to Section 07 84 13 "Penetration Firestopping."

3.9 FIELD QUALITY CONTROL

- A. Perform the following tests and inspections:
 - 1. After installing conductors and cables and before electrical circuitry has been energized, test feeder conductors and conductors feeding the following critical equipment and services for compliance with requirements.
 - a. Imaging Equipment
 - 2. Infrared Scanning: After Substantial Completion, but not more than 60 days after Final Acceptance, perform an infrared scan of each splice in conductors No. 3 AWG and larger. Remove box and equipment covers so splices are accessible to portable scanner. Correct deficiencies determined during the scan.
 - a. Follow-up Infrared Scanning: Perform an additional follow-up infrared scan of each splice 11 months after date of Substantial Completion.
 - b. Instrument: Use an infrared scanning device designed to measure temperature or to detect significant deviations from normal values. Provide calibration record for device.
 - c. Record of Infrared Scanning: Prepare a certified report that identifies splices checked and that describes scanning results. Include notation of deficiencies detected, remedial action taken, and observations after remedial action.
- B. Test and Inspection Reports: Prepare a written report to record the following:
 - 1. Procedures used.
 - 2. Results that comply with requirements.
 - 3. Results that do not comply with requirements and corrective action taken to achieve compliance with requirements.
- C. Cables will be considered defective if they do not pass tests and inspections.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

SECTION 260523

CONTROL-VOLTAGE ELECTRICAL POWER CABLES

PART 1 - GENERAL

1.1 SUMMARY

A. Application

1. This specification section covers provision and installation of control and low-voltage electrical power cables including cables associated with building automatic systems (BAS), low voltage lighting controls, mechanical systems control cables, and all similar control and low-voltage cabling utilized for control of devices and equipment not associated with data and telecommunications systems which are covered by Division 27 and fire alarm, security, and specialty systems which are covered by Division 28. However, comply with the requirements of Division 27 where related to non-data and telecommunications cabling.

B. Section Includes:

1. Category 5e balanced twisted pair cable.
2. Category 6 balanced twisted pair cable.
3. Category 6a balanced twisted pair cable.
4. RS-485 cable.
5. Control cable.
6. Control-circuit conductors.

1.2 ACTION SUBMITTALS

- A. Product Data: For each type of product.

1.3 INFORMATIONAL SUBMITTALS

- A. Source quality-control reports.
- B. Field quality-control reports.

PART 2 - PRODUCTS

2.1 CABLING

- A. Provide style and type of cabling as specified herein or as otherwise directed by the manufacturer of the equipment bring controlled or controlling devices and/or relevant specification section for the respective equipment.

2.2 PERFORMANCE REQUIREMENTS

- A. Electrical Components, Devices, and Accessories: Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- B. Flame Travel and Smoke Density in Plenums: As determined by testing identical products according to NFPA 262, by a qualified testing agency. Identify products for installation in plenums with appropriate markings of applicable testing agency.
 - 1. Flame Travel Distance: 60 inch (1520 mm) or less.
 - 2. Peak Optical Smoke Density: 0.5 or less.
 - 3. Average Optical Smoke Density: 0.15 or less.
- C. Flame Travel and Smoke Density for Riser Cables in Non-Plenum Building Spaces: As determined by testing identical products according to UL 1666.
- D. Flame Travel and Smoke Density for Cables in Non-Riser Applications and Non-Plenum Building Spaces: As determined by testing identical products according to UL 1685.

2.3 BACKBOARDS

- A. Description: Plywood, fire-retardant treated, 3/4 by 48 by 96 inch (19 by 1220 by 2440 mm). Comply with requirements for plywood backing panels in Section 061000 "Rough Carpentry."
- B. Painting: Paint plywood on all sides and edges with flat white latex paint. Comply with requirements in Section 099123 "Interior Painting."

2.4 CATEGORY 5e BALANCED TWISTED PAIR CABLE

- A. Description: Four-pair, balanced-twisted pair cable, certified to meet transmission characteristics of Category 5e cable at frequencies up to 100 MHz.
- B. Standard: Comply with ICEA S-90-661, NEMA WC 63.1, and TIA-568-C.2 for Category 5e cables.
- C. Conductors: 100 ohm, No. 24 AWG solid copper.
- D. Shielding/Screening: Unshielded twisted pairs (UTP) unless owner specific requirements require screened twisted pairs (F/UTP).
- E. Cable Rating: Plenum.
- F. Jacket: White thermoplastic unless otherwise specified by relevant specification section.

2.5 CATEGORY 6 BALANCED TWISTED PAIR CABLE

- A. Description: Four-pair, balanced-twisted pair cable, certified to meet transmission characteristics of Category 6 cable at frequencies up to 250 MHz.
- B. Standard: Comply with NEMA WC 66/ICEA S-116-732 and TIA-568-C.2 for Category 6 cables.
- C. Conductors: 100 ohm, No. 23 AWG solid copper.
- D. Shielding/Screening: Unshielded twisted pairs (UTP) unless owner specific requirements require screened twisted pairs (F/UTP).
- E. Cable Rating: Plenum.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- F. Jacket: White thermoplastic unless otherwise specified by relevant specification section.

2.6 CATEGORY 6a BALANCED TWISTED PAIR CABLE

- A. Description: Four-pair, balanced-twisted pair cable, certified to meet transmission characteristics of Category 6a cable at frequencies up to 500 MHz.
- B. Standard: Comply with TIA-568-C.2 for Category 6a cables.
- C. Conductors: 100 ohm, No. 23 AWG solid copper.
- D. Shielding/Screening: Unshielded twisted pairs (UTP) unless owner specific requirements require screened twisted pairs (F/UTP).
- E. Cable Rating: Plenum.
- F. Jacket: White thermoplastic unless otherwise specified by relevant specification section.

2.7 BALANCED TWISTED PAIR CABLE HARDWARE

- A. Description: Hardware designed to connect, splice, and terminate balanced twisted pair copper communications cable.
- B. General Requirements for Balanced Twisted Pair Cable Hardware:
 - 1. Comply with the performance requirements of selected cable.
 - 2. Comply with TIA-568-C.2, IDC type, with modules designed for punch-down caps or tools.
 - 3. Cables must be terminated with connecting hardware of same category or higher.
 - 4. Provide balanced twisted pair cable hardware suitable for the application and consistent with recommendations of manufacturer of respective device and/or equipment controlled by control wiring.

2.8 RS-232 CABLE

- A. PVC-Jacketed, TIA 232-F:
 - 1. Three or nine, No. 22 AWG, stranded (7x30) tinned copper conductors, as required by specific control application.
 - 2. Polypropylene insulation.
 - 3. Aluminum foil-polyester tape shield with 100 percent shield coverage.
 - 4. PVC jacket.
 - 5. Conductors are cabled on common axis with No. 24 AWG, stranded (7x32) tinned copper drain wire.
 - 6. NFPA 70 Type: Type CM.
 - 7. Flame Resistance: Comply with UL 1581.
- B. Plenum-Type, TIA 232-F:
 - 1. Three or nine, No. 22 AWG, stranded (7x30) tinned copper conductors, as required by specific control application.
 - 2. PE insulation.
 - 3. Aluminum foil-polyester tape shield with 100 percent shield coverage.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

4. Fluorinated ethylene propylene jacket.
5. Conductors are cabled on common axis with No. 24 AWG, stranded (7x32) tinned copper drain wire.
6. Flame Resistance: Comply with NFPA 262.

2.9 RS-485 CABLE

A. Standard Cable: NFPA 70, Type CMG.

1. Paired, one pair or two pairs, twisted, No. 22 AWG, stranded (7x30) tinned-copper conductors, as required by specific control application.
2. PVC insulation.
3. Unshielded.
4. PVC jacket.
5. Flame Resistance: Comply with UL 1685.

B. Plenum-Rated Cable: NFPA 70, Type CMP.

1. Paired, one pair or two pairs, twisted, No. 22 AWG, stranded (7x30) tinned-copper conductors, as required by specific control application.
2. Fluorinated ethylene propylene insulation.
3. Unshielded.
4. Fluorinated ethylene propylene jacket.
5. Flame Resistance: NFPA 262.

2.10 CONTROL CABLE

A. Paired Cable: NFPA 70, Type CMG.

1. One or multi-pair, twisted, No. 18 AWG, stranded (19x30) tinned-copper conductors, as required by specific control application.
2. PVC insulation.
3. Unshielded.
4. PVC jacket.
5. Flame Resistance: Comply with UL 1685.

B. Plenum-Rated, Paired Cable: NFPA 70, Type CMP.

1. One or multi-pair, twisted, No. 18 AWG, stranded (19x30) tinned-copper conductors, as required by specific control application.
2. PVC insulation.
3. Unshielded.
4. PVC jacket.
5. Flame Resistance: Comply with NFPA 262.

2.11 CONTROL-CIRCUIT CONDUCTORS

- A. Class 1 Control Circuits: Stranded copper, Type THHN/THWN-2, complying with UL 83 in raceway.**

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- B. Class 2 Control Circuits: Stranded copper, Type THHN/THWN-2, complying with UL 83 in raceway, Type XHHW-2, complying with UL 44 in raceway, power-limited cable, concealed in building finishes, or power-limited tray cable, in cable tray, based on application.
- C. Class 3 Remote-Control and Signal Circuits: Stranded copper, Type THHN/THWN-2, complying with UL 83 in raceway, Type XHHW-2, complying with UL 44 in raceway, power-limited cable, concealed in building finishes, or power-limited tray cable, in cable tray, based on application.

2.12 SOURCE QUALITY CONTROL

- A. Factory test twisted pair cables according to TIA-568-C.2.
- B. Cable will be considered defective if it does not pass tests and inspections.
- C. Prepare test and inspection reports.

PART 3 - EXECUTION

3.1 INSTALLATION OF RACEWAYS AND BOXES

- A. Comply with requirements in Section 260533 "Raceways and Boxes for Electrical Systems" for raceway selection and installation requirements for boxes, conduits, and wireways as supplemented or modified in this Section.
 - 1. Outlet boxes must be no smaller than 2 inch (50 mm) wide, 3 inch (75 mm) high, and 2-1/2 inch (64 mm) deep.
 - 2. Flexible metal conduit must not be used.
- B. Comply with TIA-569-D for pull-box sizing and length of conduit and number of bends between pull points.
- C. Install manufactured conduit sweeps and long-radius elbows if possible.
- D. Raceway Installation in Equipment Rooms:
 - 1. Position conduit ends adjacent to a corner on backboard if a single piece of plywood is installed, or in the corner of the room if multiple sheets of plywood are installed around perimeter walls of the room.
 - 2. Install cable trays to route cables if conduits cannot be located in these positions.
 - 3. Secure conduits to backboard if entering the room from overhead.
 - 4. Extend conduits 3 inch (75 mm) above finished floor.
 - 5. Install metal conduits with grounding bushings and connect with grounding conductor to grounding system.
- E. Backboards: Install backboards with 96 inch (2440 mm) dimension vertical. Butt adjacent sheets tightly and form smooth gap-free corners and joints.

3.2 INSTALLATION OF CONDUCTORS AND CABLES

- A. Comply with NECA 1.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- B. General Requirements for Cabling:
1. Terminate all conductors; cable must not contain unterminated elements. Make terminations only at outlets, terminals, and cross-connect and patch panels.
 2. Category 5e, 6, and 6A cables may not be spliced and must be continuous from terminal to terminal. Do not splice cable between termination, tap, or junction points.
 3. Cables serving a common system may be grouped in a common raceway. Install control wiring and cable in separate raceway from power wiring. Do not group conductors from different systems or different voltages.
 4. Bundle, lace, and train conductors to terminal points without exceeding manufacturer's limitations on bending radii.
 5. Do not install bruised, kinked, scored, deformed, or abraded cable. Remove and discard cable if damaged during installation and replace it with new cable.
 6. Cold-Weather Installation: Bring cable to room temperature before dereeling. Do not use heat lamps for heating.
 7. Secure: Fasten securely in place with hardware specifically designed and installed so as to not damage cables.
 8. Provide strain relief.
 9. Keep runs short. Allow extra length for connecting to terminals. Do not bend cables in a radius less than 10 times the cable OD. Use sleeves or grommets to protect cables from vibration at points where they pass around sharp corners and through penetrations.
- C. Installation and Support:
1. Support: Secure and support all control cables, including cables associated with building automatic systems (BAS), low voltage lighting controls, mechanical systems control cables, and all similar control and low-voltage cabling utilized for control of devices and equipment not associated with data and telecommunications systems which are covered by Division 27 and fire alarm, security, and specialty systems which are covered by Division 28, at intervals not exceeding 30 inch (760 mm) and not more than 6 inch (150 mm) from cabinets, boxes, equipment, fittings, outlets, racks, frames, and terminals. Provide supports (cable trays, j-hooks, raceway, etc.) as required; do not support control cabling from ceiling, conduits, ducts, equipment, etc.
 2. Cabling not supported per the specification which is draped over ceilings, conduits, ducts, equipment, etc., will be rejected and require reinstallation in compliance with the support provisions of this specification.
- D. Balanced Twisted Pair Cable Installation:
1. Comply with TIA-568-C.2.
 2. Install termination hardware as specified in Section 271513 "Communications Copper Horizontal Cabling" unless otherwise indicated.
 3. Do not untwist balanced twisted pair cables more than 1/2 inch (12 mm) at the point of termination to maintain cable geometry.
- E. Installation of Control-Circuit Conductors:
1. Install wiring in raceways.
 2. Use insulated spade lugs for wire and cable connection to screw terminals.
 3. Comply with requirements specified in Section 260533 "Raceways and Boxes for Electrical Systems."
- F. Separation from EMI Sources:
1. Comply with BICSI TDMM and TIA-569-D recommendations for separating unshielded copper voice and data communications cable from potential EMI sources including electrical power lines and equipment.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2. Separation between open communications cables or cables in nonmetallic raceways and unshielded power conductors and electrical equipment must be as follows:
 - a. Electrical Equipment or Circuit Rating Less Than 2 kVA: A minimum of 5 inch (127 mm).
 - b. Electrical Equipment or Circuit Rating between 2 and 5 kVA: A minimum of 12 inch (305 mm).
 - c. Electrical Equipment or Circuit Rating More Than 5 kVA: A minimum of 24 inch (600 mm).
3. Separation between communications cables in grounded metallic raceways and unshielded power lines or electrical equipment must be as follows:
 - a. Electrical Equipment or Circuit Rating Less Than 2 kVA: A minimum of 2-1/2 inch (64 mm).
 - b. Electrical Equipment or Circuit Rating between 2 and 5 kVA: A minimum of 6 inch (150 mm).
 - c. Electrical Equipment or Circuit Rating More Than 5 kVA: A minimum of 12 inch (305 mm).
4. Separation between communications cables in grounded metallic raceways and power lines and electrical equipment located in grounded metallic conduits or enclosures must be as follows:
 - a. Electrical Equipment or Circuit Rating Less Than 2 kVA: No requirement.
 - b. Electrical Equipment or Circuit Rating between 2 and 5 kVA: A minimum of 3 inch (75 mm).
 - c. Electrical Equipment or Circuit Rating More Than 5 kVA: A minimum of 6 inch (150 mm).
5. Separation between Communications Cables and Electrical Motors and Transformers, 5 kVA or 5 HP and Larger: A minimum of 48 inch (1200 mm).
6. Separation between Communications Cables and Fluorescent Fixtures: A minimum of 5 inch (127 mm).

3.3 REMOVAL OF CONDUCTORS AND CABLES

- A. Remove abandoned conductors and cables. Abandoned conductors and cables are those installed that are not terminated at equipment and are not identified with a tag for future use.

3.4 CONTROL-CIRCUIT CONDUCTORS

- A. Minimum Conductor Sizes:
 1. Class 1 remote-control and signal circuits; No 14 AWG.
 2. Class 2 low-energy, remote-control, and signal circuits; No. 16 AWG.
 3. Class 3 low-energy, remote-control, alarm, and signal circuits; No. 12 AWG.

3.5 FIRESTOPPING

- A. Comply with requirements in Section 078400 "Firestopping."

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- B. Comply with TIA-569-D, Annex A, "Firestopping."
- C. Comply with BICSI TDMM, "Firestopping" Chapter.

3.6 GROUNDING

- A. For control-voltage wiring and cabling, comply with requirements in Section 260526 "Grounding and Bonding for Electrical Systems."

3.7 IDENTIFICATION

- A. Comply with requirements for identification specified in Section 260553 "Identification for Electrical Systems."
- B. Identify data and communications system components, wiring, and cabling according to TIA-606-B; label printers must use label stocks, laminating adhesives, and inks complying with UL 969.
- C. Identify each wire on each end and at each terminal with a number-coded identification tag. Each wire must have a unique tag.

3.8 FIELD QUALITY CONTROL

- A. Tests and Inspections:
 - 1. Visually inspect cable jacket materials for UL or third-party certification markings. Inspect cabling terminations to confirm color-coding for pin assignments, and inspect cabling connections to confirm compliance with TIA-568-C.1.
 - 2. Visually inspect cable placement, cable termination, grounding and bonding, equipment and patch cords, and labeling of all components.
 - 3. Test cabling for direct-current loop resistance, shorts, opens, intermittent faults, and polarity between conductors. Test operation of shorting bars in connection blocks. Test cables after termination, but not after cross-connection.
 - a. Test instruments must meet or exceed applicable requirements in TIA-568-C.2. Perform tests with a tester that complies with performance requirements in its "Test Instruments (Normative)" Annex, complying with measurement accuracy specified in its "Measurement Accuracy (Informative)" Annex. Use only test cords and adapters that are qualified by test equipment manufacturer for channel or link test configuration.
- B. Document data for each measurement. Print data for submittals in a summary report that is formatted using Table 10.1 in BICSI TDMM as a guide, or transfer the data from the instrument to the computer, save as text files, print, and submit.
- C. End-to-end cabling will be considered defective if it does not pass tests and inspections.
- D. Prepare test and inspection reports.

END OF SECTION 260523

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 26 05 26
GROUNDING AND BONDING FOR ELECTRICAL SYSTEMS**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section includes grounding and bonding systems and equipment.
- B. Section includes grounding and bonding systems and equipment, plus the following special applications:
 - 1. Installation and Bonding of Grounding Electrodes including:
 - a. Metal Underground Water Pipe
 - b. Metal Frame of the Structure
 - c. Concrete-Encased Electrodes including UFER Grounds
 - d. Ground Ring
 - e. Rod Electrodes
 - 2. Ground bonding common with lightning protection system.
 - 3. Foundation steel electrodes.
 - 4. Electrical Room Ground Bus.

1.3 ACTION SUBMITTALS

- A. Product Data: For each type of product indicated.

1.4 INFORMATIONAL SUBMITTALS

- A. As-Built Data: Plans showing dimensioned as-built locations of grounding features specified in "Field Quality Control" Article, including the following:
 - 1. Test wells.
 - 2. Grounding Electrodes
 - 3. Bonding Jumpers
 - 4. Electrical Room Grounding Bus.
 - 5. TEC and TDR Grounding Bus.
- B. Field quality-control reports.

1.5 CLOSEOUT SUBMITTALS

- A. Operation and Maintenance Data: For grounding to include in emergency, operation, and maintenance manuals.
 - 1. In addition to items specified in Section 01 78 23 "Operation and Maintenance Data," include the following:

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- a. Instructions for periodic testing and inspection of grounding features at test wells based on NFPA 70B.
 - 1) Tests shall determine if ground-resistance or impedance values remain within specified maximums, and instructions shall recommend corrective action if values do not.
 - 2) Include recommended testing intervals.

1.6 QUALITY ASSURANCE

- A. Electrical Components, Devices, and Accessories: Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.
- B. Comply with UL 467 for grounding and bonding materials and equipment.

PART 2 - PRODUCTS

2.1 SYSTEM DESCRIPTION

- A. Electrical Components, Devices, and Accessories: Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.
- B. Comply with UL 467 for grounding and bonding materials and equipment.

2.2 CONDUCTORS

- A. Insulated Conductors: Copper or tinned-copper wire or cable insulated for 600 V unless otherwise required by applicable Code or authorities having jurisdiction.
- B. Bare Copper Conductors:
 - 1. Stranded Conductors: ASTM B 8.
 - 2. Tinned Conductors: ASTM B 33.
 - 3. Bonding Cable: 28 kcmil, 14 strands of No. 17 AWG conductor, 1/4 inch (6 mm) in diameter.
- C. Electrical Room Grounding Bus: Predrilled rectangular bars of annealed copper, 1/4 by 4 inches (6.3 by 100 mm) in cross section, with 9/32-inch (7.14-mm) holes spaced 1-1/8 inches (28 mm) apart. Stand-off insulators for mounting shall comply with UL 891 for use in switchboards, 600 V and shall be Lexan or PVC, impulse tested at 5000 V. Length as required for all specified terminations plus 25% spare but not less than 20 inches.
- D. TEC and TDR Grounding Bus: Predrilled rectangular bars of annealed copper, 1/4 by 4 inches (6.3 by 100 mm) in cross section, with 9/32-inch (7.14-mm) holes spaced 1-1/8 inches (28 mm) apart. Stand-off insulators for mounting shall comply with UL 891 for use in switchboards, 600 V and shall be Lexan or PVC, impulse tested at 5000 V. Length as required for all specified terminations plus 25% spare but not less than 12 inches.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2.3 CONNECTORS

- A. Listed and labeled by an NRTL acceptable to authorities having jurisdiction for applications in which used and for specific types, sizes, and combinations of conductors and other items connected.
- B. Bolted Connectors for Conductors and Pipes: Copper or copper alloy.
- C. Welded Connectors: Exothermic-welding kits of types recommended by kit manufacturer for materials being joined and installation conditions.
- D. Bus-Bar Connectors: Mechanical type, cast silicon bronze, solderless compression-type wire terminals, and long-barrel, two-bolt connection to ground bus bar.

2.4 GROUNDING ELECTRODES

- A. Ground Rods: Copper-clad steel; 3/4 inch by 10 feet (19 mm by 3 m).

PART 3 - EXECUTION

3.1 APPLICATIONS

- A. Conductors: Install stranded conductors unless otherwise indicated.
- B. Underground Grounding Conductors: Install bare tinned-copper conductor, No. 4/0 AWG minimum.
 - 1. Bury at least 18 inches (600 mm) below grade.
- C. Isolated Grounding Conductors: Green-colored insulation with continuous yellow stripe. On feeders with isolated ground, identify grounding conductor where visible to normal inspection, with alternating bands of green and yellow tape, with at least three bands of green and two bands of yellow.
- D. Grounding Bus: Install in Normal Power Electrical Room, Essential Power Electrical Room, TEC and all TDR. Install bus horizontally, on insulated spacers 2 inches (50 mm) minimum from wall, 96 inches (2400 mm) above finished floor unless otherwise indicated.
- E. Conductor Terminations and Connections:
 - 1. Pipe Terminations: Bolted connectors.
 - 2. Underground Connections: Welded connectors except at test wells and as otherwise indicated.
 - 3. Connections to Ground Rods at Test Wells: Bolted connectors.
 - 4. Connections to Structural Steel: Welded connectors.

3.2 GROUNDING UNDERGROUND DISTRIBUTION SYSTEM COMPONENTS

- A. Comply with IEEE C2 grounding requirements.
- B. Pad-Mounted Transformers and Switches: Install tinned-copper conductor not less than No. 4/0 AWG from equipment grounding terminals to ground ring. Bury ground ring not less 18 inches below finished grade.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3.3 EQUIPMENT GROUNDING

- A. Install insulated equipment grounding conductors with all feeders and branch circuits.
- B. Install insulated equipment grounding conductors with the following items, in addition to those required by NFPA 70:
 - 1. Feeders and branch circuits.
 - 2. Lighting circuits.
 - 3. Receptacle circuits.
 - 4. Single-phase motor and appliance branch circuits.
 - 5. Three-phase motor and appliance branch circuits.
 - 6. Flexible raceway runs.
 - 7. Armored and metal-clad cable runs.
 - 8. Busway Supply Circuits: Install insulated equipment grounding conductor from grounding bus in the switchgear, switchboard, or distribution panel to equipment grounding bar terminal on busway.
 - 9. X-Ray Equipment Circuits: Install insulated equipment grounding conductor in circuits supplying x-ray equipment.
- C. Air-Duct Equipment Circuits: Install insulated equipment grounding conductor to duct-mounted electrical devices operating at 120 V and more, including air cleaners, heaters, dampers, humidifiers, and other duct electrical equipment. Bond conductor to each unit and to air duct and connected metallic piping.
- D. Water Heater, Heat-Tracing, and Antifrost Heating Cables: Install a separate insulated equipment grounding conductor to each electric water heater and heat-tracing cable. Bond conductor to heater units, piping, connected equipment, and components.
- E. Isolated Grounding Receptacle Circuits: Install an insulated equipment grounding conductor connected to the receptacle grounding terminal. Isolate conductor from raceway and from panelboard grounding terminals. Terminate at equipment grounding conductor terminal of the applicable derived system or service unless otherwise indicated.
- F. Isolated Equipment Enclosure Circuits: For designated equipment supplied by a branch circuit or feeder, isolate equipment enclosure from supply circuit raceway with a nonmetallic raceway fitting listed for the purpose. Install fitting where raceway enters enclosure, and install a separate insulated equipment grounding conductor. Isolate conductor from raceway and from panelboard grounding terminals. Terminate at equipment grounding conductor terminal of the applicable derived system or service unless otherwise indicated.
- G. Metallic Fences: Comply with requirements of IEEE C2.
 - 1. Grounding Conductor: Bare, tinned copper, not less than No. 8 AWG.
 - 2. Gates: Shall be bonded to the grounding conductor with a flexible bonding jumper.

3.4 INSTALLATION

- A. Grounding Conductors: Route along shortest and straightest paths possible unless otherwise indicated or required by Code. Avoid obstructing access or placing conductors where they may be subjected to strain, impact, or damage.
- B. Ground Bonding Common with Lightning Protection System: Comply with NFPA 780 and UL 96 when interconnecting with lightning protection system. Bond electrical power system ground directly to lightning protection system grounding conductor at closest point to electrical service

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

grounding electrode. Use bonding conductor sized same as system grounding electrode conductor, and install in conduit.

- C. Ground Rods: Drive rods until tops are **2 inches (50 mm)** below finished floor or final grade unless otherwise indicated.
 - 1. Interconnect ground rods with grounding electrode conductor below grade and as otherwise indicated. Make connections without exposing steel or damaging coating if any.
- D. Test Wells: Ground rod driven through drilled hole in bottom of handhole. Handholes are shall be at least **12 inches (300 mm)** deep, with cover.
 - 1. Test Wells: Install one test well at the ground rod location indicated on the drawings.
- E. Bonding Straps and Jumpers: Install in locations accessible for inspection and maintenance except where routed through concrete footings.
 - 1. Bonding to Structure: Bond straps directly to basic structure, taking care not to penetrate any adjacent parts.
 - 2. Use exothermic-welded connectors; if a disconnect-type connection is required, use a bolted clamp.
- F. Grounding for Steel Building Structure: Install a driven ground rod at base of each corner column and at intermediate interior and exterior columns at distances not more than **60 feet (18 m)** apart.
 - 1.
- G. Ground Ring: Install a grounding conductor, electrically connected to each building structure ground rod.
 - 1. Install tinned-copper conductor not less than No. 4/0 AWG for bond to ground ring and for taps to building steel.
 - 2. Bury ground ring not less than **24 inches (600 mm)** from building's foundation.
- H. Concrete-Encased Grounding Electrode (Ufer Ground): Fabricate according to NFPA 70; use a minimum of **20 feet (6 m)** of bare copper conductor not smaller than No. 4/0 AWG.
 - 1. If concrete foundation is less than **20 feet (6 m)** long, coil excess conductor within base of foundation.
 - 2. Bond grounding conductor to reinforcing steel in at least four locations in mat footing and at four spread footing locations evenly distributed throughout building. Extend grounding conductor below grade and connect to building's grounding grid or to grounding electrode external to concrete.
- I. Grounding and Bonding for Piping:
 - 1. Metal Water Service Pipe: Install insulated copper grounding conductors, in conduit, from building's main service equipment, or grounding bus, to main metal water service entrances to building. Connect grounding conductors to main metal water service pipes; use a bolted clamp connector or bolt a lug-type connector to a pipe flange by using one of the lug bolts of the flange. Where a dielectric main water fitting is installed, connect grounding conductor on street side of fitting. Bond metal grounding conductor conduit or sleeve to conductor at each end.
 - 2. Water Meter Piping: Use braided-type bonding jumpers to electrically bypass water meters. Connect to pipe with a bolted connector.
 - 3. Bond each aboveground portion of gas piping system downstream from equipment shutoff valve.
- J. Panelboard Bonding: To comply with NEC 517.14 panelboard bonding requirements install a minimum #10 AWG copper conductor between all branch-circuit panelboard grounding terminal buses in each electrical room. The conductor may be installed in ½" EMT conduit or may be exposed where securely fastened to the walls.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3.5 FIELD QUALITY CONTROL

- A. Tests and Inspections:
 - 1. After installing grounding system but before permanent electrical circuits have been energized, test for compliance with requirements.
 - 2. Inspect physical and mechanical condition. Verify tightness of accessible, bolted, electrical connections with a calibrated torque wrench according to manufacturer's written instructions.
 - 3. Test completed grounding system at each location where a maximum ground-resistance level is specified, at service disconnect enclosure grounding conductor, at ground test wells, and at individual ground rods. Make tests at ground rods before any conductors are connected.
 - a. Measure ground resistance no fewer than two full days after last trace of precipitation and without soil being moistened by any means other than natural drainage or seepage and without chemical treatment or other artificial means of reducing natural ground resistance.
 - b. Perform tests by fall-of-potential method according to IEEE 81.
 - 4. Prepare dimensioned Drawings locating each test well, ground rod and ground-rod assembly, and other grounding electrodes. Identify each by letter in alphabetical order, and key to the record of tests and observations. Include the number of rods driven and their depth at each location, and include observations of weather and other phenomena that may affect test results. Describe measures taken to improve test results.
- B. Grounding system will be considered defective if it does not pass tests and inspections.
- C. Prepare test and inspection reports.
- D. Report measured ground resistances that exceed 3 ohms.
- E. Excessive Ground Resistance: If resistance to ground exceeds specified values, notify Architect promptly and include recommendations to reduce ground resistance.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 26 05 29
HANGERS AND SUPPORTS FOR ELECTRICAL SYSTEMS**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Hangers and supports for electrical equipment and systems.
 - 2. Construction requirements for concrete bases.
- B. Related Requirements:
 - 1. Section 260548.16 "Seismic Controls for Electrical Systems" for products and installation requirements necessary for compliance with seismic criteria.

1.3 ACTION SUBMITTALS

- A. Product Data: For each type of product.
 - 1. Include construction details, material descriptions, dimensions of individual components and profiles, and finishes for the following:
 - a. Hangers.
 - b. Steel slotted support systems.
 - c. Nonmetallic support systems.
 - d. Trapeze hangers.
 - e. Clamps.
 - f. Turnbuckles.
 - g. Sockets.
 - h. Eye nuts.
 - i. Saddles.
 - j. Brackets.
 - 2. Include rated capacities and furnished specialties and accessories.
- B. Shop Drawings: Signed and sealed by a qualified professional engineer. For fabrication and installation details for electrical hangers and support systems.
 - 1. Trapeze hangers. Include product data for components.
 - 2. Steel slotted-channel systems.
 - 3.
 - 4. Nonmetallic slotted-channel systems.
 - 5. Equipment supports.
 - 6. Vibration Isolation Base Details: Detail fabrication, including anchorages and attachments to structure and to supported equipment. Include adjustable motor bases, rails, and frames for equipment mounting.
- C. Delegated-Design Submittal: For hangers and supports for electrical systems.
 - 1. Include design calculations and details of trapeze hangers.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2. Include design calculations for seismic restraints.

1.4 INFORMATIONAL SUBMITTALS

- A. Coordination Drawings: Reflected ceiling plan(s) and other details, drawn to scale, on which the following items are shown and coordinated with each other, using input from installers of the items involved:
 1. Suspended ceiling components.
 2. Structural members to which hangers and supports will be attached.
 3. Size and location of initial access modules for acoustical tile.
 4. Items penetrating finished ceiling, including the following:
 - a. Lighting fixtures and lighting control.
 - b. Electrical power devices
 - c. Communications devices.
 - d. Air outlets and inlets.
 - e. Speakers.
 - f. Fire sprinklers.
 - g. Access panels.
 - h. Projectors.
 - i. Fire alarm system devices.
 - j. Nurse call system devices.
- B. Seismic Qualification Certificates: For hangers and supports for electrical equipment and systems, accessories, and components, from manufacturer.
 1. Basis for Certification: Indicate whether withstand certification is based on actual test of assembled components or on calculation.
 2. Dimensioned Outline Drawings of Equipment Unit: Identify center of gravity and locate and describe mounting and anchorage provisions.
 3. Detailed description of equipment anchorage devices on which the certification is based and their installation requirements.
- C. Welding certificates.

1.5 QUALITY ASSURANCE

- A. Welding Qualifications: Qualify procedures and personnel according to AWS D1.1/D1.1M.

PART 2 - PRODUCTS

2.1 PERFORMANCE REQUIREMENTS

- A. Delegated Design: Engage a qualified professional engineer, as defined in Section 014000 "Quality Requirements," to design hanger and support system.
- B. Seismic Performance: Hangers and supports shall withstand the effects of earthquake motions determined according to ASCE/SEI 7.
 1. The term "withstand" means "the supported equipment and systems will remain in place without separation of any parts when subjected to the seismic forces specified and the system will be fully operational after the seismic event."
 2. Component Importance Factor: 1.5.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- C. Surface-Burning Characteristics: Comply with ASTM E 84; testing by a qualified testing agency. Identify products with appropriate markings of applicable testing agency.
 - 1. Flame Rating: Class 1.
 - 2. Self-extinguishing according to ASTM D 635.

2.2 SUPPORT, ANCHORAGE, AND ATTACHMENT COMPONENTS

- A. Steel Slotted Support Systems: Comply with MFMA-4 factory-fabricated components for field assembly.
 - 1. Material: Galvanized steel.
 - 2. Channel Width: Use 1-1/4 inches (31.75 mm) where possible and minimum 13/16 inches (20.64 mm) where necessary due to space restrictions.
 - 3. Metallic Coatings: Hot-dip galvanized after fabrication and applied according to MFMA-4.
 - 4. Channel Dimensions: Selected for applicable load criteria.
- B. Conduit and Cable Support Devices: Steel hangers, clamps, and associated fittings, designed for types and sizes of raceway or cable to be supported.
- C. Support for Conductors in Vertical Conduit: Factory-fabricated assembly consisting of threaded body and insulating wedging plug or plugs for electrical conductors in riser conduits. Plugs shall have number, size, and shape of conductor gripping pieces as required to suit individual conductors or cables supported. Body shall be made of malleable iron.
- D. Structural Steel for Fabricated Supports and Restraints: ASTM A 36/A 36M steel plates, shapes, and bars; black and galvanized.
- E. Mounting, Anchoring, and Attachment Components: Items for fastening electrical items or their supports to building surfaces include and are limited to the following:
 - 1. Powder-Actuated Fasteners: Threaded-steel stud, for use in hardened portland cement concrete, steel, or wood, with tension, shear, and pullout capacities appropriate for supported loads and building materials where used.
 - 2. Mechanical-Expansion Anchors: Insert-wedge-type, stainless steel, for use in hardened portland cement concrete, with tension, shear, and pullout capacities appropriate for supported loads and building materials where used.
 - 3. Concrete Inserts: Steel or malleable-iron, slotted support system units are similar to MSS Type 18 units and comply with MFMA-4 or MSS SP-58.
 - 4. Clamps for Attachment to Steel Structural Elements: MSS SP-58 units are suitable for attached structural element.
 - 5. Through Bolts: Structural type, hex head, and high strength. Comply with ASTM A 325.
 - 6. Hanger Rods: Threaded steel.

2.3 FABRICATED METAL EQUIPMENT SUPPORT ASSEMBLIES

- A. Description: Welded or bolted structural-steel shapes, shop or field fabricated to fit dimensions of supported equipment.
- B. Materials: Comply with requirements in Section 05 50 00 "Metal Fabrications" for steel shapes and plates.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

PART 3 - EXECUTION

3.1 APPLICATION

- A. Comply with NECA 1 and NECA 101 for application of hangers and supports for electrical equipment and systems unless requirements in this Section are stricter.
- B. Comply with requirements for raceways and boxes specified in Section 260533 "Raceways and Boxes for Electrical Systems."
- C. Maximum Support Spacing and Minimum Hanger Rod Size for Raceway: Space supports for EMTs, IMCs, and RMCs as scheduled in NECA 1, where Table 1 lists maximum spacings that are less than those stated in NFPA 70. Minimum rod size shall be **3/8 inch (9 mm)** in diameter.
- D. Multiple Raceways: Install trapeze-type supports fabricated with steel slotted support system, sized so capacity can be increased by at least 25 percent in future without exceeding specified design load limits.
 - 1. Secure raceways and cables to these supports with single-bolt conduit clamps.
- E. Spring-steel clamps designed for supporting single conduits without bolts may be used for **1-1/2-inch (38-mm)** and smaller raceways serving branch circuits and communication systems above suspended ceilings and for fastening raceways to trapeze supports.

3.2 SUPPORT INSTALLATION

- A. Comply with NECA 1 and NECA 101 for installation requirements except as specified in this article.
- B. Raceway Support Methods: In addition to methods described in NECA 1, EMTs, IMCs, and RMCs may be supported by openings through structure members, according to NFPA 70. Only prefabricated openings in structure members may be used. Do not create openings in structure members unless directed to do so by the structural engineer of record.
- C. Cable Support Methods: Cables used for Circuits and Equipment Operating at Less Than 50 Volts and Class 1, 2 or 3 Remote-Control, Signaling and Power-Limited Circuits shall be installed in J-hooks. Where cables extend from J-hooks to equipment cables shall be supported from the structure by straps, hangers, cable ties or similar fittings designed and installed so as not to damage the cable. Do not fasten or secure cables to the raceways of the power system.
- D. Strength of Support Assemblies: Where not indicated, select sizes of components so strength will be adequate to carry present and future static loads within specified loading limits. Minimum static design load used for strength determination shall be weight of supported components plus **200 lb (90 kg)**.
- E. Mounting and Anchorage of Surface-Mounted Equipment and Components: Anchor and fasten electrical items and their supports to building structural elements by the following methods unless otherwise indicated by code:
 - 1. To Wood: Fasten with lag screws or through bolts.
 - 2. To New Concrete: Bolt to concrete inserts.
 - 3. To Masonry: Approved toggle-type bolts on hollow masonry units and expansion anchor fasteners on solid masonry units.
 - 4. To Existing Concrete: Expansion anchor fasteners.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

5. Instead of expansion anchors, powder-actuated driven threaded studs provided with lock washers and nuts may be used in existing standard-weight concrete **4 inches (100 mm)** thick or greater. Do not use for anchorage to lightweight-aggregate concrete or for slabs less than **4 inches (100 mm)** thick.
 6. To Steel: Beam clamps (MSS SP-58, Type 19, 21, 23, 25, or 27), complying with MSS SP-69.
 7. To Light Steel: Sheet metal screws.
 8. Items Mounted on Hollow Walls and Nonstructural Building Surfaces: Mount cabinets, panelboards, disconnect switches, control enclosures, pull and junction boxes, transformers, and other devices on **13/16 inches (20.64 mm)** slotted-channel racks attached to substrate by means that comply with seismic-restraint strength and anchorage requirements.
- F. Drill holes for expansion anchors in concrete at locations and to depths that avoid the need for reinforcing bars.

3.3 INSTALLATION OF FABRICATED METAL SUPPORTS

- A. Comply with installation requirements in Section 055000 "Metal Fabrications" for site-fabricated metal supports.
- B. Cut, fit, and place miscellaneous metal supports accurately in location, alignment, and elevation to support and anchor electrical materials and equipment.
- C. Field Welding: Comply with AWS D1.1/D1.1M.

3.4 CONCRETE BASES

- A. Construct concrete bases of dimensions indicated but not less than **4 inches (100 mm)** larger in both directions than supported unit, and so anchors will be a minimum of 10 bolt diameters from edge of the base.
- B. Use **3000-psi (20.7-MPa)**, 28-day compressive-strength concrete. Concrete materials, reinforcement, and placement requirements are specified in Section 03 30 00 "Cast-in-Place Concrete" or Section 03 30 53 "Miscellaneous Cast-in-Place Concrete."
- C. Anchor equipment to concrete base as follows:
 1. Place and secure anchorage devices. Use supported equipment manufacturer's setting drawings, templates, diagrams, instructions, and directions furnished with items to be embedded.
 2. Install anchor bolts to elevations required for proper attachment to supported equipment.
 3. Install anchor bolts according to anchor-bolt manufacturer's written instructions.

3.5 PAINTING

- A. Touchup: Clean field welds and abraded areas of shop paint. Paint exposed areas immediately after erecting hangers and supports. Use same materials as used for shop painting. Comply with SSPC-PA 1 requirements for touching up field-painted surfaces.
 1. Apply paint by brush or spray to provide minimum dry film thickness of **2.0 mils (0.05 mm)**.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- B. Touchup: Comply with requirements in Section 09 91 13 "Exterior Painting", Section 099123 "Interior Painting" and Section 099600 "High-Performance Coatings" for cleaning and touchup painting of field welds, bolted connections, and abraded areas of shop paint on miscellaneous metal.
- C. Galvanized Surfaces: Clean welds, bolted connections, and abraded areas and apply galvanizing-repair paint to comply with ASTM A 780.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 26 05 33
RACEWAYS AND BOXES FOR ELECTRICAL SYSTEMS**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Metal conduits, tubing, and fittings.
 - 2. Nonmetal conduits, tubing, and fittings.
 - 3. Metal wireways and auxiliary gutters.
 - 4. Surface raceways.
 - 5. Boxes, enclosures, and cabinets.
 - 6. Handholes and boxes for exterior underground cabling.
- B. Related Requirements:
 - 1. Section 26 05 43 "Underground Ducts and Raceways for Electrical Systems" for exterior ductbanks, manholes, and underground utility construction.

1.3 DEFINITIONS

- A. ARC: Aluminum Rigid Conduit.
- B. EMT: Electrical Metallic Tubing.
- C. GRC: Galvanized rigid steel conduit.
- D. IMC: Intermediate metal conduit.
- E. RTRC: Reinforced Thermosetting Resin Conduit.

1.4 ACTION SUBMITTALS

- A. Product Data: For color coded EMT conduit, surface raceways, wireways and fittings, floor boxes, hinged-cover enclosures, and cabinets.
- B. LEED Submittals:
 - 1. Product Data for Credit IEQ 4.1: For solvent cements and adhesive primers, documentation including printed statement of VOC content.
 - 2. Laboratory Test Reports for Credit IEQ 4: For solvent cements and adhesive primers, documentation indicating that products comply with the testing and product requirements of the California Department of Health Services' "Standard Practice for the Testing of

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

Volatile Organic Emissions from Various Sources Using Small-Scale Environmental Chambers."

- C. Shop Drawings: For custom enclosures and cabinets. Include plans, elevations, sections, and attachment details.

1.5 INFORMATIONAL SUBMITTALS

- A. Coordination Drawings: Conduit routing plans, drawn to scale, on which the following items are shown and coordinated with each other, using input from installers of items involved:
 - 1. Structural members in paths of conduit groups with common supports.
 - 2. HVAC and plumbing items and architectural features in paths of conduit groups with common supports.
- B. Qualification Data: For professional engineer.
- C. Seismic Qualification Certificates: For enclosures, cabinets, and conduit racks and their mounting provisions, including those for internal components, from manufacturer.
 - 1. Basis for Certification: Indicate whether withstand certification is based on actual test of assembled components or on calculation.
 - 2. Dimensioned Outline Drawings of Equipment Unit: Identify center of gravity and locate and describe mounting and anchorage provisions.
 - 3. Detailed description of equipment anchorage devices on which the certification is based and their installation requirements.
 - 4. Detailed description of conduit support devices and interconnections on which the certification is based and their installation requirements.
- D. Source quality-control reports.

PART 2 - PRODUCTS

2.1 METAL CONDUITS, TUBING, AND FITTINGS

- A. Listing and Labeling: Metal conduits, tubing, and fittings shall be listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.
- B. GRC: Comply with ANSI C80.1 and UL 6.
- C. ARC: Comply with ANSI C80.5 and UL 6A.
- D. IMC: Comply with ANSI C80.6 and UL 1242.
- E. EMT: Comply with ANSI C80.3 and UL 797. Factory applied color finish available in black, orange, green, purple, red, yellow, blue, and white. Refer to Specification Section 26 05 53 "Identification for Electrical Systems" for color coding of raceways.
- F. FMC: Comply with UL 1; zinc-coated steel.
- G. LFMC: Flexible steel conduit with PVC jacket and complying with UL 360.
- H. Fittings for Metal Conduit: Comply with NEMA FB 1 and UL 514B.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1. Conduit Fittings for Hazardous (Classified) Locations: Comply with UL 886 and NFPA 70.
 2. Fittings for EMT:
 - a. Material: Steel.
 - b. Type: Set screw or compression.
 3. Expansion Fittings: PVC or steel to match conduit type, complying with UL 651, rated for environmental conditions where installed, and including flexible external bonding jumper.
- I. Joint Compound for IMC, GRC, or ARC: Approved, as defined in NFPA 70, by authorities having jurisdiction for use in conduit assemblies, and compounded for use to lubricate and protect threaded conduit joints from corrosion and to enhance their conductivity.

2.2 NONMETALLIC CONDUITS, TUBING, AND FITTINGS

- A. Listing and Labeling: Nonmetallic conduits, tubing, and fittings shall be listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.
- B. RNC: Type EPC-40-PVC, complying with NEMA TC 2 and UL 651 unless otherwise indicated.
- C. Continuous HDPE: Comply with UL 651B.
- D. RTRC: Comply with UL 1684A and NEMA TC 14.
- E. Fittings for RNC: Comply with NEMA TC 3; match to conduit or tubing type and material.
- F. Solvent cements and adhesive primers shall have a VOC content of 510 and 550 g/L or less, respectively, when calculated according to 40 CFR 59, Subpart D (EPA Method 24).
- G. Solvent cements and adhesive primers shall comply with the testing and product requirements of the California Department of Health Services' "Standard Practice for the Testing of Volatile Organic Emissions from Various Sources Using Small-Scale Environmental Chambers."

2.3 METAL WIREWAYS AND AUXILIARY GUTTERS

- A. Description: Sheet metal, complying with UL 870 and NEMA 250, Type 1 unless otherwise indicated, and sized according to NFPA 70.
 1. Metal wireways installed outdoors shall be listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.
- B. Fittings and Accessories: Include covers, couplings, offsets, elbows, expansion joints, adapters, hold-down straps, end caps, and other fittings to match and mate with wireways as required for complete system.
- C. Wireway Covers: Hinged type unless otherwise indicated.
- D. Finish: Manufacturer's standard enamel finish.

2.4 RECEPTACLE RACEWAYS

- A. Listing and Labeling: Receptacle raceways shall be listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- B. Surface Metal Raceways: Aluminum with snap-on covers complying with UL. Clear anodized finish.
 - 1. Raceways for receptacles only: Wiremold AL3300 series.
 - 2. Raceways for applications where both receptacles and data devices are installed in the raceway and at all laboratory locations: Wiremold ALA4800 series two-channel and dual-cover. Satin anodized finish.
 - 3. Provide duplex receptacles at 12 inches on center in all receptacle raceways. Provide GFCI receptacles as noted on drawings.

2.5 BOXES, ENCLOSURES, AND CABINETS

- A. General Requirements for Boxes, Enclosures, and Cabinets: Boxes, enclosures, and cabinets installed in wet locations shall be listed for use in wet locations.
- B. Sheet Metal Outlet and Device Boxes: Comply with NEMA OS 1 and UL 514A.
- C. Cast-Metal Outlet and Device Boxes: Comply with NEMA FB 1, aluminum, Type FD, with gasketed cover.
- D. Nonmetallic Outlet and Device Boxes: Comply with NEMA OS 2 and UL 514C.
- E. Floor Boxes and Poke-Through Devices: Refer to Specification Section 26 27 26 "Wiring Devices" for floor boxes and poke-through devices
- F. Luminaire Outlet Boxes: Nonadjustable, designed for attachment of luminaire weighing **50 lb (23 kg)**. Outlet boxes designed for attachment of luminaires weighing more than **50 lb (23 kg)** shall be listed and marked for the maximum allowable weight.
- G. Small Sheet Metal Pull and Junction Boxes: NEMA OS 1.
- H. Cast-Metal Access, Pull, and Junction Boxes: Comply with NEMA FB 1 and UL 1773, cast aluminum with gasketed cover.
- I. Box extensions used to accommodate new building finishes shall be of same material as recessed box.
- J. Device Box Dimensions:
 - 1. **Wiring Devices other than data or communications devices: Minimum 4 inches square by 2-1/8 inches deep** with switch ring as required for the device configuration and wall or ceiling surface. Where light switches are indicated at a common location provide multi-gang boxes to accommodate the quantity and type of switches indicated. Where deeper boxes are required provide masonry type boxes which do not require a separate switch ring.
 - 2. Data and communications devices: Minimum 4-11/16 inches square by 3 inches deep with single-gang 5/8 inch deep (or deeper if wall or ceiling finish is deeper) ring.
- K. Pull boxes behind monitors: Minimum 6 inches square by 3-1/2 inches deep with two-gang ring.
- L. Gangable boxes are prohibited.
- M. Partitions: Provide partitions to separate emergency system conductors from conductors or other systems, where voltage between adjacent switches exceeds 300 volts and where switches controlling Low Voltage Controllers for interface to Nurse Call systems are installed in common boxes with line voltage switches.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- N. Hinged-Cover Enclosures: Comply with UL 50 and NEMA 250.
 - 1. Indoor: Type 1 with continuous-hinge cover with flush latch unless otherwise indicated. Steel, finished inside and out with manufacturer's standard enamel.
 - 2. Outdoor: Type 4X with continuous-hinge cover with flush latch unless otherwise indicated. 304 stainless steel with smooth brushed finish.
 - 3. Interior Panels: Steel; all sides finished with manufacturer's standard enamel. Provide interior panels when there are control devices or power blocks located inside the enclosure.
- O. Handholes and Boxes for Exterior Underground Wiring: Refer to Specification Section 26 05 43 "Underground Ducts and Raceways for Electrical Systems".

2.6 PUTTY PADS

- A. Moldable intumescent wall opening-protective pads designed for application to the back of electrical outlet boxes prior to installation of the wall finish to provide up to 2-hour fire barrier ratings and minimum Sound Transmission Class (STC) of 52 when tested in an STC-53 rated wall assembly or 59 according to ASTM E90-97.
- B. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. 3M Company.
 - 2. Hilti

PART 3 - EXECUTION

3.1 RACEWAY APPLICATION

- A. Outdoors: Apply raceway products as specified below unless otherwise indicated:
 - 1. Exposed Conduit: GRC or IMC.
 - 2. Concealed Conduit, Aboveground: EMT.
 - 3. Underground Conduit for branch circuits: RNC, Type EPC-40-PVC, direct buried.
 - 4. Underground Conduit for feeders: Refer to Specification Section 26 05 43 "Underground Ducts and Raceways for Electrical Systems".
 - 5. Raceways Embedded in slabs or composite steel and concrete decks are prohibited.
 - 6. Connection to Vibrating Equipment (Including Transformers and Hydraulic, Pneumatic, Electric Solenoid, or Motor-Driven Equipment): LFMC.
 - 7. Boxes and Enclosures, Aboveground: NEMA 250, Type 4X, 304 stainless steel.
- B. Indoors: Apply raceway products as specified below unless otherwise indicated:
 - 1. Exposed, Not Subject to Physical Damage: EMT.
 - 2. Exposed, Not Subject to Severe Physical Damage: EMT.
 - 3. Exposed and Subject to Severe Physical Damage: GRC or IMC. Raceway locations include the following:
 - a. Loading dock.
 - b. Corridors used for traffic of mechanized carts, forklifts, and pallet-handling units.
 - c. Mechanical rooms below 8 feet.
 - d. Gymnasiums.
 - 4. Concealed in Ceilings and Interior Walls and Partitions: EMT.
 - 5. Feeder Raceways under Slabs: RNC, Type EPC-40-PVC encased in not less than 2 inches of 3000 psi concrete. Change from RNC, Type EPC-40-PVC to GRC or IMC before rising above floor.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

6. Branch Circuit Raceways under Slabs: Refer to Specifications Section 26 05 19 "Low-Voltage Electrical Power Conductors and Cables" for allowable application of under slab raceways. RNC, Type EPC-40-PVC direct buried. Change from RNC, Type EPC-40-PVC to GRC or IMC before rising above floor.
 7. Raceways Embedded in slabs or composite steel and concrete decks are prohibited.
 8. Connection to Vibrating Equipment (Including Transformers and Hydraulic, Pneumatic, Electric Solenoid, or Motor-Driven Equipment): FMC, except use LFMC in damp or wet locations.
 9. Damp or Wet Locations: GRC or IMC.
 10. Boxes and Enclosures: NEMA 250, Type 1, except use NEMA 250, Type 4X, 304 stainless steel in kitchens and damp or wet locations.
 - 11.
- C. Minimum Raceway Size: **3/4-inch (21-mm)** trade size.
- D. Raceway Fittings: Compatible with raceways and suitable for use and location.
1. Rigid and Intermediate Steel Conduit: Use threaded rigid steel conduit fittings unless otherwise indicated. Comply with NEMA FB 2.10.
 2. EMT: Use setscrew or compression, steel fittings. Comply with NEMA FB 2.10.
 3. Flexible Conduit: Use only fittings listed for use with flexible conduit. Comply with NEMA FB 2.20.
- E. Install nonferrous conduit or tubing for circuits operating above 60 Hz. Where aluminum raceways are installed for such circuits and pass through concrete, install in nonmetallic sleeve.
- F. Do not install aluminum conduits, boxes, or fittings in contact with concrete or earth.
- G. Install surface raceways only where indicated on Drawings.

3.2 INSTALLATION

- A. Comply with NECA 1 and NECA 101 for installation requirements except where requirements on Drawings or in this article are stricter. Comply with NECA 102 for aluminum conduits. Comply with NFPA 70 limitations for types of raceways allowed in specific occupancies and number of floors.
- B. Separation of Life Safety and Critical Branch Wiring: Comply with NFPA 70 Article 517.
- C. Keep raceways at least **6 inches (150 mm)** away from parallel runs of flues and steam or hot-water pipes. Install horizontal raceway runs above water and steam piping.
- D. Complete raceway installation before starting conductor installation.
- E. Comply with requirements in Section 26 05 29 "Hangers and Supports for Electrical Systems" for hangers and supports.
- F. Arrange stub-ups so curved portions of bends are not visible above finished slab except where concealed in chases.
- G. Install no more than the equivalent of three 90-degree bends in any conduit run except for control wiring conduits, for which fewer bends are allowed. Support within **12 inches (300 mm)** of changes in direction.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- H. Conceal conduit and EMT within finished walls, ceilings, and floors unless otherwise indicated. Install conduits parallel or perpendicular to building lines.
- I. Support conduit within **12 inches (300 mm)** of enclosures to which attached.
- J. Raceways Embedded in Slabs are prohibited.
- K. Stub-ups to Above Recessed Ceilings:
 - 1. Use EMT, IMC, or RMC for raceways.
 - 2. Use a conduit bushing or insulated fitting to terminate stub-ups not terminated in hubs or in an enclosure.
- L. Threaded Conduit Joints, Exposed to Wet, Damp, Corrosive, or Outdoor Conditions: Apply listed compound to threads of raceway and fittings before making up joints. Follow compound manufacturer's written instructions.
- M. Coat field-cut threads on PVC-coated raceway with a corrosion-preventing conductive compound prior to assembly.
- N. Raceway Terminations at Locations Subject to Moisture or Vibration: Use insulating bushings to protect conductors including conductors smaller than No. 4 AWG.
- O. Terminate threaded conduits into threaded hubs or with locknuts on inside and outside of boxes or cabinets. Install bushings on conduits up to **1-1/4-inch (35mm)** trade size and insulated throat metal bushings on **1-1/2-inch (41-mm)** trade size and larger conduits terminated with locknuts. Install insulated throat metal grounding bushings on service conduits.
- P. Install raceways square to the enclosure and terminate at enclosures with locknuts. Install locknuts hand tight plus 1/4 turn more.
- Q. Do not rely on locknuts to penetrate nonconductive coatings on enclosures. Remove coatings in the locknut area prior to assembling conduit to enclosure to assure a continuous ground path.
- R. Cut conduit perpendicular to the length. For conduits **2-inch (53-mm)** trade size and larger, use roll cutter or a guide to make cut straight and perpendicular to the length.
- S. Install pull wires in empty raceways. Use polypropylene or monofilament plastic line with not less than **200-lb (90-kg)** tensile strength. Leave at least **12 inches (300 mm)** of slack at each end of pull wire. Cap underground raceways designated as spare above grade alongside raceways in use.
- T. Surface Raceways:
 - 1. Install surface raceway with a minimum **2-inch (50-mm)** radius control at bend points.
 - 2. Secure surface raceway with screws or other anchor-type devices at intervals not exceeding **48 inches (1200 mm)** and with no less than two supports per straight raceway section. Support surface raceway according to manufacturer's written instructions. Tape and glue are not acceptable support methods.
- U. Install raceway sealing fittings at accessible locations according to NFPA 70 and fill them with listed sealing compound. For concealed raceways, install each fitting in a flush steel box with a blank cover plate having a finish similar to that of adjacent plates or surfaces. Install raceway sealing fittings according to NFPA 70.
- V. Install devices to seal raceway interiors at accessible locations. Locate seals so no fittings or boxes are between the seal and the following changes of environments. Seal the interior of all raceways at the following points:

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1. Where conduits pass from warm to cold locations, such as boundaries of refrigerated spaces.
 2. Where an underground service raceway enters a building or structure.
 3. Where otherwise required by NFPA 70.
- W. Comply with manufacturer's written instructions for solvent welding RNC and fittings.
- X. Expansion(Seismic)-Joint Fittings:
1. Install flexible metal conduit at all locations where conduits cross building or structure expansion joints. Allow for minimum 4 inches deflection in all directions or greater if expansion joint exceeds 4 inches. Provide droop in flexible conduit to accommodate movement. Do not loop the flexible conduit. When calculating total bend degrees in conduit runs with expansion fittings use minimum 60 degrees for each expansion-joint fitting
 2. Install each expansion-joint fitting with position, mounting, and piston setting selected according to manufacturer's written instructions for conditions at specific location at time of installation. Install conduit supports to allow for expansion movement.
- Y. Flexible Conduit Connections: Comply with NEMA RV 3. Use a maximum of **72 inches (1830 mm)** of flexible conduit for recessed and semi-recessed luminaires, equipment subject to vibration, noise transmission, or movement; and for transformers and motors.
1. Use LFMC in damp or wet locations.
- Z. Mount boxes at heights indicated on Drawings. If mounting heights of boxes are not individually indicated, give priority to ADA requirements. Install boxes with height measured to center of box unless otherwise indicated.
- AA. Recessed Boxes in Masonry Walls: Saw-cut opening for box in center of cell of masonry block, and install box flush with surface of wall. Prepare block surfaces to provide a flat surface for a raintight connection between box and cover plate or supported equipment and box.
- BB. Horizontally separate boxes mounted on opposite sides of walls so they are not in the same vertical channel.
- CC. Locate boxes so that cover or plate will not span different building finishes.
- DD. Support boxes of three gangs or more from more than one side by spanning two framing members or mounting on brackets specifically designed for the purpose.
- EE. Fasten junction and pull boxes to or support from building structure. Do not support boxes by conduits.
- FF. Set metal floor boxes level and flush with finished floor surface.
- GG. Set nonmetallic floor boxes level. Trim after installation to fit flush with finished floor surface.
- 3.3 SLEEVE AND SLEEVE-SEAL INSTALLATION FOR ELECTRICAL PENETRATIONS**
- A. Install sleeves and sleeve seals at penetrations of exterior floor and wall assemblies. Comply with requirements in Section 26 05 44 "Sleeves and Sleeve Seals for Electrical Raceways and Cabling."

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3.4 FIRESTOPPING AND SOUND TRANSMISSION MITIGATION

- A. Install firestopping at penetrations of fire-rated floor and wall assemblies. Comply with requirements in Section 07 84 13 "Penetration Firestopping."
- B. Install putty pads with acoustical and firestopping capabilities on all boxes that are installed in wall or partition cavities and in gypsum board ceilings.

3.5 PROTECTION

- A. Protect coatings, finishes, and cabinets from damage and deterioration.
 - 1. Repair damage to galvanized finishes with zinc-rich paint recommended by manufacturer.
 - 2. Repair damage to PVC coatings or paint finishes with matching touchup coating recommended by manufacturer.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

SECTION 26 05 43

UNDERGROUND DUCTS AND RACEWAYS FOR ELECTRICAL SYSTEMS

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.
- B. Spanish Fork Power Underground Power Construction Standards

1.2 SUMMARY

- A. Section Includes:
 - 1. Direct-buried conduit, ducts, and duct accessories.
 - 2. Concrete-encased conduit, ducts, and duct accessories.
 - 3. Transformer Pad/Vaults.

1.3 DEFINITIONS

- A. RNC: Rigid Non-Metallic Conduit.
- B. RTRC: Reinforced Thermosetting Resin Conduit (fiberglass).

1.4 ACTION SUBMITTALS

- A. Product Data: For each type of product.
 - 1. Include duct-bank materials, including separators and miscellaneous components.
 - 2. Include ducts and conduits and their accessories, including elbows, end bells, bends, and fittings.
 - 3. Include warning tape.
- B. Shop Drawings:
 - 1. Precast or Factory-Fabricated Underground Utility Structures:
 - a. Include plans, elevations, sections, details, attachments to other work, and accessories.
 - b. Include duct entry provisions, including locations and duct sizes.
 - c. Include reinforcement details.
 - d. Include frame and cover design and pad-vault frame support rings.
 - e. Include grounding details.
 - f. Include dimensioned locations of cable rack inserts, pulling-in and lifting irons, and sumps.
 - g. Include joint details.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1.5 CLOSEOUT SUBMITTALS

- A. Duct-Bank Record Drawings:
 - 1. Indicate center line of each ductbank and conduit measured from a gridline.
 - 2. Indicate elevation of each section of ductbank relative to the Hospital Building Level 1 Top-of- Slab elevation. Clearly identify all changes in elevation. Where ductbank is sloped provide a center line elevation at maximum every 10 feet.
 - 3. Indicate location of crossings of piping of electrical and other systems.

1.6 FIELD CONDITIONS

- A. Ground Water: Assume ground-water level is 36 inches (900 mm) below ground surface unless a higher water table is noted on Drawings.

PART 2 - PRODUCTS

2.1 GENERAL REQUIREMENTS FOR DUCTS AND RACEWAYS

- A. Comply with City of Spanish Fork Underground Power Construction Standards
- B. Comply with ANSI C2.

2.2 CONDUIT

- A. Rigid Steel Conduit: Galvanized. Comply with ANSI C80.1.
- B. RNC, straight runs: NEMA TC 2, Type EPC-40-PVC, UL 651, with matching fittings by same manufacturer as the conduit, complying with NEMA TC 3 and UL 514B.

2.3 NONMETALLIC DUCTS AND DUCT ACCESSORIES

- A. Underground Plastic Utilities Duct: NEMA TC 2, UL 651, ASTM F 512, Type EPC-40, with matching fittings complying with NEMA TC 3 by same manufacturer as the duct.
- B. Duct Accessories:
 - 1. Duct Separators: Factory-fabricated rigid PVC interlocking spacers, sized for type and size of ducts with which used, and selected to provide minimum duct spacing indicated while supporting ducts during concreting or backfilling.
 - 2. Warning Tape: Underground-line warning tape specified in Section 26 05 53 "Identification for Electrical Systems."

2.4 PRECAST VAULTS FOR PAD MOUNT SWITCHGEAR

- A. Comply with Spanish Fork Power Services Underground Power Construction Standards.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

PART 3 - EXECUTION

3.1 PREPARATION

- A. Coordinate layout and installation of ducts, pad-vaults with final arrangement of other utilities, site grading, and surface features as determined in the field. Notify Architect if there is a conflict between areas of excavation and existing structures or archaeological sites to remain.
- B. Coordinate elevations of ducts and duct-bank entrances into pad-vaults with final locations and profiles of ducts and duct banks, as determined by coordination with other utilities, underground obstructions, and surface features. Revise locations and elevations as required to suit field conditions and to ensure that duct runs drain to pad-vaults and as approved by Architect.
- C. Clear and grub vegetation to be removed and protect vegetation to remain according to Section 31 10 00 "Site Clearing." Remove and stockpile topsoil for reapplication according to Section 31 10 00 "Site Clearing."

3.2 UNDERGROUND DUCT APPLICATION

- A. Ducts for Electrical Cables More than 600 V: RNC, NEMA Type EPC-40-PVC, in concrete-encased duct bank.
- B. Ducts for Electrical Feeders 600 V and Less: RNC, NEMA Type EPC-40-PVC, in concrete-encased duct bank.

3.3 EARTHWORK

- A. Excavation and Backfill: Comply with Section 31 20 00 "Earth Moving," but do not use heavy-duty, hydraulic-operated, compaction equipment.
- B. Restore surface features at areas disturbed by excavation and re-establish original grades unless otherwise indicated. Replace removed sod immediately after backfilling is completed.
- C. Restore areas disturbed by trenching, storing of dirt, cable laying, and other work. Restore vegetation and include necessary top-soil, fertilizing, liming, seeding, sodding, sprigging, and mulching. Comply with Section 32 92 00 "Turf and Grasses" and Section 32 93 00 "Plants."
- D. Cut and patch existing pavement in the path of underground ducts and utility structures according to the "Cutting and Patching" Article in Section 01 73 00 "Execution."

3.4 DUCT INSTALLATION

- A. Install ducts according to NEMA TCB 2.
- B. Slope: Pitch ducts a minimum slope of 1:300 down toward pad-vaults and away from buildings and equipment.
- C. Curves and Bends: Use 5-degree angle couplings for small changes in direction. Use manufactured long sweep bends with a minimum radius of 48 inches (1200 mm) for 4 inch conduits and 60 inches for 6 inch conduit both horizontally and vertically, at other locations unless otherwise indicated.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- D. Joints: Use solvent-cemented joints in ducts and fittings and make watertight according to manufacturer's written instructions. Stagger couplings so those of adjacent ducts do not lie in same plane.
- E. Duct Entrances to Pad-vaults: Use end bells, spaced approximately 10 inches (250 mm) o.c. for 6-inch (125-mm) ducts and 7.5 inches for 4-inch ducts.
1. Begin change from regular spacing to end-bell spacing 10 feet (3 m) from the end bell without reducing duct line slope and without forming a trap in the line.
 2. Grout end bells into structure walls from both sides to provide watertight entrances.
- F. Sealing: Provide temporary closure at terminations of ducts that have cables pulled. Seal spare ducts at terminations. Use sealing compound and plugs to withstand at least 15-psig (1.03-MPa) hydrostatic pressure.
- G. Pulling Cord: Install 100-lbf- (445-N-) test nylon cord in empty ducts.
- H. Concrete-Encased Ducts: Support ducts on duct separators.
1. Excavate trench bottom to provide firm and uniform support for duct bank. Prepare trench bottoms as specified in Section 312000 "Earth Moving" for pipes less than or equal to 6 inches (150 mm) in nominal diameter.
 2. Width: Excavate trench 4 inches (75 mm) wider than duct bank on each side.
 3. Depth: Install top of duct bank at least 36 inches (600 mm) below finished grade except that tunnel crossing may be not less than 12" below top of slab. Where crossing grade beams install conduits at minimum 2 inches below bottom of grade beam.
 4. Support ducts on duct separators coordinated with duct size, duct spacing, and outdoor temperature.
 5. Separator Installation: Space separators close enough to prevent sagging and deforming of ducts, with not less than four spacers per 20 feet (6 m) of duct. Secure separators to earth and to ducts to prevent floating during concreting. Stagger separators approximately 6 inches (150 mm) between tiers. Tie entire assembly together using fabric straps; do not use tie wires or reinforcing steel that may form conductive or magnetic loops around ducts or duct groups.
 6. Minimum Space between Ducts: 3 inches (75 mm) between ducts and exterior envelope wall, 2 inches (50 mm) between ducts for like services, and 4 inches (100 mm) between power and signal ducts.
 7. Minimum Center to Center dimension: 7.5 inches.
 8. Elbows: Use manufactured RTRC conduit elbows for stub-ups at equipment and at changes of direction in duct run.
 - a. Couple RTRC conduits to ducts with adapters designed for this purpose, and encase coupling with 3 inches (75 mm) of concrete.
 9. Forms: Use walls of trench to form side walls of duct bank where soil is self-supporting and concrete envelope can be poured without soil inclusions; otherwise, use forms.
 10. Concrete Cover: Install a minimum of 4 inches (75 mm) of concrete cover at top and bottom, and a minimum of 2 inches (50 mm) on each side of duct bank.
 11. Concreting Sequence: Pour each run of envelope between pad-vaults or other terminations in one continuous operation.
 - a. Start at one end and finish at the other, allowing for expansion and contraction of ducts as their temperature changes during and after the pour. Use expansion fittings installed according to manufacturer's written recommendations, or use other specific measures to prevent expansion-contraction damage.

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

- b. If more than one pour is necessary, terminate each pour in a vertical plane and install **3/4-inch (15-mm)** reinforcing-rod dowels extending a minimum of **18 inches (450 mm)** into concrete on both sides of joint near corners of envelope.
- 12. Pouring Concrete: Comply with requirements in "Concrete Placement" Article in Section 033000 "Cast-in-Place Concrete." Place concrete carefully during pours to prevent voids under and between conduits and at exterior surface of envelope. Do not allow a heavy mass of concrete to fall directly onto ducts. Allow concrete to flow to center of bank and rise up in middle, uniformly filling all open spaces. Do not use power-driven agitating equipment unless specifically designed for duct-bank application.
- I. Warning Tape: Bury warning tape approximately **12 inches (300 mm)** above all concrete-encased ducts and duct banks. Align tape parallel to and within **3 inches (75 mm)** of centerline of duct bank. Provide an additional warning tape for each **12-inch (300-mm)** increment of duct-bank width over a nominal **18 inches (450 mm)**. Space additional tapes **12 inches (300 mm)** apart, horizontally.

3.5 INSTALLATION OF CONCRETE PADS AND VAULTS

- A. Precast Concrete Pad-vault Installation:
 - 1. Comply with ASTM C 891 unless otherwise indicated.
 - 2. Install units level and plumb and with orientation and depth coordinated with connecting ducts, to minimize bends and deflections required for proper entrances.
 - 3. Unless otherwise indicated, support units on a level bed of crushed stone or gravel, graded from **1-inch (25-mm)** sieve to **No. 4 (4.75-mm)** sieve and compacted to same density as adjacent undisturbed earth.
- B. Elevations:
 - 1. Pad-vault Pad Lid: Install with pad at 4 inches above finished grade.
- C. Drainage: Install drains in bottom of pad-vaults where indicated. Coordinate with drainage provisions indicated.
- D. Dampproofing: Apply dampproofing to exterior surfaces of pad-vaults after concrete has cured at least three days. Dampproofing materials and installation are specified in Section 07 11 13 "Bituminous Dampproofing." After ducts are connected and grouted, and before backfilling, dampproof joints and connections, and touch up abrasions and scars.
- E. Hardware: Install removable hardware, including pulling eyes, cable stanchions, and cable arms, as required for installation and support of cables and conductors and as indicated.
- F. Field-Installed Bolting Anchors in Pad-vaults: Do not drill deeper than **3-7/8 inches (97 mm)** for pad-vaults for anchor bolts installed in the field. Use a minimum of two anchors for each cable stanchion.

3.6 GROUNDING

- A. Ground underground ducts and utility structures according to Section 26 05 26 "Grounding and Bonding for Electrical Systems."

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3.7 FIELD QUALITY CONTROL

- A. Perform the following tests and inspections and prepare test reports:
 - 1. Demonstrate capability and compliance with requirements on completion of installation of underground ducts and utility structures.
 - 2. Pull solid aluminum or wood test mandrel through duct to prove joint integrity and adequate bend radii, and test for out-of-round duct. Provide a minimum ~~6-inch-~~ (150-mm-) long mandrel equal to 80 percent fill of duct. If obstructions are indicated, remove obstructions and retest.
 - 3. Test pad-vault grounding to ensure electrical continuity of grounding and bonding connections. Measure and report ground resistance as specified in Section 26 0526 "Grounding and Bonding for Electrical Systems."
- B. Correct deficiencies and retest as specified above to demonstrate compliance.

3.8 CLEANING

- A. Pull leather-washer-type duct cleaner, with graduated washer sizes, through full length of ducts. Follow with rubber duct swab for final cleaning and to assist in spreading lubricant throughout ducts.
- B. Clean internal surfaces of pad-vaults, including sump. Remove foreign material.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

SECTION 26 05 44

SLEEVES AND SLEEVE SEALS FOR ELECTRICAL RACEWAYS AND CABLING

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Sleeves for raceway and cable penetration of non-fire-rated construction walls and floors.
 - 2. Sleeve-seal systems.
 - 3. Sleeve-seal fittings.
 - 4. Grout.
 - 5. Silicone sealants.
- B. Related Requirements:
 - 1. Section 07 84 13 "Penetration Firestopping" for penetration firestopping installed in fire-resistance-rated walls, horizontal assemblies, and smoke barriers, with and without penetrating items.

1.3 ACTION SUBMITTALS

- A. Product Data: For each type of product.
- B. LEED Submittals:
 - 1. Product Data for Credit EQ 4.1: For sealants, documentation including printed statement of VOC content.
 - 2. Laboratory Test Reports for Credit EQ 4: For sealants, documentation indicating that products comply with the testing and product requirements of the California Department of Health Services' "Standard Practice for the Testing of Volatile Organic Emissions from Various Sources Using Small-Scale Environmental Chambers."

PART 2 - PRODUCTS

2.1 SLEEVES

- A. Wall Sleeves:
 - 1. Steel Pipe Sleeves: ASTM A 53/A 53M, Type E, Grade B, Schedule 40, zinc coated, plain ends.
 - 2. Cast-Iron Pipe Sleeves: Cast or fabricated "wall pipe," equivalent to ductile-iron pressure pipe, with plain ends and integral waterstop unless otherwise indicated.

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

- B. Sleeves for Conduits Penetrating Non-Fire-Rated Gypsum Board Assemblies: Galvanized-steel sheet; **0.0239-inch (0.6-mm)** minimum thickness; round tube closed with welded longitudinal joint, with tabs for screw-fastening the sleeve to the board.
- C. PVC-Pipe Sleeves: ASTM D 1785, Schedule 40.
- D. Molded-PVC Sleeves: With nailing flange for attaching to wooden forms.
- E. Molded-PE or -PP Sleeves: Removable, tapered-cup shaped, and smooth outer surface with nailing flange for attaching to wooden forms.
- F. Sleeves for Rectangular Openings:
 - 1. Material: Galvanized sheet steel.
 - 2. Minimum Metal Thickness:
 - a. For sleeve cross-section rectangle perimeter less than **50 inches (1270 mm)** and with no side larger than **16 inches (400 mm)**, thickness shall be **0.052 inch (1.3 mm)**.
 - b. For sleeve cross-section rectangle perimeter **50 inches (1270 mm)** or more and one or more sides larger than **16 inches (400 mm)**, thickness shall be **0.138 inch (3.5 mm)**.
- A. Fire-Rated Assemblies for Low Voltage Penetrations (Communications, etc.): Engineered prefabricated fire stop system. The acceptable manufacturers of firestop systems are:
 - 1. STI Firestop (EZ-Path)

2.2 SLEEVE-SEAL SYSTEMS

- A. Description: Modular sealing device, designed for field assembly, to fill annular space between sleeve and raceway or cable.
 - 1. Sealing Elements: EPDM rubber interlocking links shaped to fit surface of pipe. Include type and number required for pipe material and size of pipe.
 - 2. Pressure Plates: Stainless steel.
 - 3. Connecting Bolts and Nuts: Stainless steel of length required to secure pressure plates to sealing elements.

2.3 SLEEVE-SEAL FITTINGS

- A. Description: Manufactured plastic, sleeve-type, waterstop assembly made for embedding in concrete slab or wall. Unit shall have plastic or rubber waterstop collar with center opening to match piping OD.

2.4 GROUT

- A. Description: Nonshrink; recommended for interior and exterior sealing openings in non-fire-rated walls or floors.
- B. Standard: ASTM C 1107/C 1107M, Grade B, post-hardening and volume-adjusting, dry, hydraulic-cement grout.
- C. Design Mix: **5000-psi (34.5-MPa)**, 28-day compressive strength.
- D. Packaging: Premixed and factory packaged.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2.5 SILICONE SEALANTS

- A. Silicone Sealants: Single-component, silicone-based, neutral-curing elastomeric sealants of grade indicated below.
 - 1. Grade: Pourable (self-leveling) formulation for openings in floors and other horizontal surfaces that are not fire rated.
 - 2. Sealant shall have VOC content of 50 g/L or less when calculated according to 40 CFR 59, Subpart D (EPA Method 24).
 - 3. Sealant shall comply with the testing and product requirements of the California Department of Health Services' "Standard Practice for the Testing of Volatile Organic Emissions from Various Sources Using Small-Scale Environmental Chambers."
- B. Silicone Foams: Multicomponent, silicone-based liquid elastomers that, when mixed, expand and cure in place to produce a flexible, nonshrinking foam.

PART 3 - EXECUTION

3.1 SLEEVE INSTALLATION FOR NON-FIRE-RATED ELECTRICAL PENETRATIONS

- A. Comply with NECA 1.
- B. Comply with NEMA VE 2 for cable tray and cable penetrations.
- C. Sleeves for Conduits Penetrating Above-Grade Non-Fire-Rated Concrete and Masonry-Unit Floors and Walls:
 - 1. Interior Penetrations of Non-Fire-Rated Walls and Floors:
 - a. Seal annular space between sleeve and raceway or cable, using joint sealant appropriate for size, depth, and location of joint. Comply with requirements in Section 079200 "Joint Sealants."
 - b. Seal space outside of sleeves with mortar or grout. Pack sealing material solidly between sleeve and wall so no voids remain. Tool exposed surfaces smooth; protect material while curing.
 - 2. Use pipe sleeves unless penetration arrangement requires rectangular sleeved opening.
 - 3. Size pipe sleeves to provide 1/4-inch (6.4-mm) annular clear space between sleeve and raceway or cable unless sleeve seal is to be installed or unless seismic criteria require different clearance.
 - 4. Install sleeves for wall penetrations unless core-drilled holes or formed openings are used. Install sleeves during erection of walls. Cut sleeves to length for mounting flush with both surfaces of walls. Deburr after cutting.
 - 5. Install sleeves for floor penetrations. Extend sleeves installed in floors 4 inches above finished floor level. Install sleeves during erection of floors.
- D. Sleeves for Conduits Penetrating Non-Fire-Rated Gypsum Board Assemblies:
 - 1. Use circular metal sleeves unless penetration arrangement requires rectangular sleeved opening.
 - 2. Seal space outside of sleeves with approved joint compound for gypsum board assemblies.
- E. Roof-Penetration Sleeves: Seal penetration of individual raceways and cables with flexible boot-type flashing units applied in coordination with roofing work.
- F. Aboveground, Exterior-Wall Penetrations: Seal penetrations using cast-iron pipe sleeves and mechanical sleeve seals. Select sleeve size to allow for 1-inch (25-mm) annular clear space between pipe and sleeve for installing mechanical sleeve seals.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- G. Underground, Exterior-Wall and Floor Penetrations: Install cast-iron pipe sleeves. Size sleeves to allow for 1-inch (25-mm) annular clear space between raceway or cable and sleeve for installing sleeve-seal system.

1.2 SLEEVE-SEAL FOR FIRE RATED ELECTRICAL PENETRATIONS

- A. Fire-Rated Assemblies for Low Voltage Penetrations (Communications, etc.): Install listed firestop system from one of the acceptable manufacturer products listed below during construction of floor or wall at each point where communications cabling, cable tray, conduit, sleeves, etc., penetrate a fire-rated assembly. The acceptable manufacturers of firestop systems are:
 - 1. STI EZ-Path

3.2 SLEEVE-SEAL-SYSTEM INSTALLATION

- A. Install sleeve-seal systems in sleeves in exterior concrete walls and slabs-on-grade at raceway entries into building.
- B. Install type and number of sealing elements recommended by manufacturer for raceway or cable material and size. Position raceway or cable in center of sleeve. Assemble mechanical sleeve seals and install in annular space between raceway or cable and sleeve. Tighten bolts against pressure plates that cause sealing elements to expand and make watertight seal.

3.3 SLEEVE-SEAL-FITTING INSTALLATION

- A. Install sleeve-seal fittings in new walls and slabs as they are constructed.
- B. Assemble fitting components of length to be flush with both surfaces of concrete slabs and walls. Position waterstop flange to be centered in concrete slab or wall.
- C. Secure nailing flanges to concrete forms.
- D. Using grout, seal the space around outside of sleeve-seal fittings.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 26 05 48
SEISMIC CONTROLS FOR ELECTRICAL SYSTEMS**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Restraint channel bracings.
 - 2. Restraint cables.
 - 3. Seismic-restraint accessories.
 - 4. Mechanical anchor bolts.
 - 5. Adhesive anchor bolts.
- B. Related Requirements:
 - 1. Section 26 05 29 "Hangers and Supports for Electrical Systems" for commonly used electrical supports and installation requirements.

1.3 ACTION SUBMITTALS

- A. Product Data: For each type of product.
 - 1. Illustrate and indicate style, material, strength, fastening provision, and finish for each type and size of seismic-restraint component used.
 - a. Tabulate types and sizes of seismic restraints, complete with report numbers and rated strength in tension and shear as evaluated by an evaluation service member of ICC-ES.
 - b. Annotate to indicate application of each product submitted and compliance with requirements.
- B. Delegated-Design Submittal: For each seismic-restraint device.
 - 1. Include design calculations and details for selecting seismic restraints complying with performance requirements, design criteria, and analysis data signed and sealed by the qualified professional or structural engineer responsible for their preparation.
 - 2. Design Calculations: Calculate static and dynamic loading caused by equipment weight, operation, and seismic forces required to select seismic restraints and for designing vibration isolation bases.
 - a. Coordinate design calculations with wind load calculations required for equipment mounted outdoors. Comply with requirements in other Sections for equipment mounted outdoors.
 - 3. Seismic-Restraint Details:
 - a. Design Analysis: To support selection and arrangement of seismic restraints. Include calculations of combined tensile and shear loads.
 - b. Details: Indicate fabrication and arrangement. Detail attachments of restraints to the restrained items and to the structure. Show attachment locations, methods, and spacings. Identify components, list their strengths, and indicate directions and

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

values of forces transmitted to the structure during seismic events. Indicate association with vibration isolation devices.

- c. Coordinate seismic-restraint and vibration isolation details with wind-restraint details required for equipment mounted outdoors. Comply with requirements in other Sections for equipment mounted outdoors.
- d. Preapproval and Evaluation Documentation: By an evaluation service member of ICC-ES, showing maximum ratings of restraint items and the basis for approval (tests or calculations).

1.4 INFORMATIONAL SUBMITTALS

- A. Coordination Drawings: Show coordination of seismic bracing for electrical components with other systems and equipment in the vicinity, including other supports and seismic restraints.
- B. Qualification Data: For professional or structural engineer.
- C. Welding certificates.
- D. Field quality-control reports.

1.5 CLOSEOUT SUBMITTALS

- A. Observation Report signed by the professional or structural engineer responsible for the design calculations and details for the seismic restraint devices indicating that all restraints have been installed and tested per the approved action submittal documents.

1.6 QUALITY ASSURANCE

- A. Comply with seismic-restraint requirements in the IBC unless requirements in this Section are more stringent.
- B. Welding Qualifications: Qualify procedures and personnel according to AWS D1.1/D1.1M, "Structural Welding Code - Steel."
- C. Seismic-restraint devices shall have horizontal and vertical load testing and analysis. They shall bear anchorage preapproval, showing maximum seismic-restraint ratings, by ICC-ES or another agency acceptable to authorities having jurisdiction. Ratings based on independent testing are preferred to ratings based on calculations. If preapproved ratings are not available, submittals based on independent testing are preferred. Calculations (including combining shear and tensile loads) that support seismic-restraint designs must be signed and sealed by a qualified professional engineer.
- D. Comply with NFPA 70.

PART 2 - PRODUCTS

2.1 PERFORMANCE REQUIREMENTS

- A. Seismic-Restraint Loading: Refer to Structural criteria for the project.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2.2 RESTRAINT CHANNEL BRACINGS

- A. Description: MFMA-4, shop- or field-fabricated bracing assembly made of slotted steel channels with accessories for attachment to braced component at one end and to building structure at the other end, with other matching components, and with corrosion-resistant coating; rated in tension, compression, and torsion forces.

2.3 RESTRAINT CABLES

- A. Restraint Cables: ASTM A 492 stainless-steel cables. End connections made of steel assemblies with thimbles, brackets, swivel, and bolts designed for restraining cable service; with a minimum of two clamping bolts for cable engagement.

2.4 SEISMIC-RESTRAINT ACCESSORIES

- A. Hanger-Rod Stiffener: Steel tube or steel slotted-support-system sleeve with internally bolted connections to hanger rod.
- B. Hinged and Swivel Brace Attachments: Multifunctional steel connectors for attaching hangers to rigid channel bracings and restraint cables.
- C. Bushings for Floor-Mounted Equipment Anchor Bolts: Neoprene bushings designed for rigid equipment mountings and matched to type and size of anchor bolts and studs.
- D. Bushing Assemblies for Wall-Mounted Equipment Anchorage: Assemblies of neoprene elements and steel sleeves designed for rigid equipment mountings and matched to type and size of attachment devices used.
- E. Resilient Isolation Washers and Bushings: One-piece, molded, oil- and water-resistant neoprene, with a flat washer face.

2.5 MECHANICAL ANCHOR BOLTS

- A. Mechanical Anchor Bolts: Drilled-in and stud-wedge or female-wedge type in zinc-coated steel for interior applications and stainless steel for exterior applications. Select anchor bolts with strength required for anchor and as tested according to ASTM E 488.

2.6 ADHESIVE ANCHOR BOLTS

- A. Adhesive Anchor Bolts: Drilled-in and capsule anchor system containing PVC or urethane methacrylate-based resin and accelerator, or injected polymer or hybrid mortar adhesive. Provide anchor bolts and hardware with zinc-coated steel for interior applications and stainless steel for exterior applications. Select anchor bolts with strength required for anchor and as tested according to ASTM E 488.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine areas and equipment to receive vibration isolation and seismic-control devices for compliance with requirements for installation tolerances and other conditions affecting performance of the Work.
- B. Examine roughing-in for reinforcement and cast-in-place anchors to verify actual locations before installation.
- C. Proceed with installation only after unsatisfactory conditions have been corrected.

3.2 APPLICATIONS

- A. Multiple Raceways or Cables: Secure raceways and cables to trapeze member with clamps approved for application by an evaluation service member of ICC-ES.
- B. Hanger-Rod Stiffeners: Install hanger-rod stiffeners where indicated or scheduled on Drawings to receive them and where required to prevent buckling of hanger rods caused by seismic forces.
- C. Strength of Support and Seismic-Restraint Assemblies: Where not indicated, select sizes of components so strength will be adequate to carry present and future static and seismic loads within specified loading limits.

3.3 SEISMIC-RESTRAINT DEVICE INSTALLATION

- A. Coordinate the location of embedded connection hardware with supported equipment attachment and mounting points and with requirements for concrete reinforcement and formwork specified in Section 03 30 00 "Cast-in-Place Concrete" and Section 03 30 53 "Miscellaneous Cast-in-Place Concrete."
- B. Equipment and Hanger Restraints:
 - 1. Install resilient, bolt-isolation washers on equipment anchor bolts where clearance between anchor and adjacent surface exceeds 0.125 inch (3.2 mm).
 - 2. Install seismic-restraint devices using methods approved by an evaluation service member of ICC-ES providing required submittals for component.
- C. Install cables so they do not bend across edges of adjacent equipment or building structure.
- D. Install bushing assemblies for mounting bolts for wall-mounted equipment, arranged to provide resilient media where equipment or equipment-mounting channels are attached to wall.
- E. Attachment to Structure: If specific attachment is not indicated, anchor bracing to structure at flanges of beams, at upper truss chords of bar joists, or at concrete members.
- F. Drilled-in Anchors:
 - 1. Identify position of reinforcing steel and other embedded items prior to drilling holes for anchors. Do not damage existing reinforcing or embedded items during coring or drilling. Notify the structural engineer if reinforcing steel or other embedded items are encountered during drilling. Locate and avoid prestressed tendons, electrical and telecommunications conduit, and gas lines.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2. Do not drill holes in concrete or masonry until concrete, mortar, or grout has achieved full design strength.
3. Wedge Anchors: Protect threads from damage during anchor installation. Heavy-duty sleeve anchors shall be installed with sleeve fully engaged in the structural element to which anchor is to be fastened.
4. Adhesive Anchors: Clean holes to remove loose material and drilling dust prior to installation of adhesive. Place adhesive in holes proceeding from the bottom of the hole and progressing toward the surface in such a manner as to avoid introduction of air pockets in the adhesive.
5. Set anchors to manufacturer's recommended torque using a torque wrench.
6. Install zinc-coated steel anchors for interior and stainless-steel anchors for exterior applications.

3.4 ACCOMMODATION OF DIFFERENTIAL SEISMIC MOTION

- A. Install flexible connections in runs of raceways, cables, wireways, cable trays, and busways where they cross seismic joints, where adjacent sections or branches are supported by different structural elements, and where connection is terminated to equipment that is anchored to a different structural element from the one supporting them as they approach equipment.

3.5 FIELD QUALITY CONTROL

- A. Perform the following tests and inspections:
 1. Provide evidence of recent calibration of test equipment by a testing agency acceptable to authorities having jurisdiction.
 2. Schedule test with Owner, through Architect, before connecting anchorage device to restrained component (unless postconnection testing has been approved), and with at least seven days' advance notice.
 3. Obtain Architect's approval before transmitting test loads to structure. Provide temporary load-spreading members.
 4. Test at least four of each type and size of installed anchors and fasteners selected by Architect.
 5. Test to 90 percent of rated proof load of device.
- B. Seismic controls will be considered defective if they do not pass tests and inspections.
- C. Prepare test and inspection reports.

3.6 ADJUSTING

- A. Adjust restraints to permit free movement of equipment within normal mode of operation.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 26 05 53
IDENTIFICATION FOR ELECTRICAL SYSTEMS**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Identification for raceways.
 - 2. Identification of power and control cables.
 - 3. Identification for conductors.
 - 4. Underground-line warning tape.
 - 5. Warning labels and signs.
 - 6. Instruction signs.
 - 7. Equipment identification labels, including arc-flash warning labels.
 - 8. Miscellaneous identification products.

1.3 ACTION SUBMITTALS

- A. Product Data: For each type of product.
 - 1. Include construction details, material descriptions, dimensions of individual components and profiles, and finishes for electrical identification products.
- B. Samples: For each type of label and sign to illustrate composition, size, colors, lettering style, mounting provisions, and graphic features of identification products.
- C. Identification Schedule: For each piece of electrical equipment and electrical system components to be an index of nomenclature for electrical equipment and system components used in identification signs and labels. Use same designations indicated on Drawings.
- D. Delegated-Design Submittal: For arc-flash hazard study.

PART 2 - PRODUCTS

2.1 PERFORMANCE REQUIREMENTS

- A. Comply with ASME A13.1 and IEEE C2.
- B. Comply with NFPA 70.
- C. Comply with 29 CFR 1910.144 and 29 CFR 1910.145.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- D. Comply with ANSI Z535.4 for safety signs and labels.
- E. Adhesive-attached labeling materials, including label stocks, laminating adhesives, and inks used by label printers, shall comply with UL 969.
- F. Thermal Movements: Allow for thermal movements from ambient and surface temperature changes.
 - 1. Temperature Change: 120 deg F (67 deg C), ambient; 180 deg F (100 deg C), material surfaces.

2.2 COLOR AND LEGEND REQUIREMENTS

- A. Use the following color code for all electrical equipment and junction boxes that are specified to be labeled:
 - 1. Standby Power Circuits: Black letters on red field.
 - 2. Life Safety Branch Circuits: White letters on orange Field
 - 3. Critical Branch Circuits: White letters on red Field
 - 4. Equipment System Circuits: White letters on green field.
 - 5. Normal Power Circuits: White letters on black field.
 - 6. Uninterruptible Power Supply (UPS):
 - a. UPS-A: Blue letters on a grey field.
 - b. UPS-B: Red letters on a grey field.
 - 7. Fire Alarm: Red letters on white field.
 - 8. Communications: White letters on blue field.
- B. Warning labels and signs shall include, but are not limited to, the following legends:
 - 1. Multiple Power Source Warning: "DANGER - ELECTRICAL SHOCK HAZARD - EQUIPMENT HAS MULTIPLE POWER SOURCES."
 - 2. Workspace Clearance Warning: "WARNING - OSHA REGULATION - AREA IN FRONT OF ELECTRICAL EQUIPMENT MUST BE KEPT CLEAR FOR XX INCHES" where XX is replaced by the clearance requirements of NFPA 70.
- C. Use the following color code for all electrical raceways that are specified to be labeled:
 - 1. Color Coding for Raceways:
 - a. Standby Power: Black
 - b. Life Safety Branch: Yellow
 - c. Critical Branch: Orange
 - d. Equipment Branch: Green
 - e. UPS: White
 - f. Fire alarm: Red
 - g. Communications: Blue
 - h. Access Control: Purple
 - 2. Vinyl Labels for Raceways Carrying Circuits at 600 V or Less: where voltage, system type, or other written information is required, black lettering on orange background.
- D. Labels on receptacle and switch cover plates shall match the respective plate color.

2.3 LABELS

- A. Vinyl Labels for Raceways Carrying Circuits at 600 V or Less: printed, flexible labels laminated with a clear, weather- and chemical-resistant coating and matching wraparound clear adhesive tape for securing label ends.

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

- B. Indoor Equipment Labels: Self-adhesive, engraved, laminated acrylic or melamine plastic label. Unless otherwise indicated, provide a single line of text with **1/2-inch- (13-mm-)** high letters on **1-1/2-inch- (38-mm-)** high label; where two lines of text are required, use labels **2 inches (50 mm)** high. Color coded as indicated in Color and Legend Requirements.
- C. Outdoor Equipment: Engraved, laminated acrylic or melamine plastic label, punched or drilled for mechanical fasteners. Unless otherwise indicated, provide a single line of text with **1/2-inch- (13-mm-)** high letters on **1-1/2-inch- (38-mm-)** high label; where two lines of text are required, use labels **2 inches (50 mm)** high. Color coded as indicated in Color and Legend Requirements.

2.4 BANDS AND TUBES:

- A. Snap-Around, Color-Coding Bands for Cables: Slit, pretensioned, flexible, solid-colored acrylic sleeves, **2 inches (50 mm)** long, with diameters sized to suit diameters of raceways or cables they identify, and that stay in place by gripping action.

2.5 TAPES AND STENCILS:

- A. Marker Tapes: Vinyl or vinyl-cloth, self-adhesive wraparound type, with circuit identification legend machine printed by thermal transfer or equivalent process.

2.6 SIGNS

- A. Laminated Acrylic or Melamine Plastic Signs:
 - 1. Engraved legend.
 - 2. Thickness:
 - a. For signs up to **20 sq. inches (129 sq. cm)**, minimum **1/16-inch- (1.6-mm-)**.
 - b. For signs larger than **20 sq. inches (129 sq. cm)**, **1/8 inch (3.2 mm)** thick.
 - c. Engraved legend with white letters on a dark grey background.
 - d. Punched or drilled for mechanical fasteners.
 - e. Framed with mitered acrylic molding and arranged for attachment at applicable equipment.

2.7 MISCELLANEOUS IDENTIFICATION PRODUCTS

- A. Paint: Comply with requirements in painting Sections for paint materials and application requirements. Retain paint system applicable for surface material and location (exterior or interior).
- B. Fasteners for Labels and Signs: Self-tapping, stainless-steel screws or stainless-steel machine screws with nuts and flat and lock washers.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

PART 3 - EXECUTION

3.1 PREPARATION

- A. Self-Adhesive Identification Products: Before applying electrical identification products, clean substrates of substances that could impair bond, using materials and methods recommended by manufacturer of identification product.

3.2 INSTALLATION

- A. Verify and coordinate identification names, abbreviations, colors, and other features with requirements in other Sections requiring identification applications, Drawings, Shop Drawings, manufacturer's wiring diagrams, and operation and maintenance manual. Use consistent designations throughout Project.
- B. Install identifying devices before installing acoustical ceilings and similar concealment.
- C. Verify identity of each item before installing identification products.
- D. Install identification materials and devices at locations for most convenient viewing without interference with operation and maintenance of equipment. Install access doors or panels to provide view of identifying devices.
- E. Apply identification devices to surfaces that require finish after completing finish work.
- F. Attach signs and plastic labels that are not self-adhesive type with mechanical fasteners appropriate to the location and substrate.
- G. Attach plastic raceway and cable labels that are not self-adhesive type with clear vinyl tape, with adhesive appropriate to the location and substrate.
- H. System Identification for Feeder Raceways: Each color-coding band shall completely encircle cable or conduit. Place adjacent bands of two-color markings in contact, side by side. Locate bands at changes in direction, at penetrations of walls and floors, at **50-foot (15-m)** maximum intervals in straight runs, and at **25-foot (7.6-m)** maximum intervals in congested areas.
- I. Fire Alarm: Provide raceway with factory applied finish or paint conduit in field.
- J. During backfilling of trenches, install continuous underground-line warning tape directly above cable or raceway at **6 to 8 inches (150 to 200 mm)** below finished grade. Use multiple tapes where width of multiple lines installed in a common trench or concrete envelope exceeds **16 inches (400 mm)** overall.

3.3 IDENTIFICATION SCHEDULE

- A. Switchboards and Panelboards: Include Identification per the One-Line Diagrams and the Source Location, including the circuit number.
- B. Disconnect Switches, Enclosed Circuits Breakers and Motor Controllers. Identify the equipment that is controlled and the Source, including the circuit number.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- C. Accessible Raceways, including above accessible ceilings, for all Feeder Circuits and for Branch Circuit rated more than 30A: Identify with self-adhesive tape or vinyl label. Install labels at **30-foot (10-m)** maximum intervals.
- D. Accessible Raceways and Cables, including above accessible ceilings, within Buildings: Identify the covers of each junction and pull box of the following systems with self-adhesive vinyl labels indicating the wiring system and system voltage. Conform to system color legend/schedule.
 - 1. Standby Power
 - 2. Life Safety Branch
 - 3. Critical Branch
 - 4. Equipment System
 - 5. Normal Power
 - 6. UPS
 - 7. Fire Alarm
 - 8. Communications
 - 9. Access Control
- E. Power-Circuit Conductor Identification, 600 V or Less: For conductors in vaults, pull and junction boxes, manholes, and handholes, use color-coding conductor tape to identify the phase.
 - 1. Grounded Systems: Color-Coding for Phase-, Neutral- and Voltage-Level Identification: Use colors listed below for feeder and branch-circuit conductors.
 - a. Colors for 208/120-V Circuits:
 - 1) Phase A: Black.
 - 2) Phase B: Red.
 - 3) Phase C: Blue.
 - 4) Feeder Neutral: White
 - 5) Branch Circuit Neutral: White with colored stripe matching the color of the phase circuit that is paired with the neutral.
 - b. Colors for 480/277-V Circuits:
 - 1) Phase A: Brown.
 - 2) Phase B: Orange.
 - 3) Phase C: Yellow.
 - 4) Feeder Neutral: Grey
 - 5) Branch Circuit Neutral: Grey with colored stripe matching the color of the phase circuit that is paired with the neutral.
 - 2. Isolated Power Systems: Color-Coding for Circuit Identification: Use colors listed below for Isolated Power conductors.
 - a. Isolated Conductor No.1: Orange with at least one distinctive colored stripe other than white, green, or grey along the entire length of the conductor.
 - b. Isolated Conductor No. 2: Brown with at least one distinctive colored stripe other than white, green, or grey along the entire length of the conductor.
 - 3. Color shall be factory applied or field applied for sizes larger than No. 8 AWG if authorities having jurisdiction permit.
 - a. Field-Applied, Color-Coding Conductor Tape: Apply in half-lapped turns for a minimum distance of **6 inches (150 mm)** from terminal points and in boxes where splices or taps are made. Apply last two turns of tape with no tension to prevent possible unwinding. Locate bands to avoid obscuring factory cable markings.
 - 4. Provide a sign at each panelboard identifying the color coding scheme.
- F. Install instructional sign, including the color code for grounded and ungrounded conductors using adhesive-film-type labels.
- G. Control-Circuit Conductor Identification: For conductors and cables in pull and junction boxes, manholes, and handholes, use self-adhesive vinyl labels with the conductor or cable designation, origin, and destination.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- H. Control-Circuit Conductor Termination Identification: For identification at terminations, provide self-adhesive vinyl labels with the conductor designation.
- I. Conductors To Be Extended in the Future: Attach write-on tags to conductors and list source.
- J. Auxiliary Electrical Systems Conductor Identification: Identify field-installed alarm, control, and signal connections.
 - 1. Identify conductors, cables, and terminals in enclosures and at junctions, terminals, and pull points. Identify by system and circuit designation.
 - 2. Use system of marker-tape designations that is uniform and consistent with system used by manufacturer for factory-installed connections.
 - 3. Coordinate identification with Project Drawings, manufacturer's wiring diagrams, and operation and maintenance manual.
- K. Locations of Underground Lines: Identify with underground-line warning tape for power, lighting, communication, and control wiring and optical-fiber cable.
 - 1. Limit use of underground-line warning tape to direct-buried cables.
 - 2. Install underground-line warning tape for direct-buried cables and cables in raceways.
- L. Workspace Indication: Install floor marking tape to show working clearances in the direction of access to live parts. Workspace shall comply with NFPA 70 and 29 CFR 1926.403 unless otherwise indicated. Do not install at flush-mounted panelboards and similar equipment in finished spaces.
- M. Warning Labels for Indoor Cabinets, Boxes, and Enclosures for Power and Lighting: Self-adhesive warning labels.
 - 1. Comply with 29 CFR 1910.145.
 - 2. Identify system voltage with black letters on an orange background.
 - 3. Apply to exterior of door, cover, or other access.
 - 4. For equipment with multiple power or control sources, apply to door or cover of equipment, including, but not limited to, the following:
 - a. Power-transfer switches.
 - b. Controls with external control power connections.
- N. Arc Flash Warning Labeling: Self-adhesive thermal transfer vinyl labels.
 - 1. Comply with NFPA 70E and ANSI Z535.4.
 - 2. Comply with Section 26 05 74 "Overcurrent Protective Device Arc-Flash Study" requirements for arc-flash warning labels.
- O. Operating Instruction Signs: Install instruction signs to facilitate proper operation and maintenance of electrical systems and items to which they connect. Install instruction signs with approved legend where instructions are needed for system or equipment operation.
- P. Emergency Operating Instruction Signs: Install instruction signs with white legend on a red background with minimum ~~3/8-inch~~ (10-mm) high letters for emergency instructions at equipment used for power transfer or load shedding.
- Q. Equipment Identification Labels: On each unit of equipment, install unique designation label that is consistent with wiring diagrams, schedules, and operation and maintenance manual. Apply labels to disconnect switches and protection equipment, central or master units, control panels, control stations, terminal cabinets, and racks of each system. Systems include power, lighting, control, communication, signal, monitoring, and alarm unless equipment is provided with its own identification.
 - 1. Labeling Instructions:

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- a. Elevated Components: Increase sizes of labels and letters to those appropriate for viewing from the floor.
- b. Fasten mechanically fastened labels with appropriate mechanical fasteners that do not change the NEMA or NRTL rating of the enclosure.
- 2. Equipment To Be Labeled:
 - a. Panelboards: Typewritten directory of circuits in the location provided by panelboard manufacturer.
 - b. Enclosures and electrical cabinets.
 - c. Lighting control relay cabinets.
 - d. Access doors and panels for concealed electrical items.
 - e. Switchgear.
 - f. Switchboards.
 - g. Transformers: Label that includes tag designation shown on Drawings for the transformer, feeder, and panelboards or equipment supplied by the secondary.
 - h. Emergency system boxes and enclosures.
 - i. Motor-control centers.
 - j. Enclosed switches.
 - k. Enclosed circuit breakers.
 - l. Enclosed controllers.
 - m. Variable-speed controllers.
 - n. Push-button stations.
 - o. Power-transfer equipment.
 - p. Contactors.
 - q. Remote-controlled switches, dimmer modules, and control devices.
 - r. Battery-inverter units.
 - s. Battery racks.
 - t. Power-generating units.
 - u. Monitoring and control equipment.
 - v. UPS equipment.
 - w. Communications Equipment Racks.
 - x. Fire Alarm System.
 - y. Access Control System.
 - z. Overhead Paging System.
 - aa. Nurse Call System.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 26 09 23
LIGHTING CONTROL DEVICES**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Photoelectric switches.
 - 2. Standalone daylight-harvesting switching controls.
 - 3. Daylight-harvesting dimming controls.
 - 4. Room Controllers.
 - 5. Stand Alone Indoor occupancy sensors.
 - 6. Lighting contactors.
 - 7. Emergency shunt relays.
 - 8. Low-Voltage Controllers
- B. Related Requirements:
 - 1. Section 26 27 26 "Wiring Devices" for wall-box dimmers, wall-switch occupancy sensors, low voltage dimmers, low voltage switches, and manual light switches.

1.3 ACTION SUBMITTALS

- A. Product Data: For each type of product.
- B. Shop Drawings: Show installation details for occupancy and light-level sensors.
 - 1. Submit complete scale drawing showing recommended location for each sensor, optimized for project conditions and coverage patterns for submitted devices.
 - 2. Interconnection diagrams showing field-installed wiring.
 - 3. Include diagrams for power, signal, and control wiring.
 - 4. Include legend for each light switch keyed to the lighting control shop drawings indicating engraving/labelling factory applied to each switch.

1.4 INFORMATIONAL SUBMITTALS

- A. Field quality-control reports.

1.5 CLOSEOUT SUBMITTALS

- A. Operation and Maintenance Data: For each type of lighting control device to include in emergency, operation, and maintenance manuals.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

PART 2 - PRODUCTS

2.1 OUTDOOR PHOTOELECTRIC SWITCHES

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
1. Cooper Industries, Inc.
 2. Intermatic, Inc.
 3. Leviton Manufacturing Co., Inc.
 4. NSi Industries LLC.
 5. TE Connectivity Ltd.
- B. Description: Solid state, with SPST dry contacts rated for 1800 VA, to operate connected load, complying with UL 773.
1. Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.
 2. Light-Level Monitoring Range: 1.5 to 10 fc (16.14 to 108 lux), with an adjustment for turn-on and turn-off levels within that range.
 3. Time Delay: Thirty-second minimum, to prevent false operation.
 4. Lightning Arrester: Air-gap type.
 5. Mounting: Twist lock complying with NEMA C136.10, with base.

2.2 DAYLIGHT-HARVESTING SWITCHING CONTROLS

- A. Provide products that are of the same manufacturer or compatible with the manufacturers listed in Section 26 09 43, Relay Based Lighting Controls.
- B. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
1. Eaton (Cooper Controls), Inc.
 2. Lutron, Inc.
 3. Leviton Manufacturing Co., Inc.
 4. Philips Controls
 5. Acuity Controls
 6. Nextlite
 7. ETC
 8. Douglas Controls
 9. WattStopper
- C. Ceiling-Mounted Switching Controls: Solid-state, light-level sensor unit, with separate power pack, to detect changes in indoor lighting levels that are perceived by the eye.
- D. Electrical Components, Devices, and Accessories:
1. Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.
 2. Operating Ambient Conditions: Dry interior conditions, 32 to 120 deg F (0 to 49 deg C).
 3. Sensor Output: Contacts rated to operate the associated power pack, complying with UL 773A. Sensor is powered by the power pack.
 4. Power Pack: Dry contacts rated for 20-A ballast load at 120- and 277-V ac. Sensor has 24-V dc, 150-mA, Class 2 power source, as defined by NFPA 70.
 5. General Space Sensors Light-Level Monitoring Range: 10 to 200 fc (108 to 2152 lux), with an adjustment for turn-on and turn-off levels within that range.

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

6. Atrium Space Sensors Light-Level Monitoring Range: 100 to 1000 fc (1080 to 10 800 lux), with an adjustment for turn-on and turn-off levels within that range.
7. Skylight Sensors Light-Level Monitoring Range: 1000 to 10,000 fc (10 800 to 108 000 lux), with an adjustment for turn-on and turn-off levels within that range.
8. Time Delay: Adjustable from 5 to 300 seconds to prevent cycling.
9. Set-Point Adjustment: Equip with deadband adjustment of 25, 50, and 75 percent above the "on" set point, or provide with separate adjustable "on" and "off" set points.
10. Test Mode: User selectable, overriding programmed time delay to allow settings check.
11. Control Load Status: User selectable to confirm that load wiring is correct.
12. Indicator: Two digital displays to indicate the beginning of on-off cycles.

2.3 DAYLIGHT-HARVESTING DIMMING CONTROLS

- A. Provide products that are of the same manufacturer or compatible with the manufacturers listed in Section 26 09 43, Relay Based Lighting Controls.
- B. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 1. Eaton (Cooper Controls), Inc.
 2. Lutron, Inc.
 3. Leviton Manufacturing Co., Inc.
 4. Philips Controls
 5. Acuity Controls
 6. NextLite
 7. Douglas Controls
 8. ETC
 9. WattStopper
- C. System Description: Sensing daylight and electrical lighting levels, the system adjusts the indoor electrical lighting levels. As daylight increases, the lights are dimmed.
 1. Lighting control set point is based on two lighting conditions:
 - a. When no daylight is present (target level).
 - b. When significant daylight is present.
 2. System programming is done with two hand-held, remote-control tools.
 - a. Initial setup tool.
 - b. Tool for occupants to adjust the target levels by increasing the set point up to 25 percent, or by minimizing the electric lighting level.
- D. Ceiling-Mounted Dimming Controls: Solid-state, light-level sensor unit, with separate controller unit, to detect changes in lighting levels that are perceived by the eye. The separate dimming control may be located in the appropriate relay cabinet for these circuits.
 1. Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.
 2. Sensor Output: 0- to 10-V dc to operate electronic dimming ballasts. Sensor is powered by controller unit.
 3. Power Pack: Sensor has 24-V dc, Class 2 power source, as defined by NFPA 70.
 4. Light-Level Sensor Set-Point Adjustment Range: 20 to 100 fc (120 to 600 lux).

2.4 ROOM CONTROLLERS

- A. Room Controllers are used to independently control lighting and switched receptacles.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- B. Provide products that are compatible with Indoor Occupancy Sensors.
- C. Digitally addressable room controller with the following functions.
 - 1. Autonomous space control.
 - 2. Networking to a central Dialog control system.
 - 3. Networking to a central BACnet based management system.
- D. The Room Controller shall consist of:
 - 1. A universal voltage type (120Vac/277Vac/347Vac) power supply.
 - 2. Four 20A rated relays complete with manual override. Circuit Load rating dependent on usage. One circuit dedicated for 20A receptacle control.
 - 3. Four 0-10V control channels, capable of 100mA current sinking
 - 4. A port to connect downstream switches, occupancy sensors and daylight sensors.
 - 5. A port to connect upstream to BACnet IP building management system. The Controller shall communicate using native BACnet command objects appropriate for the application.
 - 6. An indicating LED to aid in locating the controller in a darkened ceiling space.
 - 7. Circuit testing buttons
 - 8. Capable of connecting with WUL-3924
 - 9. Output 24Vac 120mA
 - 10. Relay Ratings
 - a. 20A Suitable for General Purpose Loads @ 120/277 VAC
 - b. 20A Suitable for Standard Ballasts and Tungsten Loads @ 120/277 VAC
 - c. 16A Suitable for Electronic Ballasts @ 120/277 VAC
 - d. 0.5HP @120/277 VAC.
 - 11. The Room Controller relays shall be connected such that 120Vac plug load(s) and 277Vac lighting loads can be switched by a single Controller with no additional add-ons or remote modules
 - 12. The Room Controller shall mount to electrical junction box via threaded ½" chase nipple. No other mounting hardware shall be required.
 - 13. Switches shall connect to the lighting control network via a common low voltage, 2-wire, non-polarized data line.
 - a. Switches shall be factory configured and programmed to control one or more outputs in the lighting control system.
 - b. Switches can be programmed for preset control to set a specific lighting scene.
 - c. Switches, with LED indicators to indicate both ON and OFF output/group status, shall be available with 2 or 4 single button switches per gang. Switch to fit standard Decora opening.
 - d. Switches and switch hardware shall mount to standard wall boxes.
 - e. Each switch shall provide a location for a label to identify function. The label shall be under a clear plastic cover and shall be field replaceable should the operation of the switch change. Permanently etched switches are not acceptable.
 - 14. Dimmer switches shall be connected to the lighting control network via a common low voltage 2-wire, non-polarized data line.
 - a. Dimmer switches shall be capable of raising or lowering light levels of individual or groups of lighting fixtures.
 - b. Dimmer switches shall be capable of controlling across the full range of dimming settings within a period of three (3) seconds.
 - 15. Space Control Requirements:
 - a. Provide manual-on / auto-off control for lighting in all spaces that are controlled by a Room Controller.
 - b. Provide auto-on / auto-off control for all switched receptacles that are controlled by a Room Controller.
 - c. Provide auto-on / auto-off control for HVAC serving all spaces that contain a Room Controller. Control to be provided by either two-wire signal based on relay contact position or direct communication with the building management system

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- using BACnet commands. Coordinate with building management system installer.
16. Shall have a built in dimmer memory, the light output will remain at the previous setting when the lights are turned off and back on.

2.5 INDOOR OCCUPANCY SENSORS

- A. Provide products that are of the same manufacturer or compatible with the manufacturers listed in Section 26 09 43, Relay Based Lighting Controls.
- B. General Requirements for Sensors: Wall- or ceiling-mounted, solid-state indoor occupancy sensors with a separate power pack.
1. Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.
 2. Operation: Unless otherwise indicated, turn lights on when coverage area is occupied, and turn them off when unoccupied; with a time delay for turning lights off, adjustable over a minimum range of 1 to 15 minutes.
 3. In locations where the sensor or the local switch is/are marked "VS" the sensor shall turn the lights off automatically upon room vacancy. The lights shall turn on only upon activation from the associated wall station.
 4. Sensor Output: Contacts rated to operate the connected relay, complying with UL 773A. Sensor is powered from the power pack.
 5. Power Pack: Dry contacts rated for 20-A ballast load at 120- and 277-V ac, for 13-A tungsten at 120-V ac, and for 1 hp at 120-V ac. Sensor has 24-V dc, 150-mA, Class 2 power source, as defined by NFPA 70.
 6. Mounting:
 - a. Sensor: Suitable for mounting in any position on a standard outlet box.
 - b. Relay: Externally mounted through a **1/2-inch (13-mm)** knockout in a standard electrical enclosure.
 - c. Time-Delay and Sensitivity Adjustments: Recessed and concealed behind hinged door.
 7. Indicator: Digital display, to show when motion is detected during testing and normal operation of sensor.
 8. Bypass Switch: Override the "on" function in case of sensor failure.
 9. Automatic Light-Level Sensor: Adjustable from **2 to 200 fc (21.5 to 2152 lux)**; turn lights off when selected lighting level is present.
- C. Dual-Technology Type: Ceiling mounted; detect occupants in coverage area using both PIR and ultrasonic detection methods. The particular technology or combination of technologies that control on-off functions is selectable in the field by operating controls on unit.
1. Sensitivity Adjustment: Separate for each sensing technology.
 2. Detector Sensitivity: Detect occurrences of **6-inch- (150-mm-)** minimum movement of any portion of a human body that presents a target of not less than **36 sq. in. (232 sq. cm)**, and detect a person of average size and weight moving not less than **12 inches (305 mm)** in either a horizontal or a vertical manner at an approximate speed of **12 inches/s (305 mm/s)**.
 3. Detection Coverage (Standard Room): Detect occupancy anywhere within a circular area of **1000 sq. ft. (93 sq. m)** when mounted on a **96-inch- (2440-mm-)** high ceiling.
 4. Remote powerpacks using one or more sensors shall be used to cover space as indicated on drawings.
 5. Device shall be vacancy sensing (in conjunction with local wall station) if marked "VS". Otherwise device shall be occupancy sensing.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2.6 SWITCHBOX-MOUNTED OCCUPANCY SENSORS

- A. Provide products that are of the same manufacturer or compatible with the manufacturers listed in Section 260943, Relay Based Lighting Controls.
- B. General Requirements for Sensors: Automatic-wall-switch occupancy sensor, suitable for mounting in a single gang switchbox.
 - 1. Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application,
 - 2. Operating Ambient Conditions: Dry interior conditions, **32 to 120 deg F (0 to 49 deg C)**.
 - 3. Switch Rating: Not less than 800-VA LED at 120 V, 1200-VA LED loads at 277 V,
- C. Wall-Switch Sensor:
 - 1. Standard Range: 180-degree field of view, field adjustable from 180 to 40 degrees; with a minimum coverage area of **900 sq. ft. (84 sq. m)**.
 - 2. Sensing Technology: Dual technology - PIR and ultrasonic.
 - 3. Switch Type: SP. SP, manual "on," automatic "off."
 - 4. Voltage: Dual voltage, 120 and 277 V;
 - 5. Ambient-Light Override: Concealed, field-adjustable, light-level sensor from **10 to 150 fc (108 to 1600 lux)**. The switch prevents the lights from turning on when the light level is higher than the set point of the sensor.
 - 6. Concealed, field-adjustable, "off" time-delay selector at up to 30 minutes.
 - 7. Adaptive Technology: Self-adjusting circuitry detects and memorizes usage patterns of the space and helps eliminate false "off" switching.
 - 8. Device shall be Vacancy sensing if marked VS or occupancy sensing if not otherwise marked.

2.7 LIGHTING CONTACTORS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. [Allen-Bradley/Rockwell Automation.](#)
 - 2. [ASCO Power Technologies, LP; a division of Emerson Electric Co.](#)
 - 3. [Eaton Corporation.](#)
 - 4. GE Industrial Systems; Total Lighting Control.
 - 5. [Square D; a brand of Schneider Electric.](#)
- B. Description: Electrically operated, electrically held, combination-type lighting contactors with fusible switch complying with NEMA ICS 2 and UL 508.
 - 1. Current Rating for Switching: Listing or rating consistent with type of load served, including tungsten filament, inductive, and high-inrush ballast (ballast with 15 percent or less total harmonic distortion of normal load current).
 - 2. Fault Current Withstand Rating: Equal to or exceeding the available fault current at the point of installation.
 - 3. Enclosure: Comply with NEMA 250.
 - 4. Provide with control and pilot devices as indicated on Drawings, matching the NEMA type specified for the enclosure.
- C. Interface with DDC System for HVAC: Provide hardware interface to enable the DDC system for HVAC to monitor and control lighting control systems and contactors.
 - 1. Monitoring: On-off status
 - 2. Control: On-off operation

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2.8 EMERGENCY SHUNT RELAY

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
1. Eaton (Cooper Controls), Inc.
 2. Lutron, Inc.
 3. Leviton Manufacturing Co., Inc.
 4. Philips Controls
 5. Acuity Controls
 6. NextLite
 7. Douglas Controls
 8. Wattstopper
- B. Description: Normally closed, electrically held relay, arranged for wiring in parallel with automatic switching contacts; complying with UL 924.
1. Coil Rating: as scheduled.

2.9 LOW-VOLTAGE CONTROLLERS

- A. Low-Voltage Controllers are used to turn on and dim line voltage lighting safely when used with Nurse Call Pillow Speakers, Bed Side-Rail Controls and Momentary Dry Contact Switches.
- B. Manufacturers: Subject to compliance with requirements, provide the following:
1. Curbell Medical Products (Basis of Design is # LVC-2000-001)
- C. Description: 3 Channel lighting controller to continuously dim 2 channels using 0-10 vdc signals to the dimming LED drivers for the ambient light and reading light channels in the luminaire and to switch one channel via the LED driver(s) for the exam light portion of the luminaire. Controller shall have control inputs from nurse call pillow speaker contacts and also be switched from wall switches as shown.
- D. Installation: Lighting Controller shall be installed above the accessible ceiling outside the patient room for ease of access. All leads shall be extended from the switches, luminaire and nurse call system in an approved manner. Installer shall provide a NEMA 12 enclosure suitable for the purpose and mount the controller in this box. Observe required high and low voltage separation and physical barriers. Label the cover with the words "LIGHTING CONTROLLER FOR ROOM #####".

2.10 CONDUCTORS AND CABLES

- A. Power Wiring to Supply Side of Remote-Control Power Sources: Not smaller than No. 12 AWG. Comply with requirements in Section 26 05 19 "Low-Voltage Electrical Power Conductors and Cables."
- B. Classes 2 and 3 Control Cable: Multiconductor cable with stranded-copper conductors not smaller than No. 22 AWG. Comply with requirements in Section 26 05 19 "Low-Voltage Electrical Power Conductors and Cables."
- C. Class 1 Control Cable: Multiconductor cable with stranded-copper conductors not smaller than No. 18 AWG. Comply with requirements in Section 26 05 19 "Low-Voltage Electrical Power Conductors and Cables."

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

PART 3 - EXECUTION

3.1 SENSOR INSTALLATION

- A. Coordinate layout and installation of ceiling-mounted devices with other construction that penetrates ceilings or is supported by them, including light fixtures, HVAC equipment, smoke detectors, fire-suppression systems, and partition assemblies.
- B. Install and aim sensors in locations to achieve not less than 90 percent coverage of areas indicated. Do not exceed coverage limits specified in manufacturer's written instructions.

3.2 CONTACTOR INSTALLATION

- A. Mount electrically held lighting contactors with elastomeric isolator pads to eliminate structure-borne vibration, unless contactors are installed in an enclosure with factory-installed vibration isolators.

3.3 WIRING INSTALLATION

- A. Wiring Method: Comply with Section 260519 "Low-Voltage Electrical Power Conductors and Cables." Minimum conduit size is 1/2 inch (13 mm).
- B. Wiring within Enclosures: Comply with NECA 1. Separate power-limited and nonpower-limited conductors according to conductor manufacturer's written instructions.
- C. Size conductors according to lighting control device manufacturer's written instructions unless otherwise indicated.
- D. Splices, Taps, and Terminations: Make connections only on numbered terminal strips in junction, pull, and outlet boxes; terminal cabinets; and equipment enclosures.

3.4 IDENTIFICATION

- A. Identify components and power and control wiring according to Section 260553 "Identification for Electrical Systems."
 - 1. Identify controlled circuits in lighting contactors.
 - 2. Identify circuits or luminaires controlled by photoelectric and occupancy sensors at each sensor.
- B. Label time switches and contactors with a unique designation.

3.5 FIELD QUALITY CONTROL

- A. Testing Agency: Owner will engage a qualified commissioning agent to evaluate lighting control devices and perform tests and inspections.
- B. Manufacturer's Field Service: Engage a factory-authorized service representative to test and inspect components, assemblies, and equipment installations, including connections.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- C. Perform the following tests and inspections with the assistance of a factory-authorized service representative:
 - 1. Operational Test: After installing time switches and sensors, and after electrical circuitry has been energized, start units to confirm proper unit operation.
 - 2. Test and adjust controls and safeties. Replace damaged and malfunctioning controls and equipment.
- D. Lighting control devices will be considered defective if they do not pass tests and inspections.
- E. Prepare test and inspection reports.

3.6 ADJUSTING

- A. Occupancy Adjustments: When requested within **12** months from date of Substantial Completion, provide on-site assistance in adjusting sensors to suit actual occupied conditions. Provide up to **two** visits to Project during other-than-normal occupancy hours for this purpose.
 - 1. For occupancy and motion sensors, verify operation at outer limits of detector range. Set time delay to suit Owner's operations.
 - 2. For daylighting controls, adjust set points and deadband controls to suit Owner's operations.
 - 3. Align high-bay occupancy sensors using manufacturer's laser aiming tool.

3.7 DEMONSTRATION

- A. Coordinate demonstration of products specified in this Section with demonstration requirements for low-voltage, programmable lighting control systems specified in Section 260943.13 "Addressable-Fixture Lighting Controls" and Section 26 09 43 "Relay-Based Lighting Controls."
- B. Train Owner's maintenance personnel to adjust, operate, and maintain lighting control devices.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 26 09 36
STANDALONE MULTIPRESET MODULAR DIMMING CONTROLS**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Wall-box multiscene dimming controls.
 - 2. Multipreset modular dimming controls.

1.3 DEFINITIONS

- A. Fade Rate: The time it takes each zone to arrive at the next scene, dependent on the degree of change in lighting level.
- B. Low Voltage: As defined in NFPA 70, the term for circuits and equipment operating at less than 50 V or for remote-control, signaling, and power-limited circuits.
- C. Scene: The lighting effect created by adjusting several zones of lighting to the desired intensity.
- D. SCR: Silicon-controlled rectifier.
- E. Zone: A fixture or group of fixtures controlled simultaneously as a single entity. Also known as a "channel."

1.4 ACTION SUBMITTALS

- A. Product Data: For each type of product.
 - 1. For modular dimming controls; include elevation, dimensions, features, characteristics, ratings, and labels.
 - 2. Device plates and plate color and material.
 - 3. Ballasts and lamp combinations compatible with dimmers.
- B. Shop Drawings:
 - 1. Include diagrams for power, signal, and control wiring.
- C. Samples for Initial Selection: For master- and remote-control stations, and faceplates with factory-applied color finishes and technical features.
- D. Samples for Verification: For master- and remote-control stations, and faceplates with factory-applied color finishes and technical features.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1.5 INFORMATIONAL SUBMITTALS

- A. Field quality-control reports.

PART 2 - PRODUCTS

2.1 MANUFACTURERS

- A. Subject to compliance with the requirements of the specifications and contract documents provide products from one of the following manufactures:
 - 1. Lutron Electronics
 - 2. Crestron Electronics
 - 3. Leviton
 - 4. Cooper Controls
 - 5. Acuity Controls

2.2 GENERAL DIMMING DEVICE REQUIREMENTS

- A. Compatibility:
 - 1. Dimming control components shall be compatible with lighting fixtures, ballasts, and transformers, including DALI or other addressable digitally controlled LED drivers.
 - 2. Dimming control devices shall be compatible with lighting control system components specified in Section 26 09 43 "Relay-Based Lighting Controls," and in Section 26 09 23 "Lighting Control Devices."
- B. Dimmers and Dimmer Modules: Comply with UL 508.
 - 1. Audible Noise and Radio-Frequency Interference Suppression: Solid-state dimmers shall operate smoothly over their operating ranges without audible lamp or dimmer noise or radio-frequency interference. Modules shall include integral or external filters to suppress audible noise and radio-frequency interference.
 - 2. Dimmer or Dimmer-Module Rating: Not less than 125 percent of connected load unless otherwise indicated.
 - 3. Shall have a built in dimmer memory, the light output will remain at the previous setting when the lights are turned off and back on.
- C. Surge Protection: Withstand supply power surges without impairment to performance.
 - 1. Panels: 6000 V, 3000 A, complying with IEEE C62.41.1 and IEEE C62.41.2.
 - 2. Other System Devices: 6000 V, 3000 A, complying with IEEE C62.41.1 and IEEE C62.41.2.
- D. Off Control Position: User-selected off position of any control point shall disconnect the load from line supply.

2.3 SYSTEM DESCRIPTION

- A. Electrical Components, Devices, and Accessories: Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.
- B. Comply with NFPA 70.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2.4 WALL-BOX MULTISCENE DIMMING CONTROLS

- A. Description: Factory-fabricated equipment providing manual dimming consisting of a wall-box-mounted master controller and indicated number of wall-box zone stations. Controls and dimmers shall be integrated for mounting in multigang wall box under a single wall plate. Each zone shall be adjustable to indicated number of scenes, which shall reside in the memory of zone controller.
- B. Each zone shall be configurable to control the following loads:
 - 1. LED luminaires with electronic dimming drivers
 - 2. Incandescent lamp dimmers driving high capacity LED dimming power modules.
- C. Dimmers: Regulate voltages to maintain a constant light level, with no visible flicker, when the source voltage varies plus or minus 2 percent rms.
- D. Memory:
 - 1. Retain preset scenes and fade rates through momentary (up to 3-second) power interruptions.
 - 2. Retain preset scenes through power failures for at least seven days.
- E. Device Plates: Style, material, and color shall comply with Section 26 27 26 "Wiring Devices.". Master-control cover plate shall be one piece.
- F. Master controller shall include the following:
 - 1. Cover-mounted switches, including master off, all bright, and selectors for each scene.
 - 2. Cover-mounted LED indicator lights, one associated with each scene switch, and one for the master off switch.
 - 3. Concealed switches and indicators for specified function.
 - 4. A raise/lower switch for each zone for temporary adjustments of the zone, without altering scene values stored in memory.
 - 5. Fade time indicated by digital display for current scene while fading.
 - 6. Cover-mounted infrared receiver.
- G. Infrared Transmitters: Wireless remote control for recalling four of the presets. Operate up to **50 feet (15 m)** within line of sight of the master controller.

2.5 CONDUCTORS AND CABLES

- A. Wiring to Supply Side of Remote-Control Power Sources: Not smaller than No. 12 AWG. Comply with requirements in Section 260519 "Low-Voltage Electrical Power Conductors and Cables."
- B. Class 2 Control Cable: Multiconductor cable with stranded-copper conductors not smaller than No. 24 AWG. Comply with requirements in Section 260519 "Low-Voltage Electrical Power Conductors and Cables."

PART 3 - EXECUTION

3.1 WIRING INSTALLATION

- A. Comply with NECA 1.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- B. Wiring Method: Comply with requirements in Section 260519 "Low-Voltage Electrical Power Conductors and Cables." Minimum conduit size shall be 1/2 inch (13 mm).
- C. Wiring within Enclosures: Bundle, lace, and train conductors to terminal points. Separate power-limited and nonpower-limited conductors according to conductor manufacturer's written instructions.
- D. Size conductors according to lighting control device manufacturer's written instructions unless otherwise indicated.
- E. Splices, Taps, and Terminations: Make connections only on numbered terminal strips in junction, pull, and outlet boxes; terminal cabinets; and equipment enclosures.

3.2 IDENTIFICATION

- A. Comply with requirements in Section 260553 "Identification for Electrical Systems" for identifying components and power and control wiring.
- B. Label each dimmer module with a unique designation.
- C. Label each scene control button with approved scene description.

3.3 FIELD QUALITY CONTROL

- A. **Comply with commissioning requirements in specification section 019113 -General Commissioning Requirements, and specification section 260800 (BA2)**
- B. Testing Agency: Owner will engage a qualified commissioning agency to perform tests and inspections.
- C. Manufacturer's Field Service: Engage a factory-authorized service representative to test and inspect components, assemblies, and equipment installations, including connections.
- D. Perform the following tests and inspections with the assistance of a factory-authorized service representative:
 - 1. Continuity tests of circuits.
 - 2. Operational Test: Set and operate controls to demonstrate their functions and capabilities in a methodical sequence that cues and reproduces actual operating functions.
 - a. Include testing of modular dimming control equipment under conditions that simulate actual operational conditions. Record control settings, operations, cues, and functional observations.
- E. Remove and replace malfunctioning modular dimming control components and retest as specified above.
- F. Test Labeling: After satisfactory completion of tests and inspections, apply a label to tested components indicating test results, date, and responsible agency and representative.
- G. Reports: Written reports of tests and observations. Record defective materials and workmanship and unsatisfactory test results. Record repairs and adjustments.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3.4 DEMONSTRATION

- A. Train Owner's maintenance personnel to adjust, operate, and maintain modular dimming controls. Laptop portable computer may be used in training.
- B. Coordinate demonstration of products specified in this Section with demonstration requirements for low-voltage, programmable lighting control system specified and Section 26 09 43 "Relay-Based Lighting Controls."

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 26 09 43
RELAY-BASED LIGHTING CONTROLS**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes: Lighting control panels using mechanically held relays for switching with or without dimming modules.
- B. Section Includes: Networked lighting control panels using control-voltage relays for switching and that are interoperable with DDC system for HVAC.

1.3 DEFINITIONS

- A. DDC: Direct digital control.
- B. IP: Internet protocol.
- C. Dimming: a control signal generated by this panel that can control dimming properties of loads.
- D. Monitoring: Acquisition, processing, communication, and display of equipment status data, metered electrical parameter values, power quality evaluation data, event and alarm signals, tabulated reports, and event logs.
- E. PC: Personal computer; sometimes plural as "PCs."
- F. RS-485: A serial network protocol, similar to RS-232, complying with TIA-485-A.

1.4 ACTION SUBMITTALS

- A. Presubmittal meeting: Attend a coordination meeting to review all lighting control panels, control stations and control assignments prior to preparing submittal information.
- B. Product Data: For each type of product.
 - 1. Include construction details, material descriptions, dimensions of individual components and profiles, and finishes for control modules, power distribution components, relays, manual switches and plates, and conductors and cables.
 - 2. Include rated capacities, operating characteristics, electrical characteristics, and furnished specialties and accessories.
- C. Shop Drawings: For each relay panel and related equipment.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1. Include dimensioned plans, elevations, sections, and details. Show tabulations of installed devices, equipment features, and ratings.
2. Detail enclosure types and details for types other than NEMA 250, Type 1.
3. Detail wiring partition configuration, current, and voltage ratings.
4. Short-circuit current rating of relays.
5. Include diagrams for power, signal, and control wiring.
6. Block Diagram: Show interconnections between components specified in this Section and devices furnished with power distribution system components. Indicate data communication paths and identify networks, data buses, data gateways, concentrators, and other devices to be used. Describe characteristics of network and other data communication lines.
7. Communications Protocol: Indicate communications protocol and coordination of protocol with BMS and other systems requiring connection to lighting control system.

1.5 INFORMATIONAL SUBMITTALS

- A. Coordination Drawings: Submit evidence that lighting controls are compatible with connected monitoring and control devices and systems specified in other Sections.
 1. Show interconnecting signal and control wiring, and interface devices that prove compatibility of inputs and outputs.
 2. For networked controls, list network protocols and provide statements from manufacturers that input and output devices comply with interoperability requirements of the network protocol.
- B. Qualification Data: For testing agency.
- C. Field quality-control reports.
- D. Software licenses and upgrades required by and installed for operation and programming of digital and analog devices.
- E. Sample Warranty: For manufacturer's special warranty.

1.6 CLOSEOUT SUBMITTALS

- A. Operation and Maintenance Data: For lighting controls to include in emergency, operation, and maintenance manuals.
- B. Software and Firmware Operational Documentation:
 1. Software operating and upgrade manuals.
 2. Program Software Backup: On magnetic media or compact disk, complete with data files.
 3. Device address list.
 4. Printout of software application and graphic screens.

1.7 MAINTENANCE MATERIAL SUBMITTALS

- A. Furnish extra materials that match products installed and that are packaged with protective covering for storage and identified with labels describing contents.
 1. Lighting Control Relays: Equal to 20 percent of amount installed, but no fewer than 24.
 2. Lighting Control Dimming Modules: Equal to 10 percent of amount installed, but no fewer than 4.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3.

1.8 QUALITY ASSURANCE

- A. Testing Agency Qualifications: Member company of NETA or an NRTL.
 - 1. Testing Agency's Field Supervisor: Certified by NETA to supervise on-site testing.

1.9 DELIVERY, STORAGE, AND HANDLING

- A. Handle and prepare panels for installation according to NECA 407.

PART 2 - PRODUCTS

2.1 SYSTEM DESCRIPTION

- A. Input signal from field-mounted manual switches, or digital signal sources, shall open or close one or more lighting control relays in the lighting control panels. Any combination of inputs shall be programmable to any number of control relays.
- B. Electrical Components, Devices, and Accessories: Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.
- C. Comply with 47 CFR, Subparts A and B, for Class A digital devices.
- D. Comply with UL 916.

2.2 PERFORMANCE REQUIREMENTS

- A. Seismic Performance: Lighting control panels shall withstand the effects of earthquake motions determined according to ASCE/SEI 7.
 - 1. The term "withstand" means "the unit will remain in place without separation of any parts when subjected to the seismic forces specified and the unit will be fully operational after the seismic event."
 - 2. Component Importance Factor: 1.5.
- B. Interface with DDC System for HVAC: Provide hardware and software to enable the DDC system for HVAC to monitor, control, display, and record data for use in processing reports.
 - 1. Hardwired Points:
 - a. Monitoring: On-off status.
 - b. Control: On-off operation.
 - 2. Communication Interface: Comply with ASHRAE 135. The communication interface shall enable the DDC system for HVAC operator to remotely control and monitor lighting from a DDC system for HVAC operator workstation. Control features and monitoring points displayed locally at lighting panel shall be available through the DDC system for HVAC.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2.3 LIGHTING CONTROL RELAY PANELS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
1. Eaton (Cooper Controls), Inc.
 2. Lutron, Inc.
 3. Leviton Manufacturing Co., Inc.
 4. Philips Controls
 5. Acuity Controls
 6. NextLite
 7. ETC
 8. Douglas Controls
 9. Watt Stopper
- B. Description: Standalone lighting control panel using mechanically latched relays to control lighting and appliances.
- C. Lighting Control Panel:
1. A single enclosure with incoming lighting branch circuits, control circuits, switching relays, dimming modules and on-board timing and control unit.
 2. A vertical barrier separating branch circuits from control wiring.
- D. Control Unit: Contain the power supply and electronic control for operating and monitoring individual relays.
1. Timing Unit:
 - a. 365-day calendar, astronomical clock, and automatic adjustments for daylight savings and leap year.
 - b. Clock configurable for 12-hour (A.M./P.M.) or 24-hour format.
 - c. Sixty four independent schedules, each having 24 time periods.
 - d. Schedule periods settable to the minute.
 - e. Day-of-week, day-of-month, day-of-year with one-time or repeating capability.
 - f. 10 special date periods.
 2. Sequencing Control with Override:
 - a. Automatic sequenced on and off switching of selected relays at times set at the timing unit, allowing timed overrides from external switches.
 - b. Sequencing control shall operate relays one at a time, completing the operation of all connected relays in not more than 10 seconds.
 - c. Override control shall allow any relay connected to it to be switched on or off by a field-deployed manual switch or by an automatic switch, such as an occupancy sensor.
 - d. Override control "blink warning" shall warn occupants approximately ten minutes before actuating the off sequence.
 3. Nonvolatile memory shall retain all setup configurations. After a power failure, the controller shall automatically reboot and return to normal system operation, including accurate time of day and date.
- E. Relays: Electrically operated, mechanically held single-pole switch, rated at 20 A at 120-V tungsten, 30 A at 277-V ballast, 1.5 hp at 120 V, and 3 hp at 277 V. Short-circuit current rating shall be not less than 14 kA. Control shall be three-wire, 24-V ac.
- F. Power Supply: NFPA 70, Class 2, sized for connected equipment, plus 20 percent spare capacity. Powered from a dedicated branch circuit of the panelboard that supplies power to the line side of the relays, sized to provide control power for the local panel-mounted relays, bus system, low-voltage inputs, field-installed occupancy sensors, and photo sensors.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- G. Operator Interface:
1. Integral alphanumeric keypad and digital display, and intuitive drop-down menus to assist in programming.
 2. Log and display relay on-time.
 3. Connect relays to one or more time and sequencing schemes.

2.4 NETWORKED LIGHTING CONTROL PANELS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
1. Eaton (Cooper Controls), Inc.
 2. Lutron, Inc.
 3. Leviton Manufacturing Co., Inc.
 4. Philips Controls
 5. Acuity Controls
 6. NextLite
 7. ETC
 8. Douglas Controls
 9. WattStopper
- B. Description: Lighting control panels using mechanically latched relays to control lighting and appliances. The panels shall be capable of being interconnected with digital communications to appear to the operator as a single lighting control system. Panel shall also contain 0-10vdc dimming modules and UL 924 listed emergency lighting section as shown on the drawings.
- C. Lighting Control Panels:
1. A single enclosure with incoming lighting branch circuits, control circuits, switching relays, dimming modules and on-board timing and control unit.
 2. A vertical barrier separating branch circuits from control wiring.
 3. A horizontal barrier separating normal and life safety circuits.
- D. Main Control Unit: Installed in the main lighting control panel only; powered from the branch circuit of the standard control unit.
1. Ethernet Communications: Comply with TCP/IP protocol. The main control unit shall provide for programming of all control functions of the main and all networked slave lighting control panels including timing, sequencing, and overriding.
 2. Compliance with ASHRAE 135: Controllers shall support serial MS/TP and Ethernet IP communications, and shall be able to communicate directly via DDC system for HVAC RS-485 serial networks and Ethernet 10Base-T networks as a native device and control 0-10vdc dimming circuits.
 3. Web Server: Display information listed below over a standard Web-enabled server for displaying information over a standard browser.
 - a. A secure, password-protected login screen for modifying operational parameters, accessible to authorized users via Web page interface.
 - b. Panel summary showing the master and slave panels connected to the controller.
 - c. Controller diagnostic information.
 - d. Show front panel mimic screens for setting up controller parameters, input types, zones, and operating schedules. These mimic screens shall also allow direct breaker control and zone overrides.
 4. Timing Unit:
 - a. 365-day calendar, astronomical clock, and automatic adjustments for daylight savings and leap year.
 - b. Clock configurable for 12-hour (A.M./P.M.) or 24-hour format.
 - c. 64 independent schedules, each having 24 time periods.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- d. Schedule periods settable to the minute.
 - e. Day-of-week, day-of-month, day-of-year with one-time or repeating capability.
 - f. 16 special date periods.
- 5. Time Synchronization: The timing unit shall be updated not less than every hour with the network time server.
- 6. Sequencing Control with Override:
 - a. Automatic sequenced on and off switching of selected relays at times set at the timing unit, allowing timed overrides from external switches or control stations.
 - b. Sequencing control shall operate relays and dimmer modules one at a time or in groups, completing the operation of all connected relays in not more than 10 seconds.
 - c. Override control shall allow any relay connected to it to be switched on or off by a field-deployed manual switch or by an automatic switch, such as an occupancy sensor.
 - d. Override control "blinking warning" shall warn occupants approximately before actuating the off sequence.
 - e. Controller shall operate the dimming modules in a preset mode, allowing full on, full off, high preset and low preset programming, with timed fades, (5 seconds to 2 minutes programmed fade transitions. These shall be indicated from the system clock or local manual control stations as shown on the drawings.
 - f. System shall control dimmed or switched circuits located in indicated daylight control zones as programmed to be limited by the daylight harvesting controllers.
 - g. System shall have inputs for manual control stations, occupancy sensors and daylight sensors as shown on the drawings.
 - h. Activity log, storing previous relay operation, including the time and cause of the change of status.
 - i. Download firmware to the latest version offered by manufacturer.
- E. Standard Control Unit, installed in All Lighting Control Panels: Contain electronic controls for programming the operation of the relays in the control panel, contain the status of relays, and contain communications link to enable the digital functions of the main control unit. Comply with UL 916 and UL 924.
 - 1. Electronic control for operating and monitoring individual relays and dimmers, and display relay on-time.
 - 2. Nonvolatile memory shall retain all setup configurations. After a power failure, the controller shall automatically reboot and return to normal system operation.
 - 3. Integral keypad and digital-display front panel for local setup, including the following:
 - a. Blink notice, time adjustable from software.
 - b. Ability to log and display relay on-time.
 - c. Capability for accepting downloadable firmware so that the latest production features may be added in the future without replacing the module.
 - d. Programming dimmed levels.
- F. Relays: Electrically operated, mechanically held single-pole switch, rated at 20 A at 120-V tungsten, 30 A at 277-V ballast, 1.5 hp at 120 V, and 3 hp at 277 V. Short-circuit current rating shall be not less than 14 kA.
- G. Dimming Modules: A control module that, in conjunction with a relay module, controls 0-10 vdc controllable LED drivers, 100 ma capacity. This is controllable from the relay control system and screens.
- H. Power Supply: NFPA 70, Class 2, UL listed, sized for connected equipment, plus not less than 20 percent spare capacity. Powered from a dedicated branch circuit of the panelboard that supplies power to the line side of the relays, sized to provide control power for the local panel-mounted

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

relays, bus system, low-voltage inputs, field-installed occupancy sensors, and low-voltage photo sensors.

- I. Operator Interface: At the main control unit, provide interface for a tethered connection of a portable PC running MS Windows for configuring all networked lighting control panels using setup software designed for the specified operating system. Include one portable device for initial programming of the system and training of Owner's personnel. That device shall remain the property of Owner.
- J. Software:
 - 1. Menu-driven data entry.
 - 2. Online and offline programming and editing.
 - 3. Provide for entry of the room or space designation for the load side of each dimmer or relay.
 - 4. Monitor and control all relays, showing actual relay state and the name of the automatic actuating control, if any.
 - 5. Size the software appropriate to the system.

2.5 MANUAL SWITCHES AND PLATES

- A. Push-Button Switches: Modular, momentary contact, three wire, for operating one or more relays and to override automatic controls.
 - 1. Match color and style specified in Section 262726 "Wiring Devices."
 - 2. Integral green LED pilot light to indicate when circuit is on.
 - 3. Internal white LED locator light to illuminate when circuit is off.
 - 4. Internal red LED locator light to illuminate pushbutton selection on preset stations.
- B. Wall Plates: Single and multigang plates as specified in Section 26 27 26 "Wiring Devices."
- C. Legend: Engraved or permanently silk-screened on wall plate where indicated. Use designations indicated on Drawings or noted on submittal drawings.

2.6 FIELD-MOUNTED SIGNAL SOURCES

- A. Daylight Harvesting Switching Controls: Comply with Section 26 09 23 "Lighting Control Devices." Control power may be taken from the lighting control panel, and signal shall be compatible with the relays and dimmers.
- B. Indoor Occupancy Sensors: Comply with Section 26 09 23 "Lighting Control Devices." Control power may be taken from the lighting control panel, and signal shall be compatible with the relays.

2.7 CONDUCTORS AND CABLES

- A. Power Wiring to Supply Side of Class 2 Power Source: Not smaller than No. 12 AWG, complying with Section 260519 "Low-Voltage Electrical Power Conductors and Cables."
- B. Classes 2 and 3 Control Cables: Multiconductor cable with copper conductors not smaller than No. 24 AWG, complying with Section 26 05 19 "Low-Voltage Electrical Power Conductors and Cables. And compliant with manufacturer's requirements"

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- C. Digital and Multiplexed Signal Cables: Unshielded, twisted-pair cable with copper conductors, complying with TIA/EIA-568-B.2, Category 6 for horizontal copper cable and with Section 271500 "Communications Horizontal Cabling."

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Receive, inspect, handle, and store panels according to NECA 407.
- B. Examine panels before installation. Reject panels that are damaged or rusted or have been subjected to water saturation.
- C. Examine elements and surfaces to receive panels for compliance with installation tolerances and other conditions affecting performance of the Work.
- D. Proceed with installation only after unsatisfactory conditions have been corrected.

3.2 WIRING INSTALLATION

- A. Comply with NECA 1.
- B. Wiring Method: Install cables in raceways within wall and above inaccessible ceilings. Install cable in J-hooks above accessible ceilings. Conceal raceways and cables except in unfinished spaces.
 - 1. Install plenum cable in environmental air spaces, including plenum ceilings.
 - 2. Comply with requirements for raceways and boxes specified in Section 26 05 33 "Raceways and Boxes for Electrical Systems."
- C. Wiring within Enclosures: Bundle, lace, and train conductors to terminal points with no excess and without exceeding manufacturer's limitations on bending radii. Install lacing bars and distribution spools.

3.3 PANEL INSTALLATION

- A. Comply with NECA 1.
- B. Install panels and accessories according to NECA 407.
- C. Comply with mounting and anchoring requirements specified in Section 260548.16 "Seismic Controls for Electrical Systems."
- D. Mount top of trim **90 inches (2286 mm)** above finished floor unless otherwise indicated.
- E. Mount panel cabinet plumb and rigid without distortion of box.
- F. Install filler plates in unused spaces.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3.4 IDENTIFICATION

- A. Identify system components, wiring, cabling, and terminals. Comply with requirements for identification specified in Section 26 05 53 "Identification for Electrical Systems."
- B. Identify field-installed conductors, interconnecting wiring, and components; provide warning signs complying with Section 26 05 53 "Identification for Electrical Systems."
- C. Create a directory to indicate loads served by each relay; incorporate Owner's final room designations. Obtain approval before installing. Use a PC or typewriter to create directory; handwritten directories are unacceptable.
- D. Lighting Control Panel Nameplates: Label each panel with a nameplate complying with requirements for identification specified in Section 26 05 53 "Identification for Electrical Systems."

3.5 FIELD QUALITY CONTROL

- A. **Comply with commissioning requirements in specification section 019113 -General Commissioning Requirements, and specification section 260800 (BA2)**
- B. Testing Agency: Owner will engage a qualified commissioning agency to perform tests and inspections.
- C. Manufacturer's Field Service: Engage a factory-authorized service representative to test and inspect components, assemblies, and equipment installations, including connections.
- D. Perform the following tests and inspections with the assistance of a factory-authorized service representative:
 - 1. Perform each visual and mechanical inspection and electrical test stated in NETA Acceptance Testing Specification. Certify compliance with test parameters.
 - 2. Correct malfunctioning units on-site, where possible, and retest to demonstrate compliance; otherwise, replace with new units and retest.
- E. Acceptance Testing Preparation:
 - 1. Test continuity of each circuit.
- F. Lighting control panel will be considered defective if it does not pass tests and inspections.
- G. Prepare test and inspection reports, including a certified report that identifies lighting control panels and describes scanning results. Include notation of deficiencies detected, remedial action taken, and observations made after remedial action.

3.6 STARTUP SERVICE

- A. Perform startup service.
 - 1. Complete installation and startup checks according to manufacturer's written instructions.
 - 2. Confirm correct communications wiring, initiate communications between panels, and program the lighting control system according to approved configuration schedules, time-of-day schedules, and input override assignments.
 - 3. Verify proper operation of all daylight harvesting controls, all egress (emergency) lighting controls and local control stations.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3.7 ADJUSTING

- A. Occupancy Adjustments: When requested within 12 months from date of Substantial Completion, provide on-site assistance in adjusting system to suit actual occupied conditions. Provide up to two visits to Project during other-than-normal occupancy hours for this purpose.

3.8 SOFTWARE SERVICE AGREEMENT

- A. Upgrade Service: At Substantial Completion, update software to latest version. Install and program software upgrades that become available within five years from date of Substantial Completion. Upgrading software shall include operating system and new or revised licenses for using software.
 - 1. Upgrade Notice: At least 30 days to allow Owner to schedule and access the system and to upgrade computer equipment if necessary.

3.9 DEMONSTRATION

- A. Train Owner's maintenance personnel to adjust, operate, and maintain the control unit and operator interface.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 26 27 26
WIRING DEVICES**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Receptacles, receptacles with integral GFCI, and associated device plates.
 - 2. Twist-locking receptacles.
 - 3. USB charger devices.
 - 4. Isolated-ground receptacles.
 - 5. Hospital-grade receptacles.
 - 6. Tamper-resistant receptacles.
 - 7. Weather-resistant receptacles.
 - 8. Snap switches and wall-box dimmers.
 - 9. Floor service outlets (floor boxes) and poke-through assemblies.
 - 10. Pendant Cord Connector Devices (Drop Cords).
 - 11. Cord Reels

1.3 DEFINITIONS

- A. EMI: Electromagnetic interference.
- B. GFCI: Ground-fault circuit interrupter.
- C. Pigtail: Short lead used to connect a device to a branch-circuit conductor.
- D. RFI: Radio-frequency interference.

1.4 ADMINISTRATIVE REQUIREMENTS

- A. Coordination:
 - 1. Receptacles for Owner-Furnished Equipment: Match plug configurations.
 - 2. Cord and Plug Sets: Match equipment requirements.

1.5 ACTION SUBMITTALS

- A. Product Data: For each type of product.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1.6 INFORMATIONAL SUBMITTALS

- A. Field quality-control reports.

1.7 CLOSEOUT SUBMITTALS

- A. Operation and Maintenance Data: For wiring devices to include in all manufacturers' packing-label warnings and instruction manuals that include labeling conditions.

PART 2 - PRODUCTS

2.1 MANUFACTURERS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. Eaton (Arrow Hart).
 - 2. Hubbell Incorporated; Wiring Device-Kellems.
 - 3. Leviton Manufacturing Co., Inc.
 - 4. Pass & Seymour/Legrand (Pass & Seymour).
- B. Source Limitations: Obtain each type of wiring device and associated wall plate from single source from single manufacturer.

2.2 GENERAL WIRING-DEVICE REQUIREMENTS

- A. Wiring Devices, Components, and Accessories: Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.
- B. Comply with NFPA 70.
- C. All devices must be manufactured for use with modular plug-in connectors, shall comply with UL 2459 and shall be made with stranded building wire. Devices shall comply with the requirements in this Section.

2.3 STRAIGHT-BLADE RECEPTACLES

- A. Hospital-Grade, Tamper Resistant, Duplex Convenience Receptacles, 125 V, 20 A: Comply with NEMA WD 1, NEMA WD 6 Configuration 5-20R, UL 498 Supplement sd, and FS W-C-596.
 - 1. Description: Single-piece, rivetless, nickel-plated, all-brass grounding system. Nickel-plated, brass mounting strap. Mechanical shutter system to help prevent insertion of foreign objects. Labeled shall comply with NFPA 70, "Health Care Facilities" Article, "Pediatric Locations" Section.
- B. Isolated-Ground, Duplex Convenience Receptacles, 125 V, 20 A: Comply with NEMA WD 1, NEMA WD 6 Configuration 5-20R, UL 498, and FS W-C-596.
 - 1. Description: Straight blade; equipment grounding contacts shall be connected only to the green grounding screw terminal of the device and with inherent electrical isolation from mounting strap. Isolation shall be integral to receptacle construction and not dependent on removable parts.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- C. Tamper-Resistant Convenience Receptacles, 125 V, 20 A: Comply with NEMA WD 1, NEMA WD 6 Configuration 5-20R, UL 498 Supplement sd, and FS W-C-596.
 - 1. Description: Labeled shall comply with NFPA 70, "Health Care Facilities" Article, "Pediatric Locations" Section.

2.4 GFCI RECEPTACLES

- A. General Description:
 - 1. Straight blade, non-feed-through type.
 - 2. Comply with NEMA WD 1, NEMA WD 6, UL 498, UL 943 Class A, and FS W-C-596.
 - 3. Include indicator light that illuminates only when the GFCI has malfunctioned or tripped and no longer provides proper GFCI protection.
- B. Tamper-Resistant GFCI Convenience Receptacles, 125 V, 20 A:
- C. Hospital-Grade, Tamper Resistant, Duplex GFCI Convenience Receptacles, 125 V, 20 A: Comply with NEMA WD 1, NEMA WD 6 Configuration 5-20R, UL 498 Supplement sd, and FS W-C-596.

2.5 TWIST-LOCKING RECEPTACLES

- A. Provide NEMA configurations as indicated on drawings.

2.6 PENDANT CORD-CONNECTOR DEVICES

- A. Description:
 - 1. Matching, locking-type plug and receptacle body connector.
 - 2. NEMA WD 6 Configurations L5-20P and L5-20R, heavy-duty grade, and FS W-C-596.
 - 3. Body: Nylon, with screw-open, cable-gripping jaws and provision for attaching external cable grip.
 - 4. External Cable Grip: Woven wire-mesh type made of high-strength, galvanized-steel wire strand, matched to cable diameter, and with attachment provision designed for corresponding connector.

2.7 CORD REELS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. Kitchen Leash by APC Group
- B. Description:
 - 1. Molded Polypropylene Housing.
 - 2. Retracting cord with adjustable stop.
 - 3. SJOW Power cord, 10 foot; rated 200 degrees.
 - 4. Receptacles Dual Duplex NEMA 5-20R unless noted otherwise.
 - 5. Impact: UL746C
 - 6. Hose Down: CSA 6.8.2
 - 7. Strain Relief: CSA 6.4
 - 8. Flame Retardant: UL 94-94V-2
 - 9. Mounting Bracket for ceiling mount.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2.8 CORD AND PLUG SETS

- A. Description:
1. Match voltage and current ratings and number of conductors to requirements of equipment being connected.
 2. Cord: Rubber-insulated, stranded-copper conductors, with Type SOW-A jacket; with green-insulated grounding conductor and ampacity of at least 130 percent of the equipment rating.
 3. Plug: Nylon body and integral cable-clamping jaws. Match cord and receptacle type for connection.

2.9 TOGGLE SWITCHES

- A. Comply with NEMA WD 1, UL 20, and FS W-S-896.
- B. Switches, 120/277 V, 20 A:
1. Single Pole and Three Way:
 - a. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1) Eaton (Arrow Hart).
 - 2) Hubbell Incorporated; Wiring Device-Kellems.
 - 3) Leviton Manufacturing Co., Inc.
 - 4) Pass & Seymour/Legrand (Pass & Seymour).
- C. Key-Operated Switches, 120/277 V, 20 A:
1. Description: Single pole, with factory-supplied key in lieu of switch handle.
 - a. Public Restrooms and Other Spaces: Keyed switch, heavy duty specification grade (Pass & Seymour PS20AC1-WL or equivalent).
 - b. Behavioral Health Patient Accessible Spaces: Keyed locking switch, extra heavy duty specification grade security switch (Pass & Seymour PS20AC1-KL or equivalent). Coordinate common or differentiated keying of multiple switches with owner.
- D. Momentary Contact Switches: 2-Button, Single Pole, Low-voltage switch, mounts in standard single gang ring.
- E. Key-Operated, Single-Pole, Double-Throw, Momentary-Contact, Center-off Switches: 120/277 V, 20 A; for use with mechanically held lighting contactors, with factory-supplied key in lieu of switch handle.
- F. Decora style rocker switches are not permitted.

2.10 WALL-BOX DIMMERS

- A. Dimmer Switches: Modular, full-wave, solid-state units with integral, quiet on-off switches, with audible frequency and EMI/RFI suppression filters.
- B. Control: Continuously adjustable full width slider; with single-pole or three-way switching. Comply with UL 1472.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- C. Incandescent Lamp Dimmers: 120 V; control shall follow square-law dimming curve. On-off switch positions shall bypass dimmer module for off.
 - 1. These shall be used to control power modules driving large quantity of LED drivers using 0-10VDC control signals. This interface shall operate either 120 or 277 volt circuits, 200 ma rating.
- D. Decora style rocker switches are not permitted.
- E. LED and Low Voltage Dimmer Switches:
 - 1. Modular; compatible with LED drivers; trim potentiometer to adjust low-end dimming used where “LR” is shown, otherwise full range of 1% to 100% of lumen output or as noted.
 - 2. Maximum of four (4) buttons per gang.
 - 3. Dimmer shall operate either 120 or 277 volt circuits, 28 ma minimum rating.
 - 4. Touch dimming switches shall cover the full range of dimming with a single press-and-hold function in not more than three (3) seconds.
 - 5. Switches, with LED indicators to indicate both ON and OFF status, shall be available with 2 or 4 single button switches per gang. Switch to fit standard Decora opening.
 - 6. Switches and switch hardware shall mount to standard wall boxes.
 - 7. Each switch shall provide a location for a label to identify function. The label shall be under a clear plastic cover and shall be field replaceable should the operation of the switch change. Permanently etched switches are not acceptable unless specifically noted otherwise.
- F. Slide Dimmer Locations:
 - 1. Exam Rooms, Imaging Rooms, Operating Rooms, Procedure Rooms, Recovery Bays, and Imaging Control Rooms: Provide slide dimmer switches; do not provide touch dimming switches in these spaces except when an integrated component of an antimicrobial or integrated operating room ceiling system.

2.11 WALL PLATES

- A. Single and combination types shall match corresponding wiring devices.
 - 1. Plate-Securing Screws (behavioral health spaces): Metal tamper resistant TORX screws with head color to match plate finish.
 - 2. Plate-Securing Screws (other than behavioral health spaces): Metal with head color to match plate finish.
 - 3. Material for Finished Spaces, except Operating Rooms, Food Service Kitchens, and Behavioral Health Spaces: Smooth, high-impact thermoplastic.
 - 4. Material for Operating Rooms and Food Service Kitchen: **0.035-inch- (1-mm-)** thick, satin-finished, Type 302 stainless steel.
 - 5. Material for Behavioral Health Spaces: Smooth, nylon, unbreakable, with a minimum of two (2) screws per gang; provide Torx head tamper resistant screws.
 - 6. Material for Unfinished Spaces: Galvanized steel.
 - 7. Material for Damp Locations: Cast aluminum with spring-loaded lift cover, and listed and labeled for use in wet and damp locations.
- B. Wet-Location, Weatherproof Cover Plates: NEMA 250, complying with Type 3R, weather-resistant, die-cast aluminum with lockable, weatherproof-in-use cover.

2.12 FLOOR SERVICE FITTINGS

- A. **Manufacturers:** Subject to compliance with requirements, provide products by the following:

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1. [Wiremold / Legrand.](#)
- B. Type: Modular, flush-type, dual- or multi- service units suitable for wiring method used.
- C. Compartments: Barrier separates power from voice and data communication cabling.
- D. Service Plate: Round, die-cast aluminum with satin finish.
- E. Power Receptacle: NEMA WD 6 Configuration 5-20R, gray finish, unless otherwise indicated.
- F. Voice and Data Communication Outlet: Two modular, keyed, color-coded, RJ-45 jacks for UTP cable complying with requirements in owner's Section 27 00 00 requirements.
- G. Description by Device Type:

FB1	Flush, Dual Service, Furniture Feed. One .75" conduit for power and One 2" conduit for data cabling. See plans for circuits and data drops. Finish selected by architect.	Legrand EFBFF Hubbell CFB2G30/2GCFFCVR
FB4	Flush, Dual Service, one piece finish flange. Four gang capacity. One .75" conduit for power and one 2" conduit for data cabling. See plans for circuits and data drops. Finish selected by architect.	Legrand EFG45S Hubbell CFB2G30/24GCCVR
FB6	Flush, Dual Service, one piece finish flange. Six gang capacity. One .75" conduit for power and one 2" conduit for data cabling. See plans for circuits and data drops. Finish selected by architect.	Legrand EFB6S Evolution Hubbell CFB6G30/610GCCVR
FB8	Flush, Dual Service, one piece finish flange. Eight gang capacity. One .75" conduit for power and one 2" conduit for data cabling. See plans for circuits and data drops. Finish selected by architect.	Legrand EFB8S Evolution
FB10	Flush, Dual Service, one piece finish flange. Ten gang capacity. One .75" conduit for power and one 2" conduit for data cabling. See plans for circuits and data drops. Finish selected by architect.	Legrand EFB10S Evolution Hubbell CFB10G30/610GCCVR
FB11	Flush single service floor box suitable for the wiring method used. NEMA 5-20R duplex receptacle with brushed aluminum flange and cover plate. Hinged receptacle covers. Housing material shall be stamped steel above grade and cast iron at grade. Provide appropriate carpet and tile flanges.	Legrand 880MS(CS)/817/828 Hubbell B2431/S3825

2.13 POKE-THROUGH ASSEMBLIES

- A. [Manufacturers:](#) Subject to compliance with requirements, provide products by the following:
 1. [Wiremold / Legrand.](#)
- B. Description:
 1. Factory-fabricated and -wired assembly of below-floor junction box with multichanneled, through-floor raceway/firestop unit and detachable matching floor service-outlet assembly.
 2. Comply with UL 514 scrub water exclusion requirements.
 3. Size: Selected to fit cored holes in floor and matched to floor thickness.
 4. Fire Rating: Unit is listed and labeled for fire rating of floor-ceiling assembly.
 5. Closure Plug: Arranged to close unused cored openings and reestablish fire rating of floor.
- C. Description by Device Type:

PT1	Flush, Dual Service, 4" Diameter Furniture Feed Poke-Thru. One piece finish flange. One .75" conduit for power, One 1.5" conduit for data cabling. See plans for circuits and data drops. Finish selected by architect.	Legrand 4FFATC Hubbell PT73FFS/FRF3
PT2	Flush, Dual Service Capable, 4"Diameter Poke-Thru. One .75" conduit for	Legrand 4AT Evolution

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

	power, one 1.5" conduit for data cabling. Two Gang Capacity. See plans for circuits and data drops. Receptacles shall be NEMA 5-20R, Finish selected by architect.	Hubbell SIR4PT
PT3	Flush, Dual Service Capable, 6"Diameter Poke-Thru. One .75" conduit for power, one 1.5" conduit for data cabling. Three Gang Capacity. See plans for circuits and data drops. Receptacles shall be NEMA 5-20R, Finish selected by architect.	Legrand 6AT Evolution Hubbell SIR6PT
PT8	Flush, Dual Service Capable, 8"Diameter Poke-Thru. One .75" conduit for power, one 2" conduit for data cabling. Five Gang Capacity. See plans for circuits and data drops. Receptacles shall be NEMA 5-20R, Finish selected by architect.	Legrand 8AT Evolution Hubbell SIR8PT
PT10	Flush, Dual Service Capable, 10"Diameter Poke-Thru. One .75" conduit for power, one 2" conduit for data cabling. Eight Gang Capacity. See plans for circuits and data drops. Receptacles shall be NEMA 5-20R, Finish selected by architect.	Legrand 10AT Evolution Hubbell SIR10PT
PT11	Flush single service floor box suitable for the wiring method used. NEMA 5-20R duplex receptacle with brushed aluminum flange and cover plate. Hinged receptacle covers.	Legrand RC7CTC Hubbell PT7FS/FRF

2.14 FINISHES

- A. Device Color:
 - 1. Wiring Devices Connected to Normal Power System: Gray in Food Service Kitchen. As selected by Architect in other finished spaces unless otherwise indicated or required by NFPA 70 or device listing.
 - 2. Wiring Devices Connected to Essential Power System: Red.
 - 3. Isolated-Ground Receptacles: Orange.
 - 4. UPS receptacles: Grey
- B. Wall Plate Color:
 - 1. Plastic covers: Match device color.
 - 2. Cover plates for receptacles mounted above data racks in TEC and TDR rooms: Provide blue cover plates for receptacles served by UPS-A and red cover plates for receptacles served by UPS-B.

PART 3 - EXECUTION

3.1 INSTALLATION

- A. Comply with NECA 1, including mounting heights listed in that standard, unless otherwise indicated.
- B. Coordination with Other Trades:
 - 1. Protect installed devices and their boxes. Do not place wall finish materials over device boxes and do not cut holes for boxes with routers that are guided by riding against outside of boxes.
 - 2. Keep outlet boxes free of plaster, drywall joint compound, mortar, cement, concrete, dust, paint, and other material that may contaminate the raceway system, conductors, and cables.
 - 3. Install device boxes in brick or block walls so that the cover plate does not cross a joint unless the joint is troweled flush with the face of the wall.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

4. Install wiring devices after all wall preparation, including painting, is complete.
- C. Conductors:
1. Do not strip insulation from conductors until right before they are spliced or terminated on devices.
 2. Strip insulation evenly around the conductor using tools designed for the purpose. Avoid scoring or nicking of solid wire or cutting strands from stranded wire.
 3. The length of free conductors at outlets for devices shall meet provisions of NFPA 70, Article 300, without pigtails.
 4. Existing Conductors:
 - a. Cut back and pigtail, or replace all damaged conductors.
 - b. Straighten conductors that remain and remove corrosion and foreign matter.
 - c. Pigtailing existing conductors is permitted, provided the outlet box is large enough.
- D. Device Installation:
1. Replace devices that have been in temporary use during construction and that were installed before building finishing operations were complete.
 2. Keep each wiring device in its package or otherwise protected until it is time to connect conductors.
 3. Do not remove surface protection, such as plastic film and smudge covers, until the last possible moment.
 4. Connect devices to branch circuits using pigtails that are not less than **6 inches (152 mm)** in length.
 5. When there is a choice, use side wiring with binding-head screw terminals. Wrap solid conductor tightly clockwise, two-thirds to three-fourths of the way around terminal screw.
 6. Use a torque screwdriver when a torque is recommended or required by manufacturer.
 7. When conductors larger than No. 12 AWG are installed on 15- or 20-A circuits, splice No. 12 AWG pigtails for device connections.
 8. Tighten unused terminal screws on the device.
 9. When mounting into metal boxes, remove the fiber or plastic washers used to hold device-mounting screws in yokes, allowing metal-to-metal contact.
- E. Receptacle Orientation:
1. Install ground pin of vertically mounted receptacles up, and on horizontally mounted receptacles to the right.
 2. Install hospital-grade receptacles in patient-care areas with the ground pin or neutral blade at the top.
- F. Device Plates: Do not use oversized or extra-deep plates. Repair wall finishes and remount outlet boxes when standard device plates do not fit flush or do not cover rough wall opening.
- G. Dimmers:
1. Install dimmers within terms of their listing.
 2. Install unshared neutral conductors on line and load side of dimmers according to manufacturers' device listing conditions in the written instructions.
 3. Install 0-10VDC control wiring in conduit with power wiring. Use conductors with insulation equivalent to insulation of power wiring.
- H. Arrangement of Devices: Unless otherwise indicated, mount flush, with long dimension vertical and with grounding terminal of receptacles on top. Group adjacent switches under single, multigang wall plates.
- I. Adjust locations of floor boxes and pokethroughs to suit arrangement of partitions and furnishings.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3.2 GFCI RECEPTACLES

- A. Install non-feed-through-type GFCI receptacles where protection of downstream receptacles is not required.

3.3 IDENTIFICATION

- A. Comply with Section 260553 "Identification for Electrical Systems."
- B. Identify each receptacle with panelboard identification and circuit number. Use hot, stamped, or engraved machine printing with black-filled lettering on face of plate, and durable wire markers or tags inside outlet boxes.

3.4 FIELD QUALITY CONTROL

- A. Perform the following tests and inspections with the assistance of a factory-authorized service representative:
 - 1. In healthcare facilities, prepare reports that comply with recommendations in NFPA 99.
 - 2. Test Instruments: Use instruments that comply with UL 1436.
 - 3. Test Instrument for Convenience Receptacles: Digital wiring analyzer with digital readout or illuminated digital-display indicators of measurement.
- B. Tests for Convenience Receptacles:
 - 1. Line Voltage: Acceptable range is 105 to 132 V.
 - 2. Percent Voltage Drop under 15-A Load: A value of 6 percent or higher is unacceptable.
 - 3. Ground Impedance: Values of up to 2 ohms are acceptable.
 - 4. GFCI Trip: Test for tripping values specified in UL 1436 and UL 943.
 - 5. Using the test plug, verify that the device and its outlet box are securely mounted.
 - 6. Tests shall be diagnostic, indicating damaged conductors, high resistance at the circuit breaker, poor connections, inadequate fault current path, defective devices, or similar problems. Correct circuit conditions, remove malfunctioning units and replace with new ones, and retest as specified above.
- C. Test straight-blade convenience outlets in patient-care areas for the retention force of the grounding blade according to NFPA 99. Retention force shall be not less than 4 oz. (115 g). Submit test report indicating each receptacle and test result.
- D. Wiring device will be considered defective if it does not pass tests and inspections.
- E. Prepare test and inspection reports.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 26 28 13
FUSES**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Cartridge fuses rated 600-V ac and less for use in enclosed switches, panelboards and enclosed controllers.,
 - 2. Spare-fuse cabinets.

1.3 ACTION SUBMITTALS

- A. Product Data: For each type of product indicated. Include construction details, material, dimensions, descriptions of individual components, and finishes for spare-fuse cabinets. Include the following for each fuse type indicated:
 - 1. Ambient Temperature Adjustment Information: If ratings of fuses have been adjusted to accommodate ambient temperatures, provide list of fuses with adjusted ratings.
 - a. For each fuse having adjusted ratings, include location of fuse, original fuse rating, local ambient temperature, and adjusted fuse rating.
 - b. Provide manufacturer's technical data on which ambient temperature adjustment calculations are based.
 - 2. Dimensions and manufacturer's technical data on features, performance, electrical characteristics, and ratings.
 - 3. Fuse sizes for elevator feeders and elevator disconnect switches.

1.4 CLOSEOUT SUBMITTALS

- A. Operation and Maintenance Data: For fuses to include in emergency, operation, and maintenance manuals. In addition to items specified in Section 017823 "Operation and Maintenance Data," include the following:
 - 1. Ambient temperature adjustment information.
 - 2. Coordination charts and tables and related data.

1.5 MAINTENANCE MATERIAL SUBMITTALS

- A. Furnish extra materials that match products installed and that are packaged with protective covering for storage and identified with labels describing contents.
 - 1. Fuses: Equal to 10 percent of quantity installed for each size and type, but no fewer than three of each size and type.

1.6 QUALITY ASSURANCE

- A. Source Limitations: Obtain fuses, for use within a specific product or circuit, from single source from single manufacturer.
- B. Electrical Components, Devices, and Accessories: Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.
- C. Comply with NEMA FU 1 for cartridge fuses.
- D. Comply with NFPA 70.
- E. Comply with UL 248-11 for plug fuses.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1.7 PROJECT CONDITIONS

- A. Where ambient temperature to which fuses are directly exposed is less than 40 deg F (5 deg C) or more than 100 deg F (38 deg C), apply manufacturer's ambient temperature adjustment factors to fuse ratings.

1.8 COORDINATION

- A. Coordinate fuse ratings with utilization equipment nameplate limitations of maximum fuse size and with system short-circuit current levels.

PART 2 - PRODUCTS

2.1 MANUFACTURERS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. Cooper Bussmann, Inc.
 - 2. Edison Fuse, Inc.
 - 3. Ferraz Shawmut, Inc.
 - 4. Littelfuse, Inc.

2.2 CARTRIDGE FUSES

- A. Characteristics: NEMA FU 1, nonrenewable cartridge fuses with voltage ratings consistent with circuit voltages.

2.3 PLUG FUSES

- A. Characteristics: UL 248-11, nonrenewable plug fuses; 125-V ac.

2.4 PLUG-FUSE ADAPTERS

- A. Characteristics: Adapters for using Type S, rejection-base plug fuses in Edison-base fuseholders or sockets; ampere ratings matching fuse ratings; irremovable once installed.

2.5 SPARE-FUSE CABINET

- A. Characteristics: Wall-mounted steel unit with full-length, recessed piano-hinged door and key-coded cam lock and pull.
 - 1. Size: Adequate for storage of spare fuses specified with 15 percent spare capacity minimum.
 - 2. Finish: Gray, baked enamel.
 - 3. Identification: "SPARE FUSES" in 1-1/2-inch- (38-mm-) high letters on exterior of door.
 - 4. Fuse Pullers: For each size of fuse, where applicable and available, from fuse manufacturer.

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine fuses before installation. Reject fuses that are moisture damaged or physically damaged.
- B. Examine holders to receive fuses for compliance with installation tolerances and other conditions affecting performance, such as rejection features.
- C. Examine utilization equipment nameplates and installation instructions. Install fuses of sizes and with characteristics appropriate for each piece of equipment.
- D. Evaluate ambient temperatures to determine if fuse rating adjustment factors must be applied to fuse ratings.
- E. Proceed with installation only after unsatisfactory conditions have been corrected.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3.2 FUSE APPLICATIONS

- A. Cartridge Fuses:
 - 1. Feeders: Class J, time delay.

3.3 INSTALLATION

- A. Install fuses in fusible devices. Arrange fuses so rating information is readable without removing fuse.
- B. Install spare-fuse cabinet(s).

3.4 IDENTIFICATION

- A. Install labels complying with requirements for identification specified in Section 260553 "Identification for Electrical Systems" and indicating fuse replacement information on inside door of each fused switch and adjacent to each fuse block, socket, and holder.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 26 28 16
ENCLOSED SWITCHES AND CIRCUIT BREAKERS**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and other Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Fusible switches.
 - 2. Nonfusible switches.
 - 3. Receptacle switches.
 - 4. Shunt trip switches.
 - 5. Molded-case circuit breakers (MCCBs).
 - 6. Enclosures.

1.3 DEFINITIONS

- A. NC: Normally closed.
- B. NO: Normally open.
- C. SPDT: Single pole, double throw.

1.4 PERFORMANCE REQUIREMENTS

- A. Seismic Performance: Enclosed switches and circuit breakers shall withstand the effects of earthquake motions determined according to ASCE/SEI 7.
 - 1. The term "withstand" means "the unit will remain in place without separation of any parts from the device when subjected to the seismic forces specified and the unit will be fully operational after the seismic event."

1.5 ACTION SUBMITTALS

- A. Product Data: For each type of enclosed switch, circuit breaker, accessory, and component indicated. Include dimensioned elevations, sections, weights, and manufacturers' technical data on features, performance, electrical characteristics, ratings, accessories, and finishes.
 - 1. Enclosure types and details for types other than NEMA 250, Type 1.
 - 2. Current and voltage ratings.
 - 3. Short-circuit current ratings (interrupting and withstand, as appropriate).
 - 4. Include evidence of NRTL listing for series rating of installed devices.
 - 5. Detail features, characteristics, ratings, and factory settings of individual overcurrent protective devices, accessories, and auxiliary components.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

6. Include time-current coordination curves (average melt) for each type and rating of overcurrent protective device; include selectable ranges for each type of overcurrent protective device.

1.6 INFORMATIONAL SUBMITTALS

- A. Qualification Data: For qualified testing agency.
- B. Seismic Qualification Certificates: For enclosed switches and circuit breakers, accessories, and components, from manufacturer.
 1. Basis for Certification: Indicate whether withstand certification is based on actual test of assembled components or on calculation.
 2. Dimensioned Outline Drawings of Equipment Unit: Identify center of gravity and locate and describe mounting and anchorage provisions.
 3. Detailed description of equipment anchorage devices on which the certification is based and their installation requirements.
- C. Field quality-control reports.
 1. Test procedures used.
 2. Test results that comply with requirements.
 3. Results of failed tests and corrective action taken to achieve test results that comply with requirements.
- D. Manufacturer's field service report.

1.7 CLOSEOUT SUBMITTALS

- A. Operation and Maintenance Data: For enclosed switches and circuit breakers to include in emergency, operation, and maintenance manuals. In addition to items specified in Section 017823 "Operation and Maintenance Data," include the following:
 1. Manufacturer's written instructions for testing and adjusting enclosed switches and circuit breakers.
 2. Time-current coordination curves (average melt) for each type and rating of overcurrent protective device; include selectable ranges for each type of overcurrent protective device.

1.8 QUALITY ASSURANCE

- A. Testing Agency Qualifications: Member company of NETA or an NRTL.
 1. Testing Agency's Field Supervisor: Currently certified by NETA to supervise on-site testing.
- B. Source Limitations: Obtain enclosed switches and circuit breakers, overcurrent protective devices, components, and accessories, within same product category, from single source from single manufacturer.
- C. Product Selection for Restricted Space: Drawings indicate maximum dimensions for enclosed switches and circuit breakers, including clearances between enclosures, and adjacent surfaces and other items. Comply with indicated maximum dimensions.
- D. Electrical Components, Devices, and Accessories: Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- E. Comply with NFPA 70.

1.9 PROJECT CONDITIONS

- A. Environmental Limitations: Rate equipment for continuous operation under the following conditions unless otherwise indicated:
1. Ambient Temperature: Not less than **minus 22 deg F (minus 30 deg C)** and not exceeding **104 deg F (40 deg C)**.
 2. Altitude: Not exceeding **6600 feet (2010 m)**.
- B. Interruption of Existing Electric Service: Do not interrupt electric service to facilities occupied by Owner or others unless permitted under the following conditions and then only after arranging to provide temporary electric service according to requirements indicated:
1. Notify Owner no fewer than 2 weeks days in advance of proposed interruption of electric service.
 2. Indicate method of providing temporary electric service.
 3. Do not proceed with interruption of electric service without Owner's written permission.
 4. Comply with NFPA 70E.

1.10 COORDINATION

- A. Coordinate layout and installation of switches, circuit breakers, and components with equipment served and adjacent surfaces. Maintain required workspace clearances and required clearances for equipment access doors and panels.

PART 2 - PRODUCTS

2.1 FUSIBLE SWITCHES

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
1. Eaton.
 2. General Electric Company.
 3. Siemens Industry, Inc.
 4. Square D; by Schneider Electric.
- B. Type HD, Heavy Duty, Single Throw, 240, 600-V ac, 1200 A and Smaller: UL 98 and NEMA KS 1, horsepower rated, with clips or bolt pads to accommodate indicated fuses, lockable handle with capability to accept three padlocks, and interlocked with cover in closed position.
- C. Accessories:
1. Equipment Ground Kit: Internally mounted and labeled for copper and aluminum ground conductors.
 2. Neutral Kit: Internally mounted; insulated, capable of being grounded and bonded; labeled for copper and aluminum neutral conductors.
 3. Auxiliary Contact Kit: Two NO/NC (Form "C") auxiliary contact(s), arranged to activate before switch blades open.
 4. Class R Fuse Kit: Provides rejection of other fuse types when Class R fuses are specified.
 5. Lugs: Mechanical type, suitable for number, size, and conductor material.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

6. Service-Rated Switches: Labeled for use as service equipment.
7. Accessory Control Power Voltage: Remote mounted and powered; 120-V ac.

2.2 NONFUSIBLE SWITCHES

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 1. Eaton.
 2. General Electric Company.
 3. Siemens Industry, Inc.
 4. Square D; by Schneider Electric.
- B. Type HD, Heavy Duty, Single Throw, 240, 600-V ac, 1200 A and Smaller: UL 98 and NEMA KS 1, horsepower rated, lockable handle with capability to accept three padlocks, and interlocked with cover in closed position.
- C. Accessories:
 1. Equipment Ground Kit: Internally mounted and labeled for copper and aluminum ground conductors.
 2. Neutral Kit: Internally mounted; insulated, capable of being grounded and bonded; labeled for copper and aluminum neutral conductors.
 3. Auxiliary Contact Kit: Two NO/NC (Form "C") auxiliary contact(s), arranged to activate before switch blades open.
 4. Lugs: Mechanical type, suitable for number, size, and conductor material.
 5. Accessory Control Power Voltage: Remote mounted and powered; 120-V ac.

2.3 MOLDED-CASE CIRCUIT BREAKERS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 1. Eaton.
 2. General Electric Company.
 3. Siemens Industry, Inc.
 4. Square D; by Schneider Electric.
- B. General Requirements: Comply with UL 489, NEMA AB 1, and NEMA AB 3, with interrupting capacity to comply with available fault currents.
- C. Thermal-Magnetic Circuit Breakers: Inverse time-current element for low-level overloads and instantaneous magnetic trip element for short circuits. Adjustable magnetic trip setting for circuit-breaker frame sizes 250 A and larger.
- D. Adjustable, Instantaneous-Trip Circuit Breakers: Magnetic trip element with front-mounted, field-adjustable trip setting.
- E. Electronic Trip Circuit Breakers: Field-replaceable rating plug, rms sensing, with the following field-adjustable settings:
 1. Instantaneous trip.
 2. Long- and short-time pickup levels.
 3. Long- and short-time time adjustments.
 4. Ground-fault pickup level, time delay, and I²t response.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- F. Current-Limiting Circuit Breakers: Frame sizes 400 A and smaller, and let-through ratings less than NEMA FU 1, RK-5.
- G. Integrally Fused Circuit Breakers: Thermal-magnetic trip element with integral limiter-style fuse listed for use with circuit breaker and trip activation on fuse opening or on opening of fuse compartment door.
- H. Ground-Fault, Circuit-Interrupter (GFCI) Circuit Breakers: Single- and two-pole configurations with Class A ground-fault protection (6-mA trip).
- I. Ground-Fault, Equipment-Protection (GFEP) Circuit Breakers: With Class B ground-fault protection (30-mA trip).
- J. Features and Accessories:
 - 1. Standard frame sizes, trip ratings, and number of poles.
 - 2. Lugs: Mechanical type, suitable for number, size, trip ratings, and conductor material.
 - 3. Application Listing: Appropriate for application; Type SWD for switching fluorescent lighting loads; Type HID for feeding fluorescent and high-intensity discharge lighting circuits.
 - 4. Shunt Trip: Trip coil energized from separate circuit, with coil-clearing contact.
 - 5. Undervoltage Trip: Set to operate at 35 to 75 percent of rated voltage without intentional time delay.

2.4 ENCLOSURES

- A. Enclosed Switches and Circuit Breakers: NEMA AB 1, NEMA KS 1, NEMA 250, and UL 50, to comply with environmental conditions at installed location.
 - 1. Indoor, Dry and Clean Locations: NEMA 250, Type 1.
 - 2. Outdoor Locations: NEMA 250, Type 3R.
 - 3. Kitchen Locations (other than Wash Down Areas): NEMA 250, Type 4X, stainless steel.
 - 4. Kitchen Wash Down Areas: NEMA 250, Type 4X, stainless steel.
 - 5. Other Wet or Damp, Indoor Locations: NEMA 250, Type 4.
 - 6. Imaging Rooms: Flush Mount.

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine elements and surfaces to receive enclosed switches and circuit breakers for compliance with installation tolerances and other conditions affecting performance of the Work.
- B. Proceed with installation only after unsatisfactory conditions have been corrected.

3.2 INSTALLATION

- A. Install individual wall-mounted switches and circuit breakers with tops at uniform height unless otherwise indicated.
- B. Comply with mounting and anchoring requirements specified in Section 260548.16 "Seismic Controls for Electrical Systems."

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- C. Temporary Lifting Provisions: Remove temporary lifting eyes, channels, and brackets and temporary blocking of moving parts from enclosures and components.
- D. Install fuses in fusible devices.
- E. Comply with NECA 1.

3.3 IDENTIFICATION

- A. Comply with requirements in Section 26 05 53 "Identification for Electrical Systems."
 - 1. Identify field-installed conductors, interconnecting wiring, and components; provide warning signs.
 - 2. Label each enclosure with engraved metal or laminated-plastic nameplate.

3.4 FIELD QUALITY CONTROL

- A. Perform tests and inspections.
 - 1. Manufacturer's Field Service: Engage a factory-authorized service representative to inspect components, assemblies, and equipment installations, including connections, and to assist in testing.
- B. Acceptance Testing Preparation:
 - 1. Test insulation resistance for each enclosed switch and circuit breaker, component, connecting supply, feeder, and control circuit.
 - 2. Test continuity of each circuit.
- C. Tests and Inspections:
 - 1. Perform each visual and mechanical inspection and electrical test stated in NETA Acceptance Testing Specification. Certify compliance with test parameters.
 - 2. Correct malfunctioning units on-site, where possible, and retest to demonstrate compliance; otherwise, replace with new units and retest.
 - 3. Perform the following infrared scan tests and inspections and prepare reports:
 - a. Initial Infrared Scanning: After Substantial Completion, but not more than 60 days after Final Acceptance, perform an infrared scan of each enclosed switch and circuit breaker. Remove front panels so joints and connections are accessible to portable scanner.
 - b. Follow-up Infrared Scanning: Perform an additional follow-up infrared scan of each enclosed switch and circuit breaker 11 months after date of Substantial Completion.
 - c. Instruments and Equipment: Use an infrared scanning device designed to measure temperature or to detect significant deviations from normal values. Provide calibration record for device.
 - 4. Test and adjust controls, remote monitoring, and safeties. Replace damaged and malfunctioning controls and equipment.
- D. Enclosed switches and circuit breakers will be considered defective if they do not pass tests and inspections.
- E. Prepare test and inspection reports, including a certified report that identifies enclosed switches and circuit breakers and that describes scanning results. Include notation of deficiencies detected, remedial action taken, and observations after remedial action.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3.5 ADJUSTING

- A. Adjust moving parts and operable components to function smoothly, and lubricate as recommended by manufacturer.
- B. Set field-adjustable circuit-breaker trip ranges as specified in Section 26 05 73 "Overcurrent Protective Device Coordination Study."

END OF SECTION

**SECTION 26 29 13
ENCLOSED CONTROLLERS**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section includes the following enclosed controllers rated 600 V and less:
 - 1. Full-voltage magnetic.
- B. Related Section:
 - 1. Section 26 29 23 "Variable-Frequency Motor Controllers" for general-purpose, ac, adjustable-frequency, pulse-width-modulated controllers for use on variable torque loads in ranges up to 200 hp.

1.3 DEFINITIONS

- A. CPT: Control power transformer.
- B. MCCB: Molded-case circuit breaker.
- C. MCP: Motor circuit protector.
- D. N.C.: Normally closed.
- E. N.O.: Normally open.
- F. OCPD: Overcurrent protective device.
- G. SCR: Silicon-controlled rectifier.

1.4 PERFORMANCE REQUIREMENTS

- A. Seismic Performance: Enclosed controllers shall withstand the effects of earthquake motions determined according to ASCE/SEI 7.
 - 1. The term "withstand" means "the unit will remain in place without separation of any parts from the device when subjected to the seismic forces specified and the unit will be fully operational after the seismic event."

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1.5 ACTION SUBMITTALS

- A. Product Data: For each type of enclosed controller. Include manufacturer's technical data on features, performance, electrical characteristics, ratings, and enclosure types and finishes.
- B. Shop Drawings: For each enclosed controller. Include dimensioned plans, elevations, sections, details, and required clearances and service spaces around controller enclosures.
 - 1. Show tabulations of the following:
 - a. Each installed unit's type and details.
 - b. Factory-installed devices.
 - c. Nameplate legends.
 - d. Short-circuit current rating of integrated unit.
 - e. Listed and labeled for integrated short-circuit current (withstand) rating of OCPDs in combination controllers by an NRTL acceptable to authorities having jurisdiction.
 - f. Features, characteristics, ratings, and factory settings of individual OCPDs in combination controllers.
 - 2. Wiring Diagrams: For power, signal, and control wiring.

1.6 INFORMATIONAL SUBMITTALS

- A. Qualification Data: For qualified testing agency.
- B. Seismic Qualification Certificates: For enclosed controllers, accessories, and components, from manufacturer.
 - 1. Basis for Certification: Indicate whether withstand certification is based on actual test of assembled components or on calculation.
 - 2. Dimensioned Outline Drawings of Equipment Unit: Identify center of gravity and locate and describe mounting and anchorage provisions.
 - 3. Detailed description of equipment anchorage devices on which the certification is based and their installation requirements.
- C. Field quality-control reports.
- D. Load-Current and Overload-Relay Heater List: Compile after motors have been installed, and arrange to demonstrate that selection of heaters suits actual motor nameplate full-load currents.
- E. Load-Current and List of Settings of Adjustable Overload Relays: Compile after motors have been installed, and arrange to demonstrate that switch settings for motor running overload protection suit actual motors to be protected.

1.7 CLOSEOUT SUBMITTALS

- A. Operation and Maintenance Data: For enclosed controllers to include in emergency, operation, and maintenance manuals. In addition to items specified in Section 017823 "Operation and Maintenance Data," include the following:
 - 1. Routine maintenance requirements for enclosed controllers and installed components.
 - 2. Manufacturer's written instructions for testing and adjusting circuit breaker and MCP trip settings.
 - 3. Manufacturer's written instructions for setting field-adjustable overload relays.
 - 4. Manufacturer's written instructions for testing, adjusting, and reprogramming reduced-voltage solid-state controllers.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1.8 MATERIALS MAINTENANCE SUBMITTALS

- A. Furnish extra materials that match products installed and that are packaged with protective covering for storage and identified with labels describing contents.
 - 1. Fuses for Fused Switches: Equal to 10 percent of quantity installed for each size and type, but no fewer than three of each size and type.
 - 2. Control Power Fuses: Equal to 10 percent of quantity installed for each size and type, but no fewer than two of each size and type.
 - 3. Auxiliary Contacts: Furnish one spare(s) for each size and type of magnetic controller installed.
 - 4. Power Contacts: Furnish three spares for each size and type of magnetic contactor installed.

1.9 QUALITY ASSURANCE

- A. Testing Agency Qualifications: Member company of NETA or an NRTL.
 - 1. Testing Agency's Field Supervisor: Currently certified by NETA to supervise on-site testing.
- B. Electrical Components, Devices, and Accessories: Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.
- C. Comply with NFPA 70.
- D. IEEE Compliance: Fabricate and test enclosed controllers according to IEEE 344 to withstand seismic forces defined in Section 260548.16 "Seismic Controls for Electrical Systems."

1.10 DELIVERY, STORAGE, AND HANDLING

- A. Store enclosed controllers indoors in clean, dry space with uniform temperature to prevent condensation. Protect enclosed controllers from exposure to dirt, fumes, water, corrosive substances, and physical damage.

1.11 PROJECT CONDITIONS

- A. Environmental Limitations: Rate equipment for continuous operation under the following conditions unless otherwise indicated:
 - 1. Ambient Temperature: Not less than **minus 22 deg F (minus 30 deg C)** and not exceeding **104 deg F (40 deg C)**.
 - 2. Altitude: Not exceeding **6600 feet (2010 m)**.
- B. Interruption of Existing Electrical Systems: Do not interrupt electrical systems in facilities occupied by Owner or others unless permitted under the following conditions and then only after arranging to provide temporary electrical service according to requirements indicated:
 - 1. Notify Owner no fewer than two weeks in advance of proposed interruption of electrical systems.
 - 2. Indicate method of providing temporary utilities.
 - 3. Do not proceed with interruption of electrical systems without Owner's written permission.
 - 4. Comply with NFPA 70E.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1.12 COORDINATION

- A. Coordinate layout and installation of enclosed controllers with other construction including conduit, piping, equipment, and adjacent surfaces. Maintain required workspace clearances and required clearances for equipment access doors and panels.
- B. Coordinate sizes and locations of concrete bases with actual equipment provided. Cast anchor-bolt inserts into bases. Concrete, reinforcement, and formwork requirements are specified with concrete.
- C. Coordinate installation of roof curbs, equipment supports, and roof penetrations.

PART 2 - PRODUCTS

2.1 FULL-VOLTAGE CONTROLLERS

- A. General Requirements for Full-Voltage Controllers: Comply with NEMA ICS 2, general purpose, Class A.
- B. Magnetic Controllers: Full voltage, across the line, electrically held.
 - 1. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - a. Eaton.
 - b. General Electric Company.
 - c. Siemens Industry, Inc.
 - d. Square D; by Schneider Electric.
 - 2. Configuration: Nonreversing.
 - 3. Contactor Coils: Pressure-encapsulated type.
 - a. Operating Voltage: Depending on contactor NEMA size and line-voltage rating, manufacturer's standard matching control power or line voltage.
 - 4. Power Contacts: Totally enclosed, double-break, silver-cadmium oxide; assembled to allow inspection and replacement without disturbing line or load wiring.
 - 5. Control Circuits: 120 -V ac; obtained from integral CPT, with primary and secondary fuses, with CPT control power source of sufficient capacity to operate integral devices and remotely located pilot, indicating, and control devices.
 - a. CPT Spare Capacity: 50 VA.
 - 6. Solid-State Overload Relay:
 - a. Switch or dial selectable for motor running overload protection.
 - b. Sensors in each phase.
 - c. Class 20 tripping characteristic selected to protect motor against voltage and current unbalance and single phasing.
 - 7. External overload reset push button.

2.2 ACCESSORIES

- A. General Requirements for Control Circuit and Pilot Devices: NEMA ICS 5; factory installed in controller enclosure cover unless otherwise indicated.
 - 1. Selector Switches: Heavy-duty, oiltight type.
 - a. Pilot Lights: LED types; colors as indicated.
 - b. Selector Switches: Rotary type.
- B. Reversible N.C./N.O. auxiliary contact(s).

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- C. Phase-Failure, Phase-Reversal, and Undervoltage and Overvoltage Relays: Solid-state sensing circuit with isolated output contacts for hard-wired connections. Provide adjustable undervoltage, overvoltage, and time-delay settings.

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine areas and surfaces to receive enclosed controllers, with Installer present, for compliance with requirements and other conditions affecting performance of the Work.
- B. Examine enclosed controllers before installation. Reject enclosed controllers that are wet, moisture damaged, or mold damaged.
- C. Proceed with installation only after unsatisfactory conditions have been corrected.

3.2 INSTALLATION

- A. Wall-Mounted Controllers: Install enclosed controllers on walls with tops at uniform height unless otherwise indicated, and by bolting units to wall or mounting on lightweight structural-steel channels bolted to wall. For controllers not at walls, provide freestanding racks complying with Section 260529 "Hangers and Supports for Electrical Systems."
- B. Install fuses in each fusible-switch enclosed controller.

3.3 IDENTIFICATION

- A. Identify enclosed controllers, components, and control wiring. Comply with requirements for identification specified in Section 260553 "Identification for Electrical Systems."
 - 1. Identify field-installed conductors, interconnecting wiring, and components; provide warning signs.
 - 2. Label each enclosure with engraved nameplate.
 - 3. Label each enclosure-mounted control and pilot device.

3.4 CONTROL WIRING INSTALLATION

- A. Install wiring between enclosed controllers and remote devices and facility's central control system.
- B. Bundle, train, and support wiring in enclosures.
- C. Connect selector switches and other automatic-control selection devices where applicable.
 - 1. Connect selector switches to bypass only those manual- and automatic-control devices that have no safety functions when switch is in manual-control position.
 - 2. Connect selector switches with enclosed-controller circuit in both manual and automatic positions for safety-type control devices such as low- and high-pressure cutouts, high-temperature cutouts, and motor overload protectors.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3.5 FIELD QUALITY CONTROL

- A. Manufacturer's Field Service: Engage a factory-authorized service representative to inspect, test, and adjust components, assemblies, and equipment installations, including connections.
- B. Perform tests and inspections.
 - 1. Manufacturer's Field Service: Engage a factory-authorized service representative to inspect components, assemblies, and equipment installations, including connections, and to assist in testing.
- C. Acceptance Testing Preparation:
 - 1. Test insulation resistance for each enclosed controller, component, connecting supply, feeder, and control circuit.
 - 2. Test continuity of each circuit.
- D. Tests and Inspections:
 - 1. Inspect controllers, wiring, components, connections, and equipment installation. Test and adjust controllers, components, and equipment.
 - 2. Test insulation resistance for each enclosed-controller element, component, connecting motor supply, feeder, and control circuits.
 - 3. Test continuity of each circuit.
 - 4. Verify that voltages at controller locations are within plus or minus 10 percent of motor nameplate rated voltages. If outside this range for any motor, notify Owner before starting the motor(s).
 - 5. Test each motor for proper phase rotation.
 - 6. Perform each electrical test and visual and mechanical inspection stated in NETA Acceptance Testing Specification. Certify compliance with test parameters.
 - 7. Correct malfunctioning units on-site, where possible, and retest to demonstrate compliance; otherwise, replace with new units and retest.
 - 8. Perform the following infrared (thermographic) scan tests and inspections and prepare reports:
 - a. Initial Infrared Scanning: After Substantial Completion, but not more than 60 days after Final Acceptance, perform an infrared scan of each multi-pole enclosed controller. Remove front panels so joints and connections are accessible to portable scanner.
 - b. Follow-up Infrared Scanning: Perform an additional follow-up infrared scan of each multi-pole enclosed controller 11 months after date of Substantial Completion.
 - c. Instruments and Equipment: Use an infrared scanning device designed to measure temperature or to detect significant deviations from normal values. Provide calibration record for device.
 - 9. Test and adjust controls, remote monitoring, and safeties. Replace damaged and malfunctioning controls and equipment.
- E. Enclosed controllers will be considered defective if they do not pass tests and inspections.
- F. Prepare test and inspection reports including a certified report that identifies enclosed controllers and that describes scanning results. Include notation of deficiencies detected, remedial action taken, and observations after remedial action.

3.6 ADJUSTING

- A. Set field-adjustable switches, auxiliary relays, time-delay relays, timers, and overload-relay pickup and trip ranges.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- B. Adjust overload-relay heaters or settings if power factor correction capacitors are connected to the load side of the overload relays.
- C. Adjust the trip settings of MCPs and thermal-magnetic circuit breakers with adjustable instantaneous trip elements. Initially adjust to six times the motor nameplate full-load ampere ratings and attempt to start motors several times, allowing for motor cooldown between starts. If tripping occurs on motor inrush, adjust settings in increments until motors start without tripping. Do not exceed eight times the motor full-load amperes (or 11 times for NEMA Premium Efficient motors if required). Where these maximum settings do not allow starting of a motor, notify Owner before increasing settings.
- D. Set field-adjustable circuit-breaker trip ranges as specified in Section 26 05 73 "Overcurrent Protective Device Coordination Study."

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 26 51 19
LED INTERIOR LIGHTING**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Interior solid-state luminaires that use LED technology.
 - 2. Lighting fixture supports.
 - 3. Standby Emergency Power supplies for individual luminaires
- B. Related Requirements:
 - 1. Section 26 09 23 "Lighting Control Devices" for automatic control of lighting, including time switches, photoelectric relays, occupancy sensors, and multipole lighting relays and contactors.
 - 2. Section 26 09 36 "Standalone Multipreset Modular Dimming Controls" for architectural dimming systems and for fluorescent dimming controls with dimming ballasts specified in interior lighting Sections.
 - 3. Section 26 09 43 "Relay-Based Lighting Controls" for manual or programmable control systems with low-voltage control wiring or data communication circuits.

1.3 DEFINITIONS

- A. CCT: Correlated color temperature.
- B. CRI: Color Rendering Index.
- C. Fixture: See "Luminaire."
- D. IP: International Protection or Ingress Protection Rating.
- E. LED: Light-emitting diode.
- F. Lumen: Measured output of lamp and luminaire, or both.
- G. Luminaire: Complete lighting unit, including lamp, reflector, and housing.

1.4 ACTION SUBMITTALS

- A. Product Data: For each type of product.
 - 1. Arrange in order of luminaire designation.
 - 2. Include data on features, accessories, and finishes.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3. Include physical description and dimensions of luminaires.
 4. Include emergency lighting units, including batteries and chargers.
 5. Include life, output (lumens, CCT, and CRI), and energy efficiency data.
 6. Photometric data and adjustment factors based on laboratory tests, complying with IESNA Lighting Measurements Testing and Calculation Guides, of each lighting fixture type. The adjustment factors shall be for lamps and accessories identical to those indicated for the lighting fixture as applied in this Project. Report data compliant with IES LM-79 and IES LM-80. Only Absolute Photometry is acceptable.
 - a. Manufacturers' Certified Data: Photometric data certified by manufacturer's laboratory with a current accreditation under the National Voluntary Laboratory Accreditation Program for Energy Efficient Lighting Products (NVLAP).
- B. Shop Drawings: For nonstandard or custom luminaires.
1. Include plans, elevations, sections, and mounting and attachment details.
 2. Include details of luminaire assemblies. Indicate dimensions, weights, loads, required clearances, method of field assembly, components, and location and size of each field connection.
 3. Include diagrams for power, signal, and control wiring.
- C. LEED Submittals:
1. Product Data for Credit IEQ 4.2: For paints and coatings, documentation including printed statement of VOC content.
 2. Laboratory Test Reports for Credit IEQ 4.2: For paints and coatings, documentation indicating that products comply with the testing and product requirements of the California Department of Public Health's "Standard Method for the Testing and Evaluation of Volatile Organic Chemical Emissions from Indoor Sources Using Environmental Chambers."
- D. Samples: For each luminaire and for each color and texture with standard factory-applied finish.
- E. Samples for Initial Selection: For each type of luminaire with custom factory-applied finishes.
1. Include Samples of luminaires and accessories involving color and finish selection.
- F. Samples for Verification: For each type of luminaire.
1. Include Samples of luminaires and accessories to verify finish selection.
- G. Product Schedule: For luminaires and lamps. Use same designations indicated on Drawings.

1.5 INFORMATIONAL SUBMITTALS

- A. Coordination Drawings: Reflected ceiling plan(s) and other details, drawn to scale, on which the following items are shown and coordinated with each other, using input from installers of the items involved:
1. Lighting luminaires.
 2. Suspended ceiling components.
 3. Partitions and millwork that penetrate the ceiling or extend to within **12 inches (300 mm)** of the plane of the luminaires.
 4. Structural members to which equipment and or luminaires will be attached.
 5. Initial access modules for acoustical tile, including size and locations.
 6. Items penetrating finished ceiling, including the following:
 - a. Other luminaires.
 - b. Air outlets and inlets.
 - c. Speakers.
 - d. Sprinklers.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- e. Access panels.
 - f. Ceiling-mounted projectors.
 - g. Moldings.
- 7. Moldings.
- B. Qualification Data: For testing laboratory providing photometric data for luminaires.
- C. Seismic Qualification Certificates: For luminaires, accessories, and components, from manufacturer.
 - 1. Basis for Certification: Indicate whether withstand certification is based on actual test of assembled components or on calculation.
 - 2. Dimensioned Outline Drawings of Equipment Unit: Identify center of gravity and locate and describe mounting and anchorage provisions.
- D. Detailed description of equipment anchorage devices on which the certification is based and their installation requirements.
- E. Product Certificates: For each type of luminaire.
- F. Product Test Reports: For each luminaire, for tests performed by manufacturer or a qualified testing agency holding NVLAP accreditation.
- G. Sample warranty.

1.6 CLOSEOUT SUBMITTALS

- A. Operation and Maintenance Data: For luminaires and lighting systems to include in operation and maintenance manuals.
 - 1. Provide a list of all lamp types LED Modules and LED Drivers used on Project; use ANSI and manufacturers' codes.

1.7 MAINTENANCE MATERIAL SUBMITTALS

- A. Furnish extra materials that match products installed and that are packaged with protective covering for storage and identified with labels describing contents citing lighting fixture types.
 - 1. Lamps: 2 for every 100 of each type and rating installed. Furnish at least one of each type.
 - 2. Diffusers and Lenses: One for every 100 of each type and rating installed. Furnish at least one of each type.
 - 3. Globes and Guards: One for every 20 of each type and rating installed. Furnish at least one of each type.

1.8 QUALITY ASSURANCE

- A. Luminaire Photometric Data Testing Laboratory Qualifications: Luminaire manufacturer's laboratory that is accredited under the NVLAP for Energy Efficient Lighting Products.
- B. Luminaire Photometric Data Testing Laboratory Qualifications: Provided by an independent agency, with the experience and capability to conduct the testing indicated, that is an NRTL as defined by OSHA in 29 CFR 1910.7, accredited under the NVLAP for Energy Efficient Lighting Products, and complying with the applicable IES testing standards.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- C. Provide luminaires from a single manufacturer for each luminaire type.
- D. Each luminaire type shall be binned within a three-step MacAdam Ellipse to ensure color consistency among luminaires.
- E. Mockups: For interior lighting luminaires in room or module mockups, complete with power and control connections.
 - 1. Obtain Architect's approval of luminaires in mockups before starting installations.
 - 2. Maintain mockups during construction in an undisturbed condition as a standard for judging the completed Work.
 - 3. Approval of mockups does not constitute approval of deviations from the Contract Documents contained in mockups unless Architect specifically approves such deviations in writing.
 - 4. Subject to compliance with requirements, approved mockups may become part of the completed Work if undisturbed at time of Substantial Completion.

1.9 DELIVERY, STORAGE, AND HANDLING

- A. Protect finishes of exposed surfaces by applying a strippable, temporary protective covering before shipping.

1.10 WARRANTY

- A. Warranty: Manufacturer and Installer agree to repair or replace components of luminaires that fail in materials or workmanship within specified warranty period.
- B. Warranty Period: Five year(s) from date of Substantial Completion.

PART 2 - PRODUCTS

2.1 PERFORMANCE REQUIREMENTS

- A. Seismic Performance: Luminaires shall withstand the effects of earthquake motions determined according to ASCE/SEI 7.
- B. Seismic Performance: Luminaires and lamps shall be labeled vibration and shock resistant.
 - 1. The term "withstand" means "the luminaire will remain in place without separation of any parts when subjected to the seismic forces specified and the luminaire will be fully operational during and after the seismic event."

2.2 LUMINAIRE REQUIREMENTS

- A. Electrical Components, Devices, and Accessories: Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.
- B. NRTL Compliance: Luminaires for hazardous locations shall be listed and labeled for indicated class and division of hazard by an NRTL.
- C. FM Global Compliance: Luminaires for hazardous locations shall be listed and labeled for indicated class and division of hazard by FM Global.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- D. Recessed Fixtures: Comply with NEMA LE 4.
- E. Bulb shape complying with ANSI C79.1.
- F. Lamp base complying with ANSI C81.61 or IEC 60061-1, where employing universal base or mount.
- G. CRI of minimum 90. CCT of 3500 K.
- H. L70 rated lamp life of 50,000 hours.
- I. Lamps dimmable as indicated or 0.5 to 100 percent of maximum light output, via 0-10 VDC control signal or, where indicated, Digital Dimming Control Signal.
- J. Field Replaceable driver.
- K. Nominal Operating Voltage: Universal voltage 120 V ac or 277 V ac unless scheduled differently.
 - 1. Lens Thickness: At least 0.125 inch (3.175 mm) minimum unless otherwise indicated.
- L. Housings:
 - 1. Hydroformed, cast or extruded-aluminum housing and heat sink suitable for the environment.
 - 2. Anodized or powder-coat finish.

2.3 LED LAMPS AND DRIVERS:

- A. Minimum CRI Ra- 82 or as specified.
- B. Lumen output shall be Luminaire Lumens or Delivered Lumens. Source lumens shall not be used.
- C. Each luminaire type shall be binned within a three-step MacAdam Ellipse to ensure color consistency among luminaires.
- D. LED Rated life L70 of 50,000 hours per (IES LM-80). Luminaire shall maintain LED operating temperature to achieve this rating per TM-21.
- E. Flicker: No visible or detectable flicker, operating on all dimmed intensities.
- F. Dimming drivers shall be compatible with the control method shown on the drawings. All dimmed drivers shall use 0-10vdc control unless specified differently. Minimum level as scheduled.
- G. Inrush current shall be reported and the lighting controls adjusted for inrush of LED product supplied.
- H. THD: THD shall not exceed 80%.
- I. Minimum driver efficiency shall be 83%.
- J. LED module shall be replaceable in the field using modules with digitally traceable matching modules.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- K. Luminaire shall be NRTL Listed at intended operating temperature.
- L. Photometry shall be measured or absolute photometry. Derived or calculated photometry shall not be provided for consideration.
- M. Approved Manufacturers- Drivers
 - 1. General Electric.
 - 2. Philips.
 - 3. Osram / Sylvania.
 - 4. Lutron
 - 5. EldoLED
 - 6. Thomas Research
- N. Approved Manufacturers- LEDs
 - 1. General Electric
 - 2. Philips
 - 3. Osram
 - 4. Cree
 - 5. Xicato
 - 6. Nichia
- O. Approved Manufacturers for Luminaires shall be as scheduled.

2.4 MATERIALS

- A. Metal Parts:
 - 1. Free of burrs and sharp corners and edges.
 - 2. Sheet metal components shall be steel unless otherwise indicated.
 - 3. Form and support to prevent warping and sagging.
- B. Doors, Frames, and Other Internal Access: Smooth operating, free of light leakage under operating conditions, and designed to permit relamping without use of tools. Designed to prevent doors, frames, lenses, diffusers, and other components from falling accidentally during relamping and when secured in operating position.
- C. Diffusers and Globes:
 - 1. Acrylic Diffusers: One hundred percent virgin acrylic plastic, with high resistance to yellowing and other changes due to aging, exposure to heat, and UV radiation.
 - 2. Glass: Annealed crystal glass unless otherwise indicated.
 - 3. Lens Thickness: At least 0.125 inch (3.175 mm) minimum unless otherwise indicated.
- D. Housings:
 - 1. Hydroformed, cast or extruded-aluminum housing and heat sink suitable for the environment.
 - 2. Anodized or powder-coat finish.
- E. Factory-Applied Labels: Comply with UL 1598. Include recommended lamps and line wattage. Locate labels where they will be readily visible to service personnel, but not seen from normal viewing angles when lamps are in place.
 - 1. Label shall include the following lamp characteristics:
 - a. "USE ONLY" and include specific lamp type.
 - b. Lamp diameter, shape, size, wattage, and coating.
 - c. CCT and CRI for all luminaires.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2.5 METAL FINISHES

- A. Variations in finishes are unacceptable in the same piece. Variations in finishes of adjoining components are acceptable if they are within the range of approved Samples and if they can be and are assembled or installed to minimize contrast.

2.6 LUMINAIRE FIXTURE SUPPORT COMPONENTS

- A. Comply with requirements in Section 26 05 29 "Hangers and Supports for Electrical Systems" for channel and angle iron supports and nonmetallic channel and angle supports.
- B. Single-Stem Hangers: 1/2-inch (13-mm) steel tubing with swivel ball fittings and ceiling canopy. Finish same as luminaire.
- C. Wires: ASTM A 641/A 641 M, Class 3, soft temper, zinc-coated steel, 12 gauge (2.68 mm).
- D. Rod Hangers: 3/16-inch (5-mm) minimum diameter, cadmium-plated, threaded steel rod.
- E. Hook Hangers: Integrated assembly matched to luminaire, line voltage, and equipment with threaded attachment, cord, and locking-type plug.

2.7 GENERAL REQUIREMENTS FOR EMERGENCY LIGHTING

- A. Electrical Components, Devices, and Accessories: Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.
- B. NRTL Compliance: Fabricate and label emergency lighting units, exit signs, and batteries to comply with UL 924.
- C. Comply with NFPA 70 and NFPA 101.
- D. Comply with NEMA LE 4 for recessed luminaires.
- E. Internal Type Emergency Power Unit: Self-contained, modular, battery-inverter unit, factory mounted within luminaire body and compatible with LED light source and driver, including dimming driver.
 - 1. Emergency Connection: Operate luminaire continuously at an output of 5 watts upon loss of normal power. Connect unswitched circuit to battery-inverter unit and switched circuit to luminaire ballast.
 - 2. Operation: Relay automatically turns driver/led module on when power-supply circuit voltage drops to 80 percent of nominal voltage or below. Lamp automatically disconnects from battery when voltage approaches deep-discharge level. When normal voltage is restored, relay disconnects lamps from battery, and battery is automatically recharged and floated on charger.
 - 3. Environmental Limitations: Rate equipment for continuous operation under the following conditions unless otherwise indicated:
 - a. Ambient Temperature: Less than 0 deg F or exceeding 104 deg F with an average value exceeding 95 deg over a 24-hour period.
 - b. Ambient Storage Temperature: Not less than minus 4 deg F and not exceeding 140 deg F
 - c. Humidity: More than 95 percent (condensing).

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- d. Altitude: Exceeding 3300 feet
- 4. Battery: Sealed, maintenance-free, lead-acid type.
- 5. Charger: Fully automatic, solid-state, constant-current type with sealed power transfer relay.
- 6. Integral Self-Test: Factory-installed electronic device automatically initiates code-required test of unit emergency operation at required intervals. Test failure is annunciated by an integral audible alarm and a flashing red LED.

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine substrates, areas, and conditions, with Installer present, for compliance with requirements for installation tolerances and other conditions affecting performance of the Work.
- B. Examine roughing-in for luminaire to verify actual locations of luminaire and electrical connections before fixture installation. Proceed with installation only after unsatisfactory conditions have been corrected.

3.2 TEMPORARY LIGHTING

- A. If approved by the Architect, use selected permanent luminaires for temporary lighting. When construction is sufficiently complete, clean luminaires used for temporary lighting and install new lamps.

3.3 INSTALLATION

- A. Comply with NECA 1.
- B. Install luminaires level, plumb, and square with ceilings and walls unless otherwise indicated.
- C. Supports:
 - 1. Sized and rated for luminaire weight.
 - 2. Able to maintain luminaire position after cleaning and repair.
 - 3. Provide support for luminaire without causing deflection of ceiling or wall.
 - 4. Luminaire mounting devices shall be capable of supporting a horizontal force of 100 percent of luminaire weight and vertical force of 400 percent of luminaire weight.
- D. Flush-Mounted Luminaire Support:
 - 1. Secured to outlet box.
 - 2. Attached to ceiling structural members at four points equally spaced around circumference of luminaire.
 - 3. Trim ring flush with finished surface.
- E. Wall-Mounted Luminaire Support:
 - 1. Attached to structural members or approved backer plate in walls
 - 2. Do not attach luminaires directly to gypsum board.
- F. Ceiling-Mounted Luminaire Support:
 - 1. Ceiling mount with four 5/32-inch- (4-mm) diameter steel wire or aircraft cable supports.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2. Ceiling mount with hook mount.
- G. Suspended Luminaire Support:
1. Pendants and Rods: Where longer than **48 inches (1200 mm)**, brace to limit swinging.
 2. Stem-Mounted, Single-Unit Luminaires: Suspend with twin-stem hangers. Support with approved outlet box and accessories that hold stem and provide damping of luminaire oscillations. Support outlet box vertically to building structure using approved devices.
 3. Continuous Rows of Luminaires: Use tubing or stem for wiring at one point and wire support for suspension for each unit length of luminaire chassis, including one at each end.
 4. Do not use ceiling grid as support for pendant luminaires. Connect support wires or rods to building structure.
- H. Ceiling-Grid-Mounted Luminaires:
1. Secure to any required outlet box.
 2. Secure luminaire to the luminaire opening using approved fasteners in a minimum of four locations, spaced near corners of luminaire.
 3. Use approved devices and support components to connect luminaire to ceiling grid and building structure in a minimum of four locations, spaced near corners of luminaire.
- I. Comply with requirements in Section 26 05 19 "Low-Voltage Electrical Power Conductors and Cables" for wiring connections.

3.4 IDENTIFICATION

- A. Identify system components, wiring, cabling, and terminals. Comply with requirements for identification specified in Section 26 05 53 "Identification for Electrical Systems."

3.5 FIELD QUALITY CONTROL

- A. Perform the following tests and inspections:
1. Operational Test: After installing luminaires, switches, and accessories, and after electrical circuitry has been energized, test units to confirm proper operation.
 2. Test for Emergency Lighting: Interrupt power supply to demonstrate proper operation. Verify transfer from normal power to battery power and retransfer to normal.
- B. Luminaire will be considered defective if it does not pass operation tests and inspections.
- C. Prepare test and inspection reports.

3.6 STARTUP SERVICE

- A. Comply with requirements for startup specified in Section 26 09 43 "Relay-Based Lighting Controls."

3.7 ADJUSTING

- A. Occupancy Adjustments: When requested within 12 months of date of Substantial Completion, provide on-site assistance in adjusting the direction of aim of luminaires to suit occupied conditions. Make up to two visits to Project during other-than-normal hours for this purpose. Some of this work may be required during hours of darkness.

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

1. During adjustment visits, inspect all luminaires. Replace luminaires that are defective.
2. Parts and supplies shall be manufacturer's authorized replacement parts and supplies.
3. Adjust the aim of luminaires in the presence of the Architect.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

SECTION 270000

General Common Conditions For All Communications Sections

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and General Provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, and other documents as designated, apply to this Document.
- B. See additional requirements in Division 7 and section 27 01 00 Part 3.

1.2 RELATED SECTIONS

- A. Specifications throughout all Divisions of the Project Manual are directly applicable to this section, and this section is directly applicable to them.
 - 1. All Division 27 Sections
 - 2. Requirements of the following Division 26 sections apply to this section
 - a. Basic electrical requirements
 - b. Basic electrical materials and methods
 - c. Grounding, earthing, and bonding
 - 3. Division 21 Fire Suppression
 - 4. Division 22 Plumbing
 - 5. Division 23 HVAC
 - 6. Division 28 Electronic Safety and Security

1.3 SUMMARY

- A. The work on many processes in this section is not part of the Division 27 contract. In their proposals, the respective trades shall include portions and administration topics applicable to all Division 27 Sections.
- B. This document is based upon the 2018 Construction Specification Institute (CSI) Master Format numbers and titles for sections within Division 27: Communications.
- C. Where IT or Owner representation is stipulated in this Division, the Data Center Operations Infrastructure Cabling team shall provide it.

1.4 SUBMITTALS

- A. Product data shall be supplied for any parts or equipment that do not match the specified part number.
- B. Shop drawings
 - 1. Labeling schedules and layouts in owner-designated electronic format
 - 2. Cabling administrative drawings

1.5 CONDITIONS

- A. Drawings and General provisions of the contract, including Uniform General Conditions, Supplementary General Conditions, architectural plans and specifications, requirements of Division 1, electrical, mechanical, plumbing, audio visual, security, and telecommunications specifications and plans, apply to the communications section. They shall be considered a part of this section. The contractor shall read all sections in their entirety and apply them as appropriate for work in this section.
- B. A kick-off meeting should be held to coordinate the tray installation and set expectations before starting installation. The General Contractor should organize this meeting, which must include representatives from the following trades: FP&D, Electrical (Division 26), Structured Cable, Nurse Call, Paging, Building Automation and Control, Plumbing, HVAC, Fire Sprinkler, Framing, and any other relevant trades. The Data Center Operations Infrastructure Cabling Team will lead the meeting.
- C. Conflicts:

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1. Drawings and specifications will be used in conjunction with and supplement one another. Generally, the drawings determine the nature and quality of the installation, including the materials and tests. The quantities are derived from the drawings, details, listings, and manufacturer's directions.
 - a. Final order counts and distances are the contractor's responsibility.
 2. If there is an apparent conflict between the drawings and specifications, or between specification sections, the items with the greater quality or quantity shall be submitted, estimated, and installed.
 3. Clarification with the Owner and/or the owner's representative regarding these items shall be made before ordering and installation.
- D. Owner / Contractor
1. The Architect/Project Manager will submit an appropriate scope of work that allows the contractor to plan and bid on the project accordingly.
- E. Contractor
1. Furnish all labor, materials, tools, equipment, and services for the installation described herein. Provide add/deduct unit pricing for all components as part of the bid response. Base fixed price add/deduct units on an average cable length of 175 linear feet.
 2. The Contractor shall procure and maintain insurance against claims for the duration of this agreement.
 3. Use of Subcontractors: The Successful bidder shall inform the Owner's contact and/or General Contractor in writing about the intention to use Subcontractors and the scope of work for which they are being hired. The Owner or the owner's designated contact must approve the chosen Subcontractors in writing before the subcontractor's hiring and the start of any work. The low-voltage Subcontractor must be approved and certified. Refer to the listing in Appendix 7.
 4. Use of Subcontractors: The Contractor's designated project manager will be recognized as the single point of contact. The Project Manager shall oversee all work performed to ensure compliance with the specifications outlined in the bid documents (which include all specifications and drawings) to ensure quality installation.

1.6 SCOPE OF WORK:

- A. This establishes a communications infrastructure to be used as signal pathways for voice, high-speed data transmission, and other low-voltage services. Contractor shall:
1. Comply with all Master Specifications documents and the following requirements for a complete project installation.
 2. Provide a structured cabling system as described hereafter that includes, but is not limited to, supplying, installing, labeling, and testing fiber backbone, fiber and voice riser cable; data copper, fiber, and voice copper horizontal cabling; cable connectors, communications outlets and terminations, patch cables, and equipment racks/cabinets for networking hardware and patch panels.
 3. All requirements and specifications will be enforced. Cable pathways and runs to individual outlets are not shown in their entirety; however, they shall be provided as if shown in their entirety.
 4. Coordinate with electrical tradespersons to verify that conduit routing does not cause cabling to exceed allowable link length.
 5. Follow industry-standard installation procedures, including the BICSI Installation Standard and guidelines, as well as specified manufacturers' standard recommended procedures and installation practices for communications cables, to ensure that this cable plant and equipment maintain their mechanical and electrical transmission characteristics.
 6. An approved, certified installer shall perform the Division 27 work.
 7. The low-voltage communications Subcontractor shall complete non-concealed work.

1.7 REFERENCE STANDARDS:

- A. The latest published edition of a reference shall apply to this Project unless identified by a specific edition date.
- B. All reference amendments adopted before the effective date of the Contract shall apply to this Project.
- C. The publications listed below form a part of this specification. The publications are referred to in the text by basic designation only.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- D. Specific reference in specifications to codes, rules, regulations, standards, manufacturer's instructions, or requirements of regulatory agencies shall mean reference to the latest printed edition of each in effect at the date of contract.
- E. Codes and Standards (Most recent editions with addenda/TSB, etc.) All materials, installation, and workmanship shall meet or exceed the applicable requirements and standards addressed within the references listed in **Appendix 04**.

1.8 DEFINITIONS:

- 1. Definitions and Abbreviations are listed in **Appendix 05**:

PART 2 - PRODUCTS

2.1 PRODUCTS AND WORK NOT INCLUDED BY DIVISION 27

- A. Others shall separately purchase and/or provide certain equipment and miscellaneous items that will be installed during the installation process. Such items may not be indicated in the documents. Contractor shall coordinate with the Owner and his suppliers when considering:
 - 1. Provision and installation of phone systems, computer hardware, and related networking software and equipment.
 - 2. Provision and installation of multi-port routers and hubs in communications rooms.
 - a. The owner provides TEC/TDR UPSs.
 - 3. Communications grounding bus bars and grounding wires connecting to the main building electrode system by Division 26.
 - 4. Dedicated power panels, ground bus bars, circuits, and utility outlets.
 - 5. Installation and finishing of fire-rated plywood backboards.
 - 6. Building mechanical ductwork, cooling/heating system, and environmental control sensors.
 - 7. Communication pathway devices such as conduits, conduit sleeves, back boxes, and penetrations in walls and floors. Including, but not limited to, concealed work, office spaces, and open areas.
 - 8. Provision and installation of modular furniture and millwork.

PART 3 - PENETRATIONS

3.1 THE WORK IN THIS SECTION IS IN DIVISION 7 CONTRACT AND VERIFIED COMPLETE AT PROJECT TURNOVER.

- A. Wall Penetrations - Fire - Smoke – Sound
 - 1. All fire, smoke, and sound wall penetrations must be correctly made to protect the safety of patients and employees. A facility is designed, architected, and built with fire integrity that must not be compromised as the building is modified over its lifetime.
 - 2. The items listed often penetrate 1—and 2—hour fire-resistance-rated (FRR) assemblies. The requirements for filling the space between the item in question and the wall are in NFPC 101® Section 8.2.3.2.4.2. The option is to either fill the space with appropriately rated fire-stop material or protect the space with an approved device designed to maintain the wall's fire resistance.
 - 3. If a sleeve is used around the item that traverses the wall, it must be installed into the wall without any opening between it and the wall. The open space within the sleeve must then be filled with an appropriately rated fire stop.
- B. All items listed in 1 through 2 must have penetrations in fire-resistance-rated assemblies filled to maintain the integrity of the fire barrier.
 - 1. Conduits
 - a. When a conduit passes through a wall that is either rated or must be fire-stopped due to the compartment's lack of sprinklers, it is essential to fill any gap around the conduit as described above.
 - 2. Cables/Wires
 - a. Sometimes cables or wires are passed through a penetration contained in a firewall as a single installation. This often occurs in healthcare organizations with communication cables. Even in these cases, the penetration must be patched appropriately.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3. NOTE: Local and state building codes also govern fire, smoke, and sound wall penetrations.
 4. NOTE: This requirement applies to all departments, organizations, employees, and/or vendors who perform structured cable work in the facilities for:
 - a. Telephony and Computer networks, fire, smoke and sound wall penetrations, alarm systems, security systems, HVAC Control or sensors, patient entertainment systems, announcing systems, nurse call, telemetry, RFID, etc.
 5. NOTE: While this document is written specifically for low-voltage wiring, the JCAHO standards apply to any fire or smoke wall penetration. As you work in the facility, if you note any existing penetrations that are not up to standard, please immediately notify the construction Project Manager.
 6. While Facility Engineering has overall responsibility, each department, organization, employee, and/or vendor is responsible for following the process to obtain a permit from Facility Engineering before work commences and for adhering to the guidelines to maintain the fire/smoke wall integrity.
- C. Process:
1. NOTE: This process applies to all individuals, groups, and vendors performing low-voltage cable installations at any Intermountain facility or clinic.
 - a. Fire/Smoke Walls
 - 1) Any Vendor, department,/or person needing to do any cable work that involves wall penetrations, adding to existing or new, is required to obtain a "Low Voltage Cable Work Permit" from the Facility Engineer.
 - b. Above Ceiling Work
 - 1) Any vendor, department, or person needing to perform cable work above ceiling tiles, including adding to existing or new ones, must obtain all necessary permits.
 - c. Above Ceiling Permit to be obtained from Facilities Management
 - 1) The permit requires detailed information regarding the work being done and the location where it will be performed. The permit will also state the current approved sealing compound for the facility and specific requirements for conduits.
 - 2) Specific rules governing the conduct of work in certain areas of the hospital may also exist. NOTE: Sealing products from different manufacturers cannot be used in the same penetration. Therefore, if an additional cable is added to an existing penetration and you don't have the same brand of caulk, you must remove all of the caulk and redo the seal completely.
 - d. ICRA Permit to be obtained from the Infectious Preventionist
 - e. Hot Work Permit to be obtained from Facilities Engineer
 2. Quality of Work
 - a. Facility Engineering Orientation

3.2 MEASUREMENT PROCEDURES:

- A. The Contractor shall
1. Coordinate supports, adjacent construction, and fixture locations to ensure actual dimensions correspond to established dimensions.
 2. Verify dimensions in installation areas through field measurements before fabrication and indicate the measurements and scale on the shop drawings.
 3. Coordinate the fabrication schedule with construction progress to avoid delays in the work.
 4. Where field measurements cannot be made without delaying the work, establish dimensions and coordinate with the General Contractor.
 5. When approved, proceed with fabricating units without field measurements.

3.3 CHANGES

- A. ALTERNATES:
1. If an alternate material is proposed that meets or exceeds the specified requirements, the Contractor shall provide the manufacturer's specifications in writing to the Owner for approval before purchase and installation.
 2. Substitutions of material by the Contractor shall be in writing, complete with written manufacturers' specifications. The material substituted shall not void, alter, or change the manufacturer's structured cabling system warranty.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3. Contractor shall:
 - a. Provide a complete cabling infrastructure per these written specifications and drawings. If the Owner changes the scope of work to be performed by the Contractor, it shall be in writing.
 - b. Promptly respond to these changes with a complete material list, including pricing and labor, in writing, and present it to the Owner for approval. Also include unit pricing.
 - c. Do not proceed with any additional scope of work without a signed approval by the Owner.
 4. The Owner will not pay for the Contractor's additional work without signed approval of these changes. The contractor will submit a copy of the signed change order upon billing.
 5. The Owner's Infrastructure Cable team will be the final judge of acceptability, with review by the Owner's Representative and acceptance distributed by the Architect. No substitute shall be ordered, installed, or utilized without the Architect's prior written verification of acceptance from the Owner's Infrastructure Cable team.
- B. SUBSTITUTION PROCEDURES**
1. Substitution may be considered when a product becomes unavailable through no fault of the Contractor.
 2. Document each request with complete data substantiating that the proposed substitution complies with the Contract Documents. Include in each request for substitution:
 - a. Product identification, manufacturer's name, and address.
 - b. Product Data: Description, performance and test data, reference standards, finishes, and colors.
 - c. Samples: Finishes
 - d. Complete and accurate drawings indicating construction revisions required (if any) to accommodate substitutions.
 - e. Data relating to changes required in the construction schedule.
 - f. Cost comparison between specified and proposed substitution.
 3. Substitutions indicated or implied on shop drawings or product data submittals will not be considered unless a separate written request is submitted or when acceptance would require revision to the Contract Documents.
 4. The Owner will be the final judge of acceptability, with the Owner's Representative reviewing the proposal and the architect distributing the acceptance.
 5. No substitute shall be ordered, installed, or utilized without the Architect's prior written verification of acceptance from the Owner's Infrastructure Cable team.

PART 4 - EXECUTION

4.1 QUALITY ASSURANCE

- A. Regulatory Requirements:**
1. Contractor shall supply all city, county, and state telecommunication cabling permits required by the appropriate governing agency.
 2. Before commencing work, the Contractor and staff shall obtain all required Intermountain Healthcare permits, including, but not limited to, facility sign-in permits, ceiling work permits, hot work permits, and confined space permits.
 3. The contractor shall be city, county, and state-licensed and/or bonded as required for communications/low-voltage cabling systems work.
- B. Certifications:**
1. At the time of bid submission, the contractor shall submit an up-to-date and valid certification verifying the qualifications of the Contractor and installers to perform the work specified herein.
 2. Contractor shall have a complete working knowledge of low-voltage cabling applications, such as, but not limited to, data, voice, and video network systems.
 3. The contracting firm shall have installed similar-sized systems in at least ten (10) other projects in the last five years before this bid and be regularly engaged in installing the types of systems specified in this document. Certification shall include, but is not limited to, items such as the name and location of project contacts and numbers, total square footage, total number of cables/drops, types of media, etc.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

4. Contractor shall provide certificates for the appropriate insurance coverage as defined in the contract documents.
 5. A qualification document shall list all installer personnel assigned to this project.
 6. Fifty percent of the personnel working on the job site shall have a minimum of three years' experience in installing the types of systems, equipment, and cables specified in this document. Before commencement of work, any personnel substitutions shall be noted in writing to the Owner's Data Center Operations Infrastructure Cabling representative.
 7. BICSI ITS Cabling Installation Program Installer Level 1 or 2 or Technician certifications may be substituted in lieu of the 3-year requirement. All cabling installers shall be trained and certified by the cable manufacturer to install and maintain communication cabling.
 8. Refer also to General Conditions.
- C. Administrative Requirements and Coordination:
1. The Contractor shall:
 - a. Ensure that all technicians performing work have obtained badge access at least 48 hours before the scheduled start.
 - b. Provide a specified contact person (name and contact number) to coordinate attendance at project meetings with the communication consultant, the Owner, and others.
 - c. Coordinate work of this section with the Owner's system specifications, workstations, equipment suppliers, and installers.
 - d. Coordinate installation work with other crafts (e.g., ceiling grid contractors, HVAC, and sheet metal contractors) under the direction of the General Contractor to resolve procedures and installation placement for cable trays and cable bundle pathways. The goal of this coordination will be to establish priority pathways for critical data and voice network cable infrastructure, materials, and associated hardware, while mitigating project delays and allowing service access for communications and HVAC components. Damage by the Contractor to the craftwork of others will be remediated at the Contractor's expense in a timely manner.
 - e. Exchange information and agree on details of equipment arrangements and installation interfaces. Record agreements are reached in meetings, and the record is distributed to other participants, the owner, and the communication consultant.
 - f. Arrangement, layout, and locations of distribution frames, patch panels, and cross-connect blocks in equipment rooms and racks to accommodate and optimize the arrangement and space requirements of any service provider equipment, telephone system, and LAN equipment as directed by Data Center Operations. Tasks shall be coordinated with the Owner's Data Center Operations team and representatives from other trades' installations.
 - g. Where installed, confirm exact locations and method of mounting outlets in modular furniture. Follow furniture manufacturers' instructions for installing cable and devices in modular partitions. Obtain modular furniture and power pole locations from the General Contractor. Wiring locations noted in plans along walls for modular furniture are approximate and will have to be determined by the Contractor at the time of installation. Field condition adjustments for installation may be necessary, and coordination efforts with the mechanical and electrical contractor for the pathway must be initiated early in the project to comply with the maximum 40% conduit fill factor requirements.
 - h. When requested by the Owner or the Owner's representative, furnish extra materials that match specified products, are factory packaged with protective covering for storage, and are identified with labels describing contents. Unit pricing shall apply.
- D. Contract Administration:
1. Change orders, complete with a price breakdown and description, shall be submitted to the owner/project manager for approval before any work is commenced.
 2. The Owner's Data Center Operations Representative will provide job field reports upon inspection of the Contractor's installation, materials, supporting hardware, coordination with other trades, and progress to schedule to the Owner's project manager.
 3. Job Field Report outline:
 - a. General installation progress in relation to scheduled work made by the Contractor up to that date.
 - b. The Contractor will correct all deficiencies noted in the cable installation.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- E. Pre-Installation Meetings - Contractor shall:
 - 1. Attend and/or arrange a scheduled pre-installation conference before beginning any work in this section.
 - a. Agenda: This venue is for asking and clarifying questions in writing related to work to be performed, scheduling, coordination, etc., with the consultant, project manager, and/or Data Center Operations Infrastructure Cabling representative.
 - b. Attendance: The communications project manager/supervisor shall attend meetings arranged by the General Contractor, the Owner's Data Center Operations Infrastructure Cabling representatives, and other parties affected by the work of this document.
 - c. All individuals who will be installers of communication cables and equipment in an on-site supervisory capacity shall be required to attend the pre-installation conference. Individuals who do not attend the conference will not be permitted to supervise the installation of, or install, terminate, or test communications cables on the project. This includes supervisors, project managers, and lead installers of this project.
- F. Request for Change (RFC)
 - 1. The Change Approval Board shall open and approve a Request for Change before any modifications, attachments, or other activities that may affect production systems.
 - a. Policy and details available through the Data Center Operations Infrastructure Cable Representative.
- G. Post-Installation Meetings:
 - 1. Schedule Div. 27 Final Inspection
 - 2. At the time of substantial completion, or shortly thereafter, the low-voltage Sub-Contractor shall call and arrange for a post-installation meeting to present and review all submittal documents, including, but not limited to, as-built drawings, test reports, warranty documentation, and other relevant documents. Attendees shall be Owner staff, Owner's Representative, General Contractor, and others that the General Contractor deems appropriate.
 - 3. At this meeting, the Contractor shall present and explain all documentation, including test results, and ask for feedback on its completeness. Any discrepancies or deviations noted and agreed to by participants shall be remedied by the Contractor and resubmitted within one week of the meeting.

4.2 DELIVERY, STORAGE, AND HANDLING:

- A. Coordination with delivery companies, drivers, site address, and contact person(s) will be the responsibility of the Contractor.
- B. Contractor Shall:
 - 1. Ensure prompt material deliveries to meet the contracted completion date.
 - 2. Coordinate deliveries and submittals with the General Contractor to ensure a timely installation.
 - 3. No equipment materials shall be delivered to the job site more than three weeks prior to the commencement of its installation.
 - 4. Equipment shall be delivered in original packages with intact labels and clearly marked identification.
 - 5. Materials shall not be damaged in any way and shall comply with the manufacturer's operating specifications.
 - 6. Equipment and components shall be protected from the weather, humidity, temperature variations, dirt, dust, or other contaminants. Equipment damaged before system acceptance shall be replaced at no cost to the Owner.
 - 7. The Material Contractor shall be responsible for all handling and control of equipment.
 - 8. The Material Contractor is liable for any material loss due to delivery and storage problems.
- C. Owner/General Contractor shall supply a list of security requirements for the Contractor to follow.

4.3 PROJECT/SITE CONDITIONS

- A. For all environmental recommendations, refer to the master Architectural section.
- B. For all security recommendations, refer to related Division 01.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- C. After completing system installation, including outlet fittings and devices, inspect the exposed finish. The contractor will remove burrs, dirt, and construction debris. If applicable, the Contractor will repair damaged finishes, including chips, scratches, and abrasions, to restore the original appearance.
- D. Contractor shall provide a clean work environment daily, free from trash/rubbish accumulated during and after cabling installation.
- E. Food and drink are not permitted in work areas. They shall be stored, prepared, and consumed only in designated break or cafeteria areas.
- F. Contractor shall keep all liquids (drinks, sodas, etc.) off finished floors, carpets, and tiles. If any liquid or other detrimental (cuts, soils, stains, etc.) damages the above finishes, Contractor shall provide professional services to clean or repair scratched/soiled finishes, at Contractor's expense.

4.4 CLEANING

- A. Work areas will be kept in a broom-clean condition throughout installation.
- B. Remove all unnecessary tools and equipment, unused materials, packing materials, and debris from each area where work has been performed daily, unless designated for storage.
- C. The Contractor will damp clean all surfaces before final acceptance by the Owner.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

SECTION 270100

Operation And Maintenance of Communications Systems

PART 1 - GENERAL

1.1 INTRODUCTION

- A. To make the approval of such a large topic possible, the structured cable topic has been broken into its subcomponents, and each subcomponent was completed, reviewed, and approved in turn. The result is that this comprehensive guideline should provide adequate guidance on this topic.

PART 2 - PRODUCT

2.1 KEY POINTS

- A. Category 6A shielded foil over unshielded twisted pair (F/UTP) is the only approved standard for cabling.
 - 1. Specifically, for all Intermountain health properties, Siemon category CAT6A F/UTP (foil over unshielded twisted pair) cable and associated patch panels, wall plates, and jacks.
 - 2. Only Siemon-certified contractors or certified Intermountain Health cable technicians will install structured cable at Intermountain Health facilities.

2.2 IMPLEMENTATION

- A. This guide is for New Construction and Remodels. These standards will be implemented over time in existing cabling environments as rework is performed.
- B. If servers need to be connected at 10GBaseT and copper is the only option, CAT6A F/UTP is required. New Server connections shall be a minimum of OS1 Single Mode Fiber.
- C. Installations already in place do not require removing or replacing existing CAT5e or newer cabling. All new cabling shall follow the recommendation to use CAT6A F/UTP cabling.

2.3 STANDARD PRODUCT

- A. The approved cable type for horizontal cabling is CAT 6A F/UTP.
 - 1. The Approved Standard Manufacturer for Intermountain Health's horizontal cabling is:
 - a. Siemon Company USA
 - b. 101 Siemon Company Drive
 - c. Watertown, CT 06795
 - 1) Approved Suppliers of Siemon cable, patch panels, jacks, and parts are listed in Appendix 06:

PART 3 - EXECUTION

3.1 HORIZONTAL CABLING

- A. Horizontal Subsystem is the portion of the cabling system that extends from (and includes) the work area telecommunications outlet/connector to the Floor Distributor (FD)/Horizontal Cross-connect (HC) in the telecommunications room (TDR). It consists of the communications outlet/connector, the horizontal cable, an optional consolidation point, and that portion of the cross-connect in the telecommunications room serving the horizontal cable. Each building floor should be served by its own Floor Distributor/Horizontal (FD/HC) Subsystem in the Telecommunications Room (TDR).
 - 1. NOTE: Cable installers have rigorous requirements to be certified for Siemon cables and products. Validation of certification is required before accepting a bid.
 - 2. Current Siemon Approved/Certified Cable Installers for the Siemon Network are listed in Appendix 07.
- B. The horizontal cabling system's reliability is critical to the operation of IS equipment throughout a facility. Installing the cable is highly labor-intensive, and several learned skills are needed to install it

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

correctly. Cable installers are certified; to be certified, installers must demonstrate the ability to install the cable correctly. If the cable is installed by a certified installer and is installed in accordance with the manufacturer's guidelines, the manufacturer will warranty the cable installation.

- C. The manufacturer also requires the cables to be individually labeled and 100% tested and certified. Cable testing and certification equipment is usually expensive and not commonly available at the facility or by many telecom installers. The manufacturer requires Certified Installer companies to be knowledgeable in using "Qualified" Field Testing equipment and provide test results for warranty registration.
 - 1. The contractor is to verify the current "Qualified" tester manufacturers and the current operating software with the manufacturer.
 - 2. Upon completion, contractors will provide Intermountain Health with test results in the operating software format (not PDF, text, or Word).
- D. Much of the cable is installed in walls and the ceiling and usually lasts the lifespan of the building. Like most technology, cable's lifespan is its usability and applicability to future computing technology.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 270113
Warranty, Product, and System**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.
- B. Specifications throughout all Divisions of the Project Manual are directly applicable to this Section, and this Section is directly applicable to them, including but not limited to the listing found in Section 27 00 00.

PART 2 - PRODUCTS

2.1 STANDARD WARRANTY

- A. The contractor shall provide a minimum one (1) year warranty on installation and workmanship, PLUS an Extended Product Warranty and System Assurance Warranty for this wiring system, and shall commit to making available local support for the product and system during the Warranty period.
- B. System Certification: Upon successful completion of the installation and subsequent inspection, the customer shall be provided with a Manufacturer's Warranty certificate.
- C. A permanent link or channel model configuration may be applied to the structured cabling system's horizontal and/or backbone sub-systems. Application assurance is only applied to a channel model configuration. All channels must be qualified for linear transmission performance up to 500 MHz to ensure that high-frequency voltage phase and magnitude contributions do not prove cumulative or adversely affect channel performance.

2.2 EXTENDED WARRANTY

- A. The manufacturer of passive telecommunications equipment used in a manner not associated with the Systems Warranty must have a minimum five (5) year Component Warranty on all its products. The Product's Warranty covers the components against defects in material or workmanship under normal and proper use.
 - 1. Special Project Warranty: A full end-to-end written warranty mutually executed by the manufacturer and the principal Installer, agreeing to replace and install voice/data distribution system components that fail in materials or workmanship, or do not meet the manufacturer's official published specifications and performance criteria within the special Project warranty period specified below. This shall cover applications assurance, cable, and connecting hardware, including labor and materials. This warranty shall be in addition to, and not a limitation of, other rights and remedies the Owner may have against the Contractor under the Contract Documents.
- B. A twenty-five (25) year warranty available for the Category 6A Z-MAX copper structured cabling system shall be provided for an end-to-end channel model installation, which covers applications assurance, cable, connecting hardware, and the labor cost for the repair or replacement thereof. The fiber warranty will be an XGLO twenty-five (25) year warranty, which is based on using laser-optimized single-mode fiber as a minimum.
 - 1. Performance claims based on worst-case testing and channel configurations.
 - 2. Special Project Warranty Period: 25 years minimum, beginning on the date of Substantial Completion.
 - 3. Siemon Certified Warranty Requirements:
 - a. Upon the project's completion, Intermountain Health must receive the Full Warranty Documentation from The Siemon Company before final retention funds are released to the general contractor, electrical contractor, and structured cabling subcontractor, if applicable.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2.3 MAINTENANCE

- A. Support Availability: The Contractor shall commit to making available local support for the product and system during the Warranty or Extended Warranty period.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 270119
Field Testing and Reporting**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.
- B. Specifications throughout all Divisions of the Project Manual are directly applicable to this Section, and this Section is directly applicable to them, including but not limited to the listing found in Section 27 00 00.

1.2 SYSTEM DESCRIPTION

- A. The owner reserves the right to be present during any or all testing.
- B. The objective of this project is to provide a complete communications cabling infrastructure system installation including, but not limited to fiber backbone, riser system, horizontal data and voice cabling with associated terminations, mounting equipment, cable pathway and management systems, testing and other items/materials, as specified in drawings, these specifications, and contract documents.
- C. The Contractor's BICSI Registered Communications Distribution Designer (RCDD) supervisor shall review, approve, and stamp all documents before submitting. The Contractor's RCDD shall warrant in writing that 100% of the installation meets the requirements specified herein upon completion of all work.
- D. Product Certificates shall be signed by manufacturers of cables, connectors, and terminal equipment certifying that products furnished comply with requirements.
- E. Upon completion of testing the installed system, the contractor shall submit the required field test reports in the specified format and media.
- F. The contractor shall deliver the manufacturer's signed long-term warranty for the installed cabling system, including all components that comprise the complete cabling system. Delivery will be affected within two weeks of the final punch list review. Failure of any component to pass system component tests shall be promptly corrected, repaired, or replaced to meet standards compliance.

1.3 PREFERRED OWNER INSPECTION & TEST CHECKPOINTS

- A. DCO & ICT Inspection Milestones and responsibilities need to be coordinated into the master project plan to allow the GC to make timely arrangements. All are per floor and/or phase.
 - 1. ICT & DCO = Framing, during and/or after boxes & conduits are in place, prior to sheetrock.
 - 2. ICT = When the cable basket is starting to be installed.
 - 3. ICT = When the cable basket is ready, but before pulling the cable.
 - 4. ICT & DCO = When TDRs are ready for racks and ladders.
 - 5. DCO = When anchoring racks and laying out equipment.
 - 6. ICT & DCO = When the TDR environmental requirements are ready, the room must be dust-free and secure. See the attached TDR checklist.
 - a. The TEC and TDRs must be high on the build timeline and be completed early in the construction to accommodate the building systems to be tested and commissioned, such as BAS, Security, and Wireless Network.
 - 7. ICT = When trim and testing are in progress.
 - 8. OTHERS
 - a. Depending on the project, the manufacturer will inspect 1 or 2 times.
 - b. DCO or ICT = When problems or questions arise.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

PART 2 - PRODUCTS

2.1 SITE TESTS & INSPECTIONS

- A. Before pulling the cable, the cabling contractor shall schedule an inspection of the pathways with a member of the Data Center Operations Infrastructure cabling team.
- B. The contractor shall test the communications infrastructure system upon completion, including all pathways and grounding.
 - 1. Before testing, the Cables and termination modules shall be affixed, mounted, or installed to the designed/specified permanent location.
 - 2. Any removal and reinstallation of any component in a circuit, including faceplates, requires retesting of that circuit and any other disturbed or affected circuits.
 - 3. Approved instruments, apparatus, services, and qualified personnel shall be utilized.
 - 4. If tests fail, Contractor shall correct as required to produce a legitimate passing test.
 - 5. Manipulating tester parameters on a failing test to achieve a passing test is unacceptable.
- C. These specifications will be strictly enforced. The Contractor must verify that the specifications' requirements are fully met through testing with an approved tester (rated for testing the cable type in use) and documentation as specified below. This includes confirmation of requirements by demonstration, testing, and inspection. A demonstration shall be provided in soft copy at the final walk-through.
- D. Before installation, the contractor must notify the owner of the likelihood of a cable exceeding standardized lengths. Without the owner's written approval and prior written notice, testing that shows some or all pairs of cable not meeting specifications shall be replaced at the Contractor's expense (including respective connectors).
- E. Testing is still required for non-compliant cabling. The tests shall be for wire-mapping, opens, cable-pair shorts, and shorts-to-ground. The test results must be within acceptable tolerances and shall be submitted with the Owner's acceptance document.

2.2 CABLE TESTING PLAN

- A. The Contractor shall:
 - 1. Before beginning cable testing, provide a complete and detailed test plan for approval of the cabling system specified herein, including a complete list of test equipment for copper and fiber optic components and accessories. The following minimal items shall be submitted for review:
 - a. All testing methods that clearly describe procedures and methods.
 - b. Product data for test equipment
 - c. Certifications and qualifications of all persons conducting the testing.
 - d. Calibration certificates indicate that equipment calibration meets National Institute of Standards and Technology (NIST) standards and has been calibrated at least once in the previous year of the testing date.
 - 2. Include validation and testing. The owner will require that the telecommunications cabling system installed by the Contractor be fully certified to meet all necessary requirements to comply with referenced IEEE and TIA specifications and the vendor's warranty.
 - 3. The source/cause of test failure readings will be determined, and the malfunctioning component and/or workmanship within each channel or permanent link will be corrected. A retest will be performed to demonstrate compliance until the corrected failure produces a passing result.

2.3 CABLE TESTING REPORTS

- A. The Contractor shall submit cable test reports as follows:
 - 1. Submit certified test reports of Contractor-performed tests.
 - a. The tests shall clearly demonstrate that the media and its components fully comply with the requirements specified herein.
 - b. (1) A set of electronic test reports shall be submitted and clearly identified with cable identification.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

PART 3 - EXECUTION

3.1 TEST EQUIPMENT

- A. All transmission testing of balanced twisted-pair cables shall be performed with an approved Level III balanced twisted-pair tester found on the Siemon Ally Website. The latest version of the software shall be installed before conducting testing. Refer to the Siemon Warranty Documents for proper testing requirements of associated cables and components.
- B. All balanced twisted-pair field testers shall be factory calibrated each calendar year by the field test equipment manufacturer as stipulated by the manuals provided with the field test unit. The calibration certificate shall be provided for review before the start of testing
- C. Auto test settings provided in the field tester for testing the installed cabling shall be set to the default parameters
- D. Test settings selected from options provided in the field testers shall be compatible with the installed cable under test.

3.2 TEST METHOD / CRITERIA

- A. Copper Testing
 - 1. Testing all newly installed cable channels shall be performed before system cutover.
 - a. Visually inspect F/UTP and optical fiber cable jacket materials for NRTL certification markings. Inspect cabling terminations in communications equipment rooms for compliance with color-coding for pin assignments and inspect cabling connections for compliance with TIA/EIA-568-C.1.
 - b. Visually confirm Category 6A marking of outlets, cover plates, outlet/connectors, and patch panels.
 - c. Visually inspect cable placement, cable termination, grounding and bonding, equipment, patch cords, and labeling of all components.
 - d. Test F/UTP copper cabling for DC loop resistance, shorts, opens, intermittent faults, and polarity between conductors. Test the operation of shorting bars in connection blocks. Test cables after termination, but not cross-connection.
 - e. Test instruments shall meet or exceed the applicable requirements in TIA/EIA-568-C and those required by the manufacturer to validate and start the warranty.
 - 2. Copper Testing all 500 MHz category 6A field-testing shall be performed with an approved level 111e balanced twisted-pair field test device, that complies with performance requirements in "Test Instruments (Normative)" Annex, complying with measurement accuracy specified in "Measurement Accuracy (Informative)" Annex (Level IIe or IIIe balanced twisted pair field test device). Use only test cords and adapters qualified by test equipment manufacturers for channel or link test configuration.
 - 3. All installed 500 MHz category 6A channels shall perform equal to or better than the minimum requirements as specified below:
 - a. Category 3 balanced twisted-pair backbone cables, for the channel shall be 100 percent tested according to ANSI/TIA/EIA-568-C.1. Test parameters include wire map plus F/UTP (ScTP) shield continuity (when present), insertion loss, length, and NEXT loss (pair-to-pair). NEXT testing shall be done in both directions.
 - b. 500 MHZ Category 6A balanced twisted-pair horizontal and backbone cables shall be 100 percent tested.
 - 4. F/UTP Performance Tests
 - a. Wire map.
 - b. Length (physical vs. electrical, and length requirements)
 - c. Insertion loss
 - d. Near-end crosstalk (NEXT) loss
 - e. Power sum near-end crosstalk (PSNEXT) loss
 - f. Equal-level far-end crosstalk (ELFEXT)
 - g. Power sum equal-level far-end crosstalk (PSELFEXT)
 - h. Return loss

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- i. Propagation delay
 - j. Delay skew
 - k. F/UTP Shield continuity
 - 5. Final Verification Tests: Verification tests for F/UTP systems are performed after the complete communications cabling and workstation outlet/connectors are installed.
 - 6. Document data for each measurement. Data for submittals shall be printed in a summary report.
 - 7. End-to-end cabling will be considered defective if it does not pass tests and inspections.
 - 8. Prepare and submit test and inspection reports.
- B. Horizontal Fiber Testing
- 1. Fiber horizontal cables shall be 100% tested for insertion loss and length.
 - 2. Insertion loss shall be tested at 850 nm or 1300 nm for 50/125µm and 62.5/125µm multimode cabling in at least one direction using the Method B (1-jumper) test procedure as specified in ANSI/TIA/EIA-526-14A.
 - 3. Length shall be tested using an OTDR, optical length test measurement device or sequential cable measurement markings.
 - 4. The horizontal link performance guarantees are based on an optical fiber calculation for the appropriate fiber solution. Optical fiber calculations shall be determined using the Siemon Fiber Loss Calculator on the Siemon Ally Website.
- C. Backbone Fiber Testing
- 1. Fiber backbone cables shall be 100% tested for insertion loss.
 - 2. Insertion loss shall be tested at both 850 nm and 1300 nm for 50/125µm and 62.5/125µm multimode cabling and at both 1310 nm and 1550 nm for 8.5/125µm single mode cabling in at least one direction using the Method B (1-jumper) test procedure as specified in ANSI/TIA/EIA-526-14A.
 - 3. Insertion loss shall be tested at 1310 and 1550 for single-mode cabling in at least one direction using Method A.1 (1-jumper) test procedure as specified in ANSI/TIA/EIA-526-7.
 - 4. Length shall be tested using an OTDR, optical length test measurement device, or sequential cable measurement markings.
 - 5. The backbone link performance guarantees are based on an optical fiber calculation for the appropriate fiber solution. Optical fiber calculations for any fiber cable greater than 90m (295 ft.) shall be determined using the Siemon Fiber Loss Calculator found on the Siemon Ally Website.

3.3 DEMONSTRATION

- A. Include training for appropriate IT staff in numbering system, documentation system methods, record keeping, proper fiber terminations, and fiber jumper installations.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

SECTION 270133

Shop Drawings Product Data Samples Design Records & Existing Conditions

PART 1 - SHOP DRAWINGS, PRODUCT DATA, AND SAMPLES

1.1 SUBMITTALS

- A. The Contractor:
 - 1. Shall not perform any portion of the work requiring submittal and review of shop drawings, product data, or samples until the Owner has approved the respective submittal. Such work shall be in accordance with approved submittals.
 - a. Shop drawings as required by the owner, or as a minimum, to include a minimum of two sets of a plan view and elevations of all work to be installed. The Contractor shall make any corrections required by the owner or the owner's representative or consultant team, file with him two corrected copies, and furnish such other copies as needed. The consultant's approval of such drawings or schedules shall not relieve the Contractor from responsibility for deviations from drawings or specifications, unless he has in writing and called to the Architect's attention such deviations at the time of submission, nor shall it relieve him from responsibility for errors of any sort in shop drawings or schedules.
- B. The Contractor shall provide a copy of the Certified Test Data Sheet, available from the delivering distribution warehouse, for either a full run or cut piece from the Master Reel of the fiber cable to be installed
 - 1. The Certified Test Data Sheet shall include the Master Reel number, cable description, passing test result with details, test equipment description, date certified, and a certificate of compliance stamp. It shall be included in the O&M Manual as a component of the final deliverables submittal package.

1.2 DRAWINGS

- A. Shop Drawings
 - 1. The Contractor shall:
 - a. Submit catalogue cut sheets that include manufacturer, trade name, and complete model number for each product specified. Model number shall be handwritten, marked with an arrow, or underlined to indicate exact selection.
 - b. Identify the applicable specification section reference for each product performance for each component specified for approval before purchase and installation.
- B. Record Drawings
 - 1. Drawings for the cabling system infrastructure elements shall be maintained and kept on file by the Siemon Certified Installer (Company) for the entire term of the warranty. Drawings shall include:
 - a. Horizontal cable routing and terminations
 - b. Telecommunications outlets/connectors
 - c. Backbone cable routing and terminations
 - d. Telecommunication Spaces (TS)
- C. Samples
 - 1. For workstation outlet connectors, jack assemblies, housing, and faceplates for color selection and evaluation of technical specifications and requirements. Confirm the color with the architect, the interior designer, and the owner representative before purchasing materials. Face plates shall match the electrical face plates in Color and material type.
 - 2. Upon request, provide samples for workstation outlets, jacks, and jack assemblies in the specified finish, one for each size and outlet configuration
 - 3. Sample mock-up rooms may be required in some areas to ensure proper equipment placement and fit.
- D. Qualifications:
 - 1. The Contractor shall provide the appropriate documentation to comply with the requirements outlined in Section 01 43 23 Qualifications, included with and at the time of the bid submission.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

PART 2 - SUSTAINABLE DESIGN RECORDS AND REPORTS

2.1 DRAWINGS

- A. Closeout Submittals (As-built Drawings):
 - 1. Communications Design drawings will be supplied to the Architect so that the master "As-Built" drawings can be prepared.
 - 2. As-built drawings shall be compatible with the Architect and consultant's format. The dimensions and scale of the drawing sheets submitted shall match the size of the drawing used for the contract documents and shall include the cable numbers labeled per this document.
 - 3. Utilize commonly recognized drafting procedures that match standards, architect and consultant guidelines, and methodology.
 - 4. The As-Built drawings shall incorporate all changes to the building identified in, but not limited to, addendum, change notices, site instructions, or deviations resulting from site conditions.
- B. Contractor shall:
 - 1. Clearly identify any resubmitted drawing sheets, documents, or cut sheets by using a color to highlight or cloud around resubmitted information.
 - 2. Maintain consistency of drawing numbering or page/sheet scheme per previously issued drawings/documents.
 - 3. Provide dimensioned plan and elevation views of networking components, showing:
 - a. All communications data/voice outlet locations complete with outlet/cable labeling.
 - b. Cable routing paths of communications cables to identified infrastructure pathways.
 - c. All rack and cabinet locations and labeling thereof.
 - d. One-line diagram of equipment/device interconnecting data/voice cabling of the data and voice systems.
 - e. Standard or typical installation details unique to the Owner's requirements.
 - f. Graphic symbols and component identification on detail drawing shall conform to the latest ANSI/TIA 568-C, ANSI/TIA 569-B, ANSI/TIA 606-A, and ANSI/NECA/BICSI 607-A conventions.
 - 4. Submit one soft (compatible with Microsoft software) and hard copy with project deliverables within three weeks after substantial completion.
 - 5. A hard copy of the floor plans shall be plotted to a standard, saleable, identified drawing scale for record.

2.2 RECORDS AND REPORTS

- A. All records shall be created by the installation contractor and turned over at the completion of work.
 - 1. The format shall be computer-based
 - a. Soft copies and hard copies shall be part of the As-built package.
 - b. The minimum requirements include:
 - 1) Cable records must contain the identifier, cable type, termination positions at both ends, splice information, and any damaged pairs/conductors.
 - 2) Connecting hardware and connecting hardware position records must contain the identifier, type, damaged position numbers, and references to the attached cable identifier.
 - c. The As-built package shall include Test documentation on all cable types.
- B. All Siemon Warranty Registration documents shall be included.
- C. All reports shall be generated from the computer-based program used to create the records above. These reports should include, but not be limited to:
 - 1. Cable Reports
 - 2. Cross-connect Reports
 - 3. Connecting Hardware Reports

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

PART 3 - EXISTING CONDITIONS SITE SURVEY

3.1 SITE SURVEY

- A. Before placing any cable pathways or cable, the contractor shall survey the site to determine that job conditions will not impose any obstructions that would interfere with the safe and satisfactory placement of the cables. The arrangements to remove any obstructions with the Project Manager must be determined at that time.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

SECTION 270143

Qualifications and Required Training for Contractors and Installers

PART 1 - GENERAL INSTALLER QUALIFICATIONS

1.1 ENTITIES

- A. Communications contractors
 - 1. The Communications Contractor shall, at a minimum, possess the following qualifications:
 - 2. The contractor shall be a Siemon Certified Contractor with valid, up-to-date contract certification and good standing with the Siemon Company.
 - 3. Be in business for a minimum of five (5) years.
 - 4. The contractor shall demonstrate satisfaction of sound financial condition and be adequately bonded and insured if the project deems it necessary.
 - 5. Possess those licenses/permits required to perform telecommunications installations in the specified jurisdiction.
 - 6. Use personnel knowledgeable in local, state, provincial, and national codes and regulations. All work shall comply with the latest revision of the codes or regulations. When conflict exists between local or national codes or regulations, the most stringent codes or regulations shall be followed.
- B. Contractors must possess current liability and workers' compensation insurance certificates.
- C. Contractors must be registered with BICSI and have at least one RCDD on staff or an ITS Cabling Installer Program Technician certification and Installer Level 1 & 2 for a minimum of 75 percent of staff.

1.2 TRAINING

- A. The Contractor shall be fully conversant and capable of cabling low voltage applications such as, but not limited to, data, voice, and imaging network systems. The Contractor shall, at a minimum, possess the following qualifications:
 - 1. Personnel trained and certified in the design of the Siemon Cabling System®.
 - 2. Personnel trained and certified to install the Siemon Cabling System®.
 - 3. The Designer and Installer shall show proof of the Siemon Cabling System®'s current certification via an updated certificate given after attending the Certified Installer training course or an online recertification class given every two years.
 - 4. Provide references for the type of installation provided in this specification.
 - 5. Personnel trained and certified in installing copper cable and using Level IIIe Copper Transmission Performance testers, fiber optic cabling, splicing, termination, and testing techniques. Personnel must have experience using an optical light source, a power meter, and an OTDR.
 - 6. Personnel trained in installing pathways and supports for housing horizontal and backbone cabling.
- B. Facilities Orientation
 - 1. Personnel must complete the on-site Facilities Orientation

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 270171
Responsibility and Workmanship of Contractor**

PART 1 - GENERAL

1.1 CONTRACTOR RESPONSIBILITY

- A. The contractor shall be obligated to exercise the highest standard of care in performing its obligations as defined in a request for proposal. All work shall be done in a workmanlike fashion that meets the highest standards in the telecommunications industry.
- B. All equipment and materials are to be installed neatly and securely, while cables are to be dressed appropriately in accordance with standards recommendations for a specific type of media (i.e., UTP vs. F/UTP @ 10 Gigabit)
- C. Workers must clean any debris and trash at the close of each job and workday.
- D. The Contractor acknowledges that Intermountain Health will rely on the Contractor's expertise, ability, and knowledge of the proposed system and shall be obligated to exercise the highest standard of care when performing contractual obligations as defined in the Scope of Work.
- E. The contractor must submit the Siemon warranty, cable records, as-built drawings, and test results upon completion of the work. Note: Intermountain Health reserves the right to withhold final payments until all registration documents are approved by the Siemon Company and received by Intermountain Health.

1.2 CONTRACTOR AND EMPLOYEE RESPONSIBILITY

- A. Contractors, their employees, and installers will attend Intermountain Health's required Infection Control training annually.
- B. Contractors, their employees, and installers will complete Symplr registration.
- C. Contractors, their employees, and installers will attend Intermountain Health's required site and job-specific orientation.
- D. Contractors, their employees, and installers will maintain Intermountain Health's required immunizations.
- E. Contractors, their employees, and installers will keep their Intermountain Health required confidentiality agreements current.
- F. Contractors, their employees, and installers always agree to follow all Intermountain Health Policies and procedures and wear the appropriate ID while on any Intermountain properties.
- G. The contractor will determine with the Owner the appropriate level of Environmental Containment precautions to utilize for each work location. Infection Control Risk Assessments and permits will be performed as required.
- H. Upon request, provide qualification data for all qualified layout technicians, installation supervisors, and field inspectors.
 - 1. Siemon issued qualification badges shall be readily available for this purpose.

1.3 EXAMINATION

- A. Field Measurements: Before fabrication, verify dimensions in installation areas by field measurements and indicate measurements on shop drawings. Coordinate the fabrication schedule with construction progress to avoid delaying the work.
- B. Established Dimensions: Where field measurements cannot be made without delaying the work, establish dimensions and proceed with fabricating units without field measurements. Coordinate supports, adjacent construction, and fixture locations to ensure actual dimensions correspond to established dimensions.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1.4 PREPARATION

- A. Pre-installation inspection
 - 1. The Contractor shall visually inspect all cables, cable reels, and shipping cartons to detect possible cable damage incurred during shipping and transport. Visibly damaged goods are unacceptable and shall be replaced by the contractor at no additional cost to the Owner.

1.5 MISCELLANEOUS CONTRACTOR RESPONSIBILITIES

- A. Contractors will maintain unobstructed egress in work areas.
- B. The contractor will keep access to all emergency services.
- C. Contractor will maintain training for Personnel in alternate exits if needed.
- D. Contractor will maintain Temporary construction partitions, as required, that are smoke-tight and built of non-combustible materials.
- E. Additional Fire Extinguishers may be required and will be adequately maintained and inspected.
- F. The construction site will be maintained clean and orderly.
- G. The contractor will observe Intermountain Health's Tobacco Use Policy. (All forms of tobacco use are strictly prohibited.)
- H. All Electrical Extension cords will be grounded, in good condition, and plugged into approved GFI Receptacles.
- I. Construction sites will be restricted. (Approved personnel only)
- J. Personal Protective Equipment (PPE) will be worn as required. (i.e., hard hats, safety glasses, safety shoes, fluorescent vest, in accordance with the general contractor's safety policy)
- K. Tools will be unplugged, and power will be secured at the end of each working day.
- L. All employees and contractors will understand how to obtain MSDS sheets.
- M. The contractor will notify the proper personnel of any fire system shutdown within 48 hours.
- N. The contractor will address all vibration concerns to Intermountain Health and the general contractor's staff.
- O. The contractor will address all Noise Issues with Intermountain Health and the general contractor's staff.
- P. The contractor will fill out a Hot Work permit and keep it on site daily as needed.
- Q. The contractor will fill out an Above Ceiling Work Permit and keep it on site daily as needed.
- R. The contractor will complete an Infection Prevention permit and not begin work until approved.
- S. Contractors will obtain a Confined Space Permit, when required, and keep it on site.
- T. The contractor shall notify Information Systems 72 hours before any shutdown or known interruption of required environmental services. Follow up by notifying the Service Desk.
- U. The low-voltage installation contractor shall perform demolition of low-voltage cabling.
 - 1. To prevent accidental removal of in-use circuits.
 - 2. To allow for the re-use of circuits where practical.
- V. Before removing unused low-voltage cabling, you must verify that both ends are no longer attached to any device. (Both ends of the cable are un-terminated).

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 270500
Common Work Results for Communications**

PART 1 - PRODUCT

1.1 SUMMARY

- A. This section covers general work results for all Communications Division detail subsections.
- B. Work of the following sections covers a complete installation of permanent and channel links for a data and voice communications network utilizing copper and fiber transmission media.

PART 2 - EXECUTION

2.1 SCOPE OF WORK

- A. Includes, but is not limited to, the following.
 - 1. The Contractor shall:
 - 2. Provide and install fabric and/or plenum, PE, or PVC Innerduct, rated appropriately for the installation environment, in accordance with all applicable codes and ordinances.
 - 3. Provide, install, terminate, test, label, and document all fiber backbone, fiber, and copper riser cable.
 - 4. Provide, install, terminate, test, and document all fiber, copper voice, and data horizontal cable.
 - a. CAT6A UTP and CAT6A F/UTP shall not be mixed on the same campus.
 - 5. Provide and place all termination devices, such as, but not limited to, modular patch panels, blank panels, termination blocks, information outlets (jacks and plates), phone jacks, fiber distribution panels, bulkheads, connectors, and fiber fan-out kits.
 - 6. Provide in quantities specified interconnect components such as, but not limited to, copper patch cords, fiber patch cables.
 - 7. Provide and place horizontal and vertical cable support devices such as, but not limited to, rack and wall-mounted horizontal and vertical cable management, cable runway, communications cable runway, and all required mounting hardware, unless otherwise noted.
 - 8. Provide and install all equipment, mounting racks, cabinets, and/or brackets.
 - 9. In coordination with the general contractor, provide and install UL-approved fire-stopping systems in all communication pass-thrus, conduits, cable trays, and ceiling, wall, and floor penetrations.
 - 10. Provide all appropriate consumable items required to complete the installation.
 - 11. Grounding and bonding in TEC and TR rooms to grounding bus provided by Division 26.
 - 12. Provide complete documentation and demonstration of work.
 - 13. Completion of all punch list deficiencies within 10 working days.
 - 14. Provide indexed and organized complete Test Results of all copper and fiber cable and their components.
 - 15. Provide Submittals.
 - 16. Conduct a final document handover meeting with the client, consultant, and PM to review, discuss, and educate the Owner on the test results and As-Built Drawings.
 - 17. Provide a Manufacturer's Extended Product Warranty and System Assurance Warranty for this wiring system.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

SECTION 270526

Grounding and Bonding for Communications Systems

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. This work shall be provided by Division 26.
 - 1. Division 26 shall provide and install the communications system grounding bus bar.
- B. Systems other than the voice/data system shall be bonded by their respective installers or Division 26.
- C. Exception: Division 27 shall bond racks, ladders, and other conductive IT equipment and enclosures as required.
- D. Requirements of the following Division 26 Sections apply to this section:
 - 1. Basic Electrical Requirements
 - 2. Basic Electrical Materials and Methods
 - 3. Grounding and Bonding for Electrical Systems

1.2 SUMMARY

- A. This Section includes methods and materials for grounding and bonding Communications systems.
- B. All grounding/earthing and bonding shall comply with applicable codes and regulations. It is recommended that the requirements of IEC/TR 61000-5-2: 1.0, ANSI-J-STD-607-A, or both be observed throughout the entire cabling system.

PART 2 - PRODUCTS

2.1 CONDUCTORS

- A. Insulated Conductors: Copper wire or cable insulated for 600 V unless otherwise required by applicable Code or authorities having jurisdiction.
 - 1. Stranded conductors No. 6 AWG.

2.2 CONNECTORS

- A. Listed and labeled by a nationally recognized testing laboratory acceptable to authorities having jurisdiction for applications in which used, and for specific types, sizes, and combinations of conductors and other items connected.
- B. Compression fitting – 2-hole strap.

PART 3 - EXECUTION

3.1 QUALITY ASSURANCE

- A. Electrical Components, Devices, and Accessories: Listed and labeled as defined in NFPA 70 (NEC), Article 100, by a testing agency acceptable to authorities having jurisdiction, and marked for intended use.
- B. Comply with UL 467 for grounding and bonding materials and equipment.

3.2 APPLICATIONS

- A. Conductors: Install stranded conductors for No. 6 AWG and larger, unless otherwise indicated.

3.3 INSTALLATION

- A. Grounding Conductors
 - 1. Route along the shortest and straightest paths, unless otherwise indicated or required by Code.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- a. Avoid obstructing access or placing conductors where they may be subjected to strain, impact, or damage.
 - 1) The jumper across all tray junctions uses two-hole crimp lugs with a bolt, lock washer, and nut to prevent the ground connections from loosening over time.
 - 2) The contractor will remove a small powder coat or paint area to create a metal-to-metal bonding connection.
 - 3) Per current BICSI TDMM "Grounding, Bonding and Electrical Protection":
 - 4) Grounding and bonding connectors should be one of the following: Tin-plated copper, copper, or copper alloy
 - 5) Connections should be made using crimp connectors or exothermic welding.
 - 6) Per TIA/EIA 607-A the TBB (Telecommunications Bonding Backbone) connections "shall be made using irreversible compression-type connectors, exothermic welding or equivalent."

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 270528
Pathways for Communications Systems**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Main pathways for communications systems shall be the responsibility of the Division 27 low-voltage contract.
 - 1. Includes, but is not limited to, hangars, supports, J-hooks, and cable trays.
 - 2. Sections 270536 and 270543_46 are supplemental clarifications that are additions to this section. The appropriate section(s) shall be added for the material used.
- B. The Division 26 electrical contractor shall be responsible for conduits, pathways, and boxes embedded within building finishes for communications systems.
- C. Requirements of the following Division 26 sections apply to this section.
 - 1. Basic electrical requirements
 - 2. Basic electrical materials and methods
 - 3. Grounding, earthing, and bonding for electrical systems.

1.2 SUMMARY

- A. Contractors shall install work following specifications, drawings, manufacturer's instructions, and approved submittal data.

PART 2 - PRODUCTS

2.1 CABLE PATHWAYS

- A. Comply with TIA/EIA-569-B.
- B. Pathways shall be designed and installed to meet applicable local and national building and electrical codes or regulations.
 - 1. All materials shall be UL-and/or CSA- and/or ETL-approved and labeled in accordance with NEC for all products where labeling service typically applies.
 - 2. NRTL is labeled for support of Category 6A cabling and designed to prevent degradation of cable performance and pinch points that could damage the cable.
 - 3. Materials and equipment requiring UL 94, 149, or 1863 listing shall be so labeled. Modification of products that nullify UL labels is not permitted.
 - 4. The installed systems shall not generate or be susceptible to any harmful electromagnetic emission, radiation, or induction that degrades or obstructs any equipment.
- C. Pathways consist of fire-rated sleeves, conduit, basket tray/ladder rack, J-hooks, surface-mounted raceway, and power poles.
 - 1. Basket trays shall be utilized for distribution pathways.
 - a. Provides proper support and load distribution along pathways.
 - b. All wall penetration for the basket tray shall be framed.
 - c. Flexibility, scalability, and accessibility.
 - d. The ladder rack shall be used for all TEC and TDRs.
 - 2. Conduits may be utilized where basket trays are not viable, provided the conduit's cross-sectional area is greater than the basket tray's.
 - 3. Fire-rated sleeves must be used instead of conduit when penetrating a fire-rated wall.
 - a. 2" x 2" for room penetrations, 4" x 4" for j-hook pathways
 - b. Approved Manufacturers
 - 1) STI EZ Path

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- 2) Hilti Modular Sleeve
- 4. J-hooks are the minimum pathway device required for all low-voltage contractors for use in ceiling distribution.
 - a. Refer to section 270529.
Note: Surface-mounted raceway and power poles should be installed only when other pathway choices are not feasible.
- D. Outdoor Microduct
 - 1. Manufacturers
 - a. Duraline
 - b. Pre-Approved Equal
 - 2. Description: 7 Way MicroDuct
 - a. All Microduct shall comprise all dielectric materials (except for the armored version). All Microduct shall be manufactured to include enhanced jetting design, such as internal ribbing to minimize surface contact and a permanent slick interior to eliminate the need for jetting lubricant.
 - b. 12.7mm OD1MM ID
 - c. Microduct rating FP (OSP)
 - d. 7-Way
 - e. Color: Orange

2.2 EQUIPMENT

- A. Compatibility
 - 1. All material and equipment provided should be the standard Commercial-Off-The-Shelf (COTS) products of a manufacturer engaged in the manufacture of such products. They shall all be typical commercial designs that comply with the requirements specified. All material and equipment shall be readily available through manufacturers and/or distributors.
 - a. All equipment shall be standard catalogued items of the manufacturer and shall be entirely supplied with any optional items required for proper installation.
 - b. Coordinate the features of materials and equipment so they form an integrated system. Match components and interconnections for optimum future performance and backward compatibility
- B. Horizontal cables shall be installed in “clean, dry” locations that provide protection from moisture levels above the intended operating range of inside plant (ISP) cables.
 - 1. Cable pathways shall be installed to provide protection from the elements (i.e., moisture) and other hazards.
 - 2. Cables and cable pathways shall be protected from detritus elements such as paints, adhesives, water, and cleaners.
 - a. In case of contamination, the cables shall be replaced at the expense of the General Contractors. Cleaning is not acceptable.
 - 1) Pathways shall not have exposed sharp edges that may meet telecommunications cables.
- C. Pathways shall not be in elevator shafts.
- D. Grounding / Earthing and bonding of pathways shall comply with applicable codes and regulations. It is recommended that the requirements of IEC/TR3 61000-5-2—Ed. 1.0, ANSI-J-STD-607-B, or both, be observed throughout the entire cabling system.

2.3 SURFACE MOUNTING

- A. Surface Mount Cable Runs and Faceplate Boxes
 - 1. Surface mounting of cable pathway runs and/or boxes for outlets/faceplates is only authorized as a last resort and as an exception to running cables through the wall and above the ceiling.
 - a. If surface mount cable runs are used:
 - 1) Burs will be removed from the inside of the plastic or metal surface mount pathway to prevent damage to cables pulled through the run.
 - 2) Raceway manufacturer plastic bushings shall be installed at all outlet openings in the raceway to prevent damage to the cable.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- 3) "T", Splice, and corner pieces will be used to join runs. Runs will not be butted together without the appropriate joining pieces.

PART 3 - EXECUTION

3.1 HORIZONTAL PARAMETERS

- A. Allowable Cable Bend Radius and Pull Tension:
 1. In general, communications cables cannot tolerate sharp bends or excessive pull tension during installation.
 - a. The bend radius for four pair UTP and F/UTP under no load (no pulling tension) shall not exceed four (4) times the outside diameter of the cable and eight (8) times the outside diameter of the cable under load (110N/25lbf). Note: Cable bend radius and pulling tensions for cables other than 4-pair cables increase with the diameter and type of cable. Refer to the manufacturer's recommendations for specific requirements.
 2. After installation, exposed cable and other surfaces must be cleaned free of lubricant residue. Use only lubricants designed explicitly for cable installation.
- B. Pull Strings:
 1. Horizontal and Vertical Pathways
 2. The pathway installer shall:
 - a. Provide pull strings in all new conduits, including all conduits with cable installed as part of this contract.
 - b. Provide pull strings in all new cable trays.
 - c. The pull string shall have a rated average breaking strength of 200 pounds.
 - d. Pull strings must move freely during pulling sessions to prevent cable jacket/cable damage.
 - e. Free-moving pull strings shall be provided in all locations where they are utilized as part of this contract.
 3. Conduit Fill:
 - a. Reference the manufacturer's Design Installation Guidelines manual.
 - b. Comply with the requirements of NFPA 70 (NEC)
 - c. The number of cables placed in a pathway shall not exceed the manufacturer's specifications, and the geometric shape of a cable will not be affected.
 - 1) Conduit pathways shall have a maximum fill ratio of 40% to allow for proper pulling tension and the laying of the CAT6A F/UTP cable. A minimum of a 1" diameter conduit is required for new construction. Existing conduits will require reducing the number of cables placed in the conduit to meet the required fill ratio.

3.2 INTRA-BUILDING CABLE ROUTING

- A. Pathways
 1. The backbone subsystem shall include cable installed vertically between floor telecommunications rooms and the main or intermediate cross-connect in a multi-story building, and cable installed horizontally between Telecommunications rooms and the main or intermediate cross-connect in a long single-story building.
 2. Adequate riser sleeve/slot space shall be available in all telecommunications rooms, with the ability to ingress the area later, so no drilling of additional sleeves/slots is necessary. All sleeves/slots are required for proper fire stopping per national and local codes. Install fire stop material designed specifically for the building construction conditions and to meet the existing fire stop material as directed by the building engineer.
 3. Backbone pathways shall be installed or selected so that the minimum bend radius of backbone cables remains within the manufacturer's specifications during and after installation.
 4. Where redundant paths are required, they shall be separated by a minimum of 24".
 - a. Separate innerducts and/or armored fiber are required for each leg of the redundant path.
 - b. Separate physical routes for each path shall be utilized where possible.
 5. Building backbone cables shall be installed in "dry" locations that provide protection from moisture levels above the intended operating range of inside plant (ISP) cables.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

6. "Slab-on-Grade" building designs wherein pathways are installed underground on/in the poured concrete slabs in direct contact with the soil are considered wet locations and hence are not permitted.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

SECTION 270529

Hangers and Supports for Communications Systems

PART 1 - PRODUCTS

1.1 APPROVED PRODUCT

- A. The J-hooks shall meet or exceed the characteristics of construction and features below
 - 1. Provide broad-based support for cabling to aid in maintaining overall system performance.
 - 2. Be available in 50.8mm (2") and 101.6mm (4") options
 - 3. Come equipped with a cable retention clip
 - 4. Offers a full line of mounting accessories.

1.2 APPROVED MANUFACTURERS

- A. Ericson / Caddy
- B. B-Line
- C. Stiffy

PART 2 - EXECUTION

2.1 J-HOOKS AND OTHER SUPPORTS SHALL BE INSTALLED SUCH THAT

- A. They are supported by devices designed for this purpose and shall be installed independently of any other structural component. J-Hooks shall not use the suspended ceiling support wires or lighting fixture support wires.
- B. The number of cables placed into the J-hooks shall be limited to a number that will not cause a change to the geometric shape of the cables.
 - 1. Limit to a 40% fill in new construction.
- C. J-hooks shall not be spaced farther than 1.5 meters (5 ft.) apart, with a recommendation that they be spaced at 1 meter (3 ft.) apart. Note: Construction may require distances to exceed the maximum and are considered an exception requiring approval of the project manager or building engineer.
- D. J-hooks or better must be installed without exception.
- E. All J-hooks that pass through a fire-rated wall must have an EZ-Path Sleeve or Hilti Modular Sleeve installed to go through the fire wall. The size is to be based on the size of the J-hook. To be installed by the Low Voltage Contractor installing the J-hooks.

2.2 UNACCEPTABLE INSTALLATIONS

- A. Free flight of cables
- B. Resting or attaching cables on pipes, conduits, HVAC duct work, fire sprinkler systems, basket tray, basket tray supports, or ceiling tiles/grid.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

SECTION 270533

Conduits and Back Boxes for Communications Systems

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Division 26-Electrical work

PART 2 - PRODUCTS

2.1 APPROVED PRODUCT

- A. Conduits and back boxes shall meet the construction requirements of the NEC for the type of structure and space in which they are installed. They will be of the diameter and size required to provide adequate fill, bend radius, and connector space. Refer to section 270528

PART 3 - EXECUTION

3.1 CONDUIT SIZING

- A. Conduit size shall be based on the type of cable installed and the required fill ratio and bend radius associated with the specified kind of cable.
1. The minimum conduit size for the back box for CAT6A F/UTP shall be a 1-inch EMT.

Conduit Trade Size (metric designator)	Max number of cables based upon allowable fill		
	Cable O.D.		
	7.4mm (0.29 in.)	8.4mm (0.33 in.)	8.9mm (0.35 in.)
1 (27)	4	3	2
1-1/4 (35)	6	5	4
1-1/2 (41)	9	7	6
2 (53)	14	11	10
2-1/2 (63)	20	16	14
3 (78)	31	24	22
3-1/2 (91)	42	32	29
4 (100)	54	42	37

- B. Conduit and installation shall be provided by Division 26.
- C. All conduit stubs shall be installed with plastic bushings appropriate for the size of conduit used.
- D. Conduits that stub to the accessible ceiling shall be installed in the direction that provides the shortest path to the TDR, complete with a pull string.
- E. Conduit pathway must be provided to the nearest basket tray when the area has a hard lid or a decorative ceiling.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3.2 BACK BOX SIZING

- A. New work back boxes for CAT6A F/UTP shall be a minimum of trade size 4-11/16" x 4-11/16" x 3" (depth) plus a 5/8" plaster ring to allow for proper bend radius and connector termination/installation. Side knockouts shall be avoided.
- B. Back boxes for rework shall meet the exact specifications as those for new work.
 - 1. If existing back boxes or back boxes are smaller due to construction restrictions, devices such as extension rings, bezels, or faceplates shall be used to modify the back box to ensure proper bend radius and connector termination/installation.
 - a. Verification and approval of the size change must be obtained from DCO Infrastructure Cabling and engineering.

3.3 BACK BOX COMPOSITION

- A. All back boxes for IT systems shall be UL/CSA listed and approved for the purpose.
 - 1. Non-metal back boxes shall not be used for any interior IT-related device.

3.4 SPECIAL CONDITIONS – LEAD LINED WALLS FOR RADIATION CONTROL

- A. Refer to the complete IT Lead Lined Wall Procedure – Attachment Appendix 8

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 270536
Cable Tray for Communications Systems**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. This section shall be coordinated with Sections 270528, and 270543_46

1.2 COORDINATION

- A. Before beginning installation, a kick-off meeting should be held to coordinate the tray installation and expectations properly. The General Contractor should arrange it and, at a minimum, include representatives of the following trades: FP&D, Electrical (Div 26), Structured cable, Nurse Call, paging, building automation and control, plumbing, HVAC, fire sprinkler, framing, and others as applicable.
- B. The low-voltage CI cable contractor (Div. 27 subcontractor) and the Data Center Operation Team shall approve and install the wire basket tray routing.
- C. Where adequate space is available, a 4", triple-tier J-Hook pathway shall parallel the basket trays for other services
- D. The cable tray installer shall install the triple-tier J-Hooks.
- E. Single J-Hooks, as needed to extend beyond the triple tier, shall be installed by the trade that will utilize them.
- F. The cable tray shall be a high-priority installation to allow adequate time for proper and complete cable installation before the ceiling grid.

PART 2 - PRODUCTS

2.1 APPROVED PRODUCT

- A. The Cable Ladder Tray meets or exceeds the characteristics of construction and features below:
1. It shall be fully welded and available in a galvanized silver or powder-coated black finish
 2. Have an optional construction using "elongated" shaped wires offering broader support for installed cables.
 3. The Cable ladder tray shall be used in data rooms for horizontal management above the racks.
 4. Ladder shall match the manufacturer of the data racks or be an exact equal.
 5. The ladder shall be assembled with manufacturer-approved parts and methods.
 6. Ladder Rack must be installed using waterfalls.

2.2 PART NUMBERS (SUBMITTAL REQUIRED)

- A. Cable Ladder Tray
1. Refer to Appendix 3 or the plans for part numbers.
- B. APPROVED BASKET TRAY MANUFACTURERS
1. WBT – Wire Basket Ray (preferred).
 2. Simon RouteIT™ Wire Mesh Cable Tray, or equal basket-type tray.
 3. Cabolfil per owner's approval.


PART 3 - EXECUTION

3.1 PATHWAY INSTALLATION

- A. Supports

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1. Installed per the Manufacturer's Specifications and utilize components specific to the maintenance of proper access in and out of the basket tray using bend delimiters.
 2. Distance between supports shall not exceed 5 feet
 - a. Less distance between supports required if per the manufacturer's instructions.
 - b. A minimum of one support is required within 24" on each side of any junction point.
 3. Supports shall be of the trapeze design to provide maximum stability.
 - a. Each support shall attach to the structure via its own hangers.
 - 1) All hanger supports shall be constructed of rigid material such as all-thread.
 - 2) All hangers and supports shall be installed perpendicular and plumb to the tray. No angle supports shall be permitted unless augmented perpendicularly.
 - 3) Vibration and sway (seismic) damping is required.
 - 4) Provide support across the tray width underneath, not via the basket side wires.
 - 5) Building walls do not qualify as support and shall not be used as support.
 - 6) All basket tray penetrations through a wall are to be framed by the General Contractor.
 - b. Support shall be of sufficient strength to support at least 200% of the expected load
 4. Wall-mounted angle brackets shall not be used as a load-bearing support for the basket tray.
 5. Basket Tray should not be installed directly below pressurized water pipes.
- B. Complete system access
1. Basket trays shall have a dedicated free clearance zone surrounding them.
 - a. 12" clear space shall be provided on the side where natural feed will occur.
 - b. 6" clear space shall be provided on the side opposite the feed access.
 - c. 8" clear space above the top of the tray, minimum – recommended 12".
 - d. 3" clear space below the tray.
 2. Exception: Other services may pass through the free clearance zone provided it is perpendicular to the tray direction and does not exceed 6' in width or interfere with the access to pull wire in the tray.
 3. When the basket tray is installed in Hard Lid or decorative locations, access panel locations must be installed at corners or T intersections. Consult DCO personnel on placement.
 4. NOTHING shall be attached to the basket tray or basket tray supports without prior written approval from DCO.

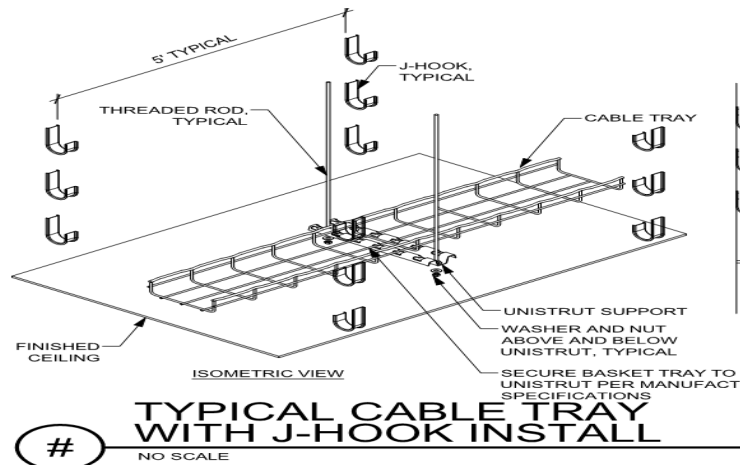

3.2 ROUTING OF BASKET TRAY


- A. The exact basket tray location shall be coordinated with other trades to ensure proper clearances and access. Prior to installation, the owner's DCO/infrastructure cabling team must approve the final cable tray routes.
- B. Basket tray shall be installed in straight lines, either parallel or perpendicular to building lines
- C. Wire basket trays are assumed to include joiner kits, stabilizer kits, rack mount kits, splices, clamps, hangers, supports, waterfalls, and thus no accessories are called out below except the tray divider.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**


- D. Cut basket tray structural components/rods will not be left with any edges that can cause injury to the skin and eyes by someone in the ceiling working. Cut ends are to be covered with a coating or cap.
- E. A waterfall device will protect all changes in cable elevation(s) transitioning between the basket tray and the cable rack.
 - 1. This may also be mitigated by creating a rack 'ramp' which lowers the upper rack to the lower rack by cutting and bending the upper rack to slope downward to the lower rack.
 - 2. This method requires DCO pre-approval and proper ceiling support for the ramp.
- F. Basket tray shall follow the corridor paths
 - 1. Routing above rooms and other partitions shall be avoided
 - 2. The cable tray shall not block access to VAV's valves or other similar equipment.
- G. Basket tray and flush penetrations shall be utilized over hard-lid areas as specified.
- H. Access panels shall be provided where needed to access the basket tray on both sides of the wall in hard lid areas within 3' or less of the basket tray.

3.3 TRAY INTEGRITY

- A. The tray shall be installed as a complete, continuous system with no open spaces, cutouts, or missing segments. Bonding between sections shall be accomplished by the manufacturer's approved clamp or designated method.
- B. Trays shall be free from obstructions, other systems, trash, or debris. Access to the tray shall be provided as outlined.
- C. No other trade infrastructure or equipment may be connected to or rely on the basket tray or its support system.
- D. Tray must not be notched or cut out to accommodate other trades. Repairs will not be accepted. Section replacement will be required at no cost to the owner.
- E. As much tray material as possible shall be left uncut at turns, junctions, elevation changes, width changes, etc. Overlap shall be clamped to maximize strength and prevent pinch points.

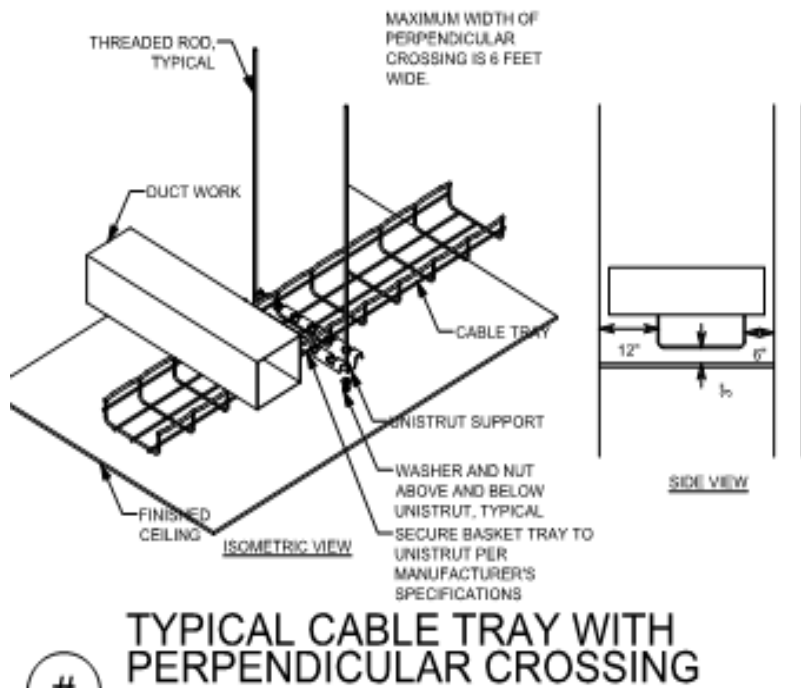

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

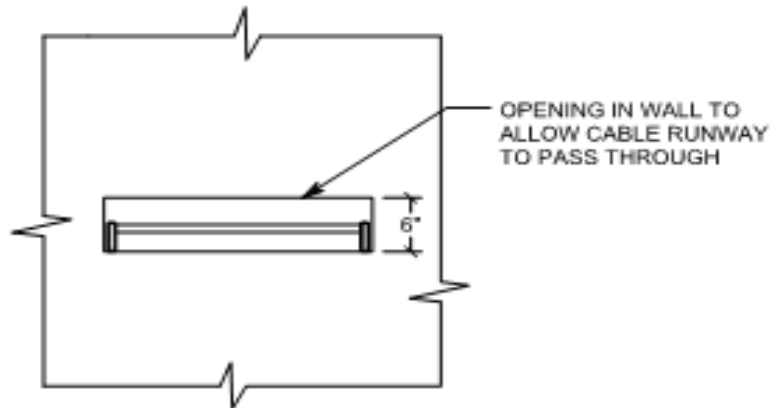

CABLE RUNWAY THROUGH WALL DETAIL

3.4 WALL OR OTHER PENETRATIONS (SUBMITTAL REQUIRED)

- A. Fire and smoke-rated assemblies
 - 1. Penetrations shall comply with all fire and smoke prevention methods per code and as outlined in this document, including Section 270528 and Division 7 (Thermal and Moisture Protection).
- B. Approved penetration methods
 - 1. The preferred barrier penetration method shall be to run the tray continuously through the barrier, with closure provided by Firestop pillows.
 - a. Framing shall be boxed around openings to permit proper pillow insertion. Coordinate with the framing contractor.
 - 2. Sleeves or conduits
 - a. Fire assemblies or alternate penetrations must provide 150% of the designed cross-sectional area of the basket.
 - b. Conduit permitted only with written pre-bid permission or engineering notation on the drawings.
 - c. Each penetration sleeve or conduit shall be bonded on both sides of the penetrated barrier using UL and AHJ-approved methods.
 - 3. All penetrations shall be positioned in line with the basket tray to facilitate ease of pulling conductors and provide a straight-line path.
 - a. The bottom of the penetration device shall be flush with the bottom of the basket tray
 - b. Side-to-side penetrations must be entirely within the cable tray space or directly above whenever possible.
 - 4. Approved penetration devices shall be a minimum size of 4"
 - a. The total penetration space at each location shall be sized for 20% growth and equal to or greater than the cross-sectional area of the basket tray.
 - 5. Approved devices where smaller penetrations are permitted shall be a minimum size of 1".
 - 6. The local facility manager shall approve devices:
 - a. Fire-rated assemblies
 - b. Tray with enclosed walls, properly sized and installed pillows
 - c. Conduit sleeves
 - 1) Conduit sleeves should only be used as a last resort upon approval from the owner's DCO representative.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3.5 UTILIZATION

- A. Capacity
 - 1. Trays and penetration devices shall be sized appropriately
 - a. Provide a maximum calculated fill ratio of 40% to an inside depth not to exceed 3 inches (75 mm)
 - b. Provide capacity to allow for at least 20% future growth
- B. Systems served
 - 1. A single system shall be dedicated to Basket trays, J-hooks, and penetrations. Mixing of other systems with voice and data shall not be permitted in tray or J-hook paths.
- C. Restricted content in trays
 - 1. The wire basket tray shall only contain voice and data communications system cables.
 - a. If there is sufficient space in the tray, and with approval from both the data network subcontractor and DCO, certain other IP services (e.g., camera, telemetry, etc.) may share tray space.
 - b. Service loops must not reduce tray capacity.
 - c. Nurse call cabling shall be run in the J-Hook path. All nurse call installations must provide their own path or utilize the triple J-Hook system.
- D. Triple J-Hook
 - 1. Triple Tree J-Hooks – Caddy CAT64HPS WM3
 - 2. Path Assignments
 - a. The Lower tier of the triple J-Hook path is designated for Card Access, building automation, and controls
 - b. The Middle tier of the triple J-Hook path is designated for Nurse Call.
 - c. The Top tier of the triple J-Hook path is designated for satellite, DAS, or similar systems.
 - 3. When a triple J-hook pathway is not installed or available, each system provider shall install its own J-hook pathway and wall penetrations.
 - 4. Service loop and slack shall not interfere with other pathways.
 - 5. Triple J-Hooks must be a minimum of 4 hooks each.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

SECTION 270553

Identification for Low-Voltage Cables and Labeling

PART 1 - GENERAL

1.1 NOT USED

PART 2 - PRODUCTS

2.1 LABELING

- A. Structured cabling shall be labeled in accordance with ANSI/TIA 606-B standards.
- B. A unique identifier shall be marked on each faceplate to identify it as connecting hardware.
- C. Each port in the faceplate shall be labeled with its identifier.
- D. A unique identifier shall be marked on each piece of connecting hardware to identify it as connecting hardware.
- E. Each port on the connecting hardware shall be labeled with its identifier.
- F. Cable Labeling
 - 1. Label System
 - a. Label Identification (Labeling) System:
 - 1) Brady
 - 2) Dymo
 - 3) Hellerman-Tyton
 - 4) Panduit
 - 5) Acceptable alternate
 - a) Approval from the Data Center Operations Infrastructure Cabling team member is required before bidding.
 - 2. Cable Labels
 - a. Self-adhesive vinyl or vinyl-cloth wraparound tape markers, machine printed with alphanumeric cable designations. Plastic, self-adhesive labels are not acceptable.
 - b. Each end of the Horizontal cables shall be labeled with a mechanically generated label within 300mm (12 in) of the end of the cable jacket, with the link identifier, which shall be a unique configuration determined by the owner. This also applies to Backbone Cables.
 - 3. Flat-surface labels
 - a. Self-adhesive vinyl or vinyl-cloth labels, machine printed with alphanumeric cable designations.
 - 4. Contractor shall:
 - a. Provide transparent plastic label holders and four pairs of marked colored labels.
 - b. Install colored labels according to the field type as per ANSI/TIA 606-B.1 color code designations.
- G. Palette
 - 1. Use the owner's color-code guidelines for voice, data, cross-connect, riser, and backbone fields. Otherwise, use the ANSI/TIA 606-B designation strip color-code guidelines for voice, data, cross-connect, riser, and backbone fields. Color designations for F/UTP cable:
 - a. Intermountain Health Standard Wiring Palettes for Horizontal Cabling

Use	Color
Data & IP Phones	Blue
Analog Phone	Blue
Security Card Readers	Grey/Yellow

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

IP Security Cameras	Blue
Fire Systems	Red
TV Coax	Black
Public Address/Telecom Patching in TEC Only	White
Clinical Engineering	Orange
a. Monitoring, Bed Systems	Orange
b. Nurse Call (5e)	Orange
c. Real time patient data	Orange
Wireless	Yellow
Foreseer (Belden 1422)	Red

- H. Outlet/Jack/Faceplate Icons/labeling will match the color of the cable attached to the back side of the outlet/jack.

PART 3 - EXECUTION

3.1 GENERAL IDENTIFICATION

- A. The installer shall label all cables, regardless of length.
- B. Identify system components, wiring, and cabling complying with TIA/EIA-606-B.1. Comply with requirements for identification specified in Division 26 Section "Identification for Electrical Systems."
- C. Color-code cross-connect fields. Apply colors to voice and data service backboards, connections, covers, and labels.
- D. Using cable management system software specified in Part 2, develop Cabling Administration Drawings for system identification, testing, and management. Use a unique, alphanumeric designation for each cable and label the cable, jacks, connectors, and terminals to which it connects with the same designation. At completion, cable and asset management software shall reflect as-built conditions.
- E. Cable Schedule: Post in a prominent location in each equipment room and wiring closet. List incoming and outgoing cables and their designations, origins, and destinations. Protect with a rigid frame and clear plastic cover. Furnish an electronic copy of the comprehensive final schedules for the Project.
- F. Cabling Administration Drawings: Show building floor plans with cabling administration-point labeling. Identify the labeling convention and show labels for telecommunications rooms, backbone pathways and cables, entrance pathways and cables, terminal hardware and positions, horizontal cables, work areas and workstation terminal positions, grounding buses and pathways, and equipment grounding conductors. Follow the convention of TIA/EIA-606-B.1. Furnish an electronic record of all drawings in the software and format selected by the Owner.

3.2 CONCEALED ENDS


- A. Jacks, connectors, terminations, and similar items concealed in locations such as above grid ceilings shall have additional labeling. The additional label shall be on the face of the grid in a visible location immediately adjacent to the termination location.

3.3 CABLE AND WIRE IDENTIFICATION

- A. Label each cable visibly within 4 inches of each termination and tap, where it is accessible in a cabinet, junction, or outlet box, and elsewhere as indicated.
- B. Each wire connected to building-mounted devices is not required to be numbered at the device if the wire's color is consistent with the associated wire connected and numbered within the panel or cabinet.
- C. Label each terminal strip and screw terminal in each cabinet, rack, or panel.


**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1. Individual number wiring conductors connected to terminal strips and identified each cable or wiring group being extended from a panel or cabinet to a building. The mounted device shall be identified with the name and number of devices as shown.
2. Label each unit and field within distribution racks and frames.
3. Cable ID Example

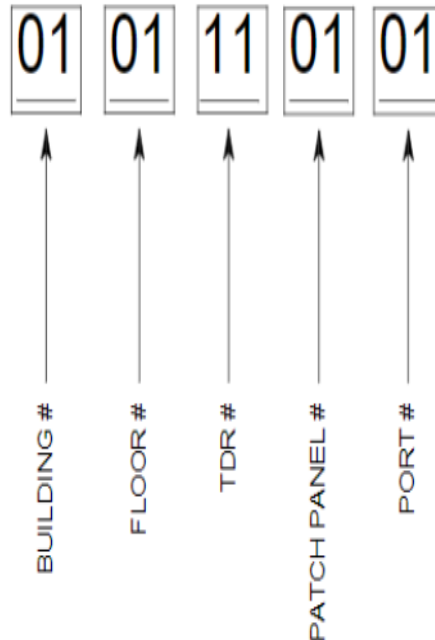

4. Building # - The building number is assigned to the building if multiple buildings exist.
Floor # - Will be incorporated into the TDR #
TDR #—Begin with 1A through 1Z for the 1st Floor, 2A, and so on, per the floor the cabling is on.
Patch Panel #-1 through however many patch panels there are.
Port #-1 -48 for each patch panel.
5. Cable ID Example for Small Clinics.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

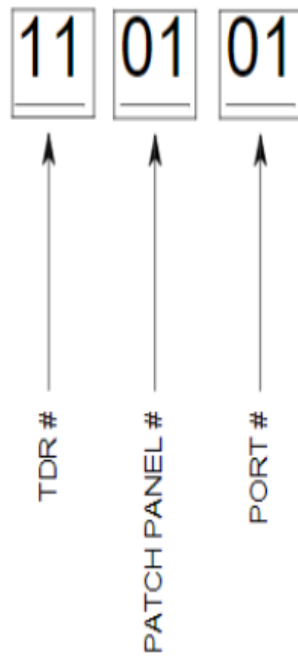

- D. Labels shall be preprinted or computer-printed type with printing area and font color that contrasts with cable jacket color but still complies with requirements in TIA/EIA-606-B.1.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 271100
Equipment Room Fittings**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Requirements of the following Division 26 sections apply to this section.
 - 1. Basic electrical requirements
 - 2. Basic electrical materials and methods
 - 3. Grounding, earthing, and bonding.
- B. Standards
 - 1. Minimum equipment room specifications shall comply with the 2010 AIA Guidelines for Design and Construction of Health Facilities.
 - 2. Minimum recommended room sizes are requirements, not suggestions.
 - 3. Enterprise IS Architecture (EISA) maintains several documents related to standards. The primary standards list is the EISA Standards 2010—Master List. Occasionally, specific standards for an area need to be broken out.

1.2 SUMMARY

- A. This Section details the facilities design and operations standards for Intermountain Health Care's Data Rooms (TEC) and data closets (TDR).

1.3 COMMON REQUIREMENTS

- A. Rack layout and mounting
 - 1. Standard room layouts are located on the plans.
- B. Rack and wall mounting locations.
 - 1. Rack and wall space use is pre-designated at the design stage. Before mounting any equipment on a wall or in a rack, the location must be verified by the Div 27 subcontractor and Data Center Operations.
- C. All Data Centers, TECs, TSERs, TDRs, Cabinets, and Clam Shells must be secured with either a Card Reader, Electronic Key, or a secure device that is recordable and auditable.

1.4 DEFINITIONS

- A. **Data Center** – Major computer/technology/network facilities providing a significant percentage of the data and application services for the enterprise.
- B. **Data Rooms TEC (Technology Equipment Center) Purpose-built buildings or rooms that provide a local facility or region with a communications point of presence and some data and applications services.**
- C. **TSER (Telecommunications Service Entrance Room)** – Houses the point at which data and voice circuits and services enter the facility and outdoor cabling interfaces with the building infrastructure. Typically, the TSER will be in the TEC.
- D. **Data Closets – (TDR) Technology Distribution Room)** – Specific location within a facility that provides communication services for a specific area (floor, wing, office area) of that facility only. A secure, flexible, and easily managed location for structured cabling systems, network electronics, clinical systems, nurse call systems, and other technology and communications equipment.
- E. **Wall Mountable Cabinets** – Specific location within a facility that provides communication services for a specific area when there is no available space for a

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

TDR within that space only. A secure, flexible, and easily managed location for structured cabling systems, network electronics, clinical systems, nurse call systems, and other technology and communications equipment.

PART 2 - TECHNOLOGY ROOM SPECIFIC REQUIREMENTS

2.1 TECHNOLOGY EQUIPMENT CENTER (TEC)

- A. Each Hospital will have a dedicated TEC, which will serve as the main communications point of presence and provide data and application services for the local facility or region. The TEC houses the core networking equipment, application servers, and data storage devices that serve the buildings on the campus. The Telecommunications Service Entrance Room (TSER) will be in the same room.

2.2 TEC IN HOSPITALS

- A. Physical Construction
 - 1. The TEC should be in an area easily accessible for equipment delivery and high traffic without disturbing patient care.
 - 2. The size of the TEC will be based on the number of cabinets required to support the campus, plus 30% growth.
 - 3. TEC should at a minimum be sized to house the following:
 - a. 13 – Data Cabinets
 - b. 3 – in-row cooling units, e.g., Liebert CRV
 - c. 2 – in-row UPS units
 - d. 2 post-patching field for inter-TEC cabinets connections for both copper and fiber.
 - e. Wall space for inter TEC electrical distribution panels, transformers, and MBPs.
 - 4. Walls will be constructed from the floor to the deck and completely sealed from surrounding spaces.
 - a. All usable wall space will be covered by $\frac{3}{4}$ " x 4' x 8' Grade AC fire-rated plywood, with a minimum of 50% of wall space covered in $\frac{3}{4}$ " fire-rated plywood.
 - b. Fire-rated plywood shall be painted with bright white fire-resistant paint.
 - c. Paint must not cover the fire rating stamp on the plywood. One stamp per piece of plywood must be taped off so that it cannot be painted.
 - d. Mount 6" AFF
 - 5. The TEC should not have a ceiling other than an exposed structure.
 - 6. Static Dissipative Tile is required in the TEC.
 - 7. The door to the TEC shall be 8'-0" x 4'-0" to accommodate the cabinet height.
 - 8. The walls of the TEC should not have any windows installed.
 - 9. The TEC will not have infrastructure that serves other trades passing through the TEC, other than that infrastructure that serves the TEC
 - 10. All pressurized supply piping and drain piping will have drip pans or other means installed to contain any failure of these systems.
- B. Layout
 - 1. Cabinets will be laid out in a cold isle configuration.
 - 2. All isles, inside and outside, will be a minimum of 4' wide
 - 3. Containment will be installed, including removable ceiling panels and isle doors.
- C. Electrical
 - 1. The electrical distribution system will follow an A (BLUE) – B (RED) design.
 - 2. A dedicated UPS will back up each system A (BLUE) and B (RED).
 - 3. Source A shall be supplied by a dedicated emergency circuit backed up by a dedicated UPS.
 - 4. Maintenance Bypass Wraparound or equivalent shall be installed.
 - 5. Source B shall be supplied by a dedicated emergency circuit from a different ATS system from Source A and backed by a dedicated UPS.
 - 6. Maintenance Bypass Wraparound or equivalent shall be installed.
 - 7. Cabinet Outlet type is L21-30
 - 8. Provide convenience outlets around the room.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

9. All power is to be run in conduit.
10. Lighting will be installed above each isle and be supplied by an emergency circuit.

D. Mechanical

1. The mechanical system will be a precision cooling solution installed in an in-row, N+1 configuration designed to maintain 72 degrees F at mid-cabinet.
2. The mechanical system will be redundant and concurrently maintainable, including on the electrical supply.
3. The system shall meet engineering specifications for the room at 110 degrees outside air at 4500 feet above sea level.
4. Chilled water, DX (Air Cooled), and Glycol (30% polyethylene glycol to water) are all acceptable cooling strategies.
5. The GC, Mechanical Engineer, and Mechanical Contractor are responsible for the complete installation of the cooling equipment and auxiliary devices included with it. Auxiliary equipment includes, but is not limited to, in-row temperature sensors, leak detection, and local or remote monitoring hardware.

E. Security

1. Doors will be fitted with an auditable card reader.
2. Doors will have an electronic key cylinder installed.

F. Fire System

1. A pre-action dry pipe fire system will be installed.
2. Sprinkler fuses will be rated at 200 degrees F or higher, whichever is allowed.
3. Sprinklers should be protected from accidental activation.
4. The facility system will provide the primary fire detection system.
5. The secondary detection system is a VESDA system monitored by the Lake Park Data Center.

G. Monitoring

1. The Eaton Foreseer system will monitor all critical systems.
2. Foreseer cables will be run to all UPSs, cooling units, and TDRs.
3. One Cat 6a F/UTP cable to each UPS.

2.3 TEC IN CLINICS AND OFFICE BUILDINGS

- A. Clinics and Offices will have a room that serves as a TEC and TDR. This room will be sized to accommodate its multifunctionality.
- B. TEC size will be 12' x 16'

2.4 TEC/TDR IN CLINICS

A. Physical Construction

1. TDRs should be in a central location off the main corridor, away from patient areas.
2. TDRs should be stacked from floor to floor.
3. TDR size will be at least 12' x 16'.
4. Walls will be constructed from the floor to the deck and completely sealed from surrounding spaces.
 - a. All usable wall space will be covered by ¾" x 4' x 8' Grade AC fire-rated plywood, with a minimum of 50% covered in ¾" fire-rated plywood.
 - b. Fire-rated plywood shall be painted with bright white fire-resistant paint.
 - c. Paint must not cover the fire rating stamp on the plywood. One stamp per piece of plywood must be taped off so it cannot be painted.
 - d. Mount 6" AFF
5. The TDR should not have a ceiling other than an exposed structure.
6. Flooring can be Static Dissipative Tile or Epoxy Paint.
7. A 3'-0" x 7'-0" door is required.
8. When permissible, doors shall swing out of the room to provide maximum available space and rapid egress.

B. Layout

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1. Racks in a single row with the front being the cold isle.
 2. The front of the racks should face the door.
- C. Electrical
1. The electrical distribution system will follow an A (BLUE)-B (RED) design.
 2. A dedicated UPS will back up System A(BLUE).
 3. System B(RED) will be from a dedicated Emergency or Utility circuit.
 4. The outlet type is L6-30 and L5-20.
 5. Provide convenience outlets around the room.
 6. All power is to be run in conduit.
 7. Lighting will be installed above each isle.
- D. Mechanical
1. TDRs will have redundant cooling.
 - a. Primary cooling is from the facility cooling system via a dedicated source.
 - b. Secondary cooling is from a standalone split or ceiling mount source.
 - c. The secondary system will be fed from the facility generator equipment electrical source if available.
 - d. The Mechanical system will be designed to maintain 72 degrees F at mid rack.
 - e. The coordination scheme between primary and secondary cooling systems can be accomplished by setting the primary system to 72 degrees F and the secondary system to 75 degrees F.
- E. Security
1. Doors will be fitted with an auditable card reader.
 2. Doors will have an electronic key cylinder installed.
- F. Fire System
1. TDRs will utilize the facility's fire detection and suppression systems.
 2. Sprinkler heads should have a 200-degree fuse.
 3. Sprinklers should be protected from accidental activation.
- G. Monitoring
1. TDRs will be monitored using Eaton/Foreseer.
 2. Run 3 foreseeer cables to each TDR.
 3. One Cat6a F/UTP cable to each UPS.

2.5 TEC/TDR IN OFFICES

- A. Physical Construction
1. TDRs should be in a central location off the main corridor.
 2. TDRs should be stacked from floor to floor.
 3. TDR size will be at least 12' x 16'.
 4. Walls will be constructed from the floor to the deck and will be completely sealed from surrounding spaces.
 - a. All usable wall space will be covered by ¾" x 4' x 8' Grade AC fire-rated plywood, with a minimum of 50% of wall space covered in ¾" fire-rated plywood.
 - b. Fire-rated plywood shall be painted with bright white fire-resistant paint.
 - c. Paint must not cover the fire rating stamp on the plywood. One stamp per piece of plywood must be taped off so that it cannot be painted.
 - d. Mount 6" AFF
 5. The TDR should not have a ceiling other than an exposed structure.
 6. Flooring can be Static Dissipative Tile or Epoxy Paint.
 7. A 3'0" x 7'0" door is required.
 8. When permissible, doors shall swing out of the room to provide maximum available space and rapid egress.
- B. Layout
1. Racks in a single row with the front being the cold isle.
 2. The front of the racks should face the door.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- C. Electrical
 - 1. The electrical distribution system will follow an A (BLUE)-B (RED) design.
 - 2. A dedicated UPS will back up System A(BLUE).
 - 3. System B(RED) will be from a dedicated utility circuit.
 - 4. The outlet type is L6-30 and L5-20.
 - 5. Provide convenience outlets around the room.
 - 6. All power is to be run in conduit.
 - 7. Lighting will be installed above each row.
- D. Mechanical
 - 1. TDRs will have a redundant cooling system designed to maintain 72 degrees F at mid rack.
 - a. Primary cooling is from the facility cooling system via a dedicated source.
 - b. Secondary cooling is from a standalone split or ceiling mount source.
 - 1) the secondary system will be fed from the facility generator equipment electrical source if available.
 - c. The coordination scheme between primary and secondary cooling systems can be accomplished by setting the primary system to 72 degrees F and the secondary system to 75 degrees F.
- E. Security
 - 1. Doors will be fitted with an auditable card reader.
 - 2. Doors will have an electronic key cylinder installed.
- F. Fire System
 - 1. TDRs will utilize the facility's fire detection and suppression systems.
 - 2. Sprinkler heads should have a 200-degree fuse.
 - 3. Sprinklers should be protected from accidental activation.
- G. Monitoring
 - 1. TDRs will be monitored using Eaton/Foreseer.
 - 2. Run 3 foreseeer cables to each TDR.
 - 3. One Cat 6a F/UTP cable to each UPS.

2.6 TECHNOLOGY DISTRIBUTION ROOM (TDR)

- A. There shall be a minimum of one TDR on each floor of the facility. TDRs shall be provided throughout the facility as necessary to meet the 292' (90-meter) maximum cable distance. The TDR is located on each floor within a facility to house equipment and cabling and provide communication and technology services for a specific area of that facility. Based on the different needs of different facilities, the TDRs will be broken down into three categories: hospitals, Clinics, and Office spaces.

2.7 TDR IN HOSPITALS

- A. Physical Construction
 - 1. TDRs should be in a central location off a main corridor and away from patient areas.
 - 2. TDRs should be stacked from floor to floor.
 - 3. TDR size will be at least 14' x 16'.
 - 4. Walls will be constructed from the floor to the deck and will be completely sealed from surrounding spaces.
 - a. All usable wall space will be covered by ¾" x 4' x 8' Grade AC fire-rated plywood, with a minimum of 50% of wall space covered in ¾" fire-rated plywood.
 - b. Fire-rated plywood shall be painted with bright white fire-resistant paint.
 - c. Paint must not cover the fire rating stamp on the plywood. One stamp per piece of plywood must be taped off so that it cannot be painted.
 - d. Mount 6" AFF
 - 5. The TDR should not have a ceiling other than an exposed structure.
 - 6. Flooring can be Static Dissipative Tile or Epoxy Paint.
 - 7. A 3'0" x 7'0" door is required.
 - 8. When permissible, doors shall swing out of the room to provide maximum available space and rapid egress.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- B. Layout
 - 1. Racks will be in a cold isle configuration.
 - 2. Two rows with the cold aisle in the middle.
- C. Electrical
 - 1. The electrical distribution system will follow an A (BLUE)-B (RED) design.
 - 2. Each system A(BLUE) and B(RED) will be backed up by a dedicated UPS.
 - 3. The outlet type is L6-30 and L5-20.
 - 4. Provide convenience outlets around the room.
 - 5. All power is to be run in conduit.
 - 6. Lighting will be installed above each isle.
- D. Mechanical
 - 1. TDRs will have redundant cooling designed to maintain 72 degrees F at mid rack.
 - a. Primary cooling is from the facility cooling system via a dedicated source.
 - b. Secondary cooling is from a standalone split or ceiling mount source.
 - c. The secondary system will be fed from the facility generator equipment electrical source if available.
 - d. The coordination scheme between primary and secondary cooling systems can be accomplished by setting the primary system to 72 degrees F and the secondary system to 75 degrees F.
- E. Security
 - 1. Doors will be fitted with an auditable card reader.
 - 2. Doors will have an electronic key cylinder installed.
- F. Fire System
 - 1. TDRs will utilize the facility's fire detection and suppression systems.
 - 2. Sprinkler heads should have a 200-degree fuse.
 - 3. Sprinklers should be protected from accidental activation.
- G. Monitoring
 - 1. TDRs will be monitored using Eaton/Foreseer.
 - 2. Run 3 foreseeer cables to each TDR.
 - 3. One Cat 6a F/UTP cable to each UPS.

2.8 TDR IN CLINICS

- A. Physical Construction
 - 1. TDRs should be in a central location off a main corridor and away from patient areas.
 - 2. TDRs should be stacked from floor to floor.
 - 3. TDR size will be at least 10' x 12'.
 - 4. The TDR size in Clinics is 6000 sq. ft. or less, and it will be at least 8' x 8' or as approved by the Intermountain IS/IT team based on the functional layout of the TDR equipment.
 - 5. TDR size in Clinics for Tenants Demarc will be at least 5' x 5'.
 - 6. Walls will be constructed from the floor to the deck and will be completely sealed from surrounding spaces.
 - a. All usable wall space will be covered by ¾" x 4' x 8' Grade AC fire-rated plywood, with a minimum of 50% of wall space covered in ¾" fire-rated plywood.
 - b. Fire-rated plywood shall be painted with bright white fire-resistant paint.
 - c. Paint must not cover the fire rating stamp on the plywood. One stamp per piece of plywood must be taped off so that it cannot be painted.
 - d. Mount 6" AFF
 - 7. The TDR should not have a ceiling other than an exposed structure.
 - 8. Flooring can be Static Dissipative Tile or Epoxy Paint.
 - 9. A 3'-0" x 7'-0" wide door is required.
 - 10. When permissible, doors shall swing out of the room to provide maximum available space and rapid egress.
- B. Layout

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1. Racks in a single row with the front being the cold isle.
 2. The front of the racks should face the door.
- C. Electrical
1. The electrical distribution system will follow an A (BLUE)-B (RED) design.
 2. A dedicated UPS will back up System A(BLUE).
 3. System B(RED) will be from a dedicated utility circuit.
 4. The outlet type is L6-30 and L5-20.
 5. Provide convenience outlets around the room.
 6. All power is to be run in conduit.
 7. Lighting will be installed above each isle.
- D. Mechanical
1. TDRs will have redundant cooling designed to maintain 72 degrees F at mid rack.
 - a. Primary cooling is from the facility cooling system via a dedicated source.
 - b. Secondary cooling is from a standalone split or ceiling mount source.
 - c. The secondary system will be fed from the facility generator equipment electrical source if available.
 - d. The coordination scheme between primary and secondary cooling systems can be accomplished by setting the primary system to 72 degrees F and the secondary system to 75 degrees F.
- E. Security
1. Doors will be fitted with an auditable card reader.
 2. Doors will have an electronic key cylinder installed.
- F. Fire System
1. TDRs will utilize the facility's fire detection and suppression systems.
 2. Sprinkler heads should have a 200-degree fuse.
 3. Sprinklers should be protected from accidental activation.
- G. Monitoring
1. TDRs will be monitored using Eaton/Foreseer.
 2. Run 3 foreseeer cables to each TDR.
 3. One Cat 6a F/UTP cable to each UPS.

2.9 TDR IN OFFICES

- A. Physical Construction
1. TDRs should be in a central location off the main corridor.
 2. TDRs should be stacked from floor to floor.
 3. TDR size will be at least 10' x 12'.
 4. Walls will be constructed from the floor to the deck and will be completely sealed from surrounding spaces.
 - a. All usable wall space will be covered by ¾" x 4' x 8' Grade AC fire-rated plywood, with a minimum of 50% of wall space covered in ¾" fire-rated plywood.
 - b. Fire-rated plywood shall be painted with bright white fire-resistant paint.
 - c. Paint must not cover the fire rating stamp on the plywood. One stamp per piece of plywood must be taped off so that it cannot be painted.
 - d. Mount 6" AFF
 5. The TDR should not have a ceiling other than an exposed structure.
 6. Flooring can be Static Dissipative Tile or Epoxy Paint.
 7. A 3'0" x 7'0" door is required.
 8. When permissible, doors shall swing out of the room to provide maximum available space and rapid egress.
- B. Layout
1. Racks in a single row with the front being the cold isle.
 2. The front of the racks should face the door.
- C. Electrical

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1. The electrical distribution system will follow an A (BLUE)-B (RED) design.
 2. A dedicated UPS will back up System A(BLUE).
 3. System B(RED) will be from a dedicated utility circuit.
 4. The outlet type is L6-30 and L5-20.
 5. Provide convenience outlets around the room.
 6. All power is to be run in conduit.
 7. Lighting will be installed above each isle.
- D. Mechanical
1. TDRs will have redundant cooling designed to maintain 72 degrees F at mid rack.
 - a. Primary cooling is from the facility cooling system via a dedicated source.
 - b. Secondary cooling is from a standalone split or ceiling mount source.
 - c. The secondary system will be fed from the facility generator equipment electrical source if available.
 - d. The coordination scheme between primary and secondary cooling systems can be accomplished by setting the primary system to 72 degrees F and the secondary system to 75 degrees F.
- E. Security
1. Doors will be fitted with an auditable card reader.
 2. Doors will have an electronic key cylinder installed.
- F. Fire System
1. TDRs will utilize the facility's fire detection and suppression systems.
 2. Sprinkler heads should have a 200-degree fuse.
 3. Sprinklers should be protected from accidental activation.
- G. Monitoring
1. TDRs will be monitored using Eaton/Foreseer.
 2. Run 3 foreseeer cables to each TDR.
 3. One Cat 6a F/UTP cable to each UPS.

2.10 WALL MOUNT CABINET

- A. Physical Condition
1. The wall mount cabinet should only be used when there is no space for a TDR.
- B. Electrical
1. Power should be run into the back of the cabinet.
- C. Mechanical
1. The cabinet should have a factory fan installed.
- D. Security
1. The door will have an electronic key cylinder installed.

PART 3 - EXECUTION

3.1 COMMON REQUIRED CHARACTERISTICS FOR TDR, TEC, & TSER

- A. SECURITY - COMMON
1. Any visitor, vendor, or contractor requiring access to a Technology Room who does not have appropriate approvals or clearances must be escorted by a properly credentialed tech from the appropriate system.
 2. The main technology equipment shall be secured in a dedicated, locked Technology Room.
 3. Unused access jacks should be disconnected from the patch panels, and unused switch ports disabled.
 4. Technology Rooms shall be dedicated to the data and telecommunications functions.
 5. Access to the Technology Room shall be restricted to authorized service personnel. It shall not be shared with building services that may interfere with the main networking interfaces, the networking

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

equipment, the application servers, the data storage devices, and the telecommunications equipment systems.

6. Technology Rooms shall not be used for building maintenance services, custodial services, or be used for general storage.
7. Security cameras may be installed in each Technology Room at the owner's preference.
 - a. At the back wall facing the door, at the end of each row of equipment racks, directed so that you do not see the equipment in the racks.
 - b. In electrical and mechanical rooms serving the Technology Room
 - c. Approved camera manufacturers: Axis and Bosch
8. Access to a Technology Room shall be restricted and controlled by an auditable access control system. The access control system shall comply with the requirements of this document.
9. An auditable badge reader system must secure all secure data areas.
 - a. Refer to plans or quotes for detailed information.
 - b. Approved supplier: Intermountain Lock and Security Supply /
 - c. 3106 S Main St / Salt Lake City, UT 84115 / 801-486-0079
 - d. Owner of security locks and badge readers:
 - e. Intermountain Healthcare Data Center
 - f. For programming on the Medeco XT Electronic Keys, contact:
 - g. Intermountain Healthcare Data Center

B. PHYSICAL ENVIRONMENT

1. The Technology Room shall be in a dry area not subject to flooding. It should be as close as possible to the electrical service room to reduce the length of the bonding conductor to an electrical grounding system.
2. The Technology Room shall be in an accessible, non-sterile area.
3. Access to the Technology Room shall be directly off a corridor and not through another space.
4. The Technology Room shall be located to avoid large ducts, beams, and other building elements that may interfere with proper cable routing and may limit future access.
5. Mechanical and electrical equipment or fixtures not directly and exclusively related to the support of the Technology Room shall not be installed in, pass through, or enter the Technology Room.
6. Technology rooms shall not be located on exterior walls.
7. Technology rooms shall not have windows or other exterior openings.

3.2 TECHNOLOGY DISTRIBUTION ROOM (TDR) / DATA CLOSET

A. ELECTRICAL ENVIRONMENT

1. Separation from sources of EMI shall be in accordance with ANSI/TIA/EIA-569-C and local codes.
2. Communication grounding/earthing, and bonding shall be in accordance with applicable codes and regulations. It is recommended that the requirements of IEC/TR3 61000-5-2 - Ed. 1.0, ANSI-J-STD-607-C, or both, be observed throughout the entire cabling system.
 - a. All racks, equipment frames, furniture, flooring, and ductwork within the IT space shall be bonded to the Central Ground bar provided and installed by Division 26.
 - 1) No AC electrical equipment bonding will be done at the Central Ground Bar. AC electrical grounding and bonding will be done according to the NEC.
3. Some TDRs will require redundant power and data feeds. See plans and drawings.
4. Lighting in the TDRs should be at least 500 lx (50-foot candles) at the lowest point of termination.
 - a. Light switch should be easily accessible when entering the room.
 - b. Lighting will be fed from the generator system or have fixtures with battery backup.
5. A minimum of two dedicated duplex or two dedicated simplex electrical outlets, each on a separate 120V 20A circuit, should be provided for equipment power.
6. Additional convenience duplex outlets should be placed around the perimeter walls at 1.8 m (6 ft) intervals.
 - a. Only twist lock receptacles will be used for rack power points. Type L-6-30R for 208 volts and type NEMA L-5-20R for 120 volts.
7. All power originates from the facility's generator backup system, with one system (A-B) originating from the critical system.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

8. All circuits serving the TDR and its equipment shall be dedicated to serving the TDR.
9. TDRs shall be connected between all technology rooms by a backbone of insulated, 6 (minimum) to 3/0 AWG stranded copper cable. Division 26 shall provide and install this cable.

B. MECHANICAL ENVIRONMENT

1. Reliable cooling shall be provided.
 - a. Based on the criticality tiering structure, individual rooms may require redundant, concurrently maintainable cooling systems.
 - b. Tier structure level shall be determined from the design guide.
2. Heat load shall be calculated at 4KW per equipment rack
3. The TDR's temperature and humidity shall be controlled to an operating range of 64 to 75 degrees F (18 to 24 degrees C) with 30 to 55 percent relative humidity.

C. EQUIPMENT

1. Each TDR shall be connected to the TEC (Technology Equipment Center) to provide a building-wide network and communications system.
2. All racks, cabinets, sections of cable tray, and metal components of the technology system that do not carry electrical current shall be grounded to a Telecommunication Grounding Bus Bar

3.3 TECHNOLOGY EQUIPMENT CENTER (TEC) / DATA ROOM

A. ELECTRICAL ENVIRONMENT

1. The TDR and TEC electrical environments shall match the following exceptions:
2. All circuits and equipment serving the TEC shall be dedicated to serving the TEC.

B. MECHANICAL ENVIRONMENT

1. TEC and TSER have the same mechanical environment.
2. Reliable cooling shall be provided.
3. Heat load shall be calculated at 4KW per equipment rack.
4. The TEC's temperature and humidity shall be controlled to an operating range of 64 to 75 degrees F (18 to 24 degrees C) with 30 to 55 percent relative humidity.

C. EQUIPMENT

1. Each TEC shall be connected to the TSER (Telecommunications Service Entrance Room) to provide an enterprise-wide network and communications system.
2. All racks, cabinets, sections of cable tray, and metal components of the technology system that do not carry electrical current shall be grounded to a Telecommunications Main Grounding Bus Bar.

3.4 TELECOMMUNICATION SERVICE ENTRANCE ROOM (TSER) / D-MARC

A. PURPOSE

1. The TSER (Telecommunications Service Entrance Room) equipment subsystem shall consist of shared (common) electronic communications equipment in the
- 2.
3. TEC or the TSER must interface this equipment and distribution hardware with the transmission media of the enterprise-wide Area Network (WAN) infrastructure.
4. The TSER shall be equipped to contain telecommunications equipment, cable terminations, and associated cross-connects.
 - a. Note that the AIA/State guidelines specify that the minimum size for a TSER is 12' by 14'.
 - b. Doors shall swing out of the room to provide maximum available space and rapid egress.
 - 1) Exception: where prohibited by fire or safety code.
5. The TSER shall be dedicated to the telecommunications function.

B. MECHANICAL ENVIRONMENT

1. Reliable cooling and heating shall be provided.
2. The TSER's temperature and humidity shall be controlled to an operating range of 64 to 75 degrees F (18 to 24 degrees C) with 30 to 55 percent relative humidity.

C. EQUIPMENT

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1. The TSER (Telecommunications Service Entrance Room) shall be connected to the specified WAN equipment to provide connectivity to the enterprise-wide network and communications system.
2. All racks, cabinets, sections of cable tray, and metal components of the technology system that do not carry electrical current shall be grounded to a Telecommunications Main Grounding Bus Bar.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 271116
Cabinets, Racks, Frames, and Enclosures**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Cabinets and racks specifications are in TIA569-C and the plans' ET pages.

PART 2 - PRODUCTS

2.1 APPROVED PRODUCT

- A. OPEN RACKS
1. For rack-mounted installations in a telecommunications room, the installer shall use a 19-inch by 3-inch-deep equipment rack.
 2. Equipment Rack 19" X 8', 52 RU, Black – Chatsworth 55053-715
 3. Equipment Rack 19" X 7', 45 RU, Black – Chatsworth 55053-703
 4. Exception: Where other size cabinets are specified by the design team at the owner's direction
 5. All equipment racks must be bolted to the floor for seismic support.
- B. WALL MOUNTED RACK
1. Wall Mounted Rack 53.6" H x 17" D, 26RU, Black – Chatsworth 11807-718
 2. Heavy Duty Swing Gate – Chatsworth 12795-701
- C. WIRE MANAGERS
1. Part Numbers
 - a. Vertical Wire Manager, Double Sided, Black 10" wide x 8' tall – Chatsworth 40096-715
 - b. Vertical Wire Manager, Double Sided, Black 10" wide x 7' tall – Chatsworth 40096-703
 - c. Horizontal Wire Manager, 4U – Panduit PR2HF4
 2. Typical Standard Layout
 - a. The layout is 10" vertical manager, then 19" rack, then 10" vertical manager, then 19" rack, then 10" vertical manager.
 - b. Where more than 2 racks are needed, maintain the pattern of 10" vertical wire management on the ends and 10" vertical management between racks.
- D. CABINETS
1. Standard Cabinet
 - a. DCE 1-Sided Cabinet – 600mm x 1200mm - Vertiv E4562121120001S
 - b. DCE 2-Sided Cabinet – 600mm x 1200mm - Vertiv E4562122120001S
 - c. DCE 1-Sided Cabinet – 700mm x 1200mm – Vertiv E4572112120001S
 - d. DCE 2-Sided Cabinet – 700mm x 1200mm – Vertiv E4572122120001S
 - e. Baying Gasket – Baying Gasket Kit – Vertiv E4013
 - f. Baying Kit – Baying Hardware Kit – Vertiv E9013
 - g. Blanking Panel – Upsite Hotlok 10031 1U
 - h. Blanking Panel – Upsite Hotlok – 10033 2U
 - i. All cabinets must be bolted to the floor for seismic support.
 2. Wall Mount Cabinet
 - a. **Cube-It** – CPI 11996-736 (36" H x 30" D). Or specified size.
 - b. Stand Fan and Filter Kit for Cube-It – CPI 40972-001
 - c. Power strip for Cube-It – CPI 12820-705 (20 Amp – NEMA 5-20P)
 - d. Vertical Wall Mount Cabinet – Legrand VWMSD-4RU-42-B
 - e. Vertical Wall Mount Cabinet – Legrand VWMSD-8RU-42-B
 - f. Fixed Mounting Rail Kit – Legrand VWM-RR-4RU
 - g. Fixed Mounting Rail Kit – Legrand VWM-RR-8RU

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

- h. Pivoting Mounting Rail Kit – Legrand VWM-PIV-4RU
- i. Fan Kits with 115 VAC fans – Legrand VWMFK-115
- j. Top Brush Grommet Kit – Legrand VWMBGK
- k. Circular Knockout Grommet Kit – Legrand VWMGR-30
- l. Vertical Wall-Mount Cabinets - Refrigerated Cabinet 24” – Hubbell IR221APG.
- m. Vertical Wall-Mount Cabinets - Refrigerated Cabinet 36” – Hubbell IR321APG.
- n. Vertical Wall-Mount Cabinets - Refrigerated Cabinet 48” – Hubbell IR421APG.
- o. Air Conditioners – Air conditioner for Hubbell refrigerated cabinets - Hubbell IRAC1

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

SECTION 271119

Termination Blocks and Patch Panels

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Requirements of the following Division 26 sections apply to this section.
 - 1. Basic electrical requirements
 - 2. Basic electrical materials and methods
 - 3. Grounding, Earthing, and Bonding

PART 2 - PRODUCTS

2.1 APPROVED PRODUCT


- A. PATCH PANELS – COPPER
 - 1. 48 Port CAT 6A Shielded, 1RU Angled Patch Panel with Outlets –
 - 2. Siemon Z6AS-PA-48A
 - 3. 48 Port CAT 6A Shielded, 1RU Flat Patch Panel with Outlets –
 - 4. Siemon Z6AS-PNL-U48K
 - 5. 24 Port CAT 6A Shielded, 1RU Flat Patch Panel with Outlets –
 - 6. Siemon Z6AS-PNL-U24K
 - 7. 48 Port CAT 6, 2RU Angled Patch Panel, 110 Style – Siemon UP6-A2-48L-RS
 - 8. 48 Port CAT 6, 2RU Flat Patch Panel, 110 Style – Siemon UP6-F2-48L-RS
 - 9. 24 Port CAT 6, 1RU Angled Patch Panel, 110 Style – Siemon UP6-A1-24L-RS
 - 10. 24 Port CAT 6, 1RU Flat Patch Panel, 110 Style – Siemon UP6-F1-24L-RS
 - 11. 19" Angled Blank Filler Panel, 1U, Black – Siemon PNL-BLNKA-1
 - a. Provide blank fillers where appropriate.
 - 12. 19" Flat Blank Filler Panel, 1U, Black – Siemon PNL-BLNK-1
 - a. Provide blank fillers where appropriate.
- B. PATCH PANELS – FIBER
 - 1. LightVerse Rack Mount Fiber Enclosure – Siemon LVE-4U-MD-P01A
 - 2. Lightverse Blank Adapter Plate, Black – Siemon LVA-BLANK-01A
 - 3. LightVerse LC Splice Cassette - Siemon LVS12-LSUARAB1A
 - 4. LightVerse Splice Tray – Siemon TRAYHD—1-A
 - 5. OM4 Splice Cassette – Siemon LVS12-LS-PVRAB1A
 - 6. Wall Mount Fiber Enclosure – Siemon LVW-M1-01
 - 7. Lightstack Surface Mount Module Enclosure – Siemon – LSE-01
 - 8. Lightstack Surface Mount Splice Enclosure – Siemon – LSS-01
 - 9. Lightstack LC Adapter Plate – Siemon LS-LS12-01C-AQ

PART 3 - EXECUTION

3.1 INSTALLATION

- A. For angled patch panels, the terminations shall cross in the back to the opposite path of the patch panel to maximize available cable bend radius.
- B. See illustration below in this section:

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

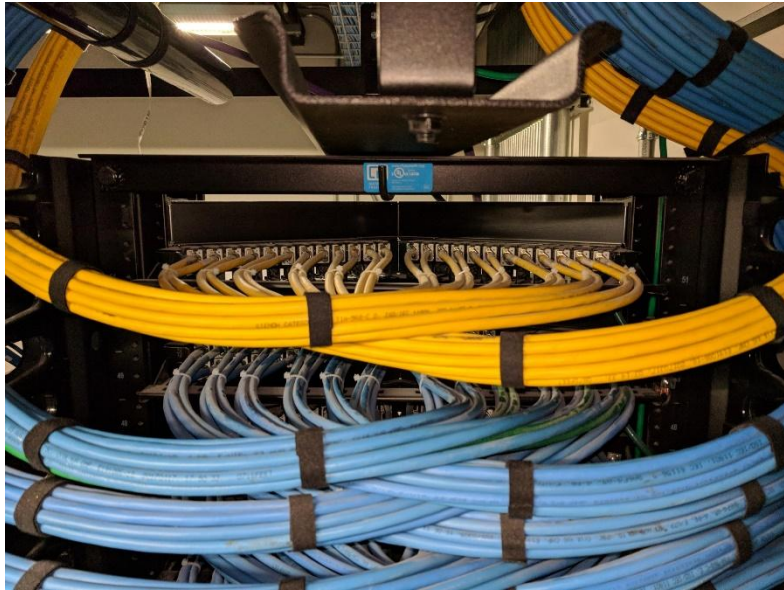

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 271300
Backbone Cabling**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawing and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this section.
- B. Section 27 05 28 – Pathways for Communications Systems.

1.2 DEFINITIONS

- A. INTRA-BUILDING CABLING
 - 1. Cable that runs between telecommunications rooms (TRs) inside a building. Can be vertical or horizontal in physical orientation. It consists of the backbone transmission media between these locations and the associated connecting hardware terminating this media.
- B. INTER-BUILDING / CAMPUS CABLING
 - 1. A cable that runs between buildings in a campus environment. It is normally a first-level backbone cable beginning at the main cross-connect in the equipment room of the hub building and extending to the intermediate cross-connect in the equipment room of a satellite building. Campus Backbones require an optical fiber cable to be installed to support high-speed data applications.
 - 2. Customer-owned outside plant (OSP) cabling.

PART 2 - PRODUCTS

1.1 PERMITTED BACKBONE MEDIA

- A. Cables allowed for use in the backbone include:
 - 1. CAT 6A F/UTP Riser, Blue, Data – Siemon 9A6R4-A5-06-R1A
 - 2. CAT 6A F/UTP Plenum, Blue, Data – Siemon 9A6P4-A5-06-R1A
 - 3. 50 Pair Category 3 Riser Cable Gray – General Cable 2133161 or equal
 - 4. 50 Pair Category 3, OSP Rated PE-89, Black, 22 AWG – General Cable 7525637 or equal.
 - 5. Building Entrance Terminal, 50-Pair, 110 Style Termination – Circa 1880ECA1-50
 - 6. Fiber Optic Cable, Single-mode, 24 Strand, Armored Indoor/Outdoor Cable, Black – Siemon 9BG8P024L-E201A
 - 7. Fiber Optic Cable, Single-mode, 24 Strand, Armored, Plenum Cable, Yellow – Siemon 9BC8P024L-E205A
 - 8. Fiber optic Cable, Single-mode, 48 Strand, Armored Outdoor Cable, Black – Siemon 9PF8C048G-E201A
 - 9. Fiber Optic Cable, Single-mode, 144 Strand, Armored Outdoor Cable, Black – Siemon 9PF8C144G-E201A
 - 10. Fiber Optic cable, multi-mode, OM4, 12 Strand, Armored, Riser Cable, Aqua – Siemon 9BC5R012G-T512A (Data Centers must be OM4 or better)
 - 11. Microfiber
- B. The cable shall support voice, data, and imaging applications. All backbone cables' bending radius and pulling strength requirements shall be observed during handling and installation.
- C. Multi-pair twisted pair cable is intended to support analog voice applications and shall be tested for continuity only.
- D. In addition to meeting the applicable performance specifications, all copper and optical fiber cables shall be appropriate for the environment in which they are installed.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2.2 MEDIA PRODUCTS

A. COPPER

1. The total channel length between the Campus Distributor/Main Cross-connect and any floor Distributor/Horizontal Cross-connect shall not exceed the following length limits for copper cabling:
 - a. 2,000 m (6,560 ft) for balanced twisted pair for PBX/Class A (100 kHz) applications.
 - b. 200 m (656 ft) for balanced twisted pair for Class B (≤ 1 MHz) applications.
 - c. 100 m (328 ft) for balanced twisted-pair categories 6, 6A & 7 (per Backbone segment when providing a two-level Backbone).

B. MULTIMODE OPTICAL FIBER

1. See the Siemon website for supportable fiber distances
 - a. Laser-qualified 50/125 μ m multimode fiber optical fiber cables shall follow the following standards: ISO/IEC 11801:2002 OM3, ANSI/TIA-568-C.3, ANSI/TIA-568-C.1 and Telcordia GR-409-CORE, as well as the guaranteed application distances, attenuation, bandwidth, and group index requirements of refraction.
 - b. Specifications:
 - 1) Shall support 10GBASE-SX for all horizontal workstations, risers, and short length backbone (<300 m) locations.
 - 2) Constructed for overfilled launch (OFL) and restricted mode launch (RML) bandwidth to ensure compatibility with both LED and laser light sources.
 - 3) Have an Aqua Outer Jacket available in cable ratings, including OFNR and OFNP.

C. SINGLE-MODE OPTICAL FIBER

1. See the Siemon website for supportable fiber distances
2. Single-mode optical fiber cable shall only be used for 1st and 2nd Level Backbone applications.
3. All fiber is to fusion-spliced terminations.

PART 3 - EXECUTION

3.1 TOPOLOGY

- A.** The Backbone cabling shall use a conventional hierarchical star topology.
1. There shall be no more than two (2) levels of cross-connects between the campus distributor/main cross-connect (CD/MC) and any given floor distributor/horizontal cross-connect (FD/HC).
 2. From the FD/HC, no more than one cross-connect shall be passed through to reach the CD/MC.
- B.** Splicing of UTP, F/UTP and S/FTP copper cables is not permitted.

3.2 TYPICAL TDR BACKBONE

- A.** A typical TDR backbone for a hospital campus shall consist of:
1. Redundant (2 ea.) 24-strand single-mode fiber, each routed in a separate path.
 2. One 50-pair copper feed line.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 271500
Horizontal Cabling**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this section.

PART 2 - SECTION 27 05 28 - PATHWAYS FOR COMMUNICATIONS SYSTEMS

2.1 SUMMARY

- A. This section includes requirements and guidelines for installing F/UTP, ScTP, and Fiber horizontal cabling.
1. Horizontal cable and its connecting hardware transport signal between the telecommunications outlet/connector and the horizontal cross-connect located in the communications termination room. This cabling and its connecting hardware are called "permanent link," a term used in the testing protocols.

PART 3 - EXECUTION

3.1 HORIZONTAL CABLE

- A. Quantity
1. Two horizontal cables shall be routed to each work area. Cable connected to information outlets shall be CAT6A F/UTP, 4-pair, 100Ω balanced twisted-pair.
 - a. A work area is approximately 100 sq. ft. and includes the components that extend from the telecommunications outlet/connectors to the station equipment.
 - b. According to current best practice, two (2) standard cables shall be run to each wireless access point location.
 - c. One (1) standard horizontal cable may be run to the following locations:
 - 1) The building controls vendor directs each building control system enclosure.
 - 2) Each IP Video Surveillance Camera at each of the designated locations.
 - 3) Each wall phone.
 - 4) Each wall monitor/display.
 2. For voice or data applications, 4-pair balanced twisted-pair or fiber optic cables shall be run using a star topology from the telecommunications room serving that floor to every individual information outlet. The customer shall approve all cable routes before the installation of the cabling.
 3. Installation interfaces shall be T568B wiring standards.
- B. Maximum Length
1. All horizontal cables, regardless of media type, shall not exceed 90 m (295 ft.) from the telecommunications outlets in the work area to the Floor Telecommunications Room.
 2. Distributor/Horizontal Cross-connect (FD/HC) located in the Telecommunication Room.
 3. The combined length of jumpers and patch cords, including equipment cables in the Floor Distributor/Horizontal Cross-connect, shall not exceed 5m (16 ft.).
 4. The maximum length of Work Area equipment cables shall be 5m (16 ft.) If a
 5. MuTOA (Multiple User Telecommunication Outlet) environment exists, then the
 6. Maximum equipment cable shall not exceed 22m (72 ft.) (Lake Park Facility)
 7. Terminate all conductors; no cable shall contain un-terminated elements. Make terminations only at indicated outlets, terminals, cross-connects, and patch panels.
- C. Minimum Length

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1. It is recommended that a minimum horizontal cable distance of 15m (49 ft.) shall be maintained between the telecommunications room and the work area. This will provide adequate Insertion Loss/Attenuation for applications over 1 Gig.
 2. For installations with consolidation points, a minimum horizontal cable distance of 15m (49 ft.) shall be maintained between the telecommunications room and the consolidation point, and 5m (16 ft.) between the consolidation point and the work area. This will provide adequate Insertion Loss/Attenuation for applications over 1 Gig.
- D. Splice Free
1. Each run of balanced twisted-pair cable between the Floor Distributor/Horizontal Cross-connect in the telecommunication room and the information outlet at the Work Area shall not contain splices.
 2. Bridged taps and splices shall not be installed in the horizontal cabling.
- E. Protection
1. Horizontal distribution cables shall not be run under slab raceways in damp or wet locations unless they are suitably rated for the environment.
 - a. Under-slab conduits that are outside of the building are considered wet locations.
- F. Slack -Service Loop – Routing
1. A minimum of 1m (3 ft) should be left in the work area for balanced twisted-pair cables and fiber cables.
 2. In telecommunications rooms, a minimum of 3m (10 ft) of slack should be left for all cable types. This slack must be neatly managed on trays or other support types.

3.2 SEPARATION

- A. Separation from EMI sources
1. Installation shall comply with BICSI TDMM and TIA/EIA-569-B for separating unshielded copper voice and data communication cable from potential EMI sources, including electrical power lines and equipment.
 2. Separation between open communications cables or cables in nonmetallic raceways and unshielded power conductors and EMI Source shall be as follows:
 - a. EMI Source Rating Less Than 2 kVA: A minimum clearance of 5 inches.
 - b. EMI Source Rating between 2 and 5 kVA: A minimum clearance of 12 inches.
 - c. EMI Source Rating More Than 5 kVA: A minimum clearance of 24 inches.
 3. Separation between communications cables in grounded metallic raceways and unshielded power lines or EMI Source shall be as follows:
 - a. EMI Source Rating Less Than 2 kVA: A minimum clearance of 2-1/2 inches.
 - b. EMI Source Rating between 2 and 5 kVA: A minimum clearance of 6 inches.
 - c. EMI Source Rating More Than 5 kVA: A minimum clearance of 12 inches.
 4. Separation between communications cables in grounded metallic raceways and power lines and EMI Source located in grounded metallic conduits or enclosures shall be as follows:
 - a. EMI Source Rating Less Than 2 kVA: A minimum clearance of 2 inches.
 - b. EMI Source Rating between 2 and 5 kVA: A minimum clearance of 3 inches.
 - c. EMI Source Rating More Than 5 kVA: A minimum clearance of 6 inches.
 5. Separation between Communications Cables and Electrical Motors and Transformers, five kVA or 1 HP and Larger: A minimum clearance of 48 inches.
 6. Separation between Communications Cables and Fluorescent Fixtures: A minimum clearance of 5 inches
- B. Other Clearances
1. Horizontal pathways used for telecommunications cabling shall be dedicated for telecommunications use and not shared by other building services.
 2. A minimum of 75 mm (3 in) shall be observed between the cable supports and the false ceiling in a false ceiling environment.

3.3 PATHWAY

- A. Cable Tie Wraps
1. Cable Tie Wraps are prohibited as a pathway device or support.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2. Tie Wraps shall only be used to provide strain relief at termination points.
 3. Tie wraps shall not be over-tightened to the point of deforming or crimping the cable sheath.
- B. Constraints
1. Horizontal cables shall be installed in "dry" locations that provide protection from moisture levels above the intended operating range of inside plant (ISP) cables.
 - a. If cabling is intentionally or unintentionally exposed to water or otherwise coated with or exposed to direct contact with solvents, paints, adhesives, sealants, or other third-party materials, Siemon will not warranty the cabling product, or if after the warranty has been issued, it would become void. Therefore, any cabling that has been exposed as listed above must be removed and replaced.
 2. Horizontal pathways shall be installed or selected so that the minimum bend radius of horizontal cables remains within the manufacturer's specifications during and after installation.
 3. New construction requires a minimum of a 1" diameter conduit. Existing conduits will require reducing the number of cables placed in them to meet the required fill ratio.
 - a. The Contractor shall observe the bending radius and pulling strength requirements of the 4-pair balanced twisted-pair and fiber optic cable during handling and installation.
 - 1) 4-Pair UTP, F/UTP, S/FTP bend radius = 4 times outside diameter of cable under no-load conditions. 8 times the outside diameter under load (pulling 110 N/25 lbf.) conditions.
 - 2) Multi-pair or Hybrid cable bend radius = 10 times the outside diameter under all conditions.
 - 3) 2-Fiber and 4-Fiber cables bend radius = 25mm (1 in.) under no-load conditions. 50mm (2 in.) under load (pulling 222 N 50 lbf)
 4. Cable shall not be run through structural members or in contact with pipes, ducts, or other potentially damaging items.
 5. Cable that passes through non-Intermountain Health spaces must be installed in conduit.
 6. Horizontal cabling shall contain no more than one transition point or consolidation point between the horizontal cross-connect and the telecommunications outlet/connector.
 7. Do not install bruised, kinked, scored, deformed, abraded, or otherwise damaged cable. Do not splice cable between termination, tap, or junction points. If the cable is damaged during installation, remove and discard it and replace it with a new cable.
 8. During Cold-Weather Installation, bring the cable to room temperature before de-reeling. Heat lamps shall not be used for heating.
- C. Capacity
1. The number of horizontal cables placed in a cable support or pathway shall be limited to the number of cables that will not alter the geometric shape of the cables.
 2. Maximum pathway (cable tray/basket tray/wireway) capacity shall not exceed a calculated fill ratio of 50% to a maximum of 75 mm (3 in) inside depth.
 3. Maximum conduit pathway capacity shall not exceed 40% fill. However, perimeter and furniture fill are limited to 60% fill for moves and changes. A 40% fill ratio is the maximum fill for CAT6A F/UTP cables.
 4. All unused cables shall be removed
 - a. Or labeled at both ends, designating future purpose and locations of each end.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

Cable Tray Size [W x D] mm (in.)	Cable O.D. - CAT 6A Shielded (.29 in.)		
	7.4mm (0.29 in.)	8.4mm (0.33 in.)	8.9mm (0.35 in.)
304x101 (12 x 4)	363	280	249
457x101 (18 x 4)	545	20	374
610x101 (24 x 4)	726	561	498
304x152 (12 x 6)	545	420	374
457x152 (18 x 6)	817	631	561
610 x 152 (24 x 6)	1099	841	748

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 271513
Copper Cable**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specifications, apply to this section

1.2 PALLETTE

- A. Color palette shall be in accordance with Section 27 05 53

1.3 SUMMARY

- A. This Section covers approved F/UTP / UTP cable types
- B. All systems except for Nurse Call shall be CAT6A F/UTP unless a written deviation has been approved.
- C. CAT6A UTP and CAT6A F/UTP shall not be mixed on the same campus.
- D. This cable shall be used for both voice and data applications and shall be plenum-rated where required by code
- E. All Nurse Call cables shall be CAT6 UTP.

PART 2 - PRODUCT

2.1 APPROVED PRODUCT

- A. TYPE 6A F/UTP (foil over unshielded twisted pair) - Siemon
 - 1. CAT 6A F/UTP Riser, (CMR) – Siemon 9A6R4-A5-(XX)-R1A
 - 2. CAT 6A F/UTP Plenum, (CMP) – Siemon 9A6P4-A5-(XX)-R1A
 - a. (XX) = Color – 06, Blue – 05, Yellow – 09, Orange
- B. TYPE 6 UTP (unshielded twisted pair) – Siemon – Nurse Call only
 - 1. CAT 6 UTP Riser, (CMR) – Siemon 9C6R4-E3-09-RXB
 - 2. CAT 6 UTP Plenum, (CMP) – Siemon 9C6P4-E3-09-RXA

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 271543
Faceplates and Connectors**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 DEFINITION

- A. Work-Area Cabling
 - 1. The work area is comprised of work area outlets/connectors, faceplates, outlet boxes, and equipment cords. It acts as the interface to the horizontal cabling from the horizontal cross-connect (HC) to telephone, network equipment, wireless access points (WAP), and OIP devices.

PART 2 - PRODUCT

2.1 OUTLETS

- A. Category 6A Shielded Jack – Siemon Z6A-S(XX)
 - 1. Use (XX) to specify color.
 - 2. Universal design allows the same outlet to be mounted in a flat or angled orientation.
- B. UltraMAX Category 6 Jack – Orange – Nurse Call – Siemon U6-H09NS
- C. Category 6A Z-Plug WO Latch Protector – Siemon ZP1-6AS-(00)s
- D. Voice Outlet, Single Gang Faceplate, White W/Wall Hung Phone W/6A Insert – Siemon MX-WP-Z6AS-SS

2.2 FACEPLATES/BOXES

- A. 10G Single Gang Faceplate, White, 4 Position – Siemon 10GMX-FP-04-02
- B. MAX Single Gang Faceplate, White – Siemon MX-FP-S-(XX)-02
 - 1. USE (XX) to specify the number of ports.
- C. MAX Single Gang Faceplate, Stainless Steel, 4 Position, with Label Holder – Siemon MX-FP-S-04-SS-L
 - 1. To be used in the Operation Rooms
- D. Surface Mount Box, White, 2 Position – Siemon MX-SMZ2-02
- E. Furniture Faceplate, Black – Siemon MX-UMA-01
- F. Blank Insert, White – Siemon MX-BL-02
- G. Blank Insert, Black – Siemon MX-BL-01
- H. Conference Room Table Inserts shall include an HDMI port.

PART 3 - EXECUTION

3.1 WORK AREA TERMINATION

- A. All balanced twisted-pair cables wired to the telecommunications outlet/connector shall have 4-pairs terminated in eight-position modular outlets in the work area. All pairs shall be terminated.
- B. Outlet/connector back boxes shall be a minimum 4-11/16 square box (4-11/16" x 4-11/16" x 3") with a minimum single gang 5/8" mud ring for new construction to accommodate the CAT6A connectors.
- C. All outlets need to be installed in the angled position.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 271619
Patch Cables**

PART 1 - GENERAL

1.1 SUMMARY

- A. This section is issued as a guide for patch cable installations in the Data Center, wiring closets (TDR), user areas where patch cables are required for connectivity to IP and TDM phones, and IP data connectivity needs for Intermountain Healthcare. All patch cables will support voice, data, and imaging applications within the Intermountain Healthcare Enterprise.

PART 2 - PRODUCTS

2.1 APPROVED PRODUCT

- A. Patch Cable, CAT 6A Shielded Skinny- Siemon SP6A-S (XX)-(XX)
 - 1. Use 1st (xx) to specify length. Use 2nd (xx) for color.
- B. Patch Cable, CAT 6, Orange – Siemon MC6-(XX)-09-28
 - 1. Use (xx) to specify length. For use with NURSE CALL only.
- C. Patch Cable, Fiber, Single mode Duplex W/LC Connectors, Yellow – Siemon FJ2-LCULCUL-(xx)
 - 1. Use (xx) to specify length.
- D. Patch Cable, Fiber, Multimode Duplex W/LC Connectors, Aqua – Siemon FJ2-LCLC5V-(xx)AQ
 - 1. Use (xx) to specify length. For use in the Data Center.

PART 3 - EXECUTION

3.1 PALLETTE

- A. Patch Cable Color Codes
 - 1. The Intermountain Healthcare Enterprise standard for patch cable color is in Section 27 05 53.
 - 2. The patch cable color shall match the feed cable color to identify the service provided.
- B. Contractor furnished.
 - 1. All patch cables for the TECs and TDRs shall be included in the low-voltage contract and will be required to match or exceed the existing level of the installed structured cabling system.
 - 2. All patch cables for the user areas shall be owner-furnished and will be required to match or exceed the existing level of the installed structured cabling system.
 - 3. All patch cables shall be Owner-installed.
 - 4. The quantity of patch cables the low-voltage contractor provides shall be specified in the plans.
 - a. 50% 5ft – 40% 7ft – 5% 10ft – 5% 15ft

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 275113
Overhead Paging**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. The Primary Division 27 subcontractor shall be accountable for closely coordinating the Overhead Paging system with the General Contractor.
 - 1. Division 27 is accountable for including the cabling, equipment, and installation in its work based on the project drawings.
- B. Drawings and general Contract provisions, including General and Supplementary Conditions and Division 1 Specification Sections, apply to this Section.
- C. Requirements of the following Division 26 Sections apply to this Section:
 - 1. Basic Electrical Requirements.
 - 2. Basic Electrical Materials and Methods.

1.2 SUMMARY

- A. This section includes installing an overhead paging system that is accessible through the telephone system. It includes requirements for paging system components, including, but not limited to, the following:
 - 1. Speaker systems.
 - 2. Wiring
- B. This section requires that the Division 26 installer provide rough-in materials for installation under Division 26. Rough-in materials include, but are not limited to, conduit, junction boxes, alternative raceway, and device enclosures. The Division 27 installer is to provide cable for this section.

PART 2 - PRODUCTS

2.1 MANUFACTURERS

- A. Manufacturers: Subject to compliance with requirements, provide products by the following (for each type of product) as listed in the drawings and these specifications:
 - 1. BiAmp – (Vocia)

2.2 SYSTEM REQUIREMENTS

- A. General: Provide complete and fully functional overhead paging systems using materials and equipment of types, sizes, ratings, and performances as indicated. Use materials and equipment that comply with referenced standards and manufacturers' standard design and construction in accordance with published product information. Coordinate the features of materials and equipment to form an integrated system with components and interconnections matched for optimum performance of specified functions.

2.3 EQUIPMENT AND MATERIALS

- A. General: Provide all solid-state components fully rated for continuous duty at the specified ratings. Select equipment for regular operation on input power supplied at 105-130 V, 60 Hz.
- B. Loudspeakers shall be Drop-In Tile speakers, 24" x 24" tile speakers provided by one of the following manufacturers.
 - 1. Bogen CSD2X2/VR
 - 2. Quam System 12/70RS
- C. The transformer must be capable of providing 25V/70V.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine conditions, with the Installer present, for compliance with requirements and other conditions affecting the performance of the Overhead Paging System work.
- B. Do not proceed until unsatisfactory conditions have been corrected.
- C. Verify compliance of the following items before beginning sound equipment installation.
 - 1. No cables spliced except at standard barrier terminal blocks inside the equipment cabinet.
 - 2. Cables marked at each end with permanent wire labels such as Brady or equal.
 - 3. Isolated ground runs back to the main electrical panel from the paging equipment cabinet.
 - 4. Specified conduit, cables, speaker enclosures, and equipment cabinets are correctly installed.

3.2 INSTALLATION

- A. General: Install the system in accordance with NFPA 70 and other applicable codes. Install the equipment in accordance with the manufacturer's written instructions.
- B. Speakers:
 - 1. Confirm speaker polarity before installation and wire to maintain uniform polarity.
 - 2. Mount transformers with screws securely to speaker brackets or enclosures.
 - 3. Neatly mount speaker grilles, panels, connector plates, etc., tight, plumb, and square unless indicated otherwise on drawings.
 - 4. Provide brackets, screws, adapters, springs, rack mounting kits, etc., recommended by manufacturer for correct assembly and installation of speaker assemblies and electronics components.
 - 5. Identification:
 - a. Legibly identify user-operated system controls and system input/output jacks using engraved, permanently attached laminated plastic plates or imprinted Lexon labels. Label equipment and controls within the equipment cabinet using similar labels or "Kroy" type labels.
- C. Repairs: Wherever walls, ceilings, floors, or other building finishes are cut for installation, the contractor is responsible for repairing, restoring, and refinishing them to their original appearance.

3.3 FIELD QUALITY CONTROL

- A. Manufacturer's Field Services: Provide the services of a factory-authorized service representative to supervise the field assembly and connection of components and the system's pre-testing, testing, and adjustment.
- B. Pre-testing: Upon completing the system's installation, align, adjust, and balance it, and perform a complete pretest. Determine the system's conformance to the requirements of the Drawings and Specifications. Correct deficiencies observed. Replace malfunctioning or damaged items with new ones and retest until satisfactory performance and conditions are achieved.

3.4 COMMISSIONING

- A. Occupancy Adjustments: When requested by the Architect or the Sound/Acoustical Consultant within one year of the date of substantial completion, provide on-site assistance in adjusting sound levels, resetting matching transformer taps, and adjusting controls to suit actual occupied conditions. Provide two trips for this purpose.

3.5 CLEANING AND PROTECTION

- A. Before final acceptance, clean system components and protection from damage and deterioration.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 275117
NETWORKED PUBLIC ADDRESS AND PAGING SYSTEM**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. The Primary Division 27 subcontractor shall be accountable to closely coordinate the Overhead Paging system with the General Contractor.
 - 1. Division 27 is accountable for including the cabling, equipment, and installation thereof in their work; based upon the project drawings.
- B. Drawings and general provisions of Contract, including General and Supplementary Conditions and Division 1 Specification Sections, apply to this Section.
- C. Requirements of the following Division 26 Sections apply to this Section:
 - 1. Basic Electrical Requirements.
 - 2. Basic Electrical Materials and Methods.

1.2 SUMMARY

- A. This Section includes the installation of an overhead paging system that shall be accessible through the telephone system. It includes requirements for paging system components including, but not limited to, the following:
 - 1. Speaker systems.
 - 2. Wiring
- B. This section requires that rough-in materials for this section be provided by the Division 26 installer for installation under Division 26. Rough-in materials include but are not limited to conduit, junction boxes, alternative raceway, and device enclosures. Cable for this section is to be provided by the Division 27 installer.

1.3 SYSTEM DESCRIPTION

- A. General: The networked public address paging system shall be a complete system for delivering audio signals to distributed programmable amplifier modules via the facility's Ethernet network. Input from the telephone system to the network as the paging system source will need to be coordinated to provide a SIP trunk connection.
- B. Functional Performance: Components and system features and functions shall include, but are not limited to, the following:
 - 1. Meet the following performance parameters as measured in 1/3 octave bands:
 - a. From 100 Hz to 2kHz, flat within plus or minus 2dB.
 - b. Above 2kHz, slope down along an approximate 3dB octave slope to 8kHz.
 - 2. When driven to maximum output, clipping shall first occur in power amplifiers.
 - 3. No noise, hum, RFI pickup or distortion shall be audible under normal operating conditions.
 - 4. The overhead paging system shall reproduce program material at a level of 85 dBA without audible distortion.

1.4 ACTION SUBMITTALS

- A. General: Submit the following according to Conditions of Contract and Division 1 Specification Sections

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- B. Product data for system components, including "Nationally Recognized Testing Laboratory" (NRTL) listing data and list of materials, dimensioned plans, sections, and elevations showing minimum clearances, mounting arrangements, and installed features and devices.
- C. Wiring Diagrams and Speaker loads: Provide the following for each speaker type used, amp loads, zoning with total loads.
 - 1. Wiring diagrams for scheduled items requiring power. Identify manufacturer-installed and field-installed wiring.
 - 2. Provide load calculations and requirements for each Zone with number of device. Size the conductors for each zone appropriately to maintain this requirement.
 - 3. Provide cable type (as indicated on the Shop Drawings Wire Legend) that is used for zone, the conductor size, the estimated total length of cable, the estimated line loss (voltage drop), and the percentage of estimated line loss (voltage drop).
- D. System operation description, including method of operation of each component and each type of circuit, and sequence of operations for all manually and automatically initiated system inputs. Description must cover this specific Project; manufacturer's standard descriptions for generic systems are not acceptable.

1.5 CLOSEOUT SUBMITTALS

- A. Operation and maintenance data for inclusion in "Operating and Maintenance Manual" specified in Division 01. Include data for each type product, including all features and operating sequences, both automatic and manual. Include user's software data and recommendations for spare parts to be stocked at the site. Provide names, addresses, and telephone numbers of service organizations that stock repair parts for the system.
- B. Product certifications signed by the manufacturers of system components certifying that their products comply with the referenced standards.
- C. Separate Qualification Data for Manufacturers and Installers: Demonstrate their capabilities and experience as specified in Quality Assurance Article. Include lists of completed projects with project names and addresses, names of Contracting Officer and Government representatives, plus other information specified.
- D. Record of field tests of system.

1.6 EXTRA MATERIALS

- A. Furnish extra materials described below, before installation begins, that match products installed and that are packaged with protective covering for storage and identified with labels describing contents. Provide no fewer than one of each item listed below. Deliver extra materials to Owner.
 - 1. Speaker: One for every 30; each type and rating.
 - 2. Distribution Power Amplifiers: One for every 10; each type installed.

1.7 QUALITY ASSURANCE

- A. Installer Qualifications: Engage an experienced Installer who is a factory authorized sales and service representative of those manufacturers specified to perform the work of this Section. Refer to Division 1 Section "Definitions and Standards" for definition of

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

experienced Installer. Upon request, submit evidence of such qualifications to the specifying authority.

- B. Electrical Component Standard: Provide work complying with applicable requirements of NFPA 70 "National Electrical Code."
- C. EIA Compliance: Comply with the following Electronics Industries Association Standards:
 - 1. Sound Systems, EIA 160.2.
 - 2. Loudspeaker, Dynamic Magnetic Structures, and Impedance, EIA 299 A.
 - 3. Racks, Panels, and Associated Equipment, EIA 310 A.
 - 4. Amplifiers for Sound Equipment, SE 101 A.
 - 5. Speakers for Sound Equipment, SE 103.
 - 6. Microphones for Sound Equipment, SE 105.
 - 7. UL Compliance: Comply with requirements of UL 50.
- D. Coordination of Work: Coordinate the Work of this Section with the requirements of the Owner's paging system technicians and perform the following:
 - 1. Pre-Installation Meeting: Meet jointly with the representatives of the Owner, to exchange information and agree on details of installation interfaces, current system operations including zone identification and classification, and any other circumstances that impact on the completion of the work of this Section.
 - 2. Record agreements reached in the meeting and distribute the record to the other participants.

1.8 WARRANTY

- A. In addition to the requirements of Division 1 and other sections of this specification, provide complete warranty repair or replacement for a minimum of one year after date of substantial completion at no cost to owner, except in the case of obvious abuse
- B. Disclaimers and Limitations: Manufacturer's disclaimers and limitations on product warranties do not relieve the Contractor of the warranty on the Work that incorporates the products, nor does it relieve suppliers, manufacturers, and subcontractors required to countersign special warranties with the Contractor.
- C. Reinstatement of Warranty: When Work covered by a warranty has failed and been corrected by replacement or rebuilding, reinstate the warranty by written endorsement. The reinstated warranty shall be equal to the original warranty.
- D. Related Damages and Losses: When correcting warranted Work that has failed, remove and replace other Work that has been damaged as a result of such failure or that must be removed and replaced to provide access for correction of warranted Work.
- E. Replacement Cost: Upon determination that Work covered by a warranty has failed, replace or rebuild the Work to an acceptable condition complying with requirements of Contract Documents. The Contractor is responsible for the cost of replacing or rebuilding defective Work regardless of whether the Owner has benefited from use of the Work through a portion of its anticipated useful service life.
- F. Owner's Recourse: Written warranties made to the Owner are in addition to implied warranties, and shall not limit the duties, obligations, rights and remedies otherwise available under the law, nor shall warranty periods be interpreted as limitations on time in which the Owner can enforce such other duties, obligations, rights, or remedies.
 - 1. Rejection of Warranties: The Owner reserves the right to reject warranties and to limit selections to products with warranties not in conflict with requirements of the Contract Documents.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- G. The Owner reserves the right to refuse to accept Work for the Project where a special warranty, certification, or similar commitment is required on such Work or part of the Work, until evidence is presented that entities required to countersign such commitments are willing to do so.
- H. Special Warranty: Manufacturer agrees to repair or replace paging system equipment and components that fail because of defects in materials or workmanship within specified warranty period.

Warranty Period: Two years from date of Substantial Completion.

PART 2 - PRODUCTS

2.1 MANUFACTURERS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following (for each type of product) as listed in the drawings and these specifications:
 - 1. BiAmp Vocia
 - 2. Atlas Sound (Speaker only)
 - 3. Bogen (Speaker Only)
 - 4. Quam (Speaker Only)

2.2 SYSTEM REQUIREMENTS

- A. General: Provide complete and fully functional overhead paging systems using materials and equipment of types, sizes, ratings, and performances as indicated. Use materials and equipment that comply with referenced standards and manufacturers' standard design and construction in accordance with published product information. Coordinate the features of materials and equipment so they form an integrated system with components and interconnections matched for optimum performance of specified functions.

2.3 EQUIPMENT AND MATERIALS

- A. General: Provide all solid-state components fully rated for continuous duty at the ratings indicated or specified. Select equipment for normal operation on input power supplied at 105-130 V, 60 Hz.
- B. Loudspeakers shall be Drop-In Tile speakers. To be 24" x 24" tile speakers, provided by one of the following manufactures.
 - 1. Bogen CSD2X2/VR
 - 2. Quam System 12/70RS
- C. Transformers must be capable of providing 25V/70V.
- D. RACK ENCLOSURES: All rack-mount Paging System (PS) equipment shall be housed in EIA standard 19" equipment enclosures. Given the distributed networked nature of the system, it may be necessary to locate such rack enclosures at multiple sites throughout the facility, where each site is secure from the public. Each rack may be wall-mounted or floor-mounted, as required by specific instructions, or by the space(s) available.
 - 1. Adequate ventilation shall be supplied for each rack, and temperatures at all critical components shall not exceed 95 degrees F. Convection or forced air cooling may be used, as long as this heat threshold is not surpassed, regardless of external factors. System components featuring internal forced-air cooling shall be provided adequate hot air extraction through the rear of the enclosure.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2. Each rack shall be constructed of 16-gauge steel with 14-gauge steel mounting rails. All joints shall be welded and bonded.
 3. Rear access to each rack shall be lockable.
 4. The height of each rack shall be as required for the specified equipment, plus 25% spare space for future growth.
 5. Blank panels shall be provided to fill all unused rack space.
 6. Acceptable rack manufacturers:
 - a. Middle Atlantic
 - b. Atlas Sound
- E. NETWORK: The Paging System (PS) shall be based on IEEE 802.3.af PoE Ethernet Network Infrastructure. All cabling, conventions and equipment shall be consistent with this IEEE standard.
1. SWITCHES shall be managed-type, with VLAN capabilities and Power-OverEthernet (PoE) for all devices except AMPLIFIERS and SERVERS. Care should be taken to ensure that each Switch be able to supply adequate PoE power to the endpoint devices it serves. Uplink ports for each switch shall be via Optical Fiber. Either Multimode or Single-mode fiber may be used, as determined by the length of the required uplink runs. Each port on each Switch shall be capable of sustained 100MBit data rates.
 2. SWITCHES for life safety compliant system components (Amplifiers, Life Safety Interface, Emergency Paging Station) shall be rugged industrial types with dry contact output for switch failure.
 3. SPANNING TREE single-point failure-resistant network topology shall be used, if the system is required to be life-safety capable or withstand failure of a network sector.
 4. UPS (uninterruptable power supply) systems shall be provided for all lifesafety critical network components. UPS units shall have the capacity to power the units they serve for a minimum of 90 minutes from removal of mains power. UPS units shall monitor their proper functioning, and provide alerts via Form-C contact closures upon mains or any other failure.
 5. One consistent VLAN (Virtual Local Area Network) shall be established across each managed Switch, with enough ports to accommodate the PS devices attached to it, plus 25% for future expansion. A second VLAN may be required to handle additional VoIP traffic to/from certain devices, and a third VLAN may be required for third-party control, and communication to other PS systems.
- F. COMPUTER (CPU): A CPU may be present as part of the PS but is not required for PS to function. It is recommended that the CPU and its monitor be rack-mounted, but rack mounting is not a requirement. The CPU and its accessories shall meet the following minimum specifications:
1. Microsoft Windows 10, Windows 11.
 2. Intel Pentium Dual Core processor, 2.6 GHz.
 3. 16 GB RAM.
 4. 1 TB SATA hard drive.
 5. Integrated video adapter, minimum 1280x1024 native output at 32-bit color.
 6. Integrated gigabit Ethernet port.
 7. User Interface shall be a single rack-space combined 17" LCD monitor, keyboard and track-pad mouse. Monitor shall be active-matrix color type, capable of native 1280x1024 resolution.
- 2.4 PAGING SYSTEM (PS):
- A. The PS shall be distributed in structure, such that there is no "head end" control location, and thus has no central point of failure.
 - B. The PS shall use the VLAN for transport of all digital audio data, including all recorded and live voice messages, preambles, background music and other audible signals, routine or emergency. This same Network shall carry monitoring and control data to and

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

from each PS device. This audio data traffic shall be standard CobraNet at a sample rate of 48 kHz and latency of 5.33ms. For particulars, please access www.cobranet.info.

- C. All PS components shall be continuously monitored for presence, proper function and faults. Each and every fault must be logged internally to the unit, and be able to viewed and copied to an attached Monitoring Computer, running software supplied by the Manufacturer.
- D. All PS components shall be addressable on the CobraNet VLAN by means of dual 4- bit rotary ID switches.
- E. All PS preambles, voice prompts and recorded announcements shall be in 16-bit monaural WAV file format. The Paging System shall be capable of importing custom preambles, prompts and announcements using an AUDIO FILE MANAGER function, through the Manufacturer Software running on an attached computer.
- F. Each PS device shall have sufficient on-board memory to retain its configuration and settings in the event of power loss.
- G. All PS components shall be CE marked, UL listed and shall comply with the RoHS directive.
- H. CARD FRAME AMPLIFIER: CFPS amplifier shall be located throughout the facility, as available space and efficiencies dictate. Each CFPS amplifier shall meet the following specifications:
 - 1. Power scalable in software from 100 Watts to 600 Watts per output channel, in 100 Watt increments.
 - 2. Up to 2400 Watts output power capability from each amplifier chassis.
 - 3. Each channel provides selected power into low impedance load, 70V line or 100V line, without the need for external transformer.
 - 4. Front panel indications for Signal Present, Card Failure, Signal Clip, OverTemperature, Fan Fault.
 - 5. Up to eight (8) amplifier modules per amplifier chassis.
 - 6. Complete DSP (digital signal processing) per output channel, including page ducking, 5-band parametric filters, compressor/limiter, 8-band speaker equalization, and delay adjustable up to 2700 milliseconds.
 - 7. Programmable channel-to-channel fail-over capability or chassis-to-chassis failover capability.
 - 8. With additional failover module installed 2 x 3:1 or 7:1 failover shall be possible within the amplifier chassis.
 - 9. Fail-over Link connector, for chassis-to-chassis fail-over logic.
 - 10. Ability to support end-of-line monitoring devices (ELDs). Each amplifier output module shall support up to 15 ELDs.
 - 11. Ability to support Ambient Noise Compensation (ANC) circuitry, to allow for consistent Background Music (BGM) and routine page levels per amplifier channel or group of channels.
 - 12. Primary and Secondary CobraNet data ports wired to the CobraNet VLAN.
 - 13. Ability to store emergency messages in on-board non-volatile digital memory.
 - 14. Ability to report and log all detected faults internal to each amplifier module and any ANC or ELD device attached to it.
 - 15. Design Make/Model: Biamp Vocia VA-8600 or VA-8600c, with AM-600 or AM-600c amplifier modules.
- I. SMALL AMPLIFIERS: PS amplifiers shall be located throughout the facility, as available space and efficiencies dictate. Each PS small amplifier shall meet the following specifications:
 - 1. Power variants are 2 x 60 Watts or 4 x 30 Watts per amplifier chassis
 - 2. Up to 120 Watts output power capability from each amplifier chassis.
 - 3. Each channel provides selected power into low impedance load, 70V line or 100V line, without the need for external transformer.
 - 4. Front panel indications for Signal Present, Card Failure, Signal Clip, OverTemperature, Fan Fault.

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

5. If local line level input or dual power input is required then the 'e' version of amplifiers shall be used.
 6. Complete DSP (digital signal processing) per output channel, including page ducking, 5-band parametric filters, compressor/limiter, 8-band speaker equalization, and delay adjustable up to 500 milliseconds.
 7. Programmable channel-to-channel fail-over capability or chassis-to-chassis failover capability. 3:1 failover shall be possible in the four channel amplifier variants.
 8. Fail-over Link connector, for chassis-to-chassis fail-over logic.
 9. Ability to support end-of-line monitoring devices (ELDs). Each amplifier output module shall support up to 15 ELDs.
 10. Ability to support Ambient Noise Compensation (ANC) circuitry, to allow for consistent Background Music (BGM) and routine page levels per amplifier channel or group of channels.
 11. Primary and Secondary CobraNet data ports wired to the CobraNet VLAN.
 12. Ability to store emergency messages in on-board non-volatile digital memory.
 13. Ability to report and log all detected faults internal to each amplifier module and any ANC or ELD device attached to it.
 14. Design Make/Model: Biamp Vocia VA-2060/VA-2060e or Biamp Vocia VA4030/VA-4030e.
- J. MIDSIZE AMPLIFIERS: MPS amplifiers shall be located throughout the facility, as available space and efficiencies dictate. Each MPS amplifier shall meet the following specifications:
1. Power variants are 8 x 150 Watts or 4 x 300 Watts per amplifier chassis.
 2. Up to 1200 Watts output power capability from each amplifier chassis.
 3. Each channel provides rated power into 70V or 100V line without the need for external transformer.
 4. Front panel indications for Signal Present, Card Failure, Signal Clip, OverTemperature, Fan Fault.
 5. Complete DSP (digital signal processing) per output channel, including page ducking, 5-band parametric filters, compressor/limiter, 8-band speaker equalization, and delay adjustable up to 32 seconds.
 6. Programmable channel-to-channel fail-over capability or chassis-to-chassis failover capability. 3:1 failover shall be possible in the four channel amplifier variants.
 7. Fail-over Link connector, for chassis-to-chassis fail-over logic.
 8. Ability to support end-of-line monitoring devices (ELDs). Each amplifier output module shall support up to 15 ELDs.
 9. Ability to support passive end of line monitoring devices (PLDs). Each amplifier shall support a combination of PLD or ELD on different channels if required.
 10. Ability to support Ambient Noise Compensation (ANC) circuitry, to allow for consistent Background Music (BGM) and routine page levels per amplifier channel or group of channels.
 11. Primary and Secondary CobraNet data ports wired to the CobraNet VLAN.
 12. Ability to store emergency messages in on-board non-volatile digital memory.
 13. Ability to report and log all detected faults internal to each amplifier module and any ANC or ELD device attached to it.
 14. Design Make/Model: Biamp Vocia VA-8150CV or Biamp Vocia VA-4300CV.
- K. END-OF-LINE DEVICE (ELD):
1. Each ELD shall be Power over Ethernet (PoE), Class-3, and wired to the CobraNet VLAN.
 2. Each ELD shall be housed in a small, surface-mountable enclosure.
 3. Each ELD shall be compatible with low impedance and constant voltage systems.

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

4. Each ELD shall respond to a digital integrity signal sent down the speaker line from the amplifier channel module. Once the channel module to ELD link is established, the absence of a response from an associated ELD shall result in a Speaker Line Fault.
 5. Each ELD shall monitor its attached speaker line, and report faults to its associated amplifier.
 6. Faults monitored by the ELD shall include short circuit, open circuit and ground fault as per EN54-16 requirements.
 7. Design Make/Model: Biamp Vocia ELD-1.
- L. PASSIVE END OF LINE DEVICES (PLD):
1. Each PLD shall be installed on the end of the speaker line and will not require any additional cabling.
 2. Each PLD shall be housed in a small, surface-mountable enclosure.
 3. Each PLD shall be compatible with 70v or 100v constant voltage systems.
 4. Each PLD shall respond to a pilot tone integrity signal sent down the speaker line from the amplifier channel module. Once commissioned, the absence of a PLD shall result in a Speaker Line Fault.
 5. Each PLD shall monitor its attached speaker line, and report faults to its associated amplifier.
 6. Faults monitored by the PLD shall include short circuit, open circuit and ground fault as per EN54-16 requirements.
 7. Design Make/Model: Biamp Vocia PLD-1 or Biamp Vocia PLD-2.
- M. M. AMBIENT NOISE COMPENSATORS (ANC):
1. 1. Each ANC shall be Power over Ethernet (PoE), Class-3, and wired to the CobraNet VLAN.
 2. 2. Each ANC shall be housed in a small, surface-mountable enclosure.
 3. 3. Each ANC shall respond to its associated amplifier channel module(s), advising that channel module(s) of a substantial change in ambient noise level.
 4. 4. Each ANC shall have two microphone inputs, each with 48V phantom power.
 5. 5. Each ANC shall offer software-adjustable microphone gain and phantom power controls.
 6. 6. If two microphones are attached to an ANC, the ambient level reported to the associated amplifier channel(s) shall be the sum of the two microphones.
 7. 7. Each ANC shall use an adaptive algorithm to incorporate the use of a reference, in order to accurately distinguish ambient noise from PS generated announcements and background music. Gap sensing ANC technology shall not be employed.
 8. 8. Design Make/Model: Biamp Vocia ANC-1.
- N. AMBIENT NOISE SENSING MICROPHONE (AMIC): AMICs shall be located in the ceiling of a zone, away from individual speakers and persons paging. These microphones are to be uninhibited by other ceiling systems.
1. 1. Each AMIC shall have a pickup pattern best suited for the specific application.
 2. 2. Each AMIC shall be Self-Polarized Condenser type, phantom-powered from its ANC.
 3. 3. Each AMIC shall be mountable to ceiling tiles and panels of at least one inch thickness, or into a deep single-gang electrical box.
 4. 4. Design Make/Model:
- O. O. RACK-MOUNTED INPUT DEVICE (RMID): Devices of this type serve to allow input from low-priority analog sources, such as Background Music (BGM) sources and local entertainment systems. Each RMID shall meet the following minimum specifications:
1. Powered over Ethernet (PoE), Class-3, and wired to the CobraNet VLAN.
 2. The ability to output a Multicast Bundle of 6 monaural signals to the CobraNet VLAN.

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

3. Four pairs of unbalanced RCA jacks plus four balanced inputs. Each RCA jack pair shall mix to a single signal prior to digitization for stereo to mono summing.
 4. Two balanced Mic/Line inputs with phantom power, to accommodate other sources.
 5. Adjustment of input gain and phantom power via software.
 6. Complete DSP (digital signal processing) per input channel, including 5- band parametric filters and compressor/limiter.
 7. Four Control Inputs, each with variable trigger thresholds and operation modes: high/low/toggle high/toggle low.
 8. Four Form-C contact outputs with variable operation modes: high/low/pulse high/pulse low.
 9. Ability to report and log any and all failure conditions associated with its operation.
 10. Design Make/Model: Biamp Vocia VI-6.
- P. ENHANCED RACK-MOUNTED INPUT DEVICE (ERMID): Devices of this type serve to allow input from third party analog or CobraNet sources, such as other paging/audio systems. In emergency systems it can act as a slave device to the LSI and be connected to building safety systems such as the Fire Alarm System (FAS) or Building Management System (BMS). It can also operate as a standalone device for non-emergency purposes. Each ERMID shall meet the following minimum specifications:
1. Primary and secondary power for ERMID shall be from approved 24VDC external power source.
 2. Primary and Secondary CobraNet data ports wired to the CobraNet VLAN.
 3. The ability to output a Multicast Bundle of 8 monaural signals to the CobraNet VLAN.
 4. Eight balanced Mic/Line audio inputs with phantom power. Each balanced input shall mix to a single signal prior to digitization for stereo to mono summing.
 5. Each balanced MIC/Line audio input shall be able to be automatically triggered when audio is sent to it (VOX).
 6. Adjustment of input gain and phantom power via software.
 7. Complete DSP (digital signal processing) per input channel, including 5- band parametric filters and compressor/limiter.
 8. Eight Control Inputs, each with variable trigger thresholds and operation modes: high/low/toggle high/toggle low.
 9. Eight Form-C contact outputs with variable operation modes: high/low/pulse high/pulse low.
 10. Ability to report and log any and all failure conditions associated with its operation.
 11. Design Make/Model: Biamp Vocia VI-8.
- Q. RACK-MOUNTED OUTPUT DEVICE (RMOD): Devices of this type serve as zone outputs to non-monitored sub-systems such as legacy amplifiers, audio recording devices or local entertainment systems. Each RMOD shall meet the following minimum specifications:
1. Power over Ethernet (PoE), Class-3, and wired to the CobraNet VLAN.
 2. Four balanced analog audio outputs, selectable in software for +4/0/-10 dBu output levels.
 3. Complete DSP (digital signal processing) per output channel, including page ducking, 5-band parametric filters, compressor/limiter, crossover, 8-band speaker equalization, and delay adjustable up to 500 milliseconds.
 4. Four Control Inputs, each with variable trigger thresholds and operation modes: high/low/toggle high/toggle low.
 5. Four Form-C contact outputs with variable operation modes: high/low/pulse high/pulse low.
 6. Ability to report and log any and all failure conditions associated with its operation.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

7. Each PSD10 will provide four auxiliary ports that can be used to input audio, relay input for triggering page codes and support for auxiliary microphones (AM) and Paging Station Interfaces (PSI).
 8. Design Make/Model: Biamp Vocia VO-4.
- R. ENHANCED RACK-MOUNTED OUTPUT DEVICE (ERMOD): Devices of this type serve as zone outputs to monitored sub-systems such as legacy amplifiers, audio recording devices, active loudspeakers or local entertainment systems that require provision for emergency messages and redundancy. Each ERMOD shall meet the following minimum specifications:
1. Power over Ethernet (PoE), Class-3, and wired to the CobraNet VLAN.
 2. Four balanced analog audio outputs, selectable in software for +4/0/-10 dBu output levels.
 3. Complete DSP (digital signal processing) per output channel, including page ducking, 5-band parametric filters, compressor/limiter, crossover, 8-band speaker equalization, and delay adjustable up to 2700 milliseconds.
 4. Programmable channel-to-channel fail-over capability or chassis-to-chassis failover capability.
 5. Four Control Inputs, each with variable trigger thresholds and operation modes: high/low/toggle high/toggle low.
 6. Provision for dual 24 VDC power input.
 7. Primary and Secondary CobraNet data ports wired to the CobraNet VLAN.
 8. Four Form-C contact outputs with variable operation modes: high/low/pulse high/pulse low.
 9. Ability to report and log any and all failure conditions associated with its operation.
 10. Ability to store emergency messages in on-board non-volatile digital memory.
 11. Ability to support Ambient Noise Compensation (ANC) circuitry, to allow for consistent Background Music (BGM) and routine page levels per amplifier channel or group of channels.
 12. Ability to support end-of-line monitoring devices (ELDs). Each ERMOD output module shall support up to 15 ELDs.
 13. Primary and Secondary CobraNet data ports wired to the CobraNet VLAN.
 14. Design Make/Model: Biamp Vocia VO-4e.
- S. PAGING STATION, DESK-TYPE 4-BUTTON (PSD4):
1. Each PSD4 shall be Power over Ethernet (PoE), Class-3, and wired to the CobraNet VLAN.
 2. Each PSD4 shall have four buttons, each assignable to a specific paging task, plus a large round push-to-talk button and LEDs to indicate "wait" and "talk now."
 3. Each PSD4 shall be equipped with a high quality dynamic cardioid (unidirectional) element, with integral secondary element for signal path testing, mounted on a flexible gooseneck.
 4. Each PSD4 shall have integral DSP functions: 5-band parametric filters and compressor/limiter.
 5. Each PSD4 shall have internal memory, sufficient to store delayed pages of up to 120 seconds duration, as well as four preamble WAV files.
 6. Each PSD4 shall have a backlit LCD display, indicating page code (program) selected, availability of destination zones and security code entry, as well as other optional information.
 7. Each PSD4 shall be capable of storing a live page message, when some destination zones are busy. The PSD4 shall release the message when all destination zones become available.
 8. Each PSD4 shall have the ability to report and log any and all failure conditions associated with its operation.
 9. Each PSD4 shall have the ability to be used for infinite live paging.

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

10. Each PSD4 shall have the ability to store a message from the microphone input and give the end user the ability to replay the message with an adjustable repetition count and/or repetition length.
 11. Design Make/Model: Biamp Vocia DS-4.
- T. PAGING STATION, DESK-TYPE 10-BUTTON (PSD10):
1. Each PSD10 shall be Power over Ethernet (PoE), Class-3, and wired to the CobraNet VLAN.
 2. Each PSD10 shall have ten buttons (0 through 9, telephone-style), for the purposes of entering three-digit page codes and security codes. PSD10 shall also include a large round push-to-talk button and LEDs to indicate "wait" and "talk now."
 3. Each PSD10 shall be equipped with a high quality dynamic cardioid (unidirectional) element, with integral secondary element for signal path testing, mounted on a flexible gooseneck.
 4. Each PSD10 shall have integral DSP functions: 5-band parametric filters and compressor/limiter.
 5. Each PSD10 shall have internal memory, sufficient to store delayed pages of up to 120 seconds duration, as well as four preamble WAV files.
 6. Each PSD10 shall have a backlit LCD display, indicating page code (program) selected, availability of destination zones and security code entry, as well as other optional information.
 7. Each PSD10 shall be capable of storing a live page message, when some destination zones are busy. The PSD10 shall release the message when all destination zones become available.
 8. Each PSD10 shall have the ability to report and log any and all failure conditions associated with its operation.
 9. Each PSD10 shall have the ability to be used for infinite live paging.
 10. Each PSD10 shall have the ability to store a message from the microphone input and give the end user the ability to replay the message with an adjustable repetition count and/or repetition length.
 11. Each PSD10 will provide an auxiliary port that can be used to input audio, control data (RS-232), relay input for triggering page codes and support for auxiliary microphones (AM) and Paging Station Interfaces (PSI).
 12. Design Make/Model: Biamp Vocia DS-10.
- U. PAGING STATION, WALL-TYPE 4-BUTTON (PSW4):
1. Each PSW4 shall be Power over Ethernet (PoE), Class-3, and wired to the CobraNet VLAN.
 2. Each PSW4 shall have four buttons, each assignable to a specific paging task, plus LEDs to indicate "wait" and "talk now."
 3. Each PSW4 shall be equipped with a dynamic noise-canceling close-talking microphone with push-to-talk button, on a 4.5-foot heavy-duty coil cord, and with an integral secondary element for signal path testing.
 4. The coil cord of each PSW4 shall be strain-relieved to its metal base structure, and shall be easily replaced with simple hand tools.
 5. Each PSW4 shall have integral DSP functions: 5-band parametric filters and compressor/limiter.
 6. Each PSW4 shall have internal memory, sufficient to store delayed pages of up to 120 seconds duration, as well as four preamble WAV files.
 7. Each PSW4 shall have a backlit LCD display, indicating page code (program) selected, availability of destination zones and security code entry, as well as other optional information.
 8. Each PSW4 shall be capable of storing a live page message, when some destination zones are busy. The PSW4 shall release the message when all destination zones become available.

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

9. Each PSW4 shall have the ability to report and log any and all failure conditions associated with its operation.
 10. Each PSW4 shall have the ability to have the hand-held microphone replaced at the project site.
 11. Each PSW4 shall have the ability to be used for infinite live paging.
 12. Each PSW4 shall have the ability to store a message from the microphone input and give the end user the ability to replay the message with an adjustable repetition count and/or repetition length.
 13. Each PSW10 shall have the ability to be used as an Emergency Wall Station Type 4 button (EPSW10) purely by designating it as such in the manufacturers software application.
 14. Design Make/Model: Biamp Vocia WS-4.
- V. PAGING STATION, WALL-TYPE 10-BUTTON (PSW10):
1. Each PSW10 shall be Power over Ethernet (PoE), Class-3, and wired to the CobraNet VLAN.
 2. Each PSW10 shall have ten buttons (0 through 9, telephone-style), for the purposes of entering three-digit page codes and security codes plus LEDs to indicate "wait" and "talk now."
 3. Each PSW10 shall be equipped with a dynamic noise-canceling close-talking microphone with push-to-talk button, on a 4.5-foot heavy-duty coil cord and with an integral secondary element for signal path testing.
 4. The coil cord of each PSW10 shall be strain-relieved to its metal base structure, and shall be easily replaced with simple hand tools.
 5. Each PSW10 shall have integral DSP functions: 5-band parametric filters and compressor/limiter.
 6. Each PSW10 shall have internal memory, sufficient to store delayed pages of up to 120 seconds duration, as well as four preamble WAV files.
 7. Each PSW10 shall have a backlit LCD display, indicating page code (program) selected, availability of destination zones and security code entry, as well as other optional information.
 8. Each PSW10 shall be capable of storing a live page message, when some destination zones are busy. The PSW10 shall release the message when all destination zones become available.
 9. Each PSW10 shall have the ability to report and log any and all failure conditions associated with its operation.
 10. Each PSW10 shall have the ability to have the hand-held microphone replaced at the project site.
 11. Each PSW10 shall have the ability to be used for infinite live paging.
 12. Each PSW10 shall have the ability to store a message from the microphone input and give the end user the ability to replay the message with an adjustable repetition count and/or repetition length.
 13. Each PSW10 shall have the ability to be used as an Emergency Wall Station Type 10 button (EPSW10) purely by designating it as such in the manufacturers software application.
 14. Design Make/Model: Biamp Vocia WS-10.
- W. PAGING STATION INTERFACE MODULE (PSIM): In the event that the client requires a third-party paging solution to be created then the PSIM shall be used to interface that solution into the PS.
1. The PSIM shall be connected to a paging station via RS-232, balanced analog audio and a relay to allow Push To Talk functionality.
 2. It shall be powered via the paging station or RMID over Cat5, Cat5e, Cat6 or Cat7 cabling.
 3. The PSIM shall support user adjustable audio input sensitivity.
 4. It shall have an LED to indicate powered status.
 5. It shall be CE marked, UL listed and comply with the RoHS directive.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

6. Design Make/Model: Biamp Vocia VPSI-1.
- X. AUXILIARY STATION, WALL-TYPE 1-BUTTON (AS1): In applications such as airports or in an industrial environment a simplified version of the paging station is required for areas such as jetways or shop floors. For this purpose a single button wall mount microphone that connects to either a paging station or a Rack Mounted Input Device shall be used.
1. Each AS1 shall be wired using standard CAT5, CAT5e or CAT6 cabling and connected to a paging station or Rack Mounted Input Device.
 2. The AS1 is not an Ethernet device and therefore should not be connected to a network switch.
 3. The zone routing, priority level and type of message will be determined in the manufacturers software and is fixed so that by simply pushing the PTT button the required page code shall be called.
 4. Each AS1 shall be equipped with a dynamic noise-canceling close-talking microphone with push-to-talk button, on a 4.5-foot heavy-duty coil cord and with an integral secondary element for signal path testing.
 5. The coil cord of each AS1 shall be strain-relieved to its metal base structure, and shall be easily replaced with simple hand tools.
 6. The DSP functions for the AS1 shall be found in the supporting device (either paging station or RMID).
 7. Each AS1 will have two LEDs that indicate wait, talk now and paging unavailable states.
 8. The AS1 is fully monitored by the device it is connected to (either paging station or RMID).
 9. Each AS1 shall have the ability to have the hand-held microphone replaced at the project site.
 10. Each AS1 shall have the ability to be used for infinite live paging.
 11. Design Make/Model: Biamp Vocia VAM-1.
- Y. MESSAGE SERVER (MS): The Message Server is a device that supports advanced paging functionality such as prerecorded message storage, scheduled events, third party control interfacing, storage of logged system data, auto configuration of replacement devices, inter PS paging & control, time server support and VoIP telephone paging.
1. Each MS shall be a single rack space Linux server, powered by 120-240VAC Mains.
 2. Each MS shall be wired to the CobraNet VLAN and the Control Network VLAN. If Telephone Paging is enabled, then it shall be wired to the VoIP VLAN as well if required by the VoIP PABX.
 3. Each MS shall have a hard drive with minimum capacity of 80 GB, for storage and playback of recorded announcements and preambles.
 4. Each MS shall act as a Configuration Server for the entire PS, and have the ability to automatically program replacement devices, as needed.
 5. Each MS shall include a VoIP Trunk Server, and support SIP (Session Initiation Protocol) calling, for purposes of telephone-based paging.
 6. Callers using VoIP into the MS shall be given options relating to entering of security codes, the voice prompts provided and whether an extension will be directly linked to a three-digit page code. The voice prompts and extension numbers shall be programmable.
 7. Each MS shall have an integral scheduler, for purposes of scheduling automated events throughout the PS system.
 8. Each MS shall store log data from all system components, and be able to download that data to attached computer(s).
 9. Third party control of the MS shall be possible via Ethernet or RS-232.
 10. Multiple MS (up to 10) can be used in the same local paging system for redundancy and load sharing purposes. MS can be placed in separate locations to even larger paging systems in other physical locations.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

11. Each MS shall be capable of supporting a complementary text to speech server (TTS).
 12. Design Make/Model: Biamp Vocia MS-1e.
- Z. WALL REMOTE (WR):
1. Each WR shall be Powered over Ethernet (PoE), Class-1, and wired to the CobraNet VLAN.
 2. Each WR shall include a back-lit multifunction LCD display and four buttons for user control, and mount over a standard 2-gang North American electrical box.
 3. Each WR shall allow level control over the BGM for the zone to which it is assigned.
 4. Each WR shall allow selection of BGM sources, among those programmed to be available for the WR's assigned zone.
 5. Each WR shall allow muting of low, medium and high-priority pages, if this feature is enabled from the Manufacturer Software. Urgent priority and emergency level pages will not be affected.
 6. Design Make/Model: Biamp Vocia WR-1.
- AA. AA. LIFE SAFETY INTERFACE (LSI): This unit acts as the interface to building safety systems such as the Fire Alarm System (FAS) or Building Management System (BMS), and adds the functions required to have the PS participate in a Life-Safety system.
1. 1. Primary and secondary power for LSI shall be from approved 24VDC external power source.
 2. 2. Tertiary power for LSI shall be via Power over Ethernet (PoE) switch, Class3, wired to the CobraNet VLAN.
 3. 3. Further backup power can be sourced for the LSI via PoE switch, Class-3, via the secondary CobraNet port.
 4. 4. LSI shall include front-panel LED indications for: Primary Power Present, System Fault, General Alarm, General Fault, Power Supply Fault, Protection Fault, Path Fault, Aux Power Present, Zone Alarms 1 through 8, Zone Faults 1 through 8.
 5. 5. LSI shall have control of four emergency zones. Optional module can be fitted to increase this to 20 emergency zones, and for further increases the GPIO device can be used to support emergency zones as a slave device to the LSI.
 6. 6. In EN54-16 and other certified systems the LSI shall be used in junction with the Control Interface (CI) as listed under x. of this specification.
 7. 7. The LSI is responsible for monitoring all emergency devices within the Paging System and reporting faults and alarms to the FAS and/or BMS.
 8. 8. The LSI is responsible for receiving and acting upon alarm triggers that are sent to it from the FAS.
 9. 9. Design Make/Model: Biamp Vocia LSI-16 or Biamp Vocia LSI-16e.
- BB. BB. CONTROL INTERFACE (CI): This unit acts as an interface to building safety systems such as the FAS and/or BMS, and adds the functions required to have the PS participate in a Life-Safety system under EN54-16 and other life safety standards.
1. 1. Primary power for CI shall be from approved 24VDC external power source.
 2. 2. Secondary power for CI shall be via an approved 24VDC power source.
 3. 3. LSI shall include front-panel push buttons that control the functions 'Local Silence', 'System Test' and 'System Fault Reset'.
 4. 4. The CI shall be fitted with an internal local sounder which commences whenever any Alarm input receives an external signal from the fire detection equipment or control and indicating equipment (CIE) or equivalent. It will also commence when any Fault is detected.
 5. 5. The CI shall connect directly to the LSI as well as the FAS and/or the BMS and provide the LSI with power and alarm signal.
 6. 6. Design Make/Model: Biamp Vocia CI-1.
- CC. GENERAL PURPOSE INPUT OUTPUT DEVICE (GPIOD): This unit has a dual purpose within the PS. It can be used to receive and output contact closures for both regular and

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

emergency functions in the PS. In emergency systems it can act as a slave device to the LSI and be connected to building safety systems such as the Fire Alarm System (FAS) or Building Management System (BMS). It can also operate as a standalone device for non-emergency purposes.

1. Primary and secondary power for GPIOD shall be from approved 24VDC external power source when used as an emergency device.
2. Power and data communications for the GPIOD shall also be able to be sourced via Power over Ethernet (PoE) switch, Class-3, wired to the CobraNet VLAN.
3. Further backup power and data communications can be sourced for the GPIOD via PoE switch, Class-3, via the secondary CobraNet port.
4. The GPIOD shall contain 16 inputs and 16 outputs for a total of 32 possible connections.
5. The GPIOD shall be able to support general functions, emergency functions or any combination of the two within the same chassis and configuration file.
6. General functions such as prerecorded message triggering and scheduler triggering require an MS device as noted under u. of this specification.
7. When used as an emergency device the GPIOD must be used in conjunction with the Life Safety Interface enhanced version (LSIe variant) as listed under w. of this specification.
8. The LSIe is responsible for monitoring all emergency devices including any attached GPIOD within the Paging System and reporting faults and alarms to the FAS and/or BMS.
9. The LSIe is responsible for receiving and acting upon alarm triggers that are sent to it from the GPIOD.
10. Design Make/Model: Biamp Vocia GPIO-1.

DD. TEXT TO SPEECH SERVER (TTS): The system shall be able to interface to an optional Text-to-Speech Server with available language packages, for proper enunciation of messages entered as text by the PS System Operator or applicable third party control systems. This device can also be used for interfacing with third party nurse call systems to automate code calling.

1. The TTS shall be on an industrial style 1RU server powered by 120/240 volt mains.
2. Each TTS shall be wired to the CobraNet VLAN and the Control Network VLAN.
3. The TTS is supported by the MS so this must be present and accessible on both the CobraNet and Control Network VLAN's.
4. The TTS shall support at least 65 different voice fonts.
5. Each voice font will contain a language, accent and gender that are specific to the voice font.
6. Voice fonts will be licensed and provision shall be made to ascertain the client's requirements for languages.
7. If nurse call functionality is required then the nurse call version of the TTS must be ordered.
8. The nurse call version will support the standard TAP language for control communications with the third-party nurse call system.
9. The nurse call version will allow the use of groups to construct the code calls for broadcast through the PS.
10. Design Make/Model: Biamp Vocia TTS-1e or Biamp TTS-1nce.

EE. VOIP DEVICE (VOIPD): This unit can be used to receive VOIP calls from an attached VOIP system. These calls can be made live into the PS or via a voice prompt based delayed function. The VOIPD can be used as an emergency input device if required or as a standalone device.

1. Primary and secondary power for VOIPD shall be from approved 24VDC external power source when used as an emergency device.
2. Data communications for the VOIPD shall via Ethernet and wired to the CobraNet VLAN.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3. The VOIPD shall be factory fitted with either 2 or 4 VOIP input lines depending upon installation requirements.
 4. The VOIPD shall support Session Information Protocol (SIP), and be capable of supporting G. 711, G.711A, G.722, G.729AB, G.723.1 voice codecs.
 5. DTMF tones shall be supported on each VOIP line to trigger PS events.
 6. The VOIPD shall support live paging input directly into the PS, and the ability for user defined voice prompts to be supported shall also be possible.
 7. Signal processing shall include five band parametric equalization, compression and PIN code access per line.
 8. When used as an emergency device the VOIPD must be used in conjunction with the Life Safety Interface enhanced version (LSIe variant) as listed under w. of this specification.
 9. Design Make/Model: Biamp Vocia VOIP-1.
- FF. FF. POTS DEVICE (POTSD): This unit can be used to receive analog telephone calls from an attached analog phone system (POTS). These calls can be made live into the PS or via a voice prompt based delayed function. The POTSD can be used as an emergency input device if required or as a standalone device.
1. Primary and secondary power for POTSD shall be from approved 24VDC external power source when used as an emergency device.
 2. Data communications for the POTSD shall via Ethernet and wired to the CobraNet VLAN.
 3. The POTSD shall be factory fitted with either 2 or 4 VOIP input lines depending upon installation requirements.
 4. The POTSD shall support Session Information Protocol (SIP).
 5. DTMF tones shall be supported on each POTS line to trigger PS events.
 6. The POTSD shall support live paging input directly into the PS, and the ability for user defined voice prompts to be supported shall also be possible.
 7. Signal processing shall include five band parametric equalization, compression and PIN code access per line.
 8. When used as an emergency device the POTSD must be used in conjunction with the Life Safety Interface enhanced version (LSIe variant) as listed under w. of this specification.
 9. Design Make/Model: Biamp Vocia POTS-1.

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine conditions, with the Installer present, for compliance with requirements and other conditions affecting the performance of the Overhead Paging System work.
- B. Do not proceed until unsatisfactory conditions have been corrected.
- C. Verify compliance of the following items before beginning sound equipment installation.
 1. No cables spliced except at standard barrier terminal blocks inside equipment cabinet.
 2. Cables marked at each end with permanent wire labels such as Brady or equal.
 3. Isolated ground run back to main electrical panel from paging equipment cabinet.
 4. Specified conduit, cables, speaker enclosures and equipment cabinets are properly installed.

3.2 INSTALLATION

- A. General: Install system in accordance with NFPA 70 and other applicable codes. Install equipment in accordance with manufacturer's written instructions.
- B. Speakers:
 1. Confirm polarity of speaker before installation and wire to maintain uniform polarity.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2. Mount transformers with screws securely to speaker brackets or enclosures.
3. Neatly mount speaker grilles, panels, connector plates, etc., tight, plumb, and square unless indicated otherwise on drawings.
4. Provide brackets, screws, adapters, springs, rack mounting kits, etc., recommended by manufacturer for correct assembly and installation of speaker assemblies and electronics components.
5. Identification:
 - a. Legibly identify user operated system controls and system input/output jacks using engraved, permanently attached laminated plastic plates or imprinted Lexon labels. Label equipment and controls within equipment cabinet using similar labels or "Kroy" type labels.
- C. Repairs: Wherever walls, ceilings, floors, or other building finishes are cut for installation, the contractor shall be responsible to repair, restore, and refinish to original appearance.

3.3 FIELD QUALITY CONTROL

- A. Manufacturer's Field Services: Provide services of a factory authorized service representative to supervise the field assembly and connection of components and the pre-testing, testing, and adjustment of the system.
- B. Pre-testing: Upon completing installation of the system, align, adjust, and balance the system and perform a complete pretest. Determine the conformance of the system to the requirements of the Drawings and Specifications. Correct deficiencies observed. Replace malfunctioning or damaged items with new, and retest until materials satisfactory performance and conditions are achieved.

3.4 COMMISSIONING

- A. Occupancy Adjustments: When requested by the Architect or the Sound/Acoustical Consultant within one year of date of substantial completion, provide on-site assistance in adjusting sound levels, resetting matching transformer taps, and adjusting controls to suit actual occupied conditions. Provide two trips for this purpose.

3.5 CLEANING AND PROTECTION

- A. Prior to final acceptance, clean system components and protect from damage and deterioration.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

SECTION 275119 - SOUND MASKING SYSTEMS

PART 1 - GENERAL

1.1 SUMMARY

A. Section Includes:

1. Networked sound masking systems.
2. Standalone sound masking systems.

B. Products Installed, but Not Furnished, under This Section:

1. See Section 260553 "Identification for Electrical Systems" for electrical equipment.

1.2 DEFINITIONS

A. FACU: Fire-alarm control unit.

B. N.O.: Normally open.

1.3 ACTION SUBMITTALS

A. Product Data:

1. Networked sound masking systems.
2. Standalone sound masking systems.

B. Shop Drawings:

1. Shop drawings for sound masking systems.

C. Field quality-control reports.

1.4 INFORMATIONAL SUBMITTALS

A. Manufacturers' Published Instructions:

1. Networked sound masking systems.
2. Standalone sound masking systems.

B. Field Reports:

1. Manufacturer's field reports for field quality-control support.
2. Manufacturer's field reports for system startup support.
3. Field reports for software and firmware upgrades.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1.5 CLOSEOUT SUBMITTALS

- A. Warranty documentation.

1.6 MAINTENANCE MATERIAL SUBMITTALS

- A. Spare Parts:

- 1. UL AZOT - Networked sound masking system.
- 2. UL UEAY - Standalone sound masking loudspeakers.
- 3. UL AZOT - Single-room sound masking system.

- B. Extra Stock Material:

- 1. UL AZOT - Networked sound masking system.
- 2. UL UEAY - Standalone sound masking loudspeakers.

1.7 WARRANTY FOR SOUND MASKING SYSTEMS

- A. Special Installer Extended Warranty: Installer warrants that fabricated and installed sound masking systems perform in accordance with specified requirements and agrees to repair or replace components or products that fail to perform as specified within extended-warranty period.

- 1. Extended-Warranty Period: Two years from date of Substantial Completion; full coverage for labor, materials, and equipment.

- B. Special Manufacturer Extended Warranty: Manufacturer warrants that sound masking systems perform in accordance with specified requirements and agree to provide repair or replacement of components or products that fail to perform as specified within extended-warranty period.

- 1. Extended-Warranty Period: five years from date of Substantial Completion; prorated coverage for materials only.

1.8 WARRANTY FOR BATTERIES

- A. Special Manufacturer Extended Warranty for Batteries: Manufacturer warrants that batteries perform in accordance with specified requirements and agrees to provide repair or replacement of batteries that fail to perform as specified within extended-warranty period.

- 1. Initial Extended-Warranty Period for Li-ion Batteries: Three years from date of Substantial Completion; full coverage for materials only, free on board origin freight prepaid.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

PART 2 - PRODUCTS

2.1 NETWORKED SOUND MASKING SYSTEMS

- A. Description: Electronic noise generators and associated controls for simultaneously operating multiple loudspeakers throughout facility.
- B. Performance Criteria:
 - 1. Regulatory Requirements: Listed and labeled in accordance with NFPA 70, by qualified electrical testing laboratory recognized by authorities having jurisdiction and marked for intended location and application.
 - 2. General Characteristics:
 - a. Reference Standards: Complies with principles and recommended test methods described in ASTM E1374.
- C. Source Quality Control:
 - 1. Product Data: Prepare and submit catalog cuts, brochures, and performance data illustrating size, physical appearance, and other characteristics of product.
 - a. Include construction details, material descriptions, dimensions, profiles, and finishes of individual components.
 - b. Include rated capacities, operating characteristics, electrical characteristics, and furnished specialties and accessories.
 - c. Include certificate of listing and approved markings from qualified electrical testing laboratory for plenum-mounted and rack-mounted equipment.
 - d. Include sample warranty language.
 - 2. Manufacturer's Published Instructions: Prepare and submit installation, testing, and operating instructions for product.
- D. UL AZOT - Networked Sound Masking System:
 - 1. Biamp sound masking system
 - 2. Cambridge sound
 - 3. Approved Equal
 - 4.
- E. Source Limitations: Obtain products from single manufacturer.
 - 1. Listing Criteria:
 - a. Audio Equipment: Comply with one of the following:
 - 1) UL CCN AZOT; including UL 62368-1.
 - 2) UL CCN AZSQ; including UL 60065 or UL 6500.
 - 3) UL CCN AZJX; including UL 813.
 - b. Suitable for Installation in Air-Handling Spaces: UL CCN BHZF; including UL 2043.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2. Options:

- a. Loudspeaker Mounting: Ceiling
- b. Loudspeaker Controller Mounting: Wall.
- c. Network Control Panel Mounting: Rack.
- d. Masking Sound Frequency Range: 20 Hz to 20 kHz, with equalizers for adjusting the masking sound spectrum at third-octave resolution.
- e. Masking Sound Volume Adjustment: Digital control, adjustable in 0.5 dB increments over the range of 34 to 82.5 dB, or a continuous adjustment within that range.
- f. Masking Preset Contour Options: 28.
- g. Paging Inputs: Provision for connecting microphone, telephone, and auxiliary audio device with analog-to-digital conversion of audio signals.
- h. Remote central volume control.

3. Accessories:

- a. Spare Parts: Furnish to Owner spare parts, for repairing sound masking equipment, that are packaged with protective covering for storage on-site and identified with labels describing contents. Include the following:
 - 1) Provide one speaker for every 15 used on project. Min one.
- b. Special Tools: Furnish to Owner proprietary equipment, keys, and software required to operate, maintain, repair, adjust, or implement future changes to sound masking equipment, that are packaged with protective covering for storage on-site and identified with labels describing contents

2.2 STANDALONE SOUND MASKING SYSTEMS

A. Description: Self-contained loudspeaker with electronic noise generator and associated controls.

B. Performance Criteria:

- 1. Regulatory Requirements: Listed and labeled in accordance with NFPA 70, by qualified electrical testing laboratory recognized by authorities having jurisdiction and marked for intended location and application.
- 2. General Characteristics:
 - a. Reference Standards: Complies with principles and recommended test methods described in ASTM E1374.

C. Source Quality Control:

- 1. Product Data: Prepare and submit catalog cuts, brochures, and performance data illustrating size, physical appearance, and other characteristics of product.
 - a. Include construction details, material descriptions, dimensions, profiles, and finishes of individual components.
 - b. Include rated capacities, operating characteristics, electrical characteristics, and furnished specialties and accessories.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- c. Include certificate of listing and approved markings from qualified electrical testing laboratory for plenum-mounted and rack-mounted equipment.
 - d. Include sample warranty language.
 - 2. Manufacturer's Published Instructions: Prepare and submit installation, testing, and operating instructions for product.
- D. UL UEAY - Standalone Sound Masking Loudspeakers :
 - 1. Biamp standalone sound masking system.
 - 2. Pro Acoustic sound masking system.
 - 3. Cambridge standalone sound masking.
- E. Source Limitations: Obtain products from single manufacturer.
 - 1. Listing Criteria:
 - a. Sound Masking Loudspeakers: UL CCN UEAY; including UL 1480A.
 - b. Suitable for Installation in Air-Handling Spaces: UL CCN BHZF; including UL 2043.
 - 2. Options:
 - a. Loudspeaker Mounting: Ceiling, Wall.
 - b. Loudspeaker Controller Mounting: Wall.
 - c. Provide input for connection to supervised fire-alarm N.O. contact that when closed mutes loudspeaker.
 - 3. Accessories:
 - a. Spare Parts: Furnish to Owner spare parts, for repairing sound masking equipment, that are packaged with protective covering for storage on-site and identified with labels describing contents. Include the following:
 - 1) Provide one speaker for every 15 used on project. Min one.
 - b. Special Tools: Furnish to Owner proprietary equipment, keys, and software required to operate, maintain, repair, adjust, or implement future changes to sound masking equipment, that are packaged with protective covering for storage on-site and identified with labels describing contents. Include the following:
- F. UL AZOT - Single-Room Sound Masking System:
 - 1. Biamp single room sound masking system.
 - 2. Cambridge single room sound masking system.
 - 3. Pro Acoustic single room sound masking system.
- G. Source Limitations: Obtain products from single manufacturer.
 - 1. Listing Criteria:

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- a. Audio Equipment: Comply with one of the following:
 - 1) UL CCN AZOT; including UL 62368-1.
 - 2) UL CCN AZSQ; including UL 60065 or UL 6500.
 - 3) UL CCN AZJX; including UL 813.
 - b. Suitable for Installation in Air-Handling Spaces: UL CCN BHZF; including UL 2043.
2. Options:
- a. Loudspeaker Mounting: Duct or Ceiling.
 - b. Loudspeaker Controller Mounting: Wall.
 - c. Provide input for connection to supervised fire-alarm N.O. contact that when closed mutes loudspeaker.
3. Accessories:
- a. Spare Parts: Furnish to Owner spare parts, for repairing sound masking equipment, that are packaged with protective covering for storage on-site and identified with labels describing contents. Include the following:
 - 1) Provide one speaker for every 15 used on project. Min one.
 - b. Special Tools: Furnish to Owner proprietary equipment, keys, and software required to operate, maintain, repair, adjust, or implement future changes to sound masking equipment, that are packaged with protective covering for storage on-site and identified with labels describing contents.

PART 3 - EXECUTION

3.1 PREPARATION

- A. Shop Drawings: Prepare and submit the following:
 - 1. Shop Drawings for Sound Masking Systems:
 - a. Include plans, elevations, sections, details, and attachments to other work.
 - b. Include schematic of system and floor plan indicating quantity, type, and location of components.
 - c. Include diagrams for power, signal, and control wiring.
 - d. Include details supplementing assembly and installation instructions with dimensions, weights, loads, required clearances, methods of field assembly, components, and location and rating of each field connection.

3.2 INSTALLATION OF SOUND MASKING SYSTEMS

- A. Comply with manufacturer's published instructions.
- B. Reference Standards for Installation:

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1. Audio Equipment and Wiring Methods: Unless more stringent requirements are specified in Contract Documents or manufacturers' published instructions, comply with Article 640 of NFPA 70.
 2. Consult Architect for resolution of conflicting requirements.
- C. Special Installation Techniques:
1. Loudspeaker Installation above Ceiling: Suspend with chains from building structure above ceilings, so bottom of assembly is 6 to 8 inch above upper plane of finished ceiling material. Use eyebolts on speaker assemblies for attachment. Suspend independently from structure, not to supports for components of other building systems.
 2. Zoned Loudspeaker Connections: For two- or three-channel systems, connect loudspeaker assemblies alternatively, so masking sound is redundant throughout coverage zones.
 3. Wiring Methods:
 - a. Cable in Raceway: Install cables in raceways and cable trays, except within consoles, cabinets, desks, and counters and unless otherwise indicated.
 - 1) Except raceways are not required in accessible indoor ceiling spaces and attics.
 - 2) Except raceways are not required in hollow gypsum board partitions.
 - 3) Conceal raceways and wiring, except in unfinished spaces.
 - b. Concealed Cable: Conceal conductors and cables in accessible ceilings, walls, and floors where possible.
 - c. Exposed Cable: Install parallel to building lines, follow surface contours, and support as recommended by manufacturer.
 - 1) Install plenum cable in environmental air-handling spaces, including plenum ceilings.
 - d. Within Enclosures: Bundle, lace, and train conductors to terminal points with no excess and without exceeding manufacturer's limitations on bending radii. Provide and use lacing bars and distribution spools.
 4. Grounding: As recommended by manufacturers unless more stringent requirements are indicated. Ground equipment and conductors to eliminate shock hazard and to minimize ground loops, common-mode returns, noise pickup, cross talk, and other impairments with a maximum of 5 Ω to ground at main equipment location. Measure, record, and report ground resistance.
 5. Impedance Matching: For system components, including connecting cable, provide end-to-end level and impedance-matched signal paths. Use matching networks and balancing devices at connections where necessary to avoid mismatches.
 6. Splices, Taps, and Terminations: Make splices, taps, and terminations on numbered terminal strips in junction, pull, and outlet boxes; terminal cabinets; and equipment enclosures.
 7. Identification: Provide labels for vehicle charging equipment and associated electrical equipment.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- a. Use color-coded conductors, and apply wire- and cable-marking tape to designate wires and cables, so media are identified in coordination with system wiring diagrams.
- b. Label loudspeakers as to channel, zone, and address.
- c. Identify field-installed conductors, interconnecting wiring, and components.
- d. Provide warning signs.
- e. Label each enclosure with engraved metal or laminated-plastic nameplate.

D. Interfaces with Other Work:

1. Coordinate installation of new products for sound masking with existing conditions.
2. Coordinate quantity and arrangement of sound masking system components with ceiling space configuration and with components occupying ceiling space, including structural members, pipes, air-distribution components, raceways, cable trays, luminaires, and other items.
3. Coordinate with Section 270528 "Pathways for Communications Systems" for raceway system material, routing, and locations.
4. Coordinate with Fire-Alarm Systems for muting sound masking in event of fire or other emergency.
5. Coordinate with Section 260533.13 "Conduit for Electrical Systems" for installation of raceways.
6. Coordinate with Section 260533.16 "Boxes and Covers for Electrical Systems" for installation of boxes.
7. Coordinate with Section 271513 "Communications Copper Horizontal Cabling" for installation of network cabling, loudspeaker cabling, and Class 2 control cabling.
8. Final connection to FACU where required will be completed by fire-alarm system installer.

E. Systems integration.

3.3 FIELD QUALITY CONTROL OF SOUND MASKING SYSTEMS

A. Acceptance Testing Preparation:

1. Pretesting: Tune, align, and adjust system, and pretest components, wiring, and functions to verify compliance with specified material, installation, and performance requirements. Correct deficiencies and retest until satisfactory performance and conditions are achieved.

B. Field tests and inspections must be witnessed by Tenant.

C. Tests and Inspections:

1. Perform manufacturer's recommended tests and inspections.
2. Operational Test: Start system to confirm proper operation. Remove malfunctioning units, replace with new units, and retest. Make initial sound-spectrum and -level adjustments for each zone.
3. Inspection: Verify that units and controls are properly labeled and interconnecting wires and terminals are identified.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

4. Masking Sound Power Level Adjustments: Adjust independently for each space to minimum level between 40 and 50 dB(A-weighted) that will provide speech privacy between adjacent workstations while complying with other system requirements.
- D. Final Acceptance Testing: Provide a minimum of 10 days' notice of acceptance test performance schedule. Schedule tests after pretesting has been successfully completed.
1. Perform sound masking evaluation tests in accordance with **ASTM E1573**, with measurements and calculations in accordance with ASA S3.5.
 2. Tests and Calibration Conditions: Spaces are to be completely furnished, but unoccupied; lights and HVAC systems must be on; HVAC system testing and balancing are to be completed; and electronic ballasts, lighting relay panels, and low-voltage transformers must be in place.
 3. Test Conditions: Complying with ASTM E1130 and calculated in accordance with ASA S3.5.
 4. Instrumentation: Use a professional-quality, sound-level meter with octave-band filters and documentation of recent calibration against recognized standards. Comply with ASA S1.4 Part 1.
 5. System Tests: Include the following for each system zone:
 - a. Loudspeaker Circuit Impedance Test: Measure impedance at 1000 Hz with amplifier disconnected, using a professional impedance meter or bridge. Locate and correct faults denoted by abnormal readings.
 - b. Ambient Sound-Level Tests: With system off, measure ambient sound level in one-third octave bands. Also measure ambient sound level as a single, wide-band, A-weighted reading.
 - c. System Noise Test: With masking-noise signal on and amplifiers adjusted at a working level 10 dB above ambient sound level, check for hum, buzz, rattle, or other operating deficiencies.
 - d. Spatial Uniformity Test: Measure sound level at locations no greater than **15 ft (4.6 m)** on center throughout covered spaces to determine compliance with specified performance level.
 - e. Frequency Response Adjustment and Test: Adjust one-third octave frequency bands and other unit filters to provide response. Adjust to meet requirement of space speech intelligibility and quality of background sound. Comply with ASA S3.2, CTA-426, and ASTM E1110.
 6. Adjust level of masking sound that is appropriate for area and overall volume.
 7. Adjust level of masking sound for each space, so one-third octave band centered at 500 Hz has final selected sound-power level for that space. Measure deviation from listed values in one-third octave bands from 100 to 1000 Hz. Measured values must not deviate from those listed by more than 4 dB for open-plan areas and 8 dB for enclosed offices. The total of individual band deviations in eight bands must not exceed 16 dB for open-plan areas and 30 dB for enclosed offices.
 8. Walk-Through Test: People in covered spaces cannot discern loudspeaker locations.
- E. Record test observations, readings, and corrective actions. Report test results in accordance with ASTM E1573.
- F. Record final control settings and programming, and final tap setting of loudspeaker-matching transformers. Record final sound-level measurements and observations.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

G. Nonconforming Work:

1. Units will be considered defective if they do not pass tests and inspections.
2. Remove and replace defective units and retest.

H. Field Quality-Control Reports: Collect, assemble, and submit test and inspection reports.

I. Manufacturer Services: Engage factory-authorized service representative to support field tests and inspections.

1. Manufacturer's Field Reports for Field Quality-Control Support: Prepare and submit report after each visit by factory-authorized service representative, documenting activities performed at Project site.

3.4 SYSTEM STARTUP

A. Perform startup service.

1. Complete installation and startup checks in accordance with manufacturer's published instructions.

B. Manufacturer Services: Engage factory-authorized service representative to support system startup.

1. Manufacturer's Field Reports for System Startup Support: Prepare and submit report after each visit by factory-authorized service representative, documenting activities performed at Project site.

3.5 ADJUSTING

A. Sound Masking Adjustments: Adjust sound masking devices to suit actual occupied conditions.

3.6 CLOSEOUT ACTIVITIES

A. Sustainable Design Closeout Documentation:

1. Submit test report.

3.7 PROTECTION

A. After installation, protect sound masking equipment from construction activities. Remove and replace items that are contaminated, defaced, damaged, or otherwise caused to be unfit for use prior to acceptance by Owner.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3.8 MAINTENANCE

- A. Sound Masking Readjustments: When requested within 12 months from date of Substantial Completion, provide on-site assistance in readjusting system to suit actual occupied conditions. Provide up to two visits to Project during other-than-normal occupancy hours for this purpose.
- B. Software and Firmware Service Agreement:
 - 1. Technical Support: Beginning at Substantial Completion, verify that software and firmware service agreement includes software and firmware support for two years.
 - 2. Upgrade Service: At Substantial Completion, update software and firmware to latest version. Install and program software and firmware upgrades that become available within two years from date of Substantial Completion. Verify that upgrading software includes operating system and new or revised licenses for using software.
 - a. Upgrade Notice: No fewer than 30 days to allow Owner to schedule and access the system and to upgrade computer equipment if necessary.
 - 3. Field Reports for Software and Firmware Upgrades: Prepare and submit report after each update, documenting upgrades installed.

END OF SECTION 275119

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 275223
NURSE CALL/CODE BLUE SYSTEMS**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.
- B. Specification Section 27 00 00 "Intermountain Healthcare Structured Cabling Standards".

1.2 SUMMARY

- A. Section includes raceways, back boxes, and cabling for a Hill-Rom Navicare Nurse Call (NNC) system.
- B. All active components and software to be provided, installed and programmed by Hill-Rom Vendor under contract with the owner.

PART 2 - PRODUCTS

2.1 NURSE-CALL SYSTEM:

- A. Nurse-Call System: Hill-Rom Navicare Nurse Call (NNC) System. All electronic components

2.2 CONDUCTORS AND CABLES

- A. Data Cable and Hardware: Category 5e, Orange, UTP, and UTP hardware. Comply with requirements in Section 270000.
- B. Power Conductors and Cables: Copper, solid, No. 20 AWG. Comply with requirements in Section 26 05 19 "Low-Voltage Electrical Power Conductors and Cables."
- C. Grounding Conductors and Cables: Copper, stranded, No. 16 AWG. Comply with requirements in Section 26 05 19 "Low-Voltage Electrical Power Conductors and Cables."

PART 3 - EXECUTION

3.1 INSTALLATION

- A. Wiring Method:
 - 1. Install cables in raceways and J-Hooks except within consoles, cabinets, desks, and counters
 - a. Conceal raceway and cables except in unfinished spaces.
 - 2. Conduit and Boxes: Comply with requirements in Section 26 05 33 "Raceway and Boxes for Electrical Systems." Flexible metal conduit shall not be used.
 - a. Outlet boxes shall be no smaller than 2 inches (50 mm) wide, 3 inches (75 mm) high, and 2-1/2 inches (64 mm) deep.
 - b. Coordinate each outlet box type with Hill-Rom.
- B. Install cables without damaging conductors, shield, or jacket.
- C. Do not bend cables while handling or installing to radii smaller than those recommended by the manufacturer.
- D. Pull cables without exceeding the cable manufacturer's recommended pulling tensions.
 - 1. Pull cables simultaneously if more than one is being installed in the same raceway.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

2. Use a pulling compound or lubricant if necessary. Use compounds that will not damage the conductor or insulation.
 3. Use pulling means that will not damage the media or raceway, including fish tape, cable, rope, and basket-weave wire or cable grips.
- E. Install exposed raceways and cables parallel and perpendicular to surfaces or exposed structural members and follow surface contours. Secure and support cables by straps, staples, or similar fittings designed and installed so as not to damage them. Secure cables at intervals not exceeding 30 inches (760 mm) and not more than 6 inches (150 mm) from cabinets, boxes, or fittings.
- F. Wiring within Enclosures: Bundle, lace, and train conductors to terminal points with no excess and without exceeding the manufacturer's limitations on bending radii. Provide and use lacing bars and distribution spools.
- G. Separation of Wires: Separate speaker/microphone, line-level, speaker-level, and power-wiring runs. Run in separate raceways or, if exposed or in the same enclosure, provide 12-inch (300-mm) minimum separation between conductors to speaker/microphones and adjacent parallel power and telephone wiring. Provide separation as recommended by the equipment manufacturer for other conductors.
- H. Splices, Taps, and Terminations: Make splices, taps, and terminations on numbered terminal strips in junction, pull, and outlet boxes; terminal cabinets; and equipment enclosures. Install terminal cabinets where there are splices, taps, or terminations for eight or more conductors.
- I. Impedance and Level Matching: Carefully match input and output impedances and signal levels at signal interfaces. Provide matching networks if required.
- J. Identification of Conductors and Cables: Comply with requirements in Section 271500 "Communications Horizontal Cabling" for cable administration, cable schedule, and cable and wire identification.
- K. Equipment Identification:
1. Comply with requirements in Section 260553 "Identification for Electrical Systems" for equipment labels and signs and labeling installation requirements.
 2. Label stations, controls, and indications using approved consistent nomenclature.

3.2 EXISTING SYSTEMS

- A. Examine existing systems for proper operation, compatibility with new equipment, and deficiencies. If discrepancies or impairments to successful connection and operation of interconnected equipment are found, report them and do not proceed with installation until directed. Schedule existing systems' examination so there is reasonable time to resolve problems without delaying construction.

3.3 GROUNDING

- A. Ground cable shields and equipment to eliminate shock hazards and minimize ground loops, common-mode returns, noise pickup, crosstalk, and other signal impairments.
- B. Signal Ground Terminal: Locate at main equipment cabinet. Isolate from power system and equipment grounding except at connection to main building ground bus.
- C. Grounding Provisions: Comply with requirements in Section 270526 "Grounding and Bonding for Communications Systems."

3.4 FIELD QUALITY CONTROL

- A. Manufacturer's Field Service: Engage a factory-authorized service representative to inspect, test, and adjust components, assemblies, and equipment installations, including connections.
- B. Perform tests and inspections.
1. Manufacturer's Field Service: Engage a factory-authorized service representative to inspect components, assemblies, and equipment installations, including connections, and to assist in testing.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

SECTION 276001

APPENDIX 01 – Deviation Request Process

PART 1 - GENERAL

1.1 DEFINITIONS

- A. Cable Plant Deviation
 - 1. A business deviation to not fully comply with the requirements of the “Division 27 – Communications and Structured Cabling Specification document”
- B. Cable Plant Deviation Request form.
 - 1. The document is available from the Facilities Planning team, the Data Center Ops team, or the Infrastructure Cabling team.
 - 2. Usage:
 - a. The deviation request form shall be used if there is a business need to not comply with the requirements of the “Division 27 – Communications and Structured Cabling Specification document.”
 - b. The deviation request form should also be used to propose a change to that document. Always verify that you are using the current version of the Standard before requesting a modification.

PART 2 - PROCESS

2.1 STANDARDS MODIFICATION

- A. Check the box and explain why the standard should be modified.

2.2 ALTERNATE PRODUCT

- A. The deviation form must be completed, submitted through channels, and approved prior to any deviation from the specifications. This includes issuing change orders.

2.3 AUTHORIZED SIGNATURES

- A. Both the Standards Holder and the DCO Manager signatures are required for a deviation to be valid.

2.4 DEVIATION REVIEW PROCESS STE

- A. First be sure that there is an actual need. Then be certain that your manager, supervisor, or project manager agrees with the requested deviation. Be sure to state this or obtain their signature on the deviation form. By doing so you are confirming that your supervisor or project manager has approved.
- B. The requestor will then complete sections 1, 2, and 3 of the deviation form.
 - 1. The requestor should then digitally sign in the designated location at the end of Section 3. Do not write in the sections below 3.
- A. Forward the saved copy of this form to the Standards Holder via email.
 - 1. Email to: melissa.lopez2@imail.org
- B. The Standards Holder will then review and evaluate the request. The requestor should be prepared to provide plans, specifications, and competitive bids if requested. Any email threads or meeting discussions regarding the issue will be taken into consideration.
- C. The Standards Holder will then cast an Approve or Deny vote and forward the request to the DCO Manager for a decision.
- D. When the decision has been made by the DCO Manager, the Standards Holder will then notify the requester by returning the completed and signed form via email.
- E. An approved deviation will have the final disposition button 'Approved' and be signed by

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

at least 2 people. One will be from the Standards Holder, and the other the DCO Manager. Other signatures may be required for specific features and areas such as Safety, Security, Print, Medical group, etc.

- F. The deviation request is only good for the specific project that it was submitted on. A change to Division 27 is required for the deviation to be in place moving forward on all future projects.

PART 3 - EXECUTION

3.1 POST DECISION EXECUTION

A. DENIED

- 1. If the requester is not satisfied with the decision, they may file an appeal with the Data Center Operations manager (shawn.folkman@imail.org), who will then escalate the issue to the appropriate business leaders as needed. The decision from the appeal is final.

B. APPROVED

- 1. If a deviation is approved for contracted material, labor, or method; the facilities project manager will arrange for fulfillment or contract adjustment as needed via appropriate contract channels such as change orders.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

SECTION 276002

APPENDIX 02 – Document Refresh Process

PART 1 - GENERAL

1.1 NOT USED

PART 2 - PRODUCTS

2.1 APPROVED PRODUCT

- A. This section aims to help ensure a current standards document.
 - 1. The product delivered will be a current revision or version of the Cable Plant Standards Document.
 - 2. The Enterprise Infrastructure Cabling team must approve all changes.

PART 3 - EXECUTION

3.1 REVIEWS AND UPDATES

- A. Minor updates
 - 1. Changes that do not significantly affect the scope of work or contract pricing will be made, and the Rev number will be updated (i.e., updated part numbers, etc.).
 - 2. Significant changes will be added to the Change Log for review and approval from the DCO/Infrastructure Cabling Team.
 - a. When approved, they will be implemented in the new Version.
- B. Major updates
 - 1. The DCO/Infrastructure Cabling Team will review the entire document at least once every three years.
 - 2. This review will coincide with the release of new versions of NFPA70 (National Electrical Code) (2017, 2020, etc. - to be completed by the end of each designated year).
 - 3. The review will cover standards adjustments that may be deemed necessary and ensure compliance with applicable codes and standards.
 - 4. The standards document will be submitted for approval upon completion of the reviews and updates.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

Model	Manufacture	Part Number	Description	Notes
Eaton Single-Phase UPS				
5S UPS	Eaton	5S550	550VA/330W, 120V Line Interactive UPS	
9PX UPS	Eaton	9PX1000RT	1000VA/900W, 120V Online UPS, RM or Tower	
9PX UPS	Eaton	9PX1500RTN	1500VA/1350W, 120V Online UPS, RM or Tower, Includes NETWORK-M3 Card	
9PX UPS	Eaton	9PX2000RTN	2000VA/1800W, 120V Online UPS RM, or Tower, Includes NETWORK-M3 Card	
9PX UPS	Eaton	9PX3000RTN	3000VA/2700W, 120V Online UPS RM, or Tower, Includes NETWORK-M3 Card	
9PX UPS	Eaton	9PX3K3UNP1	3000VA/2700W, 208/240V to 120V Online UPS, RM or Tower, Includes NETWORK-M3 Card	
Bypass Option 9PX 1-3kVA	Eaton	9PXEBM72RT	EBM for use with 9PX2000RTN & 9PX3000RTN UPS	
Network Card option 9PX 1-3K	Eaton	NETWORK-M3	Eaton Gigabit Network Card	
Rack mount kit 9PX 1-3kVA Option	Eaton	RK2PC	2-post rack mounting kit for 1-6kVA UPS & EBM	
9PX SP UPS	Eaton	9PX6KSP	5500VA/4900W, 120/208 or 120/240V Split-Phase Online UPS, RM or Tower, Includes NETWORK-M3 Card	
Model	Manufacture	Part Number	Description	Notes
9PX SP UPS	Eaton	9PX8KSP	8000VA/7200W, 120/208 or 120/240V Split-Phase Online UPS, RM or Tower, Includes NETWORK-M3 Card	

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

9PX SP UPS	Eaton	9PX10KSP	10000VA/9000W, 120/208 or 120/240V Split-Phase Online UPS, RM or Tower, Includes NETWORK-M3 Card	
Bypass 9PX SP 6-10kVA, 9PXM	Eaton	BPM125HW	Bypass Power Module for 6, 8 & 10kVA 9PX Split-Phase, 9PXM & 9155 UPS, Hardwired Input/Output	
9PXM UPS	Eaton	9PXM8S8K	8kVA expandable to 16kVA, (1) 8-slot enclosure, (2) power modules, (4) battery modules, (1) network card, Hardwired Input/Output	
9PXM UPS	Eaton	9PXM8S12K	12kVA expandable to 16kVA, (1) 8-slot enclosure, (3) power modules, (6) battery modules, (1) network card, Hardwired Input/Output	
9PXM UPS	Eaton	9PXM8S16K	16kVA, (1) 8-slot enclosure, (4) power modules, (8) battery modules, (1) network card, Hardwired Input/Output	
9PXM UPS	Eaton	9PXM12S12K	12kVA expandable to 20kVA N+1, (1) 12-slot enclosure, (3) power modules, (6) battery modules, (1) network card, Hardwired Input/Output	
Model	Manufacture	Part Number	Description	Notes
9PXM UPS	Eaton	9PXM12S16K	16kVA expandable to 20kVA N+1, (1) 12-slot enclosure, (4) power modules, (8) battery modules, (1) network card, Hardwired Input/Output	
9PXM UPS	Eaton	9PXM12S20K	20kVA expandable to 20kVA N+1, (1) 12-slot enclosure, (5) power modules, (10) battery modules, (1) network card, Hardwired Input/Output	

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

PDU's				
Smart PRO1 PDU	Server Tech	C1C10SA-2CBA2B4	Smart Primary PRO1 PIPS PDU, 1U, (10) HDOT Outlets (6xC13 + 4xCx), Input Amp Meter, 208V 30A, NEMA L6-30P, 10 ft (3m) Input Cord, Circuit Breakers, (2) Temperature/Humidity Sensor Capable	Horizontal
Smart POPS PRO2 PDU	Server tech	C2SG36TE-DQME2M66/ZB	Smart POPS Primary PRO2 (36) Alt Phase HDOT Outlets (24xC13 + 12xCx), 208V 3PH Delta 6BR 60A, IP67 Water-tight IEC60309 3m/10ft cord, Auto-Orient Mid Display, Bottom Cord Entry, Doghouse Breakers, Phase Monitoring, Blue Highlights	Vertical
Smart POPS PRO2 PDU	Server tech	C2LG36TE-DQME2M66/ZR	Smart POPS Expansion PRO2 (36) Alt Phase HDOT Outlets (24xC13 + 12xCx), 208V 3PH Delta 6BR 60A, IP67 Water-tight IEC60309 3m/10ft cord, Auto-Orient Mid Display, Bottom Cord Entry, Doghouse Breakers, Phase Monitoring, Red Highlights	Vertical
Model	Manufacture	Part Number	Description	Notes
Smart POPS PRO2 PDU	Server Tech	C2SG36TE-DCMFAM66/C	Smart POPS Master PRO2 (36) Alt Phase HDOT Configurable Outlets, 208V 3PH Delta 3BR 30A L15-30P 3m/10ft cord, Auto-Orient Mid Display, Bottom Base Cord Entry, Doghouse Breakers, Phase Monitoring, WxD = 2.20in x 2.50in	Notes
Smart PRO1 PDU	Server Tech	C1S24VS-YCFA13C9/C	Smart PRO1 Primary, 0U, 18 x IEC C13 and 6 x IEC C19 Outlets, 1 x NEMA 5-20R Utility Outlet, 3 x LED Amp Meters, 3-phase Wye 30A Input w/ NEMA L21-30P Connector, 10ft (3m) Cord (Bottom/base Entry), (2) Temperature/Humidity Sensor Capable, with Retractable Fuses	Vertical

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

Smart PRO1 PDU	Server Tech	C1L24VS-YCFA13C9/C	Smart PRO1 Expansion, 0U, 18 x IEC C13 and 6 x IEC C19 Outlets, 1 x NEMA 5-20R Utility Outlet, 3 x LED Amp Meters, 3-phase Wye 30A Input w/ NEMA L21-30P Connector, 10ft (3m) Cord (Bottom/base Entry), (2) Temperature/Humidity Sensor Capable, with Retractable Fuses	Vertical
Smart PRO1 PDU	Server Tech	STV-3531C	Smart PRO1, PIPS (Per Input Power Sensing), 0U, (24) IEC C13 + (6) IEC C19 Outlets, (1) LED Current Meter w/ Auto-flip, 208-240V 30A, NEMA L6-30P Plug, 10 ft (3m) Cord w/ Power Pivot Cord Entry, Middle Display/Network, (2) Temperature/Humidity Sensor Capable, Circuit Breakers	Vertical
Model	Manufacture	Part Number	Description	Notes
Smart PRO1 PDU	Server Tech	SEV-3531C	Smart PRO1 (Expansion Unit), PIPS (Per Input Power Sensing), 0U, (24) IEC C13 + (6) IEC C19 Outlets, (1) LED Current Meter w/ Auto-flip, 208-240V 30A, NEMA L6-30P Plug, 10 ft (3m) Cord w/ Power Pivot Cord Entry, Middle Display/Network, (2) Temperature/Humidity Sensor Capable, Circuit Breakers	Vertical
MN03E1R0-10D203-2TL5A0H10-S	Vertiv/Geist PDU	NI30202	Unit-level monitored PDU, 20A, 120V, rackmount, 10x rear NEMA 5-20R receptacles	Horizontal
MNR3E1R6-12CF18-3TL6A0H10-S	Vertiv/Geist PDU	NR30206	12-Outlets PDU - Monitored - NEMA L6-30P - 12 x Combination C13/C19 - 230 V AC - Network (RJ-45) - Horizontal - Rack-mountable - Horizontal	Horizontal

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

MN03E4W1-44MB19-3TL21A0B10-S	Vertiv/Geist PDU	VP8865	rPDU, Monitored Unit Level EC, 30A, 120/208V WYE, 8.6kW, Vertical, (36) IEC C13, (6) IEC C19, (2) NEMA 5-20R, 10ft power cord with L21-30P, Black Powder Coat.	Vertical
ePDU	Eaton	EMIT06-10	Metered Input ePDU, 208V, 5.76 Max. kW, L6-30P Input (10ft), (10) C13, (4) C19 Output, 1U	
ePDU	Eaton	EMIT09-10	Metered Input ePDU, 120V, 1.92 Max. kW, L5-20P (5-20P adapter) Input (10ft), (8) 5-20R Output, 1U	
Model	Manufacture	Part Number	Description	Notes
T- Sensor ePDU	Eaton	EMPDT1H1C2	Environmental Monitoring Probe Gen 2	
eATS	Eaton	EATS120	Rack Mount Automatic Transfer Switch, Non-phase Synchronized Switching Compatible, 120V, 1.92 Max. kW, (2) 5-20P (10ft) Input, (10) 5-20R Output, 1U	
eATS	Eaton	EATS30P	Rack Mount Automatic Transfer Switch, Non-phase Synchronized Switching Compatible, 208V, 5.76 Max. kW, (2) L6-30P (10ft) Input, (1) L-6-30R Output, 1U	
Power Cords				
Dual Lock Power Cord	StayOnline Power Cords	5656N	IEC320 C14 Male Plug to C13 Connector Dual-Lock 1.8 meters / 6 feet 10A/250V 18/3 SVT Red - Locking Power Cord	
Dual Lock Power Cord	StayOnline Power Cords	6694N	IEC320 C14 Male Plug to C13 Connector Dual-Lock 1.8 meters / 6 feet 10A/250V 18/3 SVT Blue - Locking Power Cord	
Dual Lock Power Cord	StayOnline Power Cords	5914N	IEC320 C20 Male Plug to C19 Connector Dual-Lock 1.8 meters / 6 feet 20A/250V 12/3 SJT Red - Locking Power Cord	

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

Dual Lock Power Cord	StayOnline Power Cords	6766N	IEC320 C20 Male Plug to C19 Connector Dual-Lock 1.8 meters / 6 feet 20A/250V 12/3 SJT Blue - Locking Power Cord	
NEMA to IEC Power Cord	StayOnline Power Cords	9008	NEMA 5-15 Male Plug to IEC320 C13 Connector 1.8 meters / 6 feet 15A/125V 14/3 SJT Red - Power Cord	
Model	Manufacture	Part Number	Description	Notes
NEMA to IEC Power Cord	StayOnline Power Cords	7978	NEMA 5-15 Male Plug to IEC320 C13 Connector 1.8 meters / 6 feet 15A/125V 14/3 SJT Blue - Power Cord	
P-Lock Power Cord	StayOnline Power Cords	9144	IEC320 C14 Male Plug to C15 Connector P-Lock 1.8 meters / 6 feet 15A/250V 14/3 SJT Red - Locking Power Cord	
P-Lock Power Cord	StayOnline Power Cords	9138	IEC320 C14 Male Plug to C15 Connector P-Lock 1.8 meters / 6 feet 15A/250V 14/3 SJT Blue - Locking Power Cord	
Mechanical				
VRC	Vertiv		3.5kW Rack Mounted Cooling Unit	VRC100 (Self Contained Version)
Mini-Mate 3	Liebert	MT036HE1A00XCH	Ceiling mounted thermal management system, direct expansion unit.	
Mini-Mate 4	Liebert	MT048HE1A00AP4	Ceiling mounted thermal management system, direct expansion unit.	
Mini-Mate 5	Liebert	MT060HE1A00WPZ	Ceiling mounted thermal management system, direct expansion unit.	
Mini-Mate 3	Liebert	MMD40C2AJ0D5	Ceiling mount chilled water unit	
Mini-Mate 5	Liebert	MMD92CDAJ0L5	Ceiling mount chilled water unit	
CRV	Liebert	CR020RA1A70A71	Row-Based Environmental Control System, DX direct expansion 5 ton Unit	

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

Model	Manufacture	Part Number	Description	Notes
CRV	Liebert	CR035RA1A70A71	Row-Based Environmental Control System, DX direct expansion 10 ton Unit	
CRV	Liebert	CR032RC1A2SH	Row-Based Environmental Control System, Chilled water 5 ton unit	
CRV	Liebert	CR040RC1A2SH	Row-Based Environmental Control System, Chilled water 10 ton unit	
Cable Ladder Tray				
Cable Runway	CHATSWORTH	10250-724	CABLE RUNWAY - 24", BLACK WITH ALL REQUIRED MOUNTING ACCESSORIES	
Cable Runway	CHATSWORTH	10250-718	CABLE RUNWAY - 18", BLACK WITH ALL REQUIRED MOUNTING ACCESSORIES	
Butt Splice	CHATSWORTH	11301-701	BUTT SPLICE KIT, Black	
Junction Splice	CHATSWORTH	11302-701	JUNCTION SPLICE KIT	
Foot kit	CHATSWORTH	11309-701	FOOT KIT, BLACK	
Rack to Runway	CHATSWORTH	12409-724	6" CHANNEL RACK TO RUNWAY, BLACK	
Triangle Bracket	CHATSWORTH	11746-718	18" TRIANGLE BRACKETS, BLACK	
Triangle Bracket	CHATSWORTH	11746-724	24" TRIANGLE BRACKETS, BLACK	
End Closing Kit	CHATSWORTH	11700-724	END CLOSING KIT, CABLE RUNWAY, BLACK	
Wall Angle Support Kit	CHATSWORTH	11421-718	18" WALL ANGLE SUPPORT KIT, CABLE RUNWAY, BLACK	
Model	Manufacture	Part Number	Description	Notes
Wall Angle Support Kit	CHATSWORTH	11421-724	24" WALL ANGLE SUPPORT KIT, CABLE RUNWAY, BLACK	

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

Elevation Kit	CHATSWORTH	10506-706	CABLE RUNWAY ELEVATION KIT, 6"	
Radius Drop	CHATSWORTH	12100-712	CABLE RUNWAY RADIUS DROP	
DC Fiber modules & Jumpers				
Wall Mount Module Box	SIEMON	WMF-A-01	Wall Mount Module Box, OM4 Aqua, LC/MTP	
Wall Mount Module Box	SIEMON	WMF-B-01	Wall Mount Module Box, OM4 Violet, LC/MTP	
Fiber Patch Cable	SIEMON	LBP-LCULCUL-(XX)	PATCH CABLE LBP, FIBER, SINGLEMODE DUPLEX W/LC CONNECTORS, YELLOW, (XX) = LENGTH IN METERS	
Fiber Patch Cable	SIEMON	LBP-LCLC5V-(XX)AQ	PATCH CABLE LBP, FIBER, MULTIMODE DUPLEX W/LC CONNECTORS, AQUA, (XX) = LEGTH IN METERS	
Fiber Patch Cable	SIEMON	LBP-LCLC5V-(XX)EQ	PATCH CABLE LBP, FIBER, MULTIMODE DUPLEX W/LC CONNECTORS, ERIKA VIOLET, (XX) = LEGTH IN METERS	
Foreseer Cable, 2 Pair	Belden	88723		
Cold/Hot aisle containment provided by Data Center Operations				
Electronic Key Cylinders				
Cylinder	Medeco	100500 G	1 ¼" Mortise Cylinder	
Cylinder	Medeco	100400H G	Rim Cylinder, Horizontal Tailpiece	
Cylinder	Medeco	EA-100108	Small Format Interchangeable Core (SFIC) Cylinder	
Model	Manufacture	Part Number	Description	Notes
Cylinder	Medeco	20200S1 G	Cylinder Package for Schlage	
Cam Lock	Medeco	EN-150002-219	7/8" Cam Lock Assembly, Key Retaining	
Cam Lock	Medeco	EN-150003-219	1 1/8" Cam Lock Assembly, Key Retaining	
Cylinder for Legrand cabinet front door	Medeco	232301S 800 G	Modular Profile Cylinder – 30mm Half Profile - Assembled	
Electronic Key	Medeco	94-0271	Medeco Slim Line Key (G2) & Charger Bundle	
Programming Station for Small Locations	Medeco	EA-100109	Medeco XT Desktop USB Programming Station (not preferred)	

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

Programming Station for Large Locations	Medeco	EA-100158	Medeco XT Wall USB Programming Station (preferred)	
Wall Mount for Wall Programmer	Medeco	94-0294	Medeco XT Remote Wall Programmer Wall Mount Kit	
Padlock	Master	6842D045KZ	Padlock for use with Electronic Cylinder	

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 276004
APPENDIX 04 – Reference Standards**

PART 1 - GENERAL

1.1 REFERENCE STANDARDS

- A. Codes and Standards (Most recent editions with addenda/TSB, etc.) All materials, installation and workmanship shall meet or exceed the applicable requirements and standards addressed within the references listed below:
1. ANSI/TIA-568.0-D and addenda “Generic Telecommunications Cabling for Customer Premises
 2. ANSI/TIA-568.1-D and addenda “Commercial Building Telecommunications Cabling Standard
 3. ANSI/TIA-568.2-D and addenda “Balanced Twisted-Pair Telecommunications Cabling and Components
 4. ANSI/TIA-568.3-D and addenda “Optical Fiber Cabling Components Standard”
 5. ANSI/TIA-568.4-D and addenda “Broadband Coaxial Cabling and Components Standard”
 6. ANSI/TIA-569-D and addenda “Telecommunications Pathways and Spaces”
 7. ANSI/TIA-606-C and addenda “Administration Standard for Commercial Telecommunications Infrastructure”
 8. ANSI/TIA-607-D and addenda “Generic Telecommunications Bonding and Grounding (Earthing) for Customer Premises”
 9. ANSI/TIA-758-B “Customer-Owned Outside Plant Telecommunication Infrastructure Standard”
 10. IEEE 802.3at PoE Plus and Next Gen PoE CFI March 2013 and IEEE P802.3ba latest draft revision and amendments.
 11. “Media Access Control Parameters, Physical Layers and Management Parameters for 40 Gbp/s and 100 Gbp/s Operation”.
 12. ANSI/TIA-526-7-A “Measurement of Optical Power Loss of Installed Single-Mode Fiber Cable Plant”
 13. ANSI/TIA/EIA-526-14-C “Optical Power Loss Measurements of Installed Multimode Fiber Cable Plant”
 14. ANSI/TIA-942-B “Telecommunications Infrastructure Standard for Data Centers”
 15. ANSI/TIA – 1179-A “Healthcare Facility Telecommunications Infrastructure Standard”
 16. IEC/TR3 61000-5-2 - Ed. 1.0 and amendments “Electromagnetic compatibility (EMC) - Part 5: Installation and mitigation guidelines - Section 2: Earthing and cabling.”
 17. ISO/IEC 11801-1 (2017) and amendments “Information technology - Generic cabling for customer premises – PART 1: General Requirements”
 18. EN 50173-1 and amendments “Information Technology - Generic cabling systems – PART 1 General Requirements”
 19. AIA Guidelines for Design and Construction of Hospital and Healthcare Facilities
 20. Construction Specification Institute Master Format
 21. BICSI: Comply with the most current editions of the following BICSI manuals:
 - a. BICSI - Telecommunications Distribution Methods Manual
 - b. BICSI – Installation Transport Systems Information Manual
 - c. BICSI – Network Design Reference Design Manual
 - d. BICSI – Outside Plant Design Reference Manual
 - e. BICSI – Wireless Design Reference Manual
 - f. BICSI -Electronic Safety and Security Design Reference Manual
 - g. Infocomm/BICSI – AV Design Reference Manual
 22. Underwriters Laboratories (UL) Cable Certification and Follow-Up Program.
 23. National Electrical Manufacturers Association (NEMA)
 24. American Society for Testing Materials (ASTM)
 25. National Electrical Code (NEC) NFPA70 2020
 26. National Electrical Safety Code (NESC) 2017
 27. Institute of Electrical and Electronic Engineers (IEEE)

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

28. UL Testing Bulletin
29. Building Industry Consulting Services International (BICSI) Information Transport Systems Methods Manual (ITSMM)
30. Local, county, state and federal regulations and codes in effect as of date of installation.
31. Equipment of foreign manufacture must meet U.S. codes and standards. It shall be indicated in the proposal the components that may be of foreign manufacture, if any, and the country of origin.

END OF SECTION

SECTION 276005

APPENDIX 05 – Definitions and Abbreviations

PART 1 - GENERAL

1.1 RELATED TERMS

- A. Codes and Standards (Most recent editions with addenda/TSB, etc.) All materials, installation and workmanship shall meet or exceed the applicable requirements and standards addressed within the references listed below:
1. Basket Cable Tray: A fabricated structure consisting of wire mesh bottom and side rails.
 2. BICSI: Building Industry Consulting Service International.
 3. CBC: Coupled Bonding Conductor
 4. CFCI: Customer Furnished Customer Installed
 5. Cable Run - A single cable to a single location
 6. Cable Drop - Two cables to a single location
 7. Cable Tri Drop - Three cables to a single location.
 8. CT Coupler A type of wall connector made by the Siemon Company
 9. DCO: Data Center Operations
 10. Div.1: Division 1 General and Performance Requirements
 11. Div. 23: Division 23 Heating, Ventilating, and Air Conditioning
 12. Div. 22: Division 22 Plumbing
 13. Div. 26: Division 26 Electrical
 14. Div. 27: Division 27 Communications and Audio Visual
 15. Div. 28: Division 28 Electronic Safety and Security
 16. E.E.: Electrical Engineer
 17. EMI: Electromagnetic Interference
 18. F/UTP: Foil over Unshielded Twisted Pair. Individual pairs are unshielded.
 19. GC: General Contractor
 20. GE: Ground Equalizer
 21. Horizontal Cabling: The cable and connecting hardware utilized to transport communications signals.
 22. ICT: Infrastructure Cabling Team
 23. LAN: Local Area Network
 24. N/A: Not Applicable
 25. NIC: Not in Contract
 26. OFCI: Owner Furnished Contractor Installed
 27. OFOI: Owner Furnished Owner Installed
 28. OTDR: Optical Time Domain Reflectometer
 29. Outlet/Connectors: A connecting device in the work area on which horizontal cable or outlet cable terminates.
 30. RCDD: Registered Communications Distribution Designer
 31. RFI: Radio Frequency Interference
 32. TBA or TBD: To Be Determined
 33. TDR: Technology Distribution Room
 34. TEC: Technology Equipment Center
 35. TGB: Telecommunications Ground Bus Bar
 36. TMBC: Telecommunications Main Bonding Conductor
 37. TMGB: Telecommunications Main Grounding Bus Bar
 38. TSER: Telecommunications Service Entrance Room
 39. UTP: Unshielded Twisted Pair
 40. Work Area: approx. 100 sq. ft. equipped for workstation equipment.
 41. DCO = Data Center Operations – Boe.Sausedo@imail.org
 42. ICT = Information and Communications Technology – Melissa.Lopez2@imail.org

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

SECTION 276006

APPENDIX 06 – MATERIAL SUPPLIERS

PART 1 - GENERAL

1.1 RELATED TERMS

- A. Siemon Authorized Suppliers are listed below. To help prevent counterfeiting and support warranties, known, factory-authorized distributors are recommended.
1. Approved Suppliers of Siemon cable, patch panels, jacks, and parts:

Wesco/Anixter

Randi Whittaker

Inside Sales

3775 W. California Ave. Ste 400

Salt Lake City, UT 84104 US

Main Phone: (801) 973-2121

Fax: (801) 973-4472

Email: randi.whittaker@anixter.com

Karl Bartlam

End User/Outside Sales

3775 W. California Ave. Ste 400

Salt Lake City, UT 84104 US

Main Phone: (801) 973-2121

Fax: (801) 973-4472

Email: karl.bartlam@anixter.com

Graybar Electric

Elizabeth Vaughn

Inside Sales

2841 South 900 West

Salt Lake City, UT 84119 US

Main Phone: (801) 656-3016

Fax: (801) 973-4314

Email: Elizabeth.Vaughn@graybar.com

Erika Morrison

Contractor Outside Sales

2841 South 900 West

Salt Lake City, UT 84119 US

Main Phone: (801) 656-3014

Fax: (801) 973-4314

Email: Erika.Morrison@graybar.com

WESCO / CSC

Brian Walters

Inside Sales

3210 South 900 West

Salt Lake City, UT 84119 US

Main Phone: (801) 975-0600

Fax: (801) 907-4450

Email: Bwalters@gocsc.com

Adam Tueller

Contractor Outside Sales

3210 South 900 West

Salt Lake City, UT 84119 US

Main Phone: (801) 975-0600

Direct: (801) 618-6665

Email: Atueller@gocsc.com

- B. The Siemon Company is represented locally by: Easton.Jones@siemon.com

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

SECTION 276007

APPENDIX 07 – Siemon Certified Installation Firms

PART 1 - GENERAL

1.1 RELATED TERMS

NOTE: CABLE INSTALLERS HAVE RIGOROUS REQUIREMENTS TO BE CERTIFIED FOR SIEMON CABLES AND PRODUCTS. VALIDATION OF CERTIFICATION IS REQUIRED PRIOR TO ACCEPTING A BID.

- A. The firms selected to bid must be pre-approved by the local facility IT manager. Installation firms desiring to do work for Intermountain Health must be selected from the official CI list below.
- B. Current Siemon Approved/Certified Cable Installers for Siemon Network Cable. This list is up to date as of 2025-01-03.
 - 1. **Orion Integration Group:** 8880 W. Barnes Street, Boise, ID 83709
 - a. Greg Chavez // Phone 208 321 8000 / Fax 208 321 8555 /
Direct 208 489 2230 // Gchavez@io-group.com / www.oi-group.com
 - 2. **ACS Systems:** 925 North Main St. Meridian, ID 83642
 - a. Doug McCleery // Phone 208 331 8554 / Fax 208 884 5638
/ Mobile 208 412 5763 // doug@acs-systems.com / www.acs-systems.com
 - 3. **IES Commercial:** 16292 So. Bringhurst Boulevard, Suite 700, Bluffdale, UT 84065
 - a. Brad Davis – Branch Manager // Phone 801 975 8182 / Fax 385 242 7366 / Mobile 385 448 7175
// Brad.Davis@iescomm.com / www.iescomm.com
 - 4. **Cache Valley Electric:** 1338 S. Gustin Rd., Salt Lake City, UT 84104
 - a. Travis Grant – Acct. Manager // Phone 801 908 4170 / Fax 801 908 7401
Mobile 801 870 7226 // Travis.Grant@cve.com / www.cve.com
 - b. Brad Readicker – Acct. Manager // Phone 801 908 2686 / Fax 801 908 7401 Mobile 801 870 4963
// Brad.Readicker@cve.com / www.cve.com
 - 5. **Hunt Electric, Inc.:** 1863 W. Alexander St., Salt Lake City, UT 84119
 - a. Colton – Technology Division Manager // Phone 801 975 8844 Mobile 385 505 2662 // Colton.huntelectric.com / www.huntelectric.com
 - 6. **Linx:** 167 West 7065 South, Midvale UT 84047
 - a. Mike Herd – Account Executive // Mobile 801 702 7083 //
MHerd@teamlinx.com / www.teamlinx.com
 - b. Steve Faddis – Project manager // Mobile 385 707 5168 //
SFaddis@teamlinx.com / www.teamlinx.com
 - 7. **Data Plus:** 769 Middlegate Road, Henderson, NV 89118
 - a. Chris Tettamanti – Project Manager // Phone 702 795 3282 Chris@dpcnv.com
 - 8. **Bombard Electric:** 4380 West post Road, Las Vegas, NV 89118
 - a. Bob Reese – Project/Division Manager // Phone 702 263 3570
Bob.reese@bombardelec.com / www.bombardelectric.com
 - 9. **Fisk Electric:** 6412 Arville Street, Las Vegas, NV 89118
 - a. Anthony Sant – Operations Manager // Phone 702 435 5053 /
Fax 702 435 2127 / Mobile 702 373 6969 // Asant@fiskcorp.com / www.fiskcorp.com
 - 10. **Mojave Electric:** 3755 W. Hacienda Ave., Las Vegas, NV 89118 Phone 702 798 2970
 - 11. **The Morse Group:** 3874 Silvestri Lane, Las Vegas, NV 89120
 - a. Chuck Sudberry – Group Manager Low Voltage // Phone 702 257 4452
Mobile 702308 4410 // Csudberry@themorsegroup.com / www.themorsegroup.com
 - 12. **Linx:** 9900 E 51st Ave., Denver, Co 80238
 - a. John Lopez // Phone 303 500 2860 // JLopez@teamlinx.com
 - 13. **TelNet Systems:** 547 S 20th Street West, Suite #2, Billings, MT 59102
 - a. Clay Jensen // Phone 406 855 7478 // Clay.Jensen@telnetsystemsmt.com

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 276008
APPENDIX 08 – Lead Wall Penetrations**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

A. Sections 13090 & 134900

1.2 RELATED TERMS

Procedure Name: New Port and Electrical Box Installation Lead Lined Walls

Document Detail Information: (This section must be completed in full.)

Implements Policy:	Click here to enter policy title		
Content Owner	Craig Allen, Safety Security Environment Health Director, Central Office Jeremy Hawk Medical Physicist Radiation Safety Coordinator	Content Consultant(s):	Jeremy Hawk, Radiation Safety Officer, Medical Physicist Imaging John Ellis, Facilities Management Director, Central Office Steve Kelly, System Project Facility Design Manager, Planning Melissa Lopez, Cabling, IS
Date of Final Draft:	12/29/2015	Who Reviewed Content?	<Name, Title, Dept> <Name, Title, Dept> <Name, Title, Dept> <Committee Name>
Keywords (must have at least 3):	Searchable Keywords (e.g., PHI, EMTALA, Coding)		

PART 2 -

2.1 PURPOSE

A. Maintain radiation safety controls in lead lined walls during installation of new power and data outlets in existing lead lined walls.

2.2 SCOPE

A. Intermountain Hospitals, Intermountain Clinics Medical Group

2.3 DEFINITIONS

A. Lead lined Walls – Structured element designed to provide a barrier to block radiation penetration beyond the designated space.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- B. Maintenance Manager – The person responsible for plant maintenance operations or his/her delegate.
- C. Radiation Safety Coordinator – The person responsible for Radiation Safety or his/her
- D. Delegate. Medical Physicist.
- E. Worker – The person responsible for completing work with the lead lined wall. This includes Intermountain Employees as well as any outside supplier or contractor.

2.4 PROVISIONS

- A. The Radiation Safety Program is following Utah regulation R313-15-101, R313-28 and U.S. Nuclear Regulatory Commission Regulation 1- CFR Part 20-1101.

2.5 PROCEDURE

- A. Prior to any work within a lead lined wall, the Worker reports to the Radiation Safety Coordinator, Maintenance Manager and completed a review of planned work “ACWP” Identification of specific description related to the lead lined wall planned work.
 - 1. Intermountain workers, outside suppliers or contractors hired to work in any Intermountain facility must contact the Maintenance Manager and Radiation Safety Coordinator prior to beginning work to discuss the project and ensure that the planned work will not interfere with facility operations, maintenance, or other projects.
 - 2. Failure to schedule and complete the planning meeting described above may result in the delay or rescheduling of work. Outside suppliers or contractors are responsible for any costs incurred because of their failure to schedule and complete this meeting.
- B. The Radiation Safety Coordinator, Maintenance Manager and the worker conduct a pre-work inspection of the areas in which work is to be performed. This inspection identified the following:
 - 1. Areas of special concern or sensitivity, including those noted or described on the facility Life Safety records and drawings, and Radiation Safety records and drawings.
 - 2. Appropriate areas or structures to use for support of any work, as applicable.
 - 3. Existing deficiencies in Barriers.
 - 4. The as act assemblies impacted by the work.
 - 5. The type of shielding material acceptable in the area.
 - a. Lead lined boxes
 - b. Lead lined wall “inside wall” installation, and OR
 - c. Lead shielding for wall installation of “outside wall” maintaining radiation safety barriers.
 - 6. The exact condition of the areas upon completion of work.
- C. Upon completion of the work and before closing the wall, the worker, Radiation Safety Coordinator and Maintenance Manager conduct a post-work inspection of the area in which the work was performed, this inspection verifies the following:
 - 1. No Tools, Supplies or debris are left within the walls.
 - 2. Lead lining is installed to maintain radiation safety protection according to regulatory requirements.
 - 3. All work affecting Radiation Safety Lead Barriers has been properly sealed.
 - 4. The overall condition of the area meets the expectation outline in the per-work inspection.
- D. The Maintenance Manager and Radiation Safety Coordinator signs and logs the completed “ACWP”

PART 3 - EXCEPTIONS

- A. None.

PART 4 -

4.1 PRIMARY SOURCES

- A. List the regulatory references upon which the procedure is based (cite the code, the title, and the statute).

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

PART 5 -

5.1 SECONDARY MATERIALS

- A. Radiation Safety Policy
- B. Above Ceiling Work Permit
- C. Lead lined wall requirements as defined by Radiation Safety Building Requirements




Option 1: worker to install new power utility wall box and add Lead Lining to wall behind box
If worker can access posterior wall entry



Option 2: worker to install new power utility wall box – box is lead Lined by manufacturer



Option 3: worker to install new power utility wall box - no additional lead lining required if installation does not disrupt the existing shielding

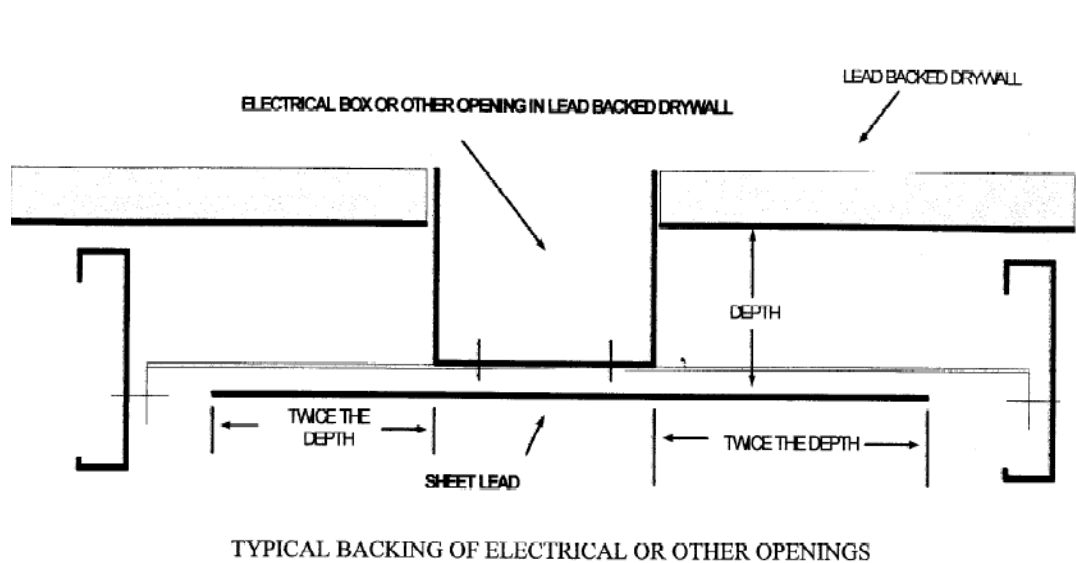

TYPICAL BACKING OF ELECTRICAL OR OTHER OPENINGS

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**Division 28 1300
ACCESS CONTROL**

PART 1 – GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section, Div. 26, and Div. 27.

1.2 SUMMARY

- A. This section includes a complete installation of a PC based and managed access control and security system (Lenel) and specifies sensors, signal equipment, and system controls. The Lenel system shall be capable of functioning with both standard wired locks and card readers as well as with network connected integrated hardware.
- B. The electrified locking and access hardware for this project is specified using ASSA ABLOY products. Where integrated lock sets are designated, the security contractor is to provide the integrated access control connection locking devices, wire harnesses, and transfer hinge. Locking devices are specified to use either POE or standard wiring connections. Cabling for the POE locking devices shall be provided by Div 27 contractors with the security contractor providing the cabling for non-POE locking hardware.
- C. The system shall also interface with wired access control for medical cabinets and refrigerators where required.

1.3 DEFINITIONS

- A. Hard-Wired System: Alarm, supervisory, and detection devices are directly connected, through individual dedicated conductors, to central control panels.

1.4 SYSTEM DESCRIPTION

- A. The system shall have both access-controlled doors and alarm inputs for panic buttons and intrusion detection.
- B. The system shall support automatic responses to alarms entering the system. Each alarm condition shall be capable of initiating numerous events including but not limited to: Activation of remote devices, door control, remote annunciation LED's, and card validation.
- C. Access control functions shall include but not be limited to: Validation based on time of day and day of week, holiday scheduling with card validation override, and access validation based on positive verification of card.
- D. The system shall interface with the fire alarm system and in the event of an alarm, shall release all controlled doors designated for emergency egress, and put them in fail-safe mode allowing free egress.
 - 1. Behavioral Health situation. Tied into closest smoke head, only release when that smoke head detects fire.

1.5 FUNCTIONAL PERFORMANCE

- A. The system shall consist of a network controller and network nodes using a standard TCP/IP network. Each controller shall retain all data necessary for system operation in its own RAM. Each controller will contain an integrated real time clock that continues to govern events even if communication with the main network controller is interrupted.
- B. The network controller shall act as an interface point with the node network, a database management

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

tool, and a transaction storage device.

1.6 ACTION SUBMITTALS

- A. General: Submit the following according to Conditions of Contract and Division 1 Specification Sections
- B. Product data for system components, including "Nationally Recognized Testing Laboratory" (NRTL) listing data and list of materials, dimensioned plans, sections, and elevations showing minimum clearances, mounting arrangements, and installed features and devices.
- C. Wiring Diagrams and Door Elevations: Submit wiring diagrams and door elevations with product data in one submittal. Provide the following for each opening having electric hardware, except doors with only magnetic holder/release units.
 - 1. Wiring diagrams for scheduled items requiring power. Identify manufacturer-installed and field-installed wiring.
 - 2. Provide load calculations and requirements for each electro-mechanical locking device within +/-5% of 24 VDC. Size the conductors for each device appropriately to maintain this requirement.
 - 3. Provide cable type (as indicated on the Shop Drawings Wire Legend) that is used for each electro-mechanical locking device, the conductor size, the estimated total length of cable, the estimated line loss (voltage drop), and the percentage of estimated line loss (voltage drop).
- D. System operation description, including method of operation and supervision of each component and each type of circuit, and sequence of operations for all manually and automatically initiated system inputs. Description must cover this specific Project; manufacturer's standard descriptions for generic systems are not acceptable.

1.7 CLOSEOUT SUBMITTALS

- A. Operation and maintenance data for inclusion in the "Operating and Maintenance Manual" specified in Division 01. Include data for each type of product, including all features and operating sequences, both automatic and manual. Include user's software data and recommendations for spare parts to be stocked at the site. Provide names, addresses, and telephone numbers of service organizations that stock repair parts for the system.
- B. Product certifications signed by the manufacturers of system components certifying that their products comply with the referenced standards.
- C. Separate Qualification Data for Manufacturers and Installers: Demonstrate their capabilities and experience as specified in Quality Assurance Article. Include lists of completed projects with project names and addresses, names of Contracting Officer and Government representatives, plus other information specified.
- D. Provide all field tests of system.

1.8 QUALITY ASSURANCE

- A. Convergent and IES are Intermountain Healthcare's approved installers. Convergent is the preferred installer as they are the only one that can sell licenses and install/program in the badge access system.
- B. Comply with NFPA 70, "National Electrical Code."
- C. Listing and Labeling: Provide system and components that are listed and labeled for their indicated use and location on the Project.
 - 1. The Terms "Listed" and "Labeled": As defined in the "National Electrical Code," Article 100.
 - 2. Listing and Labeling Agency Qualifications: A "Nationally Recognized Testing Laboratory" (NRTL) as defined in OSHA Regulation 1910.7.

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

- D. Comply with UL Standard 609, 1023, and 1076.
- E. FM Compliance: Provide FM approved card access system and components.
- F. Single Source Responsibility: Obtain system components from a single source (the prime system manufacturer) that assumes responsibility for system components and for their compatibility.
- G. The successful bidding contractor shall be required to have training and accreditation with both ASSA ABLOY and Lenel.

1.9 WARRANTY

- A. Special Warranty: Manufacturer's standard form in which manufacturer agrees to repair or replace components of card readers, sensors, equipment related to access control operation, etc., that fail in materials or workmanship within specified warranty period.
 - 1. Warranty Period: One year from date of Substantial Completion.

1.10 COORDINATION

- A. Access Control System Electrical Coordination: Coordinate with the layout and installation of scheduled electrified door hardware, and related access control equipment, with required connections to source power junction boxes, power supplies, detection and monitoring hardware and fire alarm system.
 - 1. Door Hardware Interface: The card access control system shall be connected to electronic door control hardware (electromechanical locks, electric strikes, magnetic locks, Request to Exit device, door position switches, other monitoring contacts, and related auxiliary control devices) as described under Division 8 "Door Hardware". Coordinate with the installation and configuration of specified door hardware being monitored or controlled with the controls, software and access control hardware specified in this Section.
 - 2. Access Control Hardware Sets: The hardware sets listed represent the design intent and direction of the owner and architect. They are a guideline only and should not be considered a detailed hardware schedule. Discrepancies, conflicting hardware and missing items should be brought to the attention of the architect with corrections made prior to the bidding process. Omitted items not included in a hardware set should be scheduled with the appropriate additional hardware required for proper application and functionality. **Refer to Section 08 71 00 Door Hardware Schedule for hardware set information.**
 - 3. Fire Alarm Interface: Review Door Hardware Schedule for sequence of operation requiring an interface with the fire alarm system, such as release upon fire alarm. Coordinate with the fire alarm installer to provide all fire alarm system components to accomplish the specified sequence of operation. Provide fire alarm release at all delayed egress doors and any other doors in the path of egress that are allowed to be locked.

PART 2 - PRODUCTS

2.1 MANUFACTURERS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. Lenel
- B. At facilities that already have an approved card access system, using the same card access system as what is already present is permitted. If a replacement of the current system is required, the replacing system must be Lenel.

2.2 ACCESS CONTROL SYSTEM EQUIPMENT, GENERAL

- A. Surge Protection: Comply with the minimum requirements of UL Standard 1449, "Transient Voltage Surge Suppressors," for each component using solid state devices and having a line voltage power source connection or an exterior underground signal connection.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- B. Provide at the locations identified, a complete and operational Access Control and Security System including but not limited to the following equipment:
 - 1. Card Readers
 - 2. Door Logic Panels
 - 3. Relay output contacts
 - 4. All power supplies and/or transformers
 - 5. All equipment, security devices, components, wire, cable, and mounting hardware as required to meet specification requirements and manufacturers documented installation procedures.
- C. Provide the quantity of new door licenses to the existing Lenel building package to accommodate the increased number of readers being added as part of this project.

2.3 PHYSICAL SECURITY APPLIANCE

- A. Physical Security Appliance (PSA): Stand-alone, modular multi-reader access controllers shall be provided for standard door opening access control. The appliances shall communicate to the main system server using Ethernet TCP/IP and shall serve as the data collection and communications interface between the system server and the various field devices such as card readers, alarm inputs and control outputs.
- B. Power Requirements: Each Physical Security Appliance (PSA) shall accept a power input voltage of 120 VAC, 60Hz. Maximum power draw shall be no more than 300W. The PSA shall generate appropriate DC voltage levels for on-board use as required. External lock power supplies shall be required and sized for the appropriate number of locks (plus 20%) associated with each fused distributed controller. All power outputs to external devices shall be currently limited in accordance with class 2 power limited wiring standards
- C. Battery Backup: The power supplies inherent in the PSA shall have the capability of charging standard gel-cell batteries and shall be capable of operating on direct battery backup. The PSA shall be capable of providing at least eight hours of full operation backup time and shall be capable of recharging its batteries in less than 48 hours. Batteries shall be mounted in a separate, dedicated battery shelf sized to contain the number of batteries required.
- D. Access Control System
 - 1. Lenel OnGuard. Contractor to include appropriate OnGuard licensing to accommodate additional reader devices
- E. Mercury Control Board
 - 1. Lenel X2220 or M2220 – ICS Intelligent System Controller
 - 2. Lenel 1320S3 – Dual door controller
 - 3. Lenel 1100S3 – Input board
 - 4. Lenel 1200S3 – Output board
- F. Control Board Enclosure
 - 1. Life Safety FPO150/250-2D82M8NL4E8M2 (16 Doors)
 - 2. Life Safety FPO150-B100 D8M8NL4E4M1 (8 Doors)

2.4 ELECTRICAL POWER

- A. Normal System Power Supply: 120 V 60 Hz from locked disconnect device. System components are supplied with power through separate power supplies. Provide all required power supplies and associated transformers as specified by the manufacturer. NetLink7 boards shall be present on all power supplies and connected to the Intermountain network via a cable specified by Div 27-Section 271513-1.
- B. Power Source Transfer: When normal power is interrupted, the system is automatically switched to a backup supply without degradation of critical system function or loss of signals or

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

status data.

1. Backup Source: Batteries in power supplies of individual system components. Such batteries are an integral part of power supplies of the components.
2. Annunciation: Switching of the system or any system component to backup power is indicated as a change in system condition.

2.5 CARD ACCESS SYSTEM HARDWARE, GENERAL

- A. Types, features, accessories, and mounting conditions of individual devices are as indicated.
- B. Battery Backup: The access control panel shall be provided with back up battery power for eight hours operation upon loss of AC power.
- C. Suppression: The access control panel shall have provisions for relay suppressor kits for each relay used, to protect the access control panel from collapsing electrical fields.
- D. Card Readers (SEOS Technology)
 1. Behavioral Health Spaces: Card readers shall be Essex iRox Pro+ multiclass SE readers.
 - a. Proximity Readers: The system shall be provided with uni-directional proximity card readers. The standard multi-class SE readers shall have a read range of five to eight inches. The reader shall be able to be mounted with its sides against metal door, window frames, and/or masonry walls. Provide tamper resistant TORX screws.
 - b. Reader protocol shall be Weigand or OSDP (where adding to existing protocol to match).
 - c. Proximity PIN Code Readers: All badge readers placed on doors leaving a secured behavioral health unit will have included a PIN code. PIN code badge readers will include a ligature-resistant bevel around the exposed hardware
 - d. Standard readers: IRXPO-2-S-LRB
 - e. PIN Code readers: PiezoProx PPH - 103
 2. Non-Behavioral Health Spaces: Card readers shall be HID Signo readers.
 - a. Proximity Readers: The system shall be provided with uni-directional proximity card readers. The standard HID Signo readers shall have a read range of five to eight inches. The reader shall be able to mount with its sides against metal door, window frames, and/or masonry walls. Long range readers mounted at vehicle gates shall have a minimum 10 inch read range.
 - a. Reader protocol shall be Weigand or OSDP (where adding to existing protocol to match).
 - b. Standard readers: HID SIGNO 40TKS-00-000000-HD01
 - c. PIN Code readers: HID SIGNO 40KTKS-00-000000
 - d. Mullion Installation: HID 20NKS-00-000000 Signo 20
 - e. Mullion Pin Code: HID 20KNKS-00-000000
 2. Integrated Access Control Reader
 - a. Wireless (Must be reviewed by a member of the Security Systems Engineering Team prior to bid)
 - 1) Sargent Manufacturing (SA) – IN100 Series
 - 2) Corbin Russwin (RU) – IN100 Series (Security Systems Engineering Team must be consulted prior to use)
 - 3) No-Sub
 - b. Wired
 - 1) Sargent Manufacturer (SA) – SN210 Series OSDP (on new build projects only)
 - 2) Corbin Russwin (RU) – SN 210 Series OSDP (on new build projects only)
 - 3) No-Sub
 3. Electric Strike
 - a. HES (HS) – 1006CS Series

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

- b. HES (HS) – 1500C Series
- c. HES (HS) – 5200C Series
- d. HES (HS) – 9400 Series
- e. HES 9100/9200 (Glass locking hardware)
- 4. Delayed Egress Maglock
 - a. Securitron DE/M680E
 - b. RCI 8310 x DSS/SCS
- 5. Request to Exit
 - a. Bosch DS160
- 6. Door Position Switch
 - a. Securitron (SU) DPS-W/M
 - b. GRI 8080 (DPS w/o Intrusion)
 - c. GRI 195-12-B
- 7. Power Transfer
 - a. Pemko (PE) – EL-CEPT Series
 - b. Securitron (SU) – EL-CEPT Series
 - c. Von Duprin (VD) – EP-10
- 8. Med Cabinet Locking Hardware (must include key override and be hard-wired to controller)
 - a. HES 660-12-LBSM
 - b. HES 660-KO
 - c. Signo Mullion – 20TKS-00-000000
 - d. MED600650T-KIT-W-26-QJ-S
- 9. Data Rack
 - a. HES KS210 (hardwired to controller) OSDP (on new build projects only)
- 10. Refrigerator Locking Hardware (controlled by traditional card reader hardwired to controller)
 - a. HES 660-12-LBSM

2.2 POWER SUPPLIES

- A. Provide power supplies as per manufacturers written recommendations with total number of powered devices for each power supply restricted to only consuming 75 percent of the power supplies rated amperage. Provide separate power supplies for system controllers (As per manufacturer), card readers (12VDC, 5 A), and locks (24 VDC, 7 A).

2.3 CONTACT INDICATOR SWITCHES

- A. Contact indicators on overhead doors that are not supplied by the door manufacturer shall be Edwards Signaling series 2300 type surface mounted magnetic reed type switches with opposing magnet and shall be per manufacturer's recommendations for the type of door.

2.4 WIRE AND CABLE

- A. Cables: Bundled, shielded, twisted-pair cable, shielded where manufacturer recommends shielded cable for standard readers and locking hardware. Networking cable shall conform to what is specified in Div 27 – Section 271513-1.
 - 1. Specified Manufacturer: Provide the specified product or prior approved equal.
 - a. Windy City Wire, Part Number 4461030.
 - b. Coleman Cable Inc. (CCI) Part Number 73101 consisting of the following cables bundled plenum rated within a yellow Low Smoke PVC, CMP/CL3P/FPLP jacket:
 - 1) PN 72321: 22 AWG 2/Conductor CMP. Typical use, Door Contact
 - 2) PN 72344: 22 AWG 4/Conductor CMP. Typical use, Request to Exit/Spare

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

- 3) PN 75366: 22 AWG 6/Conductor shielded CMP. Typical use, Card Reader.
 - 4) PN 71944: 18 AWG 4/Conductor CMP. Typical use, Lock Power
 - c. Any of the above cables may be used individually where cables in addition to those included in the bundle are required.
 - B. Comply with Division 26 Section "Wires and Cables" except as indicated.
 - C. Cable for Low Voltage Control and Signal Circuits: Shielded twisted pair cable with drain. Comply with Division 26 Section "Wires and Cables."
- 2.5 RACEWAY**
- A. Comply with Division 27 Section 27036 3.5 D.
- 2.6 DOOR HARDWARE SCHEDULE**
- A. Refer to Section 08 71 00 Door Hardware Schedule for hardware set information and assignment of required components to be provided by the Division 28 contractor.

PART 3 - EXECUTION

3.1 EXAMINATION

- A. Examine pathway elements intended for cables in accordance with Div. 27, Section 27036 – 3.3 – C. Check raceways, cable trays, and other elements for compliance with space allocations, installation tolerances, hazards to cable installation, and other conditions affecting installation.
- B. Examine roughing-in for card readers, and other cable-connected devices to verify actual locations of conduit and back boxes before device installation.
- C. Proceed with installation only after unsatisfactory conditions have been corrected.

3.2 PREPARATION

- A. Comply with recommendations in SIA CP-01.
- B. Comply with TIA/EIA 606-A, "Administration Standard for Commercial Telecommunications Infrastructure."
- C. Obtain detailed Project planning forms from manufacturer of access-control system; develop custom forms to suit Project. Fill in all data available from Project plans and specifications and publish as Project planning documents for review and approval.
 - 1. For each location, record setup of controller features and access requirements.
 - 2. Prepare a specific plan for system testing, startup, and demonstration.
 - 3. Develop acceptance test concept and, on approval, develop specifics of the test.
 - 4. Develop cable and asset-management system details, input data from construction documents.

3.3 INSTALLATION

- A. General: Install system according to NFPA 70, Div 27 270536 – 3.5-D, applicable codes, and manufacturer's printed instructions.
- B. Intermountain Healthcare Approved Installers:
 - 1. Convergent
 - 2. Robert I Merrill (exclusively for Napco Continental, when Continental is already present)
 - 3. IES
 - 4. Telnet (Montana)

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

- C. Wiring Method:
 - 1. Concealed in walls or above inaccessible ceilings: Install all cabling in raceways, 1inch minimum. Conduit fill shall not exceed 40%.
 - 2. Above Accessible Ceilings: Provide J-Hooks at not more than 5 feet on center. Fasten J-Hooks to walls with solid anchoring to studs. Where wall is unavailable, suspend from structure using not less than 3/8" diameter threaded rod.
 - 3. Exposed: Install cables in minimum 1" electrical metallic tubing (EMT) conduit with straps and not more than within 3 feet of each termination (boxes or panels) and at intervals not to exceeding 10 feet along the run.
 - 4. Exposed Environmental: Install exposed cables in minimum 3/4" galvanized rigid metal conduit with straps at not more than 3 feet on center and minimum 1/4" gap between conduit and building surface. Use boxes that are specified for surface mounting.
- D. Wiring within Panels and Enclosures: Bundle, wrap, and train the conductors to terminal points with 6-inches of slack minimum, 12-inches of slack maximum. Provide and use cable management hardware and distribution spools.
- E. Number of Conductors: As recommended by system manufacturer for functions indicated. As a minimum install one bundled, shielded and unshielded, twisted pair cable for every access-controlled door.
- F. Splices, Taps, and Terminations: Make splices, taps, and terminations on numbered terminal strips in junction, pull and outlet boxes, terminal cabinets, and equipment enclosures. The use of B-connectors or beanies is not permitted.
- G. Tighten connections to comply with tightening torques specified in UL Standard 486A.
- H. Identification of Conductors and Cables: Conductors and cables shall be identified at both ends with permanent, legible, thermal transfer PermaSleeve marking labels. These markings, along with conductor color-coding, must correspond directly to the system wiring diagrams to ensure accurate identification.
- I. Install power supplies and other auxiliary components for detection devices at the door controller panel or at a data gathering panel except as otherwise indicated. Do not install such items in the vicinity of the devices they serve.

3.4 GROUNDING

- A. Comply with Section 280526 "Grounding and Bonding for Electronic Safety and Security."
- B. Comply with IEEE 1100, "Recommended Practice for Power and Grounding Electronic Equipment."
- C. Ground cable shields, drain conductors, and equipment to eliminate shock hazard and to minimize ground loops, common-mode returns, noise pickup, cross talk, and other impairments.
- D. Bond shields and drain conductors to ground at only one point in each circuit.

3.5 DOOR RELEASE BUTTON INSTALLATION

- A. Pushbuttons: Pushbutton switches shall be connected to the controller associated with the portal to which they are applied, and shall operate the appropriate electric strike, electric lock, or other facility release device. The system shall also use card readers in place of pushbuttons at designated locations for remote operation of access-controlled doors.
- B. Locations: Pushbutton locations are required to be at (but not limited to) all registration desks/workstations. Button function shall be programmed by the badge access integrator.
- C. For standalone clinic areas, a toggle switch shall be installed for controlling the card-access system for lock/unlocking the door in lieu of a momentary door release button. Programming of toggle switch to be conducted by badge access integrator.

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

3.6 Panic Button Installation

- A. Panic buttons shall be wired from the location of the mounted button to the Physical Security Appliance (PSA). Wireless options may only be used in extreme situations that must be reviewed by the Security Systems Engineer for the facility. If wireless option is used, the physical button must be powered by onsite electricity and not by battery.
- B. Locations: Panic Buttons are required to be at (but not limited to) all registration desks/workstations, nurses station, welcome desks, behavioral health consultation/counseling rooms, any location money is counted or exchanged, and pharmacies.
- C. Hardware: Honeywell 269R is the preferred hardware

3.7 IDENTIFICATION

- A. In addition to requirements in this article, comply with applicable requirements in Section 260553 "Identification for Electrical Systems" and with TIA/EIA 606-A.
- B. Label each terminal strip and screw terminal in each cabinet, rack, or panel.
 - 1. All wiring conductors connected to terminal strips shall be individually numbered, and each cable or wiring group being extended from a panel or cabinet to a building-mounted device shall be identified with the name and number of the particular device as shown. Conductors and cables shall be identified with permanent, legible, thermal transfer Perma Sleeve marking labels. These markings, along with conductor color-coding, must correspond directly to the system wiring diagrams to ensure accurate identification.
 - 2. Each wire connected to building-mounted devices is not required to be numbered at the device if the color of the wire is consistent with the associated wire connected and numbered within the panel or cabinet.
 - 3. The label of each badge reader and panic button where installed as designated by the Security Systems Engineer for the facility.

3.8 FIELD QUALITY CONTROL

- A. Manufacturer's Field Services: Provide services of a factory authorized service representative to supervise the field assembly and connection of components and system pre-testing, testing, adjustment, and programming.
- B. Inspection: Verify that units and controls are properly labeled and interconnecting wires and terminals are identified.
- C. Pre-testing: Align and adjust the system and perform pre-testing of all components, wiring, and functions to verify conformance with specified requirements. Correct deficiencies by replacing malfunctioning or damaged items with new items. Retest until satisfactory performance and conditions are achieved.
- D. Testing: Provide at least 10 days' notice of acceptance test performance schedule.
- E. Operational Tests: Perform operational system tests to verify conformance with specifications. Test all modes of system operation and intrusion detection. Methodically test for false alarms in each zone of space intrusion detection devices by simulating activities outside indicated detection patterns.
- F. Installer Start-up Responsibility: The Installer shall initiate system operation. The Installer shall provide competent start up personnel on each consecutive working day until the system is fully functional. Upon reoccurring technical problems, the Installer shall supply the factory-direct Manufacturer's support in the form of factory technical representation and/or diagnostic equipment until the resolution of those defined problems.

3.9 ADJUSTMENT

- A. Occupancy Adjustments: When requested within 1 year of date of substantial completion, provide

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

onsite assistance in adjusting and reprogramming to suit actual occupied conditions.

3.10 DEMONSTRATION

- A. Train owner's operating personnel (a member of the Security Systems Engineering Team) in the programming and operation of the system. Train owner's maintenance personnel in the procedures and schedules involved in preventive maintenance and in operating, adjusting, troubleshooting, and servicing of the system. Provide a minimum of 4 hours training.
- B. Schedule training with advance notice of at least 7 days.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 28 2300
VIDEO SURVEILLANCE**

PART 1 - GENERAL

1.1 SUMMARY

- A. The selection includes a video surveillance system consisting of cameras, software installation, configuration, and licensing. Network electronics shall be provided by the Owner. Pulling cable, and terminations shall be provided by Div 27 276007.
- B. Owner approved integrator:
 - 1. CONVERGINT TECHNOLOGIES.

1.2 SUBMITTALS

- A. Product Data: For each type of product indicated. Include dimensions and data on features, performance, electrical characteristics, ratings, and finishes.
- B. Shop Drawings: For video surveillance, submit shop drawings with product data in one submittal. Include plans, elevations, sections, details, and attachments to other work.
 - 1. Detail equipment assemblies and indicate dimensions, weights, loads, required clearances, method of field assembly, components, and location and size of each field connection.
 - 2. Functional Block Diagram: Show single-line interconnections between components for signal transmission and control. Show cable types and sizes.
 - 3. Dimensioned plan and elevations of equipment racks, control panels, and consoles. Show access and workspace requirements.
 - 4. Wiring Diagrams: For power, signal, and control wiring.
 - 5. Sample systems detail report consisting of camera ID, TDR location, camera model, network switch id, patch panel port number, network switch port number, ip address, and PoE requirements.
- C. Equipment List: Include every piece of equipment by model number, manufacturer, location, and date of original installation.
- D. Field quality-control reports.
- E. Operation and maintenance data.

1.3 QUALITY ASSURANCE

- A. Electrical Components, Devices, and Accessories: Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.
- B. Comply with NECA 1.
- C. Comply with NFPA 70.
- D. Electronic data exchange between the video surveillance system with an access-control system shall comply with SIA TVAC.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1.4 WARRANTY

- A. Special Warranty: Manufacturer's standard form in which manufacturer agrees to repair or replace components of cameras, equipment related to camera operation, and control-station equipment that fail in materials or workmanship within specified warranty period.
 - 1. Warranty Period: One year from date of Substantial Completion.

PART 2 - PRODUCTS

2.1 SYSTEM REQUIREMENTS

- A. Video-signal formats shall comply with IP based digital transmission.
- B. Surge Protection: Protect components from voltage surges entering through power, communication, signal, control, or sensing leads. Include surge protection for external wiring of each conductor's entry connection to components.
 - 1. Minimum Protection for Power Connections 120 V and More: Auxiliary panel suppressors complying with requirements in Division 26 Section "Transient-Voltage Suppression for Low-Voltage Electrical Power Circuits."
 - 2. Minimum Protection for Communication, Signal, Control, and Low-Voltage Power Connections: Comply with requirements in Division 26 Section "Transient-Voltage Suppression for Low-Voltage Electrical Power Circuits." as recommended by manufacturer for type of line being protected.
- C. Tamper Protection: Tamper protection capability shall be provided as part of the camera manufacture and design.

2.2 CAMERAS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. AXIS
 - 2. BOSCH (following approval by Security Systems Engineer)
- B. Description: Camera shall be an all-in-one solution with integrated megapixel camera, varifocal lens, and dome enclosure. Refer to the camera type schedule in the drawings.
- C. Model Types
 - 1. Multi-lens camera models shall be used at intersections containing 3 or more hallways
 - 2. Dual-lens camera models shall be installed in the center of hallways that are 35ft or greater.
 - 3. Multi-lens camera models shall be installed on exterior corners of the facility and be corner-mounted or parapet mount for structures 2 stories and below.
 - 4. Multi-lens camera models shall be installed on exterior light poles.
 - 5. Anti-ligature cameras models shall be corner mounted in rooms designated as: seclusion rooms, seclusion ANTE rooms, sensory rooms, time out rooms, and quiet rooms.
 - 6. 12mp panoramic "fisheye" camera models shall be installed in pharmacies and over medication dispensing machines.
- D. All camera models and place must be reviewed by the Security Systems Engineer over the facility.

2.3 CAMERA-SUPPORTING EQUIPMENT

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. AXIS
 - 2. BOSCH (following approval by Security Systems Engineer)

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- B. Minimum Load Rating: Rated for load in excess of the total weight supported times a minimum safety factor of two.
- C. Mounting Brackets for Fixed Cameras: Type matched to items supported and mounting conditions. Include manual pan-and-tilt adjustment.
- D. Protective Housings for Fixed Cameras: Dome type enclosures with internal camera mounting and connecting provisions that are matched to camera/lens combination and mounting and installing arrangement of camera to be housed. Dome enclosures mounted outside shall be manufactured with environmental features for sustained function in all expected temperatures.
- E. The installer shall provide CAT6A patch cables to connect the camera to the network cable ran from the data closet. Installer shall connect the patch cable from the camera to the network cable.

2.4 IP VIDEO MANAGEMENT SYSTEMS

- A. Manufacturers: Subject to compliance with requirements, provide products by one of the following:
 - 1. Genetec
- B. Description:
 - 1. The system shall provide high-quality delivery and processing of IP-based video, audio, and control data using standard Ethernet-based networks.
 - 2. The system shall have seamless integration of all video surveillance and control functions.
 - 3. The system design shall include all necessary compression software for high-performance, dual-stream, MPEG-2/MPEG-4/h.264 video. The unit shall provide connections for all video cameras, camera PTZ control data, bidirectional audio, discreet sensor inputs, and control system outputs.
 - 4. All camera signals shall be compressed, encoded, and delivered onto the network for processing and control by the IP video-management software.
 - 5. All system interconnect cables, camera licenses, workstation programming, and other system intermediate devices shall be provided for the full performance of specified system.
- C. The viewing of security cameras shall be done over the Intermountain network via:
 - 1. Use of software installed on Intermountain computer hardware
 - 2. Axis PoE video decoder, displayed on a monitor
 - 3. Eizo decoding monitor

2.5 SIGNAL AND POWER TRANSMISSION COMPONENTS

- A. Cable: Refer to Div 27 – Section 271513-1.
- B. Camera Power: POE-enabled network switches. (By Owner)
- C. Media Converter (Camera Fiber Connections): 10/100/1000 Media converter with Power over Ethernet. Provide OmniConverter GPoE+ by Omnitron systems or approved equal. (BA2)

PART 3 - EXECUTION

3.1 VIDEO SURVEILLANCE SYSTEM INSTALLATION

- A. Intermountain Healthcare Approved Installers:
 - 1. Convergent
- B. Install cameras at heights noted in drawings.
- C. Set pan-and-tilt unit stops to suit final camera position and to obtain the field of view required for camera. Connect all controls and alarms and adjust.
- D. Identify system components, wiring, cabling, and terminals according to Division 26 Section "Identification for Electrical Systems."

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

3.2 FIELD QUALITY CONTROL

- A. Perform tests and inspections.
 - 1. Manufacturer's Field Service: Engage a factory-authorized service representative to inspect components, assemblies, and equipment installations, including connections, and to assist in testing.
- B. Tests and Inspections:
 - 1. Inspection: Verify that units and controls are properly installed, connected, and labeled, and that interconnecting wires and terminals are identified.
 - 2. Pretesting: Align and adjust system and pretest components, wiring, and functions to verify that they comply with specified requirements. Conduct tests at varying lighting levels, including day and night scenes as applicable. Prepare video-surveillance equipment for acceptance and operational testing as follows:
 - a. Verify operation of auto-iris lenses.
 - b. Set back-focus of fixed focal length lenses. At focus set to infinity, simulate nighttime lighting conditions by using a dark glass filter of a density that produces a clear image. Adjust until image is in focus with and without the filter.
 - c. Set back-focus of zoom lenses. At focus set to infinity, simulate nighttime lighting conditions by using a dark glass filter of a density that produces a clear image. Additionally, set zoom to full wide angle and aim camera at an object 50 to 75 feet away. Adjust until image is in focus from full wide angle to full telephoto, with the filter in place.
 - d. Set sensitivity of motion detection.
 - e. Connect and verify responses to alarms.
 - f. Verify operation of control-station equipment.
 - 3. Test Schedule: Schedule tests after pretesting has been successfully completed and system has been in normal functional operation for at least 14 days. Provide a minimum of 10 days' notice of test schedule.
 - 4. Operational Tests: Perform operational system tests to verify that system complies with Specifications. Include all modes of system operation.
 - 5. Complete system detail report and provide with as built and O&M documentation.
- C. Video surveillance system will be considered defective if it does not pass tests and inspections.
- D. Prepare test and inspection reports.

3.3 INTERCOM ENTRY SYSTEMS

- A. Summary
 - 1. Digital audio-video inter entry system.
- B. Warranty
 - 1. Special Installer Warranty: Installer warrants that fabricated and installed intercom entry system perform in accordance with specified requirements and agree to repair or replace components or products that fail to perform as specified within the warranty period.
 - a. Warranty Period: one year from date of substantial completion; full coverage for labor, materials, and equipment.
- C. Product
 - 1. Axis I8 intercom products.
- D. Installation
 - 1. Comply with manufacturers' published instruction.
- E. Interface with Other Work
 - 1. Coordinate installation of new products for intercom entry system with existing conditions.
 - 2. Coordinate with Section 28 1300 "Access Control" for physical and functional interfaces with access control system and for compliance with system-wide performance requirements.
- F. Field Quality Control

Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel

1. Field tests and inspection must be witnessed by Security Systems Engineer or approved Intermountain Health representative.
2. System will be considered defective if it does not pass tests and inspections.
3. Remove and replace defective system and retest replacement unit.

3.4 DEMONSTRATION

- A. Train owner's operating personnel (a member of the Security Systems Engineering Team) to adjust, operate, and maintain video-surveillance equipment.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 28 2400
DIGITAL, ADDRESSABLE FIRE-ALARM SYSTEM**

PART 1 - GENERAL

1.1 RELATED DOCUMENTS

- A. Drawings and general provisions of the Contract, including General and Supplementary Conditions and Division 01 Specification Sections, apply to this Section.

1.2 SUMMARY

- A. Section Includes:
 - 1. Fire-alarm control unit.
 - 2. Manual fire-alarm boxes.
 - 3. System smoke detectors.
 - 4. Non system smoke detectors.
 - 5. Heat detectors.
 - 6. Notification appliances.
 - 7. Firefighters' two-way telephone communication service.
 - 8. Magnetic door holders.
 - 9. Remote annunciator.
 - 10. Addressable interface device.
 - 11. Digital alarm communicator transmitter.
 - 12. Radio alarm transmitter.
 - 13. System printer.

1.3 DEFINITIONS

- A. LED: Light-emitting diode.
- B. NICET: National Institute for Certification in Engineering Technologies.

1.4 SYSTEM DESCRIPTION

- A. Noncoded, UL-certified FMG-placarded addressable system, with automatic sensitivity control of smoke detectors and multiplexed signal transmission, dedicated to fire-alarm service only.

1.5 PERFORMANCE REQUIREMENTS

- A. Seismic Performance: Fire-alarm control unit and raceways shall withstand the effects of earthquake motions determined according to SEI/ASCE 7.
 - 1. The term "withstand" means "the unit will remain in place without separation of any parts from the device when subjected to the seismic forces specified."

1.6 ACTION SUBMITTALS

- A. Product Data: For each type of product indicated.
- B. Shop Drawings: For fire-alarm system, submit shop drawings with product data in one submittal. Include plans, elevations, sections, details, and attachments to other work.
 - 1. Comply with recommendations in the "Documentation" Section of the "Fundamentals of Fire Alarm Systems" Chapter in NFPA 72.
 - 2. Include voltage drop calculations for notification appliance circuits.
 - 3. Include fire alarm zoning diagrams indicating zoning of the fire alarm system coordinated with the corresponding fire protection zones and smoke compartments. Comply with NFPA 99.
 - 4. Include battery-size calculations.
 - 5. Include performance parameters and installation details for each detector, verifying that each detector is listed for complete range of air velocity, temperature, and humidity possible

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

when air-handling system is operating.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

6. Include plans, sections, and elevations of heating, ventilating, and air-conditioning ducts, drawn to scale and coordinating installation of duct smoke detectors and access to them. Show critical dimensions that relate to placement and support of sampling tubes, detector housing, and remote status and alarm indicators. Locate detectors according to manufacturer's written recommendations. Provide remote test switches (RTS) as required by NFPA 72.
 7. Include voice/alarm signaling-service equipment rack or console layout, grounding schematic, amplifier power calculation, and single-line connection diagram.
 8. Include floor plans to indicate final outlet locations showing address of each addressable device. Show size and route of cable and conduits.
- C. General Submittal Requirements:
1. Submittals shall be approved by authorities having jurisdiction prior to submitting them to Architect.
 2. Shop Drawings shall be prepared by persons with the following qualifications:
 - a. Trained and certified by manufacturer in fire-alarm system design.
 - b. NICET-certified fire-alarm technician, Level III minimum.
 - c. Licensed or certified by authorities having jurisdiction.
- D. Delegated-Design Submittal: For smoke and heat detectors indicated to comply with performance requirements and design criteria, including analysis data signed and sealed by the qualified professional engineer responsible for their preparation.
1. Drawings showing the location of each smoke and heat detector, ratings of each, and installation details as needed to comply with listing conditions of the detector.
 2. Design Calculations: Calculate requirements for selecting the spacing and sensitivity of detection, complying with NFPA 72.

1.7 INFORMATIONAL SUBMITTALS

- A. Qualification Data: For qualified Installer.
- B. Seismic Qualification Certificates: For fire-alarm control unit, accessories, and components, from manufacturer.
1. Basis for Certification: Indicate whether withstand certification is based on actual test of assembled components or on calculation.
 2. Dimensioned Outline Drawings of Equipment Unit: Identify center of gravity and locate and describe mounting and anchorage provisions.
 3. Detailed description of equipment anchorage devices on which the certification is based and their installation requirements.
- C. Field quality-control reports.

1.8 CLOSEOUT SUBMITTALS

- A. Operation and Maintenance Data: For fire-alarm systems and components to include in emergency, operation, and maintenance manuals. In addition to items specified in Section 017823 "Operation and Maintenance Data," include the following:
1. Comply with the "Records" Section of the "Inspection, Testing and Maintenance" Chapter in NFPA 72.
 2. Provide "Record of Completion Documents" according to NFPA 72 article "Permanent Records" in the "Records" Section of the "Inspection, Testing and Maintenance" Chapter.
 3. Record copy of site-specific software.
 4. Provide "Maintenance, Inspection and Testing Records" according to NFPA 72 article of the same name and include the following:
 - a. Frequency of testing of installed components.
 - b. Frequency of inspection of installed components.
 - c. Requirements and recommendations related to results of maintenance.
 - d. Manufacturer's user training manuals.
 5. Manufacturer's required maintenance related to system warranty requirements.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

6. Abbreviated operating instructions for mounting at fire-alarm control unit.
- B. Software and Firmware Operational Documentation:
 1. Software operating and upgrade manuals.
 2. Program Software Backup: On magnetic media or compact disk, complete with data files.
 3. Device address list.
 4. Printout of software application and graphic screens.

1.9 MAINTENANCE MATERIAL SUBMITTALS

- A. Furnish extra materials that match products installed and that are packaged with protective covering for storage and identified with labels describing contents.
 1. Lamps for Remote Indicating Lamp Units: Quantity equal to 10 percent of amount installed, but no fewer than 1 unit.
 2. Lamps for Strobe Units: Quantity equal to 10 percent of amount installed, but no fewer than 1 unit.
 3. Smoke Detectors, Fire Detectors: Quantity equal to 10 percent of amount of each type installed, but no fewer than 1 unit of each type.
 4. Detector Bases: Quantity equal to 2 percent of amount of each type installed, but no fewer than 1 unit of each type.
 5. Keys and Tools: One extra set for access to locked and tamper proofed components.
 6. Audible and Visual Notification Appliances: One of each type installed.
 7. Fuses: Two of each type installed in the system.

1.10 QUALITY ASSURANCE

- A. Installer Qualifications: Personnel shall be trained and certified by manufacturer for installation of units required for this Project.
- B. Installer Qualifications: Installation shall be by personnel certified by NICET as fire-alarm Level II technician.
- C. Source Limitations for Fire-Alarm System and Components: Obtain fire-alarm system from single source from single manufacturer. Components shall be compatible with, and operate as, an extension of existing system.
- D. Electrical Components, Devices, and Accessories: Listed and labeled as defined in NFPA 70, by a qualified testing agency, and marked for intended location and application.
- E. NFPA Certification: Obtain certification according to NFPA 72 by an NRTL.
- F. NFPA Certification: Obtain certification according to NFPA 72 by a UL-listed alarm company.
- G. NFPA Certification: Obtain certification according to NFPA 72 in the form of a placard by an FMG-approved alarm company.
- H. NFPA Certification: Obtain certification according to NFPA 72 by the Authority Having Jurisdiction.

1.11 PROJECT CONDITIONS

- A. Interruption of Existing Fire-Alarm Service: Do not interrupt fire-alarm service to facilities occupied by Owner or others unless permitted under the following conditions and then only after arranging to provide temporary guard service according to requirements indicated:
 1. Notify Construction Manager no fewer than 7 days in advance of proposed interruption of fire-alarm service.
 2. Do not proceed with interruption of fire-alarm service without Construction Manager's written permission.

1.12 SEQUENCING AND SCHEDULING

- A. Existing Fire-Alarm Equipment: Maintain existing equipment fully operational until new equipment has been tested and accepted. As new equipment is installed, label it "NOT IN SERVICE" until it is accepted. Remove labels from new equipment when put into service and label existing fire-alarm equipment "NOT IN SERVICE" until removed from the building.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- B. Equipment Removal: After acceptance of new fire-alarm system, remove existing disconnected fire-alarm equipment and wiring.

1.13 SOFTWARE SERVICE AGREEMENT

- A. Comply with UL 864.
- B. Technical Support: Beginning with Substantial Completion, provide software support for two years.
- C. Upgrade Service: Update software to latest version at Project completion. Install and program software upgrades that become available within two years from date of Substantial Completion. Upgrading software shall include operating system. Upgrade shall include new or revised licenses for use of software.
 - 1. Provide 30 days' notice to Owner to allow scheduling and access to system and to allow Owner to upgrade computer equipment if necessary.

PART 2 - PRODUCTS

2.1 MANUFACTURERS

- A. Subject to compliance with requirements, provide product by the following:
 - 1. Notifier (Match Existing)

2.2 SYSTEMS OPERATIONAL DESCRIPTION

- A. Fire-alarm signal initiation shall be by one or more of the following devices[and systems]:
 - 1. Manual stations.
 - 2. Smoke detectors.
 - 3. Duct smoke detectors.
 - 4. Verified automatic alarm operation of smoke detectors.
 - 5. Automatic sprinkler system water flow.
 - 6. Heat detectors in elevator shaft and pit.
 - 7. Fire-extinguishing system operation.
 - 8. Fire standpipe system.
- B. Fire-alarm signal shall initiate the following actions:
 - 1. In the Clinic and Central Utility Plant (CUP), continuously operate alarm notification appliances.
 - 2. In the hospital, continuously operate chime/strobe appliances in smoke zone where alarm is initiated. Continuously operate strobe appliances throughout the hospital
 - 3. Identify alarm at fire-alarm control unit and remote annunciators.
 - 4. Transmit an alarm signal to the remote alarm receiving station.
 - 5. Unlock electric door locks in designated egress paths.
 - 6. Release fire and smoke doors held open by magnetic door holders.
 - 7. Activate voice/alarm communication system.
 - 8. Switch heating, ventilating, and air-conditioning equipment controls to fire-alarm mode.
 - 9. Activate smoke-control system (smoke management) at firefighter smoke-control system panel.
 - 10. Activate stairwell and elevator-shaft pressurization systems.
 - 11. Close smoke dampers in air ducts of designated air-conditioning duct systems.
 - 12. Recall elevators to primary or alternate recall floors.
 - 13. Activate emergency lighting control.
 - 14. Activate emergency shutoffs for gas and fuel supplies.
 - 15. Record events in the system memory.
 - 16. Record events by the system printer.
- C. Supervisory signal initiation shall be by one or more of the following devices and actions:
 - 1. Valve supervisory switch.
 - 2. Low-air-pressure switch of a dry-pipe sprinkler system.
 - 3. Elevator shunt-trip supervision.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- D. System trouble signal initiation shall be by one or more of the following devices and actions:
 - 1. Open circuits, shorts, and grounds in designated circuits.
 - 2. Opening, tampering with, or removing alarm-initiating and supervisory signal-initiating devices.
 - 3. Loss of primary power at fire-alarm control unit.
 - 4. Ground or a single break in fire-alarm control unit internal circuits.
 - 5. Abnormal ac voltage at fire-alarm control unit.
 - 6. Break in standby battery circuitry.
 - 7. Failure of battery charging.
 - 8. Abnormal position of any switch at fire-alarm control unit or annunciator.
 - 9. Fire-pump power failure, including a dead-phase or phase-reversal condition.
 - 10. Low-air-pressure switch operation on a dry-pipe or preaction sprinkler system.
- E. System Trouble and Supervisory Signal Actions: Initiate notification appliance and annunciate at fire-alarm control unit and remote annunciators. Record the event on a system printer.

2.3 FIRE-ALARM CONTROL UNIT

- A. General Requirements for Fire-Alarm Control Unit:
 - 1. Field-programmable, microprocessor-based, modular, power-limited design with electronic modules, complying with UL 864 and listed and labeled by an NRTL.
 - a. System software and programs shall be held in flash electrically erasable programmable read-only memory (EEPROM), retaining the information through failure of primary and secondary power supplies.
 - b. Include a real-time clock for time annotation of events on the event recorder
 - c. Must be able to operate and monitor Pre-action systems throughout hospital
 - 2. Addressable initiation devices that communicate device identity and status.
 - a. Smoke sensors shall additionally communicate sensitivity setting and allow for adjustment of sensitivity at fire-alarm control unit.
 - b. Temperature sensors shall additionally test for and communicate the sensitivity range of the device.
 - 3. Addressable control circuits for operation of mechanical equipment.
- B. Alphanumeric Display and System Controls: Arranged for interface between human operator at fire-alarm control unit and addressable system components including annunciation and supervision. Display alarm, supervisory, and component status messages and the programming and control menu.
 - 1. Annunciator and Display: Liquid-crystal type, 3 line(s) of 80 characters, minimum.
 - 2. Keypad: Arranged to permit entry and execution of programming, display, and control commands and to indicate control commands to be entered into the system for control of smoke-detector sensitivity and other parameters.
- C. Circuits:
 - 1. Initiating Device, Notification Appliance, and Signaling Line Circuits: NFPA 72, Class A.
 - a. Initiating Device Circuits: Style D.
 - b. Notification Appliance Circuits: Style Z.
 - c. Signaling Line Circuits: Style 7.
 - d. Install no more than 50 addressable devices on each signaling line circuit.
 - 2. Serial Interfaces: Two RS-232 ports for printers.
- D. Stairwell Pressurization: Provide an output signal using an addressable relay to start the stairwell pressurization system. Signal shall remain on until alarm conditions are cleared and fire-alarm system is reset. Signal shall not stop in response to alarm acknowledge or signal silence commands.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

1. Pressurization starts when any alarm is received at fire-alarm control unit.
 2. Alarm signals from smoke detectors at pressurization air supplies have a higher priority than other alarm signals that start the system.
- E. Smoke-Alarm Verification:
1. Initiate audible and visible indication of an "alarm-verification" signal at fire-alarm control unit.
 2. Activate an NRTL-listed and -approved "alarm-verification" sequence at fire-alarm control unit and detector.
 3. Record events by the system printer.
 4. Sound general alarm if the alarm is verified.
 5. Cancel fire-alarm control unit indication and system reset if the alarm is not verified.
- F. Notification Appliance Circuit: Operation shall sound in a temporal.
- G. Elevator Recall:
1. Smoke detectors at the following locations shall initiate automatic elevator recall. Alarm-initiating devices, except those listed, shall not start elevator recall.
 - a. Elevator lobby detectors except the lobby detector on the designated floor.
 - b. Smoke detector in elevator machine room.
 - c. Smoke detectors in elevator hoist way.
 2. Elevator lobby detectors located on the designated recall floors shall be programmed to move the cars to the alternate recall floor.
 3. Water-flow alarm connected to sprinkler in an elevator shaft and elevator machine room shall shut down elevators associated with the location without time delay.
 - a. Water-flow switch associated with the sprinkler in the elevator pit may have a delay to allow elevators to move to the designated floor.
1. Door Controls: Door hold-open devices that are controlled by smoke detectors at doors in smoke barrier walls shall be connected to fire-alarm system. Review Door Hardware Schedule for sequence of operation requiring an interface with the fire alarm system, such as release upon fire alarm. Provide all fire alarm system components to accomplish the specified sequence of operation which may require components beyond those that are indicated on drawings. Provide fire alarm release at all delayed egress doors and any other doors in the path of egress that are allowed to be locked.
- H. Remote Smoke-Detector Sensitivity Adjustment: Controls shall select specific addressable smoke detectors for adjustment, display their current status and sensitivity settings, and change those settings. Allow controls to be used to program repetitive, time-scheduled, and automated changes in sensitivity of specific detector groups. Record sensitivity adjustments and sensitivity-adjustment schedule changes in system memory, and print out the final adjusted values on system printer.
- I. Transmission to Remote Alarm Receiving Station: Automatically transmit alarm, supervisory, and trouble signals to a remote alarm station.
- J. Printout of Events: On receipt of signal, print alarm, supervisory, and trouble events. Identify zone, device, and function. Include type of signal (alarm, supervisory, or trouble) and date and time of occurrence. Differentiate alarm signals from all other printed indications. Also print system reset event, including same information for device, location, date, and time. Commands initiate the printing of a list of existing alarm, supervisory, and trouble conditions in the system and a historical log of events.
- K. Primary Power: 24-V dc obtained from 120-V ac service and a power-supply module. Initiating devices, notification appliances, signaling lines, trouble signals, supervisory and digital alarm communicator transmitters shall be powered by 24-V dc source.
1. Alarm current draw of entire fire-alarm system shall not exceed 80 percent of the power-supply module rating.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- L. Secondary Power: 24-V dc supply system with batteries, automatic battery charger, and automatic transfer switch.
 - 1. Batteries: Sealed, valve-regulated, recombinant lead acid.
- M. Instructions: Computer printout or typewritten instruction card mounted behind a plastic or glass cover in a stainless-steel or aluminum frame. Include interpretation and describe appropriate response for displays and signals. Briefly describe the functional operation of the system under normal, alarm, and trouble conditions.

2.4 MANUAL FIRE-ALARM BOXES

- A. General Requirements for Manual Fire-Alarm Boxes: Comply with UL 38. Boxes shall be finished in red with molded, raised-letter operating instructions in contrasting color; shall show visible indication of operation; and shall be mounted on recessed outlet box. If indicated as surface mounted, provide manufacturer's surface back box.
 - 1. Double-action mechanism requiring two actions to initiate an alarm, pull-lever type; with integral addressable module arranged to communicate manual-station status (normal, alarm, or trouble) to fire-alarm control unit.
 - 2. Station Reset: Key- or wrench-operated switch.
 - 3. Indoor Protective Shield: Factory-fabricated clear plastic enclosure hinged at the top to permit lifting for access to initiate an alarm. Lifting the cover actuates an integral battery-powered audible horn intended to discourage false-alarm operation.
 - 4. Weatherproof Protective Shield: Factory-fabricated clear plastic enclosure hinged at the top to permit lifting for access to initiate an alarm.

2.5 SYSTEM SMOKE DETECTORS

- A. General Requirements for System Smoke Detectors:
 - 1. Comply with UL 268; operating at 24-V dc, nominal.
 - 2. Detectors shall be four-wire type.
 - 3. Integral Addressable Module: Arranged to communicate detector status (normal, alarm, or trouble) to fire-alarm control unit.
 - 4. Base Mounting: Detector and associated electronic components shall be mounted in a twist-lock module that connects to a fixed base. Provide terminals in the fixed base for connection to building wiring.
 - 5. Self-Restoring: Detectors do not require resetting or readjustment after actuation to restore them to normal operation.
 - 6. Integral Visual-Indicating Light: LED type indicating detector has operated and power-on status.
 - 7. Remote Control: Unless otherwise indicated, detectors shall be analog-addressable type, individually monitored at fire-alarm control unit for calibration, sensitivity, and alarm condition and individually adjustable for sensitivity by fire-alarm control unit.
 - a. Rate-of-rise temperature characteristic shall be selectable at fire-alarm control unit for 15 or 20 deg F (8 or 11 deg C) per minute.
 - b. Fixed-temperature sensing shall be independent of rate-of-rise sensing and shall be settable at fire-alarm control unit to operate at 135 or 155 deg F (57 or 68 deg C).
 - c. Provide multiple levels of detection sensitivity for each sensor.
- B. Photoelectric Smoke Detectors:
 - 1. Detector address shall be accessible from fire-alarm control unit and shall be able to identify the detector's location within the system and its sensitivity setting.
 - 2. An operator at fire-alarm control unit, having the designated access level, shall be able to manually access the following for each detector:
 - a. Primary status.
 - b. Device type.
 - c. Present average value.
 - d. Present sensitivity selected.
 - e. Sensor range (normal, dirty, etc.).

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- C. Ionization Smoke Detector:
 - 1. Detector address shall be accessible from fire-alarm control unit and shall be able to identify the detector's location within the system and its sensitivity setting.
 - 2. An operator at fire-alarm control unit, having the designated access level, shall be able to manually access the following for each detector:
 - a. Primary status.
 - b. Device type.
 - c. Present average value.
 - d. Present sensitivity selected.
 - e. Sensor range (normal, dirty, etc.).
- D. Duct Smoke Detectors: Photoelectric type complying with UL 268A.
 - 1. Detector address shall be accessible from fire-alarm control unit and shall be able to identify the detector's location within the system and its sensitivity setting.
 - 2. An operator at fire-alarm control unit, having the designated access level, shall be able to manually access the following for each detector:
 - a. Primary status.
 - b. Device type.
 - c. Present average value.
 - d. Present sensitivity selected.
 - e. Sensor range (normal, dirty, etc.).
 - 3. Weatherproof Duct Housing Enclosure: NEMA 250, Type 4X; NRTL listed for use with the supplied detector.
 - 4. Each sensor shall have multiple levels of detection sensitivity.
 - 5. Sampling Tubes: Design and dimensions as recommended by manufacturer for specific duct size, air velocity, and installation conditions where applied.
 - 6. Relay Fan Shutdown: Rated to interrupt fan motor-control circuit.
 - 7. Remote Test Station (RTS): Provide keyed type RTS. Comply with NFPA 72, owner, AHJ, architect, and EOR locations.

2.6 HEAT DETECTORS

- A. General Requirements for Heat Detectors: Comply with UL 521.
- B. Heat Detector, Combination Type: Actuated by either a fixed temperature of **135 deg F (57 deg C)** or a rate of rise that exceeds **15 deg F (8 deg C)** per minute unless otherwise indicated.
 - 1. Mounting: Twist-lock base interchangeable with smoke-detector bases.
 - 2. Integral Addressable Module: Arranged to communicate detector status (normal, alarm, or trouble) to fire-alarm control unit.

2.7 NOTIFICATION APPLIANCES

- A. General Requirements for Notification Appliances: Individually addressed, connected to a signaling line circuit, equipped for mounting as indicated and with screw terminals for system connections.
- B. General Requirements for Notification Appliances: Connected to notification appliance signal circuits, zoned as indicated, equipped for mounting as indicated and with screw terminals for system connections.
 - 1. Combination Devices: Factory-integrated audible and visible devices in a single-mounting assembly, equipped for mounting as indicated and with screw terminals for system connections.
- C. Chimes, Low-Level Output: Vibrating type, 75-dBA minimum rated output.
- D. Chimes, High-Level Output: Vibrating type, 81-dBA minimum rated output.
- E. Horns: Electric-vibrating-polarized type, 24-V dc; with provision for housing the operating mechanism behind a grille. Comply with UL 464. Horns shall produce a sound-pressure level of 90 dBA, measured **10 feet (3 m)** from the horn, using the coded signal prescribed in UL 464 test protocol.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- F. Visible Notification Appliances: Xenon strobe lights comply with UL 1971, with clear or nominal white polycarbonate lens mounted on an aluminum faceplate. The word "FIRE" is engraved in minimum ~~1-inch-~~ (25-mm-) high letters on the lens.
1. Rated Light Output:
 - a. 15/30/75/110 cd, selectable in the field.
 2. Mounting: Wall mounted unless otherwise indicated.
 3. For units with guards to prevent physical damage, light output ratings shall be determined with guards in place.
 4. Flashing shall be in a temporal pattern, synchronized with other units.
 5. Strobe Leads: Factory connected to screw terminals.
 6. Mounting Faceplate: Factory finished, white.

2.8 MAGNETIC DOOR HOLDERS

- A. Description: Units are equipped for wall or floor mounting as indicated and are complete with matching doorplate.
1. Electromagnet: Requires no more than 3 W to develop 25-lbf (111-N) holding force.
 2. Wall-Mounted Units: Flush mounted unless otherwise indicated.
 3. Rating: 24-V ac or dc.
 4. Rating: 120-V ac.
- B. Material and Finish: Match door hardware. Refer back to Div 08

2.9 REMOTE ANNUNCIATOR

- A. Description: Annunciator functions shall match those of fire-alarm control unit for alarm, supervisory, and trouble indications. Manual switching functions shall match those of fire-alarm control unit, including acknowledging, silencing, resetting, and testing.
1. Mounting: Flush cabinet, NEMA 250, Type 1.
- B. Display Type and Functional Performance: Alphanumeric display and LED indicating lights shall match those of fire-alarm control unit. Provide controls to acknowledge, silence, reset, and test functions for alarm, supervisory, and trouble signals.

2.10 ADDRESSABLE INTERFACE DEVICE

- A. Description: Microelectronic monitor module, NRTL listed for use in providing a system address for alarm-initiating devices for wired applications with normally open contacts.
- B. Integral Relay: Capable of providing a direct signal to elevator controller to initiate elevator recall to circuit-breaker shunt trip for power shutdown.

2.11 DIGITAL ALARM COMMUNICATOR TRANSMITTER

- A. Digital alarm communicator transmitter shall be acceptable to the remote central station and shall comply with UL 632 and be listed and labeled by an NRTL.
- B. Functional Performance: Unit shall receive an alarm, supervisory, or trouble signal from fire-alarm control unit and automatically capture two telephone line(s) and dial a preset number for a remote central station. When contact is made with central station(s), signals shall be transmitted. If service on either line is interrupted for longer than 45 seconds, transmitter shall initiate a local trouble signal and transmit the signal indicating loss of telephone line to the remote alarm receiving station over the remaining line. Transmitter shall automatically report telephone service restoration to the central station. If service is lost on both telephone lines, transmitter shall initiate the local trouble signal.
- C. Local functions and display at the digital alarm communicator transmitter shall include the following:
1. Verification that both telephone lines are available.
 2. Programming device.
 3. LED display.
 4. Manual test report function and manual transmission clear indication.
 5. Communications failure with the central station or fire-alarm control unit.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- D. Digital data transmission shall include the following:
 - 1. Address of the alarm-initiating device.
 - 2. Address of the supervisory signal.
 - 3. Address of the trouble-initiating device.
 - 4. Loss of ac supply or loss of power.
 - 5. Low battery.
 - 6. Abnormal test signal.
 - 7. Communication bus failure.
- E. Secondary Power: Integral rechargeable battery and automatic charger.
- F. Self-Test: Conducted automatically every 24 hours with report transmitted to central station.

2.12 SYSTEM PRINTER

- A. Printer shall be listed and labeled by an NRTL as an integral part of fire-alarm system.

2.13 DEVICE GUARDS

- A. Description: Welded wire mesh of size and shape for the manual station, smoke detector, gong, or other device requiring protection.
 - 1. Factory fabricated and furnished by manufacturer of device.
 - 2. Finish: Paint of color to match the protected device.

PART 3 - EXECUTION

3.1 EQUIPMENT INSTALLATION

- A. Comply with NFPA 72 for installation of fire-alarm equipment.
- B. Install wall-mounted equipment, with tops of cabinets not more than **72 inches (1830 mm)** above the finished floor.
 - 1. Comply with requirements for seismic-restraint devices specified in Section 260548 "Vibration and Seismic Controls for Electrical Systems."
- C. Smoke- or Heat-Detector Spacing:
 - 1. Comply with NFPA 72, "Smoke-Sensing Fire Detectors" Section in the "Initiating Devices" Chapter, for smoke-detector spacing.
 - 2. Comply with NFPA 72, "Heat-Sensing Fire Detectors" Section in the "Initiating Devices" Chapter, for heat-detector spacing.
 - 3. Smooth ceiling spacing shall not exceed **30 feet (9 m)**.
 - 4. HVAC: Locate detectors not closer than **3 feet (1 m)** from air-supply diffuser or return-air opening.
 - 5. Lighting Fixtures: Locate detectors not closer than **12 inches (300 mm)** from any part of a lighting fixture.
- D. Duct Smoke Detectors: Comply with NFPA 72 and NFPA 90A. Install sampling tubes so they extend the full width of duct. Install keyed remote test stations in acceptable locations.
- E. Heat Detectors in Elevator Shafts: Coordinate temperature rating and location with sprinkler rating and location.
- F. Single-Station Smoke Detectors: Where more than one smoke alarm is installed within a dwelling or suite, they shall be connected so that the operation of any smoke alarm causes the alarm in all smoke alarms to sound.
- G. Remote Status and Alarm Indicators: Install near each smoke detector and each sprinkler water-flow switch and valve-tamper switch that is not readily visible from normal viewing position.
- H. Remote Test Station (RTS): Install keyed test station in wall near each duct smoke detector that is not readily visible from normal viewing position. Provide in locations acceptable to owner, AHJ, Architect, & EOR.
- I. Audible Alarm-Indicating Devices: Install not less than **6 inches (150 mm)** below the ceiling. Install bells and horns on flush-mounted back boxes with the device-operating mechanism concealed behind a grille.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- J. Visible Alarm-Indicating Devices: Install adjacent to each alarm bell or alarm horn and at least **6 inches (150 mm)** below the ceiling.
- K. Device Location-Indicating Lights: Locate in public space near the device they monitor.
- L. Fire-Alarm Control Unit: Surface mounted, with tops of cabinets not more than **72 inches (1830 mm)** above the finished floor.
- M. Annunciator: Install with top of panel not more than **72 inches (1830 mm)** above the finished floor.

3.2 WIRING INSTALLATION

- A. Wiring Method: Install wiring in metal raceway according to Division 26 Section 260519 Conceal raceway except in unfinished spaces and as indicated.
- B. Wiring for Grid Ceiling Mounted Devices: Install junction box at accessible location above ceiling. Use flexible metal conduit for wiring between junction box and outlet box for ceiling mounted device. Secure flexible conduit within 12 inches of junction box.
- C. Wiring within Enclosures: Separate power-limited and non-power-limited conductors as recommended by the manufacturer. Install conductors parallel with or at right angles to sides and back of the enclosure. Bundle, lace, and train conductors to terminal points with no excess. Connect conductors that are terminated, spliced, or interrupted in any enclosure associated with the fire alarm system to terminal blocks. Mark each terminal according to the system's wiring diagrams. Make all connections with approved crimp-on terminal spade lugs, pressure-type terminal blocks, or plug connectors.
- D. Cable Taps: Use numbered terminal strips in junction, pull and outlet boxes, cabinets, or equipment enclosures where circuit connections are made.
- E. Color-Coding: Color-code fire alarm conductors differently from the normal building power wiring. Use one color-code for alarm circuit wiring and a different color-code for supervisory circuits. Color-code audible alarm-indicating circuits differently from alarm-initiating circuits. Use different colors for visible alarm-indicating devices. Paint fire alarm system junction boxes and covers red.
- F. Risers: Install at least two vertical cable risers to serve the fire alarm system. Separate risers in close proximity to each other with a minimum one-hour-rated wall, so the loss of one riser does not prevent the receipt or transmission of signal from other floors or zones.
- G. Wiring to Remote Alarm Transmitting Device: **1-inch (25-mm)** conduit between the FACP and the transmitter. Install number of conductors and electrical supervision for connecting wiring as needed to suit monitoring function.

3.3 CONNECTIONS

- A. For fire-protection systems related to doors in fire-rated walls and partitions and to doors in smoke partitions, comply with requirements in Section 087100 "Door Hardware." Connect hardware and devices to fire-alarm system.
 - 1. Verify that hardware and devices are NRTL listed for use with fire-alarm system in this Section before making connections.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

- B. Make addressable connections with a supervised interface device to the following devices and systems. Install the interface device less than **3 feet (1 m)** from the device controlled. Make an addressable confirmation connection when such feedback is available at the device or system being controlled.
1. Alarm-initiating connection to smoke-control system (smoke management) at firefighter smoke-control system panel.
 2. Alarm-initiating connection to stairwell and elevator-shaft pressurization systems.
 3. Smoke dampers in air ducts of designated air-conditioning duct systems. Provide end switches at each smoke and fire/smoke damper
 4. Alarm-initiating connection to elevator recall system and components.
 5. Alarm-initiating connection to activate emergency lighting control.
 6. Alarm-initiating connection to activate emergency shutoffs for gas and fuel supplies.
 7. Supervisory connections at valve supervisory switches.
 8. Supervisory connections at low-air-pressure switch of each dry-pipe sprinkler system.
 9. Supervisory connections at elevator shunt trip breaker.
 10. Supervisory connections at fire-pump power failure including a dead-phase or phase-reversal condition.
 11. Supervisory connections at fire-pump engine control panel.

3.4 IDENTIFICATION

- A. Identify system components, wiring, cabling, and terminals. Comply with requirements for identification specified in Section 260553 "Identification for Electrical Systems."
- B. Install framed instructions in a location visible from fire-alarm control unit.

3.5 GROUNDING

- A. Ground fire-alarm control unit and associated circuits; comply with IEEE 1100. Install a ground wire from main service ground to fire-alarm control unit.

3.6 FIELD QUALITY CONTROL

- A. Field tests shall be witnessed by authorities having jurisdiction.
- B. Manufacturer's Field Service: Engage a factory-authorized service representative to inspect, test, and adjust components, assemblies, and equipment installations, including connections.
- C. Perform tests and inspections.
1. Manufacturer's Field Service: Engage a factory-authorized service representative to inspect components, assemblies, and equipment installations, including connections, and to assist in testing.
- D. Tests and Inspections:
1. Visual Inspection: Conduct visual inspection prior to testing.
 - a. Inspection shall be based on completed Record Drawings and system documentation that is required by NFPA 72 in its "Completion Documents, Preparation" Table in the "Documentation" Section of the "Fundamentals of Fire Alarm Systems" Chapter.
 - b. Comply with "Visual Inspection Frequencies" Table in the "Inspection" Section of the "Inspection, Testing and Maintenance" Chapter in NFPA 72; retain the "Initial/Reacceptance" column and list only the installed components.
 2. System Testing: Comply with "Test Methods" Table in the "Testing" Section of the "Inspection, Testing and Maintenance" Chapter in NFPA 72.
 3. Test audible appliances for the public operating mode according to manufacturer's written instructions. Perform the test using a portable sound-level meter complying with Type 2 requirements in ANSI S1.4.
 4. Test audible appliances for the private operating mode according to manufacturer's written instructions.
 5. Test visible appliances for the public operating mode according to manufacturer's written instructions.

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

6. Factory-authorized service representative shall prepare the "Fire Alarm System Record of Completion" in the "Documentation" Section of the "Fundamentals of Fire Alarm Systems" Chapter in NFPA 72 and the "Inspection and Testing Form" in the "Records" Section of the "Inspection, Testing and Maintenance" Chapter in NFPA 72.
- E. Reacceptance Testing: Perform reacceptance testing to verify the proper operation of added or replaced devices and appliances.
- F. Fire-alarm system will be considered defective if it does not pass tests and inspections.
- G. Prepare test and inspection reports.
- H. Maintenance Test and Inspection: Perform tests and inspections listed for weekly, monthly, quarterly, and semiannual periods. Use forms developed for initial tests and inspections.
- I. Annual Test and Inspection: One year after date of Substantial Completion, test fire-alarm system complying with visual and testing inspection requirements in NFPA 72. Use forms developed for initial tests and inspections.

3.7 DEMONSTRATION

- A. Engage a factory-authorized service representative to train Owner's maintenance personnel to adjust, operate, and maintain fire-alarm system.

END OF SECTION

**Intermountain Health Care
Layton- Hospital - Primary Children's Hospital Exam Remodel**

**SECTION 28
Owner Contacts**

Mathew Tebbs (Enterprise Security Systems Manager)
Email: Matthew.Tebbs@imail.org
Phone: 435-251-5035

James Hawkins (Security Systems Specialist)
Email: James.Hawkins@imail.org
Phone: 801-507-7465

Scott Hyde (Security Systems Engineer)
Email: Scott.Hyde@imail.org
Phone: 801-662-1058

Clint Snow (Security Systems Engineer)
Email: Clint.Snow@imail.org
Phone: 801-357-7901

Kevin Fuller (Security Systems Engineer)
Email: Kevin.Fuller@imail.org
Phone: 801 710-3143

Cameron Vigo (Security Systems Specialist)
Email: Cameron.Vigo@imail.org
Phone: 719-684-4347

Div 28 Specification Contacts

Brad Hill
Email: Brad.Hill@ASSAABLOY.com
Phone: 385-229-2909

Greg Steinicke
Email: Greg.Steinicke@ASSAABLOY.com
Phone: 801-289-6493

Div 28 Security Engineer Contacts

Steve Anderson
Email: steve.anderson@speceng.com
Phone: 801-870-7188

Div 28 Fire Alarm Engineer Contacts

Jeff DuBois
Email: jeff.dubois@speceng.com
Phone: 801-652-1467