

This product is represented in Australia, New Zealand, and PNG by:

InKorr Pty Ltd

Address: Unit 12, 103 Lewis Road,
Knoxfield VIC 3180, Australia

Email: inkorr.service@inkorr.com.au

General: +61 (3) 8201 4868

Service: +61 (0) 478 800 003

Contact us with any enquiries related to:




Heat Transfer Equipment

- Shell & Tube Heat Exchangers - Standard, Custom, Corrugated Tubes.
- Plate Heat Exchangers - Brazed, Gasketed, Semi-Welded, & Welded.
- Graphite Heat Exchangers.
- Plate & Shell Heat Exchangers.
- Spiral Heat Exchangers.
- Crossflow Welded Heat Exchangers.
- Direct Steam Injection Heaters.
- Air Coolers.



Corrosion Resistant Equipment - Valves, Piping, Vessels & Systems

- Polymer-Lined Valves, Piping, and Pressure Vessels.
- Exotic Metal (Ta, Zr, Ti) Fabricated Piping and Pressure Vessels.
- Glass-Lined Vessels.
- Graphite Equipment and System Packages.

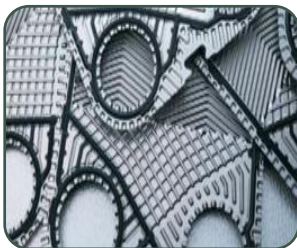

Service Maintenance

- Plate Heat Exchangers - Refurbishment, Gas Testing, UV Crack Testing.
- Graphite Equipment - Installation, Refurbishment, Repairs.
- Glass-Lined Vessels - Spark Testing, Lining Repair.
- Quality Spare Parts, both OEM and Aftermarket.



Process Heating Solutions Worldwide

Chemical &
Pharmaceutical
Processing Industry
Case History



Waste Inactivation System

Application

A major pharmaceutical company required a waste stream inactivation system to heat waste from multiple reactors at 140°C, hold for a period of time, then cool to 60°C. The customer was looking for a central turnkey system.

Process Conditions

Liquid Flow Rate: 5 GPM
Temperature Rise: 105-140°C
Liquid Pressure: 70 PSIG
Steam Pressure: 90 PSIG

Solution

Waste Sterilization Skid featuring the **Pick Direct Steam Injection 6X10-1/231BX Heater**. Waste is collected in a 300 gallon, vented tank. When tank level reaches high setting, the system automatically starts up to process batch. When tank reaches low level, the system automatically shuts down. Steam is diffused directly into the waste fluid through a multiple orifice injector. While one heater is in operation, a second Pick Heater is in standby mode, isolated by manual ball valves. Treated bio-waste is cooled below 60°C through a chilled plate-exchanger prior to system discharge. Pick provided complete FAT with documentation.

Features and Benefits:

- Single Collection Tank Design
- Precise Time & Temperature Control
- Fully Automated
- Easy Cleaning
- Compact Design
- Fast Heat-up
- Lower Capital Cost Investment

Learn more at www.pickheaters.com

Pick Heaters, Inc. — 730 S. Indiana Ave. — West Bend, WI 53095 USA
Phone: (262) 338-1191 — Email: info1@pickheaters.com