


ISA 750 Amplifier Wiring


Front View Doug coil machine




Rear View Doug coil machine

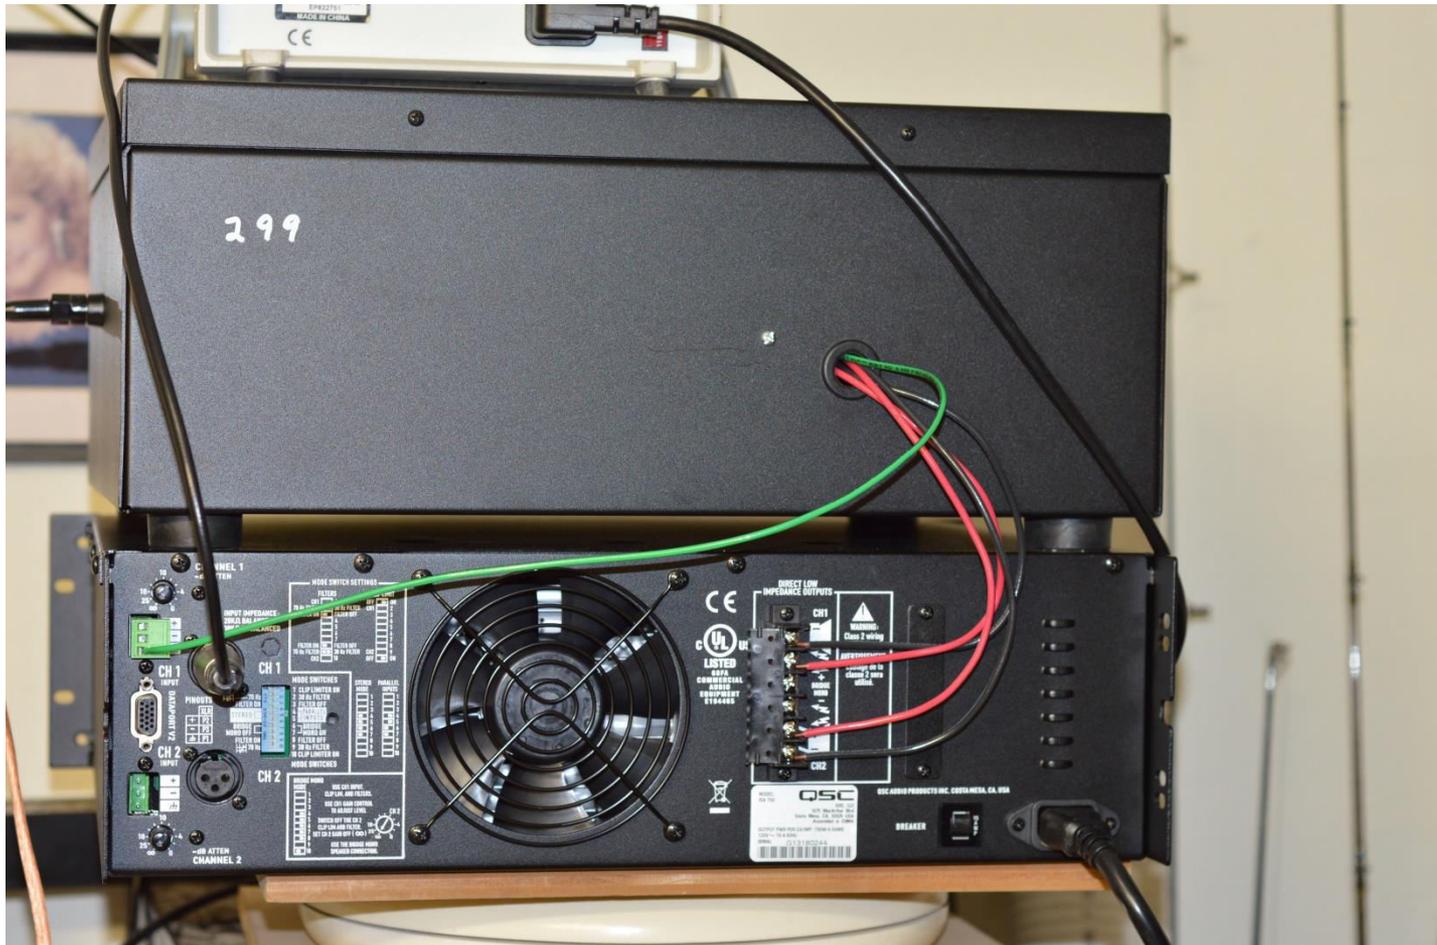

Wiring diagram

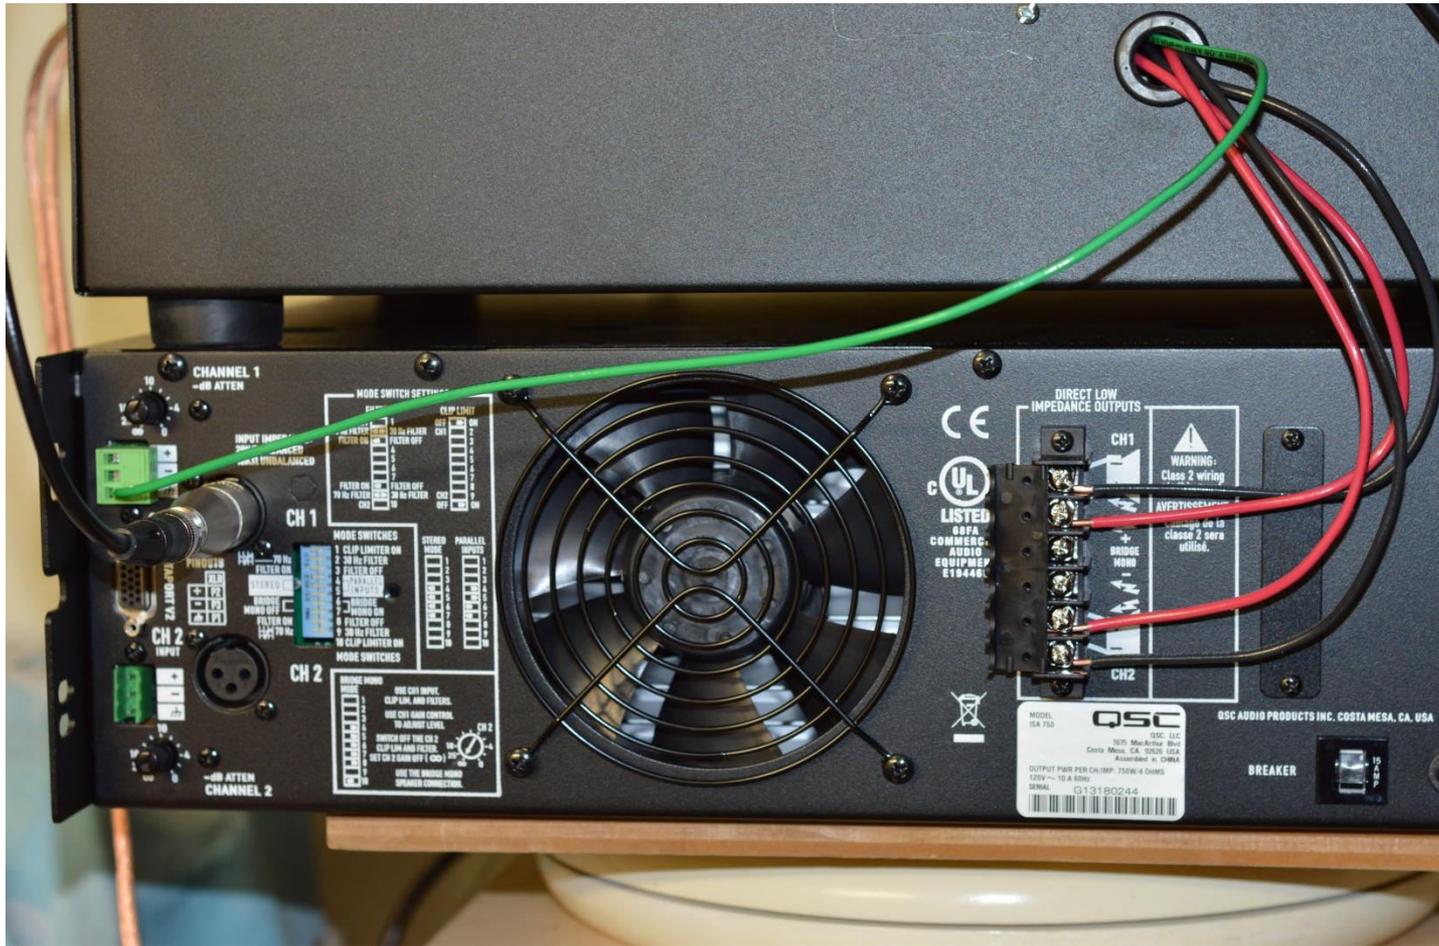


Black & Red Wire Placement

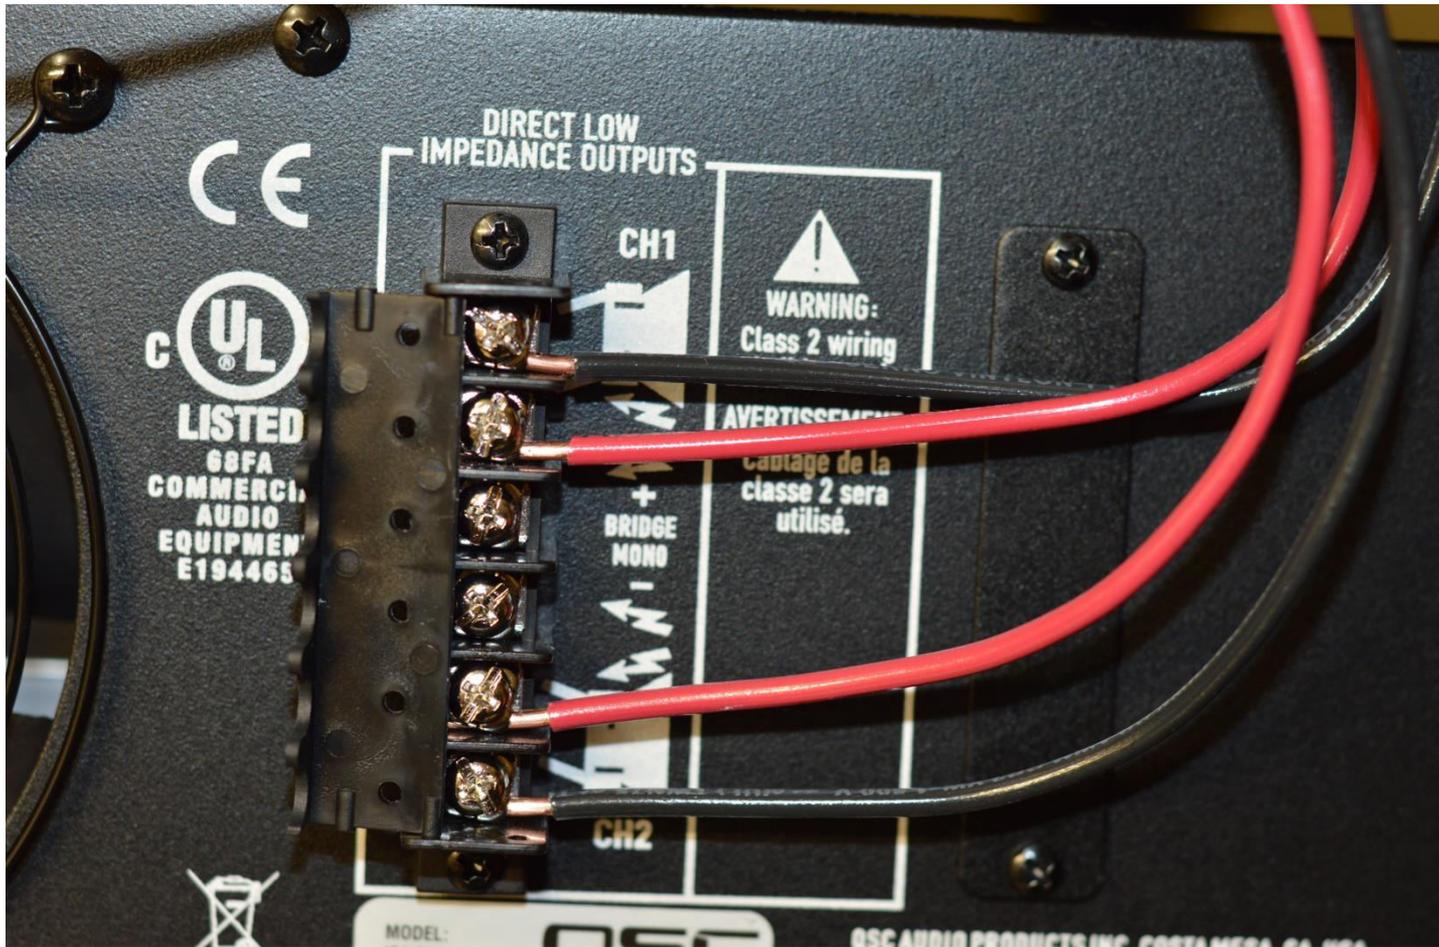


Green Ground Wire

Plug in Green European Terminal Block Connector in bottom hole, tighten small screw.

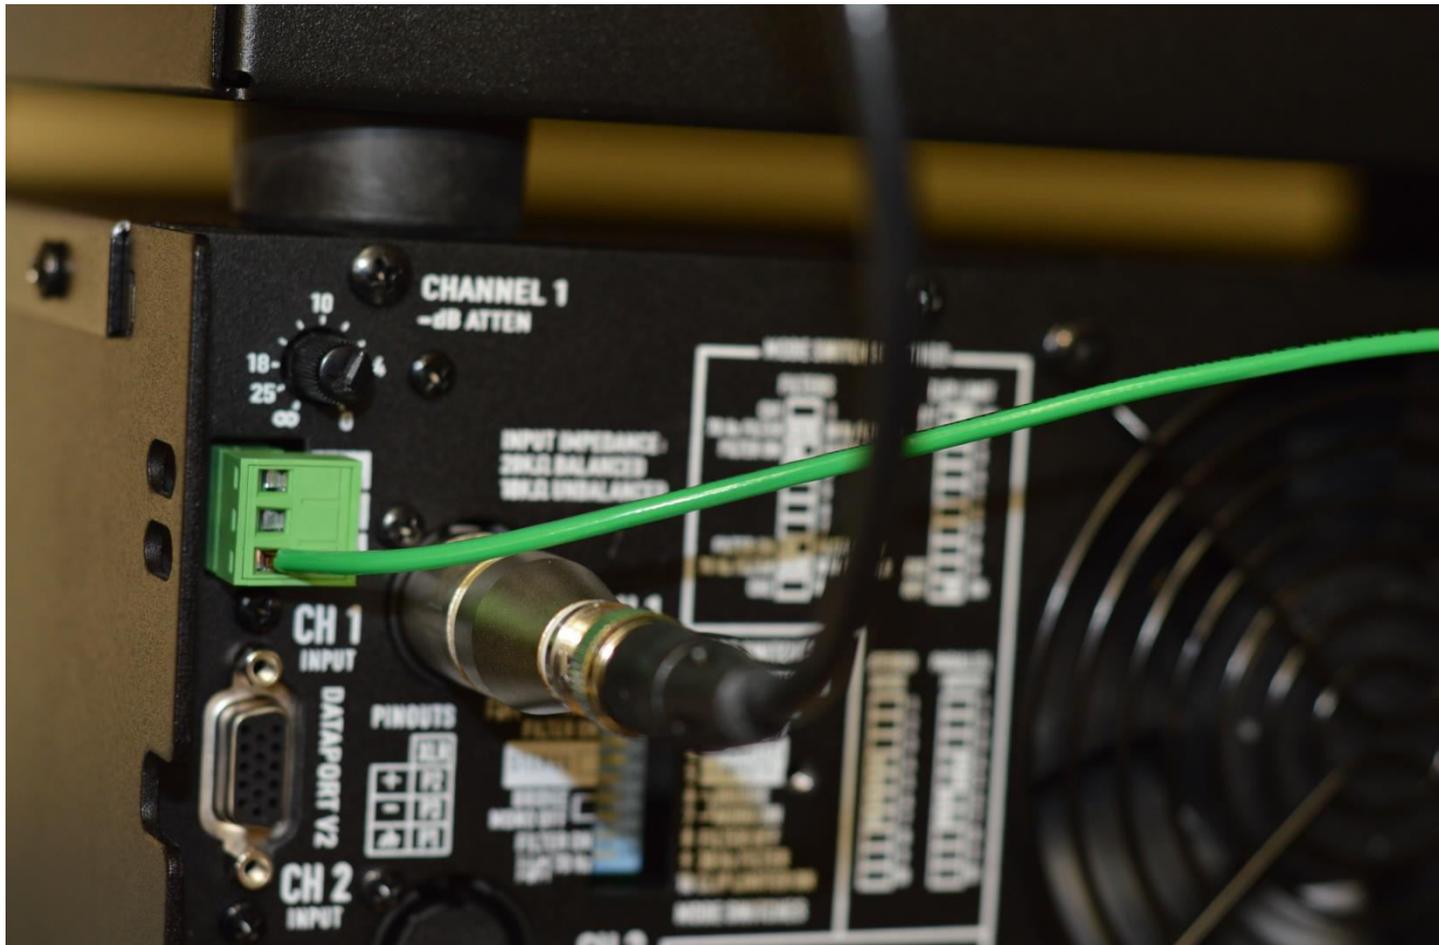


Mode Switches

4 & 5 are to the right, all others are to the left

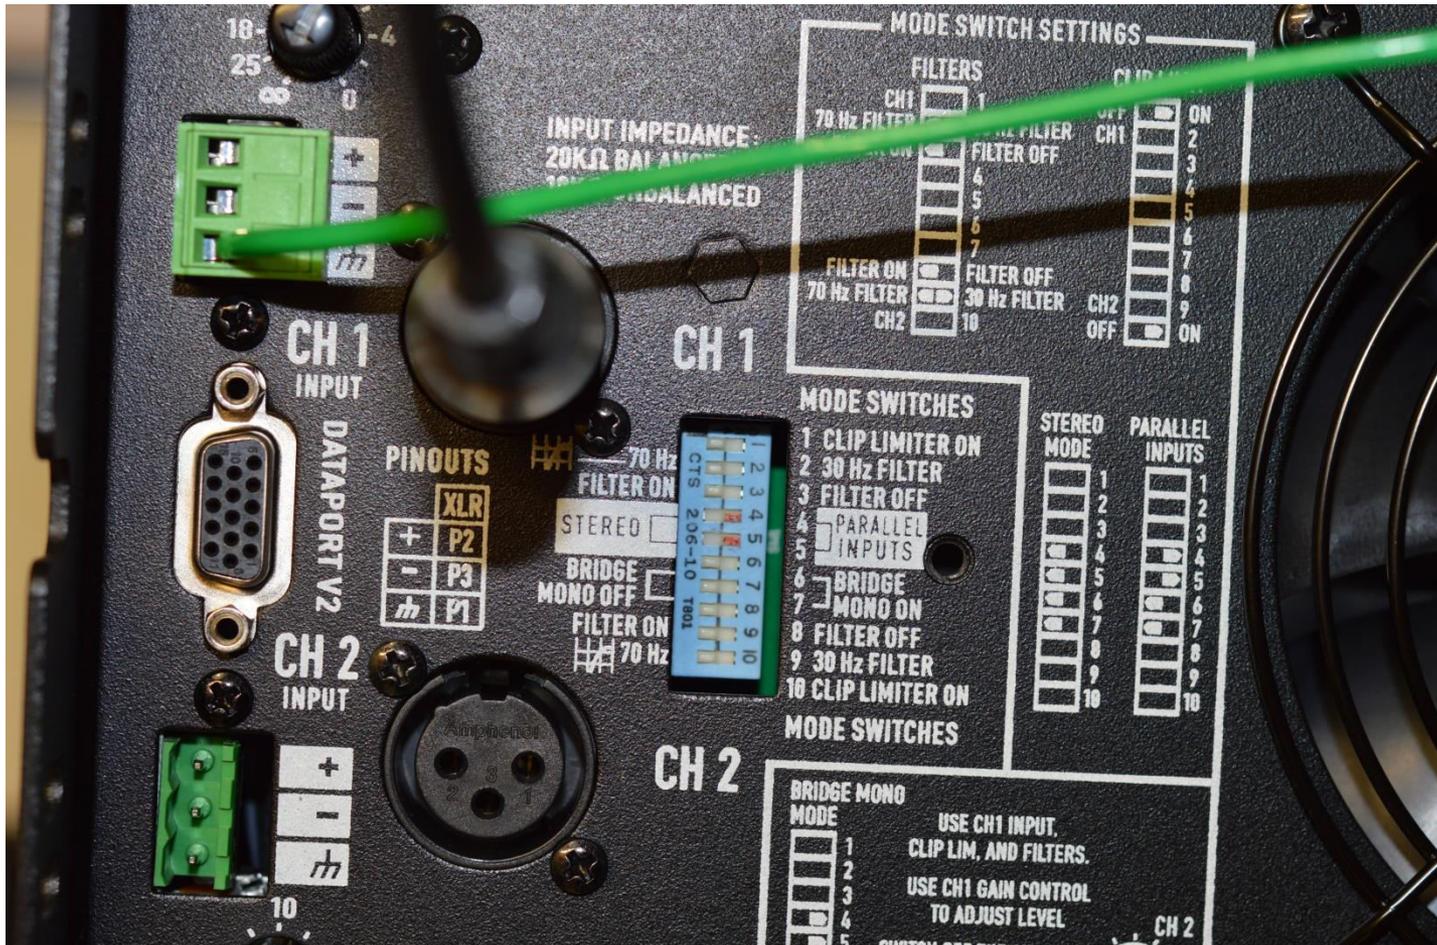

Cord from Frequency Generator

Plug one end of cord into outside (right) connection on frequency generator
Attach adaptor to end of cord and plug into Channel 1 XLR 3 pin connection

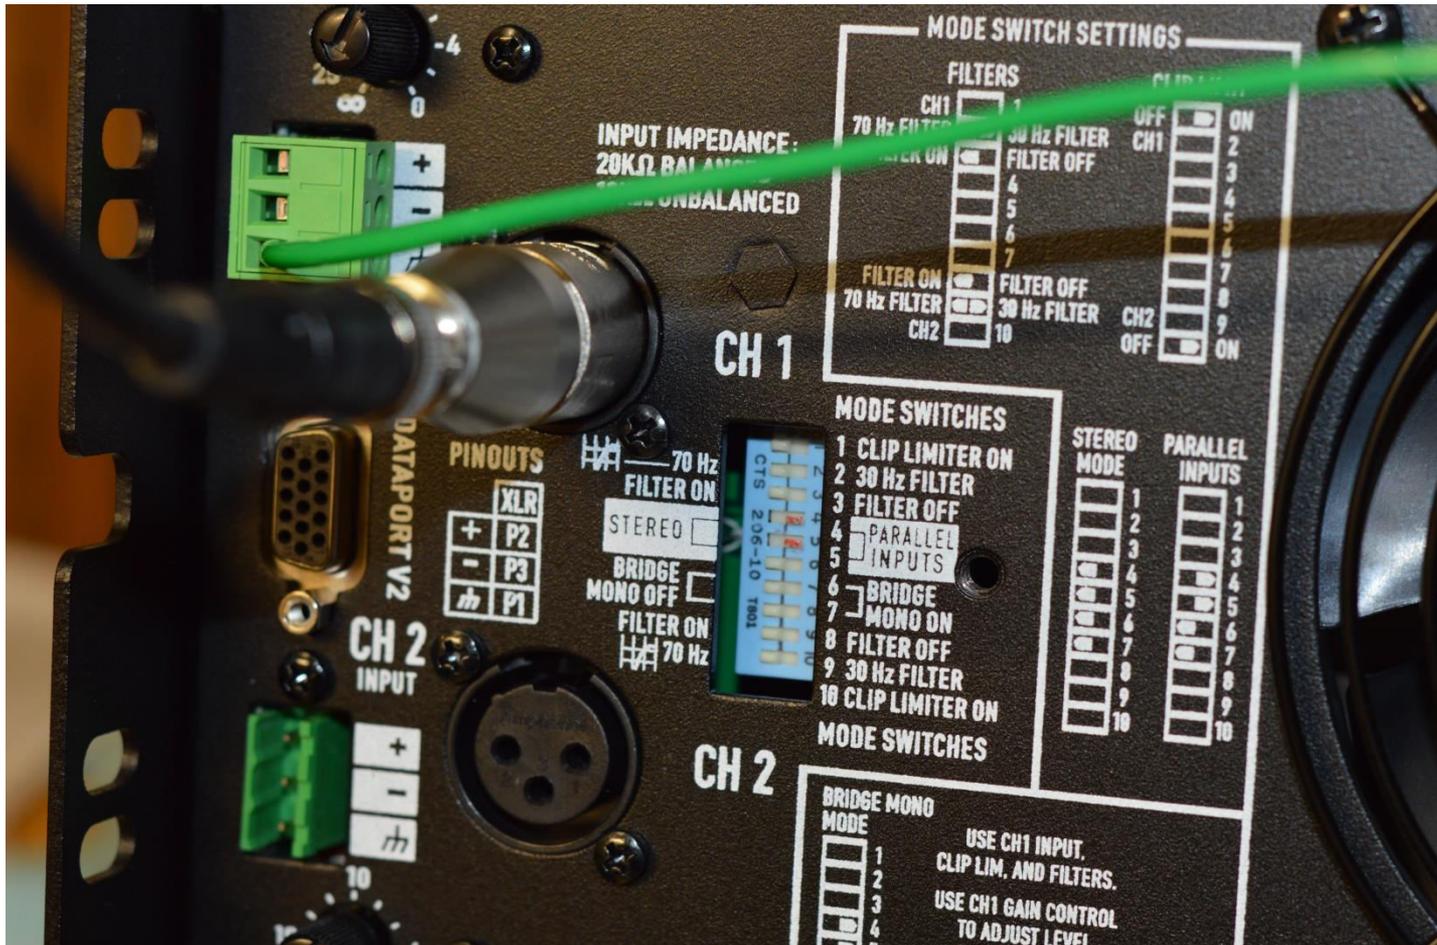

Gain Knobs (-db ATTEN)

Channel 1 and Channel 2 gain knobs to be set at minimum (counter clock wise) before use, set to maximum for use

