

Cidox[®]

High Level Chlorine Dioxide Tablets & Powders

Effective against bacteria, fungi, spores and viruses

Cidox[®] is the preferred high level disinfectant for applications around the world, being safer, more effective, more convenient and cheaper to use than chlorine (bleach) based products.

Based on the powerful action of Chlorine Dioxide (ClO₂), Cidox[®] has unrivalled disinfecting power, low corrosion rates, greater selectivity to target biological contaminants, and significantly fewer environmental side effects than other biocides. It is a fast-acting, highly convenient, and more accurate alternative to liquid bleach and chlorine tablets.

Cidox[®] delivers all of the power of ClO₂ in an easy to use package, and requires no dosing systems or two-part mixing to apply. Available in a convenient range of tablets and pre-packed pouches, complicated dilution rates and messy liquid mixing are a thing of the past.



EASY TO USE

Simply add tablet or powder to required volume of water, no dilution calculations are required. Two different reusable dilution bottles are available.



POWERFUL

Suitable for use in high risk environments. Much lower dose rates and surface corrosion than other oxidising biocides.



MULTI-PURPOSE

High level disinfectant, proven to be effective against bacteria, fungi and spores.


Use biocides safely. Always read the label and product information before use. Scotmas are accredited under ICH Q7, Pharmaceutical Good Manufacturing Practice (GMP) for the manufacture of active pharmaceutical ingredients.

HOW IT WORKS

Chlorine Dioxide (ClO_2) is chemically dis-similar and acts differently to chlorine. The ClO_2 disinfecting molecule produced by Cidox® is not sensitive to high pH environments, and has more than 2.6 times the oxidation capacity of chlorine and other commonly used disinfectants.

ClO_2 has low oxidation strength, meaning that its biocidal power is not wasted on attacking inert organic contamination, which in the case of chlorine leads to the formation of environmentally hazardous chlorinated organic compounds, such as Trihalomethane (THM) and Haloacetic Acids (HAA). ClO_2 allows for more accurate application as the biocide is targeted where it is needed most.



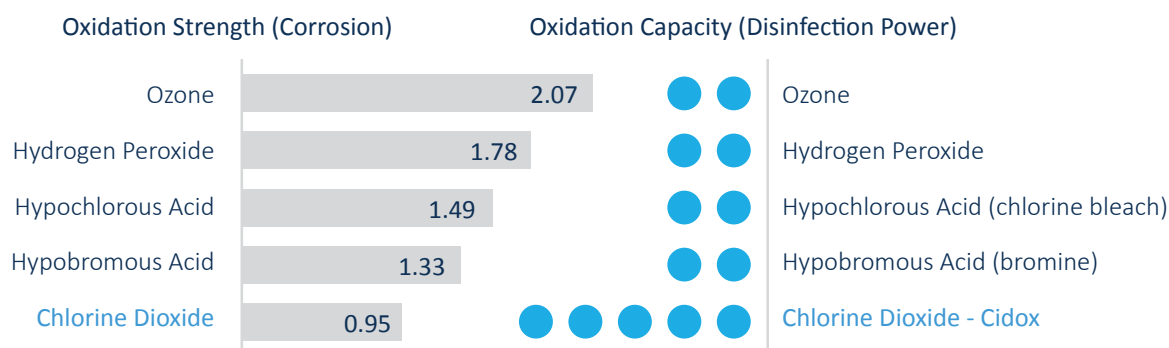

Cidox® offers the ideal balance of high level disinfection strength and selectivity, and is effective against the widest range of pathogens, in the most challenging environments.



PROVEN PERFORMANCE

Cidox® is a reliable high-level disinfectant with proven performance, ensuring that low dose rates are required which improves safety and ease of use, whilst minimising environmental impact. Cidox® tablets have been independently proven to pass European Test Standards including EN14476, EN17126, EN13727, EN1276, and EN14348 ensuring:

- > 99.999% kill of test bacteria
- > 99.99% kill of test viruses
- > 99.99% kill of test spores

Image	MPC	Description	Pack Quantity	Case Quantity
	SC016T-100LS	Cidox 100 Disinfectant Tablets with 1L dilution bottle	120 tablets blister packed, 1L dilution bottle	-
	SC016T-100	Cidox 100 Disinfectant Tablets	120 tablets blister packed	-
	SC018T-1LS	Cidox 100+ Cleaning and Disinfectant Tablets with 1L dilution bottle	120 tablets blister packed, 1L dilution bottle	-
	SC018T-100	Cidox 100+ Cleaning and Disinfectant Tablets	120 tablets blister packed	-
	SC016T-500LD	Cidox 500 Disinfectant Tablets with 5L dilution bottle	120 tablets blister packed, 5L dilution bottle	-
	SC016T-500	Cidox 500 Disinfectant Tablets	120 tablets blister packed	-
	SC018T-500LD	Cidox 500+ Cleaning and Disinfectant Tablets with 5L dilution bottle	120 tablets blister packed	-
	SC018T-500	Cidox 500+ Cleaning and Disinfectant Tablets	120 tablets blister packed	-
	SC016T-1000	Cidox 1000 Disinfectant Tablets	120 tablets blister packed	-
	SC015P-11	Cidox Disinfectant Powder Sachet	11g sachet	100 sachets per box
	SC015P-25	Cidox Disinfectant Powder Sachet	25g sachet	50 sachets per box
	SC015P-50	Cidox Disinfectant Powder Sachet	50g sachet	25 sachets per box

Use biocides safely. Always read the label and product information before use. Scotmas are accredited under ICH Q7, Pharmaceutical Good Manufacturing Practice (GMP) for the manufacture of active pharmaceutical ingredients.

Training and Support

Scotmas provide free of charge resources for training and ongoing support.

- A short **video** covering making Cidox® solution and how to use the product effectively
- Information **posters** are available for display adjacent to Cidox® tablets or in other suitable locations
- **Pocket cards** for users, with a quick ready reference guide for the product



Cidox® tablets are supplied in a blister pack,