




# 30" Easy Hook Anchors

## ASSEMBLY MANUAL

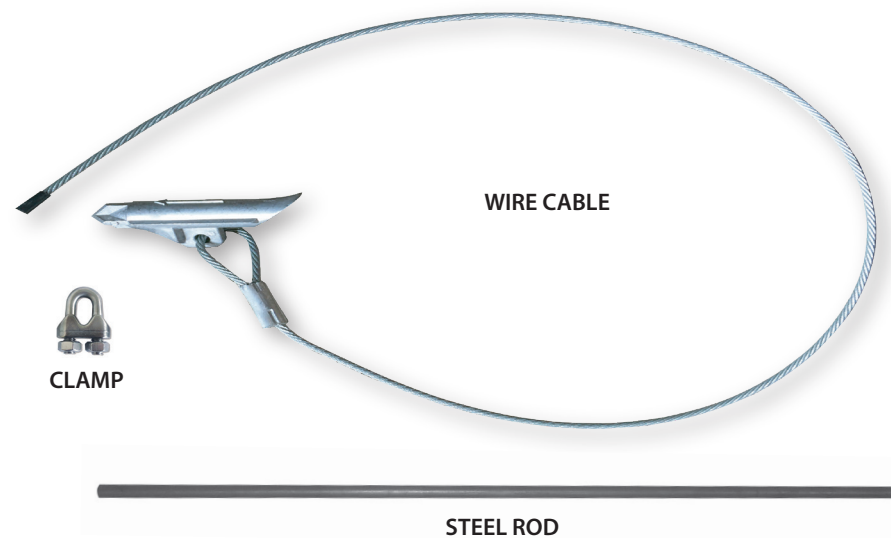

DESCRIPTION	MODEL #
4-30" Easy Hook Anchors	42120
6-30" Easy Hook Anchors	42126

### Parts Alert!

If you have a question or if there are missing parts, please call:

**203-591-9033**

Email: [sheltergiant@neopmail.net](mailto:sheltergiant@neopmail.net)

Monday-Friday 9:00am-5:00pm EST


Missing parts will be sent to you via courier.

**DO NOT RETURN TO THE STORE!**

# 30" Easy Hook Anchors



Please read instructions fully before beginning assembly.

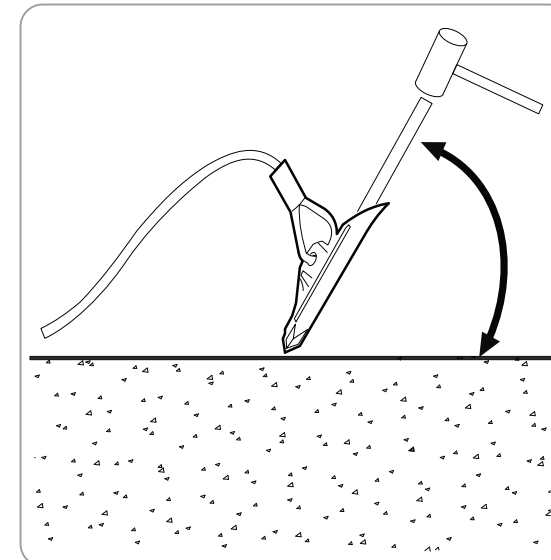


### Step 1.

Using a sledgehammer (an electric rotary hammer may also be used) and with the provided steel rod drive each anchor into the ground leaving approximately 8 inches of cable exposed above the surface.

The anchors should be located at the four corners of the shelter, and the remaining should be spaced evenly on both sides.


**Drive the anchor into the ground on an angle!**

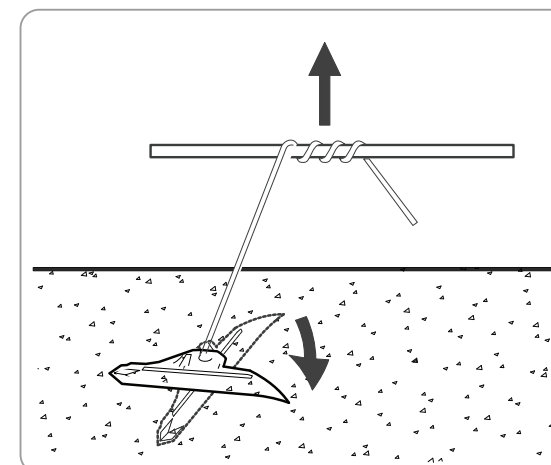

### Step 2.

Remove the driving rod. Wrap the cable around the rod and pull up to set the anchor.

Make sure the anchor is firmly set in the ground.

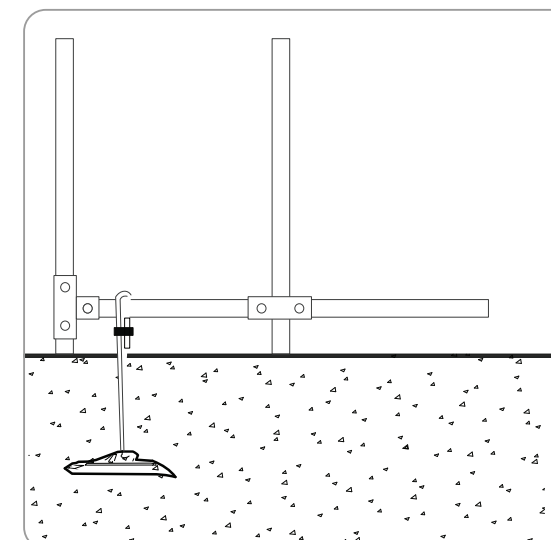

### Step 3.

After the anchor is firmly set, wrap the cable around the shelter rail and clamp with the provided clamps.

**BE SURE TO TIGHTEN THE SLACK FROM THE CABLE**