

# Handicare 4000 stairlift

FOR CURVED STAIRCASES



## A Twin-Rail Design for a Tight Fit Around Bends and Curves

The Handicare 4000 stairlift makes it easy to eliminate the barrier of stairs. The twin-rail design fits tightly to the wall and around bends to maximize the available space on the stairs. Your custom stairlift is designed with our industry leading photo measuring system – including the option to see how it will look on your stairs before you buy it. If your stairs feature a change in direction, pie-shaped stairs, or you would like to add out-of-the-way parking for your stairlift, the Handicare 4000 can be an ideal solution for you.



The custom-made travel rail is fabricated in North America to the precise measurements of your stairs creating a close fit to your staircase with optional out-of-the-way parking.

# Handicare 4000 | Twin-Rail Curved Stairlift

Comfort, style and fit matter. That's why we have a selection of seat options to complement your home design and your mobility needs. See back page for chair measurements for each seat, including armrest width.



### Simplicity

A classic look with an easy-to-clean leatherette finish (in sand) and manual fold-up seat, armrests, footrest and swivel.



### Style

A polished design (in vanilla) that's built for comfort. Perfect to pair with power swivel and power footrest options.



### Smart

An endless array of options and upgrades to satisfy all needs and personal tastes.



### Perch

Ideal for those with knee or hip problems, the raised seat and reduced seat depth allow you to ride slightly standing.



### Outdoor

Specialized UV-protected upholstery (in slate) provides longevity outdoors without fading or cracking.

## Color Options

### Seat Colors



### Standard Rail Colors



Custom rail colors available at additional charge



## Power Up Convenience

### Power Folding Footrest

Choose the powered footrest to eliminate bending down to fold and unfold the footrest.

### Power Swivel

With a simple toggle of a switch, the seat turns so you're safely facing the top landing and not the staircase when getting up from the lift.

### Power Folding Hinge

If you have an open area or doorway at the base of the stairs, the power hinge keeps the area free and clear of tripping hazards.

◀ Shown left

see **before**  
you buy



### Home Assessment

Your local authorized dealer will conduct a home assessment that includes precision photo measuring with our unique PS4D system to ensure a perfect fit. Our leading edge system shows you in 3D how the stairlift will look on your staircase – before you place your order!

### Fabrication and Installation

Our engineers create a computer-aided drawing for custom fabrication in our North American factory. The standard capacity stairlift features fewer floor stanchions than other curved stairlifts for a sleeker appearance. Installation by your local dealer takes a few hours to a full day.

### More Features

#### Twin Rail

The design of the double rail system creates a close fit to the wall or side railing, leaving maximum space on the stairs. Turns and parking features are also tightly curved for a less intrusive appearance.

#### Safety Counts

The Handicare 4000 includes a retractable seatbelt, overspeed brake and obstruction sensor system on the footrest and carriage.

#### Battery Powered

With charging stations at the top and bottom landing, your stairlift is always powered and will make several trips up and down during a power outage.

#### Operation Ease

The armrest toggles are easy to use, along with two remote controls so you can call the lift from the top or bottom of the stairs.

#### Parking Options

Add a parking station to keep your stairlift out of the way when not in use.

*Shown right* ▶




# Handicare 4000 | Twin-Rail Curved Stairlift

## Dimensions

### Style and Simplicity Seats\*

- A** 5" (124 mm)
- B** 15.25" (390 mm)
- C** 17" (430 mm)
- D** 15.75" (400 mm)
- E** 18.5–21.75" (470–550 mm)
- F** 2.75" (70 mm)

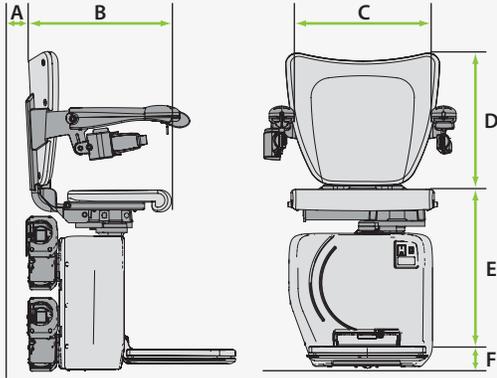

\* Style seat diagram shown above


## Specifications

<b>Applications</b>	Residential, commercial <sup>1</sup> , indoor, outdoor <sup>2</sup>
<b>Capacity</b>	300 lb (136 kg) optional 350 lb (160 kg)
<b>Nominal Speed</b>	23 ft/min (0.12 m/s), 12 ft/min (0.06 m/s) through curves
<b>Drive</b>	Rack and pinion
<b>Motor</b>	0.6 hp, 24V (DC) power that charges on standard household power
<b>Fold-up Depth<sup>3</sup></b>	16" (405 mm)
<b>Fold-out Depth<sup>3</sup></b>	27.4" (695 mm) 25.75" (655 mm), with offset footrest
<b>Range of Incline</b>	0° to 56°
<b>Warranty</b>	24 months parts and limited lifetime on rail and powertrain <sup>4</sup>
<b>Standard Features</b>	Retractable seat belt, emergency stop button, obstruction sensors, non-slip footrest, battery powered for use during power failure, two remote controls, armrest control, keyed switch to prevent unauthorized use

<sup>1</sup>commercial applications available only in the USA, <sup>2</sup>outdoor application available for moderate climates, <sup>3</sup>at level landing (typical dimensions), <sup>4</sup>see dealer for complete details


### Smart and Outdoor Seats

- A** 5" (124 mm)
- B** 14.25–16.75" (360–425 mm)
- C** 16.25–20" (410–510 mm)
- D** 18" (455 mm)
- E** 19.25–23.25" (490–590 mm)
- F** 2.75" (70 mm)

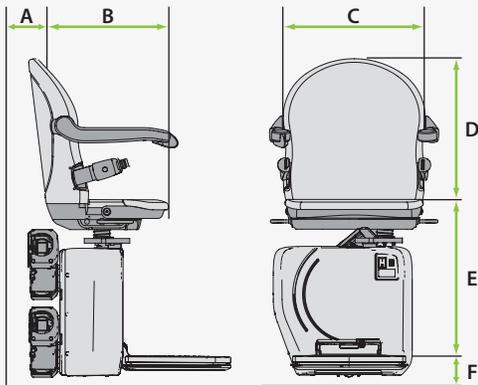

### Perch Seat

- A** 5" (124 mm)
- B** 9.72" (247 mm)
- C** 16.25–20" (410–510 mm)
- D** 18" (455 mm)
- E** 24.5–29.5" (625–750 mm)
- F** 2.75" (70 mm)

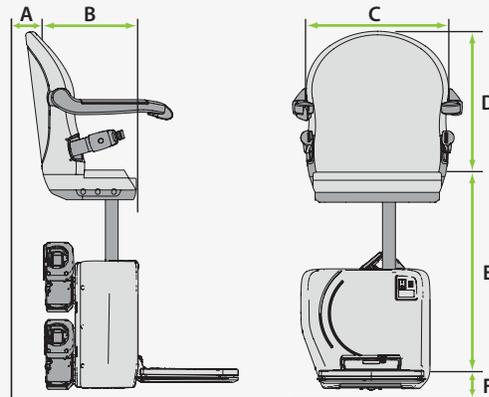

Please note that all dimensions can vary slightly due to specific site installations and adjustments.

1.888.333.5023 [savariahomeaccess.com](http://savariahomeaccess.com)

Authorized Dealer:

Savaria is a global leader in accessibility. We design and manufacture reliable commercial accessibility elevators, home elevators, wheelchair lifts and Handicare stairlifts. All of our products are made with the goal of helping people move – whether that's to overcome mobility challenges or to simply make life easier.