

VERSICRETE™ SENSU Finish showcases delicate, sweeping lines reminiscent of a traditional Japanese folding fan, creating a refined, flowing effect. Crafted using troweling techniques, it forms subtle, elegant waves on the Versicrete surface. This hand-troweled, five-component cementitious polymeric blend comprising microcement, polymers, ceramics, and pigments, adheres seamlessly to a variety of substrates, including concrete, self-leveling screeds, ceramic tile, marble, stone, plywood, and drywall.

Applications

Versicrete™ SENSU Finish is a material that forms to and refines commercial spaces, furnishings (tables, counters tops, shelves, etc.), reception areas, showrooms, and residences, as well as acts as a cohesive element between past and present thanks to its material aspect. It also gives added value to every kind of environment, giving an urban and modern look, without sacrificing the functional aspects such as high mechanical strength and ease of cleaning.

Application Options

Waterproofing / Crack suppressing membrane

Substrate Preparation

Flat, level, and rigid substrates are required for the proper application of Versicrete SENSU Finish.

Concrete

The concrete substrate must be dry and properly prepared utilizing mechanical methods to remove laitance, contaminants, adhesives, etc. to achieve a surface profile of CSP3 to CSP4 (as per ICRI guidelines)

Available in 12 standard colors

(Refer to the Color & Finish Options Sheet)

Custom colors are available upon request.



Packaging


- 55 lb / 26 kg container of MC2 Medium microcement
- 2.5 gallon container of MC Color
- 1,5 gallon container of MC SealCoat
- 2.5 gallon container of MC Bond
- 1 gallon (PART A) / 1 quart (PART B) of MC TopCoat

Coverage

Approximately 180 ft² / 16 m²

Shelf Life

6 months when properly stored in unopened containers in a clean, dry environment at temperatures between 50°F and 90°F. Protect from freezing.

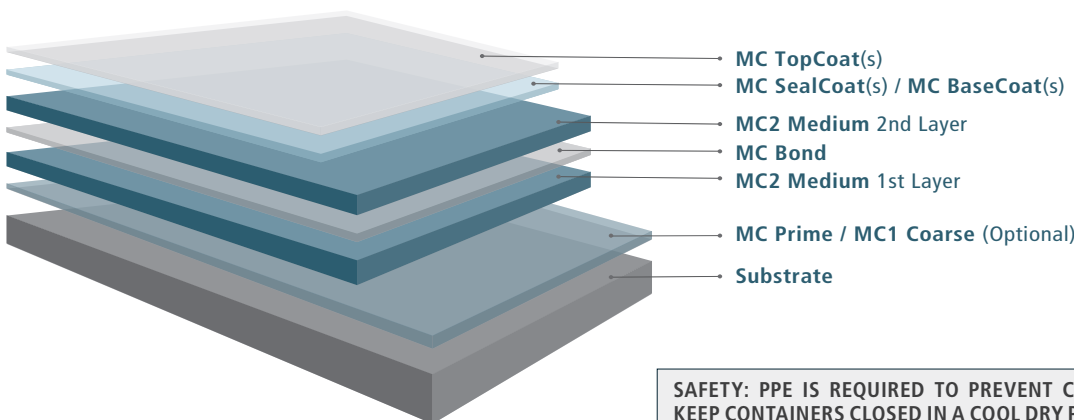

SAFETY: PPE IS REQUIRED TO PREVENT CONTACT WITH SKIN AND EYES. KEEP CONTAINERS CLOSED IN A COOL DRY PLACE. WASH SKIN THOROUGHLY WITH SOAP AND WATER AFTER USE. USE WITH ADEQUATE, GENERAL, AND LOCAL, EXHAUST VENTILATION. IN ABSENCE OF ADEQUATE VENTILATION, USE A PROPERLY FITTED NIOSH RESPIRATOR.