

## 24x10W 4 in 1 LED WALL WASHER LIGHT



## User Instruction



This product manual contains important information about the safe installation and use of this projector.  
Please read and follow these instructions carefully and keep this manual in a safe place for future reference.

# CONTENTS

Channel	Function	No.
1	Dimmer	Linear Dimmer Dark to Bright
2	Strobe	Slow to Fast
3	Function	0-50 DMX 8 Channel Control 51-100 Quick Jump 101-150 Gradual Change 151-200 Pulse Change 201-255 Sound Activated
4	Speed	Slow to Fast
5	Red	Red Linear Dimmer Dark to Bright
6	Green	Green Linear Dimmer Dark to Bright
7	Blue	Blue Linear Dimmer Dark to bright
8	White	White Linear Dimmer Dark to Bright

## 8 DMX Channels

### KEY POINT

Easy to operate, friendly design, no flicker while dimmer. stable quality.  
Applicable to photograph, camera, and TV station as well.

## 1. INSTRUCTION

- Unpacking
- Introduction
- AC Power
- Safety Instruction
- Cleaning

## 2. FEATURE

## 3. SET UP

- 3-Pin to 5-Pin Conversion Chart
- Setting up a DMX Serial Data Link
- Master/Slave Fixture Linking

## 4. OPERATING INSTRUCTIONS

- Operating modes
- Product overview
- Program Mode & Sound Mode
- Master-Slave Operation
- Master-Slave Connections and Settings
- DMX Mode

## 5. DMX CHANNEL SUMMARY

## LED WALL WASHER LIGHT

## Introduction

**Unpacking:** Thank you for purchasing our products. Every unit has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your fixture for any damage and be sure all accessories necessary to operate the unit has arrived intact. In the case damage has been found or parts are missing, Save the carton and all packing materials. In the event a fixture must be returned to the factory. It is important that the fixture be returned in the original factory box and packing.

**Introduction:** The unit is a DMX intelligent LED par can. This light can be used in a stand alone mode or connected in a Master/Slave configuration. The unit can also be controlled via DMX controller. This light has four operating modes: Sound Active mode, stand alone mode, Master/Slave and DMX control mode.

**AC Power:** This fixture has an auto-switching power supply that can accommodate a wide range of input voltages. The only thing necessary to do before powering on the unit is to make sure the line voltage you are applying is within the range of accepted voltages. This fixture will accommodate between 90V and 240V AC. All fixtures must be powered directly off a switched circuit and cannot be run off a rheostat (variable resistor) or dimmer circuit. Even if the rheostat or dimmer channel is used solely for a 0-100% switch.

### Safety Instructions:

Please read these instructions carefully, which includes important information about the installation, usage and maintenance of this product.

- To reduce the risk of electrical shock or fire, do not expose this unit rain or moisture
- Be sure that the local power outlet match that of the required voltage for your unit.


## Menu Setting:

No.	Display	Function
1	D001	8 chs DMX Starting Address (001-512)
2	A001	4 chs DMX Starting Address (001-512)
3	CC50	Quick Change 8 Color Chase (Speed 1-99)
4	CP50	Gradual Change 8 Color Chase (Speed 1-99)
5	DE50	Pulse Change 8 Color Chase (Speed 1-99)
6	R255	Red color Changing, (000-255) Change the color by B or C button
7	G255	Green color Changing, (000-255) Change the color by B or C button
8	B255	Blue color Changing, (000-255) Change the color by B or C button
9	W255	White color changing, (000-255) Change the color by B or C button

## 4 Dmx Channels

Channel	Function	No.
CH1	RED	Red dimmer, (0-255) linear dimming, the brightness is from dark to bright.
CH2	Green	Green dimmer, (0-255) linear dimming, the brightness is from dark to bright.
CH3	Blue	Blue dimmer, (0-255) linear dimming, the brightness is from dark to bright.
CH4	White	White dimmer, (0-255) linear dimming, the brightness is from dark to bright.

1. Connect the (male) 3 pin connector side of the controller.
2. Connect the end of the cable coming from the to the input connector of the next fixture consist
3. Then, proceed to connect from the output as s so on.

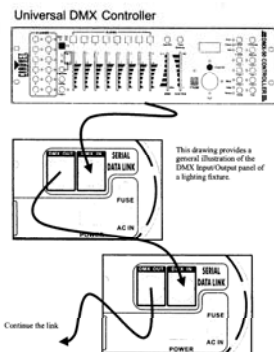

### Master/Slave Fixture Linking:

1. Connect the (male) 3 pin connector side of the DMX cable to the output(female) 3 pin connector of the first fixture.
2. Connect the end of the cable coming from the first fixture which will have a (female) 3 pin connector to the input connector of the next fixture consisting of a (male) 3 pin connector. Then, proceed to connect from the output as stated above to the input of the following fixture and so on.

### DMX MODE:

Operating through a DMX controller give the user the freedom to create their own programs tailored to their own individual needs.

1. This function will allow you to control each individual fixture's traits with a standard DMX 512 controller.
2. To run your fixture in DMX mode, plug in the fixture via the XLR

connections to any standard DMX controller. Press **MODE** button till **DMX MODE** display, and press **SET UP** button to enter the DMX address and DMX mode selection, and then press **UP** or **DOWN** buttons to adjust the DMX address and DMX mode. The channels value refers to the following channel summary.

## LED WALL WASHER LIGHT DMX Channels Summary

- Do not attempt to operate this unit if the power cord has been frayed or broken. Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short.
- Disconnect from main power before making any type of connection.
- Do not remove the cover under any conditions. There are no user serviceable parts inside.
- Never operate this unit when it's cover is removed.
- Never plug this unit in to a dimmer pack
- Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- Do not attempt to operate this unit, if it becomes damaged.
- This unit is intended for indoor use only, use of this product out` doors voids all warranties.
- During long periods of non-use, disconnect the unit's main power.
- Always mount this unit in safe and stable matter.
- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the point they exit from the unit.
- Cleaning -The fixture should be cleaned only as recommended by the manufacturer. See page 3 for cleaning details.
- Heat -The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- The fixture should be serviced by qualified service personnel when:
  - A. The power-supply cord or the plug has been damaged.
  - B. Objects have fallen, or liquid has been spilled into the appliance.
  - C. The appliance has been exposed to rain or water.
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance.

**Caution!** There are no user serviceable parts inside this unit. Do not attempt any repairs yourself, doing so will void your manufacturer warranty. In the unlikely event your unit may require service please contact us.

**Cleaning:** Due to fog residue, smoke, and dust cleaning the internal and external optical lenses must be carried out periodically to optimize light output.

1. Use normal glass cleaner and a soft cloth to wipe down the outside casing.
2. Clean the external optics with glass cleaner and a soft cloth every 20 days.
3. Always be sure to dry all parts completely before plugging the unit back in.

Cleaning frequency depends on the environment in which the fixture operates (i.e. smoke, fog residue, dust, dew).

## LED WALL WASHER LIGHT Features

- Voltage: AC 100V-240V / 50-60Hz
- Power: 250W
- Lamp: 24pcs 10W RGBW 4 in 1 Quod-color LEDs
- Life time:>100 thousand hours
- Function Effect: dimmer, strobe, eotic, gradual change
- Cooling mode: Natural Convection
- Flicker free for television and film
- Control: DMX512, Master-slave, stand-alone
- Channel: 4 / 8 CH
- IP Rating: IP65 Waterproof
- DMX signal Input/Output: 3-pin XLR

Feature: Cast Aluminum case, nice and wide application,less power consumption,high brightness,stable performance,long life

Function: Color combination changer of the latest hybrid technology and excellent built-in program, strobe, gradual, pulse, cycle, color selection, music activated, electronic linear Dimmer

## LED WALL WASHER LIGHT Set Up

**Notice:** Be sure to follow figures two and three when making your own cables. Do not use the ground lug on the XLR connector. Do not connect the cable's shield conductor

to the ground lug or allow the shield conductor to come in contact with the XLR's outer casing. Grounding the shield could cause a short circuit and erratic behavior.




Figure 1

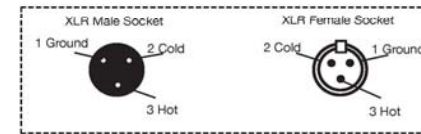


Figure 2

Figure 3

XLR Pin Configuration
Pin 1 = Ground
Pin 2 = Data Compliment(negative)
Pin 3 = Data True(positive)

### 3-Pin to 5-Pin Conversion Chart:

**Note!** If you use a controller with a 5 pin DMX output connector, you will need to use a 5 pin to 3 pin adapter. The chart below details a proper cable conversion:

#### 3-Pin to 5-Pin Conversion

Conductor	3 Pin Female(Output)	5 Pin Male(Input)
Ground/Shield	Pin 1	Pin 1
Data(-) signal	Pin 2	Pin 2
Data(+) signal	Pin 3	Pin 3
Not Used		Do not use
Not Used		Do not use

### Setting up a DMX Serial Data Link: