

**PILOT'S
OPERATING
HANDBOOK**

1981




**MODEL
T182**

**TURBO
SKYLANE**

PILOT'S OPERATING HANDBOOK

and

FAA APPROVED AIRPLANE FLIGHT MANUAL

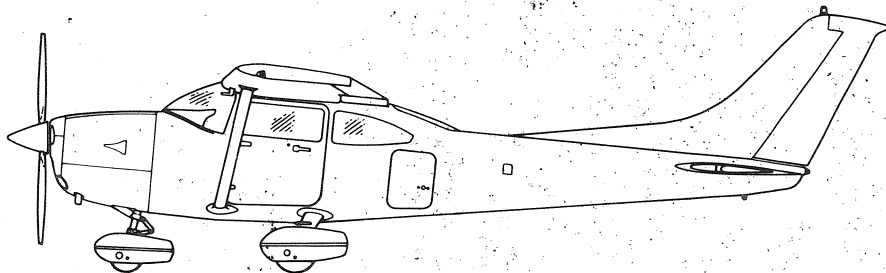

CESSNA AIRCRAFT COMPANY

1981 MODEL T182

THIS DOCUMENT MUST BE
CARRIED IN THE AIRPLANE
AT ALL TIMES.

Serial No. 18267789

Registration No. N6115N

THIS HANDBOOK INCLUDES THE MATERIAL REQUIRED TO BE
FURNISHED TO THE PILOT BY CAR PART 3 AND CONSTITUTES
THE FAA APPROVED AIRPLANE FLIGHT MANUAL.

COPYRIGHT © 1980

CESSNA AIRCRAFT COMPANY
WICHITA, KANSAS, USA

THIS MANUAL WAS PROVIDED FOR THE AIRPLANE
IDENTIFIED ON THE TITLE PAGE ON _____.
SUBSEQUENT REVISIONS SUPPLIED BY CESSNA
AIRCRAFT COMPANY MUST BE PROPERLY IN-
SERTED.

CESSNA AIRCRAFT COMPANY, PAWNEE DIVISION

This is a duplicate manual issued to replace one
originally provided for the airplane identified on the
cover page on 10-24-80. All revisions, if
any, have been incorporated as of

12-5-88

Subsequent revisions supplied by Cessna Aircraft
Company must be properly inserted.

Del Baha

Cessna Aircraft Co.

REVISION

TURBO SKYLANE 1981 MODEL T182 PILOT'S OPERATING HANDBOOK

**REVISION 2
4 FEBRUARY 1982**

D1197R2-13PH

**INSERT THE FOLLOWING REVISED PAGES
INTO BASIC PILOT'S OPERATING HANDBOOK**

CONGRATULATIONS

Welcome to the ranks of Cessna owners! Your Cessna has been designed and constructed to give you the most in performance, economy, and comfort. It is our desire that you will find flying it, either for business or pleasure, a pleasant and profitable experience.

This Pilot's Operating Handbook has been prepared as a guide to help you get the most pleasure and utility from your airplane. It contains information about your Cessna's equipment, operating procedures, and performance; and suggestions for its servicing and care. We urge you to read it from cover to cover, and to refer to it frequently.

Our interest in your flying pleasure has not ceased with your purchase of a Cessna. World-wide, the Cessna Dealer Organization backed by the Cessna Customer Services Department stands ready to serve you. The following services are offered by most Cessna Dealers:

- THE CESSNA WARRANTY, which provides coverage for parts and labor, is available at Cessna Dealers worldwide. Specific benefits and provisions of warranty, plus other important benefits for you, are contained in your Customer Care Program book, supplied with your airplane. Warranty service is available to you at authorized Cessna Dealers throughout the world upon presentation of your Customer Care Card which establishes your eligibility under the warranty.
- FACTORY TRAINED PERSONNEL to provide you with courteous expert service.
- FACTORY APPROVED SERVICE EQUIPMENT to provide you efficient and accurate workmanship.
- A STOCK OF GENUINE CESSNA SERVICE PARTS on hand when you need them.
- THE LATEST AUTHORITATIVE INFORMATION FOR SERVICING CESSNA AIRPLANES, since Cessna Dealers have all of the Service Manuals and Parts Catalogs, kept current by Service Letters and Service News Letters, published by Cessna Aircraft Company.

We urge all Cessna owners to use the Cessna Dealer Organization to the fullest.

A current Cessna Dealer Directory accompanies your new airplane. The Directory is revised frequently, and a current copy can be obtained from your Cessna Dealer. Make your Directory one of your cross-country flight planning aids; a warm welcome awaits you at every Cessna Dealer.

PERFORMANCE - SPECIFICATIONS

SPEED:

| | |
|--|-----------|
| Maximum at 20,000 Ft | 168 KNOTS |
| Cruise, 75% Power at 20,000 Ft | 158 KNOTS |
| Cruise, 75% Power at 10,000 Ft | 145 KNOTS |

CRUISE: Recommended lean mixture with fuel allowance for
engine start, taxi, takeoff, climb and 45 minutes
reserve.

| | | |
|--------------------------------------|-------|---------|
| 75% Power at 20,000 Ft | Range | 745 NM |
| 88 Gallons Usable Fuel | Time | 4.9 HRS |
| 75% Power at 10,000 Ft | Range | 725 NM |
| 88 Gallons Usable Fuel | Time | 5.1 HRS |
| Maximum Range at 20,000 Ft | Range | 885 NM |
| 88 Gallons Usable Fuel | Time | 7.3 HRS |
| Maximum Range at 10,000 Ft | Range | 920 NM |
| 88 Gallons Usable Fuel | Time | 8.4 HRS |

| | |
|---|-----------|
| RATE OF CLIMB AT SEA LEVEL | 965 FPM |
| CERTIFICATED MAXIMUM OPERATING ALTITUDE | 20,000 FT |

TAKEOFF PERFORMANCE:

| | |
|--|---------|
| Ground Roll | 790 FT |
| Total Distance Over 50-Ft Obstacle | 1475 FT |

LANDING PERFORMANCE:

| | |
|--|---------|
| Ground Roll | 590 FT |
| Total Distance Over 50-Ft Obstacle | 1350 FT |

STALL SPEED (KCAS):

| | |
|---------------------------------|----------|
| Flaps Up, Power Off | 54 KNOTS |
| Flaps Down, Power Off | 49 KNOTS |

MAXIMUM WEIGHT:

| | |
|-------------------|----------|
| Ramp | 3112 LBS |
| Takeoff | 3100 LBS |
| Landing | 2950 LBS |

STANDARD EMPTY WEIGHT:

| | |
|----------------------------|----------|
| Turbo Skylane | 1725 LBS |
| Turbo Skylane II | 1781 LBS |

MAXIMUM USEFUL LOAD:

| | |
|----------------------------|----------|
| Turbo Skylane | 1387 LBS |
| Turbo Skylane II | 1331 LBS |

| | |
|-----------------------------|---------|
| BAGGAGE ALLOWANCE | 200 LBS |
|-----------------------------|---------|

| | |
|--------------------------------------|------|
| WING LOADING: Pounds/Sq Ft | 17.8 |
|--------------------------------------|------|

| | |
|------------------------------------|------|
| POWER LOADING: Pounds/HP | 13.2 |
|------------------------------------|------|

| | |
|--------------------------------|--------|
| FUEL CAPACITY: Total | 92 GAL |
|--------------------------------|--------|

| | |
|------------------------|-------|
| OIL CAPACITY | 9 QTS |
|------------------------|-------|

| | |
|--|-------------|
| ENGINE: Turbocharged Avco Lycoming | O-540-L3C5D |
| 235 BHP at 2400 RPM | |

| | |
|--|-------|
| PROPELLER: 2-Bladed Constant Speed, Diameter | 82 IN |
|--|-------|

Performance with an optional 3-bladed propeller is essentially the same as shown above.

The above performance figures are based on the indicated weights, standard atmospheric conditions, level hard-surface dry runways, and no wind. They are calculated values derived from flight tests conducted by the Cessna Aircraft Company under carefully documented conditions and will vary with individual airplanes and numerous factors affecting flight performance.

COVERAGE

The Pilot's Operating Handbook in the airplane at the time of delivery from Cessna Aircraft Company contains information applicable to the 1981 Model T182 airplane designated by the serial number and registration number shown on the Title Page of this handbook. This information is based on data available at the time of publication.

REVISIONS

Changes and/or additions to this handbook will be covered by revisions published by Cessna Aircraft Company. These revisions are distributed to all Cessna Dealers and to owners of U. S. Registered aircraft according to FAA records at the time of revision issuance.

Revisions should be examined immediately upon receipt and incorporated in this handbook.

NOTE

It is the responsibility of the owner to maintain this handbook in a current status when it is being used for operational purposes.

Owners should contact their Cessna Dealer whenever the revision status of their handbook is in question.

A revision bar will extend the full length of new or revised text and/or illustrations added on new or presently existing pages. This bar will be located adjacent to the applicable revised area on the outer margin of the page.

All revised pages will carry the revision number and date on the applicable page.

The following Log of Effective Pages provides the dates of issue for original and revised pages, and listing of all pages in the handbook. Pages affected by the current revision are indicated by an asterisk (*) preceding the pages listed.

LOG OF EFFECTIVE PAGES

Dates of issue for original and revised pages are:

Original 29 August 1980
Revision 1 2 March 1981
Revision 2 4 February 1982

| Page | Date | Page | Date |
|-----------------------|-----------------|----------------------|----------------|
| Title | 29 August 1980 | 4-1 thru 4-11 | 29 August 1980 |
| Assignment Record ... | 29 August 1980 | 4-12 Blank | 29 August 1980 |
| i thru ii | 29 August 1980 | 4-13 thru 4-22 | 29 August 1980 |
| *iii thru iv | 4 February 1982 | 4-23 | 2 March 1981 |
| v | 2 March 1981 | 4-24 Blank | 29 August 1980 |
| vi Blank | 2 March 1981 | 5-1 | 29 August 1980 |
| 1-1 thru 1-9 | 29 August 1980 | 5-2 Blank | 29 August 1980 |
| 1-10 Blank | 29 August 1980 | 5-3 thru 5-8 | 29 August 1980 |
| 2-1 | 29 August 1980 | 5-9 | 2 March 1981 |
| 2-2 Blank | 29 August 1980 | 5-10 thru 5-31 | 29 August 1980 |
| 2-3 thru 2-11 | 29 August 1980 | 5-32 Blank | 29 August 1980 |
| 2-12 Blank | 29 August 1980 | 6-1 | 29 August 1980 |
| 3-1 thru 3-7 | 29 August 1980 | 6-2 Blank | 29 August 1980 |
| 3-8 | 2 March 1981 | 6-3 thru 6-13 | 29 August 1980 |
| 3-9 thru 3-13 | 29 August 1980 | 6-14 Blank | 29 August 1980 |
| *3-14 thru 3-15 | 4 February 1982 | 6-15 thru 6-29 | 29 August 1980 |
| 3-16 thru 3-18 | 29 August 1980 | 6-30 Blank | 29 August 1980 |

29 August 1980

Revision 2 - 4 February 1982/D1197-2-13PH-RPC-285-2/82

LOG OF EFFECTIVE PAGES (Continued)

| Page | Date | Page | Date |
|----------------------|----------------|--------------------|----------------|
| 7-1 thru 7-36 | 29 August 1980 | 9-1 thru 9-3 | 29 August 1980 |
| 7-37 | 2 March 1981 | 9-4 Blank..... | 29 August 1980 |
| 7-38 thru 7-42 | 29 August 1980 | | |
| 8-1 | 29 August 1980 | | |
| 8-2 Blank..... | 29 August 1980 | | |
| 8-3 thru 8-17 | 29 August 1980 | | |
| 8-18 Blank..... | 29 August 1980 | | |

NOTE

Refer to Section 9 Table of Contents for supplements applicable to optional systems.

COVERAGE

The Pilot's Operating Handbook in the airplane at the time of delivery from Cessna Aircraft Company contains information applicable to the 1981 Model T182 airplane designated by the serial number and registration number shown on the Title Page of this handbook. This information is based on data available at the time of publication.

REVISIONS

Changes and/or additions to this handbook will be covered by revisions published by Cessna Aircraft Company. These revisions are distributed to all Cessna Dealers and to owners of U. S. Registered aircraft according to FAA records at the time of revision issuance.

Revisions should be examined immediately upon receipt and incorporated in this handbook.

NOTE

It is the responsibility of the owner to maintain this handbook in a current status when it is being used for operational purposes.

Owners should contact their Cessna Dealer whenever the revision status of their handbook is in question.

A revision bar will extend the full length of new or revised text and/or illustrations added on new or presently existing pages. This bar will be located adjacent to the applicable revised area on the outer margin of the page.

All revised pages will carry the revision number and date on the applicable page.

The following Log of Effective Pages provides the dates of issue for original and revised pages, and a listing of all pages in the handbook. Pages affected by the current revision are indicated by an asterisk (*) preceding the pages listed.

LOG OF EFFECTIVE PAGES

Dates of issue for original and revised pages are:

Original..... 29 August 1980

Revision 1..... 2 March 1981

| Page | Date | Page | Date |
|-----------------------|----------------|----------------------|----------------|
| Title | 29 August 1980 | *4-23 | 2 March 1981 |
| Assignment Record ... | 29 August 1980 | 4-24 Blank..... | 29 August 1980 |
| i thru ii | 29 August 1980 | 5-1 | 29 August 1980 |
| *iii thru v | 2 March 1981 | 5-2 Blank..... | 29 August 1980 |
| *vi Blank | 2 March 1981 | 5-3 thru 5-8 | 29 August 1980 |
| 1-1 thru 1-9 | 29 August 1980 | *5-9 | 2 March 1981 |
| 1-10 Blank..... | 29 August 1980 | 5-10 thru 5-31 | 29 August 1980 |
| 2-1 | 29 August 1980 | 5-32 Blank..... | 29 August 1980 |
| 2-2 Blank..... | 29 August 1980 | 6-1 | 29 August 1980 |
| 2-3 thru 2-11 | 29 August 1980 | 6-2 Blank..... | 29 August 1980 |
| 2-12 Blank..... | 29 August 1980 | 6-3 thru 6-13 | 29 August 1980 |
| 3-1 thru 3-7 | 29 August 1980 | 6-14 Blank..... | 29 August 1980 |
| *3-8 | 2 March 1981 | 6-15 thru 6-29 | 29 August 1980 |
| 3-9 thru 3-18 | 29 August 1980 | 6-30 Blank..... | 29 August 1980 |
| 4-1 thru 4-11 | 29 August 1980 | 7-1 thru 7-36 | 29 August 1980 |
| 4-12 Blank..... | 29 August 1980 | *7-37 | 2 March 1981 |
| 4-13 thru 4-22 | 29 August 1980 | 7-38 thru 7-42 | 29 August 1980 |

LOG OF EFFECTIVE PAGES (Continued)

| Page | Date | Page | Date |
|---------------------|----------------|--|----------------|
| 8-1 | 29 August 1980 | 9-4 Blank..... | 29 August 1980 |
| 8-2 Blank..... | 29 August 1980 | NOTE | |
| 8-3 thru 8-17 | 29 August 1980 | Refer to Section 9 Table of Contents for | |
| 8-18 Blank..... | 29 August 1980 | supplements applicable to optional sys- | |
| 9-1 thru 9-3 | 29 August 1980 | tems. | |

TABLE OF CONTENTS

| | SECTION |
|---|---------|
| GENERAL..... | 1 |
| LIMITATIONS..... | 2 |
| EMERGENCY PROCEDURES..... | 3 |
| NORMAL PROCEDURES..... | 4 |
| PERFORMANCE..... | 5 |
| WEIGHT & BALANCE/ EQUIPMENT LIST | 6 |
| AIRPLANE & SYSTEMS DESCRIPTIONS | 7 |
| AIRPLANE HANDLING, SERVICE & MAINTENANCE | 8 |
| SUPPLEMENTS (Optional Systems Description & Operating Procedures) | 9 |

SECTION 1

GENERAL

TABLE OF CONTENTS

| | Page |
|--|------|
| Three View | 1-2 |
| Introduction | 1-3 |
| Descriptive Data | 1-3 |
| Engine | 1-3 |
| Propeller (2-Bladed) | 1-3 |
| Propeller (3-Bladed) | 1-3 |
| Fuel | 1-3 |
| Oil | 1-4 |
| Maximum Certificated Weights | 1-5 |
| Standard Airplane Weights | 1-5 |
| Cabin And Entry Dimensions | 1-5 |
| Baggage Space And Entry Dimensions | 1-5 |
| Specific Loadings | 1-5 |
| Symbols, Abbreviations And Terminology | 1-6 |
| General Airspeed Terminology And Symbols | 1-6 |
| Meteorological Terminology | 1-6 |
| Engine Power Terminology | 1-7 |
| Airplane Performance And Flight Planning Terminology | 1-7 |
| Weight And Balance Terminology | 1-7 |

SECTION 1
GENERAL

CESSNA
MODEL T182

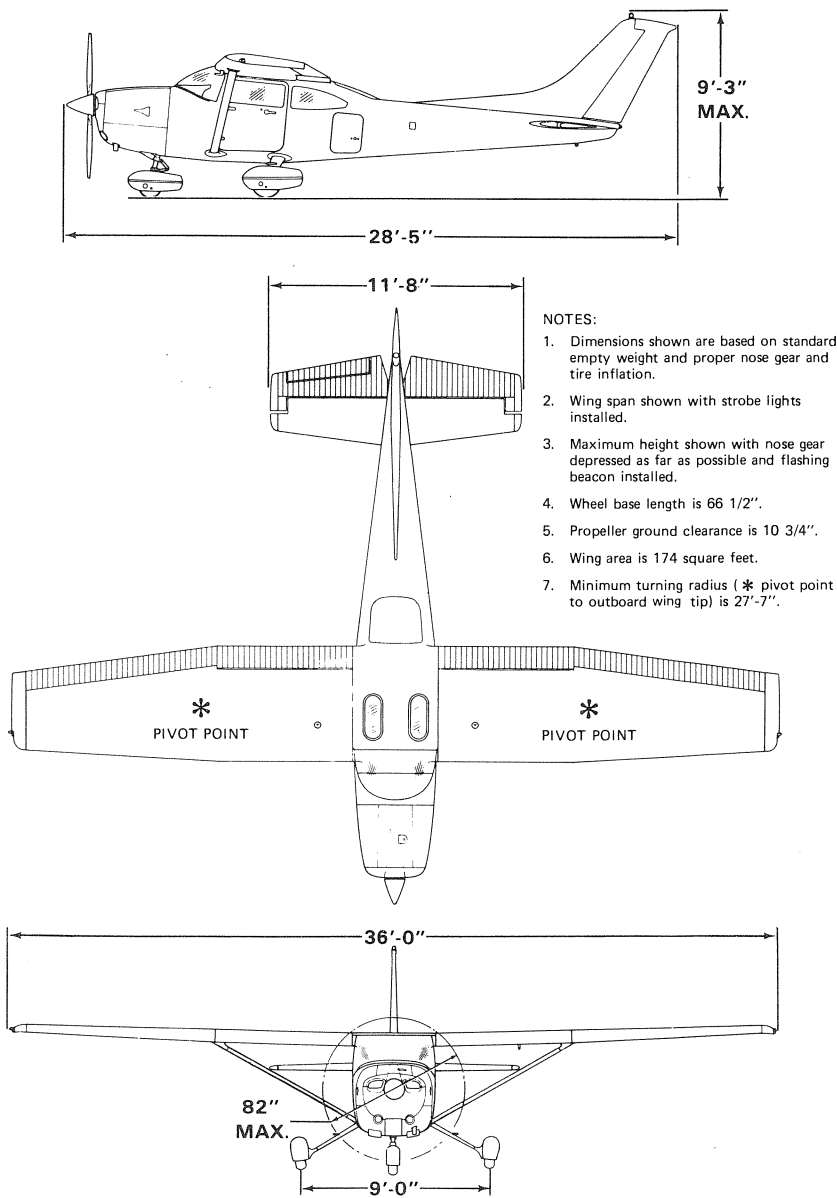


Figure 1-1. Three View

INTRODUCTION

This handbook contains 9 sections, and includes the material required to be furnished to the pilot by CAR Part 3. It also contains supplemental data supplied by Cessna Aircraft Company.

Section 1 provides basic data and information of general interest. It also contains definitions or explanations of symbols, abbreviations, and terminology commonly used.

DESCRIPTIVE DATA

ENGINE

Number of Engines: 1.

Engine Manufacturer: Avco Lycoming.

Engine Model Number: O-540-L3C5D.

Engine Type: Turbocharged, direct-drive, air-cooled, horizontally-opposed, carburetor equipped, six-cylinder engine with 541.5 cu. in. displacement.

Horsepower Rating and Engine Speed: 235 rated BHP at 31 inches Hg and 2400 RPM.

PROPELLER (2-BLADED)

Propeller Manufacturer: McCauley Accessory Division.

Propeller Model Number: B2D34C219/90DHB-8.

Number of Blades: 2.

Propeller Diameter, Maximum: 82 inches.

Minimum: 80.5 inches.

Propeller Type: Constant speed and hydraulically actuated, with a low pitch setting of 15.8° and a high pitch setting of 31.9° (30 inch station).

PROPELLER (3-BLADED)

Propeller Manufacturer: McCauley Accessory Division.

Propeller Model Number: B3D32C407/82NDA-3.

Number of Blades: 3.

Propeller Diameter, Maximum: 79 inches.

Minimum: 78 inches.

Propeller Type: Constant speed and hydraulically actuated, with a low pitch setting of 16.0° and a high pitch setting of 31.7° (30 inch station).

FUEL

Approved Fuel Grades (and Colors):

100LL Grade Aviation Fuel (Blue).

100 (Formerly 100/130) Grade Aviation Fuel (Green).

SECTION 1
GENERAL

CESSNA
MODEL T182

NOTE

Isopropyl alcohol or ethylene glycol monomethyl ether may be added to the fuel supply. Additive concentrations shall not exceed 1% for isopropyl alcohol or .15% for ethylene glycol monomethyl ether. Refer to Section 8 for additional information.

Total Capacity: 92 gallons.
Total Capacity Each Tank: 46 gallons.
Total Usable: 88 gallons.

NOTE

To ensure maximum fuel capacity when refueling and minimize cross-feeding when parked on a sloping surface, place the fuel selector valve in either LEFT or RIGHT position.

OIL

Oil Grade (Specification):

MIL-L-6082 Aviation Grade Straight Mineral Oil: Use to replenish supply during first 25 hours and at the first 25-hour oil change. Continue to use until a total of 50 hours has accumulated or oil consumption has stabilized.

MIL-L-22851 Ashless Dispersant Oil: This oil **must be used** after first 50 hours or oil consumption has stabilized.

Recommended Viscosity For Temperature Range:

MIL-L-6082 Aviation Grade Straight Mineral Oil:

All temperatures, use SAE 20W-50 or

Above 16°C (60°F), use SAE 50

-1°C (30°F) to 32°C (90°F), use SAE 40

-18°C (0°F) to 21°C (70°F), use SAE 30

Below -12°C (10°F), use SAE 20

MIL-L-22851 Ashless Dispersant Oil:

All temperatures, use SAE 20W-50 or

Above 16°C (60°F), use SAE 40 or SAE 50

-1°C (30°F) to 32°C (90°F), use SAE 40

-18°C (0°F) to 21°C (70°F), use SAE 40 or SAE 30

Below -12°C (10°F), use SAE 30

Oil Capacity:

Sump: 8 Quarts.

Total: 9 Quarts.

MAXIMUM CERTIFICATED WEIGHTS

Ramp: 3112 lbs.

Takeoff: 3100 lbs.

Landing: 2950 lbs.

Weight in Baggage Compartment:

Baggage Area "A" (or passenger on child's seat) - Station 82 to 109: 120 lbs. See note below.

Baggage Area "B" - Station 109 to 124: 80 lbs. See note below.

Baggage Area "C" - Station 124 to 134: 80 lbs. See note below.

NOTE

The maximum allowable combined weight capacity for baggage in areas A, B and C is 200 lbs. The maximum allowable weight capacity for baggage in areas B and C is 80 lbs.

STANDARD AIRPLANE WEIGHTS

Standard Empty Weight, Turbo Skylane: 1725 lbs.

Turbo Skylane II: 1781 lbs.

Maximum Useful Load, Turbo Skylane: 1387 lbs.

Turbo Skylane II: 1331 lbs.

CABIN AND ENTRY DIMENSIONS

Detailed dimensions of the cabin interior and entry door openings are illustrated in Section 6.

BAGGAGE SPACE AND ENTRY DIMENSIONS

Dimensions of the baggage area and baggage door opening are illustrated in detail in Section 6.

SPECIFIC LOADINGS

Wing Loading: 17.8 lbs./sq. ft.

Power Loading: 13.2 lbs./hp.

SYMBOLS, ABBREVIATIONS AND TERMINOLOGY

GENERAL AIRSPEED TERMINOLOGY AND SYMBOLS

| | |
|-----------|--|
| KCAS | Knots Calibrated Airspeed is indicated airspeed corrected for position and instrument error and expressed in knots. Knots calibrated airspeed is equal to KTAS in standard atmosphere at sea level. |
| KIAS | Knots Indicated Airspeed is the speed shown on the airspeed indicator and expressed in knots. |
| KTAS | Knots True Airspeed is the airspeed expressed in knots relative to undisturbed air which is KCAS corrected for altitude and temperature. |
| V_A | Maneuvering Speed is the maximum speed at which you may use abrupt control travel. |
| V_{FE} | Maximum Flap Extended Speed is the highest speed permissible with wing flaps in a prescribed extended position. |
| V_{NO} | Maximum Structural Cruising Speed is the speed that should not be exceeded except in smooth air, then only with caution. |
| V_{NE} | Never Exceed Speed is the speed limit that may not be exceeded at any time. |
| V_S | Stalling Speed or the minimum steady flight speed at which the airplane is controllable. |
| V_{S_0} | Stalling Speed or the minimum steady flight speed at which the airplane is controllable in the landing configuration at the most forward center of gravity. |
| V_X | Best Angle-of-Climb Speed is the speed which results in the greatest gain of altitude in a given horizontal distance. |
| V_Y | Best Rate-of-Climb Speed is the speed which results in the greatest gain in altitude in a given time. |

METEOROLOGICAL TERMINOLOGY

| | |
|-----|--|
| OAT | Outside Air Temperature is the free air static temperature. |
|-----|--|

It is expressed in either degrees Celsius or degrees Fahrenheit.

Standard Temperature is 15°C at sea level pressure altitude and decreases by 2°C for each 1000 feet of altitude.

Pressure Altitude is the altitude read from an altimeter when the altimeter's barometric scale has been set to 29.92 inches of mercury (1013 mb).

ENGINE POWER TERMINOLOGY

BHP **Brake Horsepower** is the power developed by the engine.

RPM **Revolutions Per Minute** is engine speed.

MP **Manifold Pressure** is a pressure measured in the engine's induction system and is expressed in inches of mercury (Hg).

AIRPLANE PERFORMANCE AND FLIGHT PLANNING TERMINOLOGY

Demonstrated Crosswind Velocity is the velocity of the crosswind component for which adequate control of the airplane during takeoff and landing was actually demonstrated during certification tests. The value shown is not considered to be limiting.

Usable Fuel is the fuel available for flight planning.

Unusable Fuel is the quantity of fuel that can not be safely used in flight.

GPH **Gallons Per Hour** is the amount of fuel consumed per hour.

NMPG **Nautical Miles Per Gallon** is the distance which can be expected per gallon of fuel consumed at a specific engine power setting and/or flight configuration.

g is acceleration due to gravity.

WEIGHT AND BALANCE TERMINOLOGY

Reference Datum is an imaginary vertical plane from which all horizontal distances are measured for balance purposes.

SECTION 1
GENERAL

CESSNA
MODEL T182

| | |
|--------------------------|--|
| Station | Station is a location along the airplane fuselage given in terms of the distance from the reference datum. |
| Arm | Arm is the horizontal distance from the reference datum to the center of gravity (C.G.) of an item. |
| Moment | Moment is the product of the weight of an item multiplied by its arm. (Moment divided by the constant 1000 is used in this handbook to simplify balance calculations by reducing the number of digits.) |
| Center of Gravity (C.G.) | Center of Gravity is the point at which an airplane, or equipment, would balance if suspended. Its distance from the reference datum is found by dividing the total moment by the total weight of the airplane. |
| C.G. Arm | Center of Gravity Arm is the arm obtained by adding the airplane's individual moments and dividing the sum by the total weight. |
| C.G. Limits | Center of Gravity Limits are the extreme center of gravity locations within which the airplane must be operated at a given weight. |
| Standard Empty Weight | Standard Empty Weight is the weight of a standard airplane, including unusable fuel, full operating fluids and full engine oil. |
| Basic Empty Weight | Basic Empty Weight is the standard empty weight plus the weight of optional equipment. |
| Useful Load | Useful Load is the difference between ramp weight and the basic empty weight. |
| Maximum Ramp Weight | Maximum Ramp Weight is the maximum weight approved for ground maneuver. (It includes the weight of start, taxi and runup fuel.) |
| Maximum Takeoff Weight | Maximum Takeoff Weight is the maximum weight approved for the start of the takeoff run. |
| Maximum Landing Weight | Maximum Landing Weight is the maximum weight approved for the landing touchdown. |
| Tare | Tare is the weight of chocks, blocks, stands, etc. used when |

weighing an airplane, and is included in the scale readings. Tare is deducted from the scale reading to obtain the actual (net) airplane weight.

SECTION 2

LIMITATIONS

TABLE OF CONTENTS

| | Page |
|--|------|
| Introduction | 2-3 |
| Airspeed Limitations | 2-4 |
| Airspeed Indicator Markings | 2-5 |
| Power Plant Limitations | 2-5 |
| Power Plant Instrument Markings | 2-6 |
| Weight Limits | 2-7 |
| Center Of Gravity Limits | 2-7 |
| Maneuver Limits | 2-7 |
| Flight Load Factor Limits | 2-8 |
| Kinds Of Operation Limits | 2-8 |
| Fuel Limitations | 2-8 |
| Maximum Operating Altitude Limit | 2-9 |
| Other Limitations | 2-9 |
| Flap Limitations | 2-9 |
| Placards | 2-9 |

INTRODUCTION

Section 2 includes operating limitations, instrument markings, and basic placards necessary for the safe operation of the airplane, its engine, standard systems and standard equipment. The limitations included in this section and in Section 9 have been approved by the Federal Aviation Administration. Observance of these operating limitations is required by Federal Aviation Regulations.

NOTE

Refer to Section 9 of this Pilot's Operating Handbook for amended operating limitations, operating procedures, performance data and other necessary information for airplanes equipped with specific options.

NOTE

The airspeeds listed in the Airspeed Limitations chart (figure 2-1) and the Airspeed Indicator Markings chart (figure 2-2) are based on Airspeed Calibration data shown in Section 5 with the normal static source, with the exception of the bottom of the green and white arcs on the airspeed indicator. These are based on a power-off airspeed calibration. If the alternate static source is being used, ample margins should be observed to allow for the airspeed calibration variations between the normal and alternate static sources as shown in Section 5.

Your Cessna is certificated under FAA Type Certificate No. 3A13 as Cessna Model No. T182.

AIRSPPEED LIMITATIONS

Airspeed limitations and their operational significance are shown in figure 2-1.

| | SPEED | KCAS | KIAS | REMARKS |
|-----------------|---|------------------|------------------|--|
| V _{NE} | Never Exceed Speed | 175 | 178 | Do not exceed this speed in any operation. |
| V _{NO} | Maximum Structural Cruising Speed | 138 | 140 | Do not exceed this speed except in smooth air, and then only with caution. |
| V _A | Maneuvering Speed: 3100 Pounds 2600 Pounds 2100 Pounds | 110 100 90 | 111 101 90 | Do not make full or abrupt control movements above this speed. |
| V _{FE} | Maximum Flap Extended Speed: To 10° Flaps 10° - 40° Flaps | 138 95 | 140 95 | Do not exceed these speeds with the given flap settings. |
| | Maximum Window Open Speed | 175 | 178 | Do not exceed this speed with windows open. |

Figure 2-1. Airspeed Limitations

AIRSPPEED INDICATOR MARKINGS

Airspeed indicator markings and their color code significance are shown in figure 2-2.

| MARKING | KIAS VALUE OR RANGE | SIGNIFICANCE |
|------------|---------------------|---|
| White Arc | 40 - 95 | Full Flap Operating Range. Lower limit is maximum weight V_{SO} in landing configuration. Upper limit is maximum speed permissible with flaps extended. |
| Green Arc | 48 - 140 | Normal Operating Range. Lower limit is maximum weight V_S at most forward C.G. with flaps retracted. Upper limit is maximum structural cruising speed. |
| Yellow Arc | 140 - 178 | Operations must be conducted with caution and only in smooth air. |
| Red Line | 178 | Maximum speed for all operations. |

Figure 2-2. Airspeed Indicator Markings

POWER PLANT LIMITATIONS

Engine Manufacturer: Avco Lycoming.

Engine Model Number: O-540-L3C5D.

Maximum Power: 235 BHP rating.

Engine Operating Limits for Takeoff and Continuous Operations:

Maximum Engine Speed: 2400 RPM.

Maximum Manifold Pressure: 31 in. Hg.

Maximum Cylinder Head Temperature: 500°F (260°C).

Maximum Oil Temperature: 245°F (118°C).

Oil Pressure, Minimum: 25 psi.

Maximum: 115 psi.

Fuel Pressure, Minimum: 3.0 psi.

Maximum: 30.0 psi.

Fuel Grade: See Fuel Limitations.

Oil Grade (Specification):

MIL-L-6082 Aviation Grade Straight Mineral Oil or MIL-L-22851

Ashless Dispersant Oil.

SECTION 2 LIMITATIONS

CESSNA
MODEL T182

Propeller Manufacturer: McCauley Accessory Division.
Propeller Model Number, 2-Bladed: B2D34C219/90DHB-8
3-Bladed: B3D32C407/82NDA-3.

Propeller Diameter, 2-Bladed Maximum: 82 inches.
2-Bladed Minimum: 80.5 inches.
3-Bladed Maximum: 79 inches.
3-Bladed Minimum: 78 inches.

Propeller Blade Angle at 30 Inch Station, 2-Bladed Low: 15.8°.
2-Bladed High: 31.9°.
3-Bladed Low: 16.0°.
3-Bladed High: 31.7°.

POWER PLANT INSTRUMENT MARKINGS

Power plant instrument markings and their color code significance are shown in figure 2-3.

| INSTRUMENT | RED LINE | GREEN ARC | RED LINE |
|------------------------------|-------------------------------------|---------------------|------------------|
| | MINIMUM LIMIT | NORMAL OPERATING | MAXIMUM LIMIT |
| Tachometer | - - - | 2100 - 2400 RPM | 2400 RPM |
| Manifold Pressure | - - - | 17-25 in.Hg | 31 in.Hg |
| Oil Temperature | - - - | 100°-245°F | 245°F |
| Cylinder Head Temperature | - - - | 200° - 500°F | 500°F |
| Fuel Pressure | 3.0 psi | 3.0 - 30.0 psi | 30.0 psi |
| Oil Pressure | 25 psi | 60-90 psi | 115 psi |
| Suction | - - - | 4.5 - 5.4 in. Hg | - - - |
| Fuel Quantity | E (2 Gal. Unusable Each Tank) | - - - | - - - |

Figure 2-3. Power Plant Instrument Markings

MAXIMUM OPERATING ALTITUDE LIMIT

Certificated Maximum Operating Altitude: 20,000 Ft.

OTHER LIMITATIONS

FLAP LIMITATIONS

Approved Takeoff Range: 0° to 20°.

Approved Landing Range: 0° to 40°.

PLACARDS

The following information must be displayed in the form of composite or individual placards.

1. In full view of the pilot: (The "DAY-NIGHT-VFR-IFR" entry, shown on the example below, will vary as the airplane is equipped.)

The markings and placards installed in this airplane contain operating limitations which must be complied with when operating this airplane in the Normal Category. Other operating limitations which must be complied with when operating this airplane in this category are contained in the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

No acrobatic maneuvers, including spins, approved.
Flight into known icing conditions prohibited.

This airplane is certified for the following flight operations as of date of original airworthiness certificate:

DAY—NIGHT—VFR—IFR

2. Near airspeed indicator:

MAX SPEED - KIAS
MANEUVER . . . 111

SECTION 2
LIMITATIONS

CESSNA
MODEL T182

3. On control lock:

CONTROL LOCK - REMOVE BEFORE STARTING ENGINE.

4. On the fuel selector valve:

OFF
LEFT - 44 GAL. LEVEL FLIGHT ONLY
BOTH - 88 GAL. ALL FLIGHT ATTITUDES
BOTH ON FOR TAKEOFF AND LANDING
RIGHT - 44 GAL. LEVEL FLIGHT ONLY

5. On the baggage door:

120 POUNDS MAXIMUM
BAGGAGE AND/OR AUXILIARY PASSENGER
FORWARD OF BAGGAGE DOOR LATCH AND
80 POUNDS MAXIMUM
BAGGAGE AFT OF BAGGAGE DOOR LATCH
MAXIMUM 200 POUNDS COMBINED
FOR ADDITIONAL LOADING INSTRUCTIONS
SEE WEIGHT AND BALANCE DATA

6. On flap position indicator:

| | |
|--------------------|---|
| 0° to 10° | (Partial flap range with blue color code and 140 kt callout; also, mechanical detent at 10°.) |
| 10° to 20° to FULL | (Indices at these positions with white color code and 95 kt callout; also, mechanical detent at 10° and 20°.) |

7. Forward of fuel tank filler cap:

FUEL

100LL/100 MIN GRADE AVIATION GASOLINE
CAP. 46.0 U.S. GAL.
CAP. 34.5 U.S. GAL. TO BOTTOM OF FILLER NECK

WEIGHT LIMITS

Maximum Ramp Weight: 3112 lbs.

Maximum Takeoff Weight: 3100 lbs.

Maximum Landing Weight: 2950 lbs.

Maximum Weight in Baggage Compartment:

Baggage Area "A" (or passenger on child's seat) - Station 82 to 109: 120 lbs. See following note.

Baggage Area "B" - Station 109 to 124: 80 lbs. See following note.

Baggage Area "C" - Station 124 to 134: 80 lbs. See following note.

NOTE

The maximum allowable combined weight capacity for baggage in areas A, B and C is 200 lbs. The maximum allowable weight capacity for baggage in areas B and C is 80 lbs.

CENTER OF GRAVITY LIMITS

Center of Gravity Range:

Forward: 33.0 inches aft of datum at 2250 lbs. or less, with straight line variation to 35.5 inches aft of datum at 2700 lbs., with straight line variation to 38.9 inches aft of datum at 2950 lbs. (landing), with straight line variation to 40.9 inches aft of datum at 3100 lbs. (takeoff).

Aft: 46.0 inches aft of datum at all weights.

Reference Datum: Front face of firewall.

MANEUVER LIMITS

This airplane is certificated in the normal category. The normal category is applicable to aircraft intended for non-aerobatic operations. These include any maneuvers incidental to normal flying, stalls (except whip stalls), lazy eights, chandelles, and steep turns in which the angle of bank is not more than 60°.

Aerobatic maneuvers, including spins, are not approved.

FLIGHT LOAD FACTOR LIMITS

Flight Load Factors:

*Flaps Up: +3.8g, -1.52g

*Flaps Down: +2.0g

*The design load factors are 150% of the above, and in all cases, the structure meets or exceeds design loads.

KINDS OF OPERATION LIMITS

The airplane is equipped for day VFR and may be equipped for night VFR and/or IFR operations. FAR Part 91 establishes the minimum required instrumentation and equipment for these operations. The reference to types of flight operations on the operating limitations placard reflects equipment installed at the time of Airworthiness Certificate issuance.

Flight into known icing conditions is prohibited.

FUEL LIMITATIONS

2 Standard Tanks: 46.0 U.S. gallons each.

Total Fuel: 92.0 U.S. gallons.

Usable Fuel (all flight conditions): 88 U.S. gallons.

Unusable Fuel: 4.0 U.S. gallons.

NOTE

To ensure maximum fuel capacity when refueling and prevent cross-feeding when parked on a sloping surface, place the fuel selector valve in either LEFT or RIGHT position.

Takeoff and land with the fuel selector valve handle in the BOTH position.

Operation on either left or right tank is limited to level flight only.

With 1/4 tank or less, prolonged uncoordinated flight is prohibited when operating on either left or right tank in level flight.

Approved Fuel Grades (and Colors):

100LL Grade Aviation Fuel (Blue).

100 (Formerly 100/130) Grade Aviation Fuel (Green).

8. A calibration card is provided to indicate the accuracy of the magnetic compass in 30° increments.

9. On oil filler cap:

OIL
8 QTS

10. Forward of each fuel tank filler cap in line with fwd arrow:

FUEL CAP FWD ▲ ARROW ALIGNMENT
CAP MUST NOT ROTATE DURING CLOSING

SECTION 3

EMERGENCY PROCEDURES

TABLE OF CONTENTS

| | Page |
|---|------|
| Introduction | 3-3 |
| Airspeeds For Emergency Operation | 3-3 |

OPERATIONAL CHECKLISTS

| | |
|--|------|
| Engine Failures | 3-4 |
| Engine Failure During Takeoff Run | 3-4 |
| Engine Failure Immediately After Takeoff | 3-4 |
| Engine Failure During Flight | 3-4 |
| Forced Landings | 3-4 |
| Emergency Landing Without Engine Power | 3-4 |
| Precautionary Landing With Engine Power | 3-5 |
| Ditching | 3-5 |
| Fires | 3-6 |
| During Start On Ground | 3-6 |
| Engine Fire In Flight | 3-6 |
| Electrical Fire In Flight | 3-6 |
| Cabin Fire | 3-7 |
| Wing Fire | 3-7 |
| Icing | 3-8 |
| Inadvertent Icing Encounter | 3-8 |
| Static Source Blockage (Erroneous Instrument Reading Suspected) | 3-8 |
| Landing With A Flat Main Tire | 3-8 |
| Electrical Power Supply System Malfunctions | 3-9 |
| Ammeter Shows Excessive Rate of Charge (Full Scale Deflection) | 3-9 |
| Low-Voltage Light Illuminates During Flight (Ammeter Indicates Discharge) | 3-9 |
| Emergency Descent Procedures | 3-9 |
| Smooth Air | 3-9 |
| Rough Air | 3-10 |

TABLE OF CONTENTS (Continued)

| | Page |
|---|------|
| AMPLIFIED PROCEDURES | |
| Engine Failure | 3-11 |
| Forced Landings | 3-12 |
| Landing Without Elevator Control | 3-12 |
| Fires | 3-12 |
| Emergency Operation In Clouds (Vacuum System Failure) | 3-13 |
| Executing A 180° Turn In Clouds | 3-13 |
| Emergency Descent Through Clouds | 3-13 |
| Recovery From A Spiral Dive | 3-14 |
| Inadvertent Flight Into Icing Conditions | 3-14 |
| Static Source Blocked | 3-14 |
| Spins | 3-15 |
| Rough Engine Operation Or Loss Of Power | 3-16 |
| Carburetor Icing | 3-16 |
| Spark Plug Fouling | 3-16 |
| Magnetos Malfunction | 3-16 |
| Engine-Driven Fuel Pump Failure | 3-16 |
| Low Oil Pressure | 3-17 |
| Electrical Power Supply System Malfunctions | 3-17 |
| Excessive Rate Of Charge | 3-17 |
| Insufficient Rate Of Charge | 3-18 |

INTRODUCTION

Section 3 provides checklist and amplified procedures for coping with emergencies that may occur. Emergencies caused by airplane or engine malfunctions are extremely rare if proper preflight inspections and maintenance are practiced. Enroute weather emergencies can be minimized or eliminated by careful flight planning and good judgment when unexpected weather is encountered. However, should an emergency arise, the basic guidelines described in this section should be considered and applied as necessary to correct the problem. Emergency procedures associated with ELT and other optional systems can be found in Section 9.

AIRSPEEDS FOR EMERGENCY OPERATION

Engine Failure After Takeoff:

| | |
|---------------------------|---------|
| Wing Flaps Up | 75 KIAS |
| Wing Flaps Down | 70 KIAS |

Maneuvering Speed:

| | |
|--------------------|----------|
| 3100 Lbs | 111 KIAS |
| 2600 Lbs | 101 KIAS |
| 2100 Lbs | 90 KIAS |

Maximum Glide:

| | |
|--------------------|---------|
| 3100 Lbs | 76 KIAS |
| 2600 Lbs | 70 KIAS |
| 2100 Lbs | 63 KIAS |

| | |
|---|---------|
| Precautionary Landing With Engine Power | 70 KIAS |
|---|---------|

Landing Without Engine Power:

| | |
|---------------------------|---------|
| Wing Flaps Up | 75 KIAS |
| Wing Flaps Down | 70 KIAS |

OPERATIONAL CHECKLISTS

ENGINE FAILURES

ENGINE FAILURE DURING TAKEOFF RUN

1. Throttle -- IDLE.
2. Brakes -- APPLY.
3. Wing Flaps -- RETRACT.
4. Mixture -- IDLE CUT-OFF.
5. Ignition Switch -- OFF.
6. Master Switch -- OFF.

ENGINE FAILURE IMMEDIATELY AFTER TAKEOFF

1. Airspeed -- 75 KIAS (flaps UP).
70 KIAS (flaps DOWN).
2. Mixture -- IDLE CUT-OFF.
3. Fuel Selector Valve -- OFF.
4. Ignition Switch -- OFF.
5. Wing Flaps -- AS REQUIRED (40° recommended).
6. Master Switch -- OFF.

ENGINE FAILURE DURING FLIGHT

1. Airspeed -- 75 KIAS.
2. Carburetor Heat -- ON.
3. Fuel Selector Valve -- BOTH
4. Mixture -- RICH.
5. Ignition Switch -- BOTH (or START if propeller is stopped).
6. Primer -- IN and LOCKED.

FORCED LANDINGS

EMERGENCY LANDING WITHOUT ENGINE POWER

1. Airspeed -- 75 KIAS (flaps UP).
70 KIAS (flaps DOWN).
2. Mixture -- IDLE CUT-OFF.
3. Fuel Selector Valve -- OFF.
4. Ignition Switch -- OFF.
5. Wing Flaps -- AS REQUIRED (40° recommended).
6. Doors -- UNLATCH PRIOR TO TOUCHDOWN.

7. Master Switch -- OFF when landing is assured.
8. Touchdown -- SLIGHTLY TAIL LOW.
9. Brakes -- APPLY HEAVILY.

PRECAUTIONARY LANDING WITH ENGINE POWER

1. Airspeed -- 75 KIAS.
2. Wing Flaps -- 20°.
3. Selected Field -- FLY OVER, noting terrain and obstructions, then retract flaps upon reaching a safe altitude and airspeed.
4. Electrical Switches -- OFF.
5. Wing Flaps -- 40° (on final approach).
6. Airspeed -- 70 KIAS.
7. Doors -- UNLATCH PRIOR TO TOUCHDOWN.
8. Avionics Power and Master Switches -- OFF.
9. Touchdown -- SLIGHTLY TAIL LOW.
10. Ignition Switch -- OFF.
11. Brakes -- APPLY HEAVILY.

DITCHING

1. Radio -- TRANSMIT MAYDAY on 121.5 MHz, giving location and intentions and SQUAWK 7700 if transponder is installed.
2. Heavy Objects (in baggage area) -- SECURE OR JETTISON.
3. Flaps -- 20° - 40°.
4. Power -- ESTABLISH 300 FT/MIN DESCENT at 65 KIAS.
5. Approach -- High Winds, Heavy Seas -- INTO THE WIND.
Light Winds, Heavy Swells -- PARALLEL TO SWELLS.

NOTE

If no power is available, approach at 75 KIAS with flaps up or at 70 KIAS with 10° flaps.

6. Cabin Doors -- UNLATCH.
7. Touchdown -- LEVEL ATTITUDE AT ESTABLISHED DESCENT.
8. Face -- CUSHION at touchdown with folded coat.
9. Airplane -- EVACUATE through cabin doors. If necessary, open windows and flood cabin to equalize pressure so doors can be opened.
10. Life Vests and Raft -- INFLATE.

FIRES

DURING START ON GROUND

1. Cranking -- CONTINUE, to get a start which would suck the flames and accumulated fuel through the carburetor and into the engine.

If engine starts:

2. Power -- 1700 RPM for a few minutes.
3. Engine -- SHUTDOWN and inspect for damage.

If engine fails to start:

4. Throttle -- FULL OPEN.
5. Mixture -- IDLE CUT-OFF.
6. Cranking -- CONTINUE.
7. Fire Extinguisher -- OBTAIN (have ground attendants obtain if not installed).
8. Engine -- SECURE.
 - a. Master Switch -- OFF.
 - b. Ignition Switch -- OFF.
 - c. Fuel Selector Valve -- OFF.
9. Fire -- EXTINGUISH using fire extinguisher, wool blanket, or dirt.
10. Fire Damage -- INSPECT, repair damage or replace damaged components or wiring before conducting another flight.

ENGINE FIRE IN FLIGHT

1. Mixture -- IDLE CUT-OFF.
2. Fuel Selector Valve -- OFF.
3. Master Switch -- OFF.
4. Cabin Heat and Air -- OFF (except overhead vents).
5. Airspeed -- 100 KIAS (If fire is not extinguished, increase glide speed to find an airspeed which will provide an incombustible mixture).
6. Forced Landing -- EXECUTE (as described in Emergency Landing Without Engine Power).

ELECTRICAL FIRE IN FLIGHT

1. Master Switch -- OFF.
2. Avionics Power Switch -- OFF.
3. All Other Switches (except ignition switch) -- OFF.
4. Vents/Cabin Air/Heat -- CLOSED.
5. Fire Extinguisher -- ACTIVATE (if available).

WARNING

After discharging an extinguisher within a closed cabin, ventilate the cabin.

If fire appears out and electrical power is necessary for continuance of flight:

6. Master Switch -- ON.
7. Circuit Breakers -- CHECK for faulty circuit, do not reset.
8. Radio Switches -- OFF.
9. Avionics Power Switch -- ON.
10. Radio/Electrical Switches -- ON one at a time, with delay after each until short circuit is localized.
11. Vents/Cabin Air/Heat -- OPEN when it is ascertained that fire is completely extinguished.

CABIN FIRE

1. Master Switch -- OFF.
2. Vents/Cabin Air/Heat -- CLOSED (to avoid drafts).
3. Fire Extinguisher -- ACTIVATE (if available).

WARNING

After discharging an extinguisher within a closed cabin, ventilate the cabin.

4. Land the airplane as soon as possible to inspect for damage.

WING FIRE

1. Navigation Light Switch -- OFF.
2. Strobe Light Switch (if installed) -- OFF.
3. Pitot Heat Switch (if installed) -- OFF.

NOTE

Perform a sideslip to keep the flames away from the fuel tank and cabin, and land as soon as possible using flaps only as required for final approach and touchdown.

ICING

INADVERTENT ICING ENCOUNTER

1. Turn pitot heat switch ON (if installed).
2. Turn back or change altitude to obtain an outside air temperature that is less conducive to icing.
3. Pull cabin heat control full out and rotate defroster control clockwise to obtain maximum defroster airflow.
4. Increase engine speed to minimize ice build-up on propeller blades.
5. Watch for signs of carburetor air filter ice and apply carburetor heat only as required. An unexplained loss in manifold pressure could be caused by carburetor ice or air intake filter ice. Lean the mixture if carburetor heat is used continuously.
6. Plan a landing at the nearest airport. With an extremely rapid ice build-up, select a suitable "off airport" landing site.
7. With an ice accumulation of 1/4 inch or more on the wing leading edges, be prepared for significantly higher stall speed.
8. Leave wing flaps retracted. With a severe ice build-up on the horizontal tail, the change in wing wake airflow direction caused by wing flap extension could result in a loss of elevator effectiveness.
9. Open the window and, if practical, scrape ice from a portion of the windshield for visibility in the landing approach.
10. Perform a landing approach using a forward slip, if necessary, for improved visibility.
11. Approach at 85 to 95 KIAS, depending upon the amount of ice accumulation.
12. Perform a landing in level attitude.

STATIC SOURCE BLOCKAGE (Erroneous Instrument Reading Suspected)

1. Static Pressure Alternate Source Valve -- PULL ON.
2. Airspeed -- Consult appropriate table in Section 5.
3. Altitude -- Cruise 30 feet higher than normal. (Cruise 50 feet lower than normal with an optional air conditioner installed.)

LANDING WITH A FLAT MAIN TIRE

1. Approach -- NORMAL.
2. Wing Flaps -- FULL DOWN.
3. Touchdown -- GOOD TIRE FIRST, hold airplane off flat tire as long as possible with aileron control.
4. Directional Control -- MAINTAIN using brake on good wheel as required.

ELECTRICAL POWER SUPPLY SYSTEM MALFUNCTIONS

AMMETER SHOWS EXCESSIVE RATE OF CHARGE (Full Scale Deflection)

1. Alternator -- OFF.
2. Alternator Circuit Breaker -- PULL.
3. Nonessential Electrical Equipment -- OFF.
4. Flight -- TERMINATE as soon as practical.

LOW-VOLTAGE LIGHT ILLUMINATES DURING FLIGHT (Ammeter Indicates Discharge)

NOTE

Illumination of the low-voltage light may occur during low RPM conditions with an electrical load on the system such as during a low RPM taxi. Under these conditions, the light will go out at higher RPM. The master switch need not be recycled since an over-voltage condition has not occurred to de-activate the alternator system.

1. Avionics Power Switch -- OFF.
2. Alternator Circuit Breaker -- CHECK IN.
3. Master Switch -- OFF (both sides).
4. Master Switch -- ON.
5. Low-Voltage Light -- CHECK OFF.
6. Avionics Power Switch -- ON.

If low-voltage light illuminates again:

7. Alternator -- OFF.
8. Nonessential Radio and Electrical Equipment -- OFF.
9. Flight -- TERMINATE as soon as practical.

EMERGENCY DESCENT PROCEDURES

SMOOTH AIR

1. Seat Belts and Shoulder Harnesses -- SECURE.
2. Throttle -- IDLE.
3. Carburetor Heat -- FULL ON.
4. Propeller -- HIGH RPM.
5. Mixture -- LEAN TO SMOOTH ENGINE IDLE.

SECTION 3
EMERGENCY PROCEDURES

CESSNA
MODEL T182

6. Cowl Flaps -- CLOSED.
7. Wing Flaps -- 10°.
8. Airspeed -- 140 KIAS.

ROUGH AIR

1. Seat Belts and Shoulder Harnesses -- SECURE.
2. Throttle -- IDLE.
3. Carburetor Heat -- FULL ON.
4. Propeller -- HIGH RPM.
5. Mixture -- LEAN TO SMOOTH ENGINE IDLE.
6. Cowl Flaps -- CLOSED.
7. Wing Flaps -- UP.
8. Weights and Airspeeds:
 - 3100 Lbs -- 111 KIAS.
 - 2600 Lbs -- 101 KIAS.
 - 2100 Lbs -- 90 KIAS.

AMPLIFIED PROCEDURES

ENGINE FAILURE

If an engine failure occurs during the takeoff run, the most important thing to do is stop the airplane on the remaining runway. Those extra items on the checklist will provide added safety after a failure of this type.

Prompt lowering of the nose to maintain airspeed and establish a glide attitude is the first response to an engine failure after takeoff. In most cases, the landing should be planned straight ahead with only small changes in direction to avoid obstructions. Altitude and airspeed are seldom sufficient to execute a 180° gliding turn necessary to return to the runway. The checklist procedures assume that adequate time exists to secure the fuel and ignition systems prior to touchdown.

After an engine failure in flight, the best glide speed as shown in figure 3-1 should be established as quickly as possible. While gliding toward a

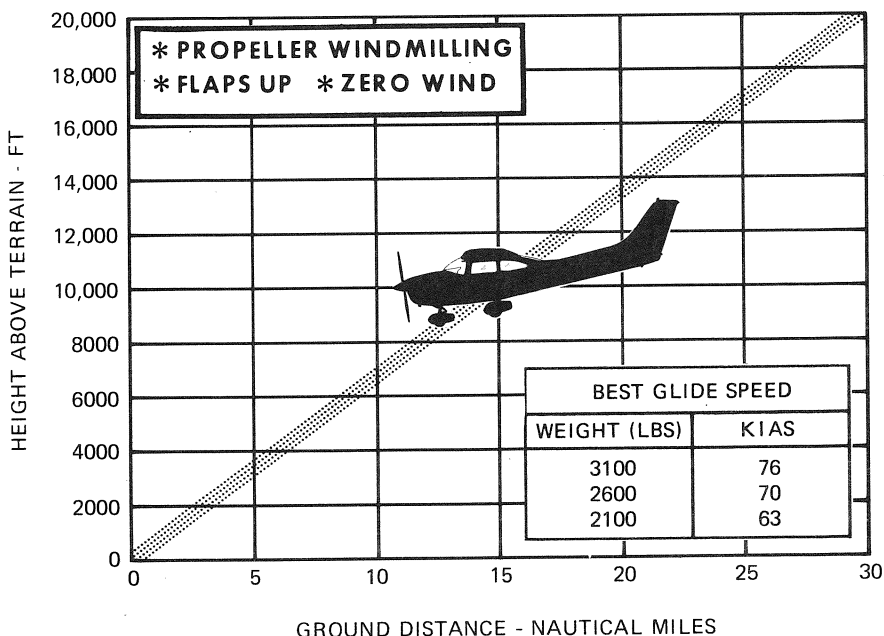


Figure 3-1. Maximum Glide

suitable landing area, an effort should be made to identify the cause of the failure. If time permits, an engine restart should be attempted as shown in the checklist. If the engine cannot be restarted, a forced landing without power must be completed.

FORCED LANDINGS

If all attempts to restart the engine fail and a forced landing is imminent, select a suitable field and prepare for the landing as discussed in the checklist for Emergency Landing Without Engine Power.

Before attempting an "off airport" landing with engine power available, one should fly over the landing area at a safe but low altitude to inspect the terrain for obstructions and surface conditions, proceeding as discussed under the Precautionary Landing With Engine Power checklist.

Prepare for ditching by securing or jettisoning heavy objects located in the baggage area and collect folded coats for protection of occupants' face at touchdown. Transmit Mayday message on 121.5 MHz giving location and intentions and squawk 7700 if a transponder is installed. Avoid a landing flare because of difficulty in judging height over a water surface.

In a forced landing situation, do not turn off the avionics power and master switches until a landing is assured. Premature deactivation of the switches will disable the encoding altimeter and airplane electrical systems.

LANDING WITHOUT ELEVATOR CONTROL

Trim for horizontal flight with an airspeed of approximately 80 KIAS by using throttle and elevator trim control. Then **do not change the elevator trim control setting**; control the glide angle by adjusting power exclusively.

At flareout, the nose-down moment resulting from power reduction is an adverse factor and the airplane may hit on the nose wheel. Consequently, at flareout, the elevator trim control should be adjusted toward the full nose-up position and the power adjusted so that the airplane will rotate to the horizontal attitude for touchdown. Close the throttle at touchdown.

FIRES

Although engine fires are extremely rare in flight, the steps of the appropriate checklist should be followed if one is encountered. After completion of this procedure, execute a forced landing. Do not attempt to restart the engine.

The initial indication of an electrical fire is usually the odor of burning insulation. The checklist for this problem should result in elimination of the fire.

EMERGENCY OPERATION IN CLOUDS (Vacuum System Failure)

In the event of a vacuum system failure during flight, the directional indicator and attitude indicator will be disabled, and the pilot will have to rely on the turn coordinator if he inadvertently flies into clouds. The following instructions assume that only the electrically-powered turn coordinator is operative, and that the pilot is not completely proficient in instrument flying.

EXECUTING A 180° TURN IN CLOUDS

Upon inadvertently entering the clouds, an immediate plan should be made to turn back as follows:

1. Note the compass heading.
2. Note the time of the minute hand and observe the position of the sweep second hand on the clock.
3. When the sweep second hand indicates the nearest half-minute, initiate a standard rate left turn, holding the turn coordinator symbolic airplane wing opposite the lower left index mark for 60 seconds. Then roll back to level flight by leveling the miniature airplane.
4. Check accuracy of the turn by observing the compass heading which should be the reciprocal of the original heading.
5. If necessary, adjust heading primarily with skidding motions rather than rolling motions so that the compass will read more accurately.
6. Maintain altitude and airspeed by cautious application of elevator control. Avoid overcontrolling by keeping the hands off the control wheel as much as possible and steering only with rudder.

EMERGENCY DESCENT THROUGH CLOUDS

If conditions preclude reestablishment of VFR flight by a 180° turn, a descent through a cloud deck to VFR conditions may be appropriate. If possible, obtain radio clearance for an emergency descent through clouds. To guard against a spiral dive, choose an easterly or westerly heading to minimize compass card swings due to changing bank angles. In addition, keep hands off the control wheel and steer a straight course with rudder control by monitoring the turn coordinator. Occasionally check the

SECTION 3 EMERGENCY PROCEDURES

CESSNA
MODEL T182

compass heading and make minor corrections to hold an approximate course. Before descending into the clouds, set up a stabilized let-down condition as follows:

1. Apply full rich mixture.
2. Apply full carburetor heat.
3. Reduce power to set up a 500 to 800 ft/min rate of descent.
4. Adjust the elevator and rudder trim control wheels for a stabilized descent at 80 KIAS.
5. Keep hands off control wheel.
6. Monitor turn coordinator and make corrections by rudder alone.
7. Adjust rudder trim to relieve unbalanced rudder force, if present.
8. Check trend of compass card movement and make cautious corrections with rudder to stop turn.
9. Upon breaking out of clouds, resume normal cruising flight.

RECOVERY FROM A SPIRAL DIVE

If a spiral is encountered, proceed as follows:

1. Close the throttle.
2. Stop the turn by using coordinated aileron and rudder control to align the symbolic airplane in the turn coordinator with the horizon reference line.
3. Cautiously apply elevator back pressure to slowly reduce the indicated airspeed to 80 KIAS.
4. Adjust the elevator trim control to maintain an 80 KIAS glide.
5. Keep hands off the control wheel, using rudder control to hold a straight heading. Use rudder trim to relieve unbalanced rudder force, if present.
6. Apply carburetor heat as necessary.
7. Clear engine occasionally, but avoid using enough power to disturb the trimmed glide.
8. Upon breaking out of clouds, resume normal cruising flight.

INADVERTENT FLIGHT INTO ICING CONDITIONS

Flight into icing conditions is prohibited. An inadvertent encounter with these conditions can best be handled using the checklist procedures. The best procedure, of course, is to turn back or change altitude to escape icing conditions.

STATIC SOURCE BLOCKED

If erroneous instrument readings are suspected due to water, ice or other foreign matter in the pressure lines going to the standard external

static pressure sources, the static pressure alternate source valve should be pulled on. A chart in Section 5 provides a correction which may be applied to the indicated airspeeds listed in this handbook resulting from inaccuracies in the alternate static source pressures. To avoid the possibility of large errors, the windows should not be open when using the alternate static source.

NOTE

In an emergency on airplanes not equipped with an alternate static source, cabin pressure can be supplied to the static pressure instruments by breaking the glass in the face of the vertical speed indicator.

SPINS

Intentional spins are prohibited in this airplane. Should an inadvertent spin occur, the following recovery procedure should be used:

1. RETARD THROTTLE TO IDLE POSITION.
2. PLACE AILERONS IN NEUTRAL POSITION.
3. APPLY AND **HOLD** FULL RUDDER OPPOSITE TO THE DIRECTION OF ROTATION.
4. JUST **AFTER** THE RUDDER REACHES THE STOP, MOVE THE WHEEL **BRISKLY** FORWARD FAR ENOUGH TO BREAK THE STALL. Full down elevator may be required at aft center of gravity loadings to assure optimum recoveries.
5. **HOLD** THESE CONTROL INPUTS UNTIL ROTATION STOPS. Premature relaxation of the control inputs may extend the recovery.
6. AS ROTATION STOPS, NEUTRALIZE RUDDER, AND MAKE A SMOOTH RECOVERY FROM THE RESULTING DIVE.

NOTE

If disorientation precludes a visual determination of the direction of rotation, the symbolic airplane in the turn coordinator may be referred to for this information.

ROUGH ENGINE OPERATION OR LOSS OF POWER

CARBURETOR ICING

An unexplained drop in manifold pressure and eventual engine roughness may result from the formation of carburetor ice. To clear the ice, apply full throttle and pull the carburetor heat knob full out until the engine runs smoothly; then remove carburetor heat and readjust the throttle. If conditions require the continued use of carburetor heat in cruise flight, use the minimum amount of heat necessary to prevent ice from forming and lean the mixture for smoothest engine operation. At high altitudes, manifold pressure drop with the application of carburetor heat may be as much as 10 inches Hg. In this case, advance the throttle as necessary to obtain the desired power or full throttle, whichever is less.

SPARK PLUG FOULING

A slight engine roughness in flight may be caused by one or more spark plugs becoming fouled by carbon or lead deposits. This may be verified by turning the ignition switch momentarily from BOTH to either L or R position. An obvious power loss in single ignition operation is evidence of spark plug or magneto trouble. Assuming that spark plugs are the more likely cause, lean the mixture to the recommended lean setting for cruising flight. If the problem does not clear up in several minutes, determine if a richer mixture setting will produce smoother operation. If not, proceed to the nearest airport for repairs using the BOTH position of the ignition switch unless extreme roughness dictates the use of a single ignition position.

MAGNETO MALFUNCTION

A sudden engine roughness or misfiring is usually evidence of magneto problems. Switching from BOTH to either L or R ignition switch position will identify which magneto is malfunctioning. Select different power settings and enrichen the mixture to determine if continued operation on BOTH magnetos is practicable. If not, switch to the good magneto and proceed to the nearest airport for repairs.

ENGINE - DRIVEN FUEL PUMP FAILURE

In the event of an engine-driven fuel pump failure, gravity flow will provide sufficient fuel flow for level or descending flight. However, in a climbing attitude or anytime the fuel pressure drops to 3.0 PSI, the auxiliary fuel pump should be turned on.

LOW OIL PRESSURE

If low oil pressure is accompanied by normal oil temperature, there is a possibility the oil pressure gage or relief valve is malfunctioning. A leak in the line to the gage is not necessarily cause for an immediate precautionary landing because an orifice in this line will prevent a sudden loss of oil from the engine sump. However, a landing at the nearest airport would be advisable to inspect the source of trouble.

If a total loss of oil pressure is accompanied by a rise in oil temperature, there is good reason to suspect an engine failure is imminent. Reduce engine power immediately and select a suitable forced landing field. Use only the minimum power required to reach the desired touchdown spot.

ELECTRICAL POWER SUPPLY SYSTEM MALFUNCTIONS

Malfunctions in the electrical power supply system can be detected by periodic monitoring of the ammeter and low-voltage warning light; however, the cause of these malfunctions is usually difficult to determine. A broken alternator drive belt or wiring is most likely the cause of alternator failures, although other factors could cause the problem. A defective alternator control unit can also cause malfunctions. Problems of this nature constitute an electrical emergency and should be dealt with immediately. Electrical power malfunctions usually fall into two categories: excessive rate of charge and insufficient rate of charge. The paragraphs below describe the recommended remedy for each situation.

EXCESSIVE RATE OF CHARGE

After engine starting and heavy electrical usage at low engine speeds (such as extended taxiing) the battery condition will be low enough to accept above normal charging during the initial part of a flight. However, after thirty minutes of cruising flight, the ammeter should be indicating less than two needle widths of charging current. If the charging rate were to remain above this value on a long flight, the battery would overheat and evaporate the electrolyte at an excessive rate.

Electronic components in the electrical system can be adversely affected by higher than normal voltage. The alternator control unit includes an over-voltage sensor which normally will automatically shut down the alternator if the charge voltage reaches approximately 31.5 volts. If the over-voltage sensor malfunctions, as evidenced by an excessive rate of charge shown on the ammeter, the alternator should be turned off,

alternator circuit breaker pulled, nonessential electrical equipment turned off and the flight terminated as soon as practical.

INSUFFICIENT RATE OF CHARGE

NOTE

Illumination of the low-voltage light and ammeter discharge indications may occur during low RPM conditions with an electrical load on the system, such as during a low RPM taxi. Under these conditions, the light will go out at higher RPM. The master switch need not be recycled since an over-voltage condition has not occurred to de-activate the alternator system.

If the over-voltage sensor should shut down the alternator, or if the alternator output is low, a discharge rate will be shown on the ammeter followed by illumination of the low-voltage warning light. Since this may be a "nuisance" trip-out, an attempt should be made to reactivate the alternator system. To do this, turn the avionics power switch off, check that the alternator circuit breaker is in, then turn both sides of the master switch off and then on again. If the problem no longer exists, normal alternator charging will resume and the low-voltage light will go off. The avionics power switch may then be turned back on. If the light illuminates again, a malfunction is confirmed. In this event, the flight should be terminated and/or the current drain on the battery minimized because the battery can supply the electrical system for only a limited period of time. Battery power must be conserved for later operation of the wing flaps and, if the emergency occurs at night, for possible use of the landing lights during landing.

SECTION 4

NORMAL PROCEDURES

TABLE OF CONTENTS

| | Page |
|---------------------------------------|------|
| Introduction | 4-3 |
| Speeds For Normal Operation | 4-3 |

CHECKLIST PROCEDURES

| | |
|-------------------------------------|------|
| Preflight Inspection | 4-5 |
| Cabin | 4-5 |
| Empennage | 4-5 |
| Right Wing, Trailing Edge | 4-5 |
| Right Wing | 4-5 |
| Nose | 4-6 |
| Left Wing | 4-6 |
| Left Wing, Leading Edge | 4-6 |
| Left Wing, Trailing Edge | 4-7 |
| Before Starting Engine | 4-7 |
| Starting Engine | 4-7 |
| Before Takeoff | 4-8 |
| Takeoff | 4-8 |
| Normal Takeoff | 4-8 |
| Short Field Takeoff | 4-9 |
| Enroute Climb | 4-9 |
| Normal Climb | 4-9 |
| Maximum Performance Climb | 4-9 |
| Cruise | 4-10 |
| Descent | 4-10 |
| Before Landing | 4-10 |
| Landing | 4-10 |
| Normal Landing | 4-10 |
| Short Field Landing | 4-11 |
| Balked Landing | 4-11 |
| After Landing | 4-11 |
| Securing Airplane | 4-11 |

TABLE OF CONTENTS (Continued)

| | Page |
|----------------------------------|------|
| AMPLIFIED PROCEDURES | |
| Starting Engine | 4-13 |
| Taxiing | 4-13 |
| Before Takeoff | 4-15 |
| Warm-Up | 4-15 |
| Magnetos Check | 4-15 |
| Alternator Check | 4-15 |
| Takeoff | 4-15 |
| Power Check | 4-15 |
| Wing Flap Settings | 4-16 |
| Crosswind Takeoff | 4-16 |
| Enroute Climb | 4-17 |
| Cruise | 4-17 |
| Stalls | 4-19 |
| Landing | 4-19 |
| Normal Landing | 4-19 |
| Short Field Landing | 4-20 |
| Crosswind Landing | 4-20 |
| Balked Landing | 4-20 |
| Cold Weather Operation | 4-20 |
| Starting | 4-20 |
| Operation | 4-22 |
| Hot Weather Operation | 4-22 |
| Noise Characteristics | 4-22 |

INTRODUCTION

Section 4 provides checklist and amplified procedures for the conduct of normal operation. Normal procedures associated with optional systems can be found in Section 9.

SPEEDS FOR NORMAL OPERATION

Unless otherwise noted, the following speeds are based on the maximum takeoff weight or maximum landing weight, and may be used for any lesser weight. However, to achieve the performance specified in Section 5 for takeoff distance, the speed appropriate to the particular weight must be used.

Takeoff:

| | |
|--|------------|
| Normal Climb Out | 70-80 KIAS |
| Short Field Takeoff, Flaps 20°, Speed at 50 Feet | 58 KIAS |

Enroute Climb, Flaps Up:

| | |
|--|-------------|
| Normal | 90-100 KIAS |
| Best Rate of Climb, Sea Level | 87 KIAS |
| Best Rate of Climb, 20,000 Feet | 84 KIAS |
| Best Angle of Climb, Sea Level | 73 KIAS |
| Best Angle of Climb, 10,000 Feet | 75 KIAS |

Landing Approach:

| | |
|---|------------|
| Normal Approach, Flaps Up | 70-80 KIAS |
| Normal Approach, Flaps 40° | 60-70 KIAS |
| Short Field Approach, Flaps 40° | 61 KIAS |

Balked Landing:


| | |
|------------------------------------|---------|
| Maximum Power, Flaps 20° | 60 KIAS |
|------------------------------------|---------|

Maximum Recommended Turbulent Air Penetration Speed:

| | |
|--------------------|----------|
| 3100 Lbs | 111 KIAS |
| 2600 Lbs | 101 KIAS |
| 2100 Lbs | 90 KIAS |

Maximum Demonstrated Crosswind Velocity:

| | |
|------------------------------|----------|
| Takeoff or Landing | 15 KNOTS |
|------------------------------|----------|

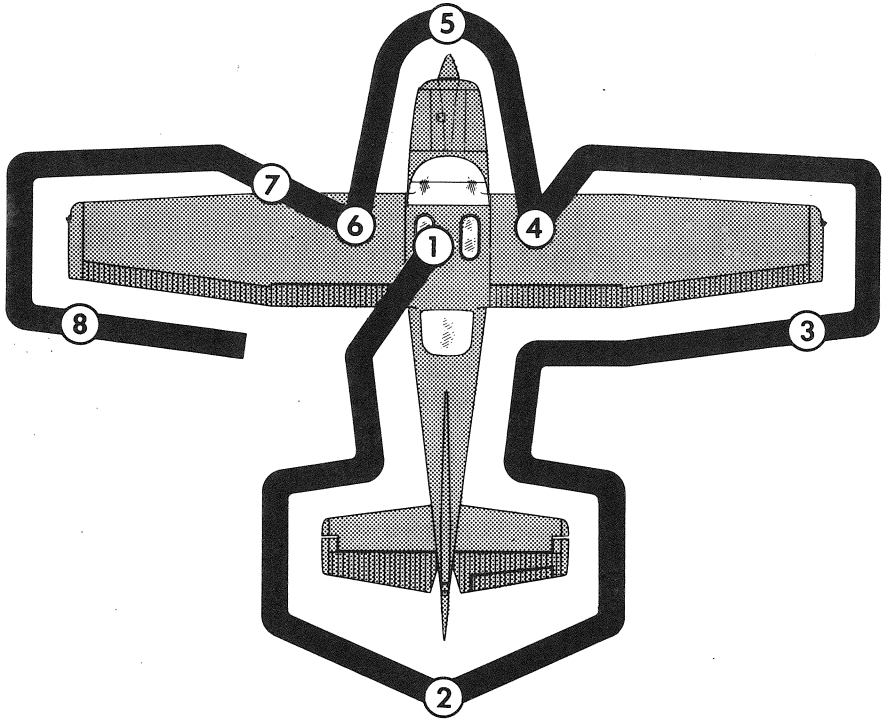

NOTE

Visually check airplane for general condition during walk-around inspection. In cold weather, remove even small accumulations of frost, ice or snow from wing, tail and control surfaces. Also, make sure that control surfaces contain no internal accumulations of ice or debris. Prior to flight, check that pitot heater (if installed) is warm to touch within 30 seconds with battery and pitot heat switches on. If a night flight is planned, check operation of all lights, and make sure a flashlight is available.

Figure 4-1. Preflight Inspection

CHECKLIST PROCEDURES

PREFLIGHT INSPECTION

① CABIN

1. Pilot's Operating Handbook -- AVAILABLE IN THE AIRPLANE.
2. Control Wheel Lock -- REMOVE.
3. Ignition Switch -- OFF.
4. Avionics Power Switch -- OFF.
5. Master Switch -- ON.

WARNING

When turning on the master switch, using an external power source, or pulling the propeller through by hand, treat the propeller as if the ignition switch were on. Do not stand, nor allow anyone else to stand, within the arc of the propeller since a loose or broken wire or a component malfunction could cause the propeller to rotate.

6. Fuel Quantity Indicators -- CHECK QUANTITY.
7. Avionics Cooling Fan -- CHECK AUDIBLY FOR OPERATION.
8. Master Switch -- OFF.
9. Static Pressure Alternate Source Valve -- OFF.
10. Fuel Selector Valve -- BOTH.
11. Baggage Door -- CHECK for security, lock with key if child's seat is to be occupied.

② EMPENNAGE

1. Rudder Gust Lock -- REMOVE.
2. Tail Tie-Down -- DISCONNECT.
3. Control Surfaces -- CHECK freedom of movement and security.

③ RIGHT WING Trailing Edge

1. Aileron -- CHECK freedom of movement and security.

④ RIGHT WING

1. Wing Tie-Down -- DISCONNECT.
2. Fuel Tank Vent Opening -- CHECK for stoppage.
3. Main Wheel Tire -- CHECK for proper inflation.

SECTION 4
NORMAL PROCEDURES

CESSNA
MODEL T182

4. Before first flight of the day and after each refueling, use sampler cup and drain small quantity of fuel from fuel tank sump quick drain valve to check for water, sediment, and proper fuel grade.
5. Fuel Quantity -- CHECK VISUALLY for desired level.
6. Fuel Filler Cap -- SECURE and vent unobstructed.

5 NOSE

1. Static Source Openings (both sides of fuselage) --CHECK for stoppage.
2. Propeller and Spinner -- CHECK for nicks, security and oil leaks.
3. Landing Lights -- CHECK for condition and cleanliness.
4. Engine Induction Air Inlet -- CHECK for restrictions.
5. Nose Wheel Strut and Tire -- CHECK for proper inflation.
6. Nose Tie-Down -- DISCONNECT.
7. Engine Oil Level -- CHECK. Do not operate with less than five quarts. Fill to eight quarts for extended flight.

NOTE

To check oil level, remove dipstick, wipe clean and reinsert. Wait 5 seconds and then check oil level for an accurate reading.

8. Before first flight of the day and after each refueling, pull out strainer drain knob for about four seconds to clear fuel strainer of possible water and sediment. Check strainer drain closed. If water is observed, the fuel system may contain additional water, and further draining of the system at the strainer, fuel tank sumps, and fuel selector valve drain plug will be necessary.

6 LEFT WING

1. Main Wheel Tire -- CHECK for proper inflation.
2. Before first flight of day and after each refueling, use sampler cup and drain small quantity of fuel from fuel tank sump quick-drain valve to check for water, sediment and proper fuel grade.
3. Fuel Quantity -- CHECK VISUALLY for desired level.
4. Fuel Filler Cap -- SECURE and vent unobstructed.

7 LEFT WING Leading Edge

1. Pitot Tube Cover -- REMOVE and check opening for stoppage.
2. Fuel Tank Vent Opening -- CHECK for stoppage.
3. Stall Warning Vane -- CHECK for freedom of movement while master switch is momentarily turned ON (horn should sound when vane is pushed upward).
4. Wing Tie-Down -- DISCONNECT.

⑧ LEFT WING Trailing Edge

1. Aileron -- CHECK for freedom of movement and security.

BEFORE STARTING ENGINE

1. Preflight Inspection -- COMPLETE.
2. Seats, Seat Belts, Shoulder Harnesses -- ADJUST and LOCK.
3. Fuel Selector Valve -- BOTH.
4. Avionics Power Switch, Autopilot (if installed), Electrical Equipment -- OFF.

CAUTION

The avionics power switch must be OFF during engine start to prevent possible damage to avionics.

5. Brakes -- TEST and SET.
6. Cowl Flaps -- OPEN (move lever out of locking hole to reposition).
7. Circuit Breakers -- CHECK IN.

STARTING ENGINE

1. Mixture -- RICH.
2. Propeller -- HIGH RPM.
3. Carburetor Heat -- COLD.
4. Throttle -- CLOSED.

NOTE

The carburetor does not have an accelerator pump; therefore, pumping of the throttle **must be avoided during starting** because doing so will only cause excessive leaning.

5. Prime -- AS REQUIRED (2 to 4 strokes in cold weather).
6. Master Switch -- ON.
7. Auxiliary Fuel Pump -- ON (check for rise in fuel pressure), then OFF.
8. Propeller Area -- CLEAR.
9. Ignition Switch -- START (release when engine starts).

NOTE

If engine does not start after 5 seconds of cranking in warm weather, crack throttle 1/8 inch and crank again.

SECTION 4 NORMAL PROCEDURES

CESSNA
MODEL T182

10. Oil Pressure -- CHECK.
11. Flashing Beacon and Navigation Lights -- ON as required.
12. Avionics Power Switch -- ON.
13. Radios -- ON.

BEFORE TAKEOFF

1. Cabin Doors and Windows -- CLOSED and LOCKED.
2. Parking Brake -- SET.
3. Seats, Seat Belts, Shoulder Harnesses -- SECURE.
4. Flight Controls -- FREE and CORRECT.
5. Flight Instruments -- SET.
6. Fuel Selector Valve -- BOTH.
7. Mixture -- RICH.

NOTE

In flight, gravity feed will normally supply satisfactory fuel flow if the engine-driven fuel pump should fail. However, if a fuel pump failure in flight causes the fuel pressure to drop below 3.0 PSI, use the auxiliary fuel pump to assure proper engine operation.

8. Elevator and Rudder Trim -- TAKEOFF.
9. Throttle -- 1700 RPM.
 - a. Magnetos -- CHECK (RPM drop should not exceed 175 RPM on either magneto or 50 RPM differential between magnetos).
 - b. Propeller -- CYCLE from high to low RPM; return to high RPM (full in).
 - c. Carburetor Heat -- CHECK (for RPM drop and indication on carburetor temperature gage).
 - d. Engine Instruments and Ammeter -- CHECK.
 - e. Suction Gage -- CHECK.
10. Throttle -- 800-1000 RPM.
11. Radios -- SET.
12. Autopilot (if installed) -- OFF.
13. Air Conditioner (if installed) -- OFF.
14. Strobe Lights (if installed) -- AS DESIRED.
15. Throttle Friction Lock -- ADJUST.
16. Parking Brake -- RELEASE.

TAKEOFF

NORMAL TAKEOFF

1. Wing Flaps -- 0° - 20°.

2. Carburetor Heat -- COLD.
3. Power -- 31 INCHES Hg (Maximum) and 2400 RPM.

NOTE

To avoid overboosting the engine, do not use full throttle for takeoff.

4. Mixture -- FULL RICH.
5. Elevator Control -- LIFT NOSE WHEEL AT 50 KIAS.
6. Climb Speed -- 70 KIAS (flaps 20°).
80 KIAS (flaps UP).
7. Wing Flaps -- RETRACT.

SHORT FIELD TAKEOFF

1. Wing Flaps -- 20°.
2. Carburetor Heat -- COLD.
3. Brakes -- APPLY.
4. Power -- 31 INCHES Hg (Maximum) and 2400 RPM.

NOTE

To avoid overboosting the engine, do not use full throttle for takeoff.

5. Mixture -- FULL RICH.
6. Brakes -- RELEASE.
7. Elevator Control -- MAINTAIN SLIGHTLY TAIL-LOW ATTITUDE.
8. Climb Speed -- 58 KIAS (until all obstacles are cleared).
9. Wing Flaps -- RETRACT slowly after reaching 70 KIAS.

ENROUTE CLIMB

NORMAL CLIMB

1. Airspeed -- 90-100 KIAS.
2. Power -- 25 INCHES Hg and 2400 RPM.
3. Fuel Selector Valve -- BOTH.
4. Mixture -- FULL RICH.
5. Cowl Flaps -- OPEN as required.

MAXIMUM PERFORMANCE CLIMB

1. Airspeed -- 87 KIAS at sea level to 84 KIAS at 20,000 feet.

SECTION 4 NORMAL PROCEDURES

CESSNA
MODEL T182

2. Power -- 31 INCHES Hg and 2400 RPM.
3. Fuel Selector Valve -- BOTH.
4. Mixture -- FULL RICH.
5. Cowl Flaps -- FULL OPEN.

CRUISE

1. Power -- 17-25 INCHES Hg, 2100-2400 RPM.
2. Elevator and Rudder Trim -- ADJUST.
3. Mixture -- LEAN.
4. Cowl Flaps -- CLOSED.

DESCENT

1. Fuel Selector Valve -- BOTH.
2. Power -- AS DESIRED.
3. Carburetor Heat -- AS REQUIRED to prevent carburetor icing.
4. Mixture -- LEAN for smoothness.
5. Cowl Flaps -- CLOSED.
6. Wing Flaps -- AS DESIRED (0° - 10° below 140 KIAS, 10° - 40° below 95 KIAS).

BEFORE LANDING

1. Seats, Seat Belts, Shoulder Harnesses -- ADJUST and LOCK.
2. Fuel Selector Valve -- BOTH.
3. Mixture -- RICH.
4. Carburetor Heat -- ON (apply full heat before reducing power).
5. Propeller -- HIGH RPM.
6. Autopilot (if installed) -- OFF.
7. Air Conditioner (if installed) -- OFF.

LANDING

NORMAL LANDING

1. Airspeed -- 70-80 KIAS (flaps UP).
2. Wing Flaps -- AS DESIRED (0° - 10° below 140 KIAS, 10° - 40° below 95 KIAS).

3. Airspeed -- 60-70 KIAS (flaps DOWN).
4. Trim -- ADJUST.
5. Touchdown -- MAIN WHEELS FIRST.
6. Landing Roll -- LOWER NOSE WHEEL GENTLY.
7. Braking -- MINIMUM REQUIRED.

SHORT FIELD LANDING

1. Airspeed -- 70-80 KIAS (flaps UP).
2. Wing Flaps -- 40° (below 95 KIAS).
3. Airspeed -- MAINTAIN 61 KIAS.
4. Trim -- ADJUST.
5. Power -- REDUCE to idle as obstacle is cleared.
6. Touchdown -- MAIN WHEELS FIRST.
7. Brakes -- APPLY HEAVILY.
8. Wing Flaps -- RETRACT for maximum brake effectiveness.

BALKED LANDING

1. Power -- 31 INCHES Hg and 2400 RPM.
2. Wing Flaps -- RETRACT to 20°.
3. Climb Speed -- 60 KIAS until all obstacles are cleared.
4. Wing Flaps -- RETRACT slowly.
5. Cowl Flaps -- OPEN.
6. Manifold Pressure -- REDUCE TO 25 INCHES Hg.
7. Carburetor Heat -- COLD.
8. Power -- READJUST as desired.

AFTER LANDING

1. Wing Flaps -- UP.
2. Carburetor Heat -- COLD.
3. Cowl Flaps -- OPEN.

SECURING AIRPLANE

1. Parking Brake -- SET.
2. Throttle -- IDLE.
3. Avionics Power Switch, Electrical Equipment -- OFF.
4. Mixture -- IDLE CUT-OFF (pulled full out).
5. Ignition Switch -- OFF.
6. Master Switch -- OFF.
7. Control Lock -- INSTALL.
8. Fuel Selector Valve -- RIGHT or LEFT to prevent crossfeeding.

AMPLIFIED PROCEDURES

STARTING ENGINE

Proper fuel management and throttle adjustments are the determining factors in securing an easy start from your turbocharged, carbureted engine. The procedure outlined in this section should be followed closely as it is effective under nearly all operating conditions.

Conventional full rich mixture and high RPM propeller settings are used for starting; however, the throttle should be fully closed. When ready to start, place the ignition switch in the start position. In warm weather, if the engine does not start after 5 seconds of cranking, crack the throttle 1/8 inch open and crank again. When the engine starts, slowly adjust the throttle to the desired idle speed.

NOTE

The carburetor used on this airplane does not have an accelerator pump; therefore, pumping of the throttle **must be avoided during starting** because doing so will only cause excessive leaning.

In cold weather, 2 strokes of the primer may be necessary prior to starting. During extremely cold temperatures, up to 4 strokes of the primer may be necessary.

NOTE

Additional details concerning cold weather starting and operation may be found under COLD WEATHER OPERATION paragraphs in this section.

TAXIING

When taxiing, it is important that speed and use of brakes be held to a minimum and that all controls be utilized (see Taxiing Diagram, figure 4-2) to maintain directional control and balance.

The carburetor heat control knob should be pushed full in during all ground operations unless heat is absolutely necessary for smooth engine operation. When the knob is pulled out to the heat position, air entering the engine is not filtered.

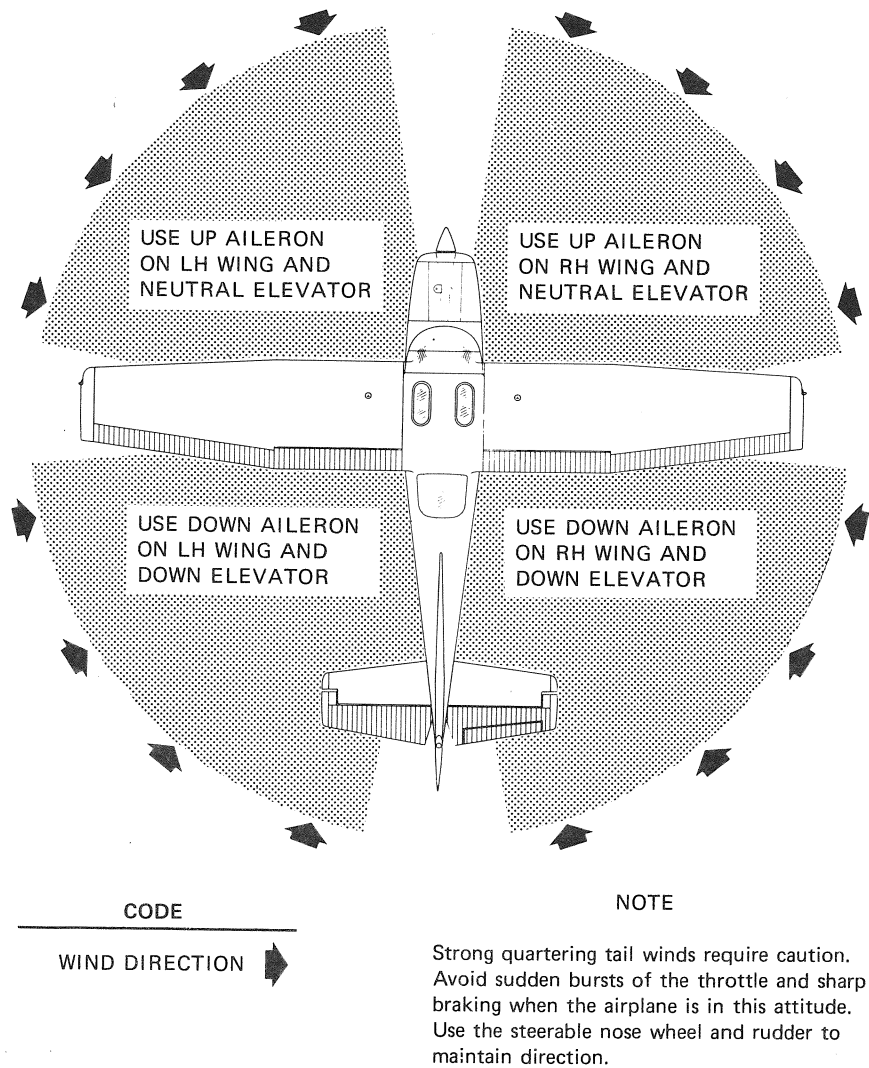


Figure 4-2. Taxiing Diagram

Taxiing over loose gravel or cinders should be done at low engine speed to avoid abrasion and stone damage to the propeller tips.

BEFORE TAKEOFF

WARM-UP

Since the engine is closely cowled for efficient in-flight cooling, precautions should be taken to avoid overheating on the ground. Full power checks on the ground are not recommended unless the pilot has good reason to suspect that the engine is not turning up properly.

MAGNETO CHECK

The magneto check should be made at 1700 RPM as follows. Move ignition switch first to R position and note RPM. Next move switch back to BOTH to clear the other set of plugs. Then move switch to the L position, note RPM and return the switch to the BOTH position. RPM drop should not exceed 175 RPM on either magneto or show greater than 50 RPM differential between magnetos. If there is a doubt concerning operation of the ignition system, RPM checks at higher engine speeds will usually confirm whether a deficiency exists.

An absence of RPM drop may be an indication of faulty grounding of one side of the ignition system or should be cause for suspicion that the magneto timing is set in advance of the setting specified.

ALTERNATOR CHECK

Prior to flights where verification of proper alternator and alternator control unit operation is essential (such as night or instrument flights), a positive verification can be made by loading the electrical system momentarily (3 to 5 seconds) with the landing lights during the engine runup (1700 RPM). The ammeter will remain within a needle width of the initial reading if the alternator and alternator control unit are operating properly.

TAKEOFF

POWER CHECK

It is important to check takeoff power early in the takeoff run. Full throttle will not be necessary to maintain the maximum rated manifold pressure. Any sign of rough engine operation or sluggish engine acceleration is good cause for discontinuing the takeoff.

Full power runups over loose gravel are especially harmful to propeller tips. When takeoffs must be made over a gravel surface, it is very important that the throttle be advanced slowly. This allows the airplane to start rolling before high RPM is developed, and the gravel will be blown back of the propeller rather than pulled into it. When unavoidable small dents appear in the propeller blades they should be corrected immediately as described in Section 8 under Propeller Care.

After a manifold pressure of 31 inches Hg is obtained, adjust the throttle friction lock clockwise to prevent the throttle from creeping from a maximum power position. Similar friction lock adjustment should be made as required in other flight conditions to maintain a fixed throttle setting.

WING FLAP SETTINGS

Normal takeoffs are accomplished with wing flaps 0° to 20°. Using 20° wing flaps reduces the ground run and total distance over an obstacle by approximately 20 per cent. Flap deflections greater than 20° are not approved for takeoff.

If 20° wing flaps are used for takeoff, they should be left down until all obstacles are cleared and a safe flap retraction speed of 70 KIAS is reached. To clear an obstacle with wing flaps 20°, an obstacle clearance speed of 58 KIAS should be used.

Soft field takeoffs are performed with 20° flaps by lifting the airplane off the ground as soon as practical in a slightly tail-low attitude. If no obstacles are ahead, the airplane should be leveled off immediately to accelerate to a safer climb speed.

With wing flaps retracted and no obstructions ahead, a climb-out speed of 87 KIAS would be most efficient.

CROSSWIND TAKEOFF

Takeoffs into strong crosswinds normally are performed with the minimum flap setting necessary for the field length, to minimize the drift angle immediately after takeoff. With the ailerons partially deflected into the wind, the airplane is accelerated to a speed slightly higher than normal, and then pulled off abruptly to prevent possible settling back to the runway while drifting. When clear of the ground, make a coordinated turn into the wind to correct for drift.

ENROUTE CLIMB

Normal climbs are performed at 90-100 KIAS with flaps up, 25 inches of manifold pressure, 2400 RPM, and full rich mixture for the best combination of engine cooling, rate of climb and forward visibility. If it is necessary to climb rapidly to clear mountains or reach favorable winds at high altitudes, the best rate-of-climb speed should be used with maximum power of 31 inches Hg, 2400 RPM and full rich mixture. This speed is 87 KIAS at sea level, decreasing to 84 KIAS at 20,000 feet.

If an obstruction ahead requires a steep climb angle, a best angle-of-climb speed should be used with flaps up and maximum power. This speed is 73 KIAS at sea level, increasing to 75 KIAS at 10,000 feet.

CRUISE

Normal cruising is performed between 55% and 75% power. The corresponding power settings and fuel consumption for various altitudes can be determined by using your Cessna Power Computer or the data in Section 5.

NOTE

Cruising should be done at 75% power as much as practical until a total of 25 hours has accumulated or oil consumption has stabilized. Operation at this higher power will ensure proper seating of the rings and is applicable to new engines, and engines in service following cylinder replacement or top overhaul of one or more cylinders.

The Cruise Performance Table, figure 4-3, illustrates the true airspeed and nautical miles per gallon during cruise for various altitudes and percent powers. This table should be used as a guide, along with the available winds aloft information, to determine the most favorable altitudes and power setting for a given trip. The selection of cruise altitude on the basis of the most favorable wind conditions and the use of low power settings are significant factors that should be considered on every trip to reduce fuel consumption.

For reduced noise levels, it is desirable to select the lowest RPM in the green arc range for a given percent power that will provide smooth engine operation. The cowl flaps should be opened, if necessary, to maintain the cylinder head temperature at approximately two-thirds of the normal operating range (green arc).

SECTION 4
NORMAL PROCEDURES

CESSNA
MODEL T182

| | 75% POWER | | 65% POWER | | 55% POWER | |
|---------------------|-----------|------|-----------|------|-----------|------|
| ALTITUDE | KTAS | NMPG | KTAS | NMPG | KTAS | NMPG |
| 5000 | 139 | 9.8 | 130 | 10.5 | 120 | 11.3 |
| 10,000 | 145 | 10.2 | 135 | 10.9 | 124 | 11.7 |
| 15,000 | 151 | 10.6 | 141 | 11.4 | 129 | 12.1 |
| 20,000 | 158 | 11.1 | 147 | 11.9 | 133 | 12.5 |
| Standard Conditions | | | | | Zero Wind | |

Figure 4-3. Cruise Performance Table

Cruise performance data in this handbook and on the power computer is based on a recommended lean mixture setting which is established by reference to exhaust gas temperature (EGT) as shown on the Cessna Economy Mixture Indicator. To adjust the mixture, lean to establish the peak EGT as a reference point and then enrichen the mixture by 50°F.

For best fuel economy the engine may be operated at peak EGT. This results in approximately 7% greater range than shown in this handbook accompanied by approximately 4 knots decrease in speed.

When leaning the mixture under some conditions, engine roughness may occur before peak EGT is reached. In this case, continue to lean until peak EGT is established, then enrichen to any desired mixture setting that allows smooth engine operation.

The mixture may be leaned during descent to provide smooth engine operation and improved fuel economy. Any change in altitude, power or carburetor heat will require a change in the mixture setting and a recheck of the EGT.

Carburetor ice, as evidenced by an unexplained drop in manifold pressure, can be removed by application of full carburetor heat. Upon regaining the original manifold pressure indication (with heat off), use the minimum amount of heat (by trial and error) to prevent ice from forming. When operating above approximately 5000 feet at maximum recommended cruise power, the heat available from turbocharging increases with altitude and carburetor icing becomes less likely.

| MIXTURE DESCRIPTION | EXHAUST GAS TEMPERATURE |
|--|----------------------------|
| RECOMMENDED LEAN (Pilot's Operating Handbook and Power Computer) | 50°F Rich of Peak EGT |
| BEST ECONOMY | Peak EGT |

Figure 4-4. EGT Table

Carburetor heat may be used as an alternate air source in the event the induction air filter becomes blocked. However, since application of full carburetor heat at high altitudes may result in the loss of as much as 10 inches of manifold pressure, carburetor heat should be used only as necessary. With carburetor heat on, throttle and mixture should be readjusted as necessary.

STALLS

The stall characteristics are conventional and aural warning is provided by a stall warning horn which sounds between 5 and 10 knots above the stall in all configurations. Altitude loss during stall recovery may be as much as 300 feet.

Power-off stall speeds at maximum weight for both forward and aft C.G. positions are presented in Section 5.

LANDING

NORMAL LANDING

Landings should be made on the main wheels first to reduce the landing speed and the subsequent need for braking in the landing roll. The nose wheel is lowered gently to the runway after the speed has diminished to avoid unnecessary nose gear load. This procedure is especially important in rough field landings.

SHORT FIELD LANDING

For a short field landing, make a power-off approach at 61 KIAS with 40° flaps and land on the main wheels first. Immediately after touchdown, lower the nose gear to the ground and apply heavy braking as required. For maximum brake effectiveness after all three wheels are on the ground, retract the flaps, hold full nose up elevator and apply maximum possible brake pressure without sliding the tires.

CROSSWIND LANDING

When landing in a strong crosswind, use the minimum flap setting required for the field length. Although the crab or combination method of drift correction may be used, the wing-low method gives the best control. After touchdown, hold a straight course with the steerable nose wheel and occasional braking if necessary.

BALKED LANDING

In a bailed landing (go-around) climb, the wing flap setting should be reduced to 20° immediately after full power is applied. After all obstacles are cleared and a safe altitude and airspeed are obtained, the wing flaps should be retracted. To prevent overboosting the engine, power should then be reduced to approximately 25 inches of manifold pressure before the carburetor heat control is placed in the cold position.

COLD WEATHER OPERATION

STARTING

Prior to starting on cold mornings, it is advisable to pull the propeller through several times by hand to "break loose" or "limber" the oil, thus conserving battery energy.

NOTE

When pulling the propeller through by hand, treat it as if the ignition switch is turned on. A loose or broken ground wire on either magneto could cause the engine to fire.

In extremely cold (-18°C and lower) weather, the use of an external pre-heater and an external power source are recommended whenever possible to obtain positive starting and to reduce wear and abuse to the engine and the electrical system. Pre-heat will thaw the oil trapped in the oil cooler, which probably will be congealed prior to starting in extremely cold

temperatures. When using an external power source, the position of the master switch is important. Refer to Section 9, Supplements, for Ground Service Plug Receptacle operating details.

Cold weather starting procedures are as follows:

With Preheat:

1. With ignition switch turned off, mixture full rich and throttle closed, prime the engine one to two strokes.

NOTE

Use heavy strokes of the primer for best atomization of fuel. After priming, push primer all the way in and turn to the locked position to avoid the possibility of the engine drawing fuel through the primer.

2. Propeller -- CLEAR.
3. Avionics Power Switch -- OFF.
4. Master Switch -- ON.
5. Throttle -- CLOSED until engine starts.
6. Ignition Switch -- START (release to BOTH when engine starts).

Without Preheat:

1. Prime the engine two to four strokes with mixture full rich and throttle closed.
2. Propeller -- CLEAR.
3. Avionics Power Switch -- OFF.
4. Master Switch -- ON.
5. Throttle -- CLOSED until engine starts.
6. Ignition Switch -- START.
7. Release ignition switch to BOTH when engine starts.
8. Oil Pressure -- CHECK.
9. Primer -- LOCK.

NOTE

If the engine does not start during the first few attempts, or if engine firing diminishes in strength, it is probable that the spark plugs have been frosted over. Preheat must be used before another start is attempted.

NOTE

Pumping of the throttle will make starting more difficult

due to a rapidly varying mixture. The carburetor is not equipped with an accelerator pump.

OPERATION

During cold weather operations, no indication will be apparent on the oil temperature gage prior to takeoff if outside air temperatures are very cold. After a suitable warm-up period (2 to 5 minutes at 1000 RPM), smoothly accelerate the engine several times to higher engine RPM. If the engine accelerates smoothly and the oil pressure remains normal and steady, the airplane is ready for takeoff.

Rough engine operation in cold weather can be caused by a combination of an inherently leaner mixture due to the dense air and poor vaporization and distribution of the fuel-air mixture to the cylinders. The effects of these conditions are especially noticeable during operation on one magneto in ground checks where only one spark plug fires in each cylinder.

For optimum operation of the engine in cold weather, the appropriate use of carburetor heat may be necessary. The following procedures are indicated as a guideline:

1. Use the minimum carburetor heat required for smooth operation in takeoff, climb, and cruise.

NOTE

Care should be exercised when using partial carburetor heat to avoid icing. Partial heat may raise the carburetor air temperature to 0° to 21°C range where icing is critical under certain atmospheric conditions.

2. The carburetor air temperature gage can be used as a reference in maintaining carburetor air temperature at or slightly above the top of the yellow arc by application of carburetor heat.

HOT WEATHER OPERATION

The general warm temperature starting information in this section is appropriate. Avoid prolonged engine operation on the ground.

NOISE CHARACTERISTICS

Increased emphasis on improving the quality of our environment

requires renewed effort on the part of all pilots to minimize the effect of airplane noise on the public.

We, as pilots, can demonstrate our concern for environmental improvement, by application of the following suggested procedures, and thereby tend to build public support for aviation:

1. Pilots operating aircraft under VFR over outdoor assemblies of persons, recreational and park areas, and other noise-sensitive areas should make every effort to fly not less than 2000 feet above the surface, weather permitting, even though flight at a lower level may be consistent with the provisions of government regulations.
2. During departure from or approach to an airport, climb after takeoff and descent for landing should be made so as to avoid prolonged flight at low altitude near noise-sensitive areas.

NOTE

The above recommended procedures do not apply where they would conflict with Air Traffic Control clearances or instructions, or where, in the pilot's judgment, an altitude of less than 2000 feet is necessary for him to adequately exercise his duty to see and avoid other aircraft.

The certificated noise level for the Model T182 at 3100 pounds maximum weight is 72.5 dB(A) with a two-bladed propeller and 68.8 dB(A) with a three-bladed propeller. No determination has been made by the Federal Aviation Administration that the noise levels of this airplane are or should be acceptable or unacceptable for operation at, into, or out of, any airport.

SECTION 5

PERFORMANCE

TABLE OF CONTENTS

| | Page |
|---|------|
| Introduction | 5-3 |
| Use of Performance Charts | 5-3 |
| Sample Problem | 5-3 |
| Takeoff | 5-4 |
| Cruise | 5-5 |
| Fuel Required | 5-5 |
| Landing | 5-7 |
| Demonstrated Operating Temperature | 5-7 |
| Figure 5-1, Airspeed Calibration - Normal Static Source | 5-8 |
| Airspeed Calibration - Alternate Static Source | 5-9 |
| Figure 5-2, Temperature Conversion Chart | 5-10 |
| Figure 5-3, Stall Speeds | 5-11 |
| Figure 5-4, Takeoff Distance - 3100 Lbs | 5-12 |
| Takeoff Distance - 2800 Lbs And 2500 Lbs | 5-13 |
| Figure 5-5, Maximum Rate Of Climb | 5-14 |
| Figure 5-6, Time, Fuel, And Distance To Climb - | |
| Maximum Rate Of Climb | 5-15 |
| Time, Fuel, And Distance To Climb - | |
| Normal Climb | 5-16 |
| Figure 5-7, Cruise Performance - 2000 Feet | 5-17 |
| Cruise Performance - 4000 Feet | 5-18 |
| Cruise Performance - 6000 Feet | 5-19 |
| Cruise Performance - 8000 Feet | 5-20 |
| Cruise Performance - 10,000 Feet | 5-21 |
| Cruise Performance - 12,000 Feet | 5-22 |
| Cruise Performance - 14,000 Feet | 5-23 |
| Cruise Performance - 16,000 Feet | 5-24 |
| Cruise Performance - 18,000 Feet | 5-25 |
| Cruise Performance - 20,000 Feet | 5-26 |
| Figure 5-8, Range Profile - 65 Gallons Fuel | 5-27 |
| Range Profile - 88 Gallons Fuel | 5-28 |
| Figure 5-9, Endurance Profile - 65 Gallons Fuel | 5-29 |
| Endurance Profile - 88 Gallons Fuel | 5-30 |
| Figure 5-10, Landing Distance | 5-31 |

INTRODUCTION

Performance data charts on the following pages are presented so that you may know what to expect from the airplane under various conditions, and also, to facilitate the planning of flights in detail and with reasonable accuracy. The data in the charts has been computed from actual flight tests with the airplane and engine in good condition and using average piloting techniques.

It should be noted that the performance information presented in the range and endurance profile charts allows for 45 minutes reserve fuel at the specified cruise power. Fuel flow data for cruise is based on the recommended lean mixture setting. Some indeterminate variables such as mixture leaning technique, fuel metering characteristics, engine and propeller condition, and air turbulence may account for variations of 10% or more in range and endurance. Therefore, it is important to utilize all available information to estimate the fuel required for the particular flight.

USE OF PERFORMANCE CHARTS

Performance data is presented in tabular or graphical form to illustrate the effect of different variables. Sufficiently detailed information is provided in the tables so that conservative values can be selected and used to determine the particular performance figure with reasonable accuracy.

SAMPLE PROBLEM

The following sample flight problem utilizes information from the various charts to determine the predicted performance data for a typical flight. The following information is known:

AIRPLANE CONFIGURATION

| | |
|----------------|-------------|
| Takeoff weight | 3050 Pounds |
| Usable fuel | 65 Gallons |

TAKEOFF CONDITIONS

| | |
|-----------------------------|----------------------------|
| Field pressure altitude | 3500 Feet |
| Temperature | 24°C (16°C above standard) |
| Wind component along runway | 12 Knot Headwind |
| Field length | 3500 Feet |

SECTION 5 PERFORMANCE

CESSNA
MODEL T182

CRUISE CONDITIONS

| | |
|-----------------------|--------------------|
| Total distance | 480 Nautical Miles |
| Pressure altitude | 11,500 Feet |
| Temperature | 8°C |
| Expected wind enroute | 10 Knot Headwind |

LANDING CONDITIONS

| | |
|-------------------------|-----------|
| Field pressure altitude | 3000 Feet |
| Temperature | 25°C |
| Field length | 3000 Feet |

TAKEOFF

The takeoff distance chart, figure 5-4, should be consulted, keeping in mind that the distances shown are based on the short field technique. Conservative distances can be established by reading the chart at the next higher value of weight, altitude and temperature. For example, in this particular sample problem, the takeoff distance information presented for a weight of 3100 pounds, pressure altitude of 4000 feet and a temperature of 30°C should be used and results in the following:

| | |
|--|-----------|
| Ground roll | 1165 Feet |
| Total distance to clear a 50-foot obstacle | 2145 Feet |

These distances are well within the available takeoff field length. However, a correction for the effect of wind may be made based on Note 2 of the takeoff chart. The correction for a 12 knot headwind is:

$$\frac{12 \text{ Knots}}{9 \text{ Knots}} \times 10\% = 13\% \text{ Decrease}$$

This results in the following distances, corrected for wind:

| | |
|--|------------|
| Ground roll, zero wind | 1165 |
| Decrease in ground roll (1165 feet × 13%) | <u>151</u> |
| Corrected ground roll | 1014 Feet |
| Total distance to clear a 50-foot obstacle, zero wind | 2145 |
| Decrease in total distance (2145 feet × 13%) | <u>279</u> |
| Corrected total distance to clear 50-foot obstacle | 1866 Feet |

CRUISE

The cruising altitude should be selected based on a consideration of trip length, winds aloft, and the airplane's performance. A cruising altitude and the expected wind enroute have been given for this sample problem. However, the power setting selection for cruise must be determined based on several considerations. These include the cruise performance characteristics presented in figure 5-7, the range profile chart presented in figure 5-8, and the endurance profile chart presented in figure 5-9.

The relationship between power and range is illustrated by the range profile chart. Considerable fuel savings and longer range result when lower power settings are used. For this sample problem, a cruise power of approximately 65% will be used.

The cruise performance chart for 12,000 feet pressure altitude is entered using 20°C above standard temperature. These values most nearly correspond to the planned altitude and expected temperature conditions. The power setting chosen is 2300 RPM and 23 inches of manifold pressure, which results in the following:

| | |
|------------------|-----------|
| Power | 66% |
| True airspeed | 141 Knots |
| Cruise fuel flow | 12.6 GPH |

The power computer may be used to determine power and fuel consumption more accurately during the flight.

FUEL REQUIRED

The total fuel requirement for the flight may be estimated using the performance information in figures 5-6 and 5-7. For this sample problem, the time, fuel, and distance to climb may be determined from figure 5-6 for a normal climb. The difference between the values shown in the table for 4000 feet and 12,000 feet results in the following:

| | |
|----------|-------------------|
| Time | 17 Minutes |
| Fuel | 6.1 Gallons |
| Distance | 31 Nautical Miles |

The above values are for a standard temperature and are sufficiently accurate for most flight planning purposes. However, a further correction for the effect of temperature may be made as noted on the climb chart. The approximate effect of a non-standard temperature is to increase the time, fuel, and distance by 10% for each 7°C above standard temperature, due to

SECTION 5
PERFORMANCE

CESSNA
MODEL T182

the lower rate of climb. In this case, assuming a temperature 16°C above standard, the correction would be:

$$\frac{16^{\circ}\text{C}}{7^{\circ}\text{C}} \times 10\% = 23\% \text{ Increase}$$

With this factor included, the fuel estimate would be calculated as follows:

| | |
|---|-------------|
| Fuel to climb, standard temperature | 6.1 |
| Increase due to non-standard temperature (6.1 × 23%) | <u>1.4</u> |
| Corrected fuel to climb | 7.5 Gallons |

Using a similar procedure for time and distance during a climb, the following results are obtained:

| | |
|-------------------|-------------------|
| Time to climb | 21 Minutes |
| Distance to climb | 38 Nautical Miles |

The distances shown on the climb chart are for zero wind. A correction for the effect of wind may be made as follows:

| | |
|--|-------------------|
| Distance with no wind | 38 |
| Decrease in distance due to wind (21/60 × 10 knot headwind) | <u>3</u> |
| Corrected Distance to Climb | 35 Nautical Miles |

The resultant cruise distance is:

| | |
|-----------------|--------------------|
| Total distance | 480 |
| Climb distance | <u>-35</u> |
| Cruise distance | 445 Nautical Miles |

With an expected 10 knot headwind, the ground speed for cruise is predicted to be:

$$\begin{array}{r} 141 \\ -10 \\ \hline 131 \text{ Knots} \end{array}$$

Therefore, the time required for the cruise portion of the trip is:

$$\frac{445 \text{ Nautical Miles}}{131 \text{ Knots}} = 3.4 \text{ Hours}$$

The fuel required for cruise is:

$$3.4 \text{ hours} \times 12.6 \text{ gallons/hour} = 42.8 \text{ Gallons}$$

A 45-minute reserve requires:

$$\frac{45}{60} \times 12.6 \text{ gallons/hour} = 9.5 \text{ Gallons}$$

The total estimated fuel required is as follows:

| | |
|---------------------------------|--------------|
| Engine start, taxi, and takeoff | 2.0 |
| Climb | 7.5 |
| Cruise | 42.8 |
| Reserve | <u>9.5</u> |
| Total fuel required | 61.8 Gallons |

Once the flight is underway, ground speed checks will provide a more accurate basis for estimating the time enroute and the corresponding fuel required to complete the trip with ample reserve.

LANDING

A procedure similar to takeoff should be used for estimating the landing distance at the destination airport. Figure 5-10 presents landing distance information for the short field technique. The distances corresponding to 3000 feet pressure altitude and a temperature of 30°C are as follows:

| | |
|--|-----------|
| Ground roll | 695 Feet |
| Total distance to clear a 50-foot obstacle | 1525 Feet |

A correction for the effect of wind may be made based on Note 2 of the landing chart using the same procedure as outlined for takeoff.

DEMONSTRATED OPERATING TEMPERATURE

Satisfactory engine cooling has been demonstrated for this airplane with an outside air temperature 23°C above standard. This is not to be considered as an operating limitation. Reference should be made to Section 2 for engine operating limitations.

AIRSPEED CALIBRATION
NORMAL STATIC SOURCE

CONDITIONS:
Power required for level flight or maximum power descent.

| | | | | | | | | | | | | | | |
|-----------|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| FLAPS UP | | | | | | | | | | | | | | |
| KIAS | 50 | 60 | 70 | 80 | 90 | 100 | 110 | 120 | 130 | 140 | 150 | 160 | 170 | |
| KCAS | 61 | 65 | 72 | 80 | 89 | 99 | 109 | 118 | 128 | 138 | 147 | 157 | 167 | |
| FLAPS 20° | | | | | | | | | | | | | | |
| KIAS | 40 | 50 | 60 | 70 | 80 | 90 | 95 | --- | --- | --- | --- | --- | --- | --- |
| KCAS | 54 | 58 | 63 | 71 | 80 | 89 | 94 | --- | --- | --- | --- | --- | --- | --- |
| FLAPS 40° | | | | | | | | | | | | | | |
| KIAS | 40 | 50 | 60 | 70 | 80 | 90 | 95 | --- | --- | --- | --- | --- | --- | --- |
| KCAS | 52 | 57 | 63 | 71 | 80 | 90 | 95 | --- | --- | --- | --- | --- | --- | --- |

Figure 5-1. Airspeed Calibration (Sheet 1 of 2)

AIRSPEED CALIBRATION

ALTERNATE STATIC SOURCE

HEATER OFF/VENTS CLOSED

| | | | | | | | | | | | |
|----------------|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|
| FLAPS UP | | | | | | | | | | | |
| NORMAL KIAS | 60 | 70 | 80 | 90 | 100 | 110 | 120 | 130 | 140 | 150 | 160 |
| ALTERNATE KIAS | 62 | 72 | 82 | 93 | 103 | 113 | 123 | 133 | 143 | 153 | 163 |
| FLAPS 20° | | | | | | | | | | | |
| NORMAL KIAS | 50 | 60 | 70 | 80 | 90 | 95 | --- | --- | --- | --- | --- |
| ALTERNATE KIAS | 50 | 61 | 72 | 82 | 92 | 97 | --- | --- | --- | --- | --- |
| FLAPS 40° | | | | | | | | | | | |
| NORMAL KIAS | 50 | 60 | 70 | 80 | 90 | 95 | --- | --- | --- | --- | --- |
| ALTERNATE KIAS | 50 | 62 | 72 | 82 | 91 | 95 | --- | --- | --- | --- | --- |

OPTIONAL AIR CONDITIONER INSTALLED HEATER OFF/VENTS CLOSED/AIR CONDITIONER OFF

| | | | | | | | | | | | |
|----------------|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|
| FLAPS UP | | | | | | | | | | | |
| NORMAL KIAS | 60 | 70 | 80 | 90 | 100 | 110 | 120 | 130 | 140 | 150 | 160 |
| ALTERNATE KIAS | 60 | 70 | 80 | 89 | 99 | 109 | 118 | 128 | 137 | 147 | 157 |
| FLAPS 20° | | | | | | | | | | | |
| NORMAL KIAS | 50 | 60 | 70 | 80 | 90 | 95 | --- | --- | --- | --- | --- |
| ALTERNATE KIAS | 50 | 60 | 70 | 80 | 90 | 95 | --- | --- | --- | --- | --- |
| FLAPS 40° | | | | | | | | | | | |
| NORMAL KIAS | 50 | 60 | 70 | 80 | 90 | 95 | --- | --- | --- | --- | --- |
| ALTERNATE KIAS | 50 | 60 | 70 | 80 | 90 | 95 | --- | --- | --- | --- | --- |

Figure 5-1. Airspeed Calibration (Sheet 2 of 2)

TEMPERATURE CONVERSION CHART

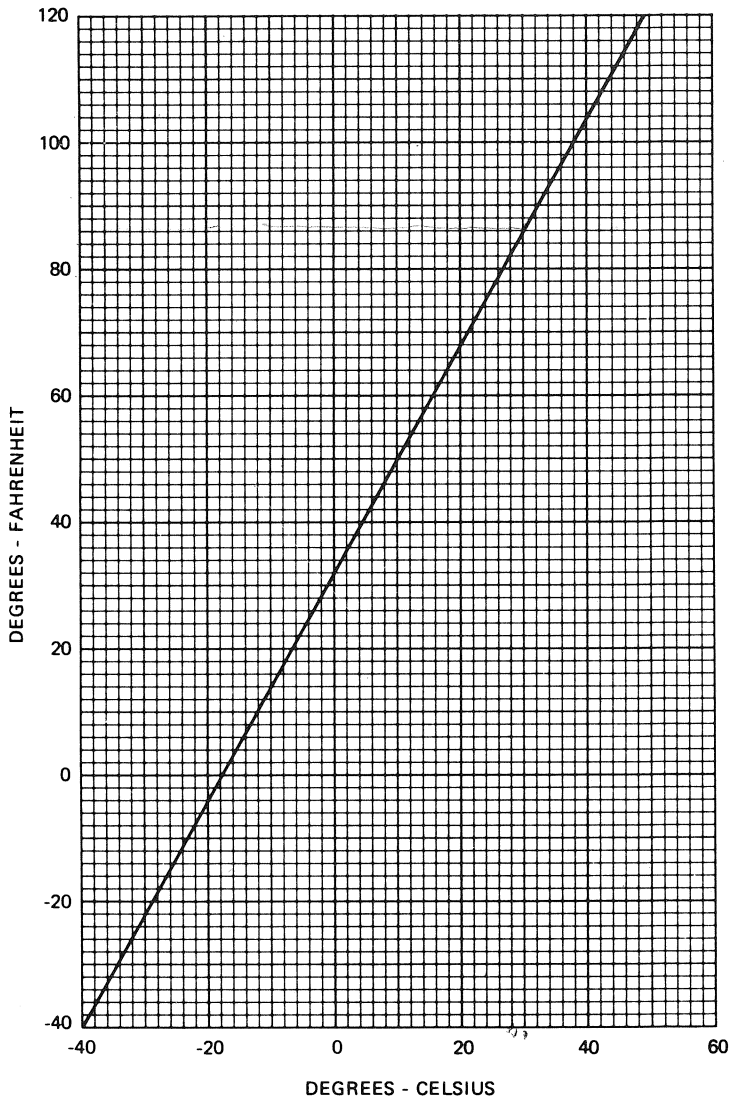


Figure 5-2. Temperature Conversion Chart

STALL SPEEDS

CONDITIONS:

Power Off

NOTES:

- Altitude loss during a stall recovery may be as much as 300 feet.
- KIAS values are approximate.

MOST REARWARD CENTER OF GRAVITY

| WEIGHT LBS | FLAP DEFLECTION | ANGLE OF BANK | | | | | | | |
|---------------|--------------------|---------------|------|------|------|------|------|------|------|
| | | 0° | | 30° | | 45° | | 60° | |
| | | KIAS | KCAS | KIAS | KCAS | KIAS | KCAS | KIAS | KCAS |
| 3100 | UP | 44 | 54 | 47 | 58 | 52 | 64 | 62 | 76 |
| | 20° | 37 | 50 | 40 | 54 | 44 | 60 | 52 | 71 |
| | 40° | 33 | 49 | 35 | 53 | 39 | 58 | 47 | 69 |

MOST FORWARD CENTER OF GRAVITY

| WEIGHT LBS | FLAP DEFLECTION | ANGLE OF BANK | | | | | | | |
|---------------|--------------------|---------------|------|------|------|------|------|------|------|
| | | 0° | | 30° | | 45° | | 60° | |
| | | KIAS | KCAS | KIAS | KCAS | KIAS | KCAS | KIAS | KCAS |
| 3100 | UP | 48 | 56 | 52 | 60 | 57 | 67 | 68 | 79 |
| | 20° | 43 | 53 | 46 | 57 | 51 | 63 | 61 | 75 |
| | 40° | 40 | 52 | 43 | 56 | 48 | 62 | 57 | 74 |

Figure 5-3. Stall Speeds

TAKEOFF DISTANCE

MAXIMUM WEIGHT 3100 LBS

SHORT FIELD

CONDITIONS:

Flaps 20°
2400 RPM and 31 Inches Hg Prior to Brake Release
Mixture Full Rich
Cowl Flaps Open
Paved, Level, Dry Runway
Zero Wind

NOTES:

1. Short field technique as specified in Section 4.
2. Decrease distances 10% for each 9 knots headwind. For operation with tailwinds up to 10 knots, increase distances by 10% for each 2 knots.
3. For operation on a dry, grass runway, increase distances by 15% of the "ground roll" figure.

| WEIGHT LBS | TAKEOFF SPEED KIAS | | PRESS ALT FT | 0°C | | 10°C | | 20°C | | 30°C | | 40°C | |
|---------------|--------------------------|-------------|--------------------|--------------|--------------------------------|--------------|--------------------------------|--------------|--------------------------------|--------------|--------------------------------|--------------|--------------------------------|
| | LIFT OFF | AT 50 FT | | GRND ROLL | TOTAL TO CLEAR 50 FT OBS | GRND ROLL | TOTAL TO CLEAR 50 FT OBS | GRND ROLL | TOTAL TO CLEAR 50 FT OBS | GRND ROLL | TOTAL TO CLEAR 50 FT OBS | GRND ROLL | TOTAL TO CLEAR 50 FT OBS |
| 3100 | 49 | 58 | S.L. | 700 | 1310 | 760 | 1415 | 820 | 1535 | 890 | 1665 | 960 | 1805 |
| | | | | 750 | 1390 | 810 | 1505 | 880 | 1630 | 950 | 1770 | 1025 | 1925 |
| | | | | 800 | 1475 | 870 | 1600 | 940 | 1735 | 1015 | 1885 | 1100 | 2050 |
| | | | | 855 | 1570 | 930 | 1700 | 1005 | 1850 | 1090 | 2010 | 1175 | 2190 |
| | | | | 920 | 1670 | 995 | 1815 | 1080 | 1970 | 1165 | 2145 | 1260 | 2345 |
| | | | | 985 | 1780 | 1070 | 1935 | 1155 | 2110 | 1250 | 2300 | 1355 | 2510 |
| | | | | 1055 | 1900 | 1145 | 2070 | 1245 | 2260 | 1345 | 2465 | 1455 | 2700 |
| | | | | 7000 | 2035 | 1235 | 2220 | 1335 | 2425 | 1450 | 2650 | 1565 | 2910 |
| | | | | 8000 | 2180 | 1325 | 2385 | 1440 | 2605 | 1560 | 2855 | 1685 | 3140 |
| | | | | | | | | | | | | | |

Figure 5-4. Takeoff Distance (Sheet 1 of 2)

TAKEOFF DISTANCE 2800 LBS AND 2500 LBS

SHORT FIELD

REFER TO SHEET 1 FOR APPROPRIATE CONDITIONS AND NOTES.

| WEIGHT LBS | TAKEOFF SPEED KIAS | | PRESS ALT FT | 0°C | | 10°C | | 20°C | | 30°C | | 40°C | |
|---------------|--------------------------|-------------|--------------------|--------------|--|--------------|--|--------------|--|--------------|--|--------------|--|
| | LIFT OFF | AT 50 FT | | GRND ROLL | TOTAL TO CLEAR 50 FT OBS ROLL | GRND ROLL | TOTAL TO CLEAR 50 FT OBS ROLL | GRND ROLL | TOTAL TO CLEAR 50 FT OBS ROLL | GRND ROLL | TOTAL TO CLEAR 50 FT OBS ROLL | GRND ROLL | TOTAL TO CLEAR 50 FT OBS ROLL |
| 2800 | 47 | 55 | S.L. | 555 | 1045 | 605 | 1125 | 650 | 1215 | 705 | 1310 | 760 | 1415 |
| | | | 1000 | 595 | 1105 | 645 | 1195 | 695 | 1290 | 755 | 1390 | 810 | 1505 |
| | | | 2000 | 635 | 1170 | 690 | 1265 | 745 | 1370 | 805 | 1480 | 870 | 1600 |
| | | | 3000 | 680 | 1245 | 740 | 1345 | 800 | 1455 | 860 | 1575 | 930 | 1705 |
| | | | 4000 | 730 | 1320 | 790 | 1430 | 855 | 1550 | 925 | 1675 | 1000 | 1815 |
| | | | 5000 | 780 | 1405 | 845 | 1525 | 915 | 1650 | 990 | 1790 | 1070 | 1940 |
| | | | 6000 | 840 | 1500 | 910 | 1625 | 985 | 1765 | 1065 | 1915 | 1150 | 2080 |
| | | | 7000 | 900 | 1600 | 980 | 1740 | 1060 | 1885 | 1145 | 2050 | 1235 | 2230 |
| 2500 | 44 | 52 | S.L. | 435 | 815 | 470 | 880 | 505 | 945 | 545 | 1020 | 585 | 1095 |
| | | | 1000 | 460 | 865 | 500 | 930 | 540 | 1000 | 580 | 1080 | 630 | 1160 |
| | | | 2000 | 495 | 915 | 535 | 985 | 575 | 1060 | 625 | 1145 | 670 | 1235 |
| | | | 3000 | 530 | 970 | 570 | 1045 | 615 | 1125 | 665 | 1215 | 720 | 1310 |
| | | | 4000 | 565 | 1030 | 610 | 1110 | 660 | 1195 | 715 | 1290 | 770 | 1395 |
| | | | 5000 | 605 | 1095 | 655 | 1180 | 710 | 1275 | 765 | 1375 | 825 | 1485 |
| | | | 6000 | 650 | 1165 | 705 | 1260 | 760 | 1360 | 820 | 1465 | 885 | 1585 |
| | | | 7000 | 700 | 1240 | 755 | 1340 | 820 | 1450 | 885 | 1565 | 955 | 1695 |
| | | | 8000 | 750 | 1325 | 815 | 1430 | 880 | 1550 | 950 | 1675 | 1025 | 1815 |

Figure 5-4. Takeoff Distance (Sheet 2 of 2)

MAXIMUM RATE OF CLIMB

CONDITIONS:
Flaps Up
2400 RPM
31 Inches Hg
Mixture Full Rich
Cowl Flaps Open

| WEIGHT LBS | PRESS ALT FT | CLIMB SPEED KIAS | RATE OF CLIMB - FPM | | | |
|---------------|--------------------|------------------------|---------------------|------|------|------|
| | | | -20°C | 0°C | 20°C | 40°C |
| 3100 | S.L. | 87 | 1175 | 1055 | 935 | 815 |
| | 4000 | 86 | 1085 | 965 | 840 | 715 |
| | 8000 | 86 | 970 | 845 | 720 | 595 |
| | 12,000 | 85 | 825 | 700 | 580 | --- |
| | 16,000 | 85 | 670 | 550 | 435 | --- |
| | 20,000 | 84 | 505 | 390 | --- | --- |

Figure 5-5. Maximum Rate of Climb

TIME, FUEL, AND DISTANCE TO CLIMB

MAXIMUM RATE OF CLIMB

CONDITIONS:

Flaps Up
2400 RPM
31 Inches Hg
Mixture Full Rich
Cowl Flaps Open
Standard Temperature

NOTES:

1. Add 2.0 gallons of fuel for engine start, taxi and takeoff allowance.
2. Increase time, fuel and distance by 10% for each 10°C above standard temperature.
3. Distances shown are based on zero wind.

| WEIGHT LBS | PRESSURE ALTITUDE FT | TEMP °C | CLIMB SPEED KIAS | RATE OF CLIMB FPM | FROM SEA LEVEL | | |
|---------------|----------------------------|------------|------------------------|-------------------------|----------------|----------------------|----------------|
| | | | | | TIME MIN | FUEL USED GALLONS | DISTANCE NM |
| 3100 | S.L. | 15 | 87 | 965 | 0 | 0 | 0 |
| | 2000 | 11 | 87 | 945 | 2 | 0.9 | 3 |
| | 4000 | 7 | 86 | 920 | 4 | 1.7 | 6 |
| | 6000 | 3 | 86 | 885 | 6 | 2.6 | 10 |
| | 8000 | -1 | 86 | 850 | 9 | 3.6 | 13 |
| | 10,000 | -5 | 86 | 805 | 11 | 4.5 | 17 |
| | 12,000 | -9 | 85 | 755 | 14 | 5.6 | 22 |
| | 14,000 | -13 | 85 | 705 | 17 | 6.7 | 27 |
| | 16,000 | -17 | 85 | 650 | 20 | 7.9 | 32 |
| | 18,000 | -21 | 84 | 590 | 23 | 9.2 | 38 |
| | 20,000 | -25 | 84 | 530 | 26 | 10.6 | 45 |

Figure 5-6. Time, Fuel, and Distance to Climb (Sheet 1 of 2)

TIME, FUEL, AND DISTANCE TO CLIMB

NORMAL CLIMB - 95 KIAS

CONDITIONS:
Flaps Up
2400 RPM
24 Inches Hg
Mixture Full Rich
Cowl Flaps Open
Standard Temperature

- NOTES:
- 1. Add 2.0 gallons of fuel for engine start, taxi and takeoff allowance.
 - 2. Increase time, fuel and distance by 10% for each 7°C above standard temperature.
 - 3. Distances shown are based on zero wind.

| WEIGHT LBS | PRESSURE ALTITUDE FT | TEMP °C | RATE OF CLIMB FPM | FROM SEA LEVEL | | |
|---------------|----------------------------|------------|-------------------------|----------------|----------------------|----------------|
| | | | | TIME MIN | FUEL USED GALLONS | DISTANCE NM |
| 3100 | S.L. | 15 | 500 | 0 | 0 | 0 |
| | 2000 | 11 | 500 | 4 | 1.4 | 6 |
| | 4000 | 7 | 495 | 8 | 2.8 | 13 |
| | 6000 | 3 | 485 | 12 | 4.3 | 20 |
| | 8000 | -1 | 470 | 16 | 5.7 | 27 |
| | 10,000 | -5 | 450 | 21 | 7.3 | 35 |
| | 12,000 | -9 | 425 | 25 | 8.9 | 44 |

Figure 5-6. Time, Fuel, and Distance to Climb (Sheet 2 of 2)

CRUISE PERFORMANCE

PRESSURE ALTITUDE 2000 FEET

CONDITIONS:
3100 Pounds
Recommended Lean Mixture
Cowl Flaps Closed

NOTE

For best fuel economy, operate at the leanest mixture that results in smooth engine operation or at peak EGT.

| | | 20°C BELOW STANDARD TEMP -9°C | | | STANDARD TEMPERATURE 11°C | | | 20°C ABOVE STANDARD TEMP 31°C | | |
|------|----|-------------------------------------|------|------|---------------------------------|------|------|-------------------------------------|------|------|
| RPM | MP | % BHP | KTAS | GPH | % BHP | KTAS | GPH | % BHP | KTAS | GPH |
| 2400 | 25 | --- | --- | --- | 78 | 137 | 14.8 | 74 | 137 | 14.0 |
| | 23 | 74 | 131 | 14.0 | 70 | 131 | 13.3 | 66 | 130 | 12.6 |
| | 21 | 65 | 125 | 12.4 | 62 | 124 | 11.8 | 59 | 123 | 11.3 |
| | 19 | 57 | 117 | 10.9 | 54 | 116 | 10.5 | 51 | 115 | 10.0 |
| 2300 | 25 | 78 | 135 | 14.9 | 74 | 135 | 14.1 | 71 | 134 | 13.4 |
| | 23 | 70 | 129 | 13.3 | 67 | 128 | 12.7 | 63 | 128 | 12.1 |
| | 21 | 62 | 122 | 11.8 | 59 | 121 | 11.3 | 56 | 120 | 10.8 |
| | 19 | 54 | 114 | 10.4 | 51 | 113 | 10.0 | 49 | 112 | 9.6 |
| 2200 | 25 | 75 | 132 | 14.2 | 71 | 132 | 13.5 | 67 | 131 | 12.8 |
| | 23 | 67 | 126 | 12.7 | 64 | 126 | 12.1 | 60 | 125 | 11.5 |
| | 21 | 59 | 119 | 11.3 | 56 | 118 | 10.8 | 53 | 117 | 10.3 |
| | 19 | 51 | 111 | 9.9 | 49 | 110 | 9.5 | 46 | 108 | 9.1 |
| 2100 | 25 | 71 | 129 | 13.5 | 68 | 129 | 12.9 | 64 | 129 | 12.2 |
| | 23 | 64 | 123 | 12.1 | 60 | 123 | 11.5 | 57 | 122 | 11.0 |
| | 21 | 56 | 116 | 10.7 | 53 | 115 | 10.3 | 50 | 114 | 9.8 |
| | 19 | 48 | 108 | 9.5 | 46 | 106 | 9.1 | 43 | 104 | 8.7 |
| | 17 | 41 | 97 | 8.2 | 39 | 95 | 7.8 | 37 | 91 | 7.5 |

Figure 5-7. Cruise Performance (Sheet 1 of 10)

CRUISE PERFORMANCE

PRESSURE ALTITUDE 4000 FEET

CONDITIONS:
3100 Pounds
Recommended Lean Mixture
Cowl Flaps Closed

NOTE

For best fuel economy, operate at the leanest mixture that results in smooth engine operation or at peak EGT.

| | | 20°C BELOW STANDARD TEMP -13°C | | | STANDARD TEMPERATURE 7°C | | | 20°C ABOVE STANDARD TEMP 27°C | | |
|------|----|--------------------------------------|------|------|--------------------------------|------|------|-------------------------------------|------|------|
| RPM | MP | % BHP | KTAS | GPH | % BHP | KTAS | GPH | % BHP | KTAS | GPH |
| 2400 | 25 | --- | --- | --- | 79 | 140 | 15.0 | 75 | 140 | 14.2 |
| | 23 | 75 | 134 | 14.2 | 71 | 134 | 13.5 | 67 | 134 | 12.8 |
| | 21 | 67 | 128 | 12.7 | 63 | 127 | 12.1 | 60 | 127 | 11.5 |
| | 19 | 59 | 120 | 11.2 | 56 | 120 | 10.7 | 53 | 118 | 10.2 |
| 2300 | 25 | 79 | 138 | 15.0 | 75 | 138 | 14.3 | 71 | 137 | 13.6 |
| | 23 | 71 | 132 | 13.6 | 68 | 132 | 12.9 | 64 | 131 | 12.3 |
| | 21 | 64 | 125 | 12.1 | 60 | 125 | 11.5 | 57 | 124 | 11.0 |
| | 19 | 56 | 117 | 10.7 | 53 | 117 | 10.3 | 50 | 115 | 9.8 |
| 2200 | 25 | 76 | 135 | 14.4 | 72 | 135 | 13.7 | 68 | 134 | 13.0 |
| | 23 | 68 | 129 | 12.9 | 65 | 129 | 12.3 | 61 | 128 | 11.7 |
| | 21 | 60 | 122 | 11.5 | 57 | 122 | 11.0 | 54 | 120 | 10.5 |
| | 19 | 53 | 114 | 10.2 | 50 | 113 | 9.8 | 48 | 112 | 9.4 |
| 2100 | 25 | 72 | 132 | 13.7 | 69 | 132 | 13.0 | 65 | 132 | 12.4 |
| | 23 | 65 | 126 | 12.3 | 62 | 126 | 11.7 | 58 | 125 | 11.2 |
| | 21 | 57 | 119 | 11.0 | 54 | 118 | 10.5 | 52 | 117 | 10.0 |
| | 19 | 50 | 111 | 9.7 | 47 | 110 | 9.3 | 45 | 108 | 8.9 |
| | 17 | 42 | 101 | 8.5 | 40 | 99 | 8.1 | 38 | 95 | 7.8 |

Figure 5-7. Cruise Performance (Sheet 2 of 10)

CRUISE PERFORMANCE

PRESSURE ALTITUDE 6000 FEET

CONDITIONS:

3100 Pounds

Recommended Lean Mixture

Cowl Flaps Closed

NOTE

For best fuel economy, operate at the leanest mixture that results in smooth engine operation or at peak EGT.

| | | 20°C BELOW STANDARD TEMP -17°C | | | STANDARD TEMPERATURE 3°C | | | 20°C ABOVE STANDARD TEMP 23°C | | |
|------|----|--------------------------------------|------|------|--------------------------------|------|------|-------------------------------------|------|------|
| RPM | MP | % BHP | KTAS | GPH | % BHP | KTAS | GPH | % BHP | KTAS | GPH |
| 2400 | 25 | --- | --- | --- | 79 | 143 | 15.0 | 75 | 142 | 14.2 |
| | 23 | 75 | 137 | 14.3 | 72 | 137 | 13.6 | 68 | 136 | 12.9 |
| | 21 | 67 | 131 | 12.8 | 64 | 130 | 12.2 | 61 | 129 | 11.6 |
| | 19 | 60 | 123 | 11.4 | 57 | 123 | 10.9 | 54 | 121 | 10.4 |
| 2300 | 25 | 80 | 140 | 15.1 | 76 | 140 | 14.4 | 72 | 140 | 13.6 |
| | 23 | 72 | 135 | 13.7 | 68 | 134 | 13.0 | 65 | 133 | 12.4 |
| | 21 | 64 | 128 | 12.2 | 61 | 127 | 11.7 | 58 | 126 | 11.1 |
| | 19 | 57 | 120 | 10.9 | 54 | 119 | 10.4 | 51 | 118 | 10.0 |
| 2200 | 25 | 76 | 138 | 14.5 | 72 | 138 | 13.7 | 69 | 137 | 13.0 |
| | 23 | 69 | 132 | 13.1 | 65 | 131 | 12.4 | 62 | 130 | 11.8 |
| | 21 | 61 | 125 | 11.7 | 58 | 124 | 11.2 | 55 | 123 | 10.7 |
| | 19 | 54 | 117 | 10.4 | 51 | 116 | 10.0 | 49 | 115 | 9.5 |
| 2100 | 25 | 73 | 135 | 13.8 | 69 | 135 | 13.1 | 66 | 134 | 12.5 |
| | 23 | 65 | 129 | 12.5 | 62 | 128 | 11.9 | 59 | 127 | 11.3 |
| | 21 | 58 | 122 | 11.2 | 55 | 121 | 10.7 | 53 | 120 | 10.2 |
| | 19 | 51 | 114 | 9.9 | 49 | 113 | 9.5 | 46 | 111 | 9.1 |
| | 17 | 44 | 105 | 8.7 | 42 | 102 | 8.4 | 40 | 99 | 8.0 |

Figure 5-7. Cruise Performance (Sheet 3 of 10)

CRUISE PERFORMANCE

PRESSURE ALTITUDE 8000 FEET

CONDITIONS:
3100 Pounds
Recommended Lean Mixture
Cowl Flaps Closed

NOTE

For best fuel economy, operate at the leanest mixture that results in smooth engine operation or at peak EGT.

| | | 20°C BELOW STANDARD TEMP -21°C | | | STANDARD TEMPERATURE -1°C | | | 20°C ABOVE STANDARD TEMP 19°C | | |
|------|----|--------------------------------------|------|------|---------------------------------|------|------|-------------------------------------|------|------|
| RPM | MP | % BHP | KTAS | GPH | % BHP | KTAS | GPH | % BHP | KTAS | GPH |
| 2400 | 25 | --- | --- | --- | 79 | 146 | 15.1 | 75 | 145 | 14.3 |
| | 23 | 76 | 140 | 14.4 | 72 | 140 | 13.7 | 69 | 139 | 13.0 |
| | 21 | 68 | 134 | 13.0 | 65 | 133 | 12.4 | 62 | 132 | 11.8 |
| | 19 | 61 | 126 | 11.6 | 58 | 126 | 11.1 | 55 | 124 | 10.6 |
| 2300 | 25 | 80 | 143 | 15.2 | 76 | 143 | 14.5 | 72 | 143 | 13.7 |
| | 23 | 73 | 137 | 13.8 | 69 | 137 | 13.1 | 66 | 136 | 12.5 |
| | 21 | 65 | 131 | 12.4 | 62 | 130 | 11.9 | 59 | 129 | 11.3 |
| | 19 | 58 | 123 | 11.1 | 55 | 123 | 10.6 | 52 | 121 | 10.1 |
| 2200 | 25 | 77 | 141 | 14.6 | 73 | 140 | 13.9 | 69 | 140 | 13.1 |
| | 23 | 70 | 135 | 13.2 | 66 | 134 | 12.6 | 63 | 133 | 12.0 |
| | 21 | 62 | 128 | 11.9 | 59 | 127 | 11.3 | 56 | 126 | 10.8 |
| | 19 | 55 | 121 | 10.6 | 53 | 120 | 10.2 | 50 | 118 | 9.7 |
| 2100 | 25 | 73 | 138 | 13.9 | 70 | 138 | 13.2 | 66 | 137 | 12.6 |
| | 23 | 66 | 132 | 12.6 | 63 | 131 | 12.0 | 60 | 130 | 11.4 |
| | 21 | 59 | 125 | 11.3 | 56 | 124 | 10.9 | 54 | 123 | 10.4 |
| | 19 | 52 | 117 | 10.2 | 50 | 116 | 9.7 | 47 | 114 | 9.3 |
| | 17 | 46 | 108 | 9.0 | 43 | 106 | 8.6 | 41 | 102 | 8.3 |

Figure 5-7. Cruise Performance (Sheet 4 of 10)

CRUISE PERFORMANCE

PRESSURE ALTITUDE 10,000 FEET

CONDITIONS:
3100 Pounds
Recommended Lean Mixture
Cowl Flaps Closed

NOTE

For best fuel economy, operate at the leanest mixture that results in smooth engine operation or at peak EGT.

| | | 20°C BELOW STANDARD TEMP -25°C | | | STANDARD TEMPERATURE -5°C | | | 20°C ABOVE STANDARD TEMP 15°C | | |
|------|----|--------------------------------------|------|------|---------------------------------|------|------|-------------------------------------|------|------|
| RPM | MP | % BHP | KTAS | GPH | % BHP | KTAS | GPH | % BHP | KTAS | GPH |
| 2400 | 25 | --- | --- | --- | 79 | 148 | 15.1 | 75 | 148 | 14.3 |
| | 23 | 76 | 143 | 14.5 | 72 | 142 | 13.8 | 69 | 142 | 13.1 |
| | 21 | 69 | 136 | 13.1 | 66 | 136 | 12.5 | 62 | 135 | 11.9 |
| | 19 | 62 | 129 | 11.7 | 59 | 128 | 11.2 | 56 | 127 | 10.7 |
| 2300 | 25 | 80 | 146 | 15.2 | 76 | 146 | 14.5 | 72 | 145 | 13.7 |
| | 23 | 73 | 140 | 13.9 | 70 | 140 | 13.2 | 66 | 139 | 12.5 |
| | 21 | 66 | 134 | 12.5 | 63 | 133 | 12.0 | 60 | 132 | 11.4 |
| | 19 | 59 | 126 | 11.3 | 56 | 125 | 10.8 | 53 | 124 | 10.3 |
| 2200 | 25 | 77 | 143 | 14.6 | 73 | 143 | 13.9 | 69 | 142 | 13.2 |
| | 23 | 70 | 137 | 13.3 | 67 | 137 | 12.7 | 63 | 136 | 12.0 |
| | 21 | 63 | 131 | 12.0 | 60 | 130 | 11.5 | 57 | 129 | 10.9 |
| | 19 | 56 | 123 | 10.8 | 53 | 122 | 10.3 | 51 | 120 | 9.9 |
| 2100 | 25 | 74 | 140 | 14.0 | 70 | 140 | 13.3 | 66 | 139 | 12.6 |
| | 23 | 67 | 135 | 12.7 | 64 | 134 | 12.1 | 60 | 133 | 11.5 |
| | 21 | 60 | 128 | 11.5 | 57 | 127 | 11.0 | 54 | 125 | 10.5 |
| | 19 | 53 | 120 | 10.4 | 51 | 119 | 9.9 | 48 | 116 | 9.5 |
| | 17 | 47 | 111 | 9.2 | 45 | 109 | 8.9 | 42 | 105 | 8.5 |

Figure 5-7. Cruise Performance (Sheet 5 of 10)

CRUISE PERFORMANCE
PRESSURE ALTITUDE 12,000 FEET

CONDITIONS:
3100 Pounds
Recommended Lean Mixture
Cowl Flaps Closed

NOTE
For best fuel economy, operate at the leanest mixture that results in smooth engine operation or at peak EGT.

| | | 20°C BELOW STANDARD TEMP -29°C | | | STANDARD TEMPERATURE -9°C | | | 20°C ABOVE STANDARD TEMP 11°C | | |
|------|----|--------------------------------------|------|------|---------------------------------|------|------|-------------------------------------|------|------|
| RPM | MP | % BHP | KTAS | GPH | % BHP | KTAS | GPH | % BHP | KTAS | GPH |
| 2400 | 25 | --- | --- | --- | 79 | 151 | 15.0 | 75 | 150 | 14.3 |
| | 23 | 76 | 145 | 14.5 | 73 | 145 | 13.8 | 69 | 144 | 13.1 |
| | 21 | 69 | 139 | 13.2 | 66 | 138 | 12.5 | 62 | 137 | 11.9 |
| | 19 | 62 | 132 | 11.9 | 59 | 131 | 11.3 | 56 | 130 | 10.8 |
| 2300 | 25 | 80 | 148 | 15.2 | 76 | 148 | 14.5 | 72 | 147 | 13.7 |
| | 23 | 73 | 143 | 13.9 | 70 | 142 | 13.2 | 66 | 141 | 12.6 |
| | 21 | 66 | 136 | 12.6 | 63 | 136 | 12.0 | 60 | 134 | 11.5 |
| | 19 | 60 | 129 | 11.4 | 57 | 128 | 10.9 | 54 | 126 | 10.4 |
| 2200 | 25 | 77 | 146 | 14.6 | 73 | 146 | 13.9 | 69 | 145 | 13.2 |
| | 23 | 70 | 140 | 13.3 | 67 | 139 | 12.7 | 63 | 138 | 12.1 |
| | 21 | 64 | 133 | 12.1 | 61 | 133 | 11.6 | 57 | 131 | 11.0 |
| | 19 | 57 | 126 | 11.0 | 54 | 125 | 10.5 | 51 | 123 | 10.0 |
| 2100 | 25 | 74 | 143 | 14.0 | 70 | 143 | 13.3 | 66 | 142 | 12.6 |
| | 23 | 67 | 137 | 12.8 | 64 | 136 | 12.2 | 61 | 135 | 11.6 |
| | 21 | 61 | 131 | 11.6 | 58 | 130 | 11.1 | 55 | 128 | 10.6 |
| | 19 | 54 | 123 | 10.5 | 52 | 122 | 10.1 | 49 | 119 | 9.6 |
| | 17 | 48 | 115 | 9.4 | 46 | 112 | 9.0 | 43 | 108 | 8.6 |

Figure 5-7. Cruise Performance (Sheet 6 of 10)

CRUISE PERFORMANCE

PRESSURE ALTITUDE 14,000 FEET

CONDITIONS:
3100 Pounds
Recommended Lean Mixture
Cowl Flaps Closed

NOTE

For best fuel economy, operate at the leanest mixture that results in smooth engine operation or at peak EGT.

| | | 20°C BELOW STANDARD TEMP -33°C | | | STANDARD TEMPERATURE -13°C | | | 20°C ABOVE STANDARD TEMP 7°C | | |
|------|----|--------------------------------------|------|------|----------------------------------|------|------|------------------------------------|------|------|
| RPM | MP | % BHP | KTAS | GPH | % BHP | KTAS | GPH | % BHP | KTAS | GPH |
| 2400 | 25 | --- | --- | --- | 79 | 153 | 14.9 | 75 | 152 | 14.2 |
| | 23 | 76 | 148 | 14.5 | 72 | 147 | 13.7 | 69 | 146 | 13.0 |
| | 21 | 69 | 141 | 13.2 | 66 | 141 | 12.5 | 63 | 140 | 11.9 |
| | 19 | 63 | 135 | 11.9 | 60 | 134 | 11.4 | 57 | 132 | 10.9 |
| 2300 | 25 | 80 | 151 | 15.1 | 76 | 151 | 14.4 | 72 | 150 | 13.6 |
| | 23 | 73 | 145 | 13.9 | 70 | 145 | 13.2 | 66 | 144 | 12.6 |
| | 21 | 67 | 139 | 12.7 | 63 | 138 | 12.1 | 60 | 137 | 11.5 |
| | 19 | 60 | 132 | 11.5 | 57 | 131 | 11.0 | 54 | 129 | 10.5 |
| 2200 | 25 | 77 | 148 | 14.6 | 73 | 148 | 13.8 | 69 | 147 | 13.1 |
| | 23 | 70 | 142 | 13.4 | 67 | 142 | 12.7 | 63 | 141 | 12.1 |
| | 21 | 64 | 136 | 12.2 | 61 | 135 | 11.6 | 58 | 133 | 11.1 |
| | 19 | 58 | 129 | 11.1 | 55 | 128 | 10.6 | 52 | 125 | 10.1 |
| 2100 | 25 | 74 | 145 | 14.0 | 70 | 145 | 13.3 | 66 | 144 | 12.6 |
| | 23 | 67 | 140 | 12.8 | 64 | 139 | 12.2 | 61 | 138 | 11.6 |
| | 21 | 61 | 133 | 11.7 | 58 | 132 | 11.2 | 55 | 130 | 10.7 |
| | 19 | 55 | 126 | 10.6 | 53 | 124 | 10.2 | 50 | 122 | 9.7 |
| | 17 | 49 | 117 | 9.6 | 47 | 115 | 9.2 | 44 | 111 | 8.8 |

Figure 5-7. Cruise Performance (Sheet 7 of 10)

CRUISE PERFORMANCE
PRESSURE ALTITUDE 16,000 FEET

CONDITIONS:
3100 Pounds
Recommended Lean Mixture
Cowl Flaps Closed

NOTE
For best fuel economy, operate at the leanest mixture that results in smooth engine operation or at peak EGT.

| | | 20°C BELOW STANDARD TEMP - 37°C | | | STANDARD TEMPERATURE - 17°C | | | 20°C ABOVE STANDARD TEMP 3°C | | |
|------|----|---------------------------------------|------|------|-----------------------------------|------|------|------------------------------------|------|------|
| RPM | MP | % BHP | KTAS | GPH | % BHP | KTAS | GPH | % BHP | KTAS | GPH |
| 2400 | 25 | --- | --- | --- | 78 | 155 | 14.8 | 74 | 155 | 14.1 |
| | 23 | 76 | 150 | 14.4 | 72 | 150 | 13.7 | 68 | 149 | 13.0 |
| | 21 | 70 | 144 | 13.2 | 66 | 143 | 12.6 | 63 | 142 | 12.0 |
| | 19 | 63 | 137 | 12.0 | 60 | 136 | 11.5 | 57 | 134 | 10.9 |
| 2300 | 25 | 79 | 153 | 15.1 | 75 | 153 | 14.3 | 72 | 152 | 13.6 |
| | 23 | 73 | 148 | 13.9 | 70 | 147 | 13.2 | 66 | 146 | 12.6 |
| | 21 | 67 | 141 | 12.7 | 64 | 141 | 12.1 | 60 | 139 | 11.5 |
| | 19 | 61 | 135 | 11.6 | 58 | 133 | 11.1 | 55 | 131 | 10.6 |
| 2200 | 25 | 76 | 150 | 14.5 | 73 | 150 | 13.8 | 69 | 149 | 13.1 |
| | 23 | 70 | 145 | 13.4 | 67 | 144 | 12.7 | 64 | 143 | 12.1 |
| | 21 | 64 | 139 | 12.3 | 61 | 138 | 11.7 | 58 | 136 | 11.1 |
| | 19 | 58 | 132 | 11.2 | 56 | 130 | 10.7 | 53 | 128 | 10.2 |
| 2100 | 25 | 73 | 148 | 14.0 | 70 | 147 | 13.3 | 66 | 146 | 12.6 |
| | 23 | 68 | 142 | 12.9 | 64 | 141 | 12.2 | 61 | 140 | 11.6 |
| | 21 | 62 | 136 | 11.8 | 59 | 135 | 11.3 | 56 | 133 | 10.7 |
| | 19 | 56 | 129 | 10.8 | 53 | 127 | 10.3 | 51 | 124 | 9.9 |
| | 17 | 50 | 120 | 9.8 | 48 | 118 | 9.4 | 45 | 113 | 9.0 |

Figure 5-7. Cruise Performance (Sheet 8 of 10)

CRUISE PERFORMANCE

PRESSURE ALTITUDE 18,000 FEET

CONDITIONS:
3100 Pounds
Recommended Lean Mixture
Cowl Flaps Closed

NOTE

For best fuel economy, operate at the leanest mixture that results in smooth engine operation or at peak EGT.

| | | 20°C BELOW STANDARD TEMP -41°C | | | STANDARD TEMPERATURE -21°C | | | 20°C ABOVE STANDARD TEMP -1°C | | |
|------|----|--------------------------------------|------|------|----------------------------------|------|------|-------------------------------------|------|------|
| RPM | MP | % BHP | KTAS | GPH | % BHP | KTAS | GPH | % BHP | KTAS | GPH |
| 2400 | 25 | --- | --- | --- | 77 | 157 | 14.6 | 73 | 156 | 13.9 |
| | 23 | 75 | 152 | 14.3 | 71 | 151 | 13.6 | 68 | 150 | 12.9 |
| | 21 | 69 | 146 | 13.1 | 66 | 145 | 12.5 | 62 | 143 | 11.9 |
| | 19 | 63 | 139 | 12.0 | 60 | 138 | 11.5 | 57 | 136 | 10.9 |
| 2300 | 25 | 78 | 155 | 14.9 | 74 | 155 | 14.1 | 71 | 154 | 13.4 |
| | 23 | 73 | 149 | 13.8 | 69 | 149 | 13.1 | 65 | 147 | 12.4 |
| | 21 | 67 | 143 | 12.7 | 63 | 142 | 12.1 | 60 | 141 | 11.5 |
| | 19 | 61 | 137 | 11.6 | 58 | 135 | 11.1 | 55 | 133 | 10.6 |
| 2200 | 25 | 76 | 152 | 14.4 | 72 | 152 | 13.7 | 68 | 151 | 12.9 |
| | 23 | 70 | 147 | 13.3 | 67 | 146 | 12.6 | 63 | 145 | 12.0 |
| | 21 | 64 | 141 | 12.2 | 61 | 140 | 11.7 | 58 | 138 | 11.1 |
| | 19 | 59 | 134 | 11.2 | 56 | 132 | 10.7 | 53 | 129 | 10.2 |
| 2100 | 25 | 73 | 150 | 13.8 | 69 | 149 | 13.2 | 66 | 148 | 12.5 |
| | 23 | 67 | 144 | 12.8 | 64 | 143 | 12.2 | 61 | 141 | 11.6 |
| | 21 | 62 | 138 | 11.8 | 59 | 137 | 11.3 | 56 | 134 | 10.7 |
| | 19 | 56 | 131 | 10.8 | 54 | 129 | 10.4 | 51 | 125 | 9.9 |
| | 17 | 51 | 123 | 9.9 | 49 | 120 | 9.5 | 46 | 115 | 9.1 |

Figure 5-7. Cruise Performance (Sheet 9 of 10)

CRUISE PERFORMANCE
PRESSURE ALTITUDE 20,000 FEET

CONDITIONS:
3100 Pounds
Recommended Lean Mixture
Cowl Flaps Closed

NOTE
For best fuel economy, operate at the leanest mixture that results in smooth engine operation or at peak EGT.

| | | 20°C BELOW STANDARD TEMP - 45°C | | | STANDARD TEMPERATURE - 25°C | | | 20°C ABOVE STANDARD TEMP - 5°C | | |
|------|----|---------------------------------------|------|------|-----------------------------------|------|------|--------------------------------------|------|------|
| RPM | MP | % BHP | KTAS | GPH | % BHP | KTAS | GPH | % BHP | KTAS | GPH |
| 2400 | 25 | --- | --- | --- | 76 | 159 | 14.5 | 72 | 158 | 13.7 |
| | 23 | 74 | 154 | 14.1 | 71 | 153 | 13.5 | 67 | 152 | 12.8 |
| | 21 | 69 | 148 | 13.1 | 65 | 147 | 12.4 | 62 | 145 | 11.8 |
| | 19 | 63 | 142 | 12.0 | 60 | 140 | 11.5 | 57 | 137 | 10.9 |
| 2300 | 25 | 77 | 157 | 14.7 | 74 | 156 | 14.0 | 70 | 155 | 13.3 |
| | 23 | 72 | 152 | 13.7 | 69 | 151 | 13.0 | 65 | 149 | 12.4 |
| | 21 | 67 | 146 | 12.7 | 63 | 145 | 12.1 | 60 | 142 | 11.5 |
| | 19 | 61 | 139 | 11.7 | 58 | 137 | 11.1 | 55 | 134 | 10.6 |
| 2200 | 25 | 75 | 154 | 14.2 | 71 | 154 | 13.5 | 68 | 152 | 12.8 |
| | 23 | 70 | 149 | 13.2 | 66 | 148 | 12.6 | 63 | 146 | 12.0 |
| | 21 | 64 | 143 | 12.2 | 61 | 142 | 11.7 | 58 | 139 | 11.1 |
| | 19 | 59 | 136 | 11.3 | 56 | 134 | 10.8 | 53 | 131 | 10.3 |
| 2100 | 25 | 72 | 152 | 13.8 | 69 | 151 | 13.1 | 65 | 150 | 12.4 |
| | 23 | 67 | 146 | 12.8 | 64 | 145 | 12.2 | 61 | 143 | 11.6 |
| | 21 | 62 | 140 | 11.8 | 59 | 139 | 11.3 | 56 | 136 | 10.8 |
| | 19 | 57 | 134 | 10.9 | 54 | 131 | 10.5 | 51 | 127 | 10.0 |
| | 17 | 52 | 126 | 10.1 | 49 | 122 | 9.6 | 47 | 116 | 9.2 |

Figure 5-7. Cruise Performance (Sheet 10 of 10)

RANGE PROFILE
45 MINUTES RESERVE
65 GALLONS USABLE FUEL

CONDITIONS:

3100 Pounds

Recommended Lean Mixture for Cruise

Standard Temperature

Zero Wind

NOTE:

This chart allows for the fuel used for engine start, taxi, takeoff and climb, and the distance during a normal climb up to 12,000 feet and maximum climb above 12,000 feet.

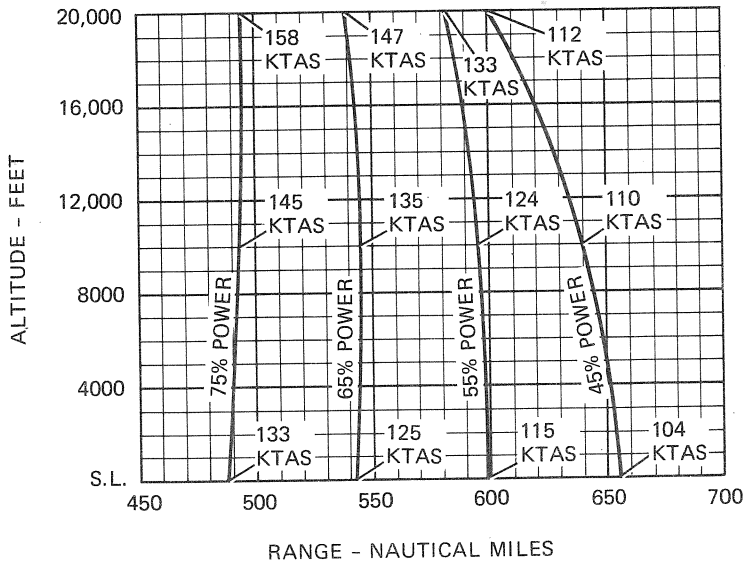


Figure 5-8. Range Profile (Sheet 1 of 2)

RANGE PROFILE
45 MINUTES RESERVE
88 GALLONS USABLE FUEL

CONDITIONS:
3100 Pounds
Recommended Lean Mixture for Cruise
Standard Temperature
Zero Wind

NOTE:
This chart allows for the fuel used for engine start, taxi, takeoff and climb, and the distance during a normal climb up to 12,000 feet and maximum climb above 12,000 feet.

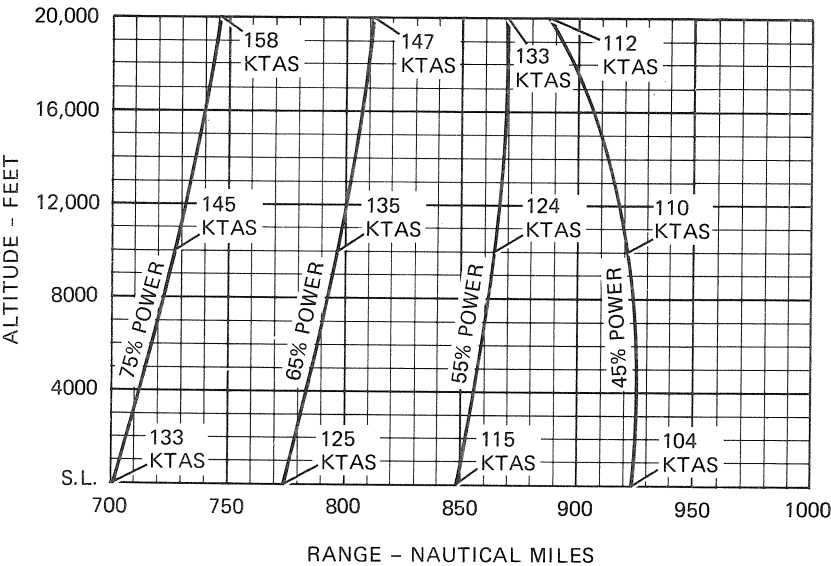


Figure 5-8. Range Profile (Sheet 2 of 2)

ENDURANCE PROFILE
45 MINUTES RESERVE
65 GALLONS USABLE FUEL

CONDITIONS:
3100 Pounds
Recommended Lean Mixture for Cruise
Standard Temperature

NOTE:
This chart allows for the fuel used for engine start, taxi, takeoff and climb, and the time during a normal climb up to 12,000 feet and maximum climb above 12,000 feet.

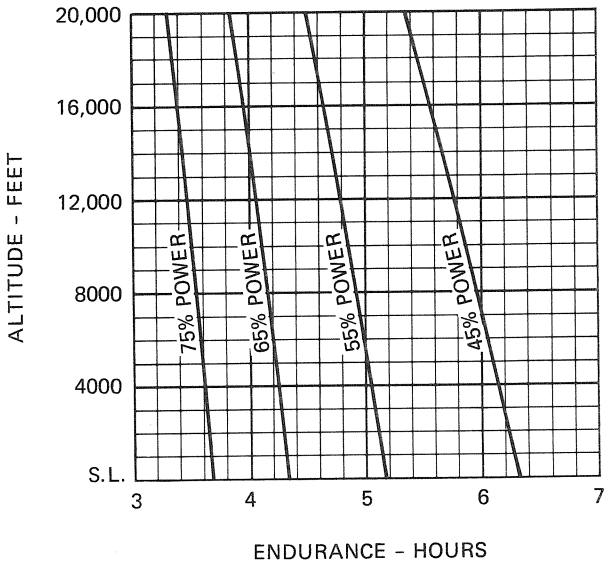


Figure 5-9. Endurance Profile (Sheet 1 of 2)

ENDURANCE PROFILE

45 MINUTES RESERVE
88 GALLONS USABLE FUEL

CONDITIONS:

3100 Pounds

Recommended Lean Mixture for Cruise

Standard Temperature

NOTE:

This chart allows for the fuel used for engine start, taxi, takeoff and climb, and the time during a normal climb up to 12,000 feet and maximum climb above 12,000 feet.

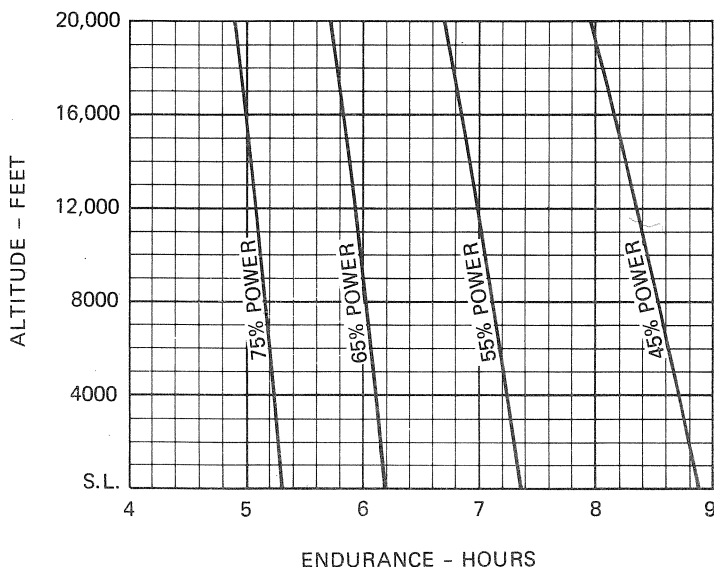


Figure 5-9. Endurance Profile (Sheet 2 of 2)

LANDING DISTANCE

SHORT FIELD

CONDITIONS:
Flaps 40°
Power Off
Maximum Braking
Paved, Level, Dry Runway
Zero Wind

NOTES:

1. Short field technique as specified in Section 4.
2. Decrease distances 10% for each 9 knots headwind. For operation with tailwinds up to 10 knots, increase distances by 10% for each 2 knots.
3. For operation on a dry, grass runway, increase distances by 40% of the "ground roll" figure.

| WEIGHT LBS | SPEED AT 50 FT KIAS | PRESS ALT FT | 0°C | | | 10°C | | | 20°C | | | 30°C | | | 40°C | | |
|---------------|------------------------------|--------------------|--------------|--------------------------------|--|--------------|--------------------------------|--|--------------|--------------------------------|--|--------------|--------------------------------|--|--------------|--------------------------------|--|
| | | | GRND ROLL | TOTAL TO CLEAR 50 FT OBS | | GRND ROLL | TOTAL TO CLEAR 50 FT OBS | | GRND ROLL | TOTAL TO CLEAR 50 FT OBS | | GRND ROLL | TOTAL TO CLEAR 50 FT OBS | | GRND ROLL | TOTAL TO CLEAR 50 FT OBS | |
| 2950 | 61 | S.L. | 560 | 1300 | | 580 | 1335 | | 600 | 1365 | | 620 | 1400 | | 640 | 1435 | |
| | | 1000 | 580 | 1335 | | 600 | 1365 | | 620 | 1400 | | 645 | 1440 | | 665 | 1475 | |
| | | 2000 | 600 | 1370 | | 625 | 1405 | | 645 | 1440 | | 670 | 1480 | | 690 | 1515 | |
| | | 3000 | 625 | 1410 | | 645 | 1445 | | 670 | 1485 | | 695 | 1525 | | 715 | 1560 | |
| | | 4000 | 650 | 1450 | | 670 | 1485 | | 695 | 1525 | | 720 | 1565 | | 740 | 1600 | |
| | | 5000 | 670 | 1485 | | 695 | 1525 | | 720 | 1565 | | 745 | 1610 | | 770 | 1650 | |
| | | 6000 | 700 | 1530 | | 725 | 1575 | | 750 | 1615 | | 775 | 1660 | | 800 | 1700 | |
| | | 7000 | 725 | 1575 | | 750 | 1615 | | 780 | 1665 | | 805 | 1710 | | 830 | 1750 | |
| | | 8000 | 755 | 1625 | | 780 | 1665 | | 810 | 1715 | | 835 | 1760 | | 865 | 1805 | |

Figure 5-10. Landing Distance

SECTION 6

WEIGHT & BALANCE/ EQUIPMENT LIST

TABLE OF CONTENTS

| | Page |
|--|------|
| Introduction | 6-3 |
| Airplane Weighing Procedures | 6-3 |
| Weight And Balance | 6-6 |
| Baggage and Cargo Tie-Down | 6-6 |
| Equipment List | 6-15 |

INTRODUCTION

This section describes the procedure for establishing the basic empty weight and moment of the airplane. Sample forms are provided for reference. Procedures for calculating the weight and moment for various operations are also provided. A comprehensive list of all Cessna equipment available for this airplane is included at the back of this section.

It should be noted that specific information regarding the weight, arm, moment and installed equipment for this airplane as delivered from the factory can only be found in the plastic envelope carried in the back of this handbook.


It is the responsibility of the pilot to ensure that the airplane is loaded properly.

AIRPLANE WEIGHING PROCEDURES

1. Preparation:
 - a. Inflate tires to recommended operating pressures.
 - b. Remove the fuel tank sump quick-drain fittings and fuel selector valve drain plug to drain all fuel.
 - c. Remove oil sump drain plug to drain all oil.
 - d. Move sliding seats to the most forward position.
 - e. Raise flaps to the fully retracted position.
 - f. Place all control surfaces in neutral position.
2. Leveling:
 - a. Place scales under each wheel (minimum scale capacity, 1000 pounds).
 - b. Deflate the nose tire and/or lower or raise the nose strut to properly center the bubble in the level (see figure 6-1).
3. Weighing:
 - a. With the airplane level and brakes released, record the weight shown on each scale. Deduct the tare, if any, from each reading.
4. Measuring:
 - a. Obtain measurement A by measuring horizontally (along the airplane center line) from a line stretched between the main wheel centers to a plumb bob dropped from the firewall.
 - b. Obtain measurement B by measuring horizontally and parallel to the airplane center line, from center of nose wheel axle, left side, to a plumb bob dropped from the line between the main wheel centers. Repeat on right side and average the measurements.
5. Using weights from item 3 and measurements from item 4, the airplane weight and C.G. can be determined.
6. Basic Empty Weight may be determined by completing figure 6-1.

SECTION 6
WEIGHT & BALANCE/
EQUIPMENT LIST

CESSNA
MODEL T182

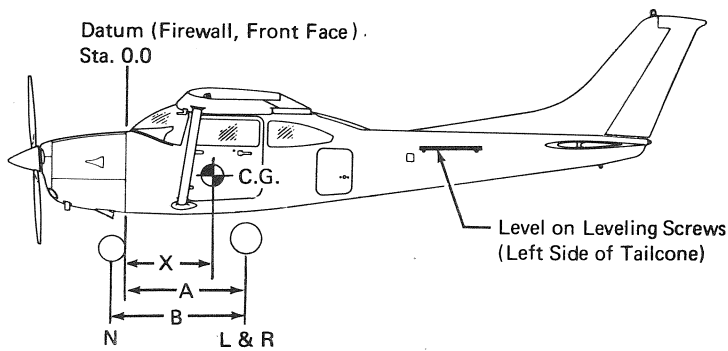

| Scale Position | Scale Reading | Tare | Symbol | Net Weight |
|---------------------------------|---------------|------|--------|------------|
| Left Wheel | | | L | |
| Right Wheel | | | R | |
| Nose Wheel | | | N | |
| Sum of Net Weights (As Weighed) | | | W | |

$$X = \text{ARM} = \frac{(A) - (N) \times (B)}{W} ; X = (\quad) - (\quad) \times (\quad) = (\quad) \text{ IN.}$$

| Item | Moment/1000 | | |
|---|---------------|------------------|--------------|
| | Weight (Lbs.) | X C.G. Arm (In.) | = (Lbs.-In.) |
| Airplane Weight (From Item 5, Page 6-3) | | | |
| Add: Oil (9 Qts at 7.5 Lbs/Gal) | 17 | -15.7 | -.3 |
| Add: Unusable Fuel (4 Gal at 6 Lbs/Gal) | 24 | 48.0 | 1.2 |
| Equipment Changes | | | |
| | | | |
| Airplane Basic Empty Weight | | | |

Figure 6-1. Sample Airplane Weighing

SECTION 6 WEIGHT & BALANCE/ EQUIPMENT LIST

(Continuous History of Changes in Structure or Equipment Affecting Weight and Balance)

[illegible]

Figure 6-2. Sample Weight and Balance Record

WEIGHT AND BALANCE

The following information will enable you to operate your Cessna within the prescribed weight and center of gravity limitations. To figure weight and balance, use the Sample Problem, Loading Graph, and Center of Gravity Moment Envelope as follows:

Take the basic empty weight and moment from appropriate weight and balance records carried in your airplane, and enter them in the column titled YOUR AIRPLANE on the Sample Loading Problem.

NOTE

In addition to the basic empty weight and moment noted on these records, the C.G. arm (fuselage station) is also shown, but need not be used on the Sample Loading Problem. The moment which is shown must be divided by 1000 and this value used as the moment/1000 on the loading problem.

Use the Loading Graph to determine the moment/1000 for each additional item to be carried; then list these on the loading problem.

NOTE

Loading Graph information for the pilot, passengers and baggage/cargo is based on seats positioned for average occupants and baggage/cargo items loaded in the center of these areas as shown on the Loading Arrangements diagram. For loadings which may differ from these, the Sample Loading Problem lists fuselage stations for these items to indicate their forward and aft C.G. range limitation (seat travel and baggage/cargo area limitation). Additional moment calculations, based on the actual weight and C.G. arm (fuselage station) of the item being loaded, must be made if the position of the load is different from that shown on the Loading Graph.

Total the weights and moments/1000 and plot these values on the Center of Gravity Moment Envelope to determine whether the point falls within the envelope, and if the loading is acceptable.

BAGGAGE AND CARGO TIE-DOWN

A nylon baggage net having six tie-down straps is provided as standard equipment to secure baggage in the area aft of the rear seat (baggage areas A, B and C). Eight eyebolts serve as attaching points for the

net. Two eyebolts are mounted on the cabin floor near each sidewall just forward of the baggage door approximately at station 92; two eyebolts mount on the floor slightly inboard of each sidewall just aft of the baggage door approximately at station 109; two eyebolts are mounted near the upper forward surface of the shelf area approximately at station 122; and two eyebolts secure at the bottom of the forward portion of the shelf area at station 124. If a child's seat is installed, only the eyebolts at station 109 and the remaining aft eyebolts will be needed for securing the net in the area remaining behind the seat. A placard on the baggage door defines the weight limitations in the baggage areas.

When baggage area A is utilized for baggage only, the four forward eyebolts should be used. When only baggage area B is used, the eyebolts just aft of the baggage door and the eyebolts above or below the shelf area may be used. When only baggage area C is utilized, the eyebolts above and below the shelf area should be used. When the cabin floor (baggage areas A and B) is utilized for baggage, the four forward eyebolts and the eyebolts mounted above or below the shelf area should be used. When there is baggage in areas B and C, the eyebolts just aft of the baggage door and the eyebolts above and below the shelf area should be used. When baggage is contained in all three areas, the two forward eyebolts on the cabin floor, the eyebolts just aft of the baggage door or the eyebolts at the bottom of the forward portion of the shelf area and the eyebolts near the upper forward surface of the shelf area should be used.

Cargo tie-down blocks and latch assemblies are available from any Cessna Dealer if it is desired to remove the rear seat (and child's seat, if installed) and utilize the rear cabin area to haul cargo. Two tie-down blocks may be clamped to the aft end of the two outboard front seat rails and are locked in place by a bolt which must be tightened to a minimum of fifty inch pounds. Seven tie-down latches may be bolted to standard attach points in the cabin floor, including three rear seat mounting points. The seven attach points are located as follows: two are located slightly inboard and just aft of the rear doorposts approximately at station 69; two utilize the aft outboard mounting points of the rear seat; one utilizes the rearmost mounting point of the aft center attach point for the rear seat approximately at station 84 (a second mounting point is located just forward of this point but is not used); and two are located just forward of the center baggage net tie-down eyebolts approximately at station 108. The maximum allowable floor loading of the rear cabin area is 200 pounds/square foot; however, when items with small or sharp support areas are carried, the installation of a 1/4" plywood floor is recommended to protect the airplane structure. The maximum rated load weight capacity for each of the seven tie-downs is 140 pounds and for the two seat rail tie-downs is 100 pounds. Rope, strap, or cable used for tie-down should be rated at a minimum of ten times the load weight capacity of the tie-down fittings used. Weight and balance calculations for cargo in the area of the rear seat

SECTION 6
WEIGHT & BALANCE/
EQUIPMENT LIST

CESSNA
MODEL T182

and baggage area can be figured on the Loading Graph using the lines labeled 2nd Row Passengers or Cargo and/or Baggage or Passengers on Child's Seat.

LOADING ARRANGEMENTS

*Pilot or passenger center of gravity on adjustable seats positioned for average occupant.
 Numbers in parentheses indicate forward and aft limits of occupant center of gravity range.

**Arms measured to the center of the areas shown.

- NOTES:
1. The usable fuel C.G. arm is located at station 46.5.
 2. The aft baggage wall (approximate station 134) can be used as a convenient interior reference point for determining the location of baggage area fuselage stations.


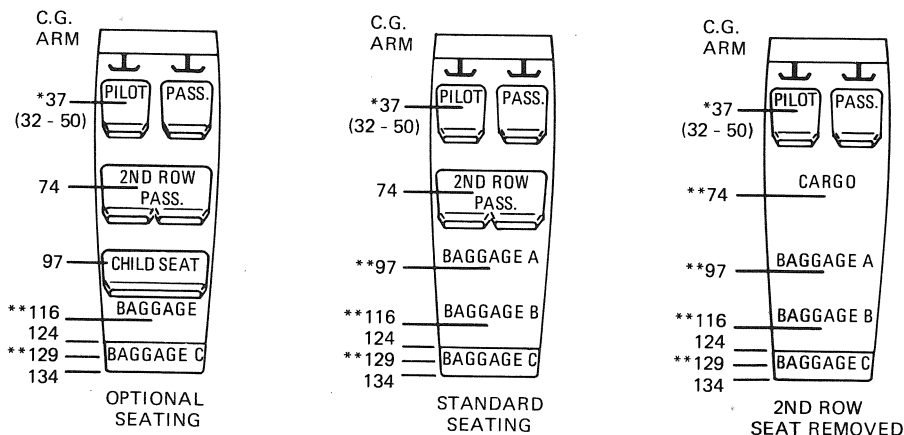


Figure 6-3. Loading Arrangements

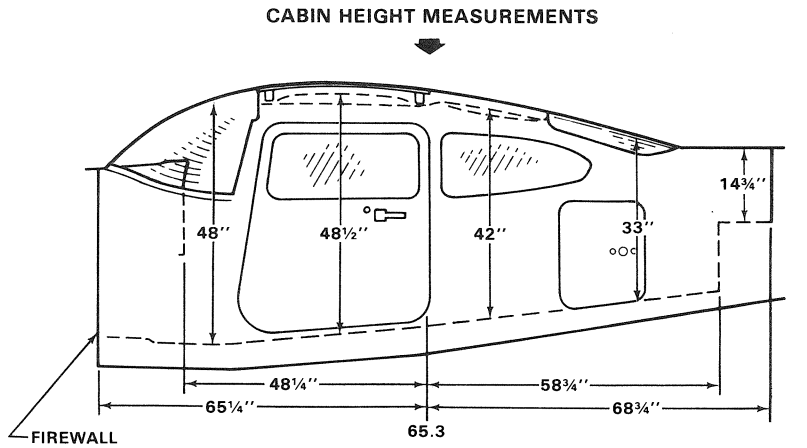

| DOOR OPENING DIMENSIONS | | | | | == WIDTH == • LWR WINDOW LINE * CABIN FLOOR |
|-------------------------|----------------|-------------------|-------------------|------------------|--|
| | WIDTH (TOP) | WIDTH (BOTTOM) | HEIGHT (FRONT) | HEIGHT (REAR) | |
| CABIN DOOR | 32" | 36½" | 41" | 38½" | |
| BAGGAGE DOOR | 15¾" | 15¾" | 22" | 20½" | |

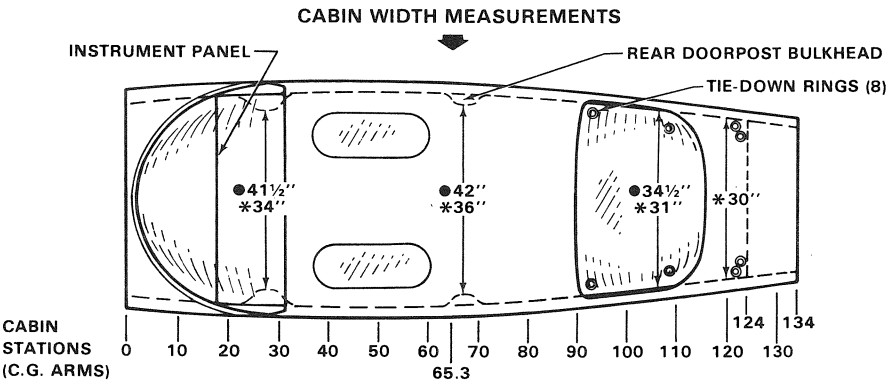


Figure 6-4. Internal Cabin Dimensions


SECTION 6
WEIGHT & BALANCE/
EQUIPMENT LIST

CESSNA
MODEL T182

| SAMPLE AIRPLANE | YOUR AIRPLANE | |
|---|---------------|------------------------|
| | Weight (lbs.) | Moment (lb.-ins./1000) |
| 1. Basic Empty Weight (Use the data pertaining to your airplane as it is presently equipped. Includes unusable fuel and full oil) . . . | 1815 | 64.0 |
| 2. Usable Fuel (At 6 Lbs./Gal.) | | |
| Standard Tanks (88 Gal. Maximum) | 528 | 24.6 |
| Reduced Fuel (65 Gal.) | | |
| 3. Pilot and Front Passenger (Station 32 to 50) | 340 | 12.6 |
| 4. Second Row Passengers | 340 | 25.2 |
| Cargo Replacing Second Row Seats (Sta. 65 to 82) | | |
| 5. *Baggage (Area "A") or Passenger on Child's Seat (Sta. 82 to 109) 120 Lbs. Maximum | 70 | 6.8 |
| 6. *Baggage (Area "B") (Sta. 109 to 124) 80 Lbs. Maximum | 19 | 2.2 |
| 7. *Baggage (Area "C") (Sta. 124 to 134) 80 Lbs. Maximum | | |
| 8. RAMP WEIGHT AND MOMENT | 3112 | 135.4 |
| 9. Fuel allowance for engine start, taxi and runup | - 12 | -.6 |
| 10. TAKEOFF WEIGHT AND MOMENT (Subtract step 9 from step 8) | 3100 | 134.8 |
| 11. Locate this point (3100 at 134.8) on the Center of Gravity Moment Envelope, and since this point falls within the envelope, the loading is acceptable, provided that flight time is allowed for fuel burn-off to a maximum of 2950 pounds before landing. | | |

*The maximum allowable combined weight capacity for baggage in areas A, B, and C is 200 pounds.
*The maximum allowable combined weight capacity for baggage in areas B and C is 80 pounds.

Figure 6-5. Sample Loading Problem

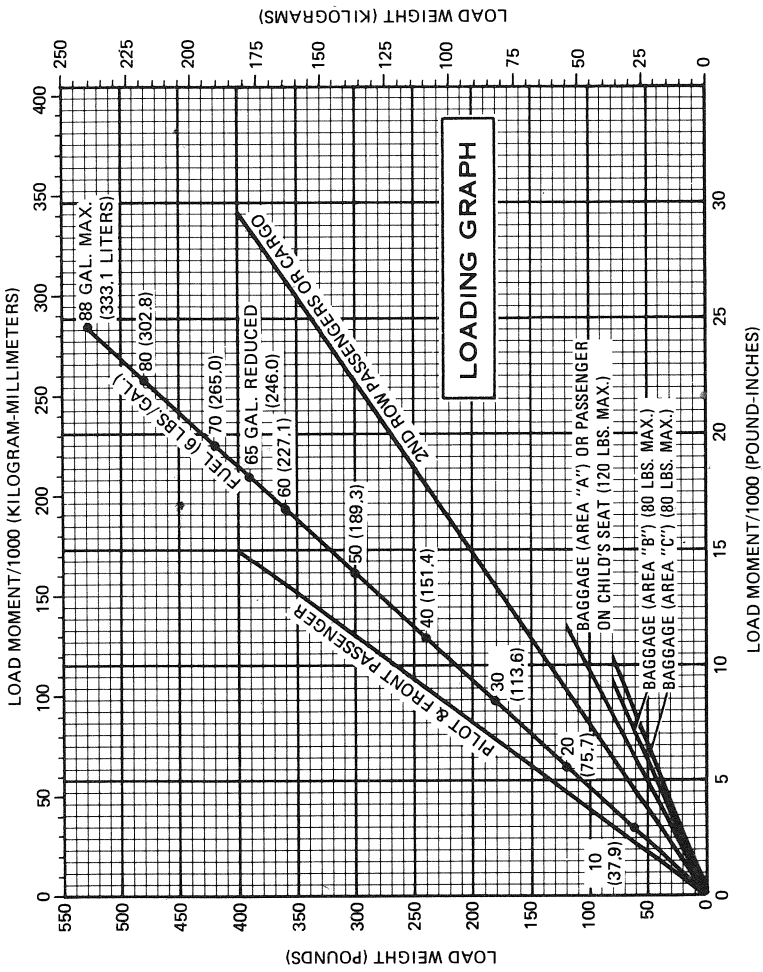

NOTE: 1. Line representing adjustable seats shows pilot and front seat passenger center of gravity on adjustable seats positioned for an average occupant. Refer to the Loading Arrangements diagram for forward and aft limits of occupant C.G. range.

Figure 6-6. Loading Graph

SECTION 6
WEIGHT & BALANCE/
EQUIPMENT LIST

CESSNA
MODEL T182

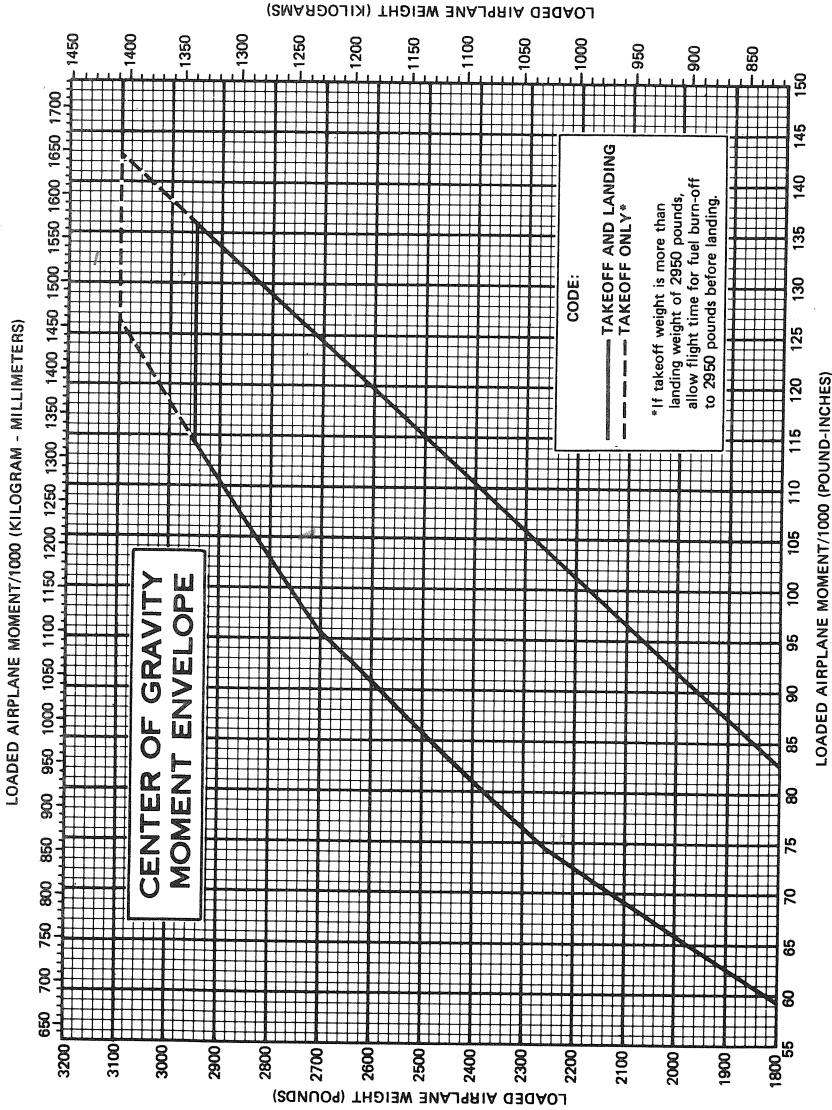


Figure 6-7. Center of Gravity Moment Envelope

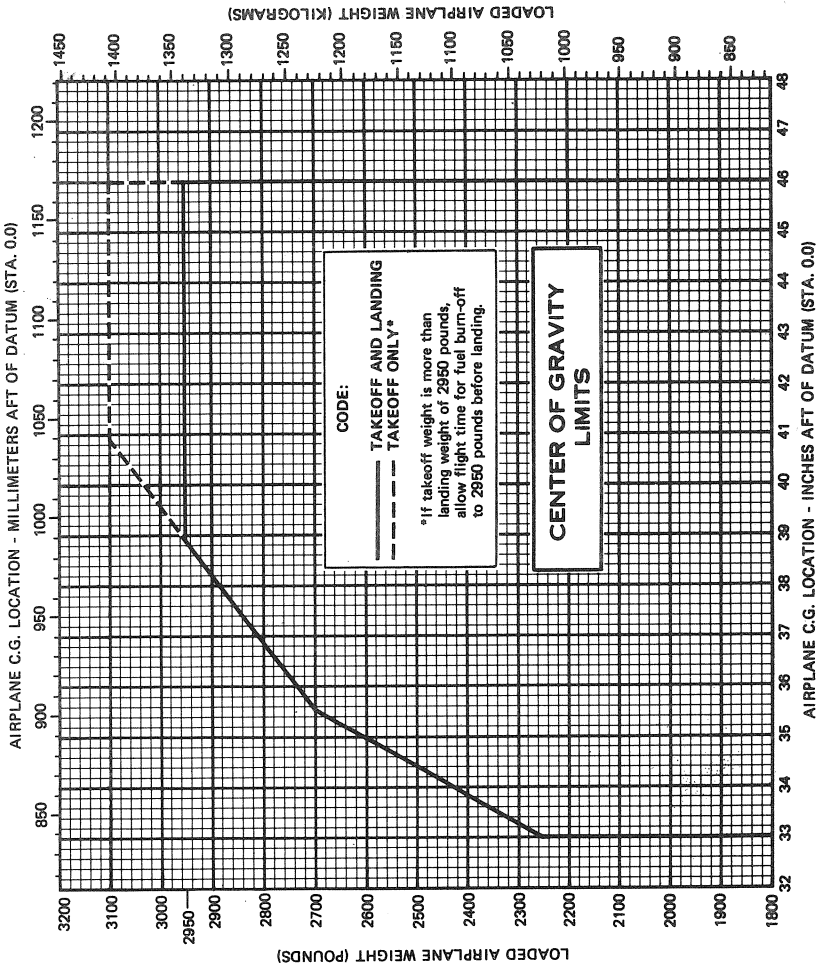


Figure 6-8. Center of Gravity Limits

EQUIPMENT LIST

The following equipment list is a comprehensive list of all Cessna equipment available for this airplane. A separate equipment list of items installed in your specific airplane is provided in your aircraft file. The following list and the specific list for your airplane have a similar order of listing.

This equipment list provides the following information:

An **item number** gives the identification number for the item. Each number is prefixed with a letter which identifies the **descriptive** grouping (example: A. Powerplant & Accessories) under which it is listed. Suffix letters identify the equipment as a required item, a standard item or an optional item. Suffix letters are as follows:

- R = required items of equipment for FAA certification
- S = standard equipment items
- O = optional equipment items replacing required or standard items
- A = optional equipment items which are in addition to required or standard items

A **reference drawing** column provides the drawing number for the item.

NOTE

If additional equipment is to be installed, it must be done in accordance with the reference drawing, accessory kit instructions, or a separate FAA approval.

Columns showing **weight (in pounds)** and **arm (in inches)** provide the weight and center of gravity location for the equipment.

NOTE

Unless otherwise indicated, true values (not net change values) for the weight and arm are shown. Positive arms are distances aft of the airplane datum; negative arms are distances forward of the datum.

NOTE

Asterisks (*) after the item weight and arm indicate complete assembly installations. Some major components of the assembly are listed on the lines immediately following. The summation of these major components does not necessarily equal the complete assembly installation.

SECTION 6
WEIGHT & BALANCE/
EQUIPMENT LIST

CESSNA
MODEL T182

| ITEM NO | EQUIPMENT LIST DESCRIPTION | REF DRAWING | WT LBS | ARM INS |
|---------|---|--|---|---|
| | A. POWERPLANT & ACCESSORIES | | | |
| A01-R | ENGINE, LYCOMING O-540-L3C5D -BENDIX MAGNETO (IMPULSE COUPLING) -CARBURETOR, MAKVEL SCHERBLER -STARTER, PRESTOLITE 24 VOLT -SPARK PLUGS, SHIELDED -FUEL PUMP | - D6LN-2031 TYPE HA-6 MHB 4010 SH 203A - _ | 392.0* 11.5 15.1 18.0 23.0 23.0 1.7 | -23.0* -6.5 -6.0 -33.0 -23.0 -23.0 -6.5 |
| A05-R | FILTER, CARBURETOR AIR | C294510-0901 | 0.8 | -4.6 |
| A09-R | ALTERNATOR, 28 VOLT, 60 AMP | C611503-0102 | 10.7 | -36.5 |
| A09-U | ALTERNATOR INSTL. 95 AMP NET CHANGE -ALTERNATOR (EQUIVILANT MOMENT) IS -REQUIRED WITH 95 AMP ALT. NET CHANGE | 2201093 C611505-0102 2201074-1 | 6.8* 15.3 1.0 | 4.9* -36.5 230.0 |
| A17-R | OIL COOLER INSTALLATION, REMOTE | 106148 | 4.9 | -6.5 |
| A21-S | OIL FILTER, SPIN-ON (CHAMPIAN CH48103) | C294506-0102 | 1.1 | -7.5 |
| A33-R | PROPELLER, MCCAULEY (B2034C219/90DHB-8) | C161008-0110 | 53.0 | -45.6 |
| A33-C | PROPELLER INSTL., 3 BLADE MCCAULEY -PROPELLER, (EQUIVILANT MOMENT) IS -REQUIRED WITH 3 BLADE PROPELLER | 2252076 C161007-0302 2201074-2 | 72.5* 68.5 4.0 | -37.2* -47.0 130.0 |
| A37-R | GOVERNOR, PROPELLER (MCCAULEY C290D3) | C161031-0113 | 3.0 | -37.0 |
| A41-R | SPINNER INSTALLATION, PROPELLER -SPINNER DOME ASSY -BULKHEAD ASSY, AFT | 2253124 2250123-1 2250121-1 | 3.4* 2.1 1.0 | -46.0* -50.5 -41.8 |
| A41-O | SPINNER INSTALLATION, 3 BLADE PROPELLER | 2252076-1 | 3.4 | -46.0 |
| A45-R | TURBOCHARGER ASSEMBLY (TA04) | C295001-0304 | 16.1 | -19.0 |
| A49-R | TURBOCHARGER WASTEGATE ASSEMBLY | C165006-0502 | 3.0 | -29.5 |

| ITEM NO | EQUIPMENT LIST DESCRIPTION | REF DRAWING | WT LBS | ARM INS |
|-------------------------------|---|--|--|---|
| A57-R | TURBOCHARGER OVERBOOST RELIEF VALVE | C482002-0113 | 1.5 | -9.0 |
| A61-S | VACUUM SYSTEM, ENGINE DRIVEN -VACUUM PUMP | 0706003-2 C431003-0101 | 3.1* 1.8 | -3.9 -7.5 |
| A70-A | PRIMING SYSTEM, FOUR CYLINDER | - - | 0.7 | 10.0 |
| A73-S | OIL QUICK DRAIN VALVE | S-1951-5 | 0.2 | -19.0 |
| B. LANDING GEAR & ACCESSORIES | | | | |
| B01-R | WHEEL, BRAKE & TIRE ASSY, 6.00X6 MAIN (2) -WHEEL ASSY, MCCAULEY (EACH) -BRAKE ASSY, MCCAULEY (LEFT) -BRAKE ASSY, MCCAULEY (RIGHT) -TIRE, 6 PLY RATED BLACKWALL (EACH) -TUBE (EACH) | C163019B0206 C163006-0103 C163032-0205 C163032-0206 C262003-0104 C262023-0102 | 43.8* 8.4 3.0 3.0 8.4 2.1 | 58.4* 58.9 55.5 55.5 58.9 58.9 |
| B04-R | WHEEL & TIRE ASSY, 5.00X5 NOSE -WHEEL ASSEMBLY, MCCAULEY -TIRE, 6 PLY RATED BLACKWALL -TUBE | C163018B0103 C163005-0201 C262023-0101 | 13.4* 3.8 5.2 1.4 | -7.1* -7.1 -7.1 -7.1 |
| B10-S | FAIRING INSTALLATION, WHEEL (SET OF 3) -NOSE WHEEL FAIRING (EACH) -MAIN WHEEL FAIRING -BRAKE DISC FAIRING | 0741638 0543079 0541223 0741641 | 18.4* 3.9 5.7 0.6 | 45.9* -6.0 60.2 58.0 |
| B16-R | AXLE, STANDARD DUTY MAIN GEAR (SET OF 2) | 0541124-1 | 2.6 | 58.9 |
| B16-O | AXLE, HEAVY DUTY MAIN GEAR (SET OF 2) | 1441003-1 | 4.5 | 58.9 |
| C. ELECTRICAL SYSTEMS | | | | |
| C01-R | BATTERY, 24 VOLT, STANDARD DUTY | C614002-0101 | 23.2 | 130.0 |

SECTION 6
WEIGHT & BALANCE/
EQUIPMENT LIST

CESSNA
MODEL T182

| ITEM NO | EQUIPMENT LIST DESCRIPTION | REF DRAWING | WT LBS | ARM INS |
|---------|---|--|---------------------------|-----------------------------------|
| C01-C | BATTERY, 24 VOLT, HEAVY DUTY | C614002-0102 | 25.2 | 130.0 |
| C04-R | ALTERNATOR CONTROL UNIT, 28 VOLT WITH HIGH VOLTAGE PROTECTION & LOW VOLTAGE SENSING | C611005-0101 | 0.4 | -0.3 |
| C07-A | GROUND SERVICE PLUG RECEPTACLE | 2270017-2 | 2.8 | 136.5 |
| C10-A | ELECTRIC ELEVATOR TRIM INSTL -ELECTRIC DRIVE ASSEMBLY | 2270007 | 4.8* 2.3 | 164.4* 220.0 |
| C19-C | HEATING SYSTEM, PITOT & STALL WARNING SWITCH | 0770724-6 | 0.5 | 26.5 |
| C22-A | LIGHTS, INSTRUMENT POST | 2201003-2 | 0.5 | 17.5 |
| C23-A | PANEL LIGHTS, ELECTRO-LUMINESCENT INSTL. | 0770419 | 2.1 | 16.5 |
| C31-A | LIGHTS, COURTESY (NET CHANGE) | 0700615-14 | 0.5 | 61.7 |
| C40-A | DETECTORS, NAVIGATION LIGHT (SET OF 2) | 0701013 | NEGL | - |
| C43-A | 04N1 FLASHING BEACON LIGHT -LIGHT ASSY (IN FIN TIP) -FLASHER ASSY (IN AFT TAIL CONE) -LOADING RESISTOR | 0701042-4 C621001-0102 C594502-0102 OR 95-6 | 1.8* 0.7 0.4 0.2 | 208.6* 253.0 253.0 212.0 |
| C46-A | STROBE LIGHTS, WHITE (EACH WING TIP) -POWER SUPPLY (AEROFLASH 152-3009) -LIGHT ASSY. (AEROFLASH 73-145) (2) | 2201008-1 C623008-0102 C622006-0107 | 2.6* 2.3 0.3 | 44.4* 46.7 42.0 |
| C49-S | LIGHT INSTL, COMB MOUNTED LANDING & TAXI -LIGHT BULBS (2) | 2270002 4591 | 1.6* 1.0 | -28.1* -37.0 |
| | D. INSTRUMENTS | | | |
| D01-R | INDICATOR, AIRSPEED | C661064-0236 | 0.6 | 16.0 |
| D01-C | INDICATOR, TRUE AIRSPEED (NET CHANGE) | 1201109-22 | 0.2 | 16.5 |

| ITEM NO | EQUIPMENT LIST DESCRIPTION | REF DRAWING | WT LBS | ARM INS |
|---------|---|--|---------------------------|-------------------------------|
| D04-S | STATIC ALTERNATE AIR SOURCE | 3701028-1 | 2.3 | 14.4 |
| D07-R | ALTIMETER, SENSITIVE | C661071-0101 | 0.7 | 15.3 |
| D07-O-1 | ALTIMETER, SENSITIVE (FEET & MILLIBARS) | C661071-0102 | 0.7 | 15.3 |
| D07-C-2 | ALTIMETER, SENSITIVE (20 FT. MARKINGS) | C661025-0102 | 0.7 | 15.3 |
| D10-A | ALTIMETER INSTALLATION (2ND UNIT) | 1213681 | 0.8 | 16.0 |
| D16-A-1 | ENCODING ALTIMETER (REQUIRES RELOCATING STANDARD ALTIMETER) | 1213732 | 3.0 | 14.0 |
| D16-A-2 | ENCODING ALTIMETER, FEET AND MILLIBARS (REQUIRES RELOCATING STANDARD ALTIMETER) | 1213732 | 3.0 | 14.0 |
| D16-A-3 | ALTITUDE ENCODER, BLIND (INSTRUMENT PANEL INSTALLATION NOT REQUIRED) | 0701099-1 | 1.5* | 13.6* |
| D22-S | GAGE, CARBURETOR AIR TEMPERATURE | 2201005 | 1.1 | 16.4 |
| D25-S | CLOCK, ELECTRIC, DIAL READ | C664503-0102 | 0.4 | 16.6 |
| D25-O | CLOCK, ELECTRIC, DIGITAL READOUT | C664511-0102 | 0.4 | 16.5 |
| D28-R | COMPASS, MAGNETIC & MOUNT | 1213679-3 | 1.1 | 20.5 |
| D34-R | INSTRUMENT CLUSTER, ENGINE & FUEL | C669545-0108 | 1.3 | 16.5 |
| D49-S | INDICATOR INSTL., ECONOMY MIXTURE (EGT) -TEMPERATURE INDICATOR -THERMOCOUPLE PROBE -THERMOCOUPLE LEAD WIRE (IC) | 2205008-1-0211 C668531-0204 C668531-0204 C668501-0206 | 0.7* 0.4 0.1 0.1 | 8.2* 17.1 -20.5 -0.3 |
| D58-R | GAGE, MANIFOLD/FUEL PRESSURE | C662038-0104 | 1.3 | 16.3 |
| D64-S | GYRO SYSTEM -DIRECTIONAL INDICATOR -ALTITUDE INDICATOR -HORSES, FITTINGS, SCREWS, CLAMPS, ETC. (ALTERNATE C661075 & C661076 GYRO) | 0701030-2 C661375-3101 C661076-0102 | 5.8* 2.5 2.0 1.3 | 13.6* 14.3 14.3 11.5 |

SECTION 6
WEIGHT & BALANCE/
EQUIPMENT LIST

CESSNA
MODEL T182

| ITEM NO | EQUIPMENT LIST DESCRIPTION | REF DRAWING | WT LBS | ARM INS |
|-------------------------|---|---------------------------------------|--------------------|-----------------------|
| D64-O | MAY BE USED) GYRO SYSTEM FOR NAV-G-MATIC 300A AUTOPILOT -DIRECTIONAL INDICATOR -ATTITUDE INDICATOR | 0701038 43760-0101 C661076-0102 | 6.2* 2.7 2.0 | 13.4* 13.4 14.6 |
| D67-A | HOURMETER, INSTALLATION -RECORDING INDICATOR -OIL PRESSURE SWITCH | 2201004-1 C664503-0101 S1711-1 | 0.6* 0.1 0.2 | 7.8* 16.5 -1.0 |
| D82-S | GAGE, OUTSIDE AIR TEMPERATURE | C669507-0101 | 0.1 | 28.5 |
| D85-R | TACHOMETER, INSTALLATION, ENGINE -RECORDING TACH INDICATOR | 2206001 C668020-0117 | 0.9* 0.7 | 13.8* 16.9 |
| D88-S-1 | INDICATOR, TURN COORDINATOR (28 VOLT ONLY) | C661003-0507 | 1.0 | 16.0 |
| D88-S-2 | INDICATOR, TURN COORDINATOR (12/30 VOLT) | C661003-0506 | 1.0 | 16.0 |
| D88-O-1 | INDICATOR TURN COORDINATOR (FOR NORM'S) | 42320-028 | 1.3 | 16.0 |
| D88-O-2 | INDICATOR, TURN & BANK | S-1303N2 | 2.0 | 15.5 |
| D91-S | INDICATOR, VERTICAL SPEED | C661080-0101 | 1.0 | 15.4 |
| E. CABIN ACCOMMODATIONS | | | | |
| E05-R | SEAT, ADJUSTABLE FORE & AFT - PILOT | 0714042-1 | 13.0 | 44.0 |
| E05-O | SEAT, ARTICULATING VERT. ADJ. - PILOT | 0714043-1 | 24.0 | 41.5 |
| E07-S | SEAT, ADJUSTABLE FORE & AFT - CO-PILOT | 0714042-1 | 13.0 | 44.0 |
| E07-O | SEAT, ARTICULATING VERT. ADJ. - CO-PILOT | 0714043-2 | 24.0 | 41.5 |
| E09-S | SEAT, 2ND ROW BENCH | 0714041-1 | 23.0 | 80.5 |
| E11-A | SEAT INSTALLATION, AUXILIARY (CHILD) (NOT FACTORY INSTALLED) | C501009-5 | 8.2* | 104.2* |

| ITEM NO | EQUIPMENT LIST DESCRIPTION | REF DRAWING | WT LBS | ARM INS |
|---------|---|--------------------------------------|-----------------------------|----------------------------------|
| E15-R | -SEAT ASSY, FOLD-AWAY (120 LB MAX CAP.) -BELT ASSY, LAP | 0714050-4 S1746-5 | 6.9 0.9 | 104.4 101.1 |
| E15-S | BELT ASSY, LAP (PILOT SEAT) | S2275-103 | 1.0 | 37.0 |
| E19-O | SHOULDER HARNESS ASSY, PILOT | S2275-231 | 0.6 | 37.0 |
| | PILOT & CO-PILOT INERTIA REEL INSTL. (NET CHANGE) | 0701077 | 3.6 | 92.0 |
| E23-S | BELT & SHOULDER HARNESS ASSY, CO-PILOT | S2275-3 | 1.6 | 37.0 |
| E27-S | BELT ASSY, 2ND ROW OCCUPANTS (SET OF 2) | S-1746-1 | 1.6 | 74.5 |
| E27-O | BELT & SHOULDER HARNESS ASSY, 2ND ROW | S-2275-7 | 3.2 | 74.5 |
| E35-A-1 | INTERIOR, VINYL SEAT COVERS (NET CHANGE) | CES-1154 | 0.0 | - |
| E35-A-2 | INTERIOR, LEATHER SEAT COVERS (NET CHANGE) | CES-1154 | 2.0 | 62.3 |
| E35-A-3 | INTERIOR, SEAT COVERING--VINYL OR FABRIC AND LEATHER (NET CHANGE) | | 1.0 | 62.3 |
| E35-A-4 | INTERIOR, UPHOLSTERY SIDE PANEL LEATHER STYLING (NET CHANGE) | | 1.0 | 65.0 |
| E35-A-5 | INTERIOR, UPHOLSTERY SIDE PANEL LEATHER AND VINYL OR FABRIC STYLING (NET CHANGE) | CES-1154 | 3.5 | 65.0 |
| E37-O | OPENABLE RH CABIN DOOR WINDOW (NET CHANGE) | 0701065-6 | 2.3 | 47.0 |
| E39-A | WINDOWS, OVERHEAD CABIN TOP (NET CHANGE) | 0701017-4 | 3.6 | 45.5 |
| E43-A | VENTILATION SYSTEM, 2ND ROW SEATING | 2201046-1 | 2.4 | 57.7 |
| E47-S | OXYGEN SYSTEM PROVISIONS, (HARDWARE LINES, CYLINDER SUPPORTS AND MISC ITEMS) | 2201006-11 | 4.7 | 85.0 |
| E47-A | OXYGEN SYSTEM, 4 PORT -OXYGEN CYLINDER-EMPTY -OXYGEN - 48 CU. FT @ 1800 PSI -OXYGEN MASKS, PILOT & 3 PASSENGER | 2201006-9 C166001-0601 C166125 | 31.3* 25.0 4.0 1.1 | 147.7* 143.6 143.0 61.1 |

SECTION 6
WEIGHT & BALANCE/
EQUIPMENT LIST

CESSNA
MODEL T182

| ITEM NO | EQUIPMENT LIST DESCRIPTION | REF DRAWING | WT LBS | ARM INS |
|---------|--|-------------|---------------|----------------|
| E49-A | CUP HOLDER, RETRACTABLE (SET OF 2) | 1201124 | 0.1 | 16.0 |
| E50-A | HEADREST, 1ST ROW (INSTALLED ARM) (EACH) | 1215073-1 | 0.9 | 47.0 |
| E51-A | HEADREST, 2ND ROW (INSTALLED ARM) (EACH) | 1215073-1 | 0.9 | 87.0 |
| E55-S | SUN VISORS (SET OF 2) | C514166-1 | 1.0 | 33.0 |
| E59-A | APPROACH PLATE HOLDER | 0715083-1 | 0.1 | 27.5 |
| E65-S | BAGGAGE TIE DOWN NET | 1215171-1 | 0.5 | 108.0 |
| E85-A | RIGHT HAND CONTROLS INSTALLATION | 0760101-10 | 6.7 | 14.1 |
| E88-A | CABIN AIR CONDITIONING INSTALLATION -COMPRESSOR (SANYO) -EVAPORATOR COIL (ARA) -CONDENSOR COIL (ARA) (IN TAILCONE AREA) | 0701128 | 63.9* 18.4 | 52.0* -37.1 |
| E89-S | CONTROL WHEEL, PILOT ALL PURPOSE (INCLUDES CONTROL WHEEL MAP LIGHT & MIKE SWITCH) | 2260126-1 | 2.7 | 22.0 |
| E93-R | HEATING SYSTEM, CABIN & CARBURETOR AIR (INCLUDES ENGINE EXHAUST SYSTEM) | 0750201 | 18.0 | -16.0 |
| | F. PLACARDS, WARNINGS & MANUALS | | | |
| F01-R | PLACARD, OPERATIONAL LIMITATIONS-VFR DAY | 0505087-7 | NEGL | - |
| F01-O-1 | PLACARD, OPERATIONAL LIMITATIONS VFR/DAY-NIGHT | 0505087-8 | NEGL | - |
| F01-O-2 | PLACARD, OPERATIONAL LIMITATIONS VFR-IFR/DAY-NIGHT | 0505087-9 | NEGL | - |
| F04-R | INDICATOR, STALL WARNING HORN-AUDIBLE | 1670056-1 | 1.2 | 17.5 |
| F10-S | CHECK LIST, PILOTS (STOWED) | 06080 | NEGL | |

| ITEM NO | EQUIPMENT LIST DESCRIPTION | REF DRAWING | WT LBS | ARM INS |
|---------|---|------------------------|-------------|--------------|
| F16-R | PILOT'S OPERATING HANDBOOK AND FAA APPROVED AIRPLANE FLIGHT MANUAL, STOWED | D1197-13PH | 1.3 | -- |
| | 6. AUXILIARY EQUIPMENT | | | |
| G01-A | TAILCONE LIFT HANDLES (SET OF 2) | 2201009-1 | 1.0 | 186.5 |
| G07-A | HOISTING RINGS, AIRPLANE (NOT FACTORY INSTALLED) | 0700612-1 | 1.5 | 45.6 |
| G13-A | CORROSION PROOFING, INTERNAL | 0760007-3 | 7.0 | 75.0 |
| G16-A | STATIC DISCHARGERS (SET OF 10) | 1201131-2 | 0.4 | 130.5 |
| G19-A | STABILIZER ABRASION BOOTS | 0500041-3 | 2.7 | 206.0 |
| G22-S | TOWBAR, AIRCRAFT (STOWED ARM SHOWN) | 0501919-1 | 1.6 | 97.0 |
| G25-S | PAINT, OVERALL EXTERIOR, MODIFIED POLY- URETHANE OVERALL WHITE BASE COLORED STRIPE | 0704047 | 12.7* | 91.9* |
| G31-A | CABLES, CORROSION RESISTANT (NET CHANGE) | 0760007-3 | 11.9 0.4 | 92.2 82.3 |
| G55-A-1 | FIRE EXTINGUISHER, HAND TYPE (FOR USE WITH STANDARD PILOT SEAT) | 0701014-1 | 0.0 | -- |
| G55-A-2 | FIRE EXTINGUISHER, HAND TYPE (FOR USE WITH VERTICAL ADJUSTING PILOT SEAT) | 0701014-2 | 4.8 | 35.0 |
| G58-A | REFUELING ASSIST STEPS & HANDLES (2) | | 5.0 | 29.0 |
| G61-A | WRITING TABLE | 0701127-1 | 1.8 | 15.3 |
| G67-A | PEDAL EXTENSIONS, RUDDER, REMOVABLE - SET OF 2 (STOWABLE - INSTALLED ARM SHOWN) | 1715072-1 0701048-1 | 3.6 2.3 | 61.5 8.0 |

SECTION 6
WEIGHT & BALANCE/
EQUIPMENT LIST

CESSNA
MODEL T182

| ITEM NO | EQUIPMENT LIST DESCRIPTION | REF DRAWING | WT LBS | ARM INS |
|---------|---|--|---|--|
| H01-A-1 | H. AVIONICS & AUTOPILOTS CESSNA 300 ADF WITH BFO -RECEIVER WITH BFO (R-546E) -INDICATOR (IN-346A) -ADF LOOP ANTENNA & ASSOC. WIRING -SENSE ANTENNA INSTL. ITEMS -MOUNTING BOX & MISC. ITEMS | 3910159-1 41240-0001 43980-1001 3960140-1 | 6.5* 2.3 0.9 2.2 0.3 0.8 | 25.5* 13.5 16.5 35.2 105.0 13.6 |
| H01-A-2 | CESSNA 400 ADF (W/BFO) -RECEIVER WITH DUAL SELECTOR (R-446A) -INDICATOR (IN-346A) -ADF LOOP ANTENNA & ASSOC. WIRING -SENSE ANTENNA INSTL. ITEMS -MOUNTING BOX & MISC. ITEMS | 3910160-1 43090-1028 43980-1001 3960140-1 | 7.5* 3.3 2.2 0.8 | 23.9* 13.5 16.5 105.0 13.6 |
| H03-A | AM/FM STEREO RECEIVER & CASSETTE PLAYER -HEADSET (SET OF 2, 4 MAY BE USED) -STEREO RECEIVER INSTL. -ANTENNA & MISC. ITEMS | 3910209-1 596532-0101 3930211-1 | 5.5* 2.0 2.5 | 32.8* 17.3 119.6 |
| H04-A-1 | DME INSTALLATION, NARCO -TRANSCIVER (DME-190) -MOUNT ASSY -ANTENNA | 3910166-6 3312-406 - - | 6.3* 5.2 0.6 0.2 | 14.3* 11.0 11.0 88.4 |
| H04-A-2 | CESSNA 400 DME INSTALLATION -RECEIVER-TRANSMITTER -INDICATOR -ANTENNA | 3910167-16 44000 44020-1100 42940 | 13.9* 8.5 1.6 0.2 | 101.9* 133.7 14.0 88.4 |
| H04-A-3 | COLLINS DME-451 -RECEIVER/TRANSMITTER, TCR-451 -INDICATOR/CONTROL, IND-450C -ANTENNA, ANT-451 | 622-3670-001 622-5588-001 622-4011-001 | 10.0* 5.3 0.9 0.2 | 97.9* 133.7 14.0 88.4 |
| H05-A-1 | CESSNA 400 R-NAV (USED WITH NAV/COM AND DME) (INDICATOR NOT CHANGE) -R-NAV COMPUTER (R-478A) -INDICATOR ADDED (IN-442AR) | 3910168-18 44100-0000 43910-1000 | 4.7* 3.8 1.0 | 12.0* 12.5 15.5 |

| ITEM NO | EQUIPMENT LIST DESCRIPTION | REF DRAWING | WT LBS | ARM INS |
|---------|---|--|---|--|
| H05-A-2 | -INDICATOR DELETED, (IN-385A) FOSTER R-NAV 511 -COMPUTER-INDICATOR | 46860-1000 3910203 | -1.6 3.4* 2.4 | 15.5 12.2* 12.5 |
| H05-A-3 | COLLINS R-NAV, ANS-351C | 622-5579-001 | 3.6 | 12.3 |
| H07-A | CESSNA 400 GLIDESLOPE (INCLUDES VOR/ILS INDICATOR EXCHANGE FOR VOR/LOC) -RECEIVER, 40 CHANNEL (R-443B) -RECEIVER MOUNT -ANTENNA (MOUNTED ON UPPER WINDSHIELD) -VOR/ILS INDICATOR (IN-386A)(INDICATOR ACTUAL WT. IS 1.7 LBS) | 3910157 42100-0000 36450-0000 1200098-1 46860-2000 | 5.0* 2.1 0.3 0.2 0.1 | 92.7* 130.1 130.1 26.6 15.5 |
| H08-A-1 | AUTO RADIAL CENTERING INDICATOR ARC/LOC EXCHANGE FOR VOR/LOC IN ITEMS H22-A-1 AND H22-A-2 (WT NET CHANGE) -ARC/LOC INDICATOR ADDED -VOR/LOC INDICATOR DELETED | 3910196-1 46860-1200 46860-1000 | 0.2* 1.8 -1.6 | 15.5* 15.5 15.5 |
| H08-A-2 | AUTO RADIAL CENTERING INDICATOR ARC/ILS EXCHANGE FOR VOR/ILS INDICATOR IN ITEM H07-A ONLY -ARC/ILS INDICATOR (IN-386AC) ADDED -VOR/ILS INDICATOR (IN-386A) DELETED | 3910196-2 46860-2200 46860-2000 | 0.2* 1.9 1.7 | 15.5* 15.5 15.5 |
| H09-A | HSI NON-SLAVED INDICATOR INSTALLATION WITH DIRECTIONAL & NAV INDICATORS NET CHANGE -HSI INDICATOR IG-832C -HSI VOR CONVERTER INSTALLATION -CONVERTER CABLE -N.O.M. DIRECTIONAL IND. DELETED -VOR/ILS INDICATOR DELETED | 44690-2000 | 3.2* 4.4 1.1 2.1 -2.7 -1.7 | 96.7* 13.0 165.7 64.4 13.4 13.5 |
| H11-A | SUNAIR SSB HF TRANSCEIVER (2ND UNIT) -RE-1000 SINGLE SIDE BAND XCVR, ASB-125 -PALOICA REMOTE POWER AMPLIFIER -CJ-110 ANTENNA COUPLER (LOAD BOX) -ANTENNA INSTL, 351 INCH LONG | 3910158-9 99681 99683 99816 3960117 | 24.5* 5.3 8.5 5.2 0.3 | 93.6* 11.7 138.0 117.0 152.1 |
| H13-A | CESSNA 400 MARKER BEACON | 3910164-5 | 2.4* | 72.1* |

**SECTION 6
WEIGHT & BALANCE/
EQUIPMENT LIST**

**CESSNA
MODEL T182**

| ITEM NO | EQUIPMENT LIST DESCRIPTION | REF DRAWING | WT LBS | ARM INS |
|---------|---|---|---|---|
| H16-A-1 | -RECEIVER (R-402A) -ANTENNA, FLUSH MOUNTED IN TAILCONE CESSNA 300 TRANSPONDER -RECEIVER-TRANSMITTER (RT-359A) -ANTENNA | 42410-5128 1270720-1 3910127-19 41420-0028 42940-0000 | 0.7 1.0 4.1* 2.7 0.2 | 11.5 133.4 32.5* 12.5 167.0 |
| H16-A-2 | CESSNA 400 TRANSPONDER -RECEIVER-TRANSMITTER (RT-459A) -ANTENNA | 3910128-13 41470-1028 42940-0000 | 4.1* 2.8 0.2 | 32.5* 12.5 167.0 |
| H22-A-1 | CESSNA 300 NAV/COM 720 CH COM INSTL. UNIT REQUIRES--H34-A TO BE OPERATIONAL 1ST UNIT H37-A TO BE OPERATIONAL 2ND UNIT -RECEIVER-TRANSCIEVER (RT-385A) -VOR/LOC INDICATOR (IN-385A) -MOUNT, WIRING & MISC HARDWARE | 3910183-16 | 8.0* | 12.8* |
| H22-A-2 | CESSNA 400 NAV/COM 720 CH COM INSTALLATION REQUIRES--H34-A TO BE OPERATIONAL 1ST UNIT H37-A TO BE OPERATIONAL 2ND UNIT -RECEIVER-TRANSCIEVER (RT-485A) -VOR/LOC INDICATOR (IN-385A) -MOUNT, WIRING & MISC HARDWARE | 46660-1000 46860-1000 | 5.5 1.6 0.9 | 12.5 15.5 10.5 |
| H28-A-1 | EMERGENCY LOCATOR TRANSMITTER -TRANSMITTER ASSY (D & M DMELT-6-1) -ANTENNA ASSY | 0470419-27 C589511-0117 C589511-0109 | 3.5* 3.3 0.1 | 152.2* 151.5 168.0 |
| H28-A-2 | EMERGENCY LOCATOR TRANSMITTER (USED IN CANADA) -TRANSMITTER ASSY (D & M DMELT-6-1C) -ANTENNA | 0470419-28 | 3.5* | 152.2* |
| H31-A-1 | NAV-O-MATIC 200A INSTALLATION (AF-295B) -CONTROLLER-AMPLIFIER -TURN COORDINATOR (D88-C-1) (NET CHANGE) -WING SERVO INSTALLATION | C589511-0113 C589511-0109 3910162-15 43610-1202 42320-0028 0700215 | 3.3 0.1 8.8* 1.1 0.3 5.4 | 151.5 168.0 49.4* 13.5 15.5 69.8 |
| H31-A-2 | NAV-O-MATIC 300A INSTALLATION (AF-395-A) -CONTROLLER-AMPLIFIER (C-395A) -GYRU INSTALLATION (NET CHANGE) | 3910163-15 42660-1202 0701038-1 | 9.5* 1.4 0.4 | 47.8* 13.5 10.5 |

| ITEM NO | EQUIPMENT LIST DESCRIPTION | REF DRAWING | WT LBS | ARM INS |
|---------|---|--|--|--|
| H31-A-3 | <ul style="list-style-type: none"> -TURN COORDINATOR (D88-0-1) (NET CHANGE) -WING SERVO INSTALLATION NAV-O-MATIC 300A INSTALLATION WITH NON-SLAVED HSI -CONTROLLER-AMPLIFIER -H9-A NON-SLAVED HSI INSTALLATION -WING SERVO INSTALLATION -D88-0 TURN COORDINATOR (NET CHANGE) -MISC ITEMS AND HARDWARE | <ul style="list-style-type: none"> 42320-0028 0700215 42660-2202 0700215 42320-0028 0700215 | <ul style="list-style-type: none"> 2.3 5.4 12.5* 1.4 3.2 5.4 0.3 2.2 | <ul style="list-style-type: none"> 15.5 69.8 61.0* 15.5 96.7 69.8 15.5 22.6 |
| H33-A | <ul style="list-style-type: none"> INTERCOM SYSTEM (REQUIRES E85-A DUAL CONTROLS INSTL.) -JACK INSTALLATION FOR INTERCOM RH SIDE -H56-A HEADPHONE/MIKE (SET OF 2) -INTERCOM P/C BOARD ASSY (NET CHANGE) -RH CONTROL WHEEL INSTL (NET CHANGE) | <ul style="list-style-type: none"> 3910210-7 596531-0101 3979149-1 3970153-7 | <ul style="list-style-type: none"> 2.9* 2.3 2.2 0.3 | <ul style="list-style-type: none"> 15.0* 18.0 14.0 19.0 |
| H34-A | <ul style="list-style-type: none"> BASIC AVIONICS KIT (REQUIRED BY AND AVAILABLE WITH 1ST UNIT ONLY) -CABIN SPEAKER INSTL. -RADIO COOLING -NOISE FILTER (ON ALTERNATOR) -RECEIVER INSTALLATION KIT -CABLE ASSY FOR COM ANTENNA -CABLE ASSY FOR OMNI ANTENNA -OMNI ANTENNA INSTALLATION -COM ANTENNA, RH SPIKE ON CABIN TOP -AUDIO CONTROL PANEL AND WIRING -HEADSET INSTALLATION -MICROPHONE INSTALLATION | <ul style="list-style-type: none"> 3910186-8 0770750-741 3930216-1 3940148-2 3930186 3950126-40 3950126-51 3960142-6 3960113-2 3970152-1 3970137-2 3970139-1 | <ul style="list-style-type: none"> 8.8* 1.9 1.5 0.1 0.1 0.6 1.1 1.4 0.6 0.5 1.9 0.2 0.3 | <ul style="list-style-type: none"> 50.3* 45.1 6.0 -32.5 15.5 22.0 11.4 250.6 63.4 12.5 14.4 17.6 |
| H37-A | <ul style="list-style-type: none"> ANTENNA & COUPLER KIT (RQD & AVAILABLE WITH 2ND NAV/COM INSTL.) -ANTENNA & CABLE, LH VHF COM -ANTENNA COUPLER & CABLES (VOR OMNI) | <ul style="list-style-type: none"> 3910185-6 S2212-1 | <ul style="list-style-type: none"> 1.0* 0.8 0.2 | <ul style="list-style-type: none"> 39.3* 48.6 1.6 |
| H43-A-1 | <ul style="list-style-type: none"> 200A AUTOPILOT PARTIAL INSTL (NOT AVAILABLE WITH FACTORY INSTALLED NAV/COMS) -ROLL ACTUATOR INSTALLATION -COMPUTER INSTL (INCLUDES TURN COORDINATOR NET CHANGE) | <ul style="list-style-type: none"> 3910154-109 0700215-5 3930144-2 | <ul style="list-style-type: none"> 8.8* 5.4 1.8 | <ul style="list-style-type: none"> 49.4* 60.8 14.1 |

**SECTION 6
WEIGHT & BALANCE/
EQUIPMENT LIST**

**CESSNA
MODEL T182**

| ITEM NO | EQUIPMENT LIST DESCRIPTION | REF DRAWING | WT LBS | ARM INS |
|---------|--|---|---|---|
| H43-A-2 | -CABLE INSTL.--WING AREA -CABLE INSTL.--INSTRUMENT PANEL AREA 330A AUTOPILOT FACTORY PARTIAL INSTL (NOT AVAILABLE WITH FACTORY INSTALLED NAV/COMS) -COMPUTER INSTL (INCLUDES GYRO'S & TURN COORDINATOR NET CHANGED) -CABLE INSTL.--WING AREA -CABLE INSTL.--INSTRUMENT PANEL AREA | 3950115-6 3950148-5 3910154-119 3930145-4 3950115-6 3950148-6 | 9.6 9.5 9.5* 3.5 0.6 0.5 | 34.5 12.3 47.8* 13.0 34.5 12.4 |
| H46-A | ADF ANTI PRECIP SENSE ANTENNA | 3910154-64 | 0.8 | 141.8 |
| H55-A-1 | MIC-HEADSET COMBINATION, LIGHT WEIGHT | C596533-0101 | 0.2 | 14.0 |
| H55-A-2 | MIC-HEADSET COMBINATION, PADDED | C596531-0101 | 1.1 | 14.0 |
| H56-A | HEADSET FOR STEREO, REAR SET | C596532-0101 | 2.2 | 50.0 |
| H64-A | AVIONICS OPTION A, PROVISIONS FOR SINGLE NAV/COM, AVAILABLE ON EXPORT A/C ONLY -CABLE SPEAKER -CABLE, RH VHF COM ANTENNA -CABLE INSTL, VHF OMNI NAVIGATION -COM ANTENNA, VHF, RH SIDE -OMNI ANTENNA (ON VERTICAL FIN) -HEADPHONE INSTALLATION -MIKE INSTALLATION | 3910206-11 0770750-741 3950126-43 3950126-51 3960113-2 3960142-6 3970137-2 3970139-1 | 5.2* 1.9 0.6 1.1 0.5 0.6 0.2 0.3 | 79.2* 45.1 22.0 111.4 63.4 250.6 14.4 17.6 |
| H67-A | AVIONICS OPTION B, DUAL NAV/COM PROVISIONS FOR EXPORT AIRCRAFT ONLY -H64-A AVIONICS OPTION A -CABLE ASSY LH VHF COM ANTENNA -ANTENNA INSTL., LH VHF COM | 3910206-12 3910206-11 3950126-41 3960113-1 | 6.3* 5.2 0.6 0.5 | 72.5* 79.2 22.0 63.4 |
| H70-A | REMOTE TRANSPONDER IDENT SWITCH | 3910205 | 0.2 | 17.0 |
| J01-A | J. SPECIAL OPTION PACKAGES SKYLAKE II KIT | - - | 52.6* | 52.5* |

CESSNA
MODEL T182

SECTION 6
WEIGHT & BALANCE/
EQUIPMENT LIST

| ITEM NO | EQUIPMENT LIST DESCRIPTION | REF DRAWING | WT LBS | ARM INS |
|----------|--|-------------|--------|---------|
| -C07-A | GROUND SERVICE RECEPTACLE | 237017-2 | 36.5 | 5.5 |
| -C08-A | CREATED PILOT & STALL WARNING | 3390219-14 | 36.7 | 5.7 |
| -C09-A | COURTESY ENTRANCE LIGHTS (2) | 0700613 | 31.1 | 5.1 |
| -C40-A | NAV LIGHT DETECTORS | 0701042-4 | 10.3 | 9.5 |
| -C42-A | FLASHING BEACON LIGHT | 1211128-22 | 10.2 | 9.4 |
| -C81-A | TRUE AIRSPEED IND NNET (CHANGE) | 0760101-10 | 6.7 | 5.1 |
| -E085-A | DUAL IC CONTROLS | 0760101-10 | 6.7 | 5.1 |
| -E16-A-1 | STATIC DISCHARGERS (1) | 1201134-1 | 4.5 | 4.5 |
| -E16-A-2 | CESSNA 300 AOE (8-546E) | 33010128-13 | 10.5 | 9.5 |
| -H16-A-1 | CESSNA 400 TRANSPONDER LT-459A | 33010128-13 | 6.4 | 5.3 |
| -H22-A-1 | CESSNA 300 NAV/COM RT-385A | 33010128-13 | 3.8 | 3.8 |
| -H28-A-1 | CESSNA 300 NAV/COM RT-385A | 33010128-13 | 3.8 | 3.8 |
| -H31-A-1 | CESSNA 300 NAV/COM RT-385A | 33010128-13 | 3.8 | 3.8 |
| -H34-A | CESSNA 300 NAV/COM RT-385A | 33010128-13 | 3.8 | 3.8 |
| J04-A | NAV-PAC (SKYLANE II ONLY) (NET CHARGE) | - | 16.4* | 47.4* |
| -H07-A | 400 GLIDESLOPE (8-443A) | 33010157 | 5.5 | 5.5 |
| -H13-A | 400 MARKER BEACON (R-402A) | 33010164 | 3.1 | 3.1 |
| -H22-A-1 | 300 NAV/COM VOR/LOC 2ND UNIT | 33010133 | 1.0 | 1.0 |
| -H37-A | ANTENNA & COUPLER KIT | 33010136 | 1.0 | 1.0 |

SECTION 7

AIRPLANE & SYSTEMS DESCRIPTIONS

TABLE OF CONTENTS

| | Page |
|--|------|
| Introduction | 7-3 |
| Airframe | 7-3 |
| Flight Controls | 7-8 |
| Trim Systems | 7-8 |
| Instrument Panel | 7-8 |
| Ground Control | 7-9 |
| Wing Flap System | 7-10 |
| Landing Gear System | 7-11 |
| Baggage Compartment | 7-11 |
| Seats | 7-11 |
| Seat Belts And Shoulder Harnesses | 7-12 |
| Seat Belts | 7-12 |
| Shoulder Harnesses | 7-13 |
| Integrated Seat Belt/Shoulder Harnesses With Inertia Reels | 7-13 |
| Entrance Doors And Cabin Windows | 7-15 |
| Control Locks | 7-16 |
| Engine | 7-16 |
| Engine Controls | 7-16 |
| Engine Instruments | 7-17 |
| New Engine Break-In And Operation | 7-19 |
| Engine Oil System | 7-19 |
| Ignition-Starter System | 7-19 |
| Air Induction System | 7-20 |
| Exhaust System | 7-20 |
| Carburetor And Priming System | 7-21 |
| Cooling System | 7-21 |
| Turbocharging System | 7-21 |
| Propeller | 7-24 |
| Fuel System | 7-25 |
| Brake System | 7-28 |
| Electrical System | 7-29 |
| Master Switch | 7-31 |
| Avionics Power Switch | 7-31 |

TABLE OF CONTENTS (Continued)

| | Page |
|---|------|
| Ammeter | 7-31 |
| Alternator Control Unit And Low-Voltage Warning Light . . . | 7-32 |
| Circuit Breakers And Fuses | 7-32 |
| Ground Service Plug Receptacle | 7-33 |
| Lighting Systems | 7-33 |
| Exterior Lighting | 7-33 |
| Interior Lighting | 7-33 |
| Cabin Heating, Ventilating And Defrosting System | 7-35 |
| Pitot-Static System And Instruments | 7-37 |
| Airspeed Indicator | 7-38 |
| Vertical Speed Indicator | 7-38 |
| Altimeter | 7-38 |
| Vacuum System And Instruments | 7-38 |
| Attitude Indicator | 7-40 |
| Directional Indicator | 7-40 |
| Suction Gage | 7-40 |
| Stall Warning System | 7-40 |
| Avionics Support Equipment | 7-41 |
| Avionics Cooling Fan | 7-41 |
| Microphone - Headset Installations | 7-41 |
| Static Dischargers | 7-42 |

INTRODUCTION

This section provides description and operation of the airplane and its systems. Some equipment described herein is optional and may not be installed in the airplane. Refer to Section 9, Supplements, for details of other optional systems and equipment.

AIRFRAME


The airplane is an all-metal, four-place, high-wing, single-engine airplane equipped with tricycle landing gear and designed for general utility purposes.

The construction of the fuselage is a conventional formed sheet metal bulkhead, stringer, and skin design referred to as semimonocoque. Major items of structure are the front and rear carry-through spars to which the wings are attached, a bulkhead and forgings for main landing gear attachment at the base of the rear doorposts, and a bulkhead with attaching plates at the base of the forward doorposts for the lower attachment of the wing struts. Four engine mount stringers are also attached to the forward doorposts and extend forward to the firewall.

The externally braced wings, containing the fuel tanks, are constructed of a front and rear spar with formed sheet metal ribs, doublers, and stringers. The entire structure is covered with aluminum skin. The front spars are equipped with wing-to-fuselage and wing-to-strut attach fittings. The aft spars are equipped with wing-to-fuselage attach fittings, and are partial-span spars. Conventional hinged ailerons and single-slot type flaps are attached to the trailing edge of the wings. The ailerons are constructed of a forward spar containing balance weights, formed sheet metal ribs and "V" type corrugated aluminum skin joined together at the trailing edge. The flaps are constructed basically the same as the ailerons, with the exception of balance weights and the addition of a formed sheet metal leading edge section.

The empennage (tail assembly) consists of a conventional vertical stabilizer, rudder, horizontal stabilizer, and elevator. The vertical stabilizer consists of a forward and aft spar, formed sheet metal ribs and reinforcements, four skin panels, formed leading edge skins, and a dorsal. The rudder is constructed of a forward and aft spar, formed sheet metal ribs and reinforcements, and a wrap-around skin panel. The top of the rudder incorporates a leading edge extension which contains a balance weight. The horizontal stabilizer is constructed of a forward and aft spar, ribs and stiffeners, center upper and lower skin panels, and two left and two right wrap-around skin panels which also form the leading edges. The horizon-

AILERON CONTROL SYSTEM

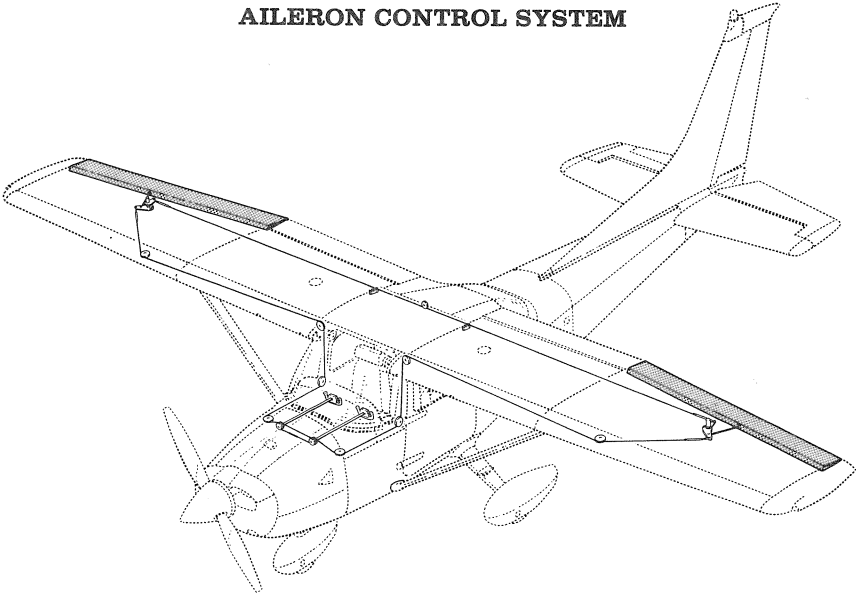

**RUDDER AND RUDDER TRIM
CONTROL SYSTEMS**


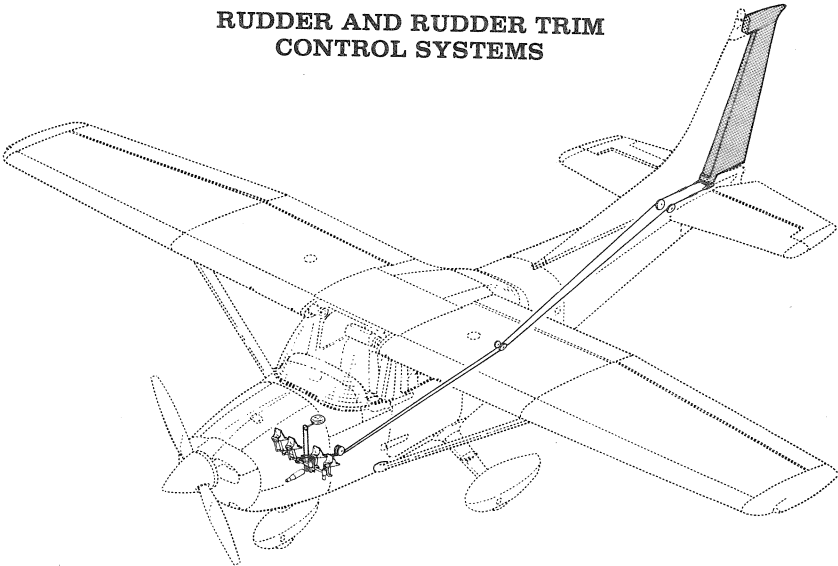


Figure 7-1. Flight Control and Trim Systems (Sheet 1 of 2)

ELEVATOR CONTROL SYSTEM

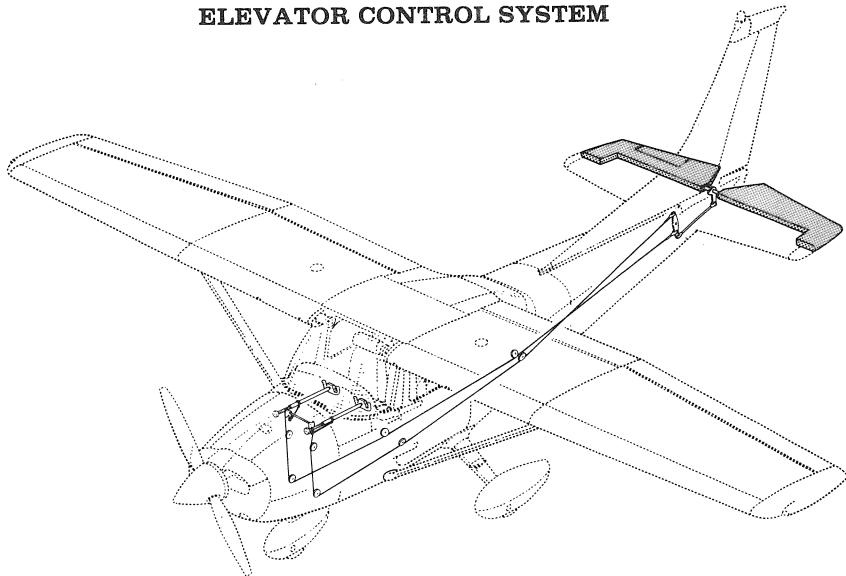

ELEVATOR TRIM CONTROL SYSTEM

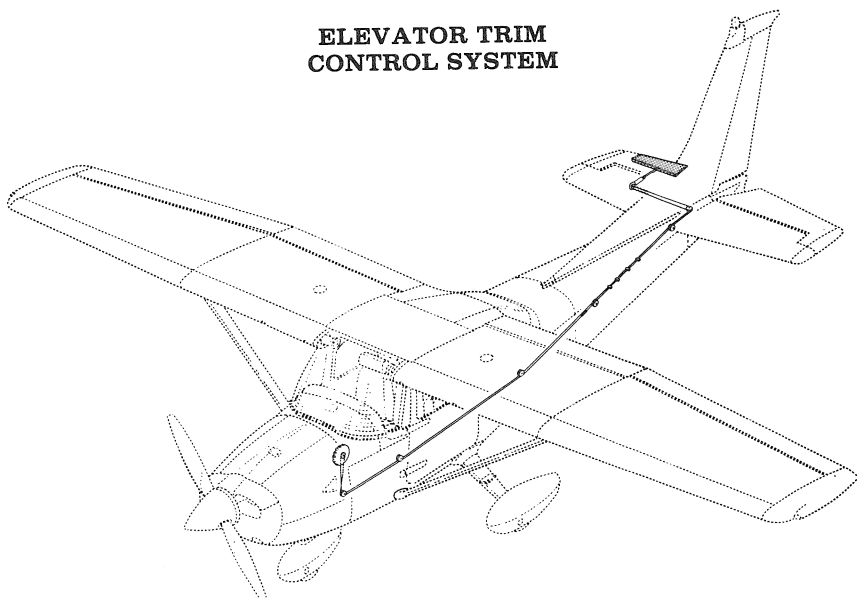


Figure 7-1. Flight Control and Trim Systems (Sheet 2 of 2)

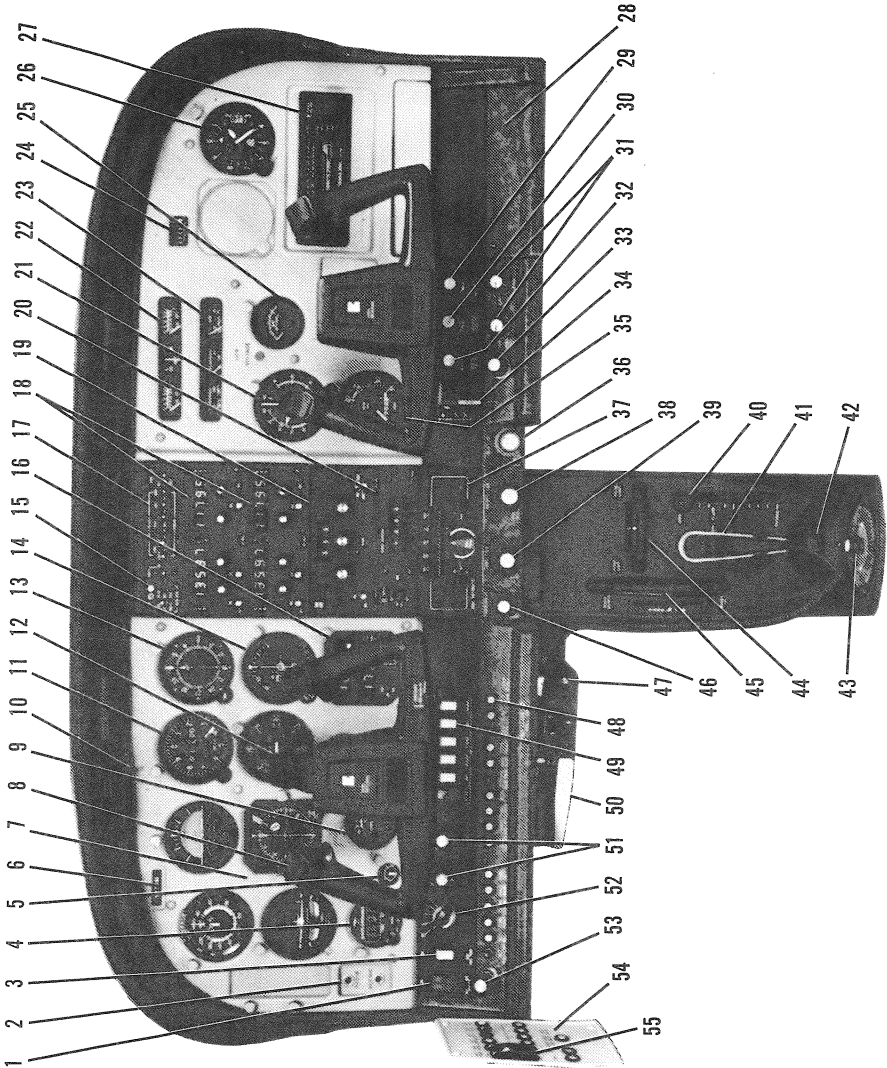


Figure 7-2. Instrument Panel (Sheet 1 of 2)

- | | |
|--|--|
| 1. Master Switch | 29. Defroster Control |
| 2. Phone and Auxiliary Mike Jacks | 30. Cabin Air Control |
| 3. Auxiliary Fuel Pump Switch | 31. Air Conditioning System Controls |
| 4. Digital Clock | 32. Cabin Heat Control |
| 5. Suction Gage | 33. Lighter |
| 6. Airplane Registration Number | 34. Wing Flap Switch and Position Indicator |
| 7. Flight Instrument Group | 35. Tachometer |
| 8. Electric Elevator Trim Switch | 36. Mixture Control |
| 9. Carburetor Air Temperature Gage | 37. Autopilot Control Unit |
| 10. Map Light and Switch | 38. Propeller Control |
| 11. Encoding Altimeter | 39. Throttle (With Friction Lock) |
| 12. Approach Plate Holder | 40. Cowl Flap Control Lever |
| 13. ADF Bearing Indicator | 41. Microphone |
| 14. Course Deviation Indicator (NAV 2) | 42. Fuel Selector Light |
| 15. Marker Beacon Indicator Lights and Switches | 43. Fuel Selector Valve Handle |
| 16. DME | 44. Rudder Trim Control Wheel and Position Indicator |
| 17. Audio Control Panel | 45. Elevator Trim Control Wheel and Position Indicator |
| 18. NAV/COM Radios | 46. Carburetor Heat Control |
| 19. ADF Radio | 47. Static Pressure Alternate Source Valve |
| 20. Transponder | 48. Circuit Breakers |
| 21. Manifold Pressure/Fuel Pressure Gage | 49. Electrical Switches |
| 22. Fuel Quantity Indicators and Ammeter | 50. Parking Brake Handle |
| 23. Cylinder Head Temperature, Oil Temperature, and Oil Pressure Gages | 51. Interior Lighting Controls |
| 24. Flight Hour Recorder | 52. Ignition Switch |
| 25. Economy Mixture Indicator (EGT) | 53. Primer |
| 26. Secondary Altimeter | 54. Sidewall Circuit Breaker Panel |
| 27. AM/FM Cassette Stereo Entertainment Center | 55. Avionics Power Switch |
| 28. Map Compartment | |

Figure 7-2. Instrument Panel (Sheet 2 of 2)

tal stabilizer also contains the elevator trim tab actuator. Construction of the elevator consists of formed leading edge skins, a forward spar, ribs, torque tube and bellcrank, left upper and lower "V" type corrugated skins, and right upper and lower "V" type corrugated skins incorporating a trailing edge cut-out for the trim tab. The elevator trim tab consists of a spar and upper and lower "V" type corrugated skins. Both elevator tip leading edge extensions incorporate balance weights.

FLIGHT CONTROLS

The airplane's flight control system (see figure 7-1) consists of conventional aileron, rudder, and elevator control surfaces. The control surfaces are manually operated through mechanical linkage using a control wheel for the ailerons and elevator, and rudder/brake pedals for the rudder. The elevator control system is equipped with downsprings which provide improved stability in flight.

Extensions are available for the rudder/brake pedals. They consist of a rudder pedal face, two spacers and two spring clips. To install an extension, place the clip on the bottom of the extension under the bottom of the rudder pedal and snap the top clip over the top of the rudder pedal. Check that the extension is firmly in place. To remove the extensions, reverse the above procedures.

TRIM SYSTEMS

Manually-operated rudder and elevator trim is provided (see figure 7-1). Rudder trimming is accomplished through a bungee connected to the rudder control system and a trim control wheel mounted on the control pedestal. Rudder trimming is accomplished by rotating the horizontally mounted trim control wheel either left or right to the desired trim position. Rotating the trim wheel to the right will trim nose-right; conversely, rotating it to the left will trim nose-left. Elevator trimming is accomplished through the elevator trim tab by utilizing the vertically mounted trim control wheel. Forward rotation of the trim wheel will trim nose-down; conversely, aft rotation will trim nose-up. The airplane may also be equipped with an electric elevator trim system. For details concerning this system, refer to Section 9, Supplements.

INSTRUMENT PANEL

The instrument panel (see figure 7-2) is designed around the basic "T" configuration. The gyros are located immediately in front of the pilot, and

arranged vertically. The airspeed indicator and altimeter are located to the left and right of the gyros, respectively. The remainder of the flight instruments are located around the basic "T". The suction gage and carburetor air temperature gage are located below the flight instruments, and to the left of the pilot's control column. Avionics equipment is stacked approximately on the centerline of the panel, with the right side of the panel containing the manifold pressure/fuel pressure gage, low-voltage warning light, economy mixture (EGT) indicator, tachometer, map compartment, and space for additional instruments and avionics equipment. The engine instrument cluster and fuel quantity indicators are to the right side of the avionics stack near the top of the panel. A switch and control panel, at the lower edge of the instrument panel, contains most of the switches, controls, and circuit breakers necessary to operate the airplane. The left side of the panel contains the master switch, engine primer, auxiliary fuel pump switch, ignition switch, light intensity controls, electrical switches and circuit breakers. The center area contains the carburetor heat control, throttle, propeller control, and mixture control. The right side of the panel contains the wing flap switch and position indicator, cabin heat, cabin air, defroster, and air conditioning system controls and the cigar lighter. A pedestal, extending from the switch and control panel to the floorboard, contains the elevator and rudder trim control wheels, cowl flap control lever, and microphone bracket. The fuel selector valve handle is located at the base of the pedestal. A parking brake handle is mounted below the switch and control panel, in front of the pilot. A static pressure alternate source valve is installed below the switch and control panel adjacent to the parking brake handle.

For details concerning the instruments, switches, circuit breakers, and controls on this panel, refer in this section to the description of the systems to which these items are related.

GROUND CONTROL

Effective ground control while taxiing is accomplished through nose wheel steering by using the rudder pedals; left rudder pedal to steer left and right rudder pedal to steer right. When a rudder pedal is depressed, a spring-loaded steering bungee (which is connected to the nose gear and to the rudder bars) will turn the nose wheel through an arc of approximately 15° each side of center. By applying either left or right brake, the degree of turn may be increased up to 30° each side of center.

Moving the airplane by hand is most easily accomplished by attaching a tow bar to the nose gear strut. If a tow bar is not available, or pushing is required, use the wing struts as push points. Do not use the vertical or horizontal surfaces to move the airplane. If the airplane is to be towed by

vehicle, never turn the nose wheel more than 30° either side of center or structural damage to the nose gear could result.

The minimum turning radius of the airplane, using differential braking and nose wheel steering during taxi, is approximately 27 feet 7 inches. To obtain a minimum radius turn during ground handling, the airplane may be rotated around either main landing gear by pressing down on a tailcone bulkhead just forward of the horizontal stabilizer to raise the nose wheel off the ground.

WING FLAP SYSTEM

The single-slot type wing flaps (see figure 7-3), are extended or retracted by positioning the wing flap switch lever on the right side of the switch and control panel to the desired flap deflection position. The switch lever is moved up or down in a slotted panel that provides mechanical stops at the 10° and 20° positions. For flap settings greater than 10°, move the switch lever to the right to clear the stop and position it as desired. A scale and pointer on the left side of the switch lever indicates flap travel in

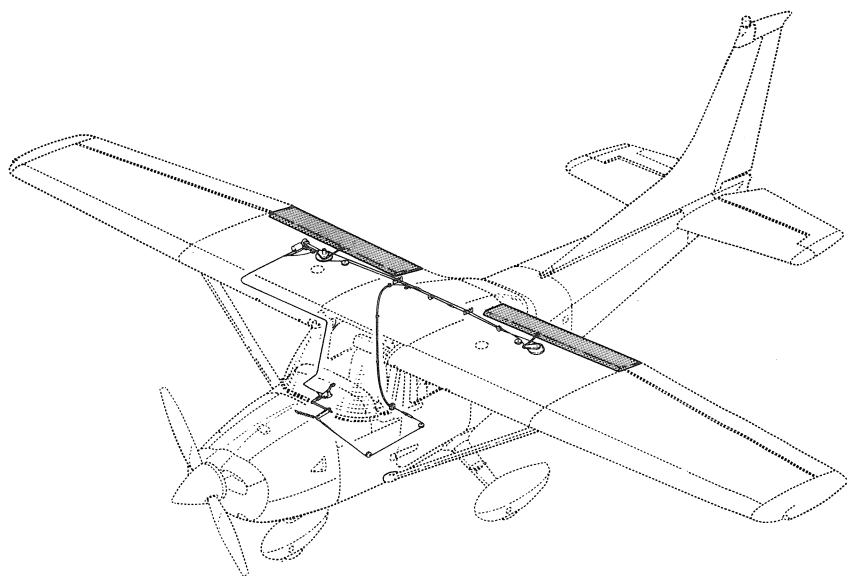


Figure 7-3. Wing Flap System

degrees. The wing flap system circuit is protected by a 10-amp "push-to-reset" type circuit breaker, labeled FLAP, on the left side of the switch and control panel.

LANDING GEAR SYSTEM

The landing gear is of the tricycle type with a steerable nose wheel, two main wheels, and wheel fairings. Shock absorption is provided by the tubular spring-steel main landing gear struts and the air/oil nose gear shock strut. Each main gear wheel is equipped with a hydraulically actuated single-disc brake on the inboard side of each wheel and an aerodynamic fairing over each brake.

BAGGAGE COMPARTMENT

The baggage compartment consists of the area from the back of the rear passenger seats to the aft cabin bulkhead. Access to the baggage compartment is gained through a lockable baggage door on the left side of the airplane, or from within the airplane cabin. A baggage net with six tie-down straps is provided for securing baggage, and is attached by tying the straps to tie-down rings provided in the airplane. For further information on baggage tie-down, refer to Section 6. When loading the airplane, children should not be placed or permitted in the baggage compartment, and any material that might be hazardous to the airplane or occupants should not be placed anywhere in the airplane. For baggage area and door dimensions, refer to Section 6.

SEATS

The seating arrangement consists of two individually adjustable four-way or six-way seats for the pilot and front seat passenger, and a split-backed fixed seat for the rear seat passengers. A child's seat (if installed) is located at the aft cabin bulkhead behind the rear seat.

The four-way seats may be moved forward or aft, and the seat back angle adjusted to any comfortable angle. To position either seat, lift the tubular handle under the center of the seat, slide the seat into position, release the handle, and check that the seat is locked in place. The seat back angle is controlled by a cylinder lock release button, which is spring-loaded to the locked position. The release button is located on the inboard side, below the forward corner of the seat cushion. To adjust the angle of the seat back, push up on the release button, position the seat back to the desired angle and release the button. When the seat is not occupied, the seat back will fold forward whenever the release button is pushed up.

The six-way seats may be moved forward or aft, and are infinitely adjustable for height and seat back angle. To position the seat, lift the tubular handle under the center of the seat bottom, slide the seat into position, release the handle, and check that the seat is locked in place. Raise or lower the seat by rotating the large crank under the front inboard corner of either seat. The seat back is adjusted by rotating the small crank under the front outboard corner of either seat. The seat bottom angle will change as the seat back angle changes, providing proper support. The seat backs will also fold full forward.

The rear passengers' seat consists of a fixed one-piece seat bottom with individually adjustable seat backs. The seat backs are adjusted by cylinder lock release buttons, recessed into skirts located below the seat frame at the outboard ends of the seat. To adjust a seat back, push up on the adjacent cylinder lock release button, which is spring-loaded to the locked position, recline the seat back to the desired position and release the button. When the seat is not occupied, the seat backs will automatically fold forward whenever the cylinder lock release button is pushed up.

A child's seat may be installed aft of the rear passengers' seat, and is held in place by two brackets mounted on the floorboard. The seat is designed to swing upward into a stowed position against the aft cabin bulkhead when not in use. To stow the seat, rotate the seat bottom up and aft as far as it will go. When not in use, the seat should be kept in the stowed position.

Headrests are available for any of the seat configurations except the child's seat. To adjust the headrest, apply enough pressure to it to raise or lower it to the desired level. The headrest may be removed at any time by raising it until it disengages from the top of the seat back.

SEAT BELTS AND SHOULDER HARNESSSES

All seat positions are equipped with seat belts (see figure 7-4). The pilot's and front passenger's seats are also equipped with separate shoulder harnesses; separate shoulder harnesses are also available for the rear seat positions. Integrated seat belt/shoulder harnesses with inertia reels can be furnished for the pilot's and front passenger's seat positions if desired.

SEAT BELTS

The seat belts used with the pilot's and front passenger's seats, and the child's seat (if installed), are attached to fittings on the floorboard. The buckle half is inboard of each seat and the link half is outboard of each seat.

The belts for the rear seat are attached to the seat frame, with the link halves on the left and right sides of the seat bottom, and the buckles at the center of the seat bottom.

To use the seat belts for the front seats, position the seat as desired, and then lengthen the link half of the belt as needed by grasping the sides of the link and pulling against the belt. Insert and lock the belt link into the buckle. Tighten the belt to a snug fit. Seat belts for the rear seat and the child's seat, are used in the same manner as the belts for the front seats. To release the seat belts, grasp the top of the buckle opposite the link and pull upward.

SHOULDER HARNESSSES

Each front seat shoulder harness is attached to a rear doorpost above the window line and is stowed behind a stowage sheath above the cabin door. To stow the harness, fold it and place it behind the sheath. When rear seat shoulder harnesses are furnished, they are attached adjacent to the lower corners of the aft side windows. Each rear seat harness is stowed behind a stowage sheath above an aft side window. No harness is available for the child's seat.

To use a front or rear seat shoulder harness, fasten and adjust the seat belt first. Lengthen the harness as required by pulling on the connecting link on the end of the harness and the narrow release strap. Snap the connecting link firmly onto the retaining stud on the seat belt link half. Then adjust to length. A properly adjusted harness will permit the occupant to lean forward enough to sit completely erect, but prevent excessive forward movement and contact with objects during sudden deceleration. Also, the pilot will want the freedom to reach all controls easily.

Removing the shoulder harness is accomplished by pulling upward on the narrow release strap, and removing the harness connecting link from the stud on the seat belt link. In an emergency, the shoulder harness may be removed by releasing the seat belt first and allowing the harness, still attached to the link half of the seat belt, to drop to the side of the seat.


INTEGRATED SEAT BELT/SHOULDER HARNESSSES WITH INERTIA REELS

Integrated seat belt/shoulder harnesses with inertia reels are available for the pilot and front seat passenger. The seat belt/shoulder harnesses extend from inertia reels located in the cabin top structure, through slots in the overhead console marked PILOT and COPILOT, to attach points inboard of the two front seats. A separate seat belt half and buckle is located outboard of the seats. Inertia reels allow complete freedom of body

SECTION 7
AIRPLANE & SYSTEMS DESCRIPTIONS

CESSNA
MODEL T182

**STANDARD SHOULDER
 HARNESS**

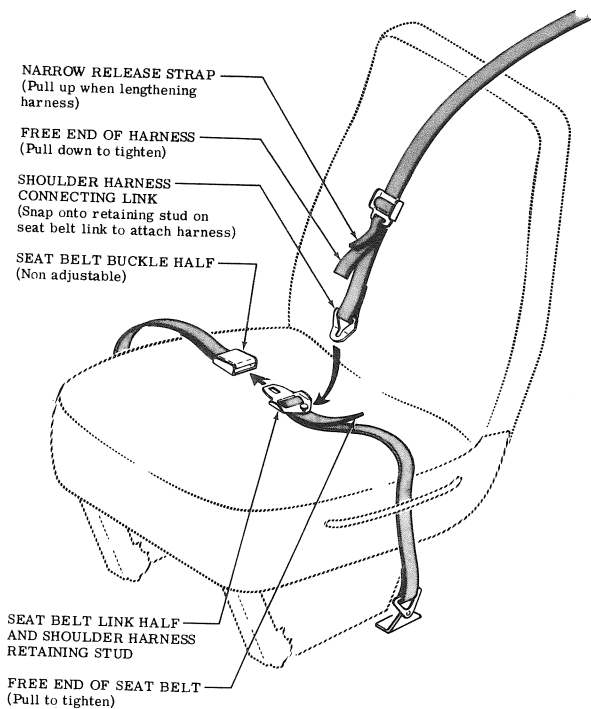

(PILOT'S SEAT SHOWN)

**SEAT BELT/SHOULDER
 HARNESS WITH INERTIA
 REEL**

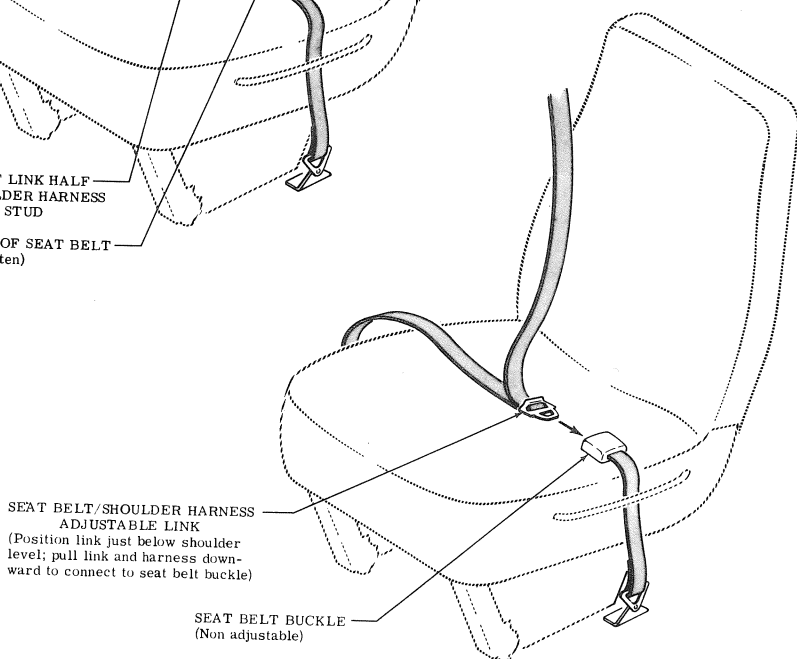


Figure 7-4. Seat Belts and Shoulder Harnesses

movement. However, in the event of a sudden deceleration, they will lock automatically to protect the occupants.

To use the seat belt/shoulder harness, position the adjustable metal link on the harness at about shoulder level, pull the link and harness downward, and insert the link in the seat belt buckle. Adjust belt tension across the lap by pulling upward on the shoulder harness. Removal is accomplished by releasing the seat belt buckle, which will allow the inertia reel to pull the harness inboard of the seat.

ENTRANCE DOORS AND CABIN WINDOWS

Entry to, and exit from the airplane is accomplished through either of two entry doors, one on each side of the cabin at the front seat positions (refer to Section 6 for cabin and cabin door dimensions). The doors incorporate a recessed exterior door handle, a conventional interior door handle, a key-operated door lock (left door only), a door stop mechanism, and an openable window in the left door. An openable right door window is also available.

To open the doors from outside the airplane, utilize the recessed door handle near the aft edge of each door. Grasp the forward end of the handle and pull outboard. To close or open the doors from inside the airplane, use the combination door handle and arm rest. The inside door handle has three positions and a placard at its base which reads OPEN, CLOSE, and LOCK. The handle is spring-loaded to the CLOSE (up) position. When the door has been pulled shut and latched, lock it by rotating the door handle forward to the LOCK position (flush with the arm rest). When the handle is rotated to the LOCK position, an over-center action will hold it in that position. Both cabin doors should be locked prior to flight, and should not be opened intentionally during flight.

NOTE

Accidental opening of a cabin door in flight due to improper closing does not constitute a need to land the airplane. The best procedure is to set up the airplane in a trimmed condition at approximately 80 KIAS, open a window, momentarily shove the door outward slightly, and forcefully close and lock the door.

Exit from the airplane is accomplished by rotating the door handle from the LOCK position, past the CLOSE position, aft to the OPEN position and pushing the door open. To lock the airplane, lock the right cabin door with the inside handle, close the left cabin door, and using the ignition key, lock the door.

The left cabin door is equipped with an openable window which is held in the closed position by a detent equipped latch on the lower edge of the window frame. To open the window, rotate the latch upward. The window is equipped with a spring-loaded retaining arm which will help rotate the window outward and hold it there. An openable window is also available for the right door, and functions in the same manner as the left window. If required, either window may be opened at any speed up to 178 KIAS. The cabin top windows (if installed), rear side windows, and rear window are of the fixed type and cannot be opened.

CONTROL LOCKS

A control lock is provided to lock the aileron and elevator control surfaces to prevent damage to these systems by wind buffeting while the airplane is parked. The lock consists of a shaped steel rod with a red metal flag attached to it. The flag is labeled CONTROL LOCK, REMOVE BEFORE STARTING ENGINE. To install the control lock, align the hole in the right side of the pilot's control wheel shaft with the hole in the right side of the shaft collar on the instrument panel and insert the rod into the aligned holes. Installation of the lock will secure the ailerons in a neutral position and the elevators in a slightly trailing edge down position. Proper installation of the lock will place the red flag over the ignition switch. In areas where high or gusty winds occur, a control surface lock should be installed over the vertical stabilizer and rudder. The control lock and any other type of locking device should be removed prior to starting the engine.

ENGINE

The airplane is powered by a horizontally-opposed, six-cylinder, overhead valve, turbocharged, air cooled, carbureted engine with a wet sump oil system. The engine is a Lycoming Model O-540-L3C5D, equipped with a Cessna installed turbocharger, and is rated at 235 horsepower at 2400 RPM, and 31 inches of manifold pressure. Major accessories include a starter, belt-driven alternator, and propeller governor on the front of the engine and dual magnetos, encased in a single drive housing, fuel pump, vacuum pump, scavenger pump, and full-flow oil filter on the rear of the engine. The Cessna installed turbocharger and associated components are interconnected with the induction air, carburetion, and exhaust systems on the engine.

ENGINE CONTROLS

Engine manifold pressure is controlled by a throttle located in the

center area of the switch and control panel. The throttle linkage is interconnected to the carburetor throttle valve and the turbocharger waste gate. The throttle is closed in the full aft position. The initial 1/2 of forward travel fully opens the carburetor throttle valve, and the final 1/2 of forward travel closes the turbocharger waste gate valve and simultaneously maintains the carburetor throttle valve in the full open position. A friction lock, which is a round knurled disc located at the base of the throttle, is operated by rotating the disc clockwise to increase friction or counterclockwise to decrease it.

The turbocharger has the capability of producing manifold pressures in excess of 31 inches Hg. (red line). Therefore, in most cases, full waste gate closed (full throttle) will not be necessary to maintain maximum allowable manifold pressure. Close attention must be paid to manifold pressures during high-power operations, especially during cold-day conditions at low altitudes to prevent overboost of the engine.

The mixture control, mounted near the propeller control, is a red knob with raised points around the circumference and is equipped with a lock button in the end of the knob. The rich position is full forward, and full aft is the idle cut-off position. For small adjustments, the control may be moved forward by rotating the knob clockwise, and aft by rotating the knob counterclockwise. For rapid or large adjustments, the knob may be moved forward or aft by depressing the lock button in the end of the control, and then positioning the control as desired.

ENGINE INSTRUMENTS

Engine operation is monitored by the following instruments: oil pressure gage, oil temperature gage, cylinder head temperature gage, tachometer, manifold pressure/fuel pressure gage, economy mixture (EGT) indicator, and carburetor air temperature gage.

The oil pressure gage, located on the right side of the instrument panel, is operated by oil pressure. A direct pressure oil line from the engine delivers oil at engine operating pressure to the oil pressure gage. Gage markings indicate that minimum idling pressure is 25 PSI (red line), the normal operating range is 60 to 90 PSI (green arc), and maximum pressure is 115 PSI (red line).

Oil temperature is indicated by a gage adjacent to the oil pressure gage. The gage is operated by an electrical-resistance type temperature sensor which receives power from the airplane electrical system. Gage markings indicate the normal operating range (green arc) which is 100°F (38°C) to 245°F (118°C), and the maximum (red line) which is 245°F (118°C).

The cylinder head temperature gage, below the left fuel quantity indicator, is operated by an electrical-resistance type temperature sensor on the engine which receives power from the airplane electrical system. Gage markings indicate the normal operating range (green arc) which is 200°F (93°C) to 500°F (260°C) and the maximum (red line) which is 500°F (260°C).

The engine-driven mechanical tachometer is located on the lower right side of the instrument panel. The instrument is calibrated in increments of 100 RPM and indicates both engine and propeller speed. An hour meter below the center of the tachometer dial records elapsed engine time in hours and tenths. Instrument markings include a normal operating range (green arc) of 2100 to 2400 RPM, and a maximum (red line) of 2400 RPM.

The manifold pressure gage is the left half of a dual-indicating instrument located on the right side of the instrument panel above the tachometer. The gage is direct reading and indicates induction air manifold pressure in inches of mercury. It has a normal operating range (green arc) of 17 to 25 inches Hg, and a maximum (red line) of 31 inches Hg.

The fuel pressure gage is the right half of the dual-indicating instrument located on the right side of the instrument panel above the tachometer. The gage indicates fuel pressure to the carburetor. Gage markings indicate that minimum pressure is 3.0 PSI (red line), normal operating range is 3.0 to 30 PSI (green arc), and maximum pressure is 30 PSI (red line).

The economy mixture (EGT) indicator is located on the right side of the instrument panel. A thermocouple probe in the left exhaust collector assembly measures exhaust gas temperature and transmits it to the indicator. The indicator serves as a visual aid to the pilot in adjusting the mixture during climb or cruise as described in Section 4. Exhaust gas temperature varies with fuel-to-air ratio, power, and RPM. However, the difference between the peak EGT and the EGT at the desired mixture setting is essentially constant and this provides a useful leaning aid. The indicator is equipped with a manually positioned reference pointer which is especially useful for leaning during climb.

The carburetor air temperature gage is located on the left side of the instrument panel below the gyros to help detect carburetor icing conditions. The gage is marked in 5° increments from -30°C to 30°C, and has a yellow arc between -15°C and 5°C which indicates the temperature range most conducive to icing in the carburetor. With the heat available from turbocharging, the gage needle will normally run off the scale on the high end for most operations. A placard on the lower half of the gage reads: KEEP NEEDLE OUT OF YELLOW ARC DURING POSSIBLE CARBURETOR ICING CONDITIONS.

NEW ENGINE BREAK-IN AND OPERATION

The engine underwent a run-in at the factory and is ready for the full range of use. It is, however, suggested that cruising be accomplished at 75% power until a total of 25 hours has accumulated or oil consumption has stabilized. This will ensure proper seating of the rings.

ENGINE OIL SYSTEM

Oil for engine lubrication, propeller governor operation, and turbo-charger bearing lubrication is supplied from a sump on the bottom of the engine. The capacity of the sump is 8 quarts (one additional quart is contained in the engine oil filter). Oil is drawn from the sump through a filter screen on the end of a pickup tube to the engine-driven oil pump. Oil from the pump passes through an oil pressure screen, full-flow oil filter, turbocharger bearings, a pressure relief valve at the rear of the right oil gallery, and a thermostatically controlled remote oil cooler. Oil from the remote oil cooler is then circulated to the left gallery and propeller governor. The engine parts are then lubricated by oil from the galleries. After lubricating the engine, the oil returns to the sump by gravity; oil from the turbocharger bearings is returned to the sump by a scavenger pump. The filter adapter in the full-flow oil filter is equipped with a bypass valve which will cause lubricating oil to bypass the filter in the event the filter becomes plugged, or the oil temperature is extremely cold.

An oil dipstick is located at the rear of the engine on the right side, and an oil filler tube is on top of the crankcase near the front of the engine. The dipstick and oil filler are accessible through doors on the engine cowlings. The engine should not be operated on less than five quarts of oil. To minimize loss of oil through the breather, fill to seven quarts for normal flights of less than three hours. For extended flight, fill to eight quarts (dipstick indication only). For engine oil grade and specifications, refer to Section 8 of this handbook.

An oil quick-drain valve is installed on the bottom of the oil sump, to provide a quick, clean method of draining the engine oil. To drain the oil, slip a hose over the end of the valve and push upward on the end of the valve until it snaps into the open position. Spring clips will hold the valve open. After draining, use a suitable tool to snap the valve into the extended (closed) position and remove the drain hose.

IGNITION-STARTER SYSTEM

Engine ignition is provided by two engine-driven magnetos encased in a single drive housing, and two spark plugs in each cylinder. The right magneto fires the lower right and upper left spark plugs, and the left magneto fires the lower left and upper right spark plugs. Normal opera-

tion is conducted with both magnetos due to the more complete burning of the fuel-air mixture with dual ignition.

Ignition and starter operation is controlled by a rotary type switch located on the left switch and control panel. The switch is labeled clockwise, OFF, R, L, BOTH, and START. The engine should be operated on both magnetos (BOTH position) except for magneto checks. The R and L positions are for checking purposes and emergency use only. When the switch is rotated to the spring-loaded START position (with the master switch in the ON position), the starter contactor is energized and the starter will crank the engine. When the switch is released, it will automatically return to the BOTH position.

AIR INDUCTION SYSTEM

The engine air induction system receives ram air through a recessed opening in the left engine cowl and directs it through an air filter which removes dust and other foreign matter from the induction air. Airflow enters a carburetor heat airbox, and is then ducted into the compressor side of the turbocharger. After passing through the turbocharger, the compressed air is ducted through the carburetor and induction manifold into the engine cylinders. In the event carburetor ice is encountered or the induction air filter becomes blocked, alternate heated air may be obtained from a shroud which covers the exhaust manifold located on the left side of the engine. The shroud receives unfiltered air from inside the engine cowl. After the airflow passes through the shroud, it is ducted to a valve in the airbox operated by a control knob labeled CARB HEAT, on the center area of the switch and control panel. The control knob is equipped with a push-button lock.

EXHAUST SYSTEM

Exhaust gas from the center and rear cylinders on the right side of the engine passes through risers, a muffler, and a crossover tube; gas from the front cylinder passes through a riser directly into the crossover tube. The gas flows through the crossover tube into an exhaust manifold on the left side of the engine; the exhaust manifold is also connected to the exhaust risers on the left side of the engine. The exhaust manifold discharges the gas into the turbine section of the turbocharger. After leaving the turbine, the exhaust gas is vented overboard through a tailpipe. A waste gate, incorporated into the exhaust manifold, controls the volume of gas flow through the turbine by venting excess gas to the tailpipe through a bypass. The muffler, on the right side of the engine, is covered by a shroud which forms a heating chamber for cabin heat and windshield defrost air.

CARBURETOR AND PRIMING SYSTEM

The engine is equipped with a side-draft, float-type, fixed jet carburetor mounted below the engine adjacent to the firewall. The carburetor is equipped with an idle cut-off mechanism, and a manual mixture control. Fuel is delivered from the fuel system to the carburetor by gravity flow, the engine-driven fuel pump, and/or auxiliary fuel pump. In the carburetor, fuel is atomized, proportionally mixed with compressed air, and delivered to the cylinders through intake manifold tubes. The proportion of atomized fuel to air may be controlled, within limits, by the mixture control located on the lower center portion of the instrument panel.

For easy starting in cold weather, the engine is equipped with a manual primer. The primer is actually a small pump which draws fuel from the fuel strainer when the plunger knob is pulled out, and injects it into the engine intake ports when the knob is pushed back in. The plunger is equipped with a lock and, after being pushed full in, must be rotated either left or right until the knob cannot be pulled out.

COOLING SYSTEM

Ram air for engine cooling enters through two intake openings in the front of the engine cowl. The cooling air is directed around the cylinders by baffling and through the remote oil cooler and is then exhausted through cowl flaps on the lower aft edge of the cowl. The cowl flaps are mechanically operated from the cabin by means of a cowl flap lever on the right side of the control pedestal. The pedestal is labeled OPEN, COWL FLAPS, CLOSED. Before starting the engine, and throughout takeoff and high power operation, the cowl flap lever should be placed in the OPEN position for maximum cooling. This is accomplished by moving the lever to the right to clear a detent, then moving the lever up to the OPEN position. Anytime the lever is repositioned, it must first be moved to the right. While in cruise flight, cowl flaps should be adjusted to keep the cylinder head temperature at approximately two-thirds of the normal operating range (green arc). During extended let-downs, the cowl flaps should be completely closed by pushing the cowl flap lever down to the CLOSED position.

TURBOCHARGING SYSTEM

Because the engine is both turbocharged and carbureted, some of its characteristics are different from either a normally aspirated or a fuel injected turbocharged engine. The following information describes the system and points out some of the items that are affected by turbocharging. Section 4 contains the normal operating procedures for the turbocharged engine.

The following steps, when combined with the turbocharger system schematic (figure 7-5), provide a better understanding of how the turbocharger system works. The steps follow the induction air as it enters the air filter and passes through the engine until it is expelled as exhaust gases.

1. Air from the slipstream enters the induction system through a recessed opening in the left engine cowl, passes through a filter, enters a carburetor heat airbox, and is then ducted into the compressor side of the turbocharger.
2. The compressed air is then forced through the carburetor and induction manifold into the cylinders.
3. The fuel/air mixture is burned and exhausted to the turbine side of the turbocharger and/or overboard, depending on the position of the waste gate.
4. Exhaust gases drive the turbine which, in turn drives the compressor, thus completing the cycle.

It can be seen from studying steps 1 through 4 that anything which affects the flow of induction air into the compressor or the flow of exhaust gases into the turbine will increase or decrease the speed of the turbocharger. This resultant change in flow will have an effect on the engine. However, if the waste gate is still open, its position can be changed manually with the throttle control (figure 7-5) in order to maintain a constant compressor discharge pressure.

The compressor has the capability of producing manifold pressures in excess of 31 in. Hg. In order not to exceed the maximum, manifold pressure should be monitored closely and the throttle control adjusted as necessary to maintain 31 in. Hg. if maximum continuous power is desired. Full open throttle control will not be necessary to maintain maximum continuous power (31 in. Hg.), with the possible exception during hot day conditions at high altitude.

MANIFOLD PRESSURE VARIATION WITH ENGINE RPM

The turbocharged, carbureted engine will react just the opposite of a normally aspirated engine when the RPM is varied. That is, when the RPM is increased, the manifold pressure will increase slightly. When the RPM is decreased, the manifold pressure will decrease slightly.

MANIFOLD PRESSURE VARIATION WITH ALTITUDE

Manifold pressure will vary with altitude similar to a normally aspirated engine. Manifold pressure will decrease with altitude unless the throttle control is advanced. The turbocharger has the capability of maintaining in excess of the maximum continuous manifold pressure of 31 in. Hg. Since the waste gate is manually controlled, the throttle control will

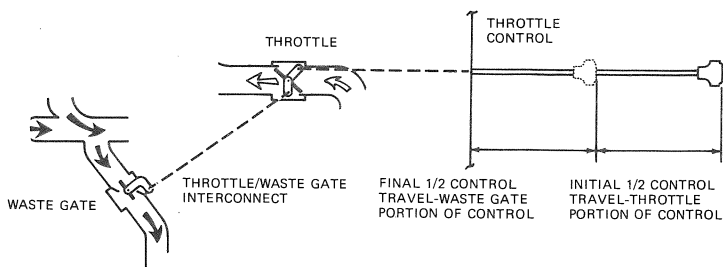
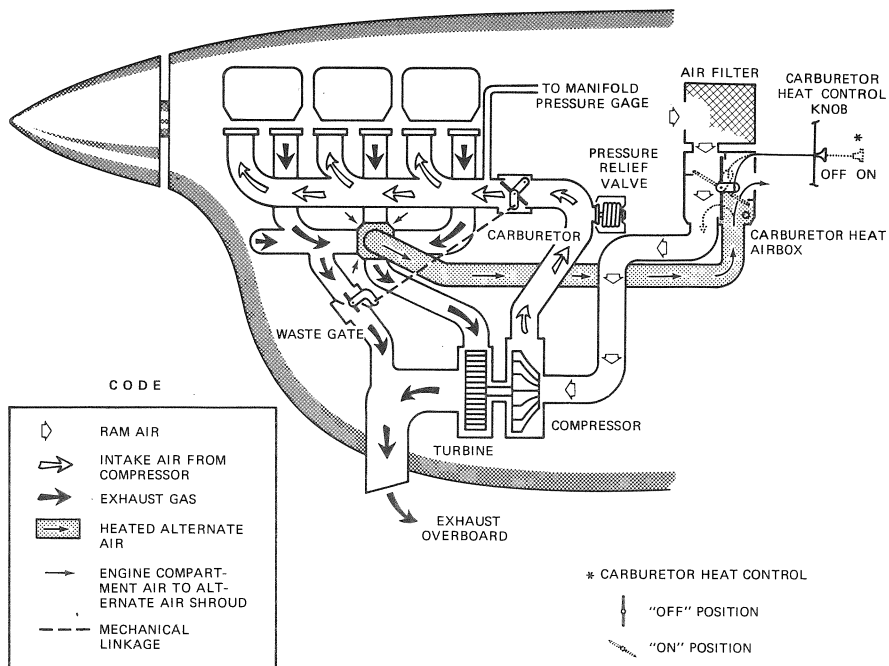


Figure 7-5. Turbocharger System

have to be advanced as necessary to maintain the maximum (31 in. Hg.) or cruise (25 in. Hg.) manifold pressure during climb.

MANIFOLD PRESSURE VARIATION WITH AIRSPEED

When the compressor side of the turbocharger is provided with a larger quantity of air at the intake, as with an increase in airspeed, the manifold pressure will increase slightly. When airspeed is reduced, manifold pressure will decrease slightly.

MANIFOLD PRESSURE VARIATION WITH MIXTURE

Any change in mixture setting will result in a corresponding change in manifold pressure. That is, enriching the mixture will increase the manifold pressure and leaning the mixture will decrease the manifold pressure.

MOMENTARY OVERSHOOT OF MANIFOLD PRESSURE

Since a full throttle control position is not required for normal operation, except possibly at high altitude on a hot day, the engine can be overboosted slightly above the maximum continuous manifold pressure of 31 in. Hg. This is most likely to be experienced during the takeoff roll or during a change to maximum continuous power in flight. The compressor discharge pressure relief valve will normally limit the overboost to 2 to 3 inches.

An inadvertent overboost of 2 to 3 inches of manifold pressure is not considered detrimental to the engine as long as it is momentary. Immediate corrective action is required when an overboost occurs.

ALTITUDE OPERATION

Although a turbocharged airplane will climb faster and higher than a normally aspirated airplane, fuel vaporization should not be a problem since the engine is carbureted. However, if the fuel pressure drops below 3.0 PSI; this may be an indication of vapor. Should this occur, the auxiliary fuel pump switch should be placed in the ON position until smooth engine operation can be resumed.

PROPELLER

The airplane has an all-metal, two-bladed, constant-speed, governor-regulated propeller. A three-bladed propeller is also available. A setting introduced into the governor with the propeller control establishes the

propeller speed, and thus the engine speed to be maintained. The governor then controls flow of engine oil, boosted to high pressure by the governing pump, to or from a piston in the propeller hub. Oil pressure acting on the piston twists the blades toward high pitch (low RPM). When oil pressure to the piston in the propeller hub is relieved, centrifugal force, assisted by an internal spring, twists the blades toward low pitch (high RPM).

A control knob on the center area of the switch and control panel is used to set the propeller and control engine RPM as desired for various flight conditions. The knob is labeled PROPELLER, PUSH INCR RPM. When the control knob is pushed in, blade pitch will decrease, giving a higher RPM. When the control knob is pulled out, the blade pitch increases, thereby decreasing RPM. The propeller control knob is equipped with a vernier feature which allows slow or fine RPM adjustments by rotating the knob clockwise to increase RPM, and counterclockwise to decrease it. To make rapid or large adjustments, depress the button on the end of the control knob and reposition the control as desired.

FUEL SYSTEM

The airplane fuel system (see figure 7-6) consists of two vented integral fuel tanks (one in each wing), a four-position selector valve, fuel strainer, manual primer, auxiliary fuel pump, engine-driven fuel pump, and carburetor. Refer to figure 7-7 for fuel quantity data for the system.

Fuel flows by gravity from the two integral wing tanks to a four-position selector valve, labeled BOTH, RIGHT, LEFT, and OFF. With the selector valve in either the BOTH, RIGHT, or LEFT position, fuel flows through a strainer, a bypass in the auxiliary fuel pump (when it is not in operation), and an engine-driven fuel pump to the carburetor. From the carburetor, mixed fuel and air flows to the cylinders through intake manifold tubes. The manual primer draws its fuel from the fuel strainer and injects it into the engine intake ports.

The airplane may be serviced to a reduced fuel capacity to permit heavier cabin loadings. This is accomplished by filling each tank to the bottom edge of the fuel filler neck, thus giving a reduced fuel load of 34.5 gallons in each tank (32.5 gallons usable in all flight conditions).

Fuel system venting is essential to system operation. Complete blockage of the venting system will result in a decreasing fuel flow and eventual engine stoppage. Venting consists of an interconnecting vent line between the tanks, and check valve equipped overboard vents in each tank.

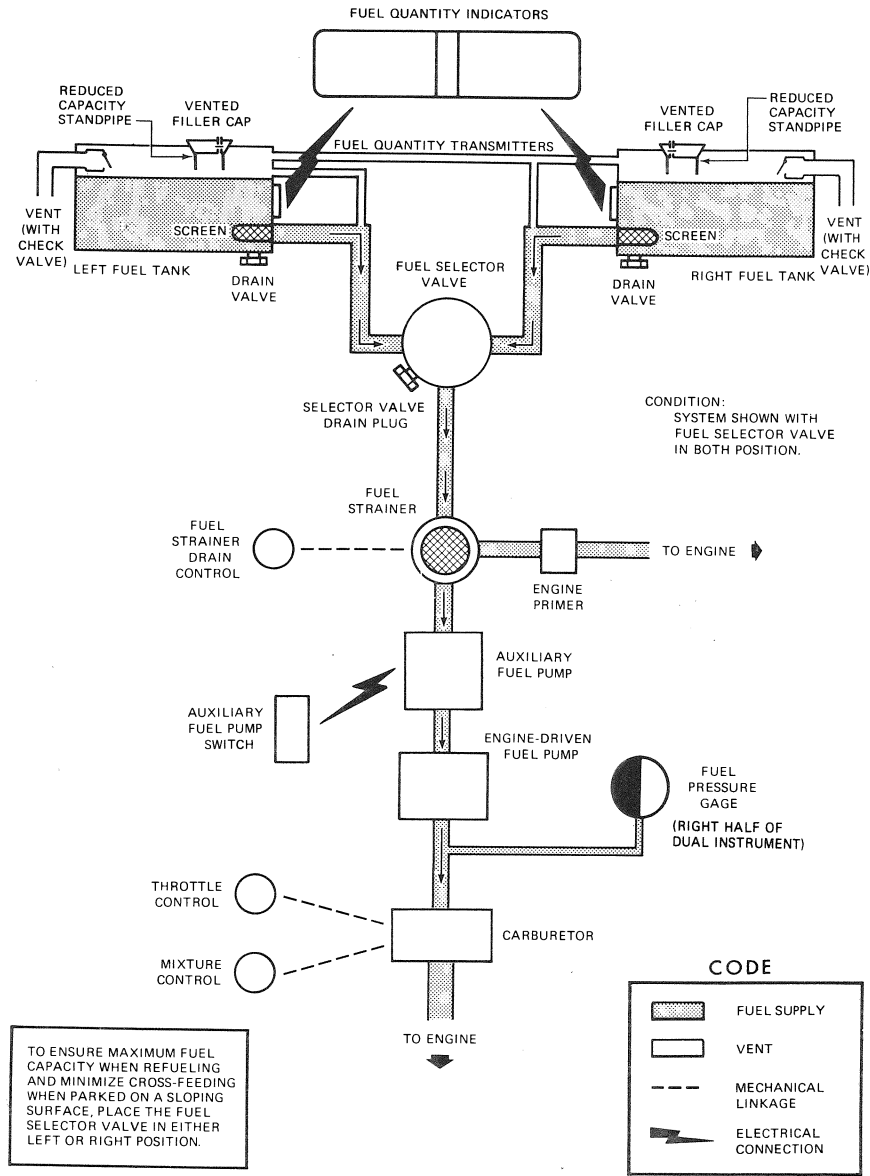


Figure 7-6. Fuel System

| FUEL QUANTITY DATA (U.S. GALLONS) | | | | |
|-----------------------------------|------------------------------------|------------|----------------|---------------------------------------|
| FUEL TANKS | FUEL LEVEL (QUANTITY EACH TANK) | TOTAL FUEL | TOTAL UNUSABLE | TOTAL USABLE ALL FLIGHT CONDITIONS |
| STANDARD | FULL (46) | 92 | 4 | 88 |
| STANDARD | REDUCED (34.5) | 69 | 4 | 65 |

Figure 7-7. Fuel Quantity Data

The overboard vents protrude from the bottom surfaces of the wings behind the wing struts, slightly below the upper attach points of the struts. The fuel filler caps are vacuum vented; the vents will open and allow air to enter the fuel tanks in case the overboard vents become blocked.

Fuel quantity is measured by two float-type fuel quantity transmitters (one in each fuel tank) and indicated by two electrically-operated fuel quantity indicators on the right side of the instrument panel. The fuel quantity indicators are calibrated in gallons (lower scale) and pounds (upper scale). An empty tank is indicated by a red line and the letter E. When an indicator shows an empty tank, approximately 2 gallons remain in a tank as unusable fuel. The indicators cannot be relied upon for accurate readings during skids, slips, or unusual flight attitudes. If both indicator pointers should rapidly move to a zero reading, check the cylinder head temperature and oil temperature gages for operation. If these gages are not indicating, an electrical malfunction has occurred.

The auxiliary fuel pump switch is located on the left side of the switch and control panel and is a rocker-type switch. It is labeled AUX FUEL PUMP. When the pump is operating, it will maintain fuel pressure to the carburetor. It should be used whenever the indicated fuel pressure falls below 3.0 PSI, but is not required when gravity flow and/or the engine-driven fuel pump can maintain indicated pressures above 3.0 PSI.

The fuel selector valve should be in the BOTH position for takeoff, climb, descent, landing, and maneuvers that involve prolonged slips or skids. Operation from either LEFT or RIGHT tank is reserved for level cruising flight only.

NOTE

Unusable fuel is at a minimum due to the design of the fuel system. However, with 1/4 tank or less, prolonged uncoordinated flight such as slips or skids can uncover the fuel tank outlets, causing fuel starvation and engine stoppage. Therefore, with low fuel reserves, do not allow the airplane to remain in uncoordinated flight for periods in excess of one minute.

NOTE

When the fuel selector valve handle is in the BOTH position in cruising flight, unequal fuel flow from each tank may occur if the wings are not maintained exactly level. Resulting wing heaviness can be alleviated gradually by turning the selector valve handle to the tank in the "heavy" wing.

NOTE

It is not practical to measure the time required to consume all of the fuel in one tank, and, after switching to the opposite tank, expect an equal duration from the remaining fuel. The airspace in both fuel tanks is interconnected by a vent line and, therefore, some sloshing of fuel between tanks can be expected when the tanks are nearly full and the wings are not level.

If a fuel tank quantity is completely exhausted in flight, it is recommended that the fuel selector valve be switched back to the BOTH position for the remainder of the flight. This will allow some fuel from the fuller tank to transfer back through the selector valve to the empty tank while in coordinated flight which in turn will assure optimum fuel feed during slipping or skidding flight.

The fuel system is equipped with drain valves to provide a means for the examination of fuel in the system for contamination and grade. The system should be examined before the first flight of every day and after each refueling, by using the sampler cup provided to drain fuel from the wing tank sumps, and by utilizing the fuel strainer drain under an access panel on the right side of the engine cowling. The fuel tanks should be filled after each flight to prevent condensation.

BRAKE SYSTEM

The airplane has a single-disc, hydraulically-actuated brake on each

main landing gear wheel. Each brake is connected, by a hydraulic line, to a master cylinder attached to each of the pilot's rudder pedals. The brakes are operated by applying pressure to the top of either the left (pilot's) or right (copilot's) set of rudder pedals, which are interconnected. When the airplane is parked, both main wheel brakes may be set by utilizing the parking brake which is operated by a handle below the switch and control panel in front of the pilot. To apply the parking brake, set the brakes with the rudder pedals, pull the handle aft, and rotate it 90° down.

For maximum brake life, keep the brake system properly maintained, and minimize brake usage during taxi operations and landings.

Some of the symptoms of impending brake failure are: gradual decrease in braking action after brake application, noisy or dragging brakes, soft or spongy pedals, and excessive travel and weak braking action. If any of these symptoms appear, the brake system is in need of immediate attention. If, during taxi or landing roll, braking action decreases, let up on the pedals and then re-apply the brakes with heavy pressure. If the brakes become spongy or pedal travel increases, pumping the pedals should build braking pressure. If one brake becomes weak or fails, use the other brake sparingly while using opposite rudder, as required, to offset the good brake.

ELECTRICAL SYSTEM

The airplane is equipped with a 28-volt, direct-current electrical system (see figure 7-8). The system uses a battery located aft of the baggage compartment wall as the source of electrical energy and a belt-driven 60-amp alternator (or a 95-amp, if installed) to maintain the battery's state of charge. Power is supplied to most general electrical and all avionics circuits through the primary bus bar and the avionics bus bar, which are interconnected by an avionics power switch. The primary bus is on anytime the master switch is turned on, and is not affected by starter or external power usage. Both bus bars are on anytime the master and avionics power switches are turned on.

CAUTION

Prior to turning the master switch on or off, starting the engine, or applying an external power source, the avionics power switch, labeled AVN PWR, should be turned off to prevent any harmful transient voltage from damaging the avionics equipment.

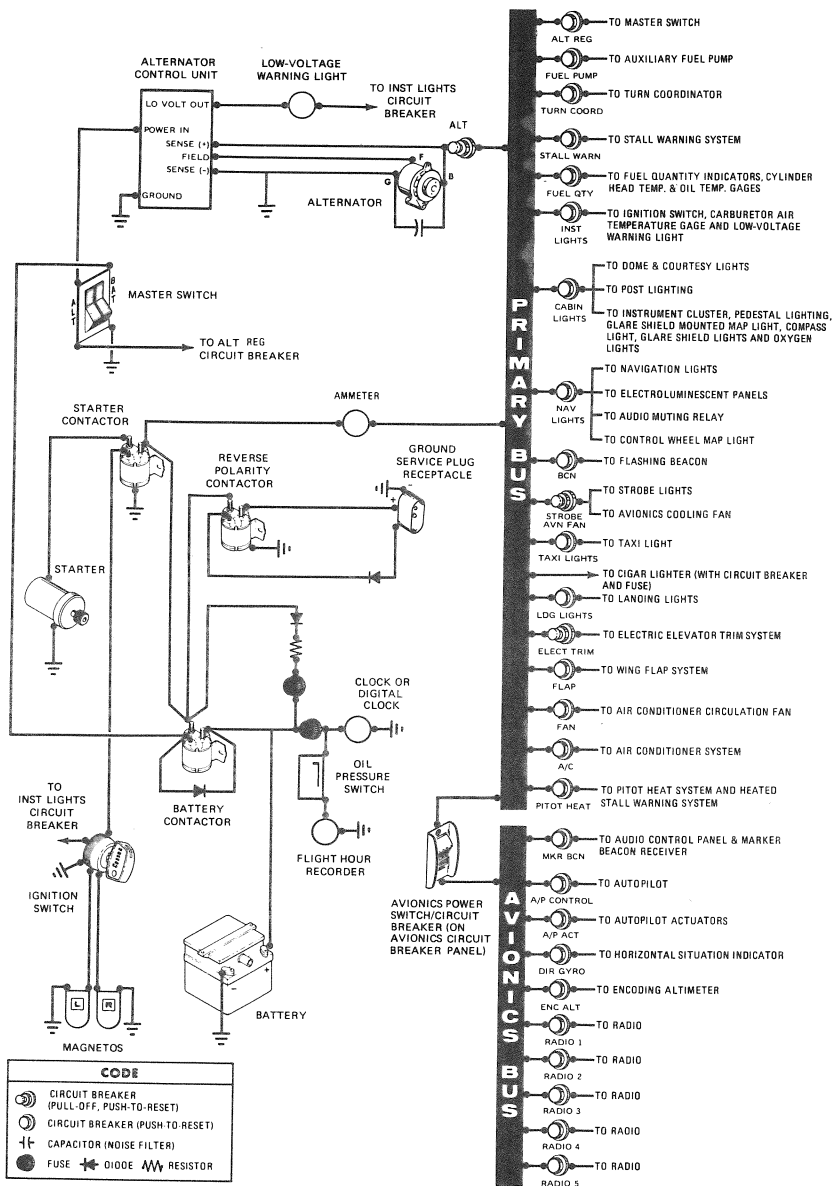


Figure 7-8. Electrical System

MASTER SWITCH

The master switch is a split-rocker type switch labeled MASTER, and is ON in the up position and off in the down position. The right half of the switch, labeled BAT, controls all electrical power to the airplane. The left half, labeled ALT, controls the alternator.

Normally, both sides of the master switch should be used simultaneously; however, the BAT side of the switch could be turned ON separately to check equipment while on the ground. To check or use avionics equipment or radios while on the ground, the avionics power switch must be turned ON. The ALT side of the switch, when placed in the off position, removes the alternator from the electrical system. With this switch in the off position, the entire electrical load is placed on the battery. Continued operation with the alternator switch in the off position will reduce battery power low enough to open the battery contactor, remove power from the alternator field, and prevent alternator restart.

AVIONICS POWER SWITCH

Electrical power from the airplane primary bus to the avionics bus (see figure 7-8) is controlled by a single-rocker switch/circuit breaker labeled AVN PWR. The switch is located on the left sidewall circuit breaker panel and is ON in the up position and OFF in the down position. With the switch in the OFF position, no electrical power will be applied to the avionics equipment, regardless of the position of the master switch or the individual equipment switches. The avionics power switch also functions as a circuit breaker. If an electrical malfunction should occur and cause the circuit breaker to open, electrical power to the avionics equipment will be interrupted and the switch will automatically move to the OFF position. If this occurs, allow the circuit breaker to cool approximately two minutes before placing the switch in the ON position again. If the circuit breaker opens again, do not reset it. The avionics power switch should be placed in the OFF position prior to turning the master switch on or off, starting the engine, or applying an external power source, and may be utilized in place of the individual avionics equipment switches.

AMMETER

The ammeter, located between the fuel gages, indicates the amount of current, in amperes, from the alternator to the battery or from the battery to the airplane electrical system. When the engine is operating and the master switch is turned on, the ammeter indicates the charging rate applied to the battery. In the event the alternator is not functioning or the electrical load exceeds the output of the alternator, the ammeter indicates the battery discharge rate.

ALTERNATOR CONTROL UNIT AND LOW-VOLTAGE WARNING LIGHT

The airplane is equipped with a combination alternator regulator high-low voltage control unit mounted on the engine side of the firewall and a red warning light, labeled LOW VOLTAGE, on the right side of the instrument panel adjacent to the manifold pressure/fuel pressure gage.

In the event an over-voltage condition occurs, the alternator control unit automatically removes alternator field current which shuts down the alternator. The battery will then supply system current as shown by a discharge rate on the ammeter. Under these conditions, depending on electrical system load, the low-voltage warning light will illuminate when system voltage drops below normal. The alternator control unit may be reset by turning the master switch off and back on again. If the warning light does not illuminate again, normal alternator charging has resumed; however, if the light does illuminate again, a malfunction has occurred, and the flight should be terminated as soon as practicable.

NOTE

Illumination of the low-voltage light and ammeter discharge indications may occur during low RPM conditions with an electrical load on the system, such as during a low RPM taxi. Under these conditions, the light will go out at higher RPM. The master switch need not be recycled since an over-voltage condition has not occurred to de-activate the alternator system.

The warning light may be tested by turning on the landing lights and momentarily turning off the ALT portion of the master switch while leaving the BAT portion turned on.

CIRCUIT BREAKERS AND FUSES

Most of the electrical circuits in the airplane are protected by "push-to-reset" type circuit breakers mounted on the lower left side of the switch and control panel. However, circuit breakers protecting the alternator output, the electric elevator trim circuit, and the strobe light/avionics cooling fan circuits are the "pull-off" type. In addition to the individual circuit breakers, a single-rocker switch/circuit breaker, labeled AVN PWR on the avionics panel, located on the left cabin sidewall between the forward doorpost and the switch and control panel, also protects the avionics systems. The cigar lighter is protected by a manually-reset type circuit breaker on the back of the lighter, and a fuse behind the instrument panel. The control wheel map light (if installed) is protected by the NAV LIGHTS circuit breaker and a fuse behind the instrument panel. Electrical circuits

which are not protected by circuit breakers are the battery contactor closing (external power) circuit, clock circuit, and flight hour recorder circuit. These circuits are protected by fuses mounted adjacent to the battery.

GROUND SERVICE PLUG RECEPTACLE

A ground service plug receptacle may be installed to permit the use of an external power source for cold weather starting and during lengthy maintenance work on the electrical and electronic equipment. Details of the ground service plug receptacle are presented in Section 9, Supplements.

LIGHTING SYSTEMS

EXTERIOR LIGHTING

Conventional navigation lights are located on the wing tips and tail stinger, and dual landing/taxi lights are installed in the cowl nose cap. Additional lighting is available and includes a strobe light on each wing tip, a flashing beacon on top of the vertical stabilizer, and two courtesy lights, one under each wing, just outboard of the cabin doors. Details of the strobe light system are presented in Section 9, Supplements. The courtesy lights are operated by a switch located on the left rear door post. All exterior lights, except the courtesy lights, are operated by rocker type switches on the left switch and control panel. The switches are ON in the up position and off in the down position.

The flashing beacon should not be used when flying through clouds or overcast; the flashing light reflected from water droplets or particles in the atmosphere, particularly at night, can produce vertigo and loss of orientation.

INTERIOR LIGHTING

Instrument and control panel lighting is provided by flood and integral lighting, with electroluminescent and post lighting also available. Dual concentric light dimming rheostats on the left side of the switch and control panel, control the intensity of all lighting. The following paragraphs describe the various lighting systems and their controls.

The left and right sides of the switch and control panel, and the marker beacon/audio control panel may be lighted by electroluminescent panels which do not require light bulbs for illumination. To utilize this lighting, turn the NAV light rocker switch to the ON position and rotate the inner

SECTION 7 AIRPLANE & SYSTEMS DESCRIPTIONS

CESSNA
MODEL T182

knob labeled EL PANEL, on the right dimming rheostat, clockwise to the desired light intensity.

Instrument panel flood lighting consists of four red lights on the underside of the glare shield, and two red flood lights in the forward section of the overhead console. This lighting is controlled by rotating the outer knob labeled FLOOD, on the left dimming rheostat, clockwise to the desired intensity.

The instrument panel may be equipped with post lights which are mounted at the edge of each instrument or control and provide direct lighting. The lighting is controlled by rotating the inner knob labeled POST, on the left dimming rheostat, clockwise to the desired light intensity. Flood and post lights may be used simultaneously by rotating both the FLOOD and POST knobs clockwise to the desired intensity for each type of lighting.

The engine instrument cluster, radio equipment, and magnetic compass have integral lighting and operate independently of post or flood lighting. To operate these lights, rotate the outer knob labeled ENG-RADIO, on the right dimming rheostat, clockwise to the desired intensity. However, for daylight operation, the compass and engine instrument lights may be turned off while still maintaining maximum light intensity for the digital readouts in the radio equipment. This is accomplished by rotating the ENG-RADIO knob full counterclockwise. Check that the flood lights, post lights, and electroluminescent lights are turned off for daylight operation by rotating the FLOOD, POST, and EL PANEL knobs full counterclockwise.

The control pedestal has two integral lights and, if the airplane is equipped with oxygen, the overhead console is illuminated by post lights. Pedestal and console light intensity is controlled by the knob labeled ENG-RADIO, on the right dimming rheostat.

Map lighting is provided by overhead console map lights and a glare shield mounted map light. The overhead console map lights operate in conjunction with instrument panel flood lighting and consist of two openings just aft of the red instrument panel flood lights. The map light openings have sliding covers controlled by small round knobs which uncover the openings when moved toward each other. The covers should be kept closed unless the map lights are required. A map light and toggle switch, mounted in front of the pilot on the underside of the glare shield is used for illuminating approach plates or other charts when using a control wheel mounted approach plate holder. The switch is labeled MAP LIGHT, ON, OFF and light intensity is controlled by the knob labeled FLOOD, on the left dimming rheostat. The pilot's control wheel map light (if installed) illuminates the lower portion of the cabin in front of the pilot, and is used

for checking maps and other flight data during night operation. The light is utilized by turning the NAV light switch to the ON position and adjusting light intensity with the rheostat control knob on the bottom of the control wheel.

The airplane is equipped with a dome light aft of the overhead console. The light is operated by a slide-type switch, aft of the light lens, which turns the light on when moved to the right.

The most probable cause of a light failure is a burned out bulb; however, in the event any of the lighting systems fail to illuminate when turned on, check the appropriate circuit breaker. If the circuit breaker has opened (white button popped out), and there is no obvious indication of a short circuit (smoke or odor), turn off the light switch of the affected lights, reset the breaker, and turn the switch on again. If the breaker opens again, do not reset it.

CABIN HEATING, VENTILATING AND DEFROSTING SYSTEM

The temperature and volume of airflow into the cabin can be regulated by manipulation of the push-pull CABIN HEAT and CABIN AIR control knobs (see figure 7-9). Both control knobs are the double button type with locks to permit intermediate settings.

NOTE

For improved partial heating on mild days, pull out the CABIN AIR knob slightly when the CABIN HEAT knob is out. This action increases the airflow through the system, increasing efficiency, and blends cool outside air with the exhaust manifold heated air, thus eliminating the possibility of overheating the system ducting.

Front cabin heat and ventilating air is supplied by outlet holes spaced across a cabin manifold just forward of the pilot's and copilot's feet. Rear cabin heat and air is supplied by two ducts from the manifold, one extending down each side of the cabin to an outlet at the front door post at floor level. Windshield defrost air is also supplied by a duct leading from the cabin manifold to an outlet on top of the glare shield. Defrost air flow is controlled by a rotary type knob labeled DEFROST.

For cabin ventilation, pull the CABIN AIR knob out, with the CABIN HEAT knob pushed full in. To raise the air temperature, pull the CABIN HEAT knob out until the desired temperature is attained. Additional heat

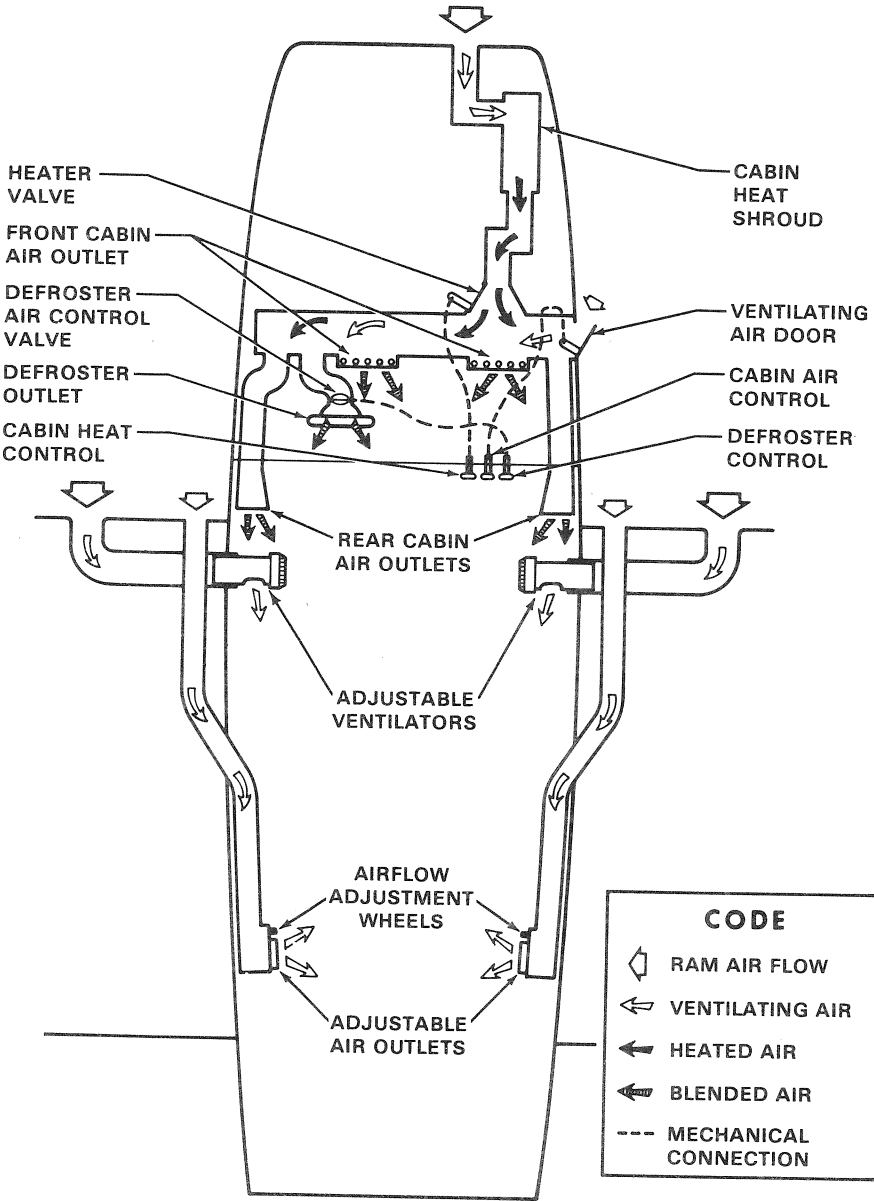


Figure 7-9. Cabin Heating, Ventilating, and Defrosting System

is available by pulling the knob out farther; maximum heat is available with the CABIN HEAT knob pulled out and the CABIN AIR knob pushed full in.

Separate adjustable ventilators supply additional ventilation air to the cabin. One near each upper corner of the windshield supplies air for the pilot and copilot, and two ventilators are available for the rear cabin area to supply air to the rear seat passengers. Each rear ventilator outlet can be adjusted in any desired direction by moving the entire outlet to direct the airflow up or down, and by moving a tab protruding from the center of the outlet left or right to obtain left or right airflow. Ventilation airflow may be closed off completely, or partially closed according to the amount of airflow desired, by rotating an adjustment wheel adjacent to the outlet. An air conditioning system may be installed in the airplane. Details of this system are presented in Section 9, Supplements.

PITOT-STATIC SYSTEM AND INSTRUMENTS

The pitot-static system supplies ram air pressure to the airspeed indicator and static pressure to the airspeed indicator, vertical speed indicator and altimeter. The system is composed of either an unheated or heated pitot tube mounted on the lower surface of the left wing, two external static ports on the left and right sides of the forward fuselage, and the associated plumbing necessary to connect the instruments to the sources.

The heated pitot system (if installed) consists of a heating element in the pitot tube, a rocker switch labeled PITOT HEAT and a 10-amp "push-to-reset" type circuit breaker on the left sidewall circuit breaker panel, and associated wiring. When the pitot heat switch is turned on, the element in the pitot tube is heated electrically to maintain proper operation in possible icing conditions. Pitot heat should be used only as required.

A static pressure alternate source valve is installed adjacent to the parking brake, and can be used if the external static source is malfunctioning. This valve supplies static pressure from inside the cabin instead of the external static ports.

If erroneous instrument readings are suspected due to water or ice in the pressure line going to the standard external static pressure source, the alternate static source valve should be pulled on.

Pressures within the cabin will vary with heater/vents/air conditioner (if installed) control positions. Refer to Sections 3 and 5 for the effect of varying cabin pressures on altimeter and airspeed readings, respectively.

AIRSPED INDICATOR

The airspeed indicator is calibrated in knots and miles per hour. Limitation and range markings (in KIAS) include the white arc (40 to 95 knots), green arc (48 to 140 knots), yellow arc (140 to 178 knots), and a red line (178 knots).

If a true airspeed indicator is installed, it is equipped with a rotatable ring which works in conjunction with the airspeed indicator dial in a manner similar to the operation of a flight computer. To operate the indicator, first rotate the ring until **pressure** altitude is aligned with outside air temperature in degrees Fahrenheit. Pressure altitude should not be confused with indicated altitude. To obtain pressure altitude, momentarily set the barometric scale on the altimeter to 29.92 and read pressure altitude on the altimeter. Be sure to return the altimeter barometric scale to the original barometric setting after pressure altitude has been obtained. Having set the ring to correct for altitude and temperature, read the true airspeed shown on the rotatable ring by the indicator pointer. For best accuracy, the indicated airspeed should be corrected to calibrated airspeed by referring to the Airspeed Calibration chart in Section 5. Knowing the calibrated airspeed, read true airspeed on the ring opposite the calibrated airspeed.

VERTICAL SPEED INDICATOR

The vertical speed indicator depicts airplane rate of climb or descent in feet per minute. The pointer is actuated by atmospheric pressure changes resulting from changes of altitude as supplied by the static source.

ALTIMETER

Airplane altitude is depicted by a barometric type altimeter. A knob near the lower left portion of the indicator provides adjustment of the instrument's barometric scale to the current altimeter setting.

VACUUM SYSTEM AND INSTRUMENTS

An engine-driven vacuum system (see figure 7-10) provides the suction necessary to operate the attitude indicator and directional indicator. The system consists of a vacuum pump mounted on the engine, a vacuum relief valve and vacuum system air filter on the aft side of the firewall below the instrument panel, and instruments (including a suction gage) on the left side of the instrument panel.

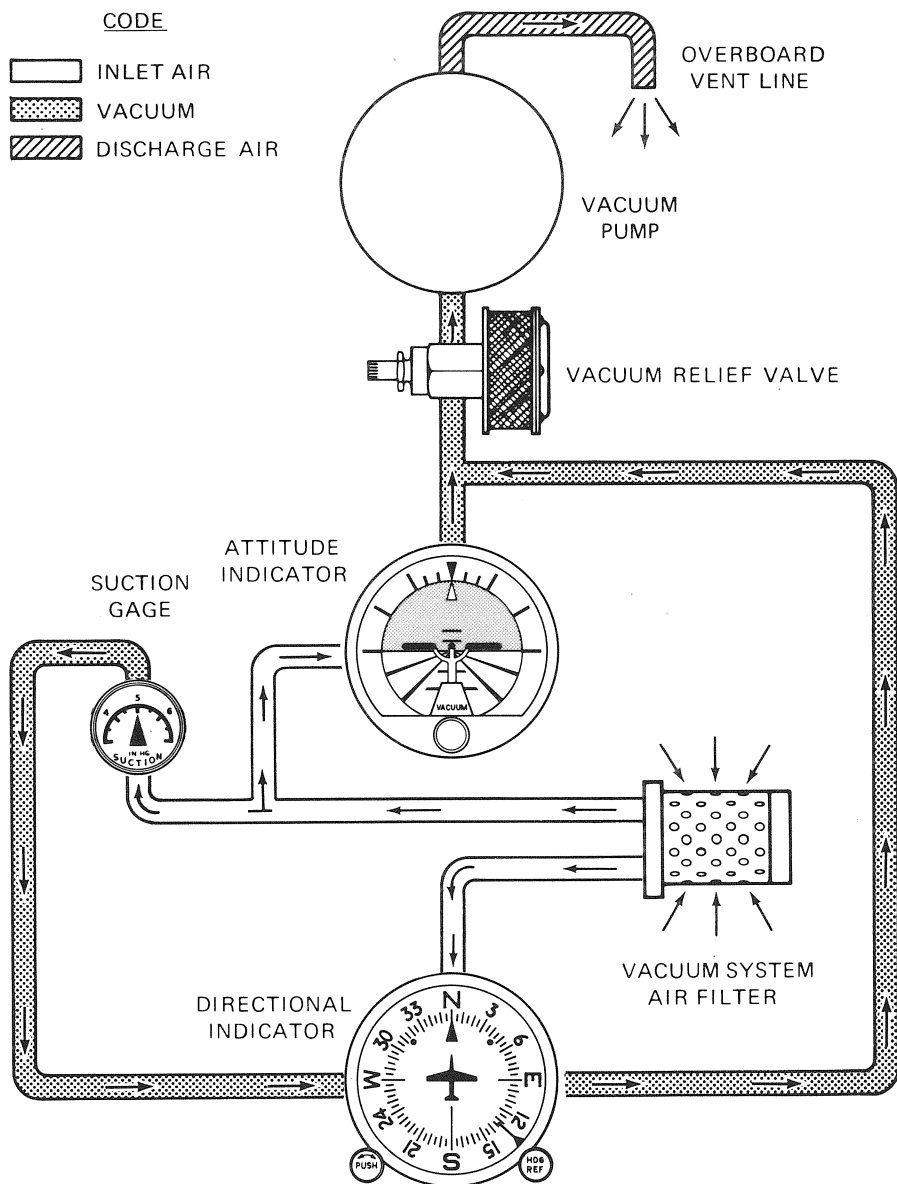


Figure 7-10. Vacuum System

ATTITUDE INDICATOR

An attitude indicator is available and gives a visual indication of flight attitude. Bank attitude is presented by a pointer at the top of the indicator relative to the bank scale which has index marks at 10°, 20°, 30°, 60°, and 90° either side of the center mark. Pitch and roll attitudes are presented by a miniature airplane superimposed over a symbolic horizon area divided into two sections by a white horizon bar. The upper "blue sky" area and the lower "ground" area have arbitrary pitch reference lines useful for pitch attitude control. A knob at the bottom of the instrument is provided for in-flight adjustment of the miniature airplane to the horizon bar for a more accurate flight attitude indication.

DIRECTIONAL INDICATOR

The directional indicator displays airplane heading on a compass card in relation to a fixed simulated airplane image and index. The directional indicator will precess slightly over a period of time. Therefore, the compass card should be set in accordance with the magnetic compass just prior to takeoff, and occasionally re-adjusted on extended flights. A knob on the lower left edge of the instrument is used to adjust the compass card to correct for any precession.

SUCTION GAGE

The suction gage, located below the flight instruments, is calibrated in inches of mercury and indicates suction available for operation of the attitude and directional indicators. The desired suction range is 4.5 to 5.4 inches of mercury. A suction reading out of this range may indicate a system malfunction or improper adjustment, and in this case, the indicators should not be considered reliable.

STALL WARNING SYSTEM

The airplane is equipped with a vane-type stall warning unit, in the leading edge of the left wing, which is electrically connected to a stall warning horn under the map compartment. A 5-amp "push-to-reset" type circuit breaker labeled STALL WARN, on the left side of the switch and control panel, protects the stall warning system. The vane in the wing senses the change in airflow over the wing, and operates the warning horn at airspeeds between 5 and 10 knots above the stall in all configurations.

If the airplane has a heated stall warning system, the vane and sensor unit in the wing leading edge is equipped with a heating element. The heated part of the system is operated by the PITOT HEAT switch, and is

protected by the PITOT HEAT circuit breaker.

The stall warning system should be checked during the pre-flight inspection by momentarily turning on the master switch and actuating the vane in the wing. The system is operational if the warning horn sounds as the vane is pushed upward.

AVIONICS SUPPORT EQUIPMENT

If the airplane is equipped with avionics, various avionics support equipment may also be installed. Equipment available includes an avionics cooling fan, microphone-headset installations and control surface static dischargers. The following paragraphs discuss these items. Description and operation of radio equipment is covered in Section 9 of this handbook.

AVIONICS COOLING FAN

An avionics cooling fan system is provided whenever a factory-installed Nav/Com radio is installed. The system is designed to provide internal cooling air from a small electric fan to the avionics units and thereby eliminate the possibility of moisture contamination using an external cooling air source.

Power to the electric fan is supplied directly from a "pull-off" type circuit breaker labeled STROBE, AVN FAN, located on the left switch and control panel. Hence, power is supplied to the fan anytime the master switch is ON. This arrangement provides air circulation through the radios to remove a possible heat soak condition before the radios are turned on after engine start. It is recommended that the circuit breaker be left ON except during periods of lengthy maintenance with the master switch ON.

MICROPHONE-HEADSET INSTALLATIONS

Three types of microphone-headset installations are offered. The standard system provided with avionics equipment includes a hand-held microphone and separate headset. The keying switch for this microphone is on the microphone. Two optional microphone-headset installations are also available; these feature a single-unit microphone-headset combination which permits the pilot or front passenger to conduct radio communications without interrupting other control operations to handle a hand-held microphone. One microphone-headset combination is a lightweight

type without a padded headset and the other version has a padded headset. The microphone-headset combinations utilize a remote keying switch located on the left grip of the pilot's control wheel and, if an optional intercom system is installed, a second switch on the right grip of the front passenger's control wheel. The microphone and headset jacks are located on the lower left and right sides of the instrument panel. Audio to all three headsets is controlled by the individual audio selector switches and adjusted for volume level by using the selected receiver volume controls.

NOTE

When transmitting, with the hand-held microphone, the pilot should key the microphone, place the microphone as close as possible to the lips and speak directly into it.

STATIC DISCHARGERS

If frequent IFR flights are planned, installation of wick-type static dischargers is recommended to improve radio communications during flight through dust or various forms of precipitation (rain, snow or ice crystals). Under these conditions, the build-up and discharge of static electricity from the trailing edges of the wings, rudder, elevator, propeller tips, and radio antennas can result in loss of usable radio signals on all communications and navigation radio equipment. Usually the ADF is first to be affected and VHF communication equipment is the last to be affected.

Installation of static dischargers reduces interference from precipitation static, but it is possible to encounter severe precipitation static conditions which might cause the loss of radio signals, even with static dischargers installed. Whenever possible, avoid known severe precipitation areas to prevent loss of dependable radio signals. If avoidance is impractical, minimize airspeed and anticipate temporary loss of radio signals while in these areas.

SECTION 8

AIRPLANE HANDLING, SERVICE & MAINTENANCE

TABLE OF CONTENTS

| | Page |
|--|------|
| Introduction | 8-3 |
| Identification Plate | 8-3 |
| Owner Follow-Up System | 8-3 |
| Publications | 8-3 |
| Airplane File | 8-4 |
| Airplane Inspection Periods | 8-5 |
| FAA Required Inspections | 8-5 |
| Cessna Progressive Care | 8-6 |
| Cessna Customer Care Program | 8-6 |
| Pilot Conducted Preventive Maintenance | 8-7 |
| Alterations or Repairs | 8-7 |
| Ground Handling | 8-8 |
| Towing | 8-8 |
| Parking | 8-8 |
| Tie-Down | 8-8 |
| Jacking | 8-8 |
| Leveling | 8-9 |
| Flyable Storage | 8-9 |
| Servicing | 8-10 |
| Engine Oil | 8-10 |
| Fuel | 8-12 |
| Landing Gear | 8-15 |
| Oxygen | 8-15 |
| Cleaning and Care | 8-15 |
| Windshield-Windows | 8-15 |
| Painted Surfaces | 8-16 |
| Propeller Care | 8-16 |
| Engine Care | 8-16 |
| Interior Care | 8-17 |

INTRODUCTION

This section contains factory-recommended procedures for proper ground handling and routine care and servicing of your Cessna. It also identifies certain inspection and maintenance requirements which must be followed if your airplane is to retain that new-plane performance and dependability. It is wise to follow a planned schedule of lubrication and preventive maintenance based on climatic and flying conditions encountered in your locality.

Keep in touch with your Cessna Dealer and take advantage of his knowledge and experience. He knows your airplane and how to maintain it. He will remind you when lubrications and oil changes are necessary, and about other seasonal and periodic services.

IDENTIFICATION PLATE

All correspondence regarding your airplane should include the SERIAL NUMBER. The Serial Number, Model Number, Production Certificate Number (PC) and Type Certificate Number (TC) can be found on the Identification Plate, located on the left forward doorpost. Located adjacent to the Identification Plate is a Finish and Trim Plate which contains a code describing the interior color scheme and exterior paint combination of the airplane. The code may be used in conjunction with an applicable Parts Catalog if finish and trim information is needed.

OWNER FOLLOW-UP SYSTEM

Your Cessna Dealer has an Owner Follow-Up System to notify you when he receives information that applies to your Cessna. In addition, if you wish, you may choose to receive similar notification, in the form of Service Letters, directly from the Cessna Customer Services Department. A subscription form is supplied in your Customer Care Program book for your use, should you choose to request this service. Your Cessna Dealer will be glad to supply you with details concerning these follow-up programs, and stands ready, through his Service Department, to supply you with fast, efficient, low-cost service.

PUBLICATIONS

Various publications and flight operation aids are furnished in the

**SECTION 8
HANDLING, SERVICE
& MAINTENANCE**

**CESSNA
MODEL T182**

airplane when delivered from the factory. These items are listed below.

- CUSTOMER CARE PROGRAM BOOK
- PILOT'S OPERATING HANDBOOK AND FAA APPROVED AIRPLANE FLIGHT MANUAL
- AVIONICS OPERATION GUIDE
- PILOT'S CHECKLISTS
- POWER COMPUTER
- CUSTOMER CARE DEALER DIRECTORY

The following additional publications, plus many other supplies that are applicable to your airplane, are available from your Cessna Dealer.

- INFORMATION MANUAL (Contains Pilot's Operating Handbook Information)
- SERVICE MANUALS AND PARTS CATALOGS FOR YOUR:
AIRPLANE
ENGINE AND ACCESSORIES
AVIONICS AND AUTOPILOT

Your Cessna Dealer has a Customer Care Supplies Catalog covering all available items, many of which he keeps on hand. He will be happy to place an order for any item which is not in stock.

NOTE

A Pilot's Operating Handbook and FAA Approved Airplane Flight Manual which is lost or destroyed may be replaced by contacting your Cessna Dealer or writing directly to the Customer Services Department, Cessna Aircraft Company, Wichita, Kansas. An affidavit containing the owner's name, airplane serial number and registration number must be included in replacement requests since the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual is identified for specific airplanes only.

AIRPLANE FILE

There are miscellaneous data, information and licenses that are a part of the airplane file. The following is a checklist for that file. In addition, a periodic check should be made of the latest Federal Aviation Regulations to ensure that all data requirements are met.

A. To be displayed in the airplane at all times:

1. Aircraft Airworthiness Certificate (FAA Form 8100-2).
2. Aircraft Registration Certificate (FAA Form 8050-3).
3. Aircraft Radio Station License, if transmitter installed (FCC Form 556).

B. To be carried in the airplane at all times:

1. Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.
2. Weight and Balance, and associated papers (latest copy of the Repair and Alteration Form, FAA Form 337, if applicable).
3. Equipment List.

C. To be made available upon request:

1. Airplane Log Book.
2. Engine Log Book.

Most of the items listed are required by the United States Federal Aviation Regulations. Since the Regulations of other nations may require other documents and data, owners of airplanes not registered in the United States should check with their own aviation officials to determine their individual requirements.

Cessna recommends that these items, plus the Pilot's Checklists, Power Computer, Customer Care Program book and Customer Care Card, be carried in the airplane at all times.

AIRPLANE INSPECTION PERIODS

FAA REQUIRED INSPECTIONS

As required by Federal Aviation Regulations, all civil aircraft of U.S. registry must undergo a complete inspection (annual) each twelve calendar months. In addition to the required ANNUAL inspection, aircraft operated commercially (for hire) must have a complete inspection every 100 hours of operation.

The FAA may require other inspections by the issuance of airworthiness directives applicable to the airplane, engine, propeller and components. It is the responsibility of the owner/operator to ensure compliance with all applicable airworthiness directives and, when the inspections are

**SECTION 8
HANDLING, SERVICE
& MAINTENANCE**

**CESSNA
MODEL T182**

repetitive, to take appropriate steps to prevent inadvertent noncompliance.

In lieu of the 100 HOUR and ANNUAL inspection requirements, an airplane may be inspected in accordance with a progressive inspection schedule, which allows the work load to be divided into smaller operations that can be accomplished in shorter time periods.

The CESSNA PROGRESSIVE CARE PROGRAM has been developed to provide a modern progressive inspection schedule that satisfies the complete airplane inspection requirements of both the 100 HOUR and ANNUAL inspections as applicable to Cessna airplanes. The program assists the owner in his responsibility to comply with all FAA inspection requirements, while ensuring timely replacement of life-limited parts and adherence to factory-recommended inspection intervals and maintenance procedures.

CESSNA PROGRESSIVE CARE

The Cessna Progressive Care Program has been designed to help you realize maximum utilization of your airplane at a minimum cost and downtime. Under this program, your airplane is inspected and maintained in four operations at 50-hour intervals during a 200-hour period. The operations are recycled each 200 hours and are recorded in a specially provided Aircraft Inspection Log as each operation is conducted.

The Cessna Aircraft Company recommends Progressive Care for airplanes that are being flown 200 hours or more per year, and the 100-hour inspection for all other airplanes. The procedures for the Progressive Care Program and the 100-hour inspection have been carefully worked out by the factory and are followed by the Cessna Dealer Organization. The complete familiarity of Cessna Dealers with Cessna equipment and factory-approved procedures provides the highest level of service possible at lower cost to Cessna owners.

Regardless of the inspection method selected by the owner, he should keep in mind that FAR Part 43 and FAR Part 91 establishes the requirement that properly certified agencies or personnel accomplish all required FAA inspections and most of the manufacturer recommended inspections.

CESSNA CUSTOMER CARE PROGRAM

Specific benefits and provisions of the CESSNA WARRANTY plus other important benefits for you are contained in your CUSTOMER CARE PROGRAM book supplied with your airplane. You will want to thoroughly review your Customer Care Program book and keep it in your airplane at all times.

Coupons attached to the Program book entitle you to an initial inspection and either a Progressive Care Operation No.1 or the first 100-hour inspection within the first 6 months of ownership at no charge to you. If you take delivery from your Dealer, the initial inspection will have been performed before delivery of the airplane to you. If you pick up your airplane at the factory, plan to take it to your Dealer reasonably soon after you take delivery, so the initial inspection may be performed allowing the Dealer to make any minor adjustments which may be necessary.

You will also want to return to your Dealer either at 50 hours for your first Progressive Care Operation, or at 100 hours for your first 100-hour inspection depending on which program you choose to establish for your airplane. While these important inspections will be performed for you by any Cessna Dealer, in most cases you will prefer to have the Dealer from whom you purchased the airplane accomplish this work.

PILOT CONDUCTED PREVENTIVE MAINTENANCE

A certified pilot who owns or operates an airplane not used as an air carrier is authorized by FAR Part 43 to perform limited maintenance on his airplane. Refer to FAR Part 43 for a list of the specific maintenance operations which are allowed.

NOTE

Pilots operating airplanes of other than U.S. registry should refer to the regulations of the country of certification for information on preventive maintenance that may be performed by pilots.

A Service Manual should be obtained prior to performing any preventive maintenance to ensure that proper procedures are followed. Your Cessna Dealer should be contacted for further information or for required maintenance which must be accomplished by appropriately licensed personnel.

ALTERATIONS OR REPAIRS

It is essential that the FAA be contacted **prior** to any alterations on the airplane to ensure that airworthiness of the airplane is not violated. Alterations or repairs to the airplane must be accomplished by licensed personnel.

GROUND HANDLING

TOWING

The airplane is most easily and safely maneuvered by hand with the tow-bar attached to the nose wheel. When towing with a vehicle, do not exceed the nose gear turning angle of 29° either side of center, or damage to the gear will result. If the airplane is towed or pushed over a rough surface during hangaring, watch that the normal cushioning action of the nose strut does not cause excessive vertical movement of the tail and the resulting contact with low hangar doors or structure. A flat nose tire or deflated strut will also increase tail height.

PARKING

When parking the airplane, head into the wind and set the parking brakes. Do not set the parking brakes during cold weather when accumulated moisture may freeze the brakes, or when the brakes are overheated. Close the cowl flaps, install the control wheel lock and chock the wheels. In severe weather and high wind conditions, tie the airplane down as outlined in the following paragraph.

TIE-DOWN

Proper tie-down procedure is the best precaution against damage to the parked airplane by gusty or strong winds. To tie-down the airplane securely, proceed as follows:

1. Set the parking brake and install the control wheel lock.
2. Install a surface control lock over the fin and rudder.
3. Tie sufficiently strong ropes or chains (700 pounds tensile strength) to the wing and tail tie-down fittings and secure each rope to a ramp tie-down.
4. Tie a rope (no chains or cables) to the nose gear torque link and secure to a ramp tie-down.
5. Install a pitot tube cover.

JACKING

When a requirement exists to jack the entire airplane off the ground, or when wing jack points are used in the jacking operation, refer to the Service Manual for specific procedures and equipment required.

Individual main gear may be jacked by using the jack pad which is incorporated in the main landing gear strut step assembly. When using the individual gear strut jack pad, flexibility of the gear strut will cause the main wheel to slide inboard as the wheel is raised, tilting the jack. The jack

must then be lowered for a second jacking operation. Do not jack both main wheels simultaneously using the individual main gear jack pads.

If nose gear maintenance is required, the nose wheel may be raised off the ground by pressing down on a tailcone bulkhead, just forward of the horizontal stabilizer, and allowing the tail to rest on the tail tie-down ring.

NOTE

Do not apply pressure on the elevator or outboard stabilizer surfaces. When pushing on the tailcone, always apply pressure at a bulkhead to avoid buckling the skin.

To assist in raising and holding the nose wheel off the ground, weight down the tail by placing sand-bags, or suitable weights, on each side of the horizontal stabilizer, next to the fuselage. If ground anchors are available, the tail should be securely tied down.

NOTE

Ensure that the nose will be held off the ground under all conditions by means of suitable stands or supports under weight supporting bulkheads near the nose of the airplane.

LEVELING

Longitudinal leveling of the airplane is accomplished by placing a level on the leveling screws located on the left side of the tailcone. Deflate the nose tire and/or lower or raise the nose strut to properly center the bubble in the level. Corresponding points on both upper door sills may be used to level the airplane laterally.

FLYABLE STORAGE

Airplanes placed in non-operational storage for a maximum of 30 days or those which receive only intermittent operational use for the first 25 hours are considered in flyable storage status. Every seventh day during these periods, the propeller should be rotated by hand through five revolutions. This action "limbers" the oil and prevents any accumulation of corrosion on engine cylinder walls.

WARNING

For maximum safety, check that the ignition switch is OFF, the throttle is closed, the mixture control is in the idle cut-off position, and the airplane is secured before rotating the propeller by hand. Do not stand within the arc of the propeller blades while turning the propeller.

After 30 days, the airplane should be flown for 30 minutes or a ground runup should be made just long enough to produce an oil temperature within the lower green arc range. Excessive ground runup should be avoided.

Engine runup also helps to eliminate excessive accumulations of water in the fuel system and other air spaces in the engine. Keep fuel tanks full to minimize condensation in the tanks. Keep the battery fully charged to prevent the electrolyte from freezing in cold weather. If the airplane is to be stored temporarily, or indefinitely, refer to the Service Manual for proper storage procedures.

SERVICING

In addition to the PREFLIGHT INSPECTION covered in Section 4, COMPLETE servicing, inspection, and test requirements for your airplane are detailed in the Service Manual. The Service Manual outlines all items which require attention at 50, 100, and 200 hour intervals plus those items which require servicing, inspection, and/or testing at special intervals.

Since Cessna Dealers conduct all service, inspection, and test procedures in accordance with applicable Service Manuals, it is recommended that you contact your Cessna Dealer concerning these requirements and begin scheduling your airplane for service at the recommended intervals.

Cessna Progressive Care ensures that these requirements are accomplished at the required intervals to comply with the 100-hour or ANNUAL inspection as previously covered.

Depending on various flight operations, your local Government Aviation Agency may require additional service, inspections, or tests. For these regulatory requirements, owners should check with local aviation officials where the airplane is being operated.

For quick and ready reference, quantities, materials, and specifications for frequently used service items are as follows:

ENGINE OIL

GRADE AND VISCOSITY FOR TEMPERATURE RANGE --

The airplane was delivered from the factory with aviation grade straight mineral engine oil. This oil should be drained after the first 25 hours of operation, and the following oils used as specified for the average ambient air temperature in the operating area.

MIL-L-6082 Aviation Grade Straight Mineral Oil: Use to replenish supply during the first 25 hours and at the first 25-hour oil change. Continue to use until a total of 50 hours has accumulated or oil consumption has stabilized.

All temperatures, use SAE 20W-50 or

Above 16°C (60°F), use SAE 50

-1°C (30°F) to 32°C (90°F), use SAE 40

-18°C (0°F) to 21°C (70°F), use SAE 30

Below -12°C (10°F), use SAE 20

MIL-L-22851 Ashless Dispersant Oil: This oil must be used after the first 50 hours or oil consumption has stabilized.

All temperatures, use SAE 20W-50 or

Above 16°C (60°F), use SAE 40 or SAE 50

-1°C (30°F), to 32°C (90°F), use SAE 40

-18°C (0°F) to 21°C (70°F), use SAE 40 or SAE 30

Below -12°C (10°F), use SAE 30

CAPACITY OF ENGINE SUMP -- 8 Quarts.

Do not operate on less than 5 quarts. To minimize loss of oil through breather, fill to 7 quart level for normal flights of less than 3 hours. For extended flight, fill to 8 quarts. These quantities refer to oil dipstick level readings. During oil and oil filter changes, one additional quart is required.

OIL AND OIL FILTER CHANGE --

After the first 25 hours of operation, drain engine oil sump and oil cooler, and change the filter. Refill sump with straight mineral oil and use until a total of 50 hours has accumulated or oil consumption has stabilized; then change to dispersant oil. Drain the engine oil sump and change the filter each 50 hours thereafter. The oil change interval may be extended to 100-hour intervals, providing the oil filter is changed at 50-hour intervals. Change engine oil at least every 6 months even though less than the recommended hours have accumulated. Reduce intervals for prolonged operation in dusty areas, cold climates, or when short flights and long idle periods result in sludging conditions.

NOTE

During the first 25-hour oil and filter change, a general inspection of the overall engine compartment is required. Items which are not normally checked during a preflight inspection should be given special attention. Hoses, metal lines and fittings should be inspected for signs of oil and fuel leaks, and checked for abrasions, chafing, security, proper routing and support, and evidence of deterioration. Inspect the intake and exhaust systems for cracks, evidence of leakage, and security of attachment. Engine

SECTION 8
HANDLING, SERVICE
& MAINTENANCE

CESSNA
MODEL T182

controls and linkages should be checked for freedom of movement through their full range, security of attachment and evidence of wear. Inspect wiring for security, chafing, burning, defective insulation, loose or broken terminals, heat deterioration, and corroded terminals. Check the alternator belt in accordance with Service Manual instructions, and retighten if necessary. A periodic check of these items during subsequent servicing operations is recommended.

FUEL

APPROVED FUEL GRADES (AND COLORS) --

100LL Grade Aviation Fuel (Blue).

100 (Formerly 100/130) Grade Aviation Fuel (Green).

.NOTE

Isopropyl alcohol or ethylene glycol monomethyl ether may be added to the fuel supply in quantities not to exceed 1% or .15% by volume, respectively, of the total. Refer to Fuel Additives in later paragraphs for additional information.

CAPACITY EACH TANK -- 46.0 U.S. Gallons.

REDUCED CAPACITY EACH TANK (WHEN FILLED TO BOTTOM OF FUEL FILLER NECK) -- 34.5 U.S. Gallons.

NOTE

To ensure maximum fuel capacity when refueling and minimize cross-feeding when parked on a sloping surface, place the fuel selector valve handle in either LEFT or RIGHT position.

NOTE

Service the fuel system after each flight, and keep fuel tanks full to minimize condensation in the tanks.

FUEL ADDITIVES --

Strict adherence to recommended preflight draining instructions as called for in Section 4 will eliminate any free water accumulations from the tank sumps. While small amounts of water may still remain in solution in the gasoline, it will normally be consumed and go unno-

ticed in the operation of the engine.

One exception to this can be encountered when operating under the combined effect of: (1) use of certain fuels, with (2) high humidity conditions on the ground (3) followed by flight at high altitude and low temperature. Under these unusual conditions, small amounts of water in solution can precipitate from the fuel stream and freeze in sufficient quantities to induce partial icing of the engine fuel system.

While these conditions are quite rare and will not normally pose a problem to owners and operators, they do exist in certain areas of the world and consequently must be dealt with, when encountered.

Therefore, to alleviate the possibility of fuel icing occurring under these unusual conditions, it is permissible to add isopropyl alcohol or ethylene glycol monomethyl ether (EGME) compound to the fuel supply.

The introduction of alcohol or EGME compound into the fuel provides two distinct effects: (1) it absorbs the dissolved water from the gasoline and (2) alcohol has a freezing temperature depressant effect.

Alcohol, if used, is to be blended with the fuel in a concentration of 1% by volume. Concentrations greater than 1% are not recommended since they can be detrimental to fuel tank materials.

The manner in which the alcohol is added to the fuel is significant because alcohol is most effective when it is completely dissolved in the fuel. To ensure proper mixing, the following is recommended:

1. For best results, the alcohol should be added during the fueling operation by pouring the alcohol directly on the fuel stream issuing from the fueling nozzle.
2. An alternate method that may be used is to premix the complete alcohol dosage with some fuel in a separate clean container (approximately 2-3 gallon capacity) and then transferring this mixture to the tank prior to the fuel operation.

Any high quality isopropyl alcohol may be used, such as Anti-Icing Fluid (MIL-F-5566) or Isopropyl Alcohol (Federal Specification TT-I-735a). Figure 8-1 provides alcohol-fuel mixing ratio information.

Ethylene glycol monomethyl ether (EGME) compound, in compliance with MIL-I-27686 or Phillips PFA-55MB, if used, must be carefully mixed with the fuel in concentrations not to exceed .15% by volume. Figure 8-1 provides EGME-fuel mixing ratio information.

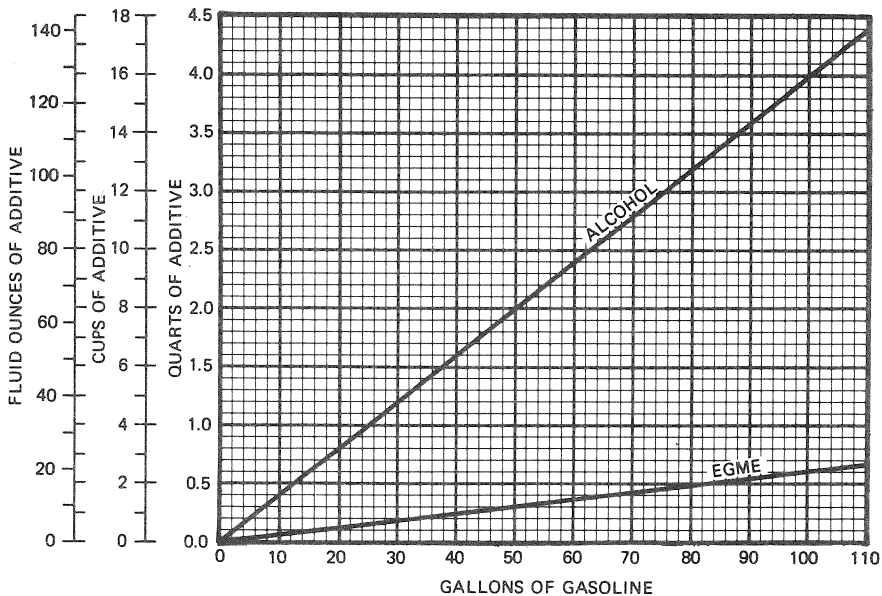


Figure 8-1. Additive Mixing Ratio

CAUTION

Mixing of the EGME compound with the fuel is extremely important because a concentration in excess of that recommended (.15% by volume maximum) will result in detrimental effects to the fuel tanks, such as deterioration of protective primer and sealants and damage to O-rings and seals in the fuel system and engine components. Use only blending equipment that is recommended by the manufacturer to obtain proper proportioning.

CAUTION

Do not allow the concentrated EGME compound to come in contact with the airplane finish or fuel cell as damage can result.

Prolonged storage of the airplane will result in a water buildup in the fuel which "leeches out" the additive. An indication of this is when an excessive amount of water accumulates in the fuel tank sumps. The concentration can be checked using a differential refractometer. It is imperative that the technical manual for the differential refractometer

be followed explicitly when checking the additive concentration.

LANDING GEAR

NOSE WHEEL TIRE PRESSURE -- 49 PSI on 5.00-5, 6-Ply Rated Tire.

MAIN WHEEL TIRE PRESSURE -- 42 PSI on 6.00-6, 6-Ply Rated Tires.

NOSE GEAR SHOCK STRUT --

Keep filled with MIL-H-5606 hydraulic fluid per filling instructions placard, and with no load on the strut, inflate with air to 55-60 PSI. Do not over-inflate.

OXYGEN

AVIATOR'S BREATHING OXYGEN -- Spec. No. MIL-O-27210.

MAXIMUM PRESSURE (cylinder temperature stabilized after filling) -- 1800 PSI at 21°C (70°F). Refer to Oxygen Supplement (Section 9) for filling pressures.

CLEANING AND CARE

WINDSHIELD-WINDOWS

The plastic windshield and windows should be cleaned with an aircraft windshield cleaner. Apply the cleaner sparingly with soft cloths, and rub with moderate pressure until all dirt, oil scum and bug stains are removed. Allow the cleaner to dry, then wipe it off with soft flannel cloths.

If a windshield cleaner is not available, the plastic can be cleaned with soft cloths moistened with Stoddard solvent to remove oil and grease.

NOTE

Never use gasoline, benzine, alcohol, acetone, fire extinguisher or anti-ice fluid, lacquer thinner or glass cleaner to clean the plastic. These materials will attack the plastic and may cause it to craze.

Follow by **carefully** washing with a mild detergent and plenty of water. Rinse thoroughly, then dry with a clean moist chamois. **Do not** rub the plastic with a dry cloth since this builds up an electrostatic charge which attracts dust. Waxing with a good commercial wax will finish the cleaning job. A thin, even coat of wax, polished out by hand with clean soft flannel cloths, will fill in minor scratches and help prevent further scratching.

Do not use a canvas cover on the windshield unless freezing rain or sleet is anticipated since the cover may scratch the plastic surface.

PAINTED SURFACES

The painted exterior surfaces of your new Cessna have a durable, long lasting finish and, under normal conditions, require no polishing or buffing. Approximately 10 days are required for the paint to cure completely; in most cases, the curing period will have been completed prior to delivery of the airplane. In the event that polishing or buffing is required within the curing period, it is recommended that the work be done by someone experienced in handling uncured paint. Any Cessna Dealer can accomplish this work.

Generally, the painted surfaces can be kept bright by washing with water and mild soap, followed by a rinse with water and drying with cloths or a chamois. Harsh or abrasive soaps or detergents which cause corrosion or scratches should never be used. Remove stubborn oil and grease with a cloth moistened with Stoddard solvent.

Waxing is unnecessary to keep the painted surfaces bright. However, if desired, the airplane may be waxed with a good automotive wax. A heavier coating of wax on the leading edges of the wings and tail and on the engine nose cap and propeller spinner will help reduce the abrasion encountered in these areas.

When the airplane is parked outside in cold climates and it is necessary to remove ice before flight, care should be taken to protect the painted surfaces during ice removal with chemical liquids. Isopropyl alcohol will satisfactorily remove ice accumulations without damaging the paint. While applying the de-icing solution, keep it away from the windshield and cabin windows since the alcohol will attack the plastic and may cause it to craze.

PROPELLER CARE

Preflight inspection of propeller blades for nicks, and wiping them occasionally with an oily cloth to clean off grass and bug stains will assure long, trouble-free service. Small nicks on the propeller, particularly near the tips and on the leading edges, should be dressed out as soon as possible since these nicks produce stress concentrations, and if ignored, may result in cracks. Never use an alkaline cleaner on the blades; remove grease and dirt with Stoddard solvent.

ENGINE CARE

The engine may be cleaned with Stoddard solvent, or equivalent, then dried thoroughly.

CAUTION

Particular care should be given to electrical equipment before cleaning. Cleaning fluids should not be allowed to enter magnetos, starter, alternator and the like. Protect these components before saturating the engine with solvents. All other openings should also be covered before cleaning the engine assembly. Caustic cleaning solutions should be used cautiously and should always be properly neutralized after their use.

INTERIOR CARE

To remove dust and loose dirt from the upholstery and carpet, clean the interior regularly with a vacuum cleaner.

Blot up any spilled liquid promptly with cleansing tissue or rags. Don't pat the spot; press the blotting material firmly and hold it for several seconds. Continue blotting until no more liquid is taken up. Scrape off sticky materials with a dull knife, then spot-clean the area.

Oily spots may be cleaned with household spot removers, used sparingly. Before using any solvent, read the instructions on the container and test it on an obscure place on the fabric to be cleaned. Never saturate the fabric with a volatile solvent; it may damage the padding and backing materials.

Soiled upholstery and carpet may be cleaned with foam-type detergent, used according to the manufacturer's instructions. To minimize wetting the fabric, keep the foam as dry as possible and remove it with a vacuum cleaner.

If your airplane is equipped with leather seating, cleaning of the seats is accomplished using a soft cloth or sponge dipped in mild soap suds. The soap suds, used sparingly, will remove traces of dirt and grease. The soap should be removed with a clean damp cloth.

The plastic trim, headliner, instrument panel and control knobs need only be wiped off with a damp cloth. Oil and grease on the control wheel and control knobs can be removed with a cloth moistened with Stoddard solvent. Volatile solvents, such as mentioned in paragraphs on care of the windshield, must never be used since they soften and craze the plastic.

