


Operation and Maintenance Manual

Revision 10.0 2018

THIS DOCUMENT CONTAINS IMPORTANT
INFORMATION. IT MUST BE KEPT WITH THE GATE
AT ALL TIMES.


Safe Use Instructions

To open the gate:

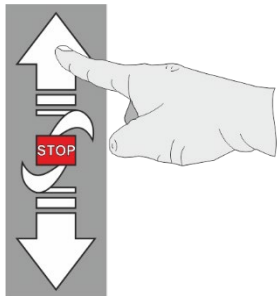

Drawing showing the "UP" arrow being pressed

figure.1A

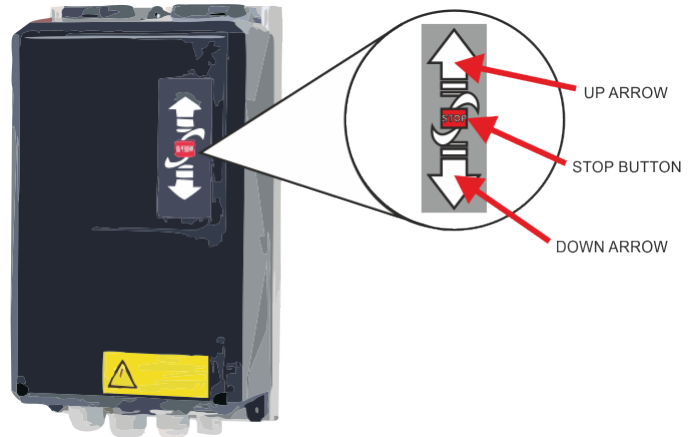


The gate may be opened using the Open push button input, panel mounted keypad button, exit loop or radio fob (if fitted). The gate will smoothly accelerate to fast speed until the intermediate limit is reached, at which point the gate will smoothly decelerate for the remainder of the travel distance. The gate may be closed using the Auto-Close function, the Close button input, panel mounted keypad button or radio fob. The gate will smoothly accelerate to full speed until the intermediate limit is reached, at which point the gate will decelerate for the remainder of the travel distance.

If a safety device is activated (i.e. safety edge or photocell) during the closing cycle the gate will stop & return to the fully open position. The gate may only be closed once the obstruction has been removed.

To close the gate:

If a safety device is activated (i.e. safety edge or photocell) during the closing cycle the gate will stop & return to the fully open position. The gate may only be closed once the obstruction has been removed.

The gate can also be closed by external devices but also using the down arrow on the front of the control panel.

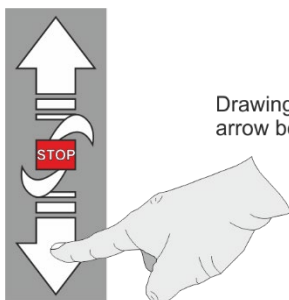

Drawing showing the "DOWN" arrow being pressed

figure.1B

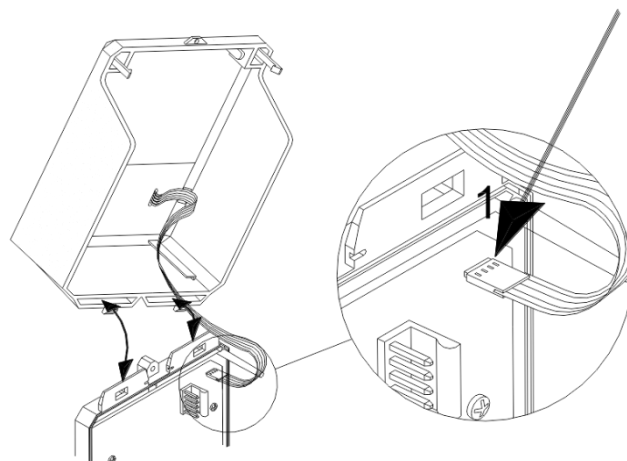


Figure 3: Installation position of the cover

Manual operation:

In the event of a power cut or other fault it will be necessary to move your gate in manual mode. Manual operation should only be attempted by a responsible adult. Before doing this always switch the system off at the main isolator, your installer will have shown you where this is on your system.



You can now move the gate manually. Only move the gate very slowly, no faster than it moves in normal use. Your installer will have demonstrated this at handover.

To return the gate to automatic operation (when the power is restored) simply follow the steps above in reverse order:



End User Regular Safety Checks

General:

Keep the areas adjacent to the gate clear of obstructions at all times, cut back plants and weeds that might interfere with the gate and its safety sensors. Keep the photo electric beam covers clean.

Safety checks:

These user safety checks should be conducted every [few weeks] by a responsible adult who has been shown how to do the checks by a trained and qualified powered gate specialist. We will demonstrate the user checks to you as part of the handover process.

[Insert instructions]

Engineer Planned Preventative Maintenance Schedule

Your gate will need to receive regular planned preventative maintenance in order to remain in safe and reliable service. The maintenance outlined below should only be conducted by a trained and qualified powered gate specialist who is familiar with 9000 automation equipment and has the necessary test equipment. *[insert company]* can provide this service and you will have been offered a maintenance contract as part of the supply process. If the maintenance outlined below is not completed, *[insert company]* cannot accept responsibility for injuries, accidents or breakdowns caused by lack of maintenance.

You are reminded that, as the person in control of the gate, you have a legal duty of care to users and to visitors to the premises (including trespassers). If the gate is not kept safe, any party whose property is damaged or who is injured by the gate is likely to be able to sue for damages.

If the gate is part of an undertaking (such as at rented property), the person in control of it will have additional duties under section 3 of the Health and Safety at Work Act 1974 to keep the gate maintained in a safe condition.

If the premises are also a workplace, there are specific duties under regulation 5 and 18 of the Workplace (Health and Safety and Welfare) Regulations 1992.

Failure to meet duties imposed by health and safety legislation can result in criminal proceedings.

A maintenance log is provided at the end of this book to record completed maintenance. Please make sure the maintenance log is completed and signed on completion of any maintenance work.

At 6 month intervals:

Inspections:

Check that all gear track bolts are tight and secure

Check no teeth are missing from the gear track

Check that all gearbox and motor mountings are tight and secure

Check that the gate manual release is still functioning

Check that the gate moves stable and freely when the manual release is engaged and power is switched off!

Check all running gear fixings are tight and secure

Check flashing beacon is working

Check that the emergency stop button works

Check all safety edges work and are working for the correct direction of travel

Check the photocells are working and in the correct direction of travel

Check that no one has made the gate unsafe by speeding it up past the factory settings

Check that the control program has not been modified such as to make the gate unsafe. Please consult the manufacturer if in doubt

Call the manufacturer to talk this through if in doubt, use common sense and it is better to check everything twice!

Lubrication:

Any grease nipple (All other items are “sealed for life” and require no lubrication)

Function checks:

- Overall gate structure and plumb of hinges
- Lubricate hinges and actuator unit pivots
- Actuator oil level
- Function of actuator manual release
- Actuator hydraulic pressure setting
- Slow down valve setting of actuator
- Torque setting on control unit
- Obstacle detection effectiveness (measure forces)
- Overall function/condition of actuators
- Function and condition of safe edges
- Photocells internal and external
- Sealing of photocell covers and cable entry
- Wire terminations in control panel
- Sealing of control unit cover and cable entries
- Condition of all wiring and junction boxes
- Function of all controls – transmitters, loop and intercoms
- Security and effectiveness of all earth connections
- Test earth fault loop resistance and RCD function
- Reassess and check the ongoing validity of the hazard assessment

Performance tests:

Force Test (Not a legal requirement but advisory)

Check that the manual release is working

Ensure that the gate is running smoothly

Check Flashing Beacon is working

Handover Check list

The following items have been explained to the client: [tick] ✓

- How to operate the gate.
- How to isolate the power to the gate.
- How to manually release the gate.
- How the safety features of the gate work.
- How to avoid any residual hazards associated with the gate.
- How to use the activation devices.
- How to change the batteries on remotes etc.
- How to change the keypad pin code.
- How and when to perform the required safety checks.
- Other [insert]

The following items have been passed to the client.

- Manual release instructions.
- Intercom user manual.
- Declaration of Conformity.
- User warnings and residual hazard identification.
- Planned Preventative Maintenance instructions.
- Maintenance log.
- Other [*insert*]

Installer Name:

Date:

Signature:

Client Name:

Date:

Signature:

Address:


Tel:

Email:

Web:

Component list

Drive unit: **PFL Tornado Gate Drive 3 Phase /550Watts /60Nm Torque /58 RPM /2.3A Nominal Current /25mm Axle**

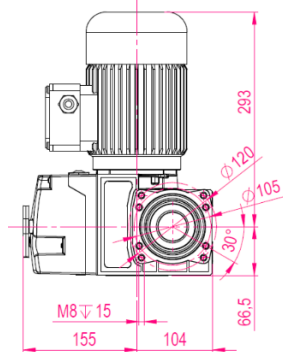

Control panel: **Feig TST FUZ 2 B**



Photo beams: **Witt Argos-T/ Argos-R TX & RX Through Beam**



Safe edge: **Mayser SP57 Profile C30 Aluminium Rail**

Safe edge controller: **ASO ISK 71-242 Controller/Full Indus Rail Kit**



Encoder: **Feig TST PD-ME-B**



Drive Rack: **PF9-Rack**



Address:

Tel:

Email:

Web:

Maintenance log

| | | | |
|----------|--|-----------|-----------|
| Date | | Work done | Company |
| PPM | | | Name |
| Reactive | | | Signature |

| | | | |
|----------|--|-----------|-----------|
| Date | | Work done | Company |
| PPM | | | Name |
| Reactive | | | Signature |

| | | | |
|----------|--|-----------|-----------|
| Date | | Work done | Company |
| PPM | | | Name |
| Reactive | | | Signature |

| | | | |
|----------|--|-----------|-----------|
| Date | | Work done | Company |
| PPM | | | Name |
| Reactive | | | Signature |

| | | | |
|----------|--|-----------|-----------|
| Date | | Work done | Company |
| PPM | | | Name |
| Reactive | | | Signature |

| | | | |
|----------|--|-----------|-----------|
| Date | | Work done | Company |
| PPM | | | Name |
| Reactive | | | Signature |

| | | | |
|----------|--|-----------|-----------|
| Date | | Work done | Company |
| PPM | | | Name |
| Reactive | | | Signature |

Address:

Tel:

Email:

Web:

Declaration Of Conformity

[Insert Trade Partner Name Here]

We hereby declare that the products described below:

9000A Automatic Sliding gate

are in conformity with the essential requirements of the Machinery Directive 2006/42/EC.

In addition, the partly completed machinery is in conformity with the Construction Products Directive 89/106/EC, the Electromagnetic Compatibility Directive 2004/108/EC and the Low Voltage Directive 2006/95/EC.

The following standards were applied:

| | |
|---------------------|--|
| EN 12453:2001 | Safety in use of power operated gates - Requirements |
| EN 12445:2001 | Safety in use of power operated gates - Test methods |
| EN 60335-1:2012 | Household and similar electrical appliances – Safety |
| EN 60335-2-103:2003 | Household and similar electrical appliances – Safety |
| EN 61000-6-1:2007 | Electromagnetic compatibility (EMC) - Part 6-1 |
| EN 61000-6-2:2006 | Electromagnetic compatibility (EMC) - Part 6-2 |
| EN 61000-6-3:2011 | Electromagnetic compatibility (EMC) - Part 6-3 |
| EN 61000-6-4:2011 | Electromagnetic compatibility (EMC) - Part 6-4 |

The relevant technical documentation is compiled in accordance with Annex VII(B) of the Machinery Directive 2006/42/EC. We undertake to transmit, in response to a reasoned request by the market surveillance authorities, this documentation in electronic form within a reasonable period of time.

Person authorised to compile the relevant technical documentation:

PFL, Unit One, Kingsbury Link, Tamworth, Staffs, B78 2EX

The machinery is incomplete and must not be put into service until the machinery into which the partly completed machinery is to be incorporated has been declared in conformity with the provisions of the Machinery Directive 2006/42/EC.

Place / Date:

Tamworth, 10/09/2018


Manufacturer's signature: *Damian Speer*

Position of signatory: **Technical Manager**



Engineers Section (Not For End Users)

Control Panel Overview

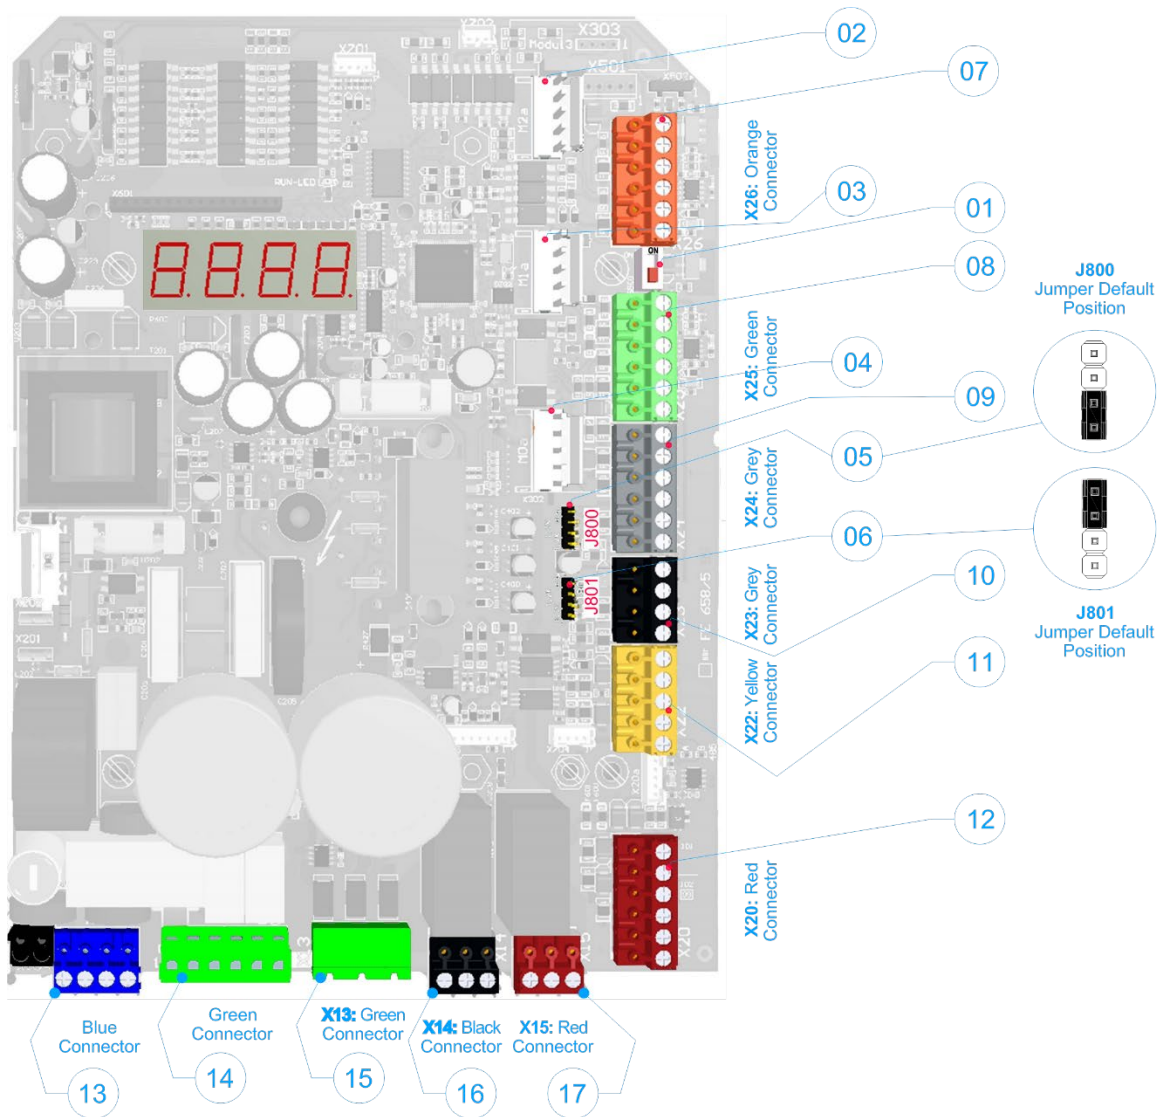

WARNING!

Ensure power to the control panel is removed & power fully discharged, prior to maintenance.

| Key | Description | Key | Description |
|-----|---|-----|---|
| 01 | S500 - Turn on to access parameters | 10 | X23 - External pushbutton station connector |
| 02 | M2a - Radio card / aux relay plug | 11 | X22 - Safety Edge / E-Stop 1 connector |
| 03 | M1a - Loop card / aux safety card plug | 12 | X20 - Electronic limits / E-Stop 2 connector |
| 04 | M0a - Common plug for radio/loop/safety | 13 | Aux 230Vac connector (Fused - suitable for brake) |
| 05 | J800 - 8.2K / 1.2K safety edge selector | 14 | PE / Earth connector |
| 06 | J801 - Input mode select (default dig) | 15 | X13 - 3ph Motor connector |
| 07 | X26 - Aux limits / Aux input connector | 16 | X14 - Programmable Relay K1 |
| 08 | X25 - Photocell / Impulse connector | 17 | X15 - Programmable Relay K2 |
| 09 | X24 - Mechanical Limits / Aux inputs | | |

Standard Parameters

| Parameter Display | Adj. Range | Parameter Function | Factory Setting |
|---|-----------------|---|-----------------|
| Gate Functions | | | |
| P.000 | | Cycle Counter Counts Full Open & Close cycles | 0000 |
| P.005 | | Cycle Maintenance Counter Displays number of gate cycles before maintenance is required (If set) | 0000 |
| P.010 | [S] 0..200 | Auto Close Time (Full Open) 0 :Switched Off | 10 |
| P.011 | [S] 0..200 | Auto Close Time (Part Open) 0 :Switched Off | 10 |
| Motor Parameters | | | |
| P.100 | [Hz] 30..200 | Motor Frequency Ensure this is set to same value as stated on the Operator Rating Plate (Normally 50Hz) | 50/87 |
| P.101 | [A] 0..9.9 | Motor Current Set this to the value stated on the Operator Rating Plate for a 230VAC Delta connection | 50 |
| P.102 | [%] 40..100 | Power Factor Ensure this is set to same value as stated on the Operator Rating Plate | 70/74 |
| P.103 | [V] 100..500 | Motor Rated Voltage Caution! Check Star/Delta Configuration! Ensure this is set to same value as stated on the Operator Rating Plate | 230 |
| Torque Parameters | | | |
| P.140 | [%] 0..30 | Torque Boost when Opening Voltage increase in the lower speed range (Set to 15 max.) | 10 |
| P.142 | 0..15 Hz | Sets the amount of I x R compensation for the Open direction | 15 |
| P.145 | [%] 0..30 | Torque Boost when Closing Voltage increase in the lower speed range (Set to 15 max.) | 5 |
| P.147 | 0..15 Hz | Sets the amount of I x R compensation for the Close direction | 0 |
| Brake Parameters | | | |
| P.180 | [Hz] 0..20 | Frequency below which the brake is de-energised when reducing speed Parameter P.999 must be set to 3 to access this parameter | 10 |
| P.185 | [Hz] 0..20 | Frequency, which has to be exceeded, in order to energise the brake Parameter P.999 must be set to 3 to access this parameter | 7 |
| P.189 | [Hz] 0..50 | Torque Boost that is active only below the frequency set by P.185 (Start Boost) Parameter P.999 must be set to 3 to access this parameter | 15 |
| Limit Switch Selection | | | |
| P.200 | 0..8 | 0 :Mechanical limit switches 3 :Absolute encoder DES-A using 19200 baud communication speed 4 :Absolute encoder DES-A using 9600 baud communication speed 7 :Absolute encoder DES-B (Kostal) 8 :TST-PD (Parameter P.205 must be set first) Parameter P.999 must be set to 3 to access this parameter | 0/7/8 |
| P.205 | 0..8 | Sets the type of limits:- 0000 :Mechanical limit switches - End of travel limits are N/C , Intermediate limits are N/O 0001 :Mechanical limit switches - All limits are processed as N/C 0300 : Absolute encoder DES-A using 19200 baud communication speed 0700 : Absolute encoder DES-B (Kostal) 0800 : Feig TST-PD Encoder 0900 : Feig VIRTUAL Encoder using MECHANICAL limits | 0/7/8 |
| Programming the End Positions with Electronic Limit Switches | | | |
| P.210 | 0..5 | Selecting the position to be calibrated in Deadman/Jog mode operation ("Teach In"):- 0 :no None/Abort 5 :Eu Close & Fully Open limit switch positions Note:- All limits are taught | 0 |
| Correcting the End Positions with Electronic Limit Switches | | | |
| P.221 | [Ink] ±125 | Correction value for the Close end position Reduce value to increase travel (Set to 0 in case of new calibration!) | 0 |
| P.231 | [Ink] ±60 | Correction value for the Open end position Reduce value to increase travel (Set to 0 in case of new calibration!) | 0 |

Standard Parameters (Continued from page 9)

| Parameter Display | Adj. Range | Parameter Function | Factory Setting |
|--|--------------------|---|-----------------|
| Speed Parameters | | | |
| P.310 | [Hz] 6..200 | Frequency for automatic opening speed Operating frequency until Open pre-limit switch position - Adjust pre-limit switch, if necessary | 45 |
| P.350 | [Hz] 6..200 | Frequency for automatic closing speed Operating frequency until Close pre-limit switch position - Adjust pre-limit switch, if necessary | 45 |
| P.390 | [Hz] 6..100 | Frequency for Deadman/Jog mode Opening speed Parameter P.999 must be set to 3 to access this parameter | 20 |
| P.395 | [Hz] 6..100 | Frequency for Deadman/Jog mode Closing speed Parameter P.999 must be set to 3 to access this parameter | 20 |
| Run Timer Parameters | | | |
| P.410 | E[s] 0..9900 | Opening Run Timer 0 :Switched Off Parameter P.999 must be set to 3 to access this parameter | 15/80 |
| P.415 | [s] 0..9900 | Closing Run Timer 0 :Switched Off Parameter P.999 must be set to 3 to access this parameter | 15/80 |
| P.419 | [s] 0..9900 | Deadman/Jog mode Run Timer 0 :Switched Off Parameter P.999 must be set to 3 to access this parameter | 60 |
| Mechanical Limit Switch Parameters Only | | | |
| P.430 | [s] 0..5.0 | Lag error when using mechanical limit switches - Specifies the time for the motor to move off the limit | 2 |
| Electronic Limit Switch Parameters Only | | | |
| P.440 | [Ink] -60..999 | Position for safety edge pre-close limit switch position Reduce value to increase travel | 10 |
| P.450 | [s] 0.25..3.0 | Lag error when using electronic limits | 2 |
| P.481 | 0..4 | 0 :No deactivation of photocell 2 :Deactivation of photocell after reaching pre-limit 3 :Deactivation of photocell after reaching position set below (P.4b3) | 0 |
| P.483 | 0..9999 | Position to deactivate photocells Note:- 0 is fully closed | 0 |
| Safety Edge Parameters | | | |
| P.460 | 0..6 | Safety Edge Evaluation (SL) - Evaluation must have once recognised correct termination resistance -1 :Automatic recognition of the safety edge 0 :OFF - Only possible when no terminating resistance is fitted 1 :ON - N/O 8K2 system (e.g. Electric Edge) 2 :ON - N/C 8K2 system (e.g. Pneumatic Edge) 3 :ON with self testing - N/O 8K2 system (e.g. Tests edge on each closing) 4 :ON with self testing - N/C 8K2 system (e.g. Tests edge on each closing) 5 :Dynamic Optical System (OSE) 6 :Auto Detect Parameter P.999 must be set to 3 to access this parameter | 5 |
| P.461 | [cnt] 0..5 | Maximum number of activations of the Safety Edge 0 :OFF - Unlimited number of activations allowed (preferred setting if using a light curtain as safety edge) >0 :ON - Inverter will fail into 'Deadman' operation mode after a set number of activations Parameter P.999 must be set to 3 to access this parameter | 3 |
| P.462 | 0..2 | Function of the Safety Edge 0 :Stop on Safety Edge, Starting from below the Safety Edge Pre-Close Limit (P.440) 1 :Ignore Safety Edge, Starting from below the Safety Edge Pre-Close Limit (P.440) 2 :Ignore Safety Edge, Starting from Lower Limit Switch Parameter P.999 must be set to 3 to access this parameter | 0 |
| Input Profiles ('x' refers to input number) | | | |
| P.501 to P.504 | 0000 to 3201 | Function of Input 0101 : Open command (N/O) - open to fully open position with auto-close 0201 : Impulse command (N/O) - open to fully open position with auto-close, close on next command 0301 : Permanent / hold open command (N/O) - open to either open position without auto-close 0401 : Stop command (N/C) - stop in any direction and wait for another command 0501 : Photocell command (N/C) - safety B reversing when closing, to previous open position 0601 : Auto-Manual select (N/O) - change between Auto (impulse) and Manual (deadman) control 0701 : Close command (N/O) 0801 : Lock door closed (N/O) - lock the door fully closed, no deadman override possible (interlock) 0901 : Cross traffic suppression (N/O) - ignore open1 and detector1 commands 1001 : Auto-close ON/OFF (N/O) - disables the auto-close 1101 : Photocell override limit (N/O) - limit switch to disable the photocell Example - To use terminals 72 & 73 (Input 4) as an additional photocell, set P.504 to 0501 | |

Standard Parameters (Continued from page 10)

| Parameter Display | Adj. Range | Parameter Function | Factory Setting | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|--|---------------------------|----------------|----------------------|----------------------|----------------------|---|---|---|------------------|------|-------|------|-------|------|-------|------|-------------------|----------------|----------------|----------------|----------------|----------------------|----------------------|----------------------|---|
| Relay Output Parameters | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P.701 (Relay K1) & P.702 (Relay K2) | | Output profile examples:- 0000 :Relay deactivated 0101 :Door is in the upper end position (Open) 0201 :Door is in the lower end position (Closed) 0501 :Courtesy Light: On during every Open & Close move with 10 seconds switch off delay 0801 :On during every Open & Close move and clearance time/pre-warning time 1220 :Red traffic light on outside of door 1221 :Flashing red traffic light on outside of door 1210 :Green traffic light on outside of door 3201 :Brake relay | 0101 & 3201 | | | | | | | | | | | | | | | | | | | | | | | | |
| TST-RFUXK-A Expansion Board | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P.800 | 0..5 | Activates the TST-RFUXK Expansion Board:- 0 :Board deactivated 5 :Board activated | 0 | | | | | | | | | | | | | | | | | | | | | | | | |
| P.802 | | Plug-In Options 0202 - Radio Receiver 0302 - Loop Detector (TST-SUVEK-1, TST-SUVEK-2) 0101 - 1-Channel Safety Edge Card (TST-SURA-1) 0106 - 6-Channel Safety Edge Card (TST-SURA-6) | 0106 | | | | | | | | | | | | | | | | | | | | | | | | |
| Diagnostic Parameters | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P.910 | 0..13 | Selection of Display Mode 0 - Au :Control sequence (Automatic) 1 - F :[Hz] Present motor frequency 2 - i :[A] Present motor current (> 1A) 3 - u :[V] Present motor voltage 4 - i :[A] Intermediate circuit (DC bus) current 5 - U :[V] Intermediate circuit (DC bus) voltage 6 - c :[°C] Temperature of output transformer 7 - C :[°C] Temperature of brake resistor 8 - L :[100ms] Latest running time Note:- Only useful for electronic limit switch 9 - P :[Ink] Present position course 10 - r :[Ink] Present reference position 11 - K1 :[dig] Present Channel 1 value of PBA absolute encoder 12 - K2 :[dig] Present Channel 2 value of PBA absolute encoder 13 - b :[dig] Present reference Voltage (2.5V) | 0 | | | | | | | | | | | | | | | | | | | | | | | | |
| P.920 | EB1 EB2 EB3 EB4 EBCL EB- | Display of error memory/failures - Access by pressing the Membrane Stop - Change over by pressing Membrane Open & Close - Closing by pressing Membrane Stop - Exit by abortion "Eb-" Eb1 - Eb8 :Error messages Ebcl :Delete the complete Error Memory Eb- :Abortion noEr :No errors | | | | | | | | | | | | | | | | | | | | | | | | | |
| P.940 | [V] | Displays present supply voltage | - | | | | | | | | | | | | | | | | | | | | | | | | |
| Operating Modes | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P.980 | 0..2 | Extended Service Mode 0 - Au :Fully automatic (Impulse, Opening & Closing) 1 - Hc :Deadman/Jog mode closing (Manual Closing/Automatic Opening) 2 - Hd :Deadman/Jog mode (Manual Opening & Closing) | 0/2 | | | | | | | | | | | | | | | | | | | | | | | | |
| Parameter Adjustment Modes | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P.990 | 0..1 | Factory setting reset: Reset (1)/Abort (0) !!!! Warning - Think !!!! Parameter P.999 must be set to 3 to access this parameter | 0 | | | | | | | | | | | | | | | | | | | | | | | | |
| P.991 | 0..12 | Door Profile Settings:- <table border="1" style="width: 100%; border-collapse: collapse; margin: 5px 0;"> <thead> <tr> <th style="width: 10%;">Profile No.</th> <th style="width: 10%;">1</th> <th style="width: 10%;">2</th> <th style="width: 10%;">3</th> <th style="width: 10%;">4</th> <th style="width: 10%;">5</th> <th style="width: 10%;">6</th> <th style="width: 10%;">7</th> </tr> </thead> <tbody> <tr> <td>Frequency</td> <td>50Hz</td> <td>100Hz</td> <td>50Hz</td> <td>100Hz</td> <td>50Hz</td> <td>100Hz</td> <td>50Hz</td> </tr> <tr> <td>Limit Type</td> <td>Kostal Encoder</td> <td>Kostal Encoder</td> <td>TST-PD Encoder</td> <td>TST-PD Encoder</td> <td>Mechanical Limit Sw.</td> <td>Mechanical Limit Sw.</td> <td>Mechanical Limit Sw.</td> </tr> </tbody> </table> Note:- Profile 7 is designed for single speed doors with just Open & Close mechanical limits. This is suitable when using an inverter for battery back-up, i.e single speed car park shutters | Profile No. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | Frequency | 50Hz | 100Hz | 50Hz | 100Hz | 50Hz | 100Hz | 50Hz | Limit Type | Kostal Encoder | Kostal Encoder | TST-PD Encoder | TST-PD Encoder | Mechanical Limit Sw. | Mechanical Limit Sw. | Mechanical Limit Sw. | - |
| Profile No. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | | | | | | | | | | | | | | | | | | | | |
| Frequency | 50Hz | 100Hz | 50Hz | 100Hz | 50Hz | 100Hz | 50Hz | | | | | | | | | | | | | | | | | | | | |
| Limit Type | Kostal Encoder | Kostal Encoder | TST-PD Encoder | TST-PD Encoder | Mechanical Limit Sw. | Mechanical Limit Sw. | Mechanical Limit Sw. | | | | | | | | | | | | | | | | | | | | |
| P.999 | 1..3 | Selection of Parameterisation Mode (Reset after switching off) You may... 1:- Change customer and initiation parameters 2:- Read all parameters and change the initiation parameters only 3:- Read and change all parameters (extended parameterisation mode) | 1 | | | | | | | | | | | | | | | | | | | | | | | | |

Display Messages & Fault Codes

| General Messages | |
|------------------|---|
| STOP | Stop/Reset condition, wait for the next command |
| _EU_ | Fully closed position |
| =EU= | Fully closed position has been locked - Opening mode impossible (e.g. air locked) |
| CLO | Active closing |
| EQ | Fully open position |
| =EO= | Fully open position has been locked - Closing mode is impossible (e.g. safety loop) |
| OP | Active opening |
| -E- | Part open (intermediate stop position) |
| =E = | Part open is locked - Closing mode is impossible (e.g. safety loop) |
| FAIL | Failure - Only Deadman operation is possible, eventually automatic opening |
| CALL | Calibration - Limit position adjustment during deadman (for TST-PD encoder) - Start operation with stop button |
| ES | Emergency shutdown - Operation impossible, hardware safety chain is interrupted - check emergency stop circuits |
| HDSR | Emergency service - Deadman operation without considering safety etc. |
| HD | Manual operation - Deadman operation |
| PARR | Parameterization |
| SYNC | Synchronization (incremental position transmitter/limit switch - position unknown) |
| RU | Automatic - Indicates change from "Manual Operation" to "Automatic" |
| HC | Semi-automatic - Indicates change of condition from "Manual Operation" to "Semi-Automatic" |
| FUS | First display after switch on (Power Up & Self Test) |

| Status Message during Calibration (TST-PD Only) | |
|---|---|
| E.I.E.C. | Calibration of close limit is requested (in Deadman) |
| E.I.E.O. | Calibration of open limit is requested (in Deadman) |
| E.I.E.I. | Calibration of Intermediate Stop position E1 (in Deadman) |

| Status Message during Synchronization | |
|---------------------------------------|---|
| S.Y.E.U. | Synchronisation of close limit is requested (Deadman or wait for start conditions) |
| S.Y.E.O. | Synchronisation of open limit is requested (Deadman or wait for start conditions) |
| S.Y.E.I. | Synchronisation of intermediate Stop position E1 (in Deadman) |
| S.Y.OP | Automatic opening up to mechanical limit stop, then auto-synchronisation of open limit |
| S.Y.CL | Automatic closing down to mechanical limit stop, observing safety devices, then auto-synchronisation of close limit |
| S.Y.C= | Automatic closing is locked, cause is indicated upon request |

| Status Message during Deadman Service | |
|---------------------------------------|--|
| HD.CL | Deadman closing (membrane button: Closed) |
| HD.OP | Deadman opening (membrane button: Open) |
| HD.EC | Close limit has been reached, no further Deadman closing possible |
| HD.EO | Open limit has been reached, no further Deadman opening possible |
| HD.RO | Has exceeded the permitted Eo- position (Deadman opening impossible) |

| Information Messages during Automatic Operation | |
|---|--|
| I.100 | Too much speed when open limit is reached |
| I.150 | Too much speed when close limit is reached |
| I.160 | Permanent open is still active |
| I.199 | Door cycle counter is not plausible (Re-Initialise □ parameters) |
| I.200 | Reference position has been recognised & taken over (for the first time) |
| I.201 | Reference position is deleted, ready for new take over |
| I.205 | Synchronisation of current limit position |

| Expiration of Delay Times | |
|---------------------------|--|
| r.xxx | Expiration of clearance phase before automatic closing resp. opening |
| T.xxx | Expiration of keep open time (auto close) |

Display Messages & Fault Codes

| General Door Status | |
|---------------------|--|
| F.000 | Door position is too high (above open limit) |
| F.005 | Door position is too low (below close limit) |
| F.020 | Run Timer has been exceeded (during Opening, Closing or Deadman) - see P.410, P.415, P.419 |
| F.030 | Lag Error (door has not moved off limit - motor stalled) |
| F.031 | Detected rotation direction deviates from expected direction of rotation |
| F.043 | Failure of pre-limit switch for the photocell |

| Safety/Emergency Stop Chain | | |
|-----------------------------|--|--------------------|
| F.201 | Internal Emergency Stop or Watchdog (μ Processor safety check) is triggered | |
| F.211 | External Emergency Stop 1 is triggered (Terminals 41 & 42) | |
| F.212 | External Emergency Stop 2 is triggered (Terminals 31 & 32) | |
| F.360 | Short circuit / activation of safety edge | Internal Evaluator |
| F.361 | Number of safety edge activations exceeded - see P.461 | |
| F.362 | Redundancy error for safety edge self-check (short circuit) | |
| F.363 | Safety edge is open circuit (broken cable etc) | |
| F.364 | Safety edge testing in closed position failed | |
| F.365 | Redundancy error for safety edge self-check (open circuit) | |

| General Hardware Failures/Errors | |
|----------------------------------|--|
| F.410 | Excess current (motor current or FU- overall current) - check motor parameters / mains supply voltage is stable under load |
| F.420 | Excess voltage in DC-bus circuit - check mains supply voltage is not too high / motor is regenerating |
| F.425 | Excess line voltage (mains supply voltage is >256VAC for more than 10 secs) |
| F.430 | Excess temperature of heatsink |
| F.440 | Excess DC current - check mains supply is stable under load / motor is overloaded / mechanical door problem |
| F.510 | Over current - check motor parameters |
| F.515 | Motor protection has detected excess current |
| F.519 | IGBT driver component has detected excess current - check for short circuit / earth fault on motor & motor cables |
| F.520 | Excess voltage in intermediate circuit - check mains supply voltage is not too high / motor is regenerating |
| F.521 | Under voltage in intermediate circuit - check mains supply voltage is not too low |
| F.524 | External 24V supply is missing (possibly short circuit) |
| F.525 | Excess line voltage (mains supply voltage is >256VAC for more than 10 secs) |
| F.530 | Over temperature of heat sink |
| F.540 | Over temperature of brake resistor |

| General Positioning | |
|---------------------|--|
| F.700 | Mechanical limit switch error - e.g. open & close limits activated simultaneously or intermediate limits are wired N/C |
| F.750 | Data transmission error |
| F.751 | Synchronization FUE <_> Absolute encoders |
| F.752 | Time out during data transmission - No communication with encoder - check encoder cables / encoder parameter P.200 |
| F.760 | Position out of usable range |
| F.761 | Distance channel <_> channel 2 out of allowed range |
| F.762 | Electronic end switch positions are incorrect |

| Internal Systematic Errors | | | |
|----------------------------|---|-------|--|
| F.920 | Internal 2.5V supply is defective | F.960 | Parameter check sum |
| F.921 | Internal 15V supply is defective | F.961 | Checksum via calibration values |
| F.922 | Incomplete Emergency Stop chain | F.962 | Converter parameter not plausible |
| F.930 | External watchdog error / noise saturated environment | F.963 | Ramp parameter not plausible |
| F.931 | ROM error | F.964 | New software fitted / not initialised (factory default P.990 -1) |
| F.932 | RAM error | F.970 | Parameter processing is disturbed |


Display Messages & Fault Codes

| General Inputs | | | |
|--|---|-----------|-------|
| E.000 | Open button on membrane keypad | | |
| E.050 | Stop button on membrane keypad | | |
| E.090 | Close button on membrane keypad | | |
| Standard Configuration (Mechanical limits / Encoder) | | Parameter | Value |
| E.101 | Input 1: Stop command | P.501 | 0401 |
| E.102 | Input 2: Open command | P.502 | 0101 |
| E.103 | Input 3: Close command | P.503 | 0201 |
| E.104 | Input 4: Deadman Open | P.504 | 1501 |
| E.105 | Input 5: Deadman Close | P.505 | 1502 |
| E.106 | Input 6: Photocell Inside | P.506 | 0501 |
| E.107 | Input 7: Photocell Outside | P.507 | 0501 |
| E.108 | Input 8: Pedestrian Open | P.508 | 0102 |
| E.109 | Input 9: Pull Switch Command (one button to open/close) | P.509 | 0211 |
| E.110 | Input 10: Safety Edge Opening | P.50A | 1612 |
| Wireless Plug-in Module | | | |
| E.401 | Radio Channel 1 | | |
| E.402 | Radio Channel 2 | | |
| Induction Loop Evaluation Device: Plug-in Module | | | |
| E.501 | Loop Detector Channel 1 | | |
| E.502 | Loop Detector Channel 2 | | |
| Internal Inputs | | | |
| E.900 | Fault signal of triggering component | | |

Operation

The gate may be opened using the Open pushbutton input, panel mounted keypad button, exit loop or radio (if fitted). The gate will smoothly accelerate to fast speed until the intermediate limit is reached, at which point the gate will smoothly decelerate for the remainder of the travel distance. The gate may be closed using the Auto-Close function, the Close button input, panel mounted keypad button or radio. The gate will smoothly accelerate to full speed until the intermediate limit is reached, at which point the gate will decelerate for the remainder of the travel distance.

If a safety device is activated (i.e. safety edge or photocell) during the closing cycle the gate will stop & return to the fully open position. The gate may only be closed once the obstruction has been removed.

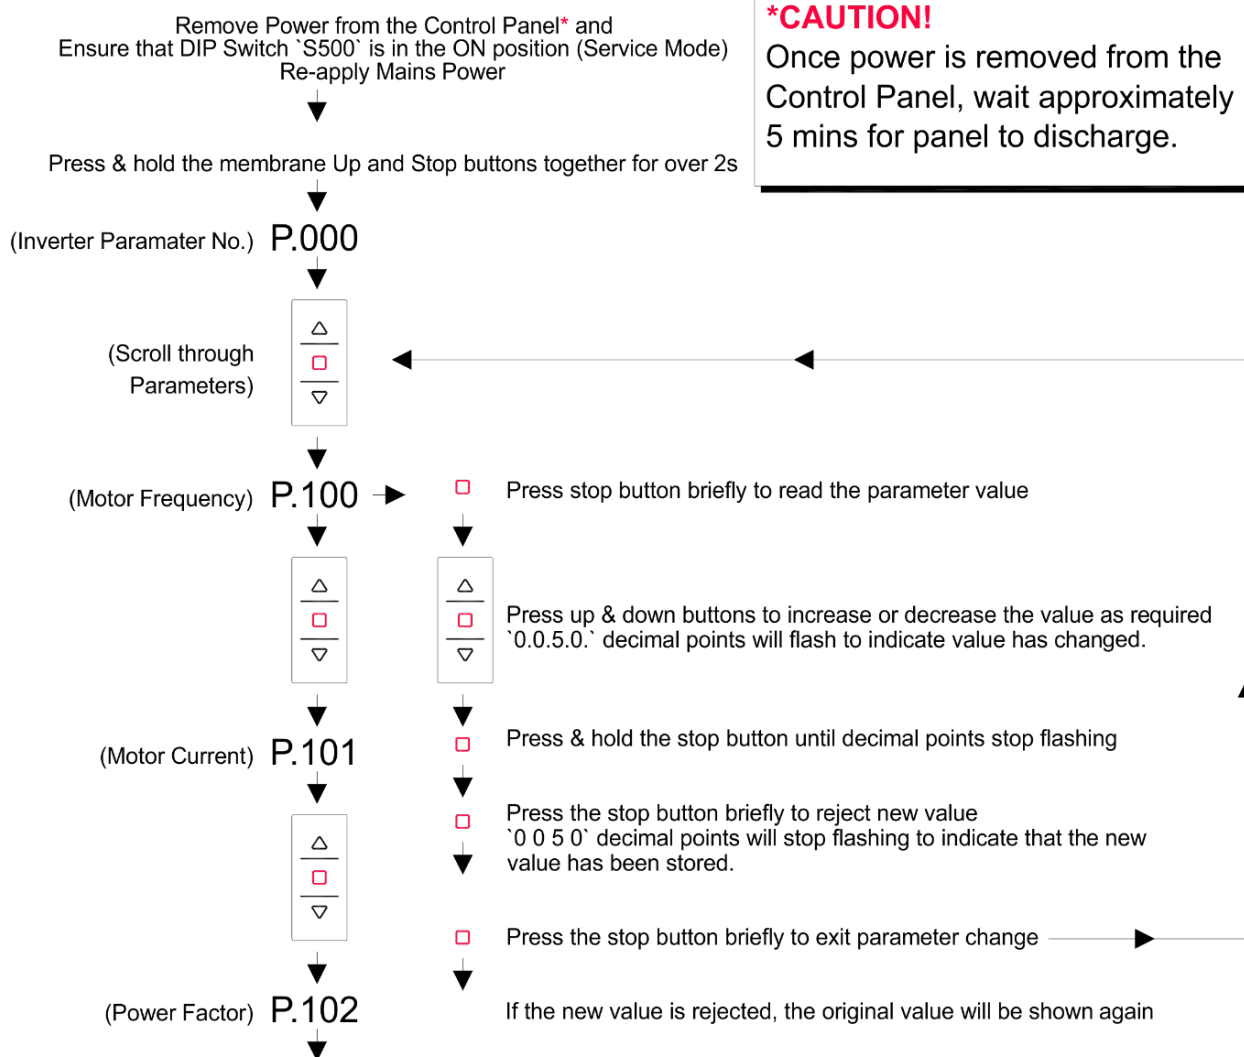


To exit the programming mode, Press & hold the stop button for more than 2s

If the gate set-up is complete, remove the Power from the Control Panel* and ensure that DIP Switch `S500` is in the OFF position (Automatic Mode) Re-apply Mains Power


Basic Setup Connections for Electronic Limits

Note:- If the motor travels in the wrong direction, then swap 'U' & 'V'

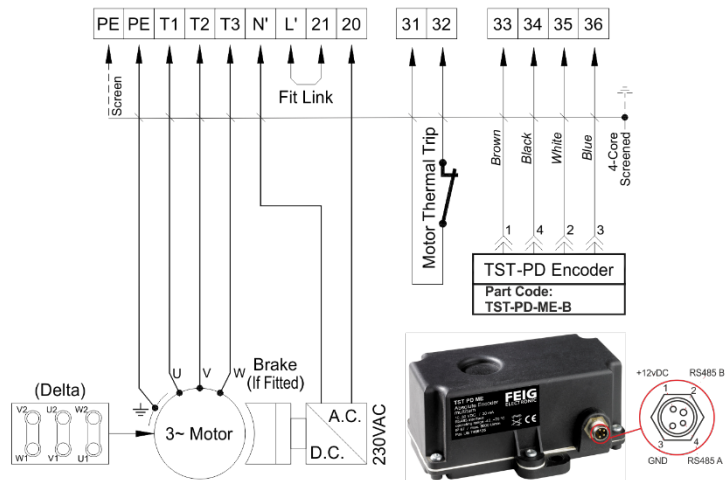

Jumper Settings:

Set the position of 'J800' to suit safety edge fitted

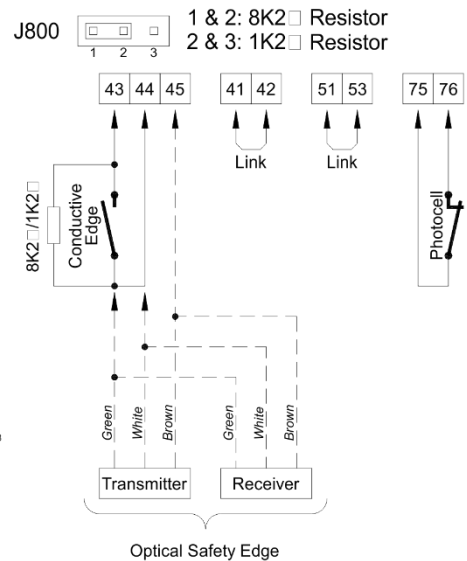

Initial System Setup Profile for Electronic Limits

01. Ensure that the power is OFF & switch S500 to the ON position (Up position)
02. Turn the power ON

Display will read:-

P991

03. Press the membrane Stop button briefly

Display will read:-

0000

04. Use the membrane Up / Down buttons to set a value for P.991 - gate Profiles from Table 4.1 above

Note:- Always select a profile suitable to your motor & limit arrangement, before proceeding

05. Press & hold the membrane Stop button until the decimal points stop flashing

Display will read:-

P.009 - PROGRAM PANEL DEFAULTS

After a few seconds, the display will return to normal (or show any faults, i.e. F.211 if no link is fitted in terminals 41 & 42)

06. Display will read:-

CAL1 - CALIBRATE / SET gate POSITIONS

To begin setting of the limits, press & hold the membrane Stop button until the display reads :-

E.E.E. - SET CLOSE LIMIT

07. Run the gate to the Close limit position.

Press & hold the membrane Stop button to store the Close limit position.

Display will read:-

E.E.0. - SET OPEN LIMIT

08. Run the gate to the Open limit position.

Press & hold the membrane Stop button to store the Open limit position.





gate limits are now programmed. The control panel will calibrate the required accel / decel ramps and slow down positions (indicated by I.XXX messages) when the gate is driven open & close for the first few times.




Calibration is complete when no more I.XXX messages are seen.

Table 4.1:



P.991 - Panel Profiles

| Motor Frequency Machine Type | Selected Value |
|---------------------------------|-------------------|
| Sliding Gate | 200 |
| Bi-Fold Gate (Master) | 300 |
| Bi-Fold Gate (Slave) | 301 |

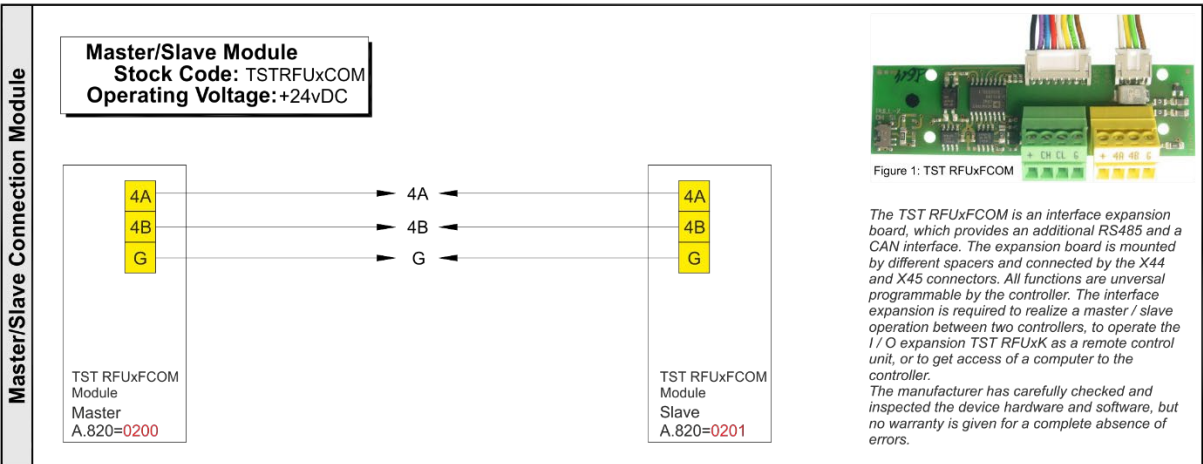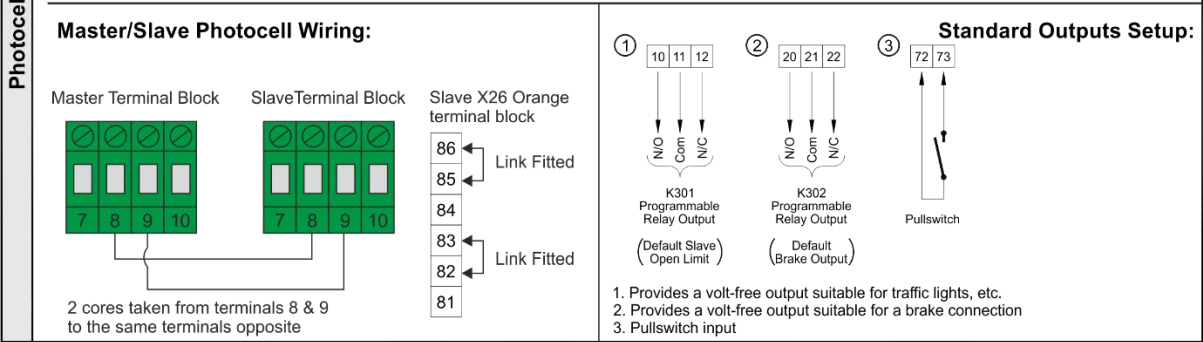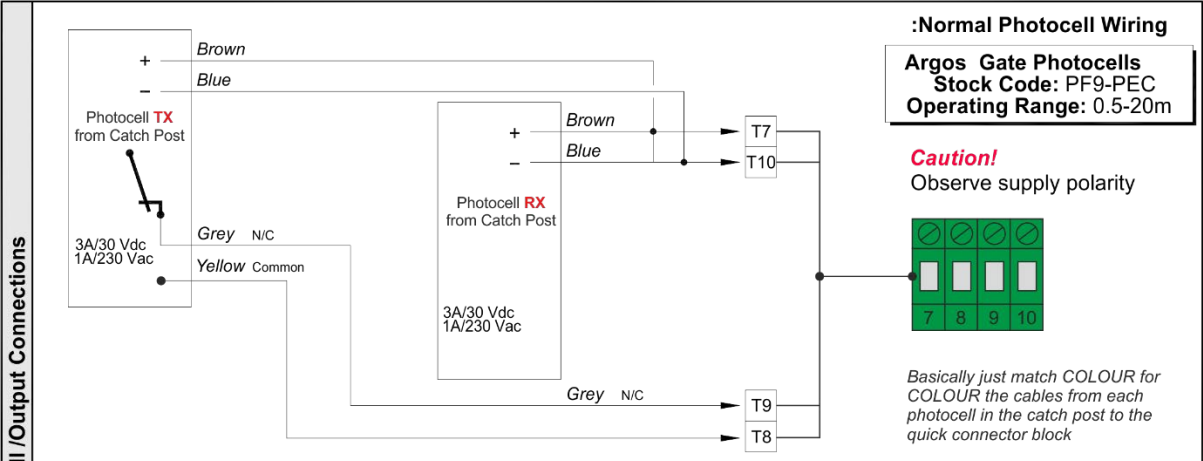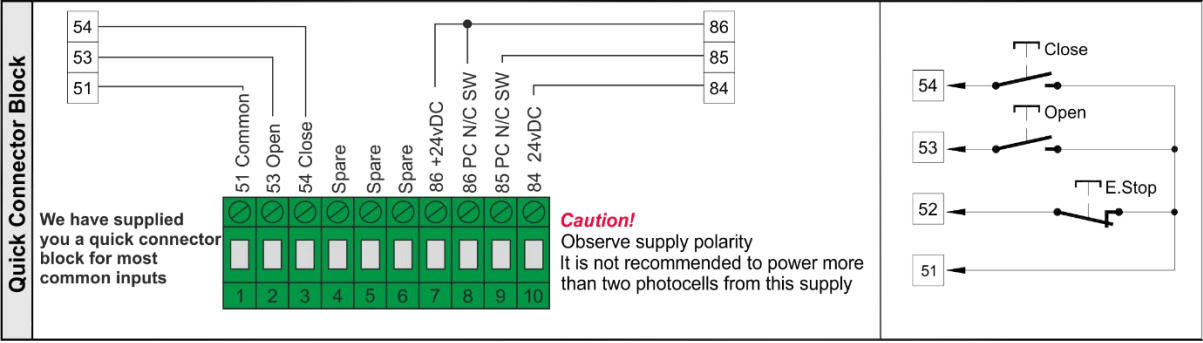

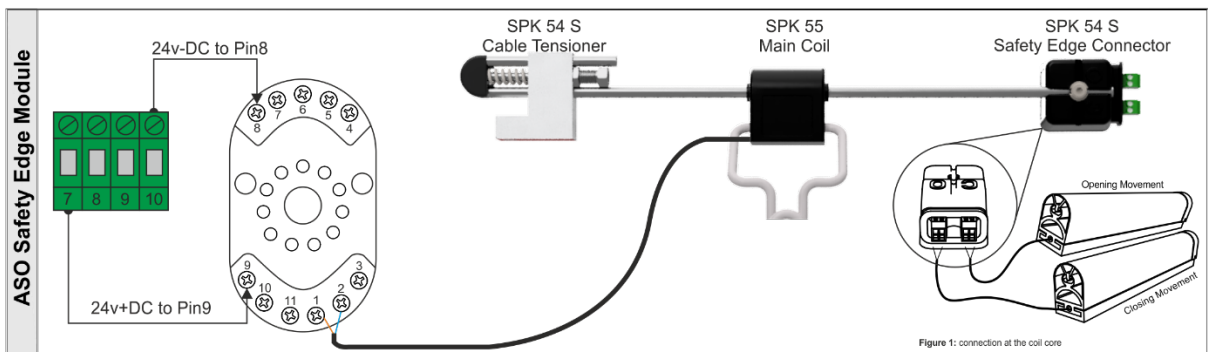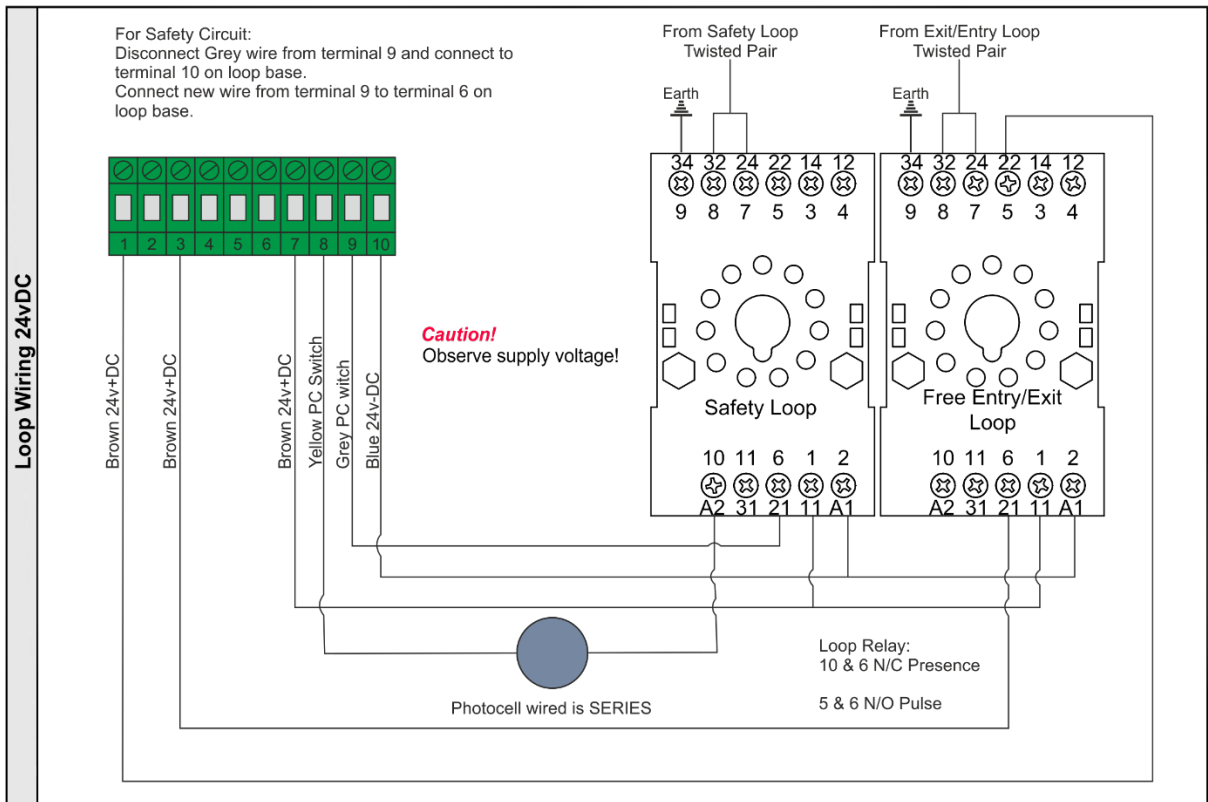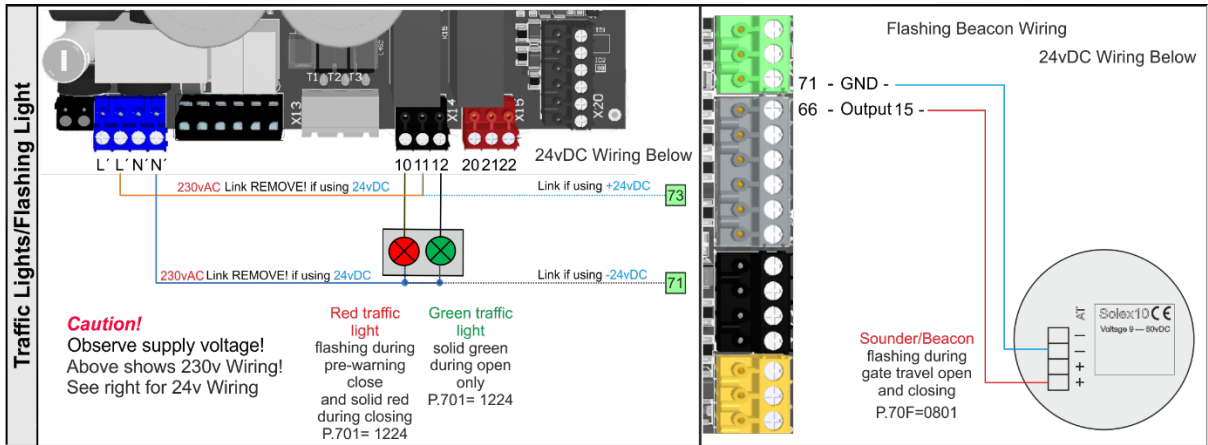

Option 2 is to be used unless custom setup is required

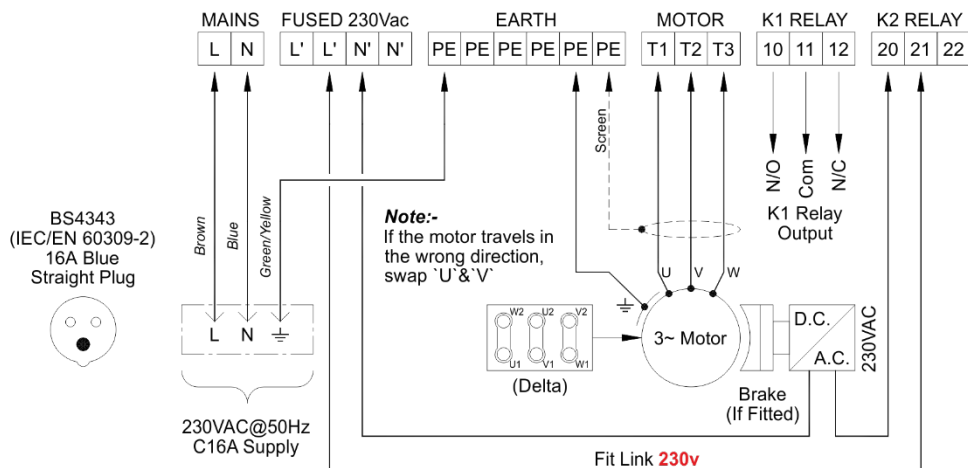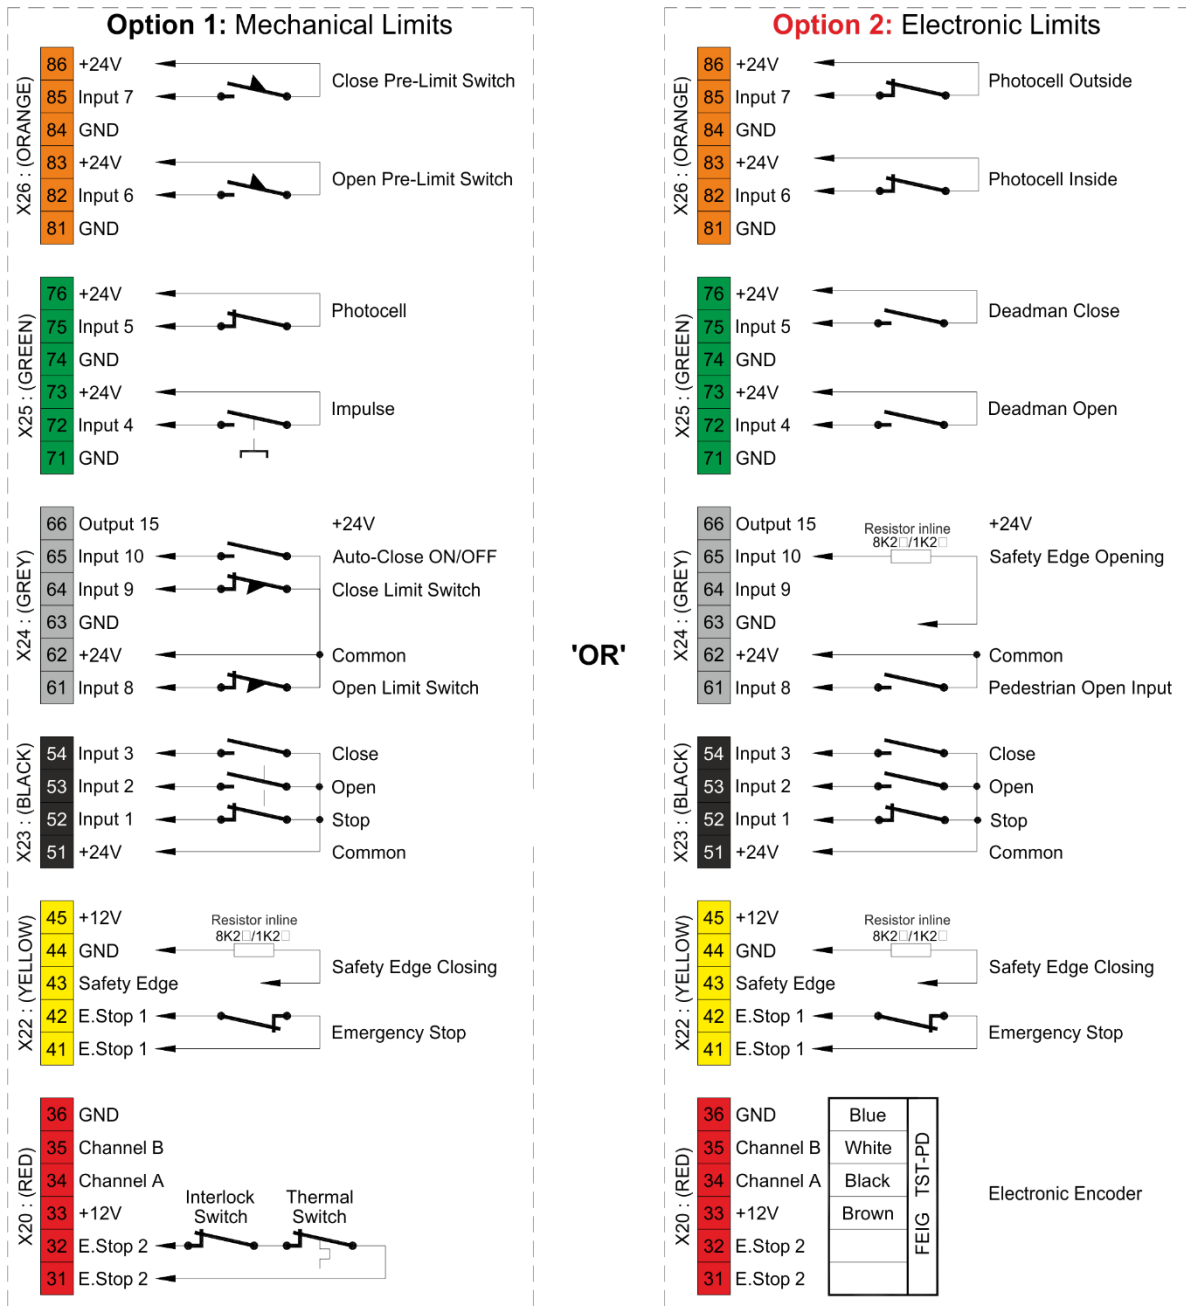

Address:

Tel:

Email:

Web: