# Leica BLK2GO



User Manual Version 1.3 English





#### Introduction

#### **Purchase**

Congratulations on the purchase of the Leica BLK2GO.



This manual contains important safety directions as well as instructions for setting up the product and operating it. Refer to 1 Safety Directions for further information.

Read carefully through the User Manual before you switch on the product.



The content of this document is subject to change without prior notice. Ensure that the product is used in accordance with the latest version of this document.

For updated version, contact your local agency or your Leica Geosystems authorised service centre.

#### **Product identification**

The model and serial number of your product are indicated on the type label. Always refer to this information when contacting your agency or Leica Geosystems authorised service centre.

#### **Trademarks**

Trademarks are the property of their respective owners.

#### Leica Geosystems address book

On the last page of this manual, you can find the address of Leica Geosystems headquarters. For a list of regional contacts, please visit http://leica-geosystems.com/contact-us/sales support.

# Available documentation

Name	Description/Format		PDF
Leica BLK2GO Quick Guide	Provides an overview of the instrument together with technical data and safety directions. Intended as a quick reference guide	<b>√</b>	✓
Leica BLK2GO User Manual	Provides all required instructions to operate the instrument to a basic level. Provides an overview of the instrument together with technical data and safety directions.	-	✓
Leica BLK2GO Tutorial videos	How-to videos explaining the basic workflow.	_	-

# Refer to the following resources for all BLK2GO documentation/software:

- · the Leica USB documentation card
- https://myworld.leica-geosystems.com

# **Table of Contents**

1	Safe	ty Directions	4
	1.1	General Introduction	4
	1.2	Definition of Use	5
	1.3	Limits of Use	5
	1.4	Responsibilities	6
	1.5	Hazards of Use	6
	1.6	Laser Classification	10
		1.6.1 General	10
		1.6.2 Scanning Laser	10
	1.7	Electromagnetic Compatibility (EMC)	11
2	Desc	cription of the System	14
	2.1	System Components	14
	2.2	Container Contents	14
	2.3	Instrument Components	15
3	User	· Interface	16
_	3.1	Power Button	16
	3.2	Instrument Status	17
4	Pow	er Supply	19
	4.1	Battery and Charger Safety	19
	4.2	Charging Station	19
	4.3	Battery	21
5	Ореі	ration	25
_	5.1	Operation - Getting Started	25
	5.2	Imaging	26
	5.3	Scanning	26
		5.3.1 Ambient Conditions	26
		5.3.2 Troubleshooting	27
		5.3.3 Field of View (FoV)	28
	5.4	Data Transfer	28
	5.5	Cooling System	28
6	Care	and Transport	30
	6.1	Maintenance	30
	6.2	Transport	30
	6.3	Storage	30
	6.4	Cleaning and Drying	30
	6.5	Dome Cleaning Procedure	31
	6.6	Filter Cleaning Procedure	32
7		nnical Data	35
	7.1	General Technical Data of the Product	35
	7.2	System Performance	35
	7.3	Laser System Performance	35
	7.4	Electrical Data	36
	7.5	Environmental Specifications	36
	7.6	Dimensions	37
	7.7	Weight	38
	7.8	Accessories	38
	7.9	Conformity to National Regulations	39
		7.9.1 Dangerous Goods Regulations	42
8	Soft	ware Licence Agreement/Warranty	43

**Table of Contents** 

# Safety Directions

# 1.1 General Introduction

#### Description

1

The following directions enable the person responsible for the product, and the person who actually uses the equipment, to anticipate and avoid operational hazards.

The person responsible for the product must ensure that all users understand these directions and adhere to them.

# About warning messages

Warning messages are an essential part of the safety concept of the instrument. They appear wherever hazards or hazardous situations can occur.

#### Warning messages...

- make the user alert about direct and indirect hazards concerning the use of the product.
- contain general rules of behaviour.

For the users' safety, all safety instructions and safety messages shall be strictly observed and followed! Therefore, the manual must always be available to all persons performing any tasks described here.

**DANGER**, **WARNING**, **CAUTION** and **NOTICE** are standardised signal words for identifying levels of hazards and risks related to personal injury and property damage. For your safety, it is important to read and fully understand the following table with the different signal words and their definitions! Supplementary safety information symbols may be placed within a warning message as well as supplementary text.

Туре	Description
<b>▲</b> DANGER	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
<b>≜</b> WARNING	Indicates a potentially hazardous situation or an unintended use which, if not avoided, could result in death or serious injury.
<b>≜</b> CAUTION	Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in minor or moderate injury.
NOTICE	Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in appreciable material, financial and environmental damage.
	Important paragraphs which must be adhered to in practice as they enable the product to be used in a technically correct and efficient manner.
·	

#### Additional symbols



Warning against flammable substances.



Warning against explosive material.



Product must not be opened or modified or tampered with.



Indicates the temperature limits at which the product may be stored, transported or used.

# 1.2

#### **Definition of Use**

#### Intended use

- Scanning objects
- Measuring horizontal and vertical angles
- Measuring distances
- Capturing and recording images
- Recording measurements
- Computing with software
- Remote control of product
- Data communication with external appliances

# Reasonably foreseeable misuse

- Use of the product without instructions
- Use outside of the intended use and limits
- Disabling of safety systems
- Removal of hazard notices
- Opening the product using tools, for example a screwdriver, unless this is permitted for certain functions
- Modification or conversion of the product
- Use after misappropriation
- Use of products with recognisable damage or defects
- Use with accessories from other manufacturers without the prior explicit approval of Leica Geosystems
- Inadequate safeguards at the working site
- Deliberate dazzling of third parties

#### 1.3

#### Limits of Use

#### **Environment**

Suitable for use in an atmosphere appropriate for permanent human habitation. Not suitable for use in aggressive or explosive environments.

# **WARNING**

Working in hazardous areas or close to electrical installations or similar situations

Life Risk.

#### **Precautions:**

► Local safety authorities and safety experts must be contacted by the person responsible for the product before working in such conditions.

THE STATE OF

The following advice is only valid for the AC/DC power supply and the battery charger.

#### **Environment**

Suitable for use in dry environments only and not under adverse conditions.



#### 1.4

# Responsibilities

# Manufacturer of the product

Leica Geosystems AG, CH-9435 Heerbrugg, hereinafter referred to as Leica Geosystems, is responsible for supplying the product, including the User Manual and original accessories, in a safe condition.

# Person responsible for the product

The person responsible for the product has the following duties:

- To understand the safety instructions on the product and the instructions in the User Manual
- To ensure that the product is used in accordance with the instructions
- To be familiar with local regulations relating to safety and accident prevention
- To stop operating the system and inform Leica Geosystems immediately if the product and the application become unsafe
- To ensure that the national laws, regulations and conditions for the operation of the products are respected

# 1.5 Hazards of Use

# **AWARNING**

#### Distraction or loss of attention

During dynamic applications there is a danger of accidents occurring if the user does not pay attention to the environmental conditions around, for example obstacles, excavations or traffic.

#### Precautions:

► The person responsible for the product must make all users fully aware of the existing dangers.

# **MARNING**

#### Inadequate securing of the working site

This can lead to dangerous situations, for example in traffic, on building sites and at industrial installations.

#### **Precautions:**

- ► Always ensure that the working site is adequately secured.
- Adhere to the regulations governing safety, accident prevention and road traffic.

### **A**CAUTION

#### Dropping the product

When being dropped, the product can cause personal injury and/or mechanical damage.

#### **Precautions:**

Secure the product when operating it.

### **A**CAUTION

#### Not properly secured accessories

If the accessories used with the product are not properly secured and the product is subjected to mechanical shock, for example blows or falling, the product may be damaged or people can sustain injury.

#### **Precautions:**

- When setting up the product, make sure that the accessories are correctly adapted, fitted, secured, and locked in position.
- Avoid subjecting the product to mechanical stress.

#### **NOTICE**

# Dropping, misusing, modifying, storing the product for long periods or transporting the product

Watch out for erroneous measurement results.

#### **Precautions:**

Periodically carry out test measurements, particularly after the product has been subjected to abnormal use and before and after important measurements.

#### NOTICE

#### Removal of battery during operation or shutdown

This can result in a file system error and data loss!



#### **Precautions:**

- Do NOT remove the battery during operation of the instrument, or during the shutdown procedure.
- Always switch off the instrument by pressing the On/Off key, and wait until the instrument has shutdown completely before removing the battery.

# **AWARNING**

#### Improperly repaired equipment

Risk of injuries to users and equipment destruction due to lack of repair knowledge.

#### Precautions:

 Only authorised Leica Geosystems Service Centres are entitled to repair these products.

# **WARNING**

#### Improper disposal

If the product is improperly disposed of, the following can happen:

- The product does include parts of Beryllium inside. Any modification of some internal parts can release Beryllium dust or fragments, creating a health hazard.
- If polymer parts are burnt, poisonous gases are produced which may impair health.
- If batteries are damaged or are heated strongly, they can explode and cause poisoning, burning, corrosion or environmental contamination.
- By disposing of the product irresponsibly you may enable unauthorised persons to use it in contravention of the regulations, exposing themselves and third parties to the risk of severe injury and rendering the environment liable to contamination.

#### **Precautions:**

•



The product must not be disposed with household waste. Dispose of the product appropriately in accordance with the national regulations in force in your country. Always prevent access to the product by unauthorised personnel.

Product-specific treatment and waste management information can be received from your Leica Geosystems distributor.

#### For the AC/DC power supply:

# **MARNING**

#### Electric shock due to use under wet and severe conditions

If unit becomes wet it may cause you to receive an electric shock.

#### **Precautions:**

- ▶ If the product becomes humid, it must not be used!
- Use the product only in dry environments, for example in buildings or vehicles.



Protect the product against humidity.

#### For the AC/DC power supply:

#### **!** WARNING

#### Unauthorised opening of the product

Either of the following actions may cause you to receive an electric shock:

- Touching live components
- Using the product after incorrect attempts were made to carry out repairs.

#### **Precautions:**

- Do not open the product!
- Only Leica Geosystems authorised service centres are entitled to repair these products.

# **MARNING**

#### Inappropriate mechanical influences to batteries

During the transport, shipping or disposal of batteries it is possible for inappropriate mechanical influences to constitute a fire hazard.

#### Precautions:

- Before shipping the product or disposing it, discharge the batteries by the product until they are flat.
- When transporting or shipping batteries, the person in charge of the product must ensure that the applicable national and international rules and regulations are observed.
- ► Before transportation or shipping, contact your local passenger or freight transport company.

### **AWARNING**

# Exposure of batteries to high mechanical stress, high ambient temperatures or immersion into fluids

This can cause leakage, fire or explosion of the batteries.

#### **Precautions:**

- Protect the batteries from mechanical influences and high ambient temperatures.
- Consider the product's IP class restrictions in chapter 7 Technical Data.
- Do not drop or immerse the product into fluids.

#### **MARNING**

#### Short circuit of battery terminals

If battery terminals are short circuited e.g. by coming in contact with jewellery, keys, metallised paper or other metals, the battery can overheat and cause injury or fire, for example by storing or transporting in pockets.

#### **Precautions:**

Make sure that the battery terminals do not come into contact with metallic/conductive objects.

### 1.6 Laser Classification

#### 1.6.1 General

#### General

The following chapters provide instructions and training information about laser safety according to international standard IEC 60825-1 (2014-05) and technical report IEC TR 60825-14 (2004-02). The information enables the person responsible for the product and the person who actually uses the equipment, to anticipate and avoid operational hazards.

[-3]

According to IEC TR 60825-14 (2004-02), products classified as laser class 1, class 2 and class 3R do not require:

- laser safety officer involvement
- protective clothes and eyewear
- special warning signs in the laser working area
   if used and operated as defined in this User Manual due to the low

if used and operated as defined in this User Manual due to the low eye hazard level.



National laws and local regulations could impose more stringent instructions for the safe use of lasers than IEC 60825-1 (2014-05) and IEC TR 60825-14 (2004-02).

# 1.6.2 Scanning Laser

#### General

The laser incorporated in the product produces an invisible beam which emerges from the rotating mirror.


The laser product described in this section is classified as laser class 1 in accordance with:

IEC 60825-1 (2014-05): "Safety of laser products"

These products are safe under reasonably foreseeable conditions of operation and are not harmful to the eyes provided that the products are used and maintained in accordance with this User Manual.

Description	Value
Wavelength	830 nm
Maximum pulse energy	9 nJ
Pulse duration	3 ns
Pulse repetition frequency (PRF)	1.64 MHz
Beam divergence (FWHM, full angle)	0.5 mrad
Mirror rotation	100 Hz
Base rotation	2.5 Hz

#### Labelling

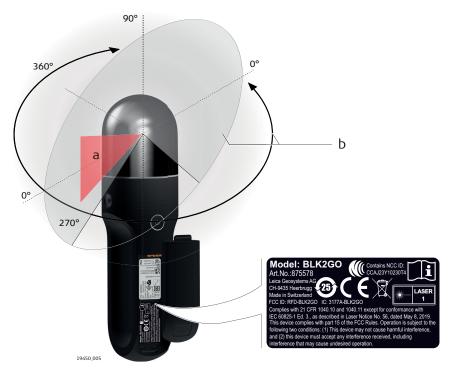

- a Location of laser beam
- b Sphere of scanning laser beam

# 1.7

# **Electromagnetic Compatibility (EMC)**

### Description

The term Electromagnetic Compatibility is taken to mean the capability of the product to function smoothly in an environment where electromagnetic radiation and electrostatic discharges are present, and without causing electromagnetic disturbances to other equipment.

# **A**CAUTION

#### **Electromagnetic radiation**

Electromagnetic radiation can cause disturbances in other equipment.

#### **Precautions:**

Although the product meets the strict regulations and standards which are in force in this respect, Leica Geosystems cannot completely exclude the possibility that other equipment may be disturbed.

# **ACAUTION**

Use of the product with accessories from other manufacturers. For example, field computers, personal computers or other electronic equipment, non-standard cables or external batteries

This may cause disturbances in other equipment.

#### **Precautions:**

- Use only the equipment and accessories recommended by Leica Geosystems.
- ▶ When combined with the product, other accessories must meet the strict requirements stipulated by the guidelines and standards.
- When using computers, two-way radios or other electronic equipment, pay attention to the information about electromagnetic compatibility provided by the manufacturer.

# **⚠** CAUTION

Intense electromagnetic radiation. For example, near radio transmitters, transponders, two-way radios or diesel generators

Although the product meets the strict regulations and standards which are in force in this respect, Leica Geosystems cannot completely exclude the possibility that the function of the product may be disturbed in such an electromagnetic environment.

#### **Precautions:**

Check the plausibility of results obtained under these conditions.

# **A**CAUTION

#### Electromagnetic radiation due to improper connection of cables

If the product is operated with connecting cables, attached at only one of their two ends, the permitted level of electromagnetic radiation may be exceeded and the correct functioning of other products may be impaired. For example, external supply cables or interface cables.

#### **Precautions:**

▶ While the product is in use, connecting cables, for example product to external battery or product to computer, must be connected at both ends.

### **WARNING**

#### Use of product with radio or digital cellular phone devices

Electromagnetic fields can cause disturbances in other equipment, installations, medical devices, for example pacemakers or hearing aids, and aircrafts. Electromagnetic fields can also affect humans and animals.

#### **Precautions:**

- Although the product meets the strict regulations and standards which are in force in this respect, Leica Geosystems cannot completely exclude the possibility that other equipment can be disturbed or that humans or animals can be affected.
- ▶ Do not operate the product with radio or digital cellular phone devices in the vicinity of filling stations or chemical installations, or in other areas where an explosion hazard exists.
- Do not operate the product with radio or digital cellular phone devices near medical equipment.
- ▶ Do not operate the product with radio or digital cellular phone devices in aircrafts.
- Do not operate the product with radio or digital cellular phone devices for long periods with the product immediately next to your body.

2.1

# **System Components**

### **System components**



- a BLK2GO with table stand
- b Lithium-Ion battery GEB821 (3x)
- c AC power cable
- d AC power adapter
- e Battery charger GKL825
- f Transport case

### 2.2

#### **Container Contents**


#### **Container contents**



- a Battery charger GKL825
- b AC power adapter and AC power cable
- c Transport case
- d BLK2GO with battery
- e BLK2GO box
- f Wrist strap
- g USB-C data cable
- h Table stand for BLK2GO
- i Lithium-Ion battery GEB821 (2x)
- j Maintenance plug
- k USB swing card
- I BLK2GO Quick Guide
- m Cleaning cloth

# **Instrument Components**

# Instrument components

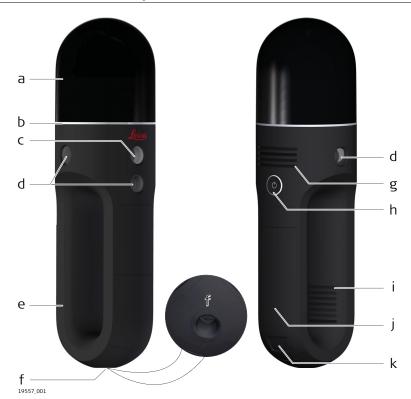


- a Dome
- b Ring-shaped LED
- c Detail camera
- d Panoramic camera
- e Handle
- f Mounting for accessories
- Air outlet
- h Power button
- i Air inlet
- j Battery compartment
- k Locking mechanism for battery cover

3.1

### Power Button

#### **Power button**

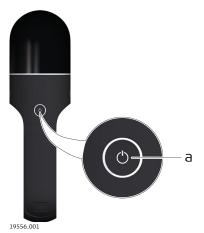

a Power button

Power button	when the BLK2GO is	THEN
Press and hold the button < 2 sec.	off.	The BLK2GO switches on and the LED starts blinking yellow.
Press and hold the button < 2 sec.	on and ready. The LED is continuous green.	The BLK2GO starts initialising and the LED starts blinking yellow.
Press and hold the button < 2 sec. (short press)	in recording mode.	The BLK2GO is taking a picture with the detail camera.
Press and hold the button > 4 sec. < 6 sec. (long press)	in recording mode.	The BLK2GO is taking a panoramic image.
Press and hold the button ≥ 6 sec. (until the LED starts blinking yellow)	in recording mode.	The BLK2GO stops recording and gets into idle state. The LED is continuous green.
Press and hold the button < 5 sec.	on and ready. The LED is continuous green.	The BLK2GO switches off.
Press and hold the button < 2 sec.	in recording mode. The LED is continuous yellow.	Data recording is inter- rupted due to a failure. The BLK2GO gets into idle state.
Press and hold the button ≥ 10 sec.	on.	The BLK2GO switches off immediately. Hard shutdown.

# NOTICE


It is mandatory to follow always this procedure to shut down the instrument. Do not remove the battery from a running instrument!

16 User Interface

### **Instrument Status**

#### Instrument status

The ring-shaped LED lights up in different colours and lighting intervals to show the operation states of the BLK2GO.

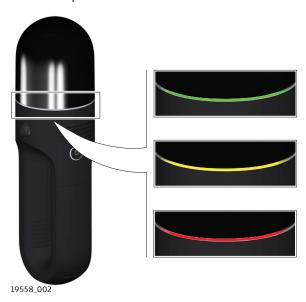

Description	Details
Colours	<ul><li> Green</li><li> Yellow</li><li> Red</li></ul>
Lighting intervals	<ul><li>Continuous</li><li>Blinking</li><li>Pulsating</li><li>1 blink</li></ul>

# Operation mode

LED colour	Lighting interval	Instrument status
	none	The BLK2GO is off.
	continuous	The BLK2GO is ready.
	pulsating	The BLK2GO is in recording state.
	1 blink	Picture from the detail camera successfully taken.

User Interface 17

LED colour	Lighting interval	Instrument status
	blinking	The BLK2GO is starting, initialising or switching off.
	pulsating	The BLK2GO is in recording state and something is notified or a problem occurred.
	1 blink	An error occurred and the picture from the detail camera was not taken.
	continuous	Critical problem or major failure. Contact a Leica Geosystems authorised service centre for further investigation.

# Firmware update mode

LED colour	Lighting interval	Instrument status
	blinking	The BLK2GO is running a firmware update.
	continuous	The firmware update was successful. The BLK2GO is in idle state.
	continuous	The firmware update failed. Reboot the device by reconnecting both cables and try again.

18 User Interface

# 4 Power Supply

# 4.1 Battery and Charger Safety

#### General

Use the batteries, chargers and accessories recommended by Leica Geosystems to ensure the correct functionality of the instrument.

#### First-time use/ charging batteries

- The battery must be charged before using it for the first time because it is delivered with an energy content as low as possible.
- The permissible environment is only indoor conditional and temperature range for charging is between 0 °C to +40 °C/+32 °F to +104 °F. For optimal charging, we recommend charging the batteries at a low ambient temperature of +10 °C to +20 °C/+50 °F to +68 °F if possible.
- It is normal for the battery to become warm during charging. Using the chargers recommended by Leica Geosystems, it is not possible to charge the battery once the temperature is too high.
- For new batteries or batteries that have been stored for a long time
   (> three months), it is effectual to make only one charge/discharge cycle.
- For Li-Ion batteries, a single discharging and charging cycle is sufficient.
   We recommend carrying out the process when the battery capacity indicated on the charger or on a Leica Geosystems product deviates significantly from the actual battery capacity available.

#### Operation/discharging

- The batteries can be operated from -20 °C to +55 °C/-4 °F to +131 °F
- Low operating temperatures reduce the capacity that can be drawn; high operating temperatures reduce the service life of the battery

# 4.2 Charging Station

#### Description

The Charger GKL825 is a multi-charger for indoor-use with four battery bays. The charger is used for battery packs which are used in reality capturing equipment. In these applications, and thus for the charger, high reliability and safe operation over the expected product lifetime are of highest importance. The GKL825 offers the following functions:

- Power supply either over AC or DC
- LED to indicate the status
- Four battery positions
- Charging of one to four battery packs at the same time



The GKL825 can charge one to four batteries at a time depending on requested battery charging current.

#### **System components**



- GKL825 charger
- b AC/DC power adapter
- c AC power cable

#### **Charger components**



- Battery bay with charging function
- b Battery status LED
- c Battery connector
- d DC input

#### **LED** indicators




27857\_001

LED indicator	Status	Description
0	Off	No activity.
	Solid green	The battery is fully charged.
	Blinking orange	The battery is charging.
	Solid red	Failure. Refer to Troubleshooting.

### **Power supply**



The charger GKL825 is only allowed to be operated with its own AC/DC power adapter. The AC/DC power adapter is part of the delivered package.

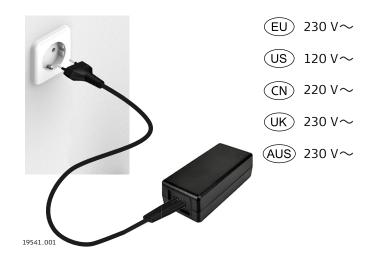

Input voltage: 100-240 V AC

# **Troubleshooting**



If an error occurs, the LED indicator of the related battery bay lights constantly red.

Remove and insert the battery again. Make sure that the battery is correctly positioned in the battery bay. Disconnect from AC power and reconnect. If the failure persists or reappears from time to time, the charger must be sent to a Leica Geosystems authorised service centre.

# 4.3 Battery

### NOTICE

Always shut down the instrument before removing the battery.

Remove and insert the battery step-by-step

#### Remove the battery




- 1. Slide the locking mechanism of the battery to the open position.
- 2. Lift the battery and remove it from the compartment.

### Insert the battery



- 1. Attach the upper side of the battery to the compartment at an angle and then lower the bottom side.
  - Ensure that the battery contact slots are facing inwards.
- 2. Slide the locking mechanism of the battery to the lock position to secure the battery in the compartment.
  - The IP rating is only ensured if the battery is attached correctly.

#### **Battery status**

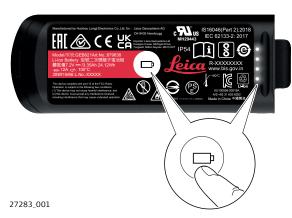

Press the status button to check the battery status.

Status LED	Battery status
1947 (20)	0%-30%
1964.001	31%-60%
1944.931	61%-90%
1993 (01)	91%-100%

# Charge batteries step-by-step



The GKL825 can charge one to four batteries at a time. All batteries are charging in parallel.




- 1. Plug the AC/DC power adapter into the appropriate AC power source.
- 2. Connect the charger plug into the DC input of the charger

	3.	Insert the battery with the contact slots facing downwards.
		The LED of the battery bay blinks orange 🔘 indicating the charge
		process. Refer to LED indicators.
KEIEL LU LED IIIUICALUIS.		Neter to LED indicators.
	4.	If the LED of the battery bay lights solid green the battery is fully charged. Disconnect the charger plug from the DC input of the charger. Unplug the AC/DC power adapter from the AC power source.
	5.	Carefully pull the battery upwards.
		The LED indicator of the battery bay is off $^{igodot}$ .

# **Operation**

# 5.1 Operation - Getting Started

Operation, step-by-step

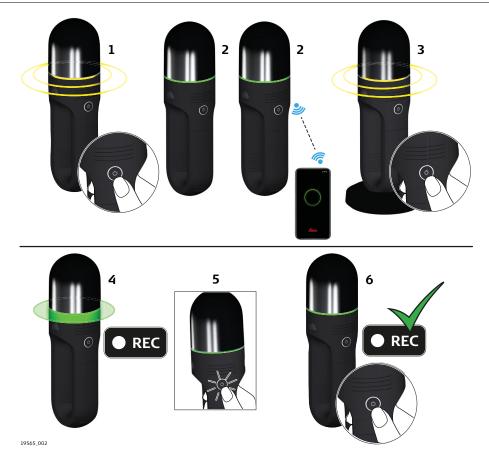

- 1. Press the power button to turn on the BLK2GO. The ring-shaped LED is blinking yellow to indicate that the instrument is booting up.
- 2. When the ring-shaped LED is continuous green, the BLK2GO is ready to start operation in stand-alone mode or with a connected device. Follow the instructions on the app to establish the connection.
- 3. Place the BLK2GO on the table stand and press the power button to start the scan. The ring-shaped LED is blinking yellow and the instrument is initialising.
- 4. When the ring-shaped LED starts pulsating green, the BLK2GO is initialised and is recording data. Take the BLK2GO and start walking.
- 5. While the BLK2GO is recording data, press the power button by a quick click to take a picture with the detail camera. One green blink of the ring-shaped LED indicates that the picture is successfully taken
- 6. Press the power button to stop recording data. While data are being saved, the ring-shaped LED is blinking yellow. Once data have been saved, the ring-shaped LED is continuous green.

# Connecting to a computing device step-by-step

- 1. Start the BLK2GO and wait until the LED is continuous green.
- 2. On the computing device, in the Connection screen, select the connection mode and follow the instructions.

#### 5.2

# **Imaging**

#### Description

The BLK2GO can collect two different types of images:

- A panoramic image using 3 calibrated panoramic cameras. The panoramic images are automatically taken when the device is in operation.
- A high resolution image using the detail camera. The high resolution images can be taken by the user while scanning as described in 5.1 Operation - Getting Started.

#### Camera position



- a Detail camera
  - Panoramic camera

#### 5.3

# Scanning

#### 5.3.1

#### **Ambient Conditions**

#### Unfavourable surfaces for scanning

- Highly reflective (polished metal, gloss paint)
- Highly absorbent (black)
- Translucent (clear glass)



Colour, powder or tape these surfaces before scanning if necessary.

# Unfavourable weather conditions for scanning

- Rain, snow or fog may adversely affect measurement quality. Always use care when scanning in these conditions.
- Surfaces that are directly illuminated by the sun cause an increased range noise and therefore a larger measurement uncertainty.
- If some objects are scanned against the sunlight or a bright spotlight, the optical receiver of the instrument can be dazzled so heavily that in this area no measured data is recorded.

# Temperature changes during scanning

If the instrument is brought from a cold environment, for example from storage, into a warm and humid environment, the mirror or in extreme cases even the interior optics can condense. This may cause measurement errors.



Precaution: Avoid rapid temperature changes and give the instrument time to acclimatise.

#### Dirt on the dome

Due to the encapsulated mirror design, the mirror is protected against direct contact. But dirt on the dome such as a layer of dust, condensation or finger-prints may cause considerable measuring errors.

# 5.3.2 Troubleshooting

#### **Basic troubleshooting**

Problem	Possible cause	Suggested remedies
Missing points in scan.	Dust, debris or finger- prints on the dome.	Use a glass cleaning tissue to clean the specific areas.

# Advanced troubleshooting

Problem	Possible cause	Suggested remedies
When switching on the instrument or starting a scan, the system switches off automatically.	Capacity of battery is too low. Battery not properly charged.	Recharge or change battery. Check the battery status as described in Battery status.
The system switches off automatically, even though it was recharged, when switching on the	Battery charger is defective.	Check the function of the battery charger. Note the charging status dis- played on the battery charger.
instrument or start- ing a scan.	Battery is no longer charging.	The battery has lost most of its capacity at the end of its life time. Replace the battery.

# Troubleshooting in operation mode


LED colour  Lighting interval  Continuous  A system error occurred. Shut down the instrument, remove the battery, insert it again and reboot the device. If status does not change or the problem occurs again, contact the Leica support.			
down the instrument, remove the battery, insert it again and reboot the device. If status does not change or the problem occurs	LED colour	Lighting interval	Instrument status
		continuous	down the instrument, remove the battery, insert it again and reboot the device. If status does not change or the problem occurs

# Troubleshooting - support contacts

If you experience problems with your instrument, check the BLK2GO web page at <a href="https://www.blk2go.com/">https://www.blk2go.com/</a> for support information and contacts.

#### Field of View (FoV)

# Scanning laser - field of view

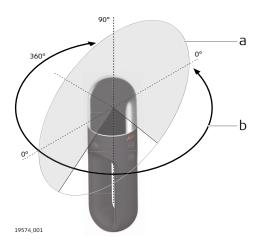

a Vertical field of view: 270° b Horizontal field of view: 360°

# 5.4

#### **Data Transfer**

#### Description

Raw data can be transferred from the BLK2GO to a computing device using a wireless connection.



#### 5.5

# **Cooling System**

# Description

The BLK2GO has an air cooling system. It sucks in and circulates air to maintain the temperature of the system components.

The air inlet and the filter cartridge protect from dust particles entering the housing and components.

The filter cartridge is removable. It can be reached by opening the filter cover. It is necessary to clean the air inlet and the filter cartridge periodically. Replace the filter cartridge by a new filter periodically, in addition to the cleaning procedure.

To remove and clean the filter, refer to "Filter Cleaning Procedure" and follow the instructions.




The cleaning period depends on the environment where the BLK2GO is mostly used. The more dusty the environment is, the more frequently the BLK2GO has to be cleaned.



The BLK2GO is not supposed to work in a dusty environment, since the laser measurements suffer a lot from dust refraction. Refer to Ambient Conditions.

### **Care and Transport** 6 6.1 Maintenance For units that are exposed to high mechanical forces, for example through frequent transport or rough handling, it is recommended to carry out test measurements periodically. 6.2 **Transport** Transport in the field When transporting the equipment in the field, always make sure to carry the product in its original container. Transport in a road Never carry the product loose in a road vehicle, as it can be affected by shock vehicle and vibration. Always carry the product in its container and secure it. Shipping When transporting the product by rail, air or sea, always use the complete original Leica Geosystems packaging, container and cardboard box, or its equivalent, to protect against shock and vibration. Shipping, transport of When transporting or shipping batteries, the person responsible for the **batteries** product must ensure that the applicable national and international rules and regulations are observed. Before transportation or shipping, contact your local passenger or freight transport company. 6.3 Storage **BLK2GO** Respect the temperature limits when storing the equipment, particularly in summer if the equipment is inside a vehicle. Refer to 7 Technical Data for information about temperature limits. Li-Ion battery Refer to 7 Technical Data for information about storage temperature Remove batteries from the product and the charger before storing After storage recharge batteries before using Protect batteries from damp and wetness. Wet or damp batteries must be dried before storing or use A storage temperature range of 0 °C to +30 °C/+32 °F to +86 °F in a dry environment is recommended to minimise self-discharging of the battery At the recommended storage temperature range, batteries containing a 40% to 50% charge can be stored for up to one year. After this storage period the batteries must be recharged Charger and docking Keep chargers and docking stations away from excessive dirt, dust and station contaminants. After unpacking the product visually inspect the charger for possible dam-Unplug the product from the outlet before attempting any maintenance or cleaning. 6.4 Cleaning and Drying Damp products Dry the product, the transport case, the foam inserts and the accessories at a temperature not higher than 40°C/104°F and clean them. Remove the

battery cover and dry the battery compartment. Do not repack until everything is completely dry. Always close the transportation case and the mission bag when using in the field.

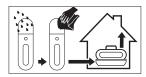

# Housing parts of product and accessories

- Never touch the dome with your fingers.
- Only use a clean, soft, lint-free cloth for cleaning. If necessary, moisten the cloth with water or pure alcohol. Do not use other liquids; other liquids may attack the polymer components.

# Charger and AC/DC power supply

Use only a clean, soft, lint-free cloth for cleaning.

# Cables and plugs

Keep plugs clean and dry. Blow away any dirt lodged in the plugs of the connecting cables.

#### 6.5

# **Dome Cleaning Procedure**

# General cleaning information

The dome must be kept clean. The instructions must be followed as described in this chapter to clean the dome.

# **ACAUTION**

## Damage to instrument

Cleaning the instrument while the device is switched on can damage the instrument or the battery.

#### **Precautions:**

▶ Before cleaning, switch off the instrument and remove the battery.

# Dust and debris on the dome

Using a compressed gas duster or canned air, remove dust and debris from surface of the dome.



Never rub off dust or debris as this will scratch the glass and so possibly cause permanent damage to the special optical coatings.

# Cleaning of the camera lenses

Soiling of the glass pane can cause extreme measurement errors and therefore unusable data!



All soiling that is visible on the glass pane must be removed, except for single small dust particles that adhere inevitably.

For the glass cleaning procedure, the wet and dry lens cleaner Green Clean LC-7010 is recommended (www.green-clean.at/en.html).

Clean the glass pane regularly with the recommended cleaning tissue:

- Switch off instrument and remove the battery
- Washing hands is necessary in order to avoid grease on the cleaning tissue
- Better, use gloves to avoid finger oil on the glass
- Then use the wet lens cleaning tissue (Green Clean LC-7010) until there is only a thin film of detergent visible
- After that use the dry lens cleaning tissue (Green Clean LC-7010) to remove any remaining detergent
- If any smears from cleaning are visible against back light, repeat the procedure
- Do not use air from the pneumatic power system as this is always slightly oily!

#### 6.6

# **Filter Cleaning Procedure**

# General cleaning information

Follow the instructions as described in this chapter for:

- Clean the air inlet
- Clean the air outlet
- Clean or replace the filter cartridge

The ring-shaped LED indicates reaching high temperature of the BLK2GO. If this indication occurs after few minutes of operation in standard working conditions, it can be necessary to clean the air inlet and clean or replace the filter cartridge.

Make sure that the cleaning procedure is carried out very carefully. The instrument must be opened, with the potential risk of dust entering the system.

#### NOTICE

#### Running the device without filter cartridge and filter cover

If the device is used without filter cartridge and filter cover, dust sucks inside and irretrievably damage inner components.

#### Precautions:

Do not run the device without the filter cartridge and the filter cover properly mounted!

# **A**CAUTION

#### Damage to instrument

Cleaning the instrument while the device is switched on can damage the instrument or the battery.

#### **Precautions:**

▶ Before cleaning, switch off the instrument and remove the battery.


# Filter cleaning procedure step-by-step



Always work in a clean indoor environment, with no draft nor breeze. Do the cleaning as fast as possible and do not leave the system open for a long time.



Do not use water to clean the filters.

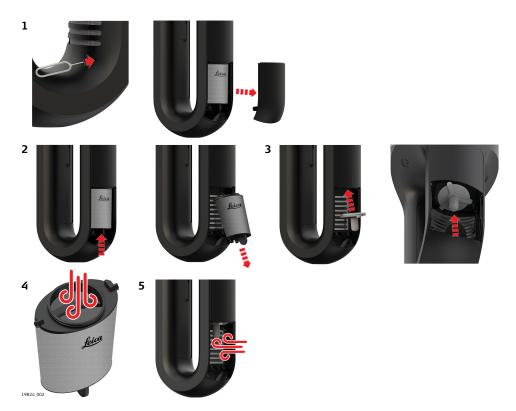

- 1. Open the handle by removing the filter cover.
- 2. To remove the filter cartridge:
  - a) Grab the bottom flap with your thumb and index finger.
  - b) Gently push the filter cartridge toward the impeller and raise up the bottom part of it.
  - c) Slide the filter cartridge back few millimetres, then remove it.
- 3. Close the impeller suction side with the provided maintenance plug immediately after the removal of the filter cartridge.
  - The following steps **4.** to **6.** shall not be done in the same room as the mounting/dismounting takes place.
- 4. Clean the filter cartridge with fresh clean compressed air, for example with a compressed gas duster. Clean it from the inside of the filter cartridge to the out and not the vice versa.
- 5. Clean the air inlet with fresh clean compressed air, for example with a compressed gas duster. Clean it from the inside out and not the vice versa.
- 6. The air outlet rarely has to be cleaned. If needed, clean it gently with a small brush. Remove dust, laying down in the aluminium ribs.
  - If some particles of dust are clearly stuck inside the mesh fibers, do not try to remove them. It may force the particles to move further in and damage the mesh.
  - Do not use compressed air to clean the air outlet.

# NOTICE

### Damaged filter cartridge, filter mesh or seals

If the device is used with damaged filter cartridge, air inlet, air outlet or seals, it irretrievably damages inner components.

#### **Precautions:**

- ► The BLK2GO needs technical assistance from a Leica Geosystems authorised service centre if:
  - Any filter mesh is damaged.
  - The cartridge is deformed and cannot be properly plugged inside.
  - The O-rings which seal the filter to the impeller housing are damaged.

# 7 Technical Data

### 7.1 General Technical Data of the Product

Storage and
communication

Function	Value
Internal storage	Up to 20 hours of scanning (uncompressed images, full density point cloud) Up to 40 hours of scanning (compressed images, low density point cloud)
Communication	Integrated 802.11 b/g/n/ac WLAN with MIMO.

#### **Detail camera**

Camera data	Value
Type	Colour sensor, fixed focal length
Single image	3040 × 4056 pixels
Field of view	90° × 120°
White balancing	Automatic
Minimum range	55 cm
Shutter	Rolling

#### **Panoramic cameras**

Camera data	Value
Туре	Colour sensor, fixed focal length
Single image	1080 × 1440 pixels
Field of view	100° × 135°
White balancing	Automatic
Minimum range	30 cm
Shutter	Global

# 7.2

# System performance and accuracy



All  $\pm$  accuracy specifications are one sigma (1 $\sigma$ ) under Leica Geosystems standard test conditions unless otherwise noted.

Accuracy of single measurement at 78% albedo	Value
Angle (horizontal/vertical)	30"/30"
3D point accuracy	±3 mm @ 10 m

#### 7.3

# Laser scanning system data

# **Laser System Performance**

**System Performance** 

The scanning system is a high speed time-of-flight unit, enhanced by Waveform Digitising (WFD) technology with a maximum scan rate of 420.000 points/second.

#### 7.4

### **Electrical Data**

### **BLK2GO** power supply

### **Internal battery**

7.2 V DC; one internal battery provided with the instrument.

# Battery operating and charging times

Internal battery	Value
Operating time	> 40-45 minutes operating, continuous use at room temperature.
Charging time	Typical charging time with GKL825 charger is 2.5 hours at room temperature.

# 7.5

# **Environmental Specifications**

# Environmental specifications

### Temperature

Туре	Operating temperature [°C]	Storage temperature [°C]
BLK2GO	0 to +40	-25 to +70
Battery	0 to +50	-40 to +70
Charger and AC/DC power supply	0 to +40	-40 to +70

# Protection against water, dust and sand

Туре	IP class
BLK2GO	IP54 (IEC 60529) Dust protected Betamesh BM90 – filtration level 69 μm Betamesh BM20 – filtration level 20 μm Protection against splashing water from any direction.
Battery	IP54 (IEC 60529) Dust protected Protection against splashing water from any direction.
Charger and AC/DC power supply	IPX0 (IEC 60529) Only operate in dry environments, for example in buildings and vehicles.

### **Pollution degree**

Туре	Pollution degree
BLK2GO	4 Electrical equipment for indoor and outdoor use.
Battery	4 Electrical equipment for indoor and outdoor use.
Charger and AC/DC power supply	2 Electrical equipment for office environment.

### Humidity

Туре	Protection
BLK2GO	Max 95% non-condensing.

Туре	Protection	
Battery	Max 95% non-condensing.	
Charger and AC/DC power supply	Max 80% non-condensing.	

# Altitude

Туре	Range
BLK2GO	Unrestricted
Battery	Unrestricted
Charger and AC/DC power supply	≤ 2000 m

# Lighting

Туре	Lighting	
BLK2GO	Fully operational from bright sunlight to complete darkness.	

### Sound level

Туре	Value
BLK2GO	< 70 db(A)

# 7.6

# Dimensions

# Dimensions



Accessories	Dimensions [mm] (D × W × H)
AC power supply for GKL825 charging station	115 × 53 × 38
GKL825 charging station	120 × 120 × 36
GEB821 battery	40.5 × 113.5 × 23
Transport container	200 × 380 × 200

# 7.7 Weight

## Weight

Instrument	Weight [kg]	Weight [lbs]
Leica BLK2GO	0.655 nominal	1.4 nominal
AC power supply for GKL825	0.1	0.3
GKL825 charging station	0.1	0.3
GEB821 battery	0.1	0.3
Leica BLK2GO transport container (without scanner and accessories)	1.0	2.3
Leica BLK2GO transport container (with scanner and standard accessories)	3.0	6.7

# 7.8 Accessories

# Scope of delivery

Included standard accessories:

- Battery GEB821 (3 ×)
- Battery Multicharger GKL825 with AC power adapter
- BLK2GO transportation case
- BLK2GO table stand
- BLK2GO wrist strap
- USB-C cable
- QR code connection card
- Quick guide BLK2GO
- 12-month warranty
- Calibration Certificate digital access through online registration

# Additional accessories


- BLK2GO maintenance kit
- BLK2GO mission bag

# 7.9

# Labelling BLK2GO



# Labelling GEB821

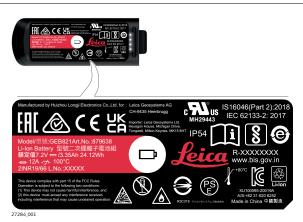

### Labelling GKL825



#### Antenna

Туре	Antenna	Gain [dBi]
WLAN	Dual dipole antenna MIMO system	10.2 max.

#### Frequency band

Туре	Frequency band [MHz]
WLAN 2.4 GHz	2400-2483.5
WLAN 5 GHz <sup>1)</sup> (Client mode)	5150-5250 5250-5350 5470-5725

#### **Output power EIRP**

Туре	Output power [mW] (EIRP)	
WLAN 2.4 GHz	100 max.	
WLAN 5 GHz <sup>1)</sup>	200 max.	

#### Radiation Exposure Statement

The radiated output power of the instrument is below the radio frequency exposure limits. Nevertheless, the instrument should be used in such a manner that the potential for human contact during normal operation is minimised.

#### **SAR values**

Country	Head	Torso [W/kg]	Limb [W/kg]
EU & Australia	n/a	0.832, 10-gram	0.832, 10-gram
USA & Canada	n/a	1.11, 1-gram	0.45, 10-gram

EU



Hereby, Leica Geosystems AG declares that the radio equipment type BLK2GO is in compliance with Directive 2014/53/EU and other applicable European Directives.

The full text of the EU declaration of conformity is available at the following Internet address: <a href="http://www.leica-geosystems.com/ce">http://www.leica-geosystems.com/ce</a>.



The following advice is only valid for battery and charger.

EU



Hereby, Leica Geosystems AG declares that the product/s is/are in compliance with the essential requirements and other relevant provisions of the applicable European Directives.

The full text of the EU declaration of conformity is available at the following Internet address:

http://www.leica-geosystems.com/ce.

**USA** 

FCC ID: RFD-BLK2GO

15 B/C

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

<sup>1)</sup> not enabled in Israel

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, it may cause harmful interference to radio communications.

However, there is no guarantee that interference does not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Leica Geosystems for compliance could void the user's authority to operate the equipment.

Canada

CAN ICES-003 B/NMB-003 B IC: 3177A-BLK2GO

#### **Canada Compliance Statement**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference
- 2. This device must accept any interference, including interference that may cause undesired operation of the device

#### Canada Déclaration de Conformité

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- 1. L'appareil ne doit pas produire de brouillage
- L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement du dispositif

China

#### **SRRC**

CMIIT ID: 24I9968X3095

The CMIIT ID is also stated on the type label.

#### Japan

Client station 5 GHz: The transmission of radio equipment is indoor use only. (Except when communicating with 5.2 GHz high power base stations or relay stations.)

- This device is granted pursuant to the Japanese Radio Law (電波法) and the Japanese Telecommunications Business Law (電気通信事業法).
- This device should not be modified (otherwise the granted designation number will become invalid).

#### Singapore

Complies with IMDA Standards DA107313

#### **Taiwan**

According to the Low-power Radio-frequency Devices Technical Regulations:

- Without permission granted by the NCC, any company, enterprise, or user is not allowed to change frequency, enhance transmitting power or alter original characteristic as well as performance to approved low-power radio-frequency devices
- The low-power radio-frequency devices shall not influence aircraft security and interfere legal communications; If found, the user shall cease operating immediately until no interference is achieved
- The said legal communications means that radio communications is operated in compliance with the Telecommunications Management Act
- The low-power radio-frequency devices must be susceptible with the interference from legal communications or ISM radio wave radiated devices

#### Others

The conformity for countries with other national regulations has to be approved prior to use and operation.

# 7.9.1

#### **Dangerous Goods Regulations**

# Dangerous Goods Regulations

 $\label{lem:many products} \mbox{Many products of Leica Geosystems are powered by Lithium batteries.}$ 

Lithium batteries can be dangerous under certain conditions and can pose a safety hazard. In certain conditions, Lithium batteries can overheat and ignite.



When carrying or shipping your Leica product with Lithium batteries onboard a commercial aircraft, you must do so in accordance with the IATA Dangerous Goods Regulations.



There are guidelines on **How to carry** and **How to ship** products with Lithium batteries. Before any transportation of a Leica product, we ask you to consult the guidelines on the web page (<u>IATA Lithium Batteries</u>) to ensure that you are in accordance with the IATA Dangerous Goods Regulations and that the Leica products can be transported correctly.



Damaged or defective batteries are prohibited from being carried or transported onboard any aircraft. Therefore, ensure that the condition of any battery is safe for transportation.

# 8

# **Software Licence Agreement/Warranty**

#### Software Licence Agreement

This product contains software that is preinstalled on the product, or that is supplied to you on a data carrier medium, or that can be downloaded by you online according to prior authorisation from Leica Geosystems. Such software is protected by copyright and other laws and its use is defined and regulated by the Leica Geosystems Software Licence Agreement, which covers aspects such as, but not limited to, Scope of the Licence, Warranty, Intellectual Property Rights, Limitation of Liability, Exclusion of other Assurances, Governing Law and Place of Jurisdiction. Please make sure, that at any time you fully comply with the terms and conditions of the Leica Geosystems Software Licence Agreement.

Such agreement is provided together with all products and can also be referred to and downloaded at the Leica Geosystems home page at <a href="Hexagon-Legal Documents">Hexagon-Legal Documents</a> or collected from your Leica Geosystems distributor.

You must not install or use the software unless you have read and accepted the terms and conditions of the Leica Geosystems Software Licence Agreement. Installation or use of the software or any part thereof, is deemed to be an acceptance of all the terms and conditions of such Licence Agreement. If you do not agree to all or some of the terms of such Licence Agreement, you must not download, install or use the software and you must return the unused software together with its accompanying documentation and the purchase receipt to the distributor from whom you purchased the product within ten (10) days of purchase to obtain a full refund of the purchase price.

# Open source information

The software on the product may contain copyright-protected software that is licensed under various open source licences.

Copies of the corresponding licences:

- are provided together with the product (for example in the About panel of the software).
- can be downloaded on http://opensource.leica-geosystems.com/blk2go.

If foreseen in the corresponding open source licence, you may obtain the corresponding source code and other related data on http://opensource.leica-geosystems.com/blk2go. Contact opensource@leica-geosystems.com in case you need additional information.

#### 896179-1.3.0en

Original text (896179-1.3.0en) Published in Switzerland, © 2024 Leica Geosystems AG

#### Leica Geosystems AG

Heinrich-Wild-Strasse 9435 Heerbrugg Switzerland

www.leica-geosystems.com









