










Know your machine from every angle.

Shaft Alignment

7770



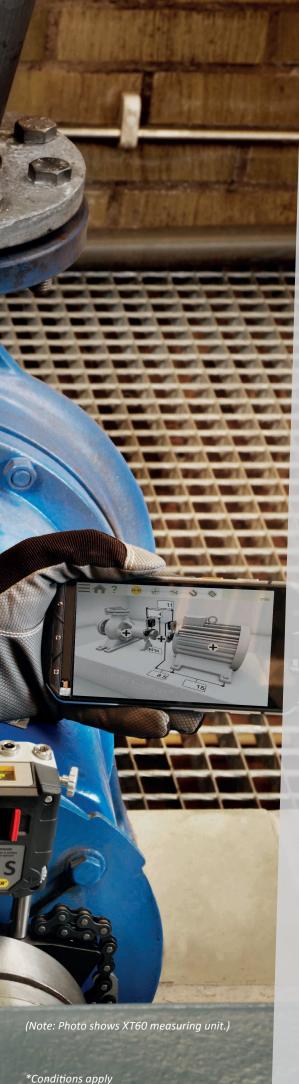

HIGHLIGHTS

MAXIMUM FLEXIBILITY



ALL XT PROGRAMS IN ONE FREE APP

All XT measurement programs included in one straightforward application available for free.



DISPLAY DATA ON MULTIPLE PLATFORMS

Functionality for iOS, Android and Easy-Laser® XT display units.



NO LOCK-INS

Buy with or without the user-friendly Easy-Laser® XT11 display unit.



MAXIMUM FLEXIBILITY

Combine several measuring units with the display unit of your choice, or use different display units with one set of measuring units.

No license hassle!



RUGGED DESIGN

The XT products are rugged, rated both IP66 and IP67 water and dust proof. For superior durability in harsh environments.



LONG OPERATING TIMES

The long operating times of up to 16 hours for the display unit and 24 hours for the measuring units mean even the toughest jobs will be finished on time with no interruptions.



SEND THE REPORTS

Share the reports via email. Possible on all platforms.

X7770


THIS IS EASY ALIGNMENT

HORIZONTAL PROGRAM


The user interface is intuitive and guides you through the measurement process. It is animated and zooms in to the relevant element for each step. You can save the measurements of a machine for *As found* and *As left* in the same file.




The interactive workflow indicator lets you easily jump to any part in the measurement process.

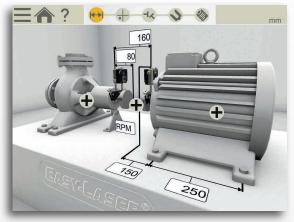

1. Enter dimensions

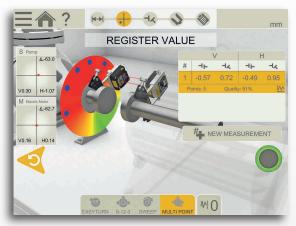

2. Measure (Four methods available, explained to the right)

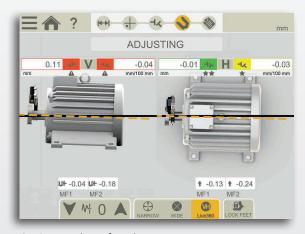

3. View result, As found

4. Adjust




5. View report as it will look



Soft Foot check on both machines



Tolerance check (pre-set or custom)

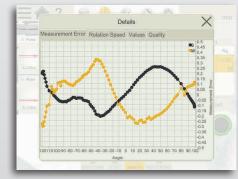

Quality check view for measurements

MEASUREMENT METHODS


Measuring points

Start .

Start recording



Stop recording

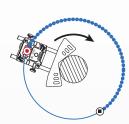


CONTINUOUS SWEEP

Automatic recording of measurement values during continuous sweeping of the shaft. Hundreds of points are registered. You can start anywhere on the turn. Quality check of measurement is provided (see example down left).




UNCOUPLED SWEEP

Rotate one shaft/unit at a time to pass with the beam over the other (stationary). Repeat alternately until enough measurement points are recorded. You can start and stop anywhere on the turn.

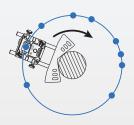


MULTI POINT

Multi point is basically the same as EasyTurn™, but instead you can record multiple points on the sector rotated. This will provide an optimized calculation basis. Perfect for e.g. turbine and sliding bearing applications.

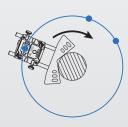

EASYTURN

The EasyTurn™ function allows you to begin the measurement process from anywhere on the turn. You can turn the shaft to any three positions with as little as 20° between each position to register the measurement values. An easier-to-use version of the three-point method (see 9–12–3).

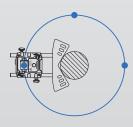

9-12-3

Measurement points are recorded at fixed points 9, 12 and 3 o'clock. This is the classic three-point method which can be used in most cases.

SMART FUNCTIONS



THERMAL GROWTH

Automatically compensate for thermal expansion of the machines.



SWAP VIEW

Understand adjustment directions more intuitively.



CONTINUE SESSION

Your latest measurement is always available, automatically saved.



TEMPLATES

Save measurement files as templates, with machine data and settings, to quickly start measurements.



MEASUREMENT VALUE FILTER

Improve readings when measuring conditions are poor.



MULTIPLE SETS OF FEET

Align machines with more than two pairs of feet.



LOCKED FEET

Lock any pair of feet on the machine. Used when aligning base-bound or bolt-bound machines.



WIDE LIVE ADJUSTMENT

Adjust with live values using expanded sensor position ranges in the H and V position



360° LIVE ADJUSTMENT

Adjust both vertically and horizontally at the same time with measuring units in any position.



SELECT COUPLING TYPE

Choose method depending on coupling type: short flex, spacer shaft.



SELECT MACHINE IMAGE

Choose from different 3D machines to portray your machinery on either side of coupling.



ADJUSTMENT GUIDE


The adjustment guide helps you decide optimum adjustment by simulating shimming and move. For programs Horizontal and Machine train.



BUILT-IN HELP

The app includes a searchable *Users Manual* which opens the relevant chapter depending where in the process you are. This makes it quick and easy to find the answer to your user questions.


MORE POSSIBILITIES

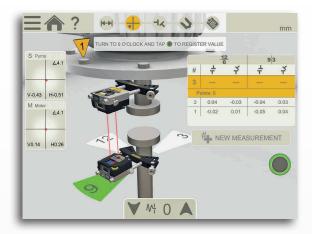

VERTICAL/FLANGE MOUNTED MACHINES




For measurement and alignment of vertically and flange mounted machines. Handles machines with 4, 6, 8 and 10 bolts.

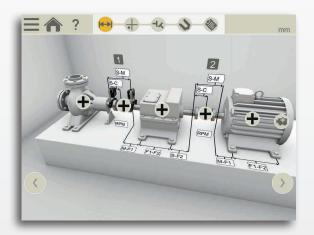

MACHINE TRAIN



Build your own machine train without limits. You can pick the reference machine manually, or let the program choose one that will minimize the need for adjustments.

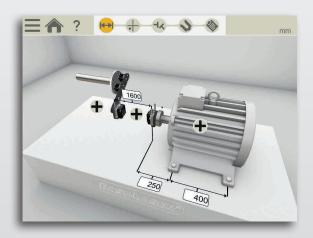

CARDAN/OFFSET MOUNTED MACHINES




For alignment of cardan/offset mounted machinery. (Requires additional Cardan bracket Kit.)



TWIST MEASUREMENT OF MACHINE BASE



The twist measurement program allows you to check the flatness or twist of the machine foundation using only the measuring units in the system.

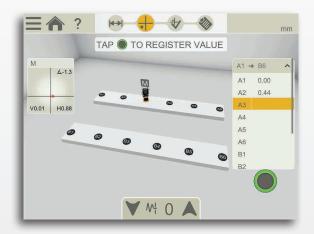


BASIC FLATNESS



With this program you can check the flatness of foundations and frames, using two rows of points, 2 to 8 points per row. Separate laser transmitter required. (Requires


Geo Kit).

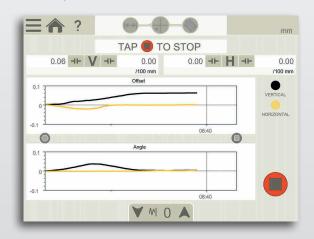

EASYTREND



With EasyTrend you can keep track of machine movement over time. For example, you can check for thermal expansion and pipe strain issues. (Requires additional DM-brackets.)

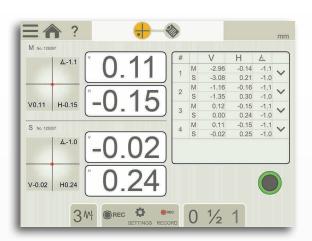

VALUES – DIGITAL DIAL INDICATOR

With the Values program you meas-V 0.00 ure as with dial gauges, but with H 0.00 laser precision and the possibility to document the measurement result.

Automatic recording possible (set the interval and duration). You can make individual notes for each measurement point.

CHECK BEARING CLEARANCE etc.



With the Values program you can check bearing clearance or shaft load. It can also be used to "manually" calculate straightness, flatness and

dynamic movements of machine components.

SELECT MACHINE IMAGE



Customize your machine set up in Machine Train and Horizontal programs with corresponding 3D machine icons.































DOCUMENTATION

SAVE!



INTERNAL MEMORY

Save your measurement files, photos and reports to the internal memory.



VERSATILE FILE TYPES

Both a PDF and an Excel file are generated.





READ QR AND BAR CODES

Assign a specific code to a specific machine, then use the built-in camera of your device to open assigned file and settings.

(Note: camera resolution requirements applicable.)

SHOW!



CUSTOM PDF REPORT TEMPLATES

Use one of the two formats included, or design your own.



ADD NOTES

Explain it a little more.



SIGN REPORTS ELECTRONICALLY

Sign-on screen to verify your job. Signature is saved with the PDF file.



ADD PHOTO

Show what you mean.



ADD THERMAL IMAGE

See the difference after alignment. (Available only with XT11)



SHARE!



SEND THE REPORTS

Share the reports via email. Possible on all platforms.



SAVE TO USB

Save your files to USB stick and copy to other devices.



SYSTEM PARTS

XT70-M/S MEASURING UNITS

The XT70 measuring units utilize dot-type laser and 2-axis square PSD surfaces. A state-of-the-art OLED display (D) shows the angle of the unit, making it easier to position it on the shaft.

The diagonally positioned locking knobs securely lock the unit on the rods. Rigid aluminium housing provide maximum stability. IP66 and 67, dust- water- and shockproof. Heavy-duty battery for very long operating times; up to 24 hours. Builtin wireless technology.

SHAFT BRACKET

The V-bracket is light yet rigid, with two rods for maximum stability in all directions. Pre-mounted chain for quick setup on the machine.



- A. PSD aperture
- B. Laser aperture
- C. Laser angle adjustment
- D. OLED display: battery status/unit angle
- E. Chain tightening knob
- F. Charger connector
- G. Extendable stainless steel rods
- H. Locking knob
- I. Slidable target/dust cover

XT11 DISPLAY UNIT

Rugged, robust, with wear resistant rubberized protective coating. IP66 and 67, dustwater- and shockproof. As standard a 13 MP camera for documentation is built-in, and you can also choose to add an IR camera to the XT11; shoot a thermal image before and after alignment and include with the documentation!

A large 8", glove-enabled touch-screen makes the information clear and the app easy to use. The small OLED display (C) shows battery status of both measuring units and display unit. You can check battery status also when the unit is turned off (B). The clever lock-screen button (B) prevents unintentional clicks, for instance when moving around on the job.

Four fastening points for shoulder strap or customized solutions. Heavy-duty battery for very long operating times; up to 16 hours. The camera can be removed if security reasons require it.



- B. Screen-lock button/Battery status-check button
- C. OLED display
- D. Display brightness sensor
- E. Large and clear 8" glove-enabled touch-screen
- F. Dust cover and protection for connectors (Note: connectors are dust and waterproof)
- G. Enter button

RUGGED DESIGN

IP66 AND IP67 APPROVED

Easy-Laser® XT measuring units and display unit are waterproof, dustproof and shockproof. The units have been tested and approved to an Ingress Protection rating of IP66 and IP67, which means that they are dustproof and waterproof to a depth of 1 metre, and also protected against powerful water jets.



(Note: Photo shows XT40 measuring units.)

DOT-TYPE LASER TECHNOLOGY



The dot laser technology makes it possible to measure larger machines and longer spans than line laser systems. It also provides higher accuracy when backlash in

the coupling is present. In addition, dot laser allows you to check more things when installing a machine, e.g. twist of foundation and bearing clearance. With 2-axis PSD you can read off and record values for both vertical and horizontal directions.

DUAL LASERS, PSD, INCLINOMETERS



With electronic inclinometers in both **DUAL** measuring units the system knows ex-**TECH** actly how they are positioned. This also makes it very easy to align uncoupled

shafts. The so called reversed measurement method with two laser beams and two PSD makes it possible to also measure grossly misaligned machines. This is particularly good for new installations, where the machines are not yet in the correct position. With the Dual Technology, measurement accuracy is retained even over longer distances.



- A. IR Camera (optional)
- B. 13 Mp Camera
- C. LED Light
- D. Fastening points for shoulder strap (x4)




THERMAL CAMERA

The Easy-Laser® XT11 Display unit has the option to add thermal imaging camera (IR) along with the standard 13 MP digital camera. Shoot a thermal image before and after alignment and include with the documentation!



13 MP CAMERA

Take pictures to identify your machines and include with your report.

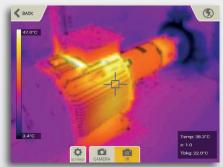

LED LIGHT

Light up the work area when ambient light is not enough.



AV CONNECTOR

As standard the XT11 is equipped with a HDMI connector, making it possible to share the display screen direct on a TV monitor or projector screen without any additional software. Useful for training purposes with large groups.





PRECISION LEVEL

FOR GENERAL MACHINERY SET-UP

n n

XT290 Digital Precision Level is the must-have addition to your shaft system. Installing machinery level is very often a requirement for them to work as intend-

ed. Use the XT290 as a separate tool, or with the XT Alignment App. When connected to the XT Alignment App on your iOS or Android device, or the XT11 display unit, you can read off the alignment "live" at the position on the machine where the actual alignment is made, and make PDF reports.



≡♠?





Display on Precision Level unit. Live values and graphics.

SYSTEM XT290 LEVEL PART NO. 12-1244



BELT ALIGNMENT TOOL


FOR RADIALLY MOUNTED DRIVES

BTA mou

With the Belt alignment tool XT190 BTA you can align most types of radially mounted drives. The transmitter and detector attaches magnetically to the sheave

edge. A digital display unit gives the advantage of checking against belt manufacturer tolerances.

When connected to the *XT Alignment App* on your iOS or Android device, or the XT11, you can also read off the alignment "live" at the position on the machine where the actual alignment is made. You get adjustment values for both horizontal and vertical direction (shim value), resulting in a more accurate alignment in a shorter time.

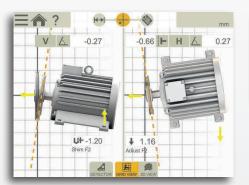

0.6 mm 0.35 °H 0.45 °V

OLED display on detector unit. Live values.

Align machine in live mode, document result with PDF. (XT Alignment app Belt application.)

SYSTEM XT190 BTA PART NO. 12-1053





VIBROMETER TOOL

FOR QUICK VIBRATION ANALYSIS



Easy-to-use vibration analyser that quickly diagnose vibration level, unbalance, misalignment and looseness. The direct readout of $1\times$, $2\times$, $3\times$ RPM, total level as

well as bearing condition provide necessary information during installation and alignment.
The XT280 connects to the XT Alignment App, mak-

The XT280 connects to the XT Alignment App, making it possible to document the result as PDF.



	TAP TO REGISTER VALUE								
Last reading VIB (g)	#	G	ISO (mm/s)	BDU	1x (mm/s)	2x (mm/s)	3x (mm/s)	RPM	
0.034	i	0.035	0.0	3	0.0	0.0	0.0	1500	~
Last reading ISO (mm/s)	2	0.036	0.5	2	0.3	0.0	0.0	1500	~
	3	0.036	0.0	3	0.0	0.0	0.0	1500	V
0.0	✓ vertical reading								
	4	0.034	0.0	2	0.0	0.0	0.0	1500	^
	* ■								
	L								

7.5	ISO mm/s			
23	0.4			
BDU	g			

Display on vibrometer unit. Live values.

Register values with notes for each point, add photo of machine, document result with PDF.

SYSTEM XT280 VIB PART NO. 12-1090


GEOMETRIC MEASUREMENTS



GEOMETRIC MEASUREMENTS KIT


With this kit added to your XT770, you will be able to take flatness and straightness measurements with the highest reliability and precision. The kit includes the very versatile and long proven laser transmitter D22

(pictured) plus geo brackets. The image below shows the Basic Flatness program, but you can also use the Values program.

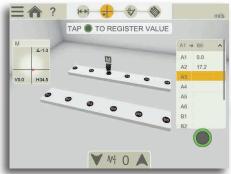



SHAFT BRACKETS

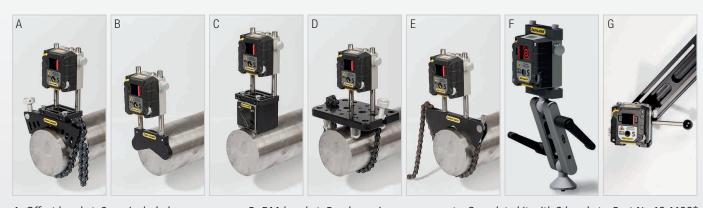

- A. Offset bracket, 2 pcs included
- B. Magnetic bracket*
- C. Magnet base, 2 pcs included
- D. Sliding bracket, Part No. 12-1010*
- E. Thin shaft bracket, Width 12 mm [0.5"], Part No. 12-1012*
- F. DM-bracket. For dynamic measurements. Complete kit with 2 brackets, Part No.12-1130*
- G. Cardan bracket kit, Part No. 12-1151* (Note: not all parts included shown on picture.)
- H. Extension rods (not pictured):

Length 30 mm [1.18"], (x1) Part No. 01-0938 Length 75 mm [2.95"], (x4) Part No. 12-1161 Length 120 mm [4.72"], (x8) Part No. 12-0324 Length 240 mm [9.44"], (x4) Part No. 12-0060

*Accessories



SYSTEMS

PART NO. 12-1095 Display unit, Large case.

Weight: 11.9 kg [26.2 lbs] Dimension WxHxD: 565x455x210 mm [22.2x17.9x8.2"]

PART NO. 12-1096 Same as above, but without display unit.

Weight: 10.4 kg [22.9 lbs]

PART NO. 12-1127 Display unit, GEO Kit, Large case GEO.

14.7 kg [32.4 lbs]
Dimension WxHxD: 565x455x210 mm [22.2x17.9x8.2"]

PART NO. 12-1128
Same as above, but without display unit.

13.2 kg [29.1 lbs]

All Easy-Laser® XT770 Shaft systems include:

- Measuring unit XT70-M
- 1 Measuring unit XT70-S
- 2 Shaft brackets with chains and rods 120 mm [4.72"]
- 4 Rods 75 mm [2.95"]
- 4 Rods 120 mm [4.72"]
- 2 Magnet bases
- 2 Offset brackets
- 2 Extension chain 900 mm [35.4"]
- 1 Measuring tape 3 m [9.8']
- 1 Hexagon wrench set
- 1 Charger (100-240 V AC)
- 1 DC split cable for charging
- 1 DC to USB adapter, for charging
- 1 Quick reference manual
- 1 Cleaning cloth for optics
- 1 USB memory with manuals
- 1 Documentation folder
- 1 Carrying case Large (or Large Geo)

Part No. 12-1095 and 12-1127, also include:

- 1 Display unit XT11
- 1 Shoulder strap for display unit

Part No. 12-1127 and 12-1128 also include:

- 1 Laser transmitter D22
- 1 Magnet base with turnable head (replaces one of the regular magnet bases)
- 4 Rods 120 mm [4.72"]

Customize your XT11 (Note that these options cannot be retrofitted):

Part No. 12-0968 IR Camera added to XT11

Part No. 12-0985 Camera (and LED light) removed from XT11

- A. Offset brackets
- B. Magnetic brackets*
- C. Magnet bases
- D. XT280 VIB*
- E. XT190 BTA*

*Accessories, not included as standard.

Type of detector 2 axis TruePSD 20x20 mm [0.79x0.79"] BT wireless technology Communication Heavy duty Li Ion chargeable Battery type Operating time Up to 24 h continuously Resolution 0.001 mm [0.05 mils] Measurement accuracy ±1µm ±1% Up to 20 m [66 feet] Measurement range Type of laser Diode laser Laser wavelength 630-680 nm Laser class Safety class 2 Laser output <1 mW 0.1° resolution Electronic inclinometer **Environmental protection** IP class 66 and 67 Operating temperature -10-50 °C Storage temperature -20-50 °C 10-95% Relative humidity **OLED** display 128x64 pixels Housing material Anodized aluminium + PC/ABS + TPE Dimensions WxHxD: 76x76.7x45.9 mm [3.0x3.0x1.8"]

Weight 272 g [9.6 oz]

Measuring units XT70-M / XT70-S

Display unit XT11

Type of display/size

Battery type

Operating time

Connections

USB A, USB B, Charger, AV

Communication

Wireless technology, WiFi

Camera, with diode lamp

SVGA 8" colour screen, backlit LED, multitouch
Heavy duty Li lon chargeable

Up to16 h continuously

USB A, USB B, Charger, AV

Wireless technology, WiFi

13 Mp

IR camera (optional) FLIR LEPTON® (0–450 °C, 32–842 °F) Languages en / de / sv / es / pt / ru / ja / ko / zh / it / fr / pl

Dimensions WxHxD: 274x190x44 mm [10.8x7.5x1.7"]

Weight 1450 g [51.1 oz]

Cable

Rods

Charging cable (splitter cable) Length 1 m [39.4"]

Brackets etc

Shaft brackets

Type: V-bracket for chain, width 18 mm [0.7"].

Shaft diameters: 20–150 mm [0.8–6.0"]

With extension chain, diameters up to 450 mm [17.7"]

Material: anodised aluminium Length: 120 mm, 75 mm [4.72", 2.95"] (extendable)

Material: Stainless steel



Easy-Laser® is manufactured by Easy-Laser AB, Alfagatan 6, SE-431 49 Mölndal, Sweden
Tel +46 31 708 63 00, Fax +46 31 708 63 50, e-mail: info@easylaser.com, www.easylaser.com
© 2020 Easy-Laser AB. We reserve the right to make changes without prior notification. Easy-Laser® is a registered
trademark of Easy-Laser AB. Android, Google Play, and the Google Play logo are trademarks of Google Inc. Apple, the
Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store
is a service mark of Apple Inc. Other trademarks belong to their respective owners. This product complies with:
ENGO825-1, 21 CFR 1040.10 and 1040.11. Contains FCC ID: QOBGM111, IC: 5123A-BGM117/FCC ID: 2AFDI-ITCNFA324, IC: 9049A-ITCNFA324/FCC ID: QOBGM13P, IC: 5123A-BGM13P. Documentation ID: 05-0914 Rev4





ISO 9001 CERTIFIED



