

MYRIAD TRIPLEX PUMP CONTROLLER LITE (TPC LITE) INSTRUCTION MANUAL

1



Sigma Controls, Inc.
PROCESS CONTROLS AND INSTRUMENTATION

217 S. Fifth Street, Perkasie, PA 18944
PH: 215-257-3412 FAX: 215-257-3416

VISIT OUR WEBSITE SIGMACONTROLS.COM

TABLE OF CONTENTS

INTRODUCTION..... 3

- Ordering Information
- Specifications
- Features

WIRING..... 7,8

- Dwg # 05-217-1
- Dwg # 05-217-2

- Analog Input
- Analog Output
- Digital Input
- Digital Output

PROGRAMMING AND INITIAL SETUP..... 9

- Input Range Selection
- Terminal Block Detail
- Initial Setup & Programming
- Overview/Key Description

TROUBLESHOOTING & MAINTENANCE. 21

DIAGNOSTICS..... 22

APPENDIX 'A' 24

WARRANTY..... 25

- DISPLAY:
LCD, 128 X 32 pixel bitmapped graphic display
- LOOP POWER:
24VDC regulated output, 100MA max.
- 5 USER KEYS:
Up, Down, Left, Right, Enter
- ACCURACY:
0.1% of calibrated span
- LOCKOUT:
User password, user configurable
- INPUT IMPEDANCE:
Voltage 100K, current 100 OHMS
- POWER:
120VAC (230VAC available)
- ENVIRONMENTAL:
Operating, 0-65° C
Storage, -40° -80° C
R.H., 0-90% non condensing
- ENCLOSURE:
¼ DIN, ABS plastic 96 X 96 X 150MM (main unit) back panel din rail mount aux unit 6" x 4.5" x 2.5"
- FRONT PANEL:
Gasketed Nema 4X
- ACCESS: (DIN CASE)
Chassis & boards remove from front of case.
- TERMINAL STRIP:
(60) Removable for ease of wiring 28 – 16 AWG
- CONNECTIONS:
Removable screw terminal blocks 28 – 16 AWG wire.
- CONTROL OUTPUTS:
4 relay outputs, user programmable, SPDT Form 'C' relays 5 AMP.
4 digital outputs, Opto isolated, open collector.
- OUTPUT ANNUNCIATION:
On board piezo buzzer

- CPU Activity Monitor (Automatic Reset)

- PROGRAMMING:
Menu based, all parameters and setpoints are user configurable via menu prompts and user keys. The preconfigured screens and 'pull down' sub menus with English prompts assure rapid setup and commissioning.

- 1 YEAR WARRANTY

- OPTIONS:
Expansion cards, networking

- MODBUS® RTU RS485
Network allows multiple units to be connected together for distributed applications or remote monitoring SCADA applications.

- EXPANSION CARDS:
Significant expansion is possible via additional control boards and 'MV' networking. Up to 128 units may be interconnected, 4000 feet per node.

FEATURES:

- Microprocessor Based
- Graphic LCD Display
- 5 Function Keys
- Isolated 24VDC Sensor Power
- 4/20MA, 1-5V, 0-5V, 0-10VDC Programmable input
- 2 Analog Input
- 4 Analog Outputs
- 7 Digital Inputs
- 4 Digital Outputs
- 4 Form 'C' Relay Outputs
- Fully User Programmable in English
- 2 Ea. RS485 Ports (Programming and SCADA)
- CPU Activity Monitor

WIRING DETAIL


- Inputs, see Dwg # 05-217-1
- Outputs, see Dwg # 05-217-2



CAUTION

All electrical wiring must be in accordance with all local state and national codes that apply.

Do not exceed the rated current of the D.C. power supply (100MA) or the form 'C' relay outputs (5A/240VAC resistive).

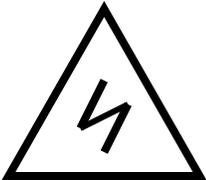


WARNING

Hazardous voltages are present within the enclosure. Installation or service should only be carried out by trained personnel.




CAUTION

The range selector switches located on the bottom of the circuit board are factory set. If a field change of input type is required see Appendix 'A'. Do not apply an input signal that is not coordinated with range switches or the unit may be damaged.

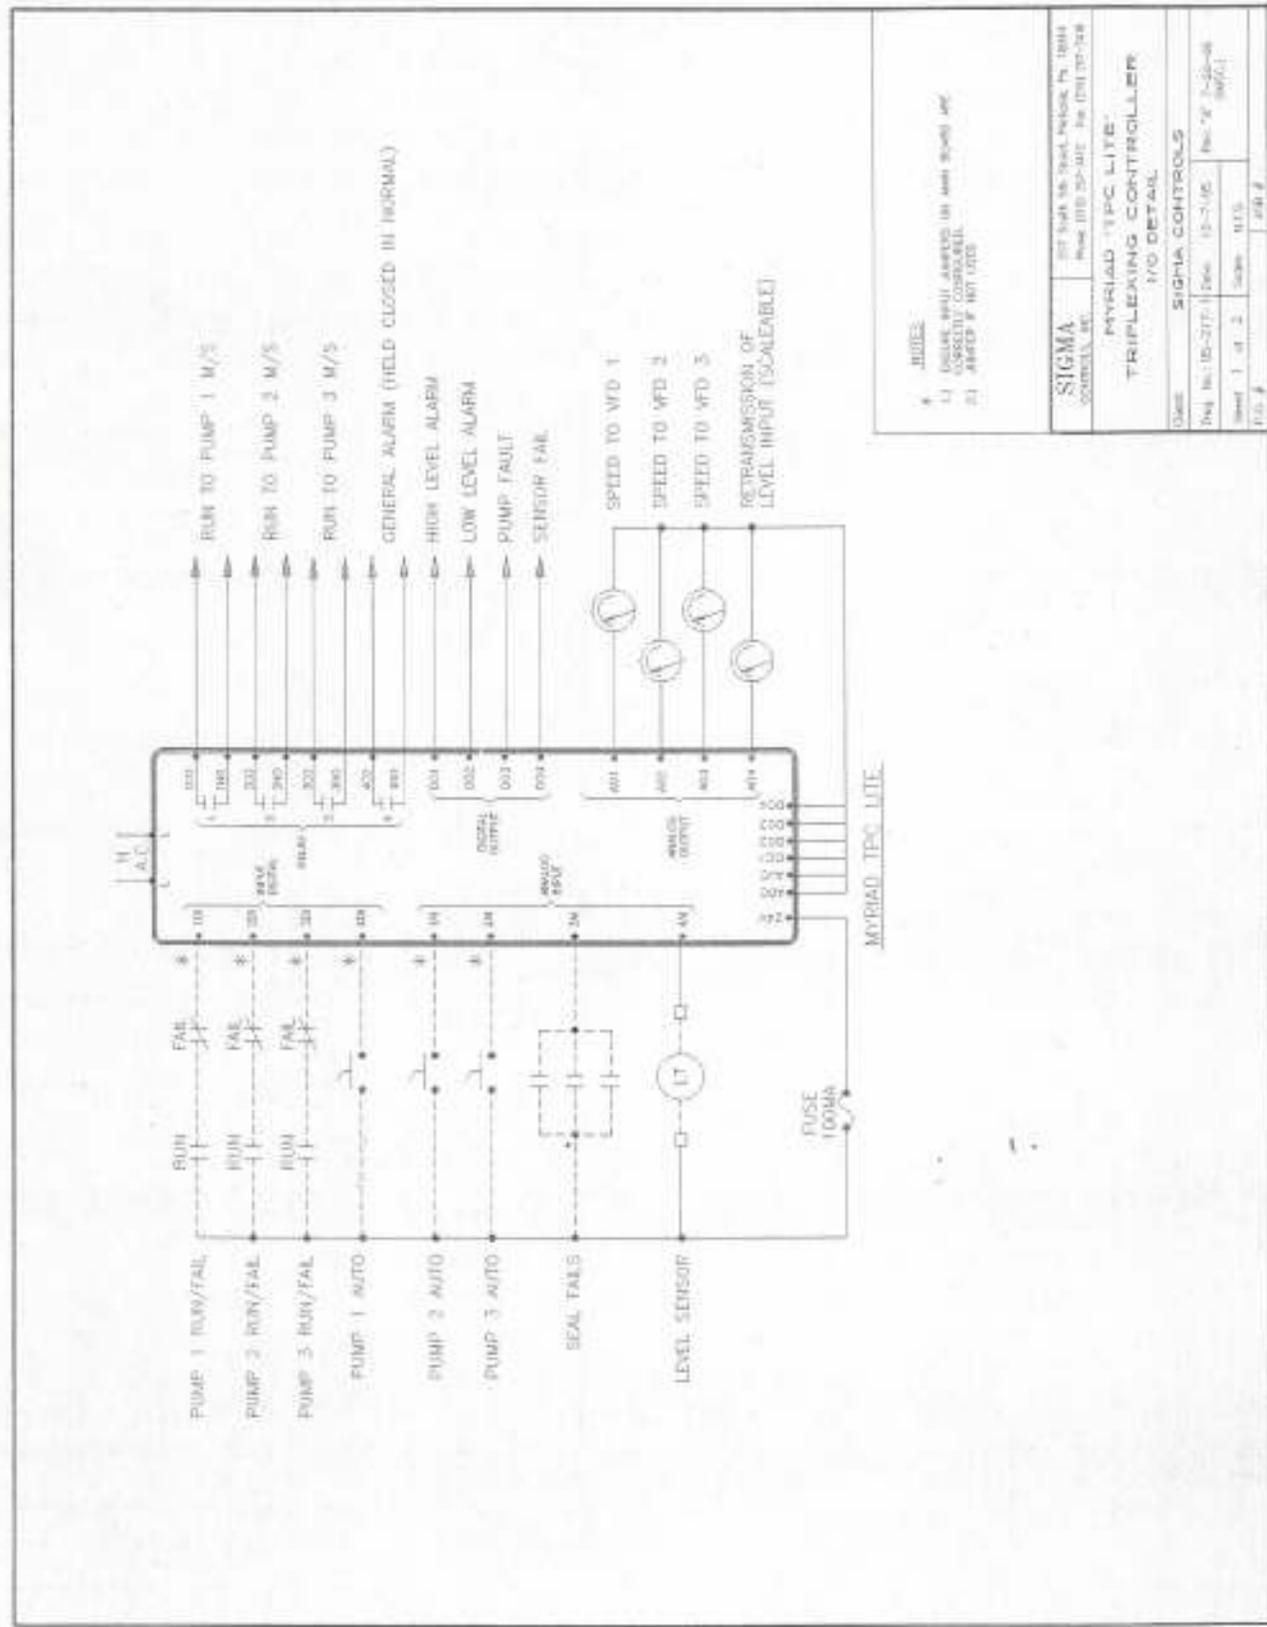

- NOTES
- 1) PLEASE REFER ADDRESS ON EACH SIGNAL WIRE
 - 2) GROUNDING CONSIDERABLE
 - 3) ARMED IF NOT LOCK


SIGMA CONTROL INC.	207 South 56 Street, Phoenix, AZ 85004 Phone: (602) 252-4000 Fax: (602) 252-7348
MYRIAD TPC LITE™ TRIPLEXING CONTROLLER	
NO. DETAIL	
DATE: SIGMA CONTROLS	
Proj. No.: 10-217-1266	10-2-95 Rev. 2/ 7-22-96
Sheet 1 of 2	Scale: N.T.S.
Drawn by:	W.D.B.

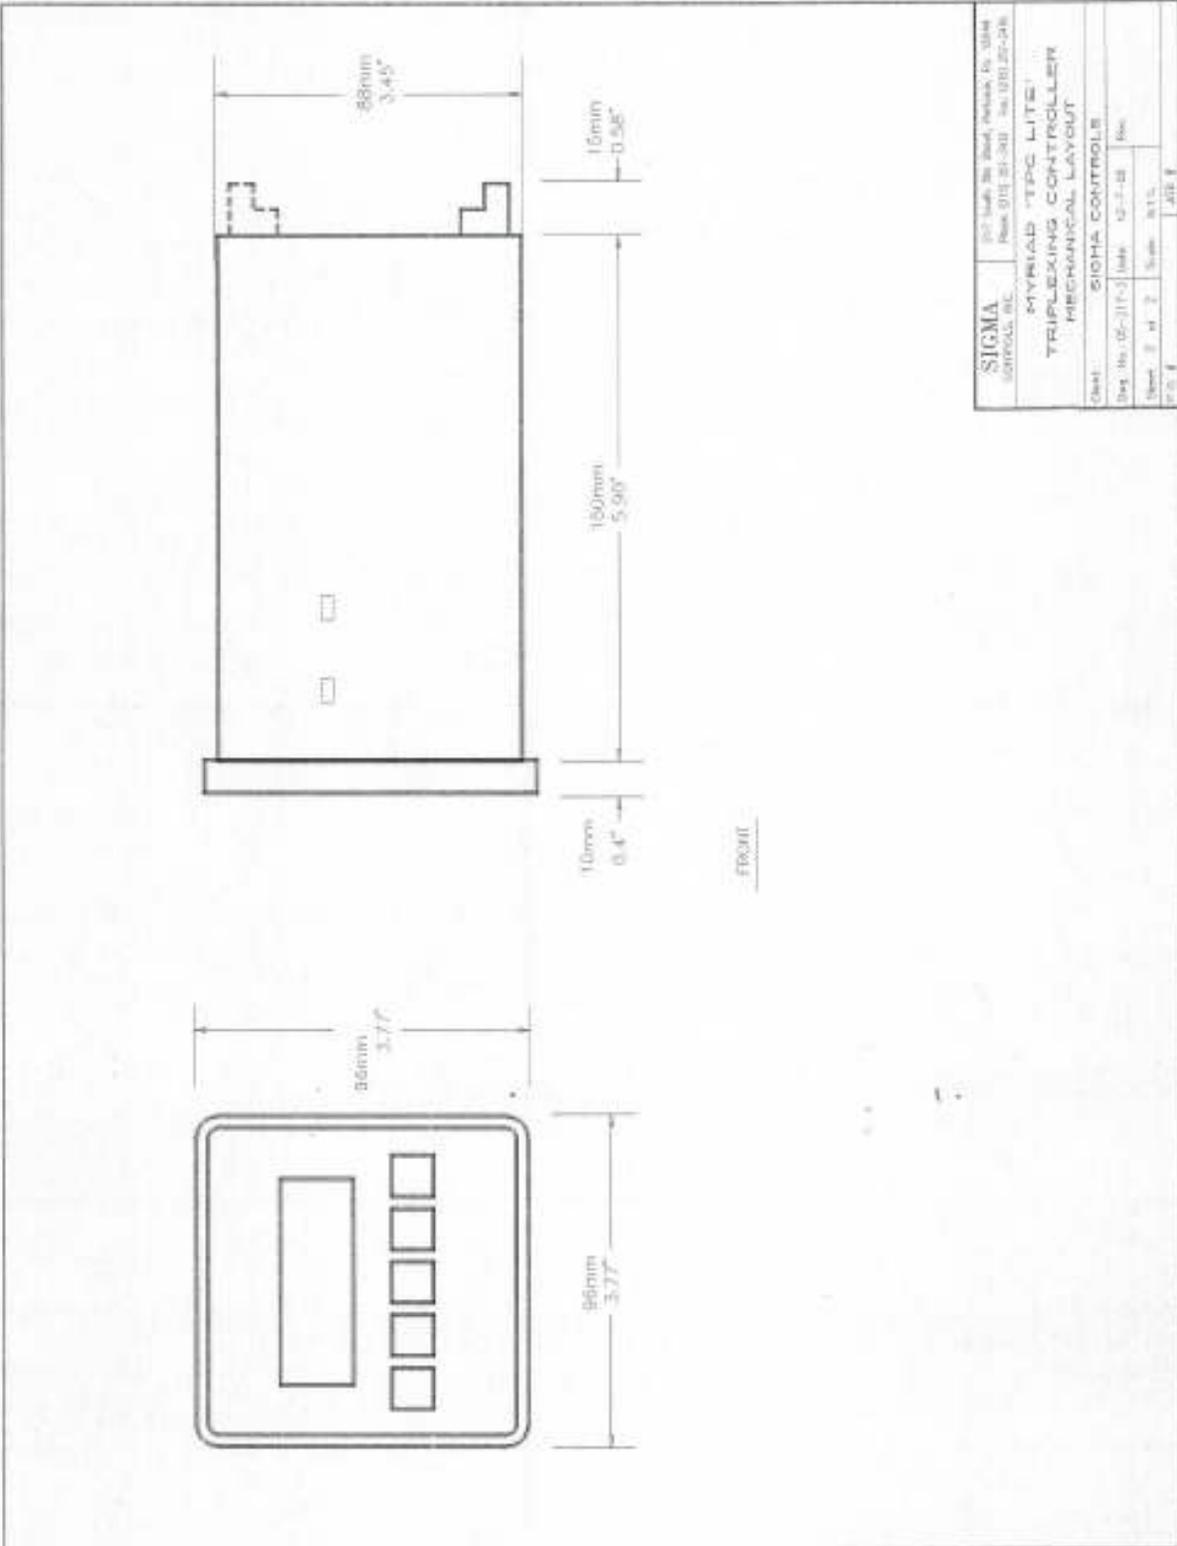

SIGMA CONTROLS, INC.	307 South 26th Street, Norfolk, Va. 23504 Phone 810-621-3000 Fax 810-621-3008
MYRIAD "TPC LITE" TRIPLEXING CONTROLLER MECHANICAL LAYOUT	
Drawn:	SIGMA CONTROL
Desig. No. 05-211-3	Date: 02-27-88 Rev.
Sheet 2 of 2	Scale: 8:1
W.C.F.	J.H.F.

PROGRAMMING & SETUP

The Myriad TPC LITE utilizes 'plain english' menu driven setup screens which are intuitive and easily understood.

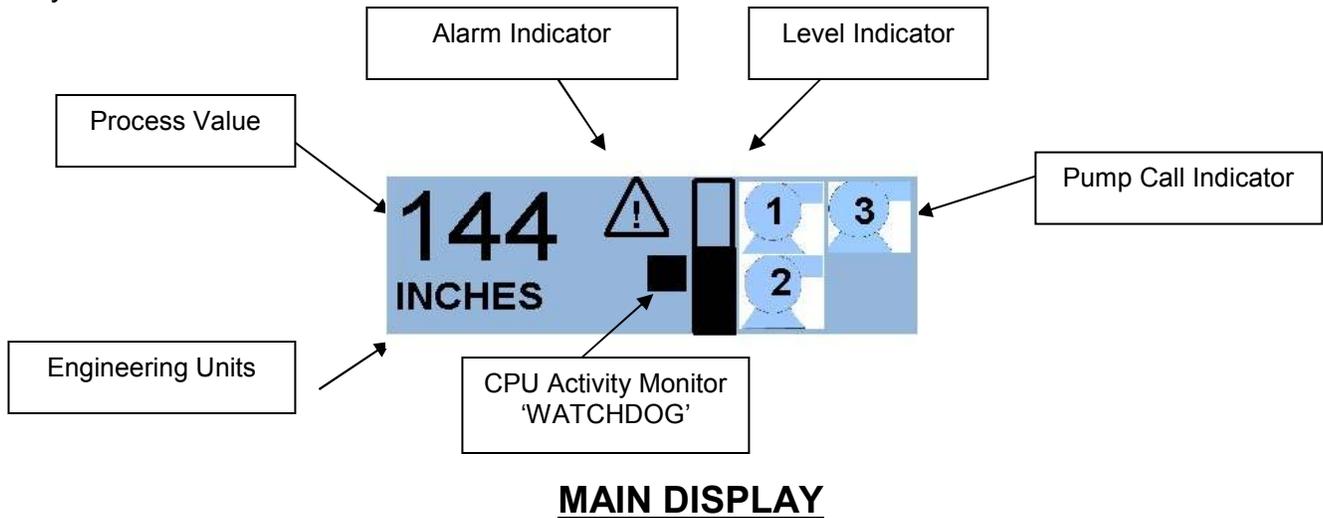

NOTE: To 'RETURN' to the main display from any other screen, scroll to 'EXIT' and press 'ENTER'.

From the default screen (Fig. 1), push the 'Enter' button to enter the password protected menus.



Enter the user selected password (factory default is zero) using the ↑ ↓ keys and press 'Enter' to access the first programming menu 'Menu 1'.



NOTE: Programming should begin at 'Menu 2'. 'SCALE' to set the instrument for the correct input signal from 'Menu 1'. Use the → ← buttons to highlight the 'NEXT' item and press enter to access 'Menu 2'.

MENU 2 SCALE



Use the → ← buttons to highlight 'SCALE' and press 'ENTER'.

INPUT TYPE		
4-20 MA		
# OF POINTS 2		
VIEW	NEXT	EXIT

Use the Up/Down arrow buttons to select the desired analog input range. **NOTE: INPUT TYPE MUST BE COORDINATED WITH INPUT SELECTOR SWITCH LOCATED ON THE BOTTOM OF THE CIRCUIT BOARD** (See Appendix 'A')

The 'TPC LITE' does not include linearization of the input signal. The display is linear over the 2 points selected.

DECIMAL POINT SELECTOR SCREEN

DECIMAL POINT		
ex.	+++.	
	3.1	
VIEW	NEXT	EXIT

The cursor will be positioned over the decimal count window, use the Up/Down ↑ ↓ arrow buttons to raise or lower the unit number to the left of the decimal point. (The example shown in this window will change with your selection.)

Use the → ← buttons to move the cursor to the number behind the decimal point and the Up/Down ↑ ↓ buttons to change this selection. Once again the example will change to confirm your selection.

Use the → ← buttons to highlight the 'NEXT' selection and press 'ENTER' to access the Input Scale Screen.

INPUT SCALING TO ENGINEERING UNITS

INPUT SCALE 1		
INPUT = 4.00		
DISPLAY =		0.0
BACK	SAVE	DONE


NOTE: This screen sets what the Myriad TPC LITE displays in the main display for the selected input.

The example shown above will display 0.0 units when the input is 4.00 MA. Both the input and the display at that input can be changed for different requirements.

A) With the cursor selecting 'INPUT = 4.00' (or the zero value of the selected input) use the \uparrow \downarrow buttons to change the input value for the required displayed value.

***TIP:** Using the \uparrow \downarrow will increase or decrease any selected value. The value can be changed more quickly by pushing either the \uparrow \downarrow button and the \leftarrow (left arrow) simultaneously.

B) Use the \rightarrow \leftarrow buttons to move the cursor to the 'display' value and the Up/Down buttons to change the desired display for the previously selected input. Once complete, scroll to 'SAVE', press 'ENTER' to access 'INPUT SCALE 2' screen.

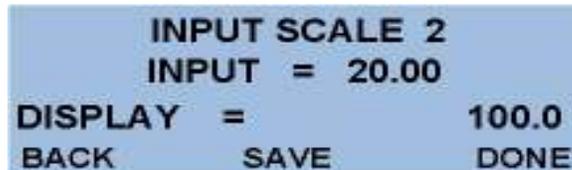

```


INPUT SCALE 2
INPUT = 20.00
DISPLAY = 100.0
BACK      SAVE      DONE
  
```

Follow the steps outlined above to set the values of 'input' and 'display' for input Scale 2.

When complete with scale 2, scroll the cursor to the 'SAVE' position and press 'ENTER'. Press 'DONE' and press 'ENTER' to move to the "ENGINEERING UNITS" selection screen.

ENGINEERING UNITS SELECTION:

When 'Scale Menu' is complete the 'INPUT TEXT' menu is the last menu in the scaling process.

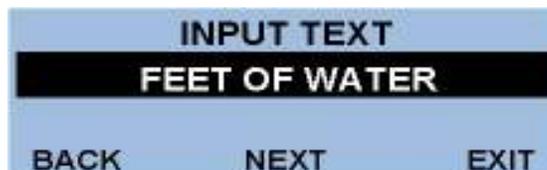

```

INPUT TEXT
FEET OF WATER
BACK      NEXT      EXIT
  
```

This screen allows the selection of several engineering units. With the cursor on the default value as shown, press the Up/Down buttons to select between

'FEET OF WATER'
'PSI'
'GALLONS'
'LITERS'
'UNITS'
'INCHES'

Use the \uparrow \downarrow keys to select the desired engineering units then with the \rightarrow \leftarrow keys, highlight 'NEXT' and press 'ENTER' to access the "display filter" screen.

DISPLAY FILTER SCREEN



```

DISPLAY FILTER
< 0 = FAST 10 = SLOW>
0
BACK      NEXT      EXIT
  
```

Use the ↑ ↓ keys to change the amount of filtering applied to the input signal. '0' is no filter and '10' is high filter.



Too much filtering will dampen process responses (Normal Range 0-3).

Scroll to 'NEXT' and press 'ENTER' to return to the Menu 2.

ANALOG OUTPUT (AOUT)

Use the → ← keys to highlight the 'AOUT' item and press 'ENTER' to access the analog output signal settings.

NOTE: There are four analog outputs on the TPC LITE, as follows: **AOUTPUT 1, AOUTPUT 2 and AOUTPUT 3 are speed vs. level setpoints which are only utilized on variable speed drive applications. This screen allows the user to program the speed of the drive at a selected level. Both level and drive speed are selectable. AOUTPUT 4 is retransmission of the analog input.**

LEAD SPEED SCALE 1

LEAD SCALE 1		
LEVEL	= 30	
SPEED	= 50.0%	
BACK	SAVE	DONE

The 'level' value will be highlighted, use the ↑ ↓ keys to change the level point at which the speed of the drive (selected in the next block) is requested. In the example above, the drive will be at 50% speed when the level is 30 inches and only the lead pump is called to run.

Scroll to 'SAVE' and press 'ENTER' for speed scale 2.

LEAD SPEED SCALE 2

LEAD SCALE 2		
LEVEL	= 100	
SPEED	= 90.0%	
BACK	SAVE	DONE

Select a value of drive speed and level as described above and scroll to 'DONE' to save the values selected and move to lag speed scale 1 screen.

As described above, select an output value versus display value for analog output 4. When complete use → ← to select 'SAVE' and press 'ENTER'.

LAG SPEED SCALE 1

LAG SCALE 1		
LEVEL	= 40	
SPEED	= 55.0%	
BACK	SAVE	DONE

The 'level' value will be highlighted, use the ↑ ↓ keys to change the level point at which the speed of the drive (selected in the next block) is requested. In the example above, the drive will be at 55% speed when the level is 40 inches and the lead and lag pumps are called to run.

Scroll to 'SAVE' and press 'ENTER' for speed scale 2.

LAG SPEED SCALE 2

LAG SCALE 2		
LEVEL	= 100	
SPEED	= 95.0%	
BACK	SAVE	DONE

Select a value of drive speed and level as described above and scroll to 'DONE' to save the values selected and move to lag 2 speed screen and lag 3 speed screen.

As described above, select an output value versus display value for analog output 4. When complete use → ← to select 'SAVE' and press 'ENTER'.

From menu 2 use the → ← keys to select 'SETUP' and press enter to access the setup menu.

SETUP

NOTE: The 'SETUP' menu allows access to the following items:

- 1) Pump elapsed timer 1
- 2) Pump elapsed timer 2
- 3) Pump elapsed timer 3
- 4) Trend screen time base
- 5) Password
- 6) Time
- 7) Month
- 8) Date
- 9) Day
- 10) Alarm Horn on/off

ELAPSED TIMERS

An elapsed timer is provided to allow the operator to monitor the run times of the three pumps.



To reset the #1 timer use the ↑ ↓ keys to change the saved value to zero. Select 'NEXT' and press enter to access elapsed timer 2. Follow the procedure above to reset this timer to zero. Reset other timers in the same way.

Use the → ← keys to highlight 'NEXT' and press the enter key to move to the trend screen speed screen.


TREND SPEED SCREEN



NOTE: The trend screen is provided as a diagnostic tool. This trend graphic will display the process value over the time duration selected. The duration of the trend is selectable between 2 minutes, 2 hours, 12 hours and full speed. The trend is non-retentive and will overwrite previous data.

Use the ↑ ↓ keys to select the desired time base and scroll to 'NEXT' and press 'ENTER' to move to the 'Change Password' screen.


'CHANGE PASSWORD SCREEN'

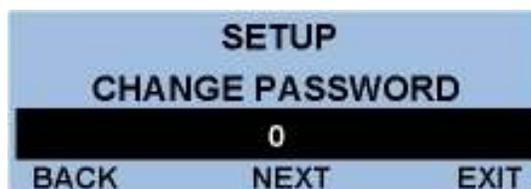

Once the password has been changed make sure a record of the new password is retained.
Access to the programming menus requires a correct password.

Use the ↑ ↓ keys to enter a number up to 9999, select 'NEXT' and press 'ENTER' to enter the 'change clock' menu.

CHANGE CLOCK, MONTH, DATE AND DAY SCREENS

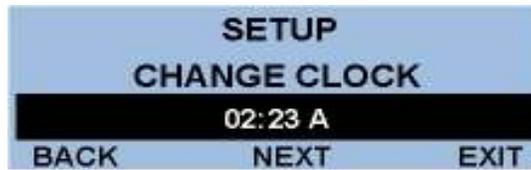


As described previously use the \uparrow \downarrow keys to set the screen to the current time. Scroll to 'NEXT' and press 'ENTER' to move to the change month screen.

The 'change month' screen, 'change date' screen and 'change day' screen are all adjusted as above. After changing the 'DAY' screen, scroll to 'NEXT' and press 'ENTER' to select the 'Alarm Horn' screen.

NOTE: DAYLIGHT SAVINGS CHANGES ARE AUTOMATIC.


ALARM HORN SCREEN

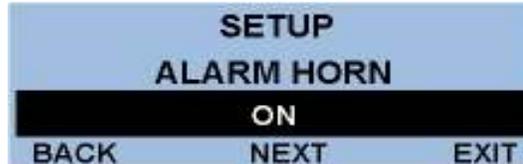

NOTE: Selecting the alarm horn to 'OFF' will disable the internal piezo alarm from sounding when an alarm condition occurs.


When the desired selection is made, scroll to 'NEXT' and press 'ENTER' to return to MENU 2. In Menu 2 select 'NEXT' and 'ENTER' to select Menu 1.

MENU 1

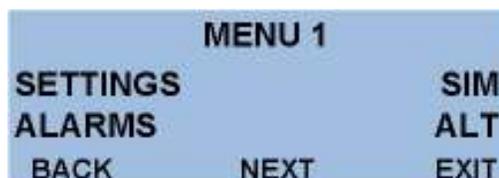

From Menu 1 select 'Settings' and press 'ENTER' to access the 'LEAD PUMP ON' setpoint.

LEAD PUMP ON

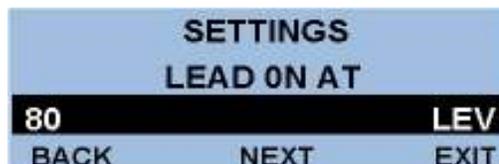

NOTE: This parameter determines at what level the 'lead' pump turns on. Using the \uparrow \downarrow keys, select a level point to turn on the lead pump. Scroll to 'NEXT' and press 'ENTER' to access the:

LEAD PUMP OFF SCREEN

SETTINGS		
LEAD OFF AT		
30		LEV
BACK	NEXT	EXIT

Following the procedure above, select a level value at which the lead pump turns off. Use 'NEXT' with the exit button to access the:

LAG PUMP ON SCREEN

SETTINGS		
LAG ON AT		
100		LEV
BACK	NEXT	EXIT

Select a value which turns on the lag pump. Use 'NEXT' and 'EXIT' to access the:

LAG PUMP OFF SCREEN

SETTINGS		
LAG OFF AT		
40		LEV
BACK	NEXT	EXIT

Again, select a level value which turns off the lag pump. Select 'NEXT' and press 'EXIT' to advance to the Lag 2 setting.


PUMP ON DELAY SCREEN

SETTINGS		
PUMP ON DELAY		
1		SEC
BACK	NEXT	EXIT

This screen allows an operator selected delay before a pump is operated after its 'ON' setpoint has been reached. Sometimes this delay is required to overcome process disturbances such as pressure or wave action.

Change the 'ON' delay as required and select 'NEXT' and press 'ENTER' to advance to the:--

PUMP OFF DELAY SCREEN

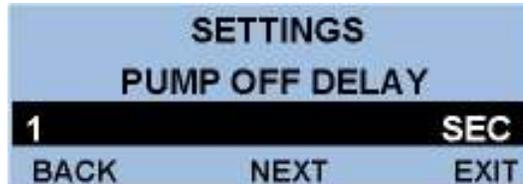

Change pump off delay as described above and select 'NEXT' and press 'ENTER' to advance to the:

LEVEL ALARM SCREENS

The next screens are as follows:

Low Level Alarm Set Point
 Low Level Alarm Reset Point
 High Level Alarm Set Point
 High Level Alarm Reset Point
 Alarm Timer

Adjust and advance through the alarm settings as described previously. The 'alarm timer' provides an adjustable time delay for alarm notification after the alarm setpoint has been reached in order to prevent nuisance alarms.

After the 'alarm timer' has been set, return to Menu 1 and select 'ALT', press 'ENTER' to access the alternative menu.

'ALTERNATION'

From Menu 1 select 'ALT' and press ENTER to select the Lead/Lag order screen.

LEAD/LAG ORDER SCREEN



The example shows the #1 pump as the 'Lead', #2 as the 'Lag', and #3 pump as the second 'Lag'. The starting position of any pump may be changed in this screen by positioning the cursor with the → ← buttons and selecting the desired pump sequence. **NOTE:** If alternation is enabled, the pump sequence will change based on time or pump cycle. If alternation is selected to be 'off' then pump sequence will be 'fixed' per the selected 'pump order'.

**SELECT PUMPS IN
ORDER, PUT UNUSED
LAST, ONE OF EACH
(IE: 1, 3, 2, 4)**

The help screen can be selected from the Lead/Lag Order screen or it may appear if an incorrect pump order was entered. This screen explains that pump numbers should be entered in the order in which they come on. If there are unused pumps, enter them as coming on last. You must enter each pump once.

ROTATE PUMPS SCREEN

**PUMPS TO ALT
ROTATE **3** PUMPS
<IE: 2 = DUPLEX>
BACK NEXT EXIT**

This screen is provided to allow the operator to limit the maximum number of pumps to be alternated. In the example shown the cursor is over the programmable number of pumps allowed to be in the alternation cycle, i.e. 3 pumps (Triplex).

Use the ↑ ↓ keys to select a time of day to alternate. Select 'NEXT' and press 'ENTER' to return to Menu 1.

MAXIMUM PUMPS ALLOWED SCREEN

**MAX # OF PUMPS
ALLOWED TO RUN
3
BACK NEXT EXIT**

This screen allows the operator to select the maximum number of pumps that are allowed to run regardless of level conditions. Select the maximum number of pumps with the ↑ ↓ buttons.

ALTERNATION SCREEN

**ALTERNATION
DAILY
02:23 A
BACK NEXT EXIT**

NOTE: Three options are available for alternating the pump lead position:

- A) 'ALT OFF' no alternation of lead/lag pump.
- B) 'WHEN PUMPS STOP' pumps alternate when a pump has completed a pump cycle.
- C) 'DAILY' allows for alternation of the pumps in systems which run continuously. Selecting 'DAILY' brings up a new selection which is the time of day at which the pumps will alternate their position in the sequence even if they are operating.

From 'Menu 1' select 'ALARMS' and press 'ENTER' to view the current alarm status.

ALARMS



NOTE: In this menu item, all alarm screens will be shown in an automatically 'SCROLLING' fashion. The following alarm status will appear on the screen:

- Pump 1 Failure
- Pump 2 Failure
- Pump 3 Failure
- Seal Leak Alarm
- High Level Alarm
- Low Level Alarm
- Sensor Failure

Any alarm that is currently active will be indicated on its screen by the lower display changing from 'NOT ACTIVE' to 'ACTIVE'. Any 'ACTIVE' alarm must be reset by selecting 'RESET' with the → ← arrows and pressing 'ENTER' **after the causal condition has been removed.**

NOTE: The RESET function can be utilized from the PASSWORD screen, The ALARM screen, or by pressing the ↑ ↓ buttons simultaneously.

NOTE: While in the main display any alarm condition which occurs during normal operation will cause a time and date 'stamped' message to pop-up over the main display screen indicating the specific alarm condition. The on board horn will sound. To clear the screen and stop the horn, press any key.



On the main display a  will flash indicating that an alarm condition still exists. This indicator will be removed after the alarm has been cleared as described above. The 'RESET' selection appears on the 'ALARMS' and the 'ENTER PASSWORD' screens.

OPERATIONAL INFORMATION


Several items of operational information are provided for operator review of system status. These items may be accessed from the 'VIEW' screen which appears at the bottom of the 'PASSWORD' entry screen.



From the main menu press 'ENTER' key to access the 'ENTER PASSWORD' screen. Use the → ← keys to scroll to the 'VIEW' position and press 'ENTER'.

NOTE: IT IS NOT NECESSARY TO ENTER A PASSWORD TO ENTER THIS SCREEN.


VIEW MENU

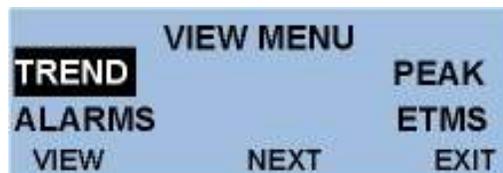

'TREND' will be highlighted. Press 'ENTER' to view the recorded trend of the process value for the time selected previously during the setup procedure (2 min., 2 hrs, 12 hrs, or full speed).



After viewing the process trend press 'ENTER' to return to the 'VIEW' menu. Select 'PEAK' with the → ← keys and press 'ENTER'.

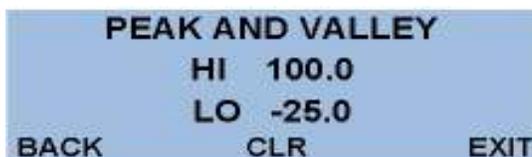

This screen records the highest and lowest process values that have occurred since the last 'CLR' (clear). To reset these values to the current value of the process, scroll to 'CLR' and press 'ENTER'. The cursor will automatically move to the 'BACK' position, press 'ENTER' to return to the 'VIEW' menu. Select 'ALARMS' and press enter to view the current alarm status and use 'RESET' as described previously to clear any active alarms. Select 'BACK' and press 'ENTER' to return to the 'VIEW' menu. Select 'ETMS' and press 'ENTER' to view the recorded elapsed times for each pump.

ELAPSED TIMERS		
P1	678345	HOURS
P2	234456	HOURS
BACK	NEXT	EXIT

NOTE: Elapsed times are resettable in the 'SETUP' mode and will 'ROLLOVER' to zero after 1,000,000 hours if not reset.

Select 'NEXT' and press 'ENTER' to view pump 3 elapsed time.

MAINTENANCE AND TROUBLE SHOOTING

MAINTENANCE:

The Myriad TPC LITE is a digital solid state device which requires no periodic maintenance.

Occasional checks of the unit should be carried out for physical and mechanical security of mounting, terminal blocks, and electrical wiring.

TROUBLE SHOOTING:

- UNIT 'LOCKS UP' – Recycle power to the unit by removing AC power, waiting 10 seconds and reconnecting power.



WARNING

NOTE: This should be done by using the user provided circuit breaker or fuse, not by removing the power wires at the terminal block. **Serious injury or death can occur if contact is made with the incoming ac power.**

- LCD display goes dim or contrast is poor. Remove power from the unit, release the 2 rear mounting screws and slide the unit forward in its case approximately 1 inch. On the left side of the circuit board is an adjustable potentiometer. With a small screwdriver adjust this "pot" to alter the contrast to the desired amount. Return the unit to its normal position and secure the rear screws.
- DISPLAY REMAINS AT ZERO OR SHOWS NO CHANGE -- If the display remains at zero or shows no change but the process is changing, check for D.C. voltage on the loop. With 2 wire (4/20MA) instruments check with a D.C. voltmeter at the level instrument, by disconnecting the level instrument from its 2 wires and measuring across these 2 wires with a D.C. voltmeter for the presence of 24VDC.


If D.C. voltage is present, reconnect the negative wire of the supply and insert a milliampmeter between the positive wires. The loop should provide a signal between 4 and 20 MA. If no current is present or the current exceeds 20MA consult the level instrument supplier.

If D.C. voltage is not present check the user supplied power supply or if using the Myriad supply measure across terminals 24VDC and A/C. If no 24VDC is present consult factory. If 24VDC is present check field wiring between the Myriad and the field device and recheck 'SCALE' functions to ensure correct setup.

- Unit appears to be functioning but does not bring on pumps or alarms. From 'MENU 2' scroll to 'DIAG' and press enter:


DIAGNOSTIC SCREENS

INPUTS

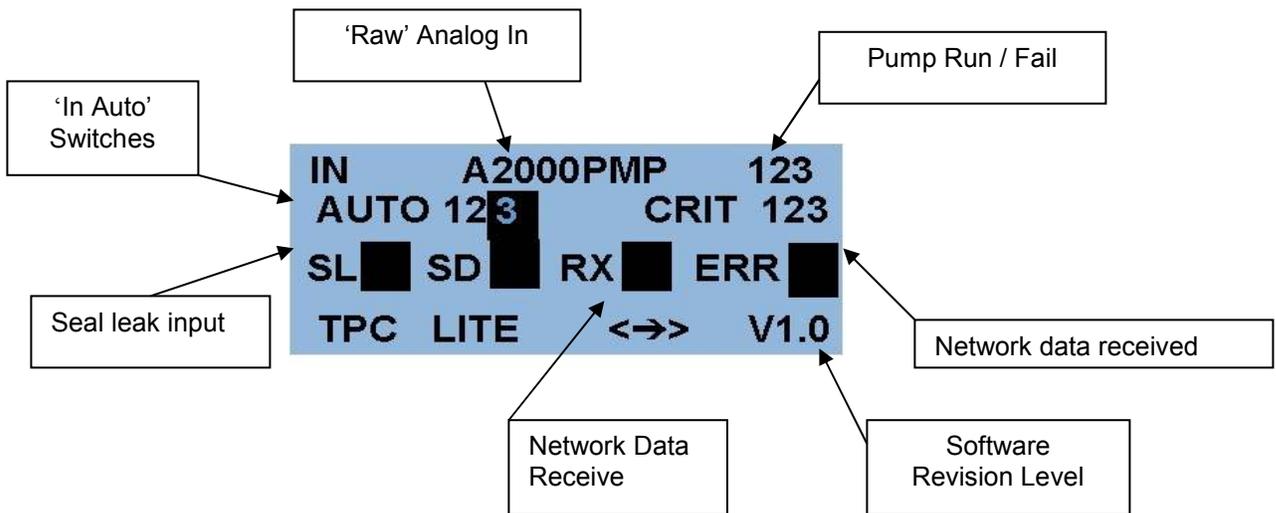

Press to view the output screen.

OUTPUTS

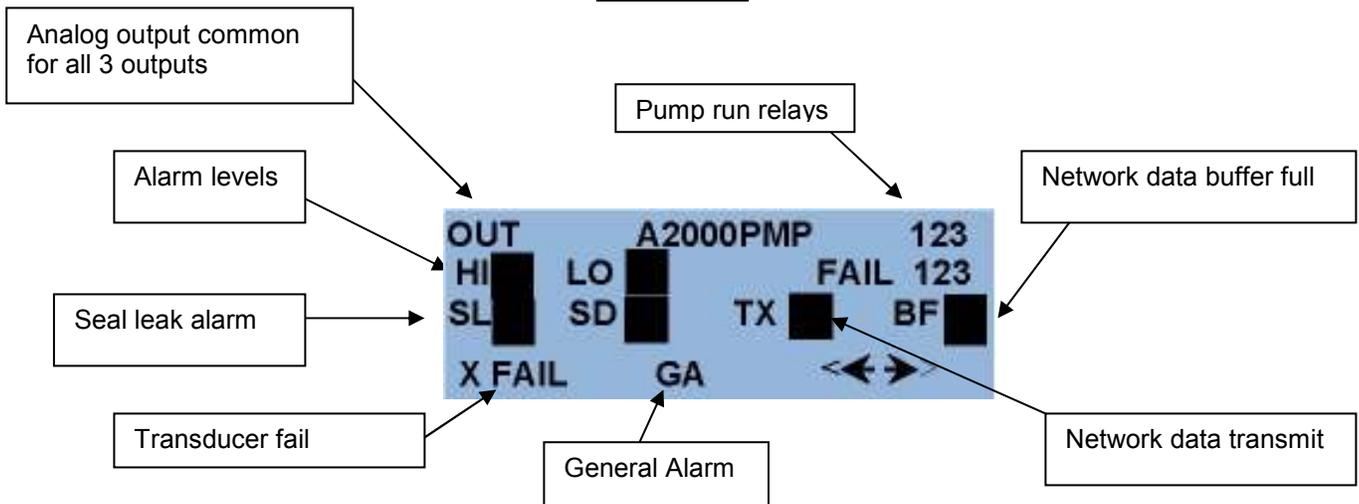

The diagnostic screens provide information about the current status of inputs and outputs and provide valuable information to aid in trouble shooting.

The screens show the status of the 'RAW' analog input and output values. These raw values are approximately the input and output range in the selected input value; as shown, the input is 20.00 MA and the output is 20.00 MA. These values can provide help in determining if the Myriad TPC LITE is receiving the correct analog input.

NOTES ON ALARMS

General alarm output 'sweeps' all alarms into a common SPDT dry contact output.

PUMP ALARMS

(1) Pump fail, after a pump has been 'called' to run a digital input (normally from the auxiliary contact on the respective motor starter) or normally closed inputs (from the pump motor thermostat or VFD fault output) is 'fed back' to the controller at 1DI, 2DI, and 3DI. If the controller fails to see this input it assumes the motor starter has failed to energize the starter and it energizes the 'Pump Failure' alarm, removes this pump from the sequence, and brings on the next available pump. **NOTE:** If these inputs are not used they should be 'jumpered'

(2) Seal leak, all seal leak inputs are connected to a single digital input 3AI. When either of these are closed the non-critical alarm is activated. The pumps are not shut down.

(3) H.O.A. selectors, are monitored for their position at 4DI, 1AI, and 2AI. If an HOA is not in the 'Auto' position that pump will not be permitted to run. **NOTE:** If these inputs are not used they should be 'jumpered'

APPENDIX 'A'

SWITCH SELECTION OF ANALOG INPUT RANGES (Factory default 4/20mA).


The range dip switches are located on the bottom of the main circuit board. Disconnect power, remove two rear screws, remove terminal strips, and slide the entire unit out of its case. Turn the unit upside down to locate the range dip switches.

SW1	SW2	INPUT 4	DESCRIPTION
0	0		AIn1 range = 5V
0	1		AIn1 range = 10V
1	0		AIn1 range = 20mA
1	1		Not Used

SW3	SW4	DESCRIPTION
0	0	AIn2 range = 5V
0	1	AIn2 range = 10V
1	0	AIn2 range = 20mA
1	1	Not Used

SW5	SW6	DESCRIPTION
0	0	AIn3 range = 5V
0	1	AIn3 range = 10V
1	0	AIn3 range = 20mA
1	1	Not Used

SW7	SW8	DESCRIPTION
0	0	AIn4 range = 5V
0	1	AIn4 range = 10V
1	0	AIn4 range = 20mA
1	1	Not Used

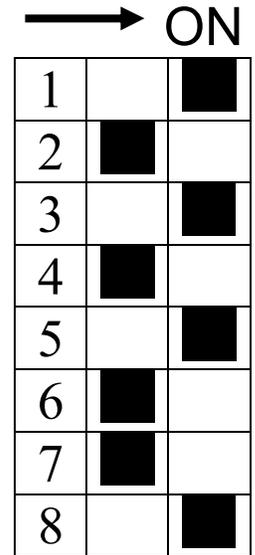

EXAMPLE ONLY

(TYPICAL FOR DPC, TPC, QPC)



CAUTION, ENSURE THAT DIP SWITCHES ARE CORRECTLY SET FOR INPUT RANGE REQUIRED.



WARRANTY

All Sigma Controls, Inc. products are warranted to be free from defective materials and workmanship for one (1) year from date of shipment. Sigma reserves the right to repair or replace at its option any product found to be defective. In no event shall Sigma Controls, Inc. be liable for any consequential, incidental, or special damages and the limit of its liability shall not exceed the purchase price of the supplied equipment.

RETURN FOR REPAIR POLICY (WARRANTY/NON-WARRANTY REPAIR)

Return status can be determined upon factory inspection of returned equipment.

A completed Return Authorization form must accompany all items returned for repair.

Repairs will be evaluated as quickly as possible. Cost for non-warranty repairs will be provided before repairs are initiated and repairs will be completed only after approval by customer.

217 S. Fifth Street, Perkasie, PA 18944 215-257-3412

TRIPLEX (TPC LITE) PUMP STATION

MYRIAD CONTROLLER SETTINGS

PASSWORD: _____

MENU 1	ENTER "NEXT" TO GO TO MENU 2	ACTUAL	ALARMS	SIM	LEAD/LAG ORDER
	SETTINGS				
	PUMP CONTROL SCREENS		Current Alarms		LEAD <input type="checkbox"/>
	LEAD ON AT		P1 Failed to Run/Critical		LAG <input type="checkbox"/>
	LEAD OFF AT		P2 Failed to Run/Critical		2 nd LAG <input type="checkbox"/>
	LAG ON AT		P3 Failed to Run/Critical		
	LAG OFF AT				ALTERNATION
	LAG 2 ON AT		Seal Leak Alarm		Off <input type="checkbox"/>
	LAG 2 OFF AT		High Level Alarm		Pumps Off <input type="checkbox"/>
	PUMP ON DELAY		Low Level Alarm		Timed <input type="checkbox"/>
	PUMP OFF DELAY		Sensor Failure		PUMPS TO ALT
	LEVEL ALARM SCREENS				ROTATE <input type="checkbox"/> PUMPS
	Low Level Alarm Set Point				MAX PUMPS TO RUN <input type="checkbox"/>
	Low Level Alarm Reset Point				
	High Level Alarm Set Point				
	High Level Alarm Reset Point				
	Alarm Timer				

Bottom Line Screen Commands: Select and press 'ENTER'

VIEW	BACK	NEXT	SAVE	DONE	EXIT
View Screen	Move to previous item in list	Move to next item in list	Save value indicated	Move to next item for value input	Return to Main Display

KEYPAD INPUT KEYS

↑	Increase Screen Value	↓	Decrease Screen Value	→	Move right one screen menu item	←	Move left one screen menu item	ENTER	Enters selection or executes command
---	-----------------------	---	-----------------------	---	---------------------------------	---	--------------------------------	-------	--------------------------------------

MENU 2	Select "NEXT" and press "ENTER" to return to Menu 1	ACTUAL	SCALE	ACTUAL	SETUP	ACTUAL	DIAGS
	AOUT		Input Type	(4-20MA)	Pump Elapsed Timer 1		
	Lead Scale	Display =	# of Points		Pump Elapsed Timer 2		
		Speed =	Decimal Point		Trend Speed Time Base	<input type="checkbox"/> FULL	
	Lag Scale	Display =	Input Scale 1			<input type="checkbox"/> 2 MIN	
		Speed =	Input =			<input type="checkbox"/> 2 HR	
	Lag 2 Scale	Display =	Display =		Change Password	<input type="checkbox"/> 12 HR	
		Speed =	Input Scale 2		Change Clock		
	Ainout 4 Scale 2	Display =	Input =		Change Month		
		Speed =	Display =		Change Date		
		Display =	Input Text	<input type="checkbox"/> Ft of Water	Change Day		
		Output =	(Select one)	<input type="checkbox"/> PSI	Alarm Horn		
				<input type="checkbox"/> Gallons			
				<input type="checkbox"/> Liters			
				<input type="checkbox"/> Units			
				<input type="checkbox"/> Inches			
			Display Filters	(2)			

VIEW MENU	(Accessible without Password)
TREND	Indicates trend of monitored input
PEAK	Shows Minimum and Maximum since values were last reset
	CLR Resets Min and Max Values
ALARMS	Produces alarm history of programmed alarms
ETMS (Elapsed Time Meter)	Indicates Hours of operation for Pump 1 and Pump 2

TYCLTEMPRESSETTING06021507